# Safety Instructions iTEMP TMT142B

**HART®** 

ATEX, IECEx: Ex ia IIC T6 Ga

Ex ia IIIC Txxx °C Db







iTEMP TMT142B XA01958T

### **iTEMP TMT142B**

### **HART®**

### Table of contents

About this document	4
Associated documentation	4
Supplementary documentation	4
Manufacturer´s certificates	5
Manufacturer address	_
Safety instructions	6
Safety instructions: Installation	6
Safety instructions: Zone 0	7
Safety instructions: Special conditions	7
Temperature tables	7
Electrical connection data	٤

XA01958T iTEMP TMT142B


### About this document



This document has been translated into several languages. Legally determined is solely the English source text.

The document translated into EU languages is available:

- In the download area of the Endress+Hauser website: www.endress.com -> Downloads -> Manuals and Datasheets -> Type: Ex Safety Instruction (XA) -> Text Search: ...
- In the Device Viewer: www.endress.com -> Product tools -> Access device specific information -> Check device features

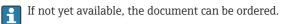

## Associated documentation

This document is an integral part of the following Operating Instructions:

Operating instructions: BA00191RBrief operating instructions: KA00222R

■ Technical Information: TI00107R

## Supplementary documentation

Explosion-protection brochure: CP00021Z

The Explosion-protection brochure is available:

In the download area of the Endress+Hauser website:
www.endress.com -> Downloads -> Brochures and Catalogs -> Text Search: CP000217.

• On the CD for devices with CD-based documentation

iTEMP TMT142B XA01958T

## Manufacturer's certificates

#### IECEx certificate

Certificate number: IECEx EPS 17.0077X

Affixing the certificate number certifies conformity with the following standards (depending on the device version)

IEC 60079-0:2017IEC 60079-11:2011

#### ATEX certificate

Certificate number: EPS ATEX 1 131 X

## **EU Declaration of Conformity**Declaration number: EC\_00605

**UKCA** certificate

Certificate number: CML 21UKEX21007 X

## **UKCA Declaration of Conformity** Declaration number: UK 00413

## Manufacturer address


Endress+Hauser Wetzer GmbH + Co. KG

Obere Wank 1

87484 Nesselwang, Germany

XAO1958T iTEMP TMT142B

## Safety instructions

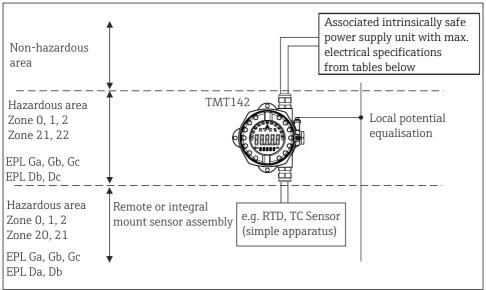

A0048927

### Safety instructions: Installation

- Comply with the installation and safety instructions in the Operating Instructions.
- Install the device according to the manufacturer's instructions and any other valid standards and regulations (e.g. EN/IEC 60079-14).
- Connect the device using suitable cable and wire entries of protection type "Intrinsic safety (Ex i)".
- The type of protection changes as follows when the devices are connected to certified intrinsically safe circuits of Category ib: Ex ib IIC. When connecting an intrinsically safe ib circuit, do not operate the sensor at Zone 0.
- Continuous duty temperature of the cable Ta +5 K.
- To maintain the ingress protection of the housing IP66/67 install the housing cover and cable glands correctly.
- Close unused entry glands with sealing plugs.
- The pertinent guidelines must be observed when intrinsically safe circuits are connected together acc. IEC/EN 60079-14 (Proof of Intrinsic Safety).
- The electrical apparatus must be integrated into the local potential equalization.
- When connecting two independent sensors make sure that the potential equalisation cables are at the same potential.

iTEMP TMT142B XA01958T

### Safety instructions: Zone 0

- Only operate devices in potentially explosive vapour/air mixtures under atmospheric conditions:
  - -50 °C ≤ Ta ≤ +60 °C
  - $0.8 \text{ bar} \le p \le 1.1 \text{ bar}$
- If no potentially explosive mixtures are present, or if additional protective measures have been taken, according to EN 1127-1, the transmitters may be operated under other atmospheric conditions in accordance with the manufacturer's specifications.
- Associated apparatus with galvanic isolation between the intrinsically safe and non-intrinsically safe circuits are preferred.

### Safety instructions: Special conditions

- Unit is may not be used when hybrid mixtures (gas, dust, air) are present.
- The temperature transmitter must be installed so, that even in the event of rare incidents, an ignition source due to impact or friction between the enclosure and iron/steel is excluded.
- Use for integral temperature sensors only approved sensors certified for category 1D or 2D marked not less than II1/2D Ex ia IIIC T110 °C Da/Db or II2D Ex ia IIIC T110 °C Db for use in Zone 20 or Zone 21.
- Use for remote temperature sensors only approved sensors certified for category 2D marked not less than II2D Ex ia IIIC T110 °C Db for use in Zone 21.

### Temperature tables

The ambient temperature range is depending on temperature class and maximum temperature of the enclosure  $Txx^{\circ}C$ , applicable to the maximum dust layer thickness of 5 mm, listed in the following table:

Туре	Temperature class	Ambient temperature		
		Zone 1 EPL Gb	Zone 0 EPL Ga	
iTEMP TMT142B	T6	-50 °C ≤ Ta ≤ +55 °C	-50 °C ≤ Ta ≤ +40 °C	
	T5	-50 °C ≤ Ta ≤ +70 °C	-50 °C ≤ Ta ≤ +50 °C	
	T4	-50 °C ≤ Ta ≤ +85 °C	-50 °C ≤ Ta ≤ +60 °C	

Туре	Maximum surface temperature	Ambient temperature Zone 21 EPL Db
iTEMP	T85 ℃	-40 °C ≤ Ta ≤ +55 °C
TMT142B	T100 ℃	-40 °C ≤ Ta ≤ +70 °C
	T110℃	-40 °C ≤ Ta ≤ +85 °C

XA01958T iTEMP TMT142B

## Electrical connection data

Туре	Electrical data		
iTEMP TMT142B	Supply (terminals + and -):	$\label{eq:continuous_section} \begin{split} Ui &\leq 30 \ V_{DC} \\ Ii &\leq 300 \ mA \\ Pi &\leq 1000 \ mW \\ Ci &\leq 5 \ nF \\ Li &= 0 \end{split}$	
	Sensor circuit (terminals 1 to 4):	$\label{eq:Uo} \begin{split} &Uo \leq 4.3 \ V_{DC} \\ &Io \leq 4.8 \ mA \\ &Po \leq 5.2 \ mW \end{split}$	
	Maximum connection values: Ex ia IIC Ex ia IIB Ex ia IIA	Lo = 40 mH Lo = 150 mH Lo = 300 mH	Co = 10.4 μF Co = 160 μF Co = 1000 μF

Category	Type of protection (ATEX/IECEx)	Туре
II 1G	Ex ia IIC T6T4 Ga	iTEMP TMT142B
II 2D	Ex ia IIIC T85 °CT110 °C Db	







www.addresses.endress.com