

Safety Instructions

Proline Promass 300

ATEX: II2G (Zone 1)
II1/2G (Zone 0/1)
II2D (Zone 21)
IECEX: EPL Gb (Zone 1)
EPL Ga/Gb (Zone 0/1)
EPL Db (Zone 21)



BG - Правила за техниката на безопасност за електрически средства за производство във взривоопасни зони. Ако не разбирате езика на това ръководство има възможност да спорячате при нас едно ръководство, преведено на езика на Вашата страна.

ЕС декларация за съответствие

Производителят Endress+Hauser декларира с това заявление за съответствие и с предявяването на сертификата CE, че този продукт отговаря на изискванията на съответните европейски директиви. Прилаганите директиви, норми и документи са указани в заявлението за съответствие.

CS - Bezpečnostní pokyny pro elektrické přístroje v místech s nebezpečím výbuchu. Pokud nemáte možnost přečíst si tento návod, můžete si u nás objednat návod přeložený do svého jazyka.

EU prohlášení o shodě

Společnost Endress+Hauser prohlašuje prostřednictvím tohoto prohlášení a použitím značky CE, že tento výrobek vyhovuje příslušným evropským směrnicím. Zmíněné směrnice, normy a dokumenty jsou uvedeny v Prohlášení o shodě.

DA - Sikkerhedsforskrifter for elektriske apparater certificeret til brug i eksplosionsfarlige områder. Hvis du ikke forstår denne manual, kan en oversat kopi af den på dit eget sprog bestilles fra os.

EU-overensstemmelseserklæring

Med denne overensstemmelseserklæring og tilføjelsen af CE-mærket sikrer producenten Endress+Hauser, at produktet er i overensstemmelse med relevante europæiske direktiver. Dokumentation for overensstemmelsen gives i de anførte direktiver, standarder og dokumenter.

EL - Οδηγίες ασφαλείας ηλεκτρικών συσκευών για επικίνδυνες για έκρηξη περιοχές. Σε περίπτωση που δεν μπορείτε να διαβάσετε αυτές τις οδηγίες, τότε μπορείτε να παραγγείλετε ένα αντίτυπο μεταφρασμένο στη γλώσσα σας.

Δήλωση συμμόρφωσης ΕΕ

Με αυτή τη δήλωση πιστότητας και την τοποθέτηση του σήματος CE ο κατασκευαστής Endress+Hauser δηλώνει, ότι αυτό το προϊόν συμμορφώνεται με τις ευρωπαϊκές οδηγίες που πρέπει να εφαρμοστούν. Οι οδηγίες, τα πρότυπα και τα έγγραφα που εφαρμόστηκαν αναφέρονται στη δήλωση πιστότητας.

ES - Instrucciones de seguridad de aparatos eléctricos homologados para su utilización en áreas expuestas a riesgos de deflagración. Si no entiende este manual, puede pedir un ejemplar en su idioma.

Declaración UE de conformidad

Por la presente declaración y la inclusión de la marca CE, el fabricante Endress+Hauser, declara que el producto cumple con las directivas europeas pertinentes. Las directivas, normas y documentos de aplicación se indican en la declaración de conformidad.

ET - Ohutusjuhised plahvatusohtlikus keskkonnas kasutatavate elektriseadmete kohta. Kui Te ei saa käesolevast juhendist aru, võite meilt tellida Teie riigikeelde tõlgitud juhendi.

EL i vastavusdeklaratsioon

Tootja Endress+Hauser kinnitab juurdelisatud vastavusdeklaratsiooni esitamisega ja CE-märgise kandmisega tootele, et käesolev toode vastab kohaldatavate Euroopa Liidu direktiivide nõuetele. Kohaldatavad direktiivid, standardid ja dokumendid on ära toodud vastavusdeklaratsioonis.

FI - Turvallisuusohteita sähkölaitteille, jotka on vahvistettu käytettäväksi räjähdysvaarallisilla alueilla. Jos et ymmärrä tätä käsikirjaa, voit tilata meiltä käännöksen omalla kansallisella kielelläsi.

EU-vaatimustenmukaisuusvakuutus

Valmistaja Endress+Hauser vakuuttaa täällä vaatimustenmukaisuustodistuksella ja CE-merkin kiinnittämisellä, että tämä tuote täyttää sovellettavien EU-direktiivien määräykset. Sovellettavat direktiivit, normit ja dokumentit on merkitty vaatimustenmukaisuustodistukseen.

HR - Sigurnosni naputci za elektromaterijal u sredini u kojoj prijeti opasnost od eksplozije. Ako Vam nije moguće čitati ovaj naputak, onda imate mogućnost da kod nas naručite naputak sastavljen na Vašem materinskom jeziku.

EU izjava o sukladnosti

Dobavljač Endress+Hauser jamči ovom izjavom i stavljanjem oznake CE da ovaj proizvod udovoljava zahtjevima europskih direktiva koje su na snazi. U izjavi o usuglašenosti se navode direktive, norme i dokumenti koji su na snazi.

HU - Biztonsági információk robbanásveszélyes területre való elektromos eszközökhöz. Amennyiben nem tudja elolvasni ezt az útmutatót, akkor megrendelheti az Ön anyanyelvére lefordítva is.

EU-megfelelőségi nyilatkozat

Az Endress+Hauser mint gyártó jelen megfeleléségi nyilatkozattal és a CE-jelzés felhelyezésével kijelenti, hogy ez a termék megfelel az alkalmazandó európai irányelveknek. Az alkalmazott irányelvek, szabványok és dokumentumok a megfeleléségi nyilatkozatban fel vannak tüntetve.

IT - Istruzioni di sicurezza per apparecchiature elettriche certificate per l'utilizzo in aree con pericolo di esplosione. Se il presente manuale non risulta comprensibile potete ordinarne una copia tradotta nella vostra lingua.

Dichiarazione di conformità UE

Con questa dichiarazione e con l'applicazione del marchio CE, il costruttore Endress+Hauser, assicura che il prodotto è conforme alle direttive europee vigenti. Prova della conformità è fornita dall'osservanza delle direttive, delle norme e dei documenti elencati.

LT - Elektros įrenginio saugumo nurodymai, susiję su sprogimo zonomis. Jeigu negalite perskaityti šios instrukcijos, kreipkitės į mus, kad užsisakytumėte į jūsų gimtąją kalbą išverstą instrukciją.

ES atitikties deklaracija

Gamintojas Endress+Hauser šia atitikties deklaracija ir CE ženkliniu patvirtina, kad gaminyje atitinka taikytinas ES direktyvas. Taikomos direktyvos, normos ir dokumentai yra pateikiami atitikties deklaracijoje.

LV - Drošības norādījumi elektrisko darba instrumentu lietošanai apgabalos, kas pakļauti sprādzienbīstamībai. Ja Jums nav iespēju izlasīt šos norādījumus, Jūs varat pasūtīt pie mums tulkojumu Jūsu valsts valodā.

ES atbilstības deklarācija

Ražotājs Endress+Hauser ar šo atbilstības apliecinājumu un CE zīmola lietojumu apstiprina, ka produkts izgatavots saskaņā ar atbilstošajām Eiropas vadlīnijām. Piemērotās vadlīnijas, normas un dokumenti atrunāti atbilstības apliecinājumā.

NL - Veiligheidsinstructies voor elektrisch materieel in explosiegevaarlijke omgeving. Wanneer u deze handleiding niet kunt lezen, kunt u een in uw landstaal vertaalde handleiding bij ons bestellen.

EU-conformiteitsverklaring

De leverancier Endress+Hauser waarborgt met deze verklaring en het aanbrengen van het CE-teken, dat dit product overeenstemt met de geldende Europese richtlijnen. De geldende richtlijnen, normen en documenten zijn aangegeven in de conformiteitsverklaring.

PL - Wskazówki dot. bezpieczeństwa dla urządzeń elektrycznych stosowanych w obszarze zagrożonym wybuchem. Jeśli niniejsza instrukcja napisana jest w języku, którym się nie posługujesz, możesz zamówić u nas przetłumaczony dokument.

Deklaracja zgodności UE

Producent Endress+Hauser w niniejszej deklaracji zgodności wraz z nadaniem znaku CE oświadcza, że produkt ten jest zgodny z obowiązującą Europejską Dyrektywą. Zastosowane wytyczne, normy oraz dokumenty podane są w deklaracji zgodności.

PT - Instruções de segurança para dispositivos eléctricos certificados para utilização em áreas de risco de incêndio. Se não compreender este manual, pode encomendar-nos directamente uma cópia na sua língua.

Declaração UE de conformidade

Com esta declaração de conformidade e a aplicação da marca CE, o fabricante Endress+Hauser, garante que o produto obedece às directivas europeias a aplicar. As directivas, normas e documentos são apresentadas na declaração de conformidade.

RO - Indicații de siguranță pentru mijloacele de producție electrice pentru zonele periclitare de explozie. Dacă nu puteți citi aceste instrucțiuni, atunci puteți comanda la noi instrucțiunile traduse în limba țării dumneavoastră.

Declarația UE de conformitate

Producătorul Endress+Hauser declară prin declarația de conformitate alăturată și prin aplicarea semnului CE că acest produs corespunde directivelor europene aplicabile. Directivele, normele aplicate și documentele sunt menționate în declarația de conformitate.

SK - Bezpečnostné pokyny pre elektrické zariadenie prevádzkované v priestoroch s nebezpečenstvom výbuchu. Ak nemáte možnosť 'prečítať' si tento návod, môžete si u nás objednať 'návod preložený do svojho jazyka.

EÚ vyhlásenie o zhode

Spoločnosť Endress+Hauser vyhlasuje prostredníctvom tohto vyhlásenia o konformite a použitím značky CE, že tento výrobok vyhovuje príslušným európskym smerniciam. Zmieňované smernice, normy a dokumenty sú uvedené vo Vyhlásení o konformite.

SL - Varnostni napotki glede električne opreme, namenjene za uporabo v eksplozivnih območjih. Če teh navodil ne morete razumeti, lahko pri nas naročite prevod v vaš jezik.

Izjava EU o skladnosti

Proizvajalec Endress+Hauser s to izjavo o skladnosti in navedbo oznake CE izjavlja, da je ta izdelek skladen s predpisanimi evropskimi smernicami. Upošteevane smernice, standardi in dokumenti so navedeni v izjavi o skladnosti.

SV - Säkerhetsföreskrifter för elektrisk utrustning certifierad för användning i explosionsfarliga områden. Om du inte förstår denna manual, kan en översatt kopia på ditt eget språk beställas från oss.

EU-försäkran om överensstämmelse

Endress+Hauser försäkrar med vidstående försäkran om överensstämmelse och med CE-märkningen att denna produkt överensstämmer med de tillämplbara europeiska riktlinjerna. De tillämplade riktlinjerna, normerna och dokumenten anges i försäkran om överensstämmelse.

Proline Promass 300

Table of contents

About this document 6

Associated documentation 6

Certificates and declarations 7

Manufacturer address 8

Extended order code 8

Safety instructions: General 11

Safety instructions: Installation 13

Safety instructions: EPL Ga (Zone 0) 16

Safety instructions: EPL Db (Zone 21) 16

Temperature tables 16

Explosion hazards arising from gas and dust 27

Connection values: Signal circuits 29

About this document

 The document number of these Safety Instructions (XA) must match the information on the nameplate.

Associated documentation

For an overview of the scope of the associated Technical Documentation, refer to the following:

- *Device Viewer* (www.endress.com/deviceviewer): Enter serial number from nameplate.
- *Endress+Hauser Operations app*: Enter serial number from nameplate or scan matrix code on nameplate.

To commission the device, please observe the Operating Instructions pertaining to the device:

Measuring instrument	Documentation code				
	HART	FOUNDATION Fieldbus	PROFIBUS PA	PROFIBUS DP	Modbus RS485
Promass A 300 (8A3B)	BA01482D	BA01515D	BA01504D	–	BA01493D
Promass A 300 (8A3C)	BA01816D	BA01843D	BA01841D	BA01857D	BA01884D
Promass E 300	BA01484D	BA01517D	BA01506D	BA01855D	BA01495D
Promass F 300	BA01485D	BA01518D	BA01507D	BA01850D	BA01496D
Promass H 300	BA01486D	BA01519D	BA01508D	BA01858D	BA01497D
Promass I 300	BA01487D	BA01520D	BA01509D	BA01859D	BA01498D
Promass O 300	BA01488D	BA01521D	BA01510D	BA01860D	BA01499D
Promass P 300	BA01489D	BA01522D	BA01511D	BA01861D	BA01500D
Promass Q 300	BA01490D	BA01523D	BA01512D	BA01862D	BA01501D
Promass S 300	BA01491D	BA01524D	BA01513D	BA01863D	BA01502D
Promass X 300	BA01492D	BA01525D	BA01514D	BA01864D	BA01503D

Measuring instrument	Documentation code			
	EtherNet/IP	PROFINET	PROFINET over Ethernet-APL	Modbus TCP
Promass A 300 (8A3B)	BA01699D	BA01736D	–	–
Promass A 300 (8A3C)	BA01842D	BA01840D	BA02108D	BA02401D
Promass E 300	BA01727D	BA01738D	BA02110D	BA02403D
Promass F 300	BA01728D	BA01739D	BA01739D	BA02404D
Promass H 300	BA01729D	BA01740D	BA02111D	BA02405D
Promass I 300	BA01730D	BA01741D	BA02112D	BA02406D
Promass O 300	BA01731D	BA01742D	BA02113D	BA02407D

Measuring instrument	Documentation code			
	EtherNet/IP	PROFINET	PROFINET over Ethernet-APL	Modbus TCP
Promass P 300	BA01732D	BA01743D	BA02114D	BA02408D
Promass Q 300	BA01733D	BA01744D	BA02116D	BA02409D
Promass S 300	BA01734D	BA01745D	BA02117D	BA02410D
Promass X 300	BA01735D	BA01746D	BA02118D	BA02411D

Additional documentation

Contents	Document type	Documentation code
Remote display and operating module DKX001	Special documentation	SD01763D
	Safety Instructions II2G Ex ia, II2D Ex tb	XA01494D
Explosion Protection	Brochure	CP00021Z/11
Ethernet-APL Installation Drawing	Installation Drawing	HE_01622

Please note the documentation associated with the device.

Certificates and declarations

EU Declaration of conformity

Documentation code: EC_00405

EU type-examination certificate

Certificate number:

SIRA 16ATEX2219X

IEC Certificate of Conformity

Certificate number:

IECEX CSA 16.0034X

Affixing the certificate number certifies conformity with the standards under www.IECEx.com (depending on the device version).

- IEC 60079-0: 2017
- IEC 60079-1: 2014
- IEC 60079-7: 2017
- IEC 60079-11: 2011
- IEC 60079-26: 2014
- IEC 60079-31: 2013
- IEC TS 60079-47: 2021


Manufacturer
address

Endress+Hauser Flowtec AG
Kägenstrasse 7
4153 Reinach BL
Switzerland

Extended
order code

The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional information about the nameplate is provided in the associated Operating Instructions.

Structure of the extended order code

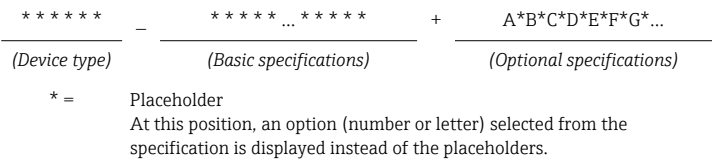

Device type

The device and the device design is defined in the "Device type" section (Product root).

Basic specifications

The features that are absolutely essential for the device (mandatory features) are specified in the basic specifications. The number of positions depends on the number of features available. The selected option of a feature can consist of several positions.

Optional specifications

The optional specifications describe additional features for the device (optional features). The number of positions depends on the number of features available. The features have a 2-digit structure to aid identification (e.g. JA). The first digit (ID) stands for the feature group and consists of a number or a letter (e.g. J = Test, Certificate). The second digit constitutes the value that stands for the feature within the group (e.g. A = 3.1 material (wetted parts), inspection certificate).

More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

Device type

Position	Order code for	Selected option	Description
1	Instrument family	8	Coriolis flowmeter
2	Sensor	A, E, F, H, I, O, P, Q, S, X ¹⁾	Sensor type
3	Transmitter	3	Transmitter type: 4-wire, compact version
4	Generation index	B, C	Platform generation
5, 6	Nominal diameter	Examples: 02, 04, 40, 50, 1H, 3E ^{2) 3)}	Nominal diameter of sensor

- 1) For replacement transmitter only: X
 2) For the exact specification of the nominal diameter, see nameplate
 3) For replacement transmitter only: XX

Basic specifications

Position 1, 2 Order code for "Approval" Selected option	Position 4, 5 Order code for "Output, input 1" Selected option	Type of protection
BA	BA, BB, GA, LA, MA, MB, NA, RA, RB, SA	Ex db eb ia IIB T6...T1 Ga/Gb ¹⁾ Ex tb IIIC T** °C Db
	CA, CC, HA, MC, RC, TA	Ex db eb ia [ia Ga] IIB T6...T1 Ga/Gb ¹⁾ Ex tb [ia Da] IIIC T** °C Db
BB	BA, BB, GA, LA, MA, MB, NA, RA, RB, SA	Ex db eb ia IIC T6...T1 Ga/Gb ¹⁾ Ex tb IIIC T** °C Db
	CA, CC, HA, MC, RC, TA	Ex db eb ia [ia Ga] IIC T6...T1 Ga/Gb ¹⁾ Ex tb [ia Da] IIIC T** °C Db
BC	BA, BB, GA, LA, MA, MB, NA, RA, RB, SA	Ex db ia IIB T6...T1 Ga/Gb ¹⁾ Ex tb IIIC T** °C Db
	CA, CC, HA, MC, RC, TA	Ex db ia [ia Ga] IIB T6...T1 Ga/Gb ¹⁾ Ex tb [ia Da] IIIC T** °C Db
BD	BA, BB, GA, LA, MA, MB, NA, RA, RB, SA	Ex db ia IIC T6...T1 Ga/Gb ¹⁾ Ex tb IIIC T** °C Db
	CA, CC, HA, MC, RC, TA	Ex db ia [ia Ga] IIC T6...T1 Ga/Gb ¹⁾ Ex tb [ia Da] IIIC T** °C Db

- 1) Sensors Promass A DN 1, Promass H DN 8 to 50, Promass I DN 8 to 80 are only suitable for equipment protection level EPL Gb.

Position	Order code for	Selected option	Description
4, 5	Output; input 1	BA	4-20mA HART
		CA	4-20mA HART Ex-i passive

Position	Order code for	Selected option	Description
		CC	4-20mA HART Ex-i active
		GA	PROFIBUS PA
		HA	PROFIBUS PA Ex-i
		LA	PROFIBUS DP
		MA	Modbus RS485
		MB	Modbus TCP over Ethernet-APL/SPE, 10Mbit/s
		MC	Modbus TCP over Ethernet-APL, Ex-i, 10Mbit/s
		NA	EtherNet/IP 2-port switch integrated
		RA	PROFINET IO 2-port switch integrated
		RB	PROFINET over Ethernet-APL/SPE, 10Mbit/s
		RC	PROFINET over Ethernet-APL, Ex-i, 10Mbit/s
		SA	FOUNDATION Fieldbus
		TA	FOUNDATION Fieldbus Ex-i
6	Output; input 2	A	W/o
		B	4-20mA
		C	4-20mA Ex-i passive
		D	Configurable I/O initial setting off
		E	Pulse/frequency/switch output
		F	Pulse output, phase-shifted
		G	Pulse/frequency/switch output Ex-i passive
		H	Relay
		I	4-20mA input
		J	Status input
7	Output; input 3	A	W/o
		B	4-20mA
		C	4-20mA Ex-i passive
		D	Configurable I/O initial setting off
		E	Pulse/frequency/switch output
		F	Pulse output, phase-shifted
		G	Pulse/frequency/switch output Ex-i passive
		H	Relay
		I	4-20mA input
		J	Status input

Position	Order code for	Selected option	Description
8	Display; Operation	A	W/o; via communication
		F	4-line, illuminated; touch control
		G	4-line, illuminated; touch control + WLAN
		M	Without; prepared for remote display DKX001 ¹⁾
		O	Separate, with remote display DKX001 ¹⁾ , 4-line, illuminated; 10 m / 30 ft cable; touch control
9	Housing	A	Alu, coated
		L	Cast, stainless
11, 12	Meas. Tube Mat., Wetted Parts Surface	LA	Stainl. steel, cryogenic -196°C/-320°F
17, 18	Device Model	A1	1
		A2	2

1) DKX001 is separately approved.

Optional specifications

ID	Order code for	Selected option	Description
Cx	Sensor option	CA	Rupture disk
Cx	Sensor option	CG	Extended neck for insulation
Cx	Sensor option	CH	Purge connection
Jx	Test, certificate	JP	Ambient temperature measuring device -50 °C
Px	Enclosed accessories	P8	Wireless antenna, wide area (external WLAN antenna) ¹⁾

1) The external WLAN antenna is available with the order code for "Accessory Enclosed", option P8.

Safety instructions: General

- Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device:
 - Be suitably qualified for their role and the tasks they perform
 - Be trained in explosion protection
 - Be familiar with national regulations or guidelines (e.g. IEC/EN 60079-14)
- Install the device according to the manufacturer's instructions and national regulations.
- Do not operate the device outside the specified electrical, thermal and mechanical parameters.
- Use the device only in media where the wetted materials are known to be suitable.

- Refer to the temperature tables for the relationship between the permitted ambient temperature for the sensor and/or transmitter, depending on the range of application, and the temperature classes.
- Alterations to the device can affect the explosion protection and must be carried out by staff authorized to perform such work by Endress+Hauser.
- An additional assessment must be conducted to confirm that the device is suitable for installation in hybrid mixtures (explosive gas and dust occurring simultaneously).
- Only open the cover of the Ex db transmitter housing if one of the following conditions is met:
 - An explosive atmosphere is not present.
 - A waiting time of 10 minutes is observed after switching off the power supply.

The following warning notice is on the device:
WARNING – AFTER DE-ENERGIZING, DELAY 10 MINUTES
BEFORE OPENING ENCLOSURE IN TYPE OF PROTECTION EX D
- In devices with damaged Ex d threads:
 - Use in hazardous areas is not permitted.
 - Repair of Ex d threads is not permitted.
- Observe all the technical data of the device (see nameplate).
- Avoid electrostatic charges which could result in electrostatic discharges while installing, operating, cleaning or maintaining:
 - For external non-metallic surfaces, e.g. housing, attached additional plates, RFID tag.
 - For attached external metallic parts that are not integrated into the local potential equalization system, e.g. nameplate tag, RFID tag.
 - Do not use in areas where the devices/electronic housing are exposed to highly charge-generating processes, pneumatically conveyed dusts and/or charge spraying in an electrostatic coating process.
 - Do not rub surfaces dry. Clean only with moist cloth.
 - Information on electrostatic hazards and how to minimize the generation of static electricity can be found in the technical specification IEC/TS 60079-32-1.

Safety instructions: Installation

General installation instructions

- Continuous service temperature of the connecting cable: -40 to $+85$ °C (-50 to $+85$ °C for optional specification, ID Jx (Test, certificate) = JP); but at least according to the operating temperature range of the application plus allowance for process conditions ($T_{a, \min}$ and $T_{a, \max} + 20$ K).
- The following applies when installing the transmitter with an Ex db connection compartment:
Only use separately certified cable glands, sealing plugs and thread adapters (Ex db IIC) that are suitable for operating temperatures from -40 to $+85$ °C (-50 to $+85$ °C for optional specification) and for IP 66/67.
The mounted metal thread extensions and sealing plugs are tested and certified as part of the devices for the type of protection Ex db IIC. The thread extension or the sealing plug labeled as follows for identification purposes:
 - Md: M20 x 1.5
 - d or NPTd: NPT $\frac{1}{2}$ "
 - Gd: G $\frac{1}{2}$ "
- The following applies when installing a transmitter with an Ex eb connection compartment:
Only use separately certified cable glands, sealing plugs and thread adapters (Ex eb IIC) which are suitable for operating temperatures from -40 to $+85$ °C (-50 to $+85$ °C for optional specification) and for IP 66/67.
The mounted metal thread extensions and sealing plugs supplied are tested and certified as part of the devices for the type of protection Ex eb IIC.
The cables must be routed such that they are securely seated, and sufficient strain relief must be ensured.
- When the measuring device is connected, attention must be paid to the type of protection at the transmitter.
- Turning the transmitter housing
 - Loosen both hexagon socket screws until the transmitter housing can be turned.
 - Turn transmitter housing to desired position (mechanically limited); if necessary turn 270° in other direction.
 - Tighten both hexagon socket screws with a maximum of 7 Nm.
- For the device with order code "Output; Input 1", option MC:
 - When using Port 1 (terminal 26/27) as a 2-WISE power load APL port with the SLAA profile, Port 2 (RJ45) must not be used for Modbus TCP.
 - Parallel operation of Port 1 (terminal 26/27) and Port 2 (RJ45) is not permitted.

Installation in potentially explosive atmospheres

- Do not disconnect the electrical connection of the power supply circuit when energized.
- Do not open the connection compartment cover when the device is energized.
- Exception for the device with order code "Approval; Transmitter + Sensor", options BA, BB (Ex db eb) and "Power Supply", option D (24V) and "Output; Input 1", options CA, CB, CC, HA, MC, RC, TA (Intrinsically safe circuits): the Ex eb connection compartment of the transmitter may be opened for a short period to perform live maintenance of intrinsically safe circuits. All internal non-intrinsically safe circuits are protected by an addition IP30 rated cover.
- Exception for the device with order code "Approval; Transmitter + Sensor", options BA, BB (Ex db eb) and "Output; Input 1", options CA, CB, CC, HA, MC, RC, TA (Intrinsically safe circuits): Transmitters with Ex db eb may only be connected to or operated with the service interface (Port 2, RJ45) if they are part of an Ex i (intrinsically safe) circuit.
In all other configurations, connection to or operation with Port 2 is not permitted.

Use of cable glands, sealing plugs and thread adapters

- Only use Ex certified cable glands, sealing plugs and thread adapters that are suitable for the intended application (see nameplates).
- Plastic sealing plugs are mounted to cable entries and metallic thread extensions for temporary protection during transport and storage. These must be replaced with suitable Ex certified cable entry devices for permanent use.
- The mounted metallic thread extensions and sealing plugs are tested and certified as part of the device. These meet the device's specific requirements.
- Supplied Ex cable glands are separately certified and meet the device's specific requirements.
- All unused cable entries must be closed with suitable Ex certified sealing plugs.
- Observe selection criteria for Ex cable entry devices as per IEC/EN 60079-14.

Optional external WLAN antenna

- The external WLAN antenna (with or without extension cable) and the antenna feedthrough can only be installed in devices with an Ex eb connection compartment. Using them with an Ex db connection compartment is not permitted.
- Use only the external antenna (with or without extension cable) and the antenna feedthrough supplied by Endress+Hauser.
- The antenna feedthrough must be mounted to the transmitter with a tightening torque of 4 Nm.
Tightening torques for Polycarbonate transmitter housing: 2.5 Nm
- Use only an external antenna (with or without extension cable) equipped with a Type-N male connector (MIL-STD-348).
- The coupling nut of the Type-N male connector must be tightened by hand only.

Optional RFID TAG

- Do not use in areas with high electromagnetic field intensities.
- Avoid electrostatic charging.
- Ensure sufficient distance from processes generating high charges.

Intrinsic safety

- Observe the guidelines for interconnecting intrinsically safe circuits (e.g. IEC/EN 60079-14, IEC/EN 60079-25 , proof of intrinsic safety).
- The device's intrinsically safe input/output circuits are rated Ex ia IIC Ga. When connected to certified intrinsically safe apparatus with an Ex ib IIC Gb or Ex ib IIB Gb rating, the level of protection of the overall system becomes Ex ib IIC Gb or Ex ib IIB Gb , respectively.
- The device's intrinsically safe output circuit for remote display is rated Ex ia IIC Ga. When connected to the remote display and operating module DKX001, which is rated Ex ia IIC Gb the level of protection of the overall system becomes Ex ia IIC Gb.

Remote display and operating module DKX001

- When using the remote display and operating module DKX001 the internal display and operating module must be removed.
- When connected to a separately ordered remote display and operating module DKX001, use only the following variants: Basic specification of the remote display and operating module DKX001, order code "Approval", option BE, BF, BG
- Observe additional instructions in the Safety Instructions (XA) of the remote display and operating module DKX001.

Potential equalization

- The device must be connected to the potential equalization system using designated protective ground terminals.
- It is also possible to integrate the device into the potential equalization system through a pipe system, provided that the pipe system meets the grounding requirements of applicable national regulations.

Safety instructions: EPL Ga (Zone 0)

Install the transmitter electronics in Zone 1. For sensors with EPL Ga/Gb (Zone 0/1), the EPL Ga (Zone 0) is only permitted in the measuring tube.

Safety instructions: EPL Db (Zone 21)

- The enclosure may only be opened for brief maintenance or inspection activities where the area is confirmed to be free of combustible dust. Suitable precautions must be taken during this time to prevent dust entering the electronic compartment.
- Only use separately certified cable glands, sealing plugs and thread adapters (Ex tb IIIC) which are suitable for operating temperatures from -40 to +85 °C (-50 to +85 °C for optional specification) and for IP 66/67.
The mounted metallic thread extensions and metallic sealing plugs are tested and certified as part of the devices for the type of protection Ex tb IIIC.
- The device's intrinsically safe output circuit for remote display is rated Ex ia IIIC Da. When connected to the remote display and operating module DKX001, which is rated Ex ia IIIC Db, the level of protection of the overall system becomes Ex ia IIIC Db.
Connection values: Signal circuits, DKX001 →  31

Temperature tables

Minimum ambient temperature

- $T_{a, \min} = -40\text{ °C}$
- *Optional specification, ID Jx (Test, Certificate) = JP*
 $T_{a, \min} = -50\text{ °C}$ depending on the selected device variant (see nameplate)

Maximum ambient temperature

$T_{a, \max} = +60\text{ °C}$ depending on temperature class, maximum medium temperature and device-specific features. See the corresponding temperature tables.

Minimum medium temperature

- Promass A, F, H, I, P, Q, S, X:
 $T_{m, \min} = -50\text{ }^{\circ}\text{C}$
- Promass E, O:
 $T_{m, \min} = -40\text{ }^{\circ}\text{C}$
- Promass F, Q with cryogenic temperature version (order code for "Measuring tube material", option LA):
 $T_{m, \min} = -196\text{ }^{\circ}\text{C}$

Maximum medium temperature without thermal insulation

NOTICE

In case of heating, risk of overheating.

- ▶ On devices with Heating jacket the corresponding temperature tables for devices with thermal insulation, are to be observed.
- ▶ Make sure that the heating medium, may not exceeded the maximum specified medium temperature of the exact used temperature classes of the device.

() = The maximum permitted medium temperatures in brackets only apply if the sensor is installed in such a way that the transmitter is not mounted above the sensor and free convection can occur on all sides.

Promass A (8A3B**-*, 8A3C**-*)

DN	$T_{m, \max \text{ range}}$ [°C]	$T_{a, \max}$ [°C]	$T_{m, \max}$ [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
1 to 4	205	50	50	95	130	150	205	205
		60	–	95	130	150	205	205

Promass E

DN	$T_{m, \max \text{ range}}$ [°C]	$T_{a, \max}$ [°C]	$T_{m, \max}$ [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
8 to 50	150	50	50	100	130	130	150	150
		55	–	80	100	130	150	150
		60	–	(80)	(100)	(130)	(150)	(150)
80	150	50	50	75	110	150	150	150
		55	–	75	110	150	150	150
		60	–	(75)	(110)	(150)	(150)	(150)

Promass F

DN	T _{m, max range} ¹⁾ [°C]	T _{a, max} [°C]	T _{m, max} [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
08 to 15	150	50	50	95	130	150	150	150
		60	–	95	130	150	150	150
	150 ²⁾	50	50	95	100	150	150	150
		60	–	95	100	150	150	150
	240	50	50	95	130	160	240	240
		60	–	95	130	160	(240)	(240)
15 to 25	350	50	45	95	130	175	275	350
		60	–	95	130	175	275	350
25 to 50	150	50	50	95	130	150	150	150
		60	–	95	130	150	150	150
	150 ²⁾	50	50	95	100	150	150	150
		60	–	95	100	150	150	150
	240	50	50	95	130	160	240	240
		60	–	95	130	160	(240)	(240)
80 to 250	150	50	50	75	110	150	150	150
		60	–	75	110	150	150	150
	150 ²⁾	50	50	75	110	150	150	150
		60	–	75	110	150	150	150
	240	50	50	75	110	170	240	240
		60	–	75	110	170	(240)	(240)
50 to 250	350	50	45	85	120	175	275	350
		60	–	85	120	175	275	350

- 1) Maximum temperature range, see nameplate
- 2) Cryogenic temperature version: T_m = –196 to 150 °C

Promass H

DN	T _{m, max range} ¹⁾ [°C]	T _{a, max} [°C]	T _{m, max} [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
8	150	50	50	65	100	150	150	150
		60	–	65	100	150	150	150

DN	T _{m, max range} ¹⁾ [°C]	T _{a, max} [°C]	T _{m, max} [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
8	205	50	50	65	100	160	205	205
		60	–	65	100	160	205	205
15 to 50	150	50	50	75	115	150	150	150
		60	–	75	115	150	150	150
15 to 50	205	50	50	75	115	180	205	205
		60	–	75	115	180	205	205

1) Maximum temperature range, see nameplate

Promass I

DN	T _{m, max range} [°C]	T _{a, max} [°C]	T _{m, max} [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
8, 15, 15FB, 25	150	50	50	95	130	150	150	150
		60	–	95	120	(150)	(150)	(150)
25FB, 40, 40FB, 50	150	50	50	85	120	150	150	150
		60	–	85	120	(150)	(150)	(150)
50FB, 80	150	50	50	85	120	150	150	150
		60	–	85	120	(150)	(150)	(150)
FB = Full bore								

Promass O

DN	T _{m, max range} [°C]	T _{a, max} [°C]	T _{m, max} [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
80 to 250	205	50	50	75	110	170	205	205
		55	–	75	110	170	205	205
		60	–	75	110	170	(205)	(205)

Promass P

DN	T _{m, max range} ¹⁾ [°C]	T _{a, max} [°C]	T _{m, max} [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
8	150	45	45	65	100	150	150	150
		60	–	65	100	150	150	150
	205	45	45	65	100	160	205	205
		60	–	65	100	160	205	205
15 to 50	150	50	50	75	115	150	150	150
		60	–	75	115	150	150	150
	205	50	50	75	115	180	205	205
		60	–	75	115	180	205	205

1) Maximum temperature range, see nameplate

Promass Q

DN	T _{m, max range} ¹⁾ [°C]	T _{a, max} [°C]	T _{m, max} [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
25 to 250	205	50	50	75	110	160	205	205
		60	–	75	110	160	205	205
25 to 250	150 ²⁾	50	50	75	110	150	150	150
		60	–	75	110	150	150	150

1) Maximum temperature range, see nameplate

2) Cryogenic temperature version: T_m = –196 to 150 °C

Promass S

DN	T _{m, max range} [°C]	T _{a, max} [°C]	T _{m, max} [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
8	150	45	45	65	100	150	150	150
		60	–	65	100	150	150	150
15 to 50	150	50	50	75	115	150	150	150
		60	–	75	115	150	150	150

Promass X

DN	T _{m, max range} [°C]	T _{a, max} [°C]	T _{m, max} [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
350	180	50	50	90	120	170	180	180
		55	–	90	120	170	180	180
		60	–	(90)	(120)	(170)	(180)	(180)

Maximum medium temperature with thermal insulation according to Endress+Hauser specifications

NOTICE

In case of heating, risk of overheating.

- ▶ On devices with Heating jacket the corresponding temperature tables for devices with thermal insulation, are to be observed.
- ▶ Make sure that the heating medium, may not exceeded the maximum specified medium temperature of the exact used temperature classes of the device.

 For information on the thermal insulation of the device, see the "Thermal insulation" section of the "Operating instructions" document .

() = The maximum permitted medium temperatures in brackets only apply if the sensor is installed in such a way that the transmitter is not mounted above the sensor and free convection can occur on all sides.

Promass A (8A3B**-*, 8A3C**-*...)

DN	T _{m, max range} [°C]	T _{a, max} [°C]	T _{m, max} [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
1 to 4	205	50	50	95	130	150	205	205
		55	–	(95)	(130)	(150)	(205)	(205)

Promass E

DN	T _{m, max range} [°C]	T _{a, max} [°C]	T _{m, max} [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
8 to 50	150	50	50	100	130	130	150	150
		55	–	(100)	(130)	(130)	(150)	(150)
80	150	45	50	75	110	150	150	150
		50	–	75	110	150	150	150
		55	–	(75)	(110)	(150)	(150)	(150)

Promass F

DN	T _{m, max range} ¹⁾ [°C]	T _{a, max} [°C]	T _{m, max} [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
08 to 15	150	50	50	95	130	150	150	150
		60	–	95	110	(150)	(150)	(150)

DN	T _{m, max range} ¹⁾ [°C]	T _{a, max} [°C]	T _{m, max} [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
	150 ²⁾	50	50	95	130	150	150	150
		55	–	95	(130)	(150)	(150)	(150)
		60	–	95	110	110	110	110
	240	50	50	95	130	160	240	240
		55	–	95	(130)	(160)	(240)	(240)
		60	–	95	110	110	110	110
15 to 25	350	50	45	95	130	175	275	350
		60	–	95	130	175	275	350
25 to 50	150	50	50	95	130	150	150	150
		60	–	95	110	(150)	(150)	(150)
	150 ²⁾	50	50	95	130	150	150	150
		55	–	95	(130)	(150)	(150)	(150)
		60	–	95	110	110	110	110
	240	50	50	95	130	160	240	240
		55	–	95	(130)	(160)	(240)	(240)
		60	–	95	110	110	110	110
	150 ²⁾	50	50	75	110	150	150	150
		60	–	75	110	(150)	(150)	(150)
80 to 250	150	50	50	75	110	150	150	150
		60	–	75	110	(150)	(150)	(150)
		50	50	75	110	150	150	150
	150 ²⁾	55	–	75	110	150	150	150
		60	–	75	110	110	110	110
	240	50	50	75	110	170	240	240
		55	–	75	110	(170)	(240)	(240)
		60	–	75	110	110	110	110
	240	50	50	75	110	170	240	240
		55	–	75	110	(170)	(240)	(240)
		60	–	75	110	110	110	110
50 to 250	350	50	45	85	120	175	275	350
		60	–	85	120	175	275	350

1) Maximum temperature range, see nameplate

2) Cryogenic temperature version: T_m = –196 to 150 °C

Promass H

DN	T _{m, max range} ¹⁾ [°C]	T _{a, max} [°C]	T _{m, max} [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
8	150	50	50	65	100	150	150	150
		55	–	65	100	(150)	(150)	(150)
		60	–	65	100	100	100	100
8	205	50	50	65	100	160	205	205
		55	–	65	100	(160)	(205)	(205)
		60	–	65	100	100	100	100
15 to 50	150	50	50	75	115	150	150	150
		55	–	75	115	(150)	(150)	(150)
		60	–	75	115	115	115	115
15 to 50	205	50	50	75	115	180	205	205
		55	–	75	115	(180)	(205)	(205)
		60	–	75	115	115	115	115

1) Maximum temperature range, see nameplate

Promass I

DN	T _{m, max range} [°C]	T _{a, max} [°C]	T _{m, max} [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
8, 15, 15FB, 25	150	50	50	95	130	150	150	150
		60	–	95	120	(150)	(150)	(150)
25FB, 40, 40FB, 50	150	50	50	85	120	150	150	150
		60	–	85	120	(150)	(150)	(150)
50FB, 80	150	50	50	85	120	150	150	150
		60	–	85	120	(150)	(150)	(150)
FB = Full bore								

Promass O

DN	T _{m, max range} [°C]	T _{a, max} [°C]	T _{m, max} [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
80 to 250	205	50	50	75	110	170	205	205
		55	–	(75)	(110)	(170)	(205)	(205)

Promass P

DN	T _{m, max range} ¹⁾ [°C]	T _{a, max} [°C]	T _{m, max} [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
8	150	45	45	65	100	150	150	150
		50	–	65	100	150	150	150
		60	–	65	100	125	(150)	(150)
	205	45	45	65	100	160	205	205
		50	–	65	100	160	205	205
		60	–	65	100	115	(205)	(205)
15 to 50	150	50	50	75	115	150	150	150
		60	–	75	115	125	(150)	(150)
	205	50	50	75	115	180	205	205
		60	–	75	115	(150)	(150)	(150)

1) Maximum temperature range, see nameplate

Promass Q

DN	T _{m, max range} ¹⁾ [°C]	T _{a, max} [°C]	T _{m, max} [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
25 to 250	205	50	50	75	110	160	205	205
		55	–	(75)	(110)	(160)	(205)	(205)
25 to 250	150 ²⁾	50	50	75	110	150	150	150
		55	–	(75)	(110)	(150)	(150)	(150)

1) Maximum temperature range, see nameplate

2) Cryogenic temperature version: T_m = –196 to 150 °C

Promass S


DN	T _{m, max range} [°C]	T _{a, max} [°C]	T _{m, max} [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
8	150	45	45	65	100	150	150	150
		50	–	65	100	150	150	150
		60	–	65	100	125	(150)	(150)
15 to 50	150	50	50	75	115	150	150	150
		60	–	75	115	125	(150)	(150)

Promass X

DN	T _{m, max range} [°C]	T _{a, max} [°C]	T _{m, max} [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
350	180	50	50	90	120	170	180	180
		55	–	(90)	(120)	(170)	(180)	(180)

**Maximum medium temperature for devices with thermal insulation
NOT in accordance with Endress+Hauser specifications**

The specified reference temperature T_{ref} and the maximum medium temperature $T_{m, max}$ for each temperature class must not be exceeded.
→  22

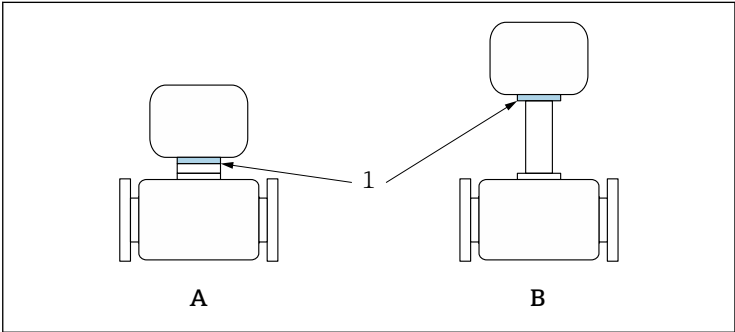

A0031198

 1 *Position of reference point for temperature measurement*

- A *Standard version*
- B *Extended temperature version, cryogenic temperature version, high-temperature version*
- 1 *Reference point (T_{ref})*

Reference temperature T_{ref}

T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
59	72	75	76	77	77

**Explosion hazards
arising from gas
and dust**

**Determining the temperature class and surface temperature with
the temperature table**

- In the case of gas: Determine the temperature class as a function of the maximum ambient temperature $T_{a, max}$ and the maximum medium temperature $T_{m, max}$.
- In the case of dust: Determine the maximum surface temperature as a function of the maximum ambient temperature $T_{a, max}$ and the maximum medium temperature $T_{m, max}$.

Example

- Measured maximum ambient temperature: $T_{a, max} = 47\text{ °C}$
- Measured maximum medium temperature: $T_{m, max} = 108\text{ °C}$

4.

	Ta [°C]	T6 [85°C]	T5 [100°C]	T4 [135°C]	T3 [200°C]	T2 [300°C]	T1 [450°C]
	35	50	85	120	140	140	140
	50	-	85	120	140	140	140
	60	-	-	120	140	140	140
	35	50	85	120	140	140	140
	45	-	85	120	140	140	140
	50	-	-	120	140	140	140

1.2.3.

A0031223

2 Procedure for determining the temperature class and surface temperature

1. Select device (optional).
2. In the column for the maximum ambient temperature $T_{a, \max}$ select the temperature that is immediately greater than or equal to the maximum ambient temperature $T_{a, \max}$ that is present.

↳ $T_{a, \max} = 50\text{ °C}$.
The row showing the maximum medium temperature is determined.
3. Select the maximum medium temperature $T_{m, \max}$ of this row, which is immediately greater than or equal to the maximum medium temperature $T_{m, \max}$ that is present.

↳ The column with the temperature class for gas is determined:
 $108\text{ °C} \leq 120\text{ °C} \rightarrow T_4$.
4. The maximum temperature of the temperature class determined corresponds to the maximum surface temperature for dust: $T_4 = 135\text{ °C}$.

**Connection
values: Signal
circuits**

The following tables contain specifications which are dependent on the transmitter type and its input and output assignment. Compare the following specifications with those on the nameplate of the transmitter.

Terminal assignment

Transmitter: supply voltage, input/outputs

HART

Supply voltage		Input/output 1 (Port 1)		Input/output 2		Input/output 3		Service interface (Port 2)
1 (+)	2 (-)	26 (+)	27 (-)	24 (+)	25 (-)	22 (+)	23 (-)	CDI-RJ45
Device-specific terminal assignment: adhesive label in terminal cover.								

FOUNDATION fieldbus

Supply voltage		Input/output 1 (Port 1)		Input/output 2		Input/output 3		Service interface (Port 2)
1 (+)	2 (-)	26 (A)	27 (B)	24 (+)	25 (-)	22 (+)	23 (-)	CDI-RJ45
Device-specific terminal assignment: adhesive label in terminal cover.								

PROFIBUS DP

Supply voltage		Input/output 1 (Port 1)		Input/output 2		Input/output 3		Service interface (Port 2)
1 (+)	2 (-)	26 (B)	27 (A)	24 (+)	25 (-)	22 (+)	23 (-)	CDI-RJ45
Device-specific terminal assignment: adhesive label in terminal cover.								

PROFIBUS PA

Supply voltage		Input/output 1 (Port 1)		Input/output 2		Input/output 3		Service interface (Port 2)
1 (+)	2 (-)	26 (B)	27 (A)	24 (+)	25 (-)	22 (+)	23 (-)	CDI-RJ45
Device-specific terminal assignment: adhesive label in terminal cover.								

Modbus RS485

Supply voltage		Input/output 1 (Port 1)		Input/output 2		Input/output 3		Service interface (Port 2)
1 (+)	2 (-)	26 (B)	27 (A)	24 (+)	25 (-)	22 (+)	23 (-)	CDI-RJ45
Device-specific terminal assignment: adhesive label in terminal cover.								

Modbus TCP

Supply voltage		Input/output 1 1 (Port ¹⁾)		Input/output 2		Input/output 3		Service interface (Port 2) ¹⁾
1 (+)	2 (-)	26 (+)	27 (-)	24 (+)	25 (-)	22 (+)	23 (-)	CDI-RJ45
Device-specific terminal assignment: adhesive label in terminal cover.								

1) For Modbus TCP communication, either port 1 OR port 2 can be used.

PROFINET

Supply voltage		Input/output 1 (Port 1) ¹⁾	Input/output 2		Input/output 3		Service interface (Port 2) ¹⁾
1 (+)	2 (-)	RJ45	24 (+)	25 (-)	22 (+)	23 (-)	CDI-RJ45
Device-specific terminal assignment: adhesive label in terminal cover.							

1) Port can be used for communication or as a service interface (CDI-RJ45).

PROFINET over Ethernet-APL

Supply voltage		Input/output 1 (Port 1)		Input/output 2		Input/output 3		Service interface (Port 2) ¹⁾
1 (+)	2 (-)	26 (+)	27 (-)	24 (+)	25 (-)	22 (+)	23 (-)	CDI-RJ45
Device-specific terminal assignment: adhesive label in terminal cover.								


1) No PROFINET communication available on port 2

Ethernet/IP

Supply voltage		Input/output 1 (Port 1) ¹⁾	Input/output 2		Input/output 3		Service interface (Port 2) ¹⁾
1 (+)	2 (-)	RJ45	24 (+)	25 (-)	22 (+)	23 (-)	CDI-RJ45
Device-specific terminal assignment: adhesive label in terminal cover.							

1) Port can be used for communication or as a service interface (CDI-RJ45).

Remote display and operating module DKX001

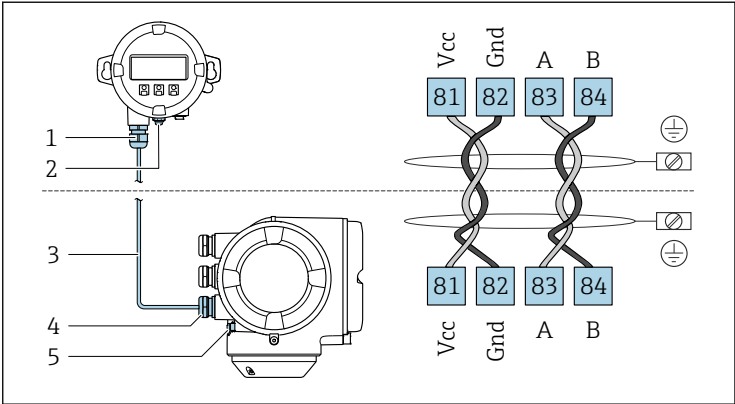

A0027518

- 1 Remote display and operating module DKX001
- 2 Protective earth (PE)
- 3 Connecting cable
- 4 Measuring device
- 5 Protective earth (PE)

Safety-related values

Order code for "Output; input 1"	Output type	Safety-related values	
		Output; input 1 (Port 1)	Service interface (Port 2)
Option BA	Current output 4-20 mA HART	$U_N = 30\text{ V}_{DC}$ $U_M = 250\text{ V}_{AC}$	$U_N = 3.3\text{ V}_{AC}$ $U_M = 250\text{ V}_{AC}$
Option GA	PROFIBUS PA	$U_N = 32\text{ V}_{DC}$ $U_M = 250\text{ V}_{AC}$	$U_N = 3.3\text{ V}_{AC}$ $U_M = 250\text{ V}_{AC}$
Option LA	PROFIBUS DP	$U_N = 5\text{ V}$ $U_M = 250\text{ V}_{AC}$	$U_N = 3.3\text{ V}_{AC}$ $U_M = 250\text{ V}_{AC}$

Order code for "Output; input 1"	Output type	Safety-related values	
		Output; input 1 (Port 1)	Service interface (Port 2)
Option MA	Modbus RS485	$U_N = 5\text{ V}$ $U_M = 250\text{ V}_{AC}$	$U_N = 3.3\text{ V}_{AC}$ $U_M = 250\text{ V}_{AC}$
Option MB	Modbus TCP over Ethernet- APL 10 Mbit/s, SPE 10 Mbit/s, Ethernet 100 Mbit/s	APL port profile SLAX SPE PoDL classes 10, 11, 12 $U_N = 30\text{ V}_{DC}$ $U_M = 250\text{ V}_{AC}$	$U_N = 3.3\text{ V}_{AC}$ $U_M = 250\text{ V}_{AC}$
Option NA	EtherNet/IP	$U_N = 3.3\text{ V}_{AC}$ $U_M = 250\text{ V}_{AC}$	$U_N = 3.3\text{ V}_{AC}$ $U_M = 250\text{ V}_{AC}$
Option RA	PROFINET	$U_N = 3.3\text{ V}_{AC}$ $U_M = 250\text{ V}_{AC}$	$U_N = 3.3\text{ V}_{AC}$ $U_M = 250\text{ V}_{AC}$
Option RB	PROFINET over Ethernet- APL/SPE, 10Mbit/s	APL port profile SLAX SPE PoDL classes 10, 11, 12 $U_N = 30\text{ V}_{DC}$ $U_M = 250\text{ V}_{AC}$	$U_N = 3.3\text{ V}_{AC}$ $U_M = 250\text{ V}_{AC}$
Option SA	FOUNDATION Fieldbus	$U_N = 32\text{ V}_{DC}$ $U_M = 250\text{ V}_{AC}$	$U_N = 3.3\text{ V}_{AC}$ $U_M = 250\text{ V}_{AC}$

Order code for "Output; input 2" "Output; input 3"	Output type	Safety-related values	
		Output; input 2	Output; input 3
Option B	Current output 4-20 mA	$U_N = 30\text{ V}_{DC}$ $U_M = 250\text{ V}_{AC}$	
Option D	Configurable I/O initial setting off	$U_N = 30\text{ V}_{DC}$ $U_M = 250\text{ V}_{AC}$	
Option E	Pulse/frequency/switch output	$U_N = 30\text{ V}_{DC}$ $U_M = 250\text{ V}_{AC}$	
Option F	Double pulse output	$U_N = 30\text{ V}_{DC}$ $U_M = 250\text{ V}_{AC}$	
Option H	Relay output	$U_N = 30\text{ V}_{DC}$ $I_N = 100\text{ mA}_{DC}/500\text{ mA}_{AC}$ $U_M = 250\text{ V}_{AC}$	
Option I	Current input 4-20 mA	$U_N = 30\text{ V}_{DC}$ $U_M = 250\text{ V}_{AC}$	
Option J	Status input	$U_N = 30\text{ V}_{DC}$ $U_M = 250\text{ V}_{AC}$	

Intrinsically safe values

Order code for "Output; input 1"	Output type	Intrinsically safe values	
		Output; input 1 (Port 1)	Service interface (Port 2)
Option CA	Current output 4-20mA HART Ex-i passive	Ex ia $U_i = 30 \text{ V}$ $I_i = 100 \text{ mA}$ $P_i = 1.25 \text{ W}$ $L_i = 0 \text{ } \mu\text{H}$ $C_i = 6 \text{ nF}$	Ex ia $U_i = 10 \text{ V}$ $I_i = \text{n. a.}$ $P_i = \text{n. a.}$ $L_i = 0 \text{ } \mu\text{H}$ $C_i = 200 \text{ nF}$
Option CC	Current output 4-20mA HART Ex-i active	Ex ia $U_0 = 21.8 \text{ V}$ $I_0 = 90 \text{ mA}$ $P_0 = 491 \text{ mW}$ $L_0 = 4.1 \text{ mH(IIC)}/15 \text{ mH(IIB)}$ $C_0 = 160 \text{ nF(IIC)}/1 \text{ } 160 \text{ nF(IIB)}$ $U_i = 30 \text{ V}$ $I_i = 10 \text{ mA}$ $P_i = 0.3 \text{ W}$ $L_i = 5 \text{ } \mu\text{H}$ $C_i = 6 \text{ nF}$	Ex ia $U_i = 10 \text{ V}$ $I_i = \text{n. a.}$ $P_i = \text{n. a.}$ $L_i = 0 \text{ } \mu\text{H}$ $C_i = 200 \text{ nF}$
Option HA	PROFIBUS PA Ex i (STANDARD + FISCO)	Ex ia $U_i = 30 \text{ V}$ $I_i = 570 \text{ mA}$ $P_i = 8.5 \text{ W}$ $L_i = 10 \text{ } \mu\text{H}$ $C_i = 5 \text{ nF}$	Ex ia $U_i = 10 \text{ V}$ $I_i = \text{n. a.}$ $P_i = \text{n. a.}$ $L_i = 0 \text{ } \mu\text{H}$ $C_i = 200 \text{ nF}$

Order code for "Output; input 1"	Output type	Intrinsically safe values	
		Output; input 1 (Port 1)	Service interface (Port 2)
Option MC	Modbus TCP over Ethernet-APL, Ex-i, 10Mbit/s	2-WISE power load, APL port profile SLAA¹⁾ Ex ia $U_i = 17.5 \text{ V}$ $I_i = 380 \text{ mA}$ $P_i = 5.32 \text{ W}$ $L_i = 10 \text{ }\mu\text{H}$ $C_i = 5 \text{ nF}$ Cable specifications according to 2-WISE: $R_c = 15 \text{ to } 150 \text{ }\Omega/\text{km}$ $L_c = 0.4 \text{ to } 1 \text{ mH/km}$ $C_c = 45 \text{ to } 200 \text{ nF/km}$ $C_c = C_c \text{ line/line} + 0.5 C_c \text{ line/screen}$, if both lines are floating, or $C_c = C_c \text{ line/line} + C_c \text{ line/screen}$, if the screen is connected to one line Length of cable (not including cable stubs): $\leq 200 \text{ m (656.2 ft)}$ Length of cable stubs: $\leq 1 \text{ m (3.3 ft)}$	Ex ia $U_i = 10 \text{ V}$ $I_i = \text{n. a.}$ $P_i = \text{n. a.}$ $L_i = 0 \text{ }\mu\text{H}$ $C_i = 200 \text{ nF}$
Option RC	PROFINET over Ethernet-APL, Ex-i, 10Mbit/s	2-WISE power load, APL port profile SLAA¹⁾ Ex ia $U_i = 17.5 \text{ V}$ $I_i = 380 \text{ mA}$ $P_i = 5.32 \text{ W}$ $L_i = 10 \text{ }\mu\text{H}$ $C_i = 5 \text{ nF}$ Cable specifications according to 2-WISE: $R_c = 15 \text{ to } 150 \text{ }\Omega/\text{km}$ $L_c = 0.4 \text{ to } 1 \text{ mH/km}$ $C_c = 45 \text{ to } 200 \text{ nF/km}$ $C_c = C_c \text{ line/line} + 0.5 C_c \text{ line/screen}$, if both lines are floating, or $C_c = C_c \text{ line/line} + C_c \text{ line/screen}$, if the screen is connected to one line Length of cable (not including cable stubs): $\leq 200 \text{ m (656.2 ft)}$ Length of cable stubs: $\leq 1 \text{ m (3.3 ft)}$	Ex ia $U_i = 10 \text{ V}$ $I_i = \text{n. a.}$ $P_i = \text{n. a.}$ $L_i = 0 \text{ }\mu\text{H}$ $C_i = 200 \text{ nF}$
Option TA	FOUNDATION Fieldbus Ex i (STANDARD + FISCO)	Ex ia $U_i = 30 \text{ V}$ $I_i = 570 \text{ mA}$ $P_i = 8.5 \text{ W}$ $L_i = 10 \text{ }\mu\text{H}$ $C_i = 5 \text{ nF}$	Ex ia $U_i = 10 \text{ V}$ $I_i = \text{n. a.}$ $P_i = \text{n. a.}$ $L_i = 0 \text{ }\mu\text{H}$ $C_i = 200 \text{ nF}$

1) For further options see Ethernet-APL Installation Drawing HE_01622.

Order code for "Output; input 2" "Output; input 3"	Output type	Intrinsically safe values	
		Output; input 2	Output; input 3
Option C	Current output 4-20mA Ex-i passive	Ex ia $U_i = 30\text{ V}$ $I_i = 100\text{ mA}$ $P_i = 1.25\text{ W}$ $L_i = 0$ $C_i = 0$	
Option G	Pulse/frequency/switch output Ex-i passive	Ex ia $U_i = 30\text{ V}$ $I_i = 100\text{ mA}$ $P_i = 1.25\text{ W}$ $L_i = 0$ $C_i = 0$	

Remote display and operating module DKX001

A connecting cable with a ratio $L_{\text{cable}}/R_{\text{cable}} = 0.024\text{ mH}/\Omega$ and $C_{\text{cable}} \leq 600\text{ }\mu\text{F}$ must be used when connecting the device with the remote display and operating module DKX001 or ODKX001. The connecting cable supplied by Endress+Hauser meets these requirements.

Basic specifications Position 1, 2 Order code for "Approval" Selected option	Terminal assignment	Basic specifications Position 8 Order code "Display; operation" Option O
Option ¹⁾ BA, BB, BC, BD	81, 82, 83, 84	$U_0 = 3.9\text{ V}$ $I_0 = 1.5\text{ A}$ $P_0 = 600\text{ mW}$ $L_0 = 0$ $C_0 = 670\text{ }\mu\text{F}$

1) If the DKX001 is ordered separately: BE, BF, BG



71713398

www.addresses.endress.com
