Brief Operating Instructions **Liquisys M COM223**

Transmitter for dissolved oxygen





Table of contents Liquisys M COM223

Table of contents

1.1 1.2 1.3	About this document Safety information Symbols used Symbols on the device	. 3
2.1 2.2 2.3 2.4 2.5	Basic safety instructions Requirements for the personnel Intended use Workplace safety Operational safety Product safety	4
3.1 3.2 3.3	Incoming acceptance and product identification Incoming acceptance Scope of delivery Product identification	. 5
4.1 4.2 4.3	Installation . Installation requirements Installing the device Post-mounting check	. 8
5.1 5.2 5.3 5.4 5.5	Electrical connection Connecting the device Electrical connection, version 1 (DX/DS with COS41) Electrical connection, version 2 (WX/WS with COS31, COS61 or COS71) Alarm contact Post-connection check	10 10 13 17
6 6.1 6.2 6.3	Operation options Overview of operation options Display and operating elements Access to operating menu via local display	18 19
7 7.1 7.2 7.3	Commissioning Function check Switching on the device Quick Setup	26 26

Liquisys M COM223 About this document

1 About this document

1.1 Safety information

Structure of information	Meaning		
▲ DANGER Causes (/consequences) If necessary, Consequences of non- compliance (if applicable) Corrective action	This symbol alerts you to a dangerous situation. Failure to avoid the dangerous situation will result in a fatal or serious injury.		
▲ WARNING Causes (/consequences) If necessary, Consequences of non- compliance (if applicable) Corrective action	This symbol alerts you to a dangerous situation. Failure to avoid the dangerous situation can result in a fatal or serious injury.		
Causes (/consequences) If necessary, Consequences of non- compliance (if applicable) Corrective action	This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or more serious injuries.		
NOTICE Cause/situation If necessary, Consequences of non- compliance (if applicable) Action/note	This symbol alerts you to situations which may result in damage to property.		

1.2 Symbols used

Additional information, tips

✓ Permitted✓ Recommended

Not permitted or not recommended

Reference to device documentation

Reference to page
Reference to graphic
Result of an individual step

1.3 Symbols on the device

∧
Reference to device documentation


Do not dispose of products bearing this marking as unsorted municipal waste. Instead, return them to the manufacturer for disposal under the applicable conditions.

Basic safety instructions Liquisys M COM223

2 Basic safety instructions

2.1 Requirements for the personnel

- Installation, commissioning, operation and maintenance of the measuring system may be carried out only by specially trained technical personnel.
- The technical personnel must be authorized by the plant operator to carry out the specified activities.
- The electrical connection may be performed only by an electrical technician.
- The technical personnel must have read and understood these Operating Instructions and must follow the instructions contained therein.
- Faults at the measuring point may only be rectified by authorized and specially trained personnel.

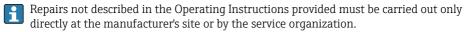

2.2 Intended use

The Liquisys M transmitter is used to determine the oxygen content of liquid media.

The transmitter is particularly suited for use in the following areas:

- Wastewater treatment plants
- Wastewater treatment
- Drinking water
- Water treatment and water monitoring
- Surface water (rivers, lakes, seas)
- Fish farming

Any use other than that intended puts the safety of people and the measuring system at risk. Therefore, any other use is not permitted.

The manufacturer is not liable for harm caused by improper or unintended use.

2.3 Workplace safety

The operator is responsible for ensuring compliance with the following safety regulations:

- Installation guidelines
- Local standards and regulations

Electromagnetic compatibility

- The product has been tested for electromagnetic compatibility in accordance with the applicable international standards for industrial applications.
- The electromagnetic compatibility indicated applies only to a product that has been connected in accordance with these Operating Instructions.

2.4 Operational safety

Before commissioning the entire measuring point:

- 1. Verify that all connections are correct.
- 2. Ensure that electrical cables and hose connections are undamaged.

Procedure for damaged products:

- 1. Do not operate damaged products, and protect them against unintentional operation.
- 2. Label damaged products as defective.

During operation:

If errors cannot be rectified,
 take products out of service and protect them against unintentional operation.

2.5 Product safety

2.5.1 State of the art

The product is designed to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate. The relevant regulations and international standards have been observed.

2.5.2 IT security

We only provide a warranty if the device is installed and used as described in the Operating Instructions. The device is equipped with security mechanisms to protect it against any inadvertent changes to the device settings.

IT security measures in line with operators' security standards and designed to provide additional protection for the device and device data transfer must be implemented by the operators themselves.

3 Incoming acceptance and product identification

3.1 Incoming acceptance

On receipt of the delivery:

- 1. Check the packaging for damage.
 - Report all damage immediately to the manufacturer.
 Do not install damaged components.
- 2. Check the scope of delivery using the delivery note.
- 3. Compare the data on the nameplate with the order specifications on the delivery note.

- 4. Check the technical documentation and all other necessary documents, e.g. certificates, to ensure they are complete.
- \square If one of the conditions is not satisfied, contact the manufacturer.

3.2 Scope of delivery

- 1 transmitter COM223
- 1 set of plug-in screw terminals
- 2 tensioning screws
- 1 set of Operating Instructions
- For versions with HART communication:
 1 set of Operating Instructions: Field communication with HART
- For versions with PROFIBUS interface:

1 set of Operating Instructions: Field communication with PROFIBUS PA/DP

3.3 Product identification

3.3.1 Manufacturer address

Endress+Hauser Conducta GmbH+Co. KG Dieselstraße 24 70839 Gerlingen Germany

Interpreting the order code

The order code and serial number of your product can be found in the following locations:

- On the nameplate
- In the delivery papers

Obtaining information on the product

- 1. Go to www.endress.com.
- 2. Page search (magnifying glass symbol): Enter valid serial number.
- 3. Search (magnifying glass).
 - ► The product structure is displayed in a popup window.
- 4. Click the product overview.
 - A new window opens. Here you will find information pertaining to your device, including the product documentation.

3.3.2 Product page

www.endress.com/COM223

3.3.3 Nameplate

The nameplate provides you with the following information on your device:

- Manufacturer identification
- Order code
- Extended order code
- Serial number
- Ambient and process conditions
- Input and output values
- Safety information and warnings
- ► Compare the information on the nameplate with the order.

3.3.4 Identifying the product

The order code and serial number of your product can be found in the following locations:

- On the nameplate
- In the delivery papers


Obtaining information on the product

- 1. Go to www.endress.com.
- 2. Page search (magnifying glass symbol): Enter valid serial number.
- 3. Search (magnifying glass).
 - ► The product structure is displayed in a popup window.
- 4. Click the product overview.
 - ► A new window opens. Here you fill information pertaining to your device, including the product documentation.

Installation Liquisys M COM223

4 Installation

4.1 Installation requirements

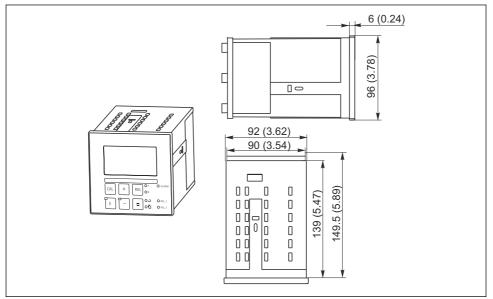


■ 1 Panel-mounted device, dimensions in mm (in)

A0024641

4.2 Installing the device

The panel-mounted device is secured with the tensioning screws supplied $\rightarrow \ \blacksquare \ 2$ The necessary installation depth is approx. 165 mm (6.50").

Liquisys M COM223 Installation

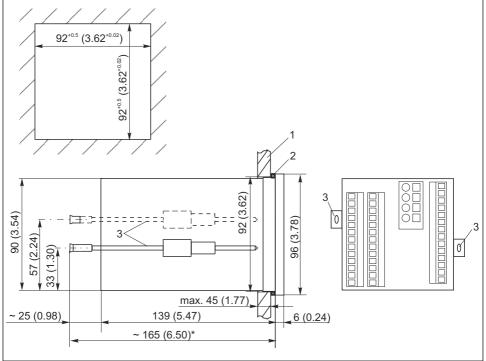

A0024639

■ 2 Dimensions in mm (inch)

- 1 Mounting plate
- 2 Seal
- *3 Tensioning screws*
- * Necessary installation depth

4.3 Post-mounting check

- After installation, check the transmitter for damage.
- Check whether the transmitter is protected against precipitation and direct sunlight

Electrical connection Liquisys M COM223

5 Electrical connection

▲ WARNING

Device is live!

Incorrect connection may result in injury or death!

- ▶ The electrical connection may be performed only by an electrical technician.
- ► The electrical technician must have read and understood these Operating Instructions and must follow the instructions contained therein.
- ▶ **Prior** to commencing connection work, ensure that no voltage is present on any cable.

5.1 Connecting the device

A WARNING

Risk of electric shock!

► At the supply point, the power supply must be isolated from dangerous live cables by double or reinforced insulation in the case of devices with a 24 V power supply.

NOTICE

The device does not have a power switch

- ► A protected circuit breaker must be provided in the vicinity of the device at the place of installation.
- ► The circuit breaker must be a switch or power switch, and you must label it as the circuit breaker for the device

The electrical connection of the transmitter differs depending on the device version:


- If using a DX/DS device version (with COS41), follow the instructions and illustrations in the "Electrical connection, Liquisys M version 1" section.
- If using a WX/WS device version (with COS31, COS61 or COS71), follow the instructions and illustrations in the "Electrical connection, Liquisys M version 2" section.

5.2 Electrical connection, version 1 (DX/DS with COS41)

5.2.1 Wiring diagram

The wiring diagram shows the connections of a device equipped with all the options.

Liquisys M COM223 Electrical connection

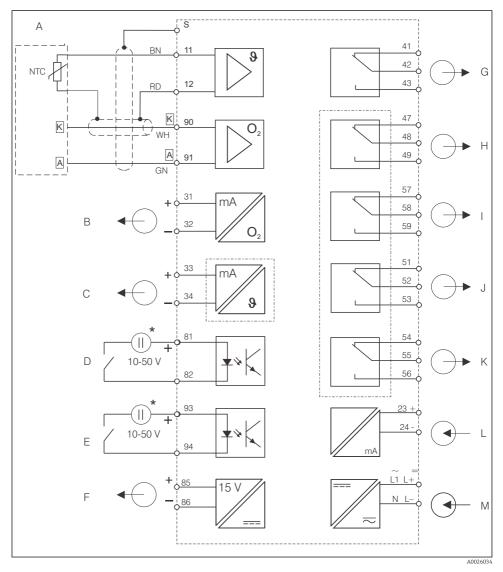

\blacksquare 3 Electrical connection of the transmitter, DX or DS version


- A COS41 oxygen sensor
- B Signal output 1, oxygen
- C Signal output 2, temperature/actuating variable
- D Binary input 1 (hold)
- E Binary input 2 (Chemoclean)

- *G* Alarm (current-free contact position)
- H Relay 1 (current-free contact position)
- I Relay 2 (current-free contact position)
- J Relay 3 (current-free contact position)
- K Relay 4 (current-free contact position)

Electrical connection Liquisys M COM223

- F Auxiliary voltage output
- L Current input 4 to 20 mA Auxiliary voltage of terminal 85/86 can be used М Power supply
- The device is approved for protection class II and is generally operated without a protective ground connection. Circuits "C" and "F" are not galvanically isolated from each other.

Connecting the device

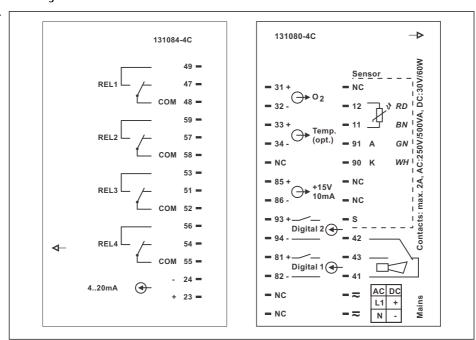

₩ 4 Connection compartment sticker

Connect the cables to the terminals at the rear of the device according to the terminal assignment.

NOTICE


Non-observance could cause incorrect measurement

- Protect the cable ends and terminals from moisture.
- Do not connect terminals marked NC.
- Do not connect terminals that are not marked.
- Label the sensor terminal block with the sticker provided.

Liquisys M COM223 Electrical connection

5.2.2 Measuring cables and sensor connection

A multi-core, special shielded measuring cable is required to connect the ${\it COS41}$ oxygen sensors to the transmitter.

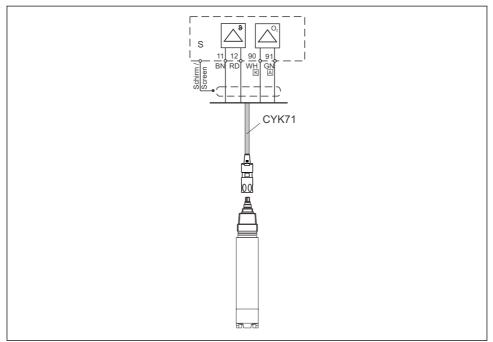

A0026038


■ 5 Connection example: COS41 with CYK71 cable

5.3 Electrical connection, version 2 (WX/WS with COS31, COS61 or COS71)

5.3.1 Wiring diagram

The wiring diagram shows the connections using a COS31, COS61 (as of serial number 79xxxx) or COS71 type of oxygen sensor with full wiring.

Electrical connection Liquisys M COM223

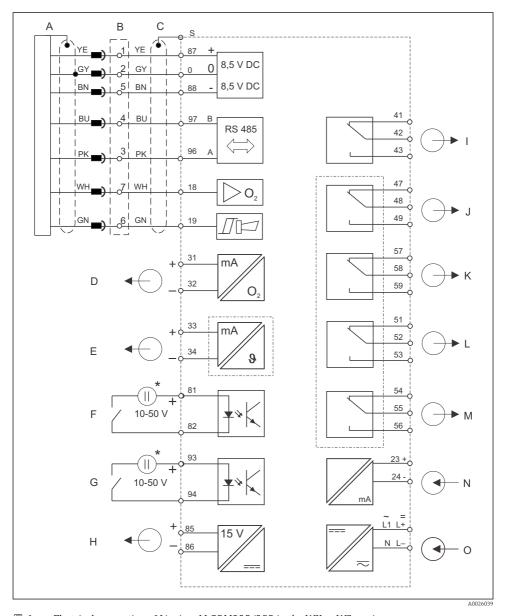

 \blacksquare 6 Electrical connection of Liquisys M COM223/253 in the WX or WS version

- A COS31/61/71 oxygen sensor
- B VS box for extension

- H Auxiliary voltage output
- I Alarm (current-free contact position)

Liquisys M COM223 Electrical connection

COM253: plug-in connection for O2 connector С J Relay 1 (current-free contact position) COM223: connector of sensor cable must be removed or VS box must be used Relay 2 (current-free contact position) D Signal output 1, oxygen K Ε Signal output 2, temperature/actuating variable L Relay 3 (current-free contact position) F Binary input 1 (hold) Μ Relay 4 (current-free contact position) G Binary input 2 (Chemoclean) Ν Current input 4 to 20 mA

- i
- The device is approved for protection class II and is generally operated without a protective ground connection.

0

Power supply


- Circuits "E" and "H" are not galvanically isolated from each other
- The "sensor signal" and "alarm" signals are not assigned in TOP68 versions.

Connect the device, WX/WS version

1. Remove the connector from the sensor cable.

Auxiliary voltage of terminal 85/86 can be used

2.

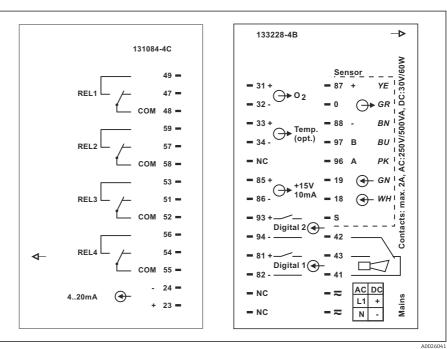

 \blacksquare 7 Connection compartment sticker on Liquisys M panel-mounted device, version WX/WS

Connect the sensor cable as shown in the wiring diagram in the illustration.

If the connector should remain as a disconnectable connection, connect a VS box between the sensor and device.

Electrical connection Liquisys M COM223

NOTICE

Non-observance could cause incorrect measurement.

- ▶ Do not connect terminals marked NC.
- ▶ Do not connect terminals that are not marked.



5.3.2 Measuring cables and sensor connection


A junction box and an extension cable are required to extend the measuring cable:

Sensor type	Cable	Extension
COS31/61/71 with fixed cable connection	OMK with SXP connector	VS box + OMK cable
COS31/61/71 with TOP 68 connection	CYK71 with SXP connector	VS box + OMK cable

	Maximum cable length
COS31/61/71	100 m with OMK / CYK71 cable


Assignment of the SXP connector

		OMK	СҮР		
Pin	Color	Signal	Signal	Color	
1	Yellow	+UB	+UB	Yellow	
2	Gray	0 V	0 V	White	
3	Pink	RS 485 (NTC)	RS 485 (NTC)	Green	
4	Blue	RS 485 (NTC)	RS 485 (NTC)	Brown	
5	Brown	- UB	- UB	Coax, inside	
6	Green	Alarm	NC		
7	White	Sensor signal	NC		

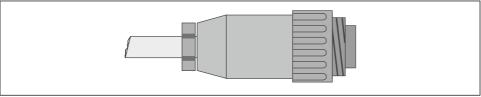

Termination of the sensor connector with special measuring cable OMK № 8

Liquisys M COM223 Electrical connection

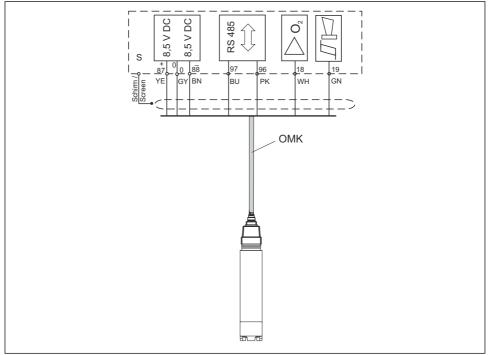


A0026043

Connection example: COS31/71 with OMK cable ₩ 9

The **sensor signal** and **alarm** signals are not assigned in COS61 and the TOP68 versions.

5.4 Alarm contact

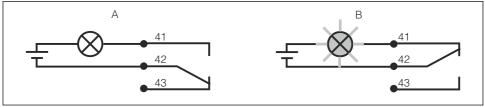

Recommended fail-safe switching for the alarm contact

Normal operating status

В Alarm condition

Operation options Liquisys M COM223

Normal operating status

Device in operation and no error message present (alarm LED off):

- Relay energized
- Contact 42/43 closed

Alarm condition

Error message present (alarm LED red) or device defective or de-energized (alarm LED off):

- Relay de-energized
- Contact 41/42 closed

5.5 Post-connection check

Once the electrical connection is set up, carry out the following checks:

Device condition and specifications	Notes
Are the devices and cables free from damage on the outside?	Visual inspection

Electrical connection	Notes
Are the mounted cables strain relieved?	
Are the connected cables provided with strain relief?	
Is the cable run correct, without loops and cross-overs?	
Are the power cable and signal cables connected correctly and in accordance with the wiring diagram?	
Are all the screw terminals tightened?	
Are all the cable entries fitted, tightened and leak-proof?	

6 Operation options

6.1 Overview of operation options

Options for controlling the transmitter:

- On site via the key field
- Via the HART interface (optional, with corresponding order version) with:
 - HART handheld terminal
 - PC with HART modem and the Fieldcare software package
- Via PROFIBUS PA/DP (optional, with corresponding order version) by PC with a corresponding interface and the Fieldcare software package or via a programmable logic controller (PLC).
- For operation via HART or PROFIBUS PA/DP, observe the relevant sections in the additional Operating Instructions:
 - PROFIBUS PA/DP, field communication for Liquisys M CXM223/253, BA00209C/07/DE
 - HART, field communication for Liquisys M CXM223/253, BA00208C/07/DE

The following section only explains operation via the keys.

Liquisys M COM223 Operation options


6.2 Display and operating elements

6.2.1 Structure and function of the operating menu

LED indicators

00		Indicates the current operating mode, "Auto" (green LED) or "Manual"
05		(yellow LED)
	A0027220	
O 1		Indicates the activated relay in the "Manual" mode (red LED)
O 2		The status of relays 3 and 4 is indicated on the LC display.
	A0027222	
O REL 1		Indicates the working status of relay 1 and 2
O REL 2	A0027221	LED green: measured value within the permitted limit, relay inactive LED red: measured value outside the permitted limit, relay active
O ALARM	A0027218	Alarm display, e.g. in event of continuous limit value overshoot, temperature sensor failure or system error (see error list)

LC display

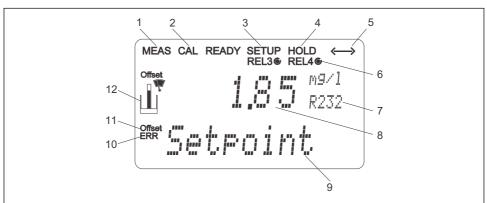

A0027224-EN

■ 11 Transmitter LC display


- 1 Indicator for measuring mode (normal operation)
- 2 Indicator for calibration mode
- 3 Indicator for setup mode (configuration)
- 4 Indicator for "Hold" mode (current outputs remain at last current state)
- 5 Indicator for receipt of a message on devices with communication

Operation options Liquisys M COM223

- 6 Indicator of working status of relays 3/4: () inactive, () active
- 7 Function code indicator
- 8 In measuring mode: measured variable in setup mode: configured variable
- 9 In measuring mode: secondary measured value in setup/calibr. mode: e.g. Setting value
- 10 "Error": error display
- 11 Temperature offset
- 12 Sensor symbol

Operating elements

The display shows the current measured value and the temperature simultaneously. This provides you with the most important process data at a glance. Help text in the configuration menu helps users configure the device parameters.

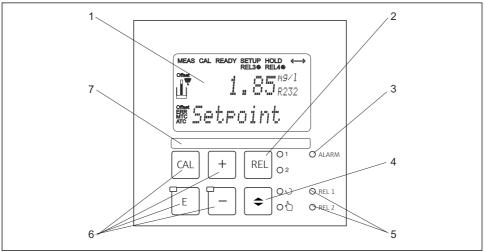

VUU34633-EL

■ 12 *Operating elements*

- 1 LC display for displaying the measured values and configuration data
- 2 Key to switch relays in manual mode and to display the active contact
- 3 LED for alarm function
- 4 Changeover switch for automatic/manual mode
- 5 LEDs for limit contactor relay (switch status)
- 6 Main operating keys for calibration and device configuration
- 7 Field for user-defined information

Liquisys M COM223 Operation options

Functions of keys

	A0027235	CAL key
CAL		When you press the CAL key, the device first prompts you for the calibration access code: Code 22 for calibration Code 0 or any other code for reading the last calibration data
		Use the CAL key to accept the calibration data or to switch from field to field within the calibration menu.
P		ENTER key
E	A0027236	When you press the ENTER key, the device first prompts you for the setup mode access code: Code 22 for setup and configuration Code 0 or any other code for reading all the configuration data.
		The ENTER key has several functions: Calls up the Setup menu from the measuring mode Saves (confirms) data entered in the setup mode Moves on within function groups
REL O1	A0027241	REL key In the manual mode, you can use the REL key to switch between the relay and the manual start of cleaning. In the automatic mode, use the REL key to read out the switch-on points (for limit contactor) or set points (for PID controller) assigned to the relay in question. Press the PLUS key to jump to the settings of the next relay. Use the REL key to get back to the display mode (automatic return after 30 s).
\$ 00	A0027234	AUTO key Use the AUTO key to switch between automatic mode and manual mode.

Operation options Liquisys M COM223





PLUS key and MINUS key

In the **Setup mode,** the PLUS and MINUS keys have the following functions:


- Selection of function groups.
 Press the MINUS key to select the function groups in the order given in the "System configuration" section.
- Configuration of parameters and numerical values
- Operation of the relays in manual mode

In the **measuring mode**, the device displays the following functions in sequence by **repeatedly pressing the PLUS button**:

- Temperature displayed in °F
- Temperature is hidden
- Measured value display in mg/l
- Measured value display in %SAT
- Measured value display in hPa
- Sensor current in nA/mV
- Current input signal in %
- Current input signal in mA
- Return to basic settings

In the measuring mode, the device displays the following sequence of information by **repeatedly pressing the MINUS key**:

- The current faults are displayed consecutively (max. 10).
- Once all the faults have been displayed, the standard measurement display appears. In the function group F, an alarm can be defined separately for each error code.

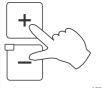


Escape function

If you press the PLUS and MINUS key simultaneously, you return to the main menu, or are taken to the end of calibration if calibrating. If you press the PLUS and MINUS key again, you return to the measuring mode.

A0027237

Liquisys M COM223 Operation options

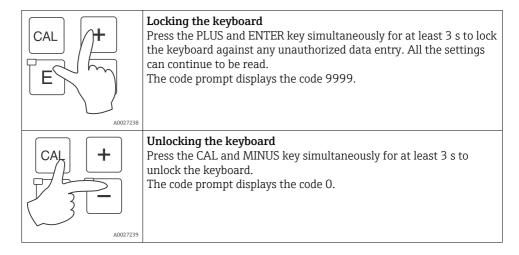

6.3 Access to operating menu via local display

6.3.1 Automatic/manual mode

The transmitter normally operates in automatic mode. Here, the relays are triggered by the transmitter. In the manual mode, you can trigger the relays manually using the REL key or start the cleaning function.

Switching operating modes:

+		1.	The transmitter is in automatic mode. The top LED (green) next to the AUTO key is lit.
	A0027242		
\$	A0027243	2.	Press the AUTOMATIC key.
+	1002/213	3.	To enable the manual mode, enter code 22 via the PLUS and MINUS keys and press ENTER to confirm. The lower LED (manual mode) is lit.
	A0027240		

Operation options Liquisys M COM223

O1 REL O2	4.	Select relay or function. Use the REL key to switch between the relays. The relay selected and the switch status (ON/OFF) is displayed on the second line of the display. In the manual mode, the measured value is displayed continuously (e.g. for measured value monitoring for dosing functions).
+ - A0027240	5.	Switch relays. The relay is switched on with PLUS and switched off with MINUS. The relay remains in this switched state until it is switched again.
♦ 00 A0027234	6.	Press the AUTOMATIC key to return to the measuring mode, i.e. to the automatic mode. All the relays are triggered again by the transmitter.

- The operating mode remains in effect even after a power failure. The relays assume the quiescent state, however.
 - The manual mode has priority over all other automatic functions.
 - Hardware locking is not possible in the manual mode.
 - The manual settings are kept until they are actively reset.
 - Error code E102 is signaled during manual operation.

6.3.2 Operation concept

Operating modes

Calibration mode

- 1. Press the **CAL** key.
- 2. Enter the code 22 with the +/- keys.
- 3. Press the **CAL** key again.

Setup mode

- 1. Press the **E** key.
- 2. Enter the code 22 with the +/- keys.
- 3. Press **E** again.
- If no key is pressed in the setup mode for approx. 15 min, the device automatically returns to the measuring mode. Any active hold (hold during setup) is canceled.

Liquisys M COM223 Operation options

Access codes

All device access codes are fixed and cannot be altered. When the device requests the access code, it distinguishes between different codes.


- CAL key + code 22: access to Calibration and Offset menu
- ENTER key + code 22: access to the menus for the parameters which make configuration and user-specific settings possible
- PLUS + ENTER keys simultaneously (min. 3 s): lock the keyboard
- **CAL + MINUS keys** simultaneously (min. 3 s): unlock the keyboard
- CAL or ENTER key + any code: access to read mode, i.e. all the settings can be read but not modified.

The device continues measuring in the read mode. It does not shift to the "Hold" status. The current output and the controllers remain active.

Menu structure

The configuration and calibration functions are arranged in function groups.

- In the setup mode, select a function group with the PLUS and MINUS keys.
- In the function group itself, switch from function to function with the ENTER key.
- Within the function, select the desired option once again with the PLUS and MINUS keys or edit the settings with these keys. Then confirm with the ENTER key and continue.
- Press the PLUS and MINUS keys simultaneously (Escape function) to exit programming (return to the main menu).
- Press the PLUS and MINUS keys simultaneously again to switch to the measuring mode.
- If a modified setting is not confirmed by pressing ENTER, the old setting is retained.

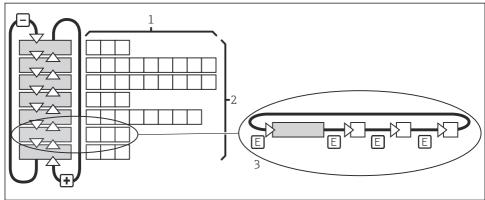

A0059578

■ 13 Menu structure

- 1 Functions (selection of parameters, entry of numbers)
- 2 Function groups, scroll backwards and forwards with the PLUS and MINUS keys
- 3 Switch from function to function with the ENTER key

Commissioning Liquisys M COM223

7 Commissioning

7.1 Function check

WARNING

Incorrect connection, incorrect supply voltage

Safety risks for staff and device malfunctions!

- Check that all connections have been established correctly in accordance with the wiring diagram.
- ▶ Ensure that the supply voltage matches the voltage indicated on the nameplate.

7.2 Switching on the device

Familiarize yourself with the operation of the transmitter before switching it on for the first time. In particular, please read the "Basic safety instructions" and "Operation options" sections. After power-up, the device performs a self-test and then switches to the measuring mode.

Now calibrate the sensor in accordance with the instructions in the "Calibration" section.



During initial commissioning, the sensor must be calibrated so that the measuring system can return precise measurement data.

Then perform the first configuration in accordance with the instructions in the "Quick setup" section. The values set by the user are kept even in the event of a power failure.

The following function groups are available in the transmitter (the groups that are only available in the Plus Package are marked accordingly in the functional description):

Setup mode

- SETUP 1 (A)
- SETUP 2 (B)
- CURRENT INPUT (Z)
- CURRENT OUTPUT (O)
- ALARM (F)
- CHECK (P)
- RELAY (R)SERVICE (S)
- E+H SERVICE (E)
- INTERFACE (I)


Calibration and offset mode

CALIBRATION (C)




For a detailed explanation of the function groups available in the transmitter, see the "Device configuration" section.

Liquisys M COM223 Commissioning

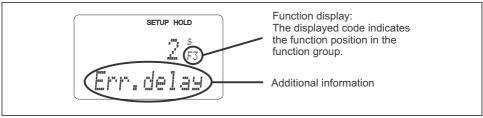

A0025560-EN

■ 14 Information for the user on the display

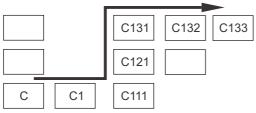

A0027502

■ 15 Function code

7.3 Quick Setup

After power-up, some settings are necessary to configure the most important functions of the transmitter which are required for correct measurement. The following section gives an example of this.

User	entry	Range of adjustment (factory settings in bold)	Display
1.	Press the ENTER key.		
2.	Enter the code 22 to open access to the menus. Press the ENTER key.		
3.	Press the MINUS key until the "Service" function group is displayed.		SETUP HOLD
4.	Press the ENTER key to make the required settings.		s
			SERVICE

Commissioning Liquisys M COM223

User entry		Range of adjustment (factory settings in bold)	Display
5.	In S1, select the language, e.g. "ENG" for English. Confirm the entry by pressing the ENTER key.	ENG = English GER = German FRA = French ITA = Italian NEL = Dutch ESP = Spanish	SETUP HOLD ENG 51 Language Service A0008409-EN
6.	Press the PLUS and MINUS keys simultaneously to exit the "Service" function group.		
7.	Press the MINUS key until the "Setup 1" function group is displayed.		SETUP HOLD
8.	Press the ENTER key to configure the settings for "Setup 1".		SETUP 1
9.	In A1, select the desired mode of operation, e.g. "mg/l" for oxygen concentration. Confirm the entry by pressing the ENTER key.	mg/l ppm ppb	SETUP HOLD MS/1 A1 Unit
10.	Select the desired unit in A2. Confirm the entry by pressing the ENTER key.	mg/l ppm ppb	SETUP HOLD 1
11.	Switch automatic pressure compensation on or off for a WX, WS or DS version in A3. Automatic compensation takes account of both the altitude dependent and the weather dependent proportion of the air pressure. Confirm the entry by pressing the ENTER key.	Off On	SETUP HOLD OFF A3 FIFESSCOME A0024895-EN
12.	If automatic pressure compensation is not available or switched off, enter the altitude of the site in A4. Confirm the entry by pressing the ENTER key.	0 m 0 to 4000 m	SETUP HOLD 17 A4 17 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1

Liquisys M COM223 Commissioning

User entry		Range of adjustment (factory settings in bold)	Display
13.	Enter the damping factor in A5. Measured value damping averages the individual measured values and serves to stabilize the display and the signal output. Enter "1" if no measured value damping is required. Confirm the entry by pressing the ENTER key.	1 1 to 60	SETUP HOLD A5 A0024897-EN A0024897-EN
14.	Enter the oxygen measuring range in A6: If you are using the COS41, COS61 or COS71 sensors, select the measuring range "20 mg/l" / "200 %SAT" / "400 hPa". For COS31, select the measuring range required for the process: all ranges possible. Confirm the entry by pressing the ENTER key. The display returns to the initial display of the "Setup 1" function group.	20 mg/l 60 mg/l 200 %SAT 600 %SAT 400 hPa 1200 hPa	SETUP HOLD M9/1 A6 A0024898-EN
15.	Press the MINUS key until the "Setup 2" function group is displayed. Press the ENTER key to configure the settings for "Setup 2".		SETUP HOLD B A0007830-EN
16.	In B1, specify the salinity of the medium. Confirm the entry by pressing the ENTER key.	0.0 % 0.0 to 4.0 %	SETUP HOLD [] [] [] [] [] [] [] [] [] [] [] [] [] [
17.	In B2, enter the correct temperature of the process (only if the temperature measurement requires correction). Confirm the entry by pressing the ENTER key.	Current measured value -10 to 60 °C	SETUP HOLD G. G. B2 RealTemp

Commissioning Liquisys M COM223

User entry		Range of adjustment (factory settings in bold)	Display
18.	The difference between the measured and entered temperature is displayed. Press the ENTER key. The display returns to the initial display of the "Setup 2" function group.	Current measured value -5.0 to 5.0 °C	SETUP HOLD G G GC B3 TEMP Off. 5. A0024901-EN
19.	Press PLUS and MINUS simultaneously to switch to the measuring mode.		





www.addresses.endress.com