

Safety Instructions

iTHERM TM111, iTHERM TM112, iTHERM TM131, iTHERM TM151, iTHERM TM152

ATEX/IECEX: Ex db IIC T6 Ga/Gb
Ex db IIC T6 Gb
Ex ta/tb IIIC Txxx °C Da/Db
Ex tb IIIC Txxx °C Db



iTHERM TM111, iTHERM TM112, iTHERM TM131, iTHERM TM151, iTHERM TM152

Table of contents

About this document 3

Associated documentation 3

Supplementary documentation 4

Certificates and declarations 4

Manufacturer address 4

Safety instructions 5

Safety instructions: Installation of protection flameproof 5

Safety instructions: Installation of Dust ignition protection 6

Safety instructions: Partition wall 7

Safety instructions: Specific conditions of use 9



Temperature tables 11

Electrical connection data 13

About this document



The document number of these Safety Instructions (XA) must match the information on the nameplate.

Exemplary marking: The nameplate contains at least following information according to latest issue of IEC/EN 60079-0 and ATEX directive 2014/34/EU:	
Company name, trade name:	Endress+Hauser Wetzer GmbH + Co. KG
Address of manufacturer:	Obere Wank 1, D-87484 Nesselwang or www.endress.com
Year of construction:	20XX
Model designation:	iTHERM TM111, TM112, TM131 iTHERM TM151, TM152
Serial number:	xxxxxxx
EU-type examination certificate number:	DEKRA 18ATEX0103 X
ATEX hexagon, Ex marking (type of protection):	 II1/2G Ex db IIC T6...T1 Ga/Gb II1D Ex ta IIIC T ₂₀₀ T85 °C...T ₂₀₀ 450 °C Da/ II2D Ex tb IIIC T85 °C...T450 °C Db
CE Logo with Notified Body only:	
IECEx marking:	Ex db IIC T6...T1 Gb Ex ta IIIC T ₂₀₀ T85 °C...T ₂₀₀ 450 °C Da/ Ex tb IIIC T85 °C...T450 °C Db
IECEx Certificate number:	IECEx DEK 18.0056X

Associated documentation

All documentation is available on the Internet:
www.endress.com/Deviceviewer
 (enter the serial number from the nameplate).



If not yet available, a translation into EU languages can be ordered.

To commission the device, please observe the Operating Instructions pertaining to the device:

www.endress.com/<product code>, e.g. iTHERM TM131

Supplementary documentation

Explosion protection brochure: CP00021Z

The explosion protection brochure is available on the Internet:
www.endress.com/Downloads

Certificates and declarations**IECEx certificate**

Certificate number: IECEx DEK 18.0056X

Affixing the certificate number certifies conformity with the following standards (depending on the device version)

- IEC 60079-0: 2017
- IEC 60079-1: 2014
- IEC 60079-26: 2014
- IEC 60079-31: 2013

ATEX certificate

Certificate number: DEKRA 18ATEX0103 X

EU Declaration of Conformity

Declaration number: EC_00740

The EU Declaration of Conformity is available on the Internet:
www.endress.com/Downloads

UKCA certificate

Certificate number: CML 21UKEX11237X


UKCA Declaration of Conformity

Declaration number: UK_00425

Manufacturer address

Endress+Hauser Wetzler GmbH + Co. KG
Obere Wank 1
87484 Nesselwang, Germany

Safety instructions

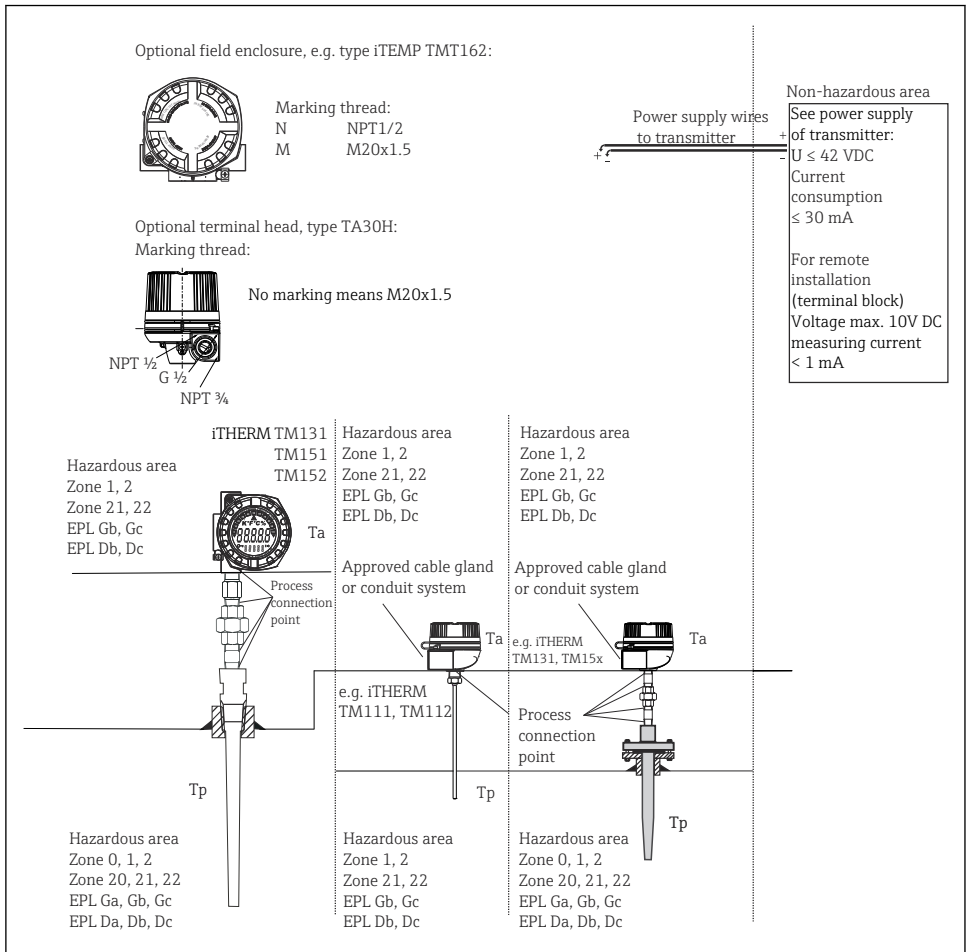

A0046875

Safety instructions: Installation of protection flameproof

- Comply with the installation and safety instructions in the Operating Instructions.
- Install the device according to the manufacturer's instructions and any other valid standards and regulations (e.g. EN/IEC 60079-14).
- The housing of the thermometer must be connected to the potential matching line.

- Only the approved wire entries as specified in paragraph 10 of IEC/EN 60079-14, paragraph 16 of IEC/EN 60079-0, paragraph 13 of IEC/EN 60079-1 must be used.
- For connection through a conduit entry approved for this purpose the associated sealing facility shall be mounted directly to the housing.
- Seal the cable entries with certified cable glands and or blanking elements which have at least type of protection Ex db and Ex tb suitable for Group IIC and IIIC (degree of protection IP6X).
- The maximum specified ambient temperature T_a at terminal head not be exceeded.
- For operating the thermometer housing at an ambient temperature under $-20\text{ }^{\circ}\text{C}$ appropriate cables and cable entries permitted for this application must be used.
- For ambient temperatures higher than $+65\text{ }^{\circ}\text{C}$, use suitable heat-resisting cables or wires, cable entries and sealing facilities for $T_a +5\text{ K}$ above surrounding.
- During operation, the cover must be screwed all the way in and the cover's safety catch must be fastened.
- The thermometer must be installed so, that even in the event of rare incidents, an ignition source due to impact or friction between the enclosure and iron/steel is excluded.

WARNING

Explosive atmosphere

- Do not open the electrical connection of the power supply circuit under voltage in an explosive atmosphere.

Safety instructions: Installation of Dust ignition protection

- Comply with the installation and safety instructions in the Operating Instructions.
- Install the device according to the manufacturer's instructions and any other valid standards and regulations (e.g. EN/IEC 60079-14).
- Seal the cable entries tight with certified cable which have at least type of protection Ex tb suitable for Group IIIC (degree of protection IP6X).
- In case of installation and repair apply a torque for process connection of 50 to 70 Nm for terminal heads suffix code i = A1, A2, D1 (TA30A, TA30D).
- For assure that the temperature assembly has a degree of protection of IP6X the user shall provide a thermowell or equivalent component at the process side
- The housing of the thermometer must be connected to the potential matching line.
- For ambient temperatures higher than $+65\text{ }^{\circ}\text{C}$, use suitable heat-resisting cables or wires, cable entries and sealing facilities for $T_a +5\text{ K}$ above surrounding.

⚠ WARNING**Explosive atmosphere**

- In an explosive atmosphere, do not open the device when voltage is supplied (ensure that the IP6x housing protection is maintained during operation).

**Safety
instructions:
Partition wall**

The provided thermowells to suffix code iTHERM TM131_e, TM151_d and TM152_d are made out of material as follows:

iTHERM TM131_e	iTHERM TM151_d	iTHERM TM152_d	Material
B1, B2, B3, B4	AD, AE, AI	AD, AI	AISI316L/W.1.4404
C1, C2, C3, C4	AF		AISI 316Ti/1.4571
D1, D2	BB	BB	Hastelloy® C-276
E1, E2	BA	BA	Alloy 600
F1, F2	AC, AE, AI	AE, AI	AISI316/W.1.4401
G1			AISI446/W.1.4762
H1			AISI321/ W.1.4541
I1, I2			AISI 316Ti/1.4571 and Tantal
	AG		AISI 347/W.14550
	AH		AISI 310/W.1.4841
	CA	CA	10CrMo9-10/A182 F22/W.1.7380
	CB	CD	13CrMo4-5/A182 F11/W.1.7335
	CC		16Mo3/W.1.5415
	DA	DA	A105/W.1.0402
	DB		C22.8/W.1.0460
	DC		P355NH/W.1.0565
	EA	EA	Duplex S32205/W.1.4470
		AJ	AISI 304/304L/W.1.4301/W.1.4306
		CE	A182 F91/W.1.4903
		IB	316/316L/W.1.4401/W.14404 and Tantal
YY	YY	YY	the thermowell material is listed in the manufacturer's website (CER viewer or Asset Central Viewer)

Instructions for option:

iTHERM TM131-ab...

b	Thermowell:
A	Thermometer to be assembled into existing thermowell

iTHERM TM151-ab...

b	Thermowell:
1	Thermometer to be assembled into existing thermowell

iTHERM TM152-ab...

b	Thermowell:
1	Thermometer to be assembled into existing thermowell

- Install the thermometer in a partition wall which is in compliance with IEC/EN 60079-26 in reference to its ultimate application.
- Use only thermowells out of corrosion resistant materials complying with IEC/EN 60079-0 chapter 8.3 (e.g. AISI316/W.1.4401, AISI316L/W.1.4404, AISI 316Ti/1.4571...) with a wall thickness of at least 1 mm (for iTHERM TM131) or 1.35 mm (for iTHERM TM151 and TM152).
- Use thermowells suitable for the process conditions.
- Providing a degree of protection of at least IP6X when assembled.

**Safety
instructions:
Specific
conditions of use**

- The flameproof joints are not intended to be repaired.
- It shall be verified, taking into account the worst case process and ambient temperatures:
 - that the temperature of the enclosure at the process connection point does not exceed the ambient temperature range of the assembly and
 - the temperature of the optionally used RB**1NS union does not exceed the service temperature range as listed in Annex 1.
 - that the temperature of the optionally used Sensor Type TS21x with QuickNeck construction does not exceed the service temperature range as listed in Annex 1.
 - that the temperature of optional seal at connection points does not exceed the service temperature range as listed in Annex 1.
 - that the temperature of the thermowells type iTHERM TT151 for iTHERM TM151 and iTHERM TT152 for iTHERM TM152 does not exceed the service temperature range as listed in Annex 1 for some available materials.
- When provided with special varnishing (type iTHERM TM111 suffix code i = YY, type iTHERM TM112 suffix code i = YY, type iTHERM TM131 suffix code m = YY, type iTHERM TM151 suffix code m = YY, type iTHERM TM152 suffix code m = YY) refer to the instructions "Safety notes varnish XA01369T" for guidance to minimize the risk from electrostatic discharge
- Temperature assemblies with flying leads (type iTHERM TM111 suffix code h = 0A, type iTHERM TM112 suffix code h = 0A, type iTHERM TM131 suffix code l = 0A, type iTHERM TM151 suffix code l = 0A, type iTHERM TM152 suffix code l = 0A) shall be provided with a round transmitter of max. 2.2 W with a main diameter not exceeding 45 mm and a sensor signal of max 10 V_{DC} and 1 mA.
- The connection fittings, their joints, and their joints with the thermowell and the connection head or field temperature transmitter provide ingress protection of IP6x or, alternatively, IP66/67 (when fitted with at least 5 turns of PTFE tape or Loctite 270 spread on the entire circumference and for at least one thread) in the temperature range of -50 to +130 °C according to IEC 60079-0 and IEC 60529.
- Sensors with Quicksleeve construction shall always be protected by a metallic thermowell.

Type iTHERM TM111

Sensors with a diameter of 3 mm (suffix code b = A) shall be protected by a thermowell.

Type iTHERM TM112

Sensors with a diameter of 3 mm (suffix code b = M) (1/8") (suffix code b = A) shall be protected by a thermowell.

Type iTHERM TM111 and TM112

Sensors with other diameters (suffix code b = Y) shall be protected by a thermowell unless excluded by the product information available on the manufacturer’s website (CER viewer or Asset Central Viewer) and the safety instructions for optional thermocouples and RTDs (document 10000013456).


These safety instructions show, depending on the sensor details, when protection by a thermowell is required. The viewer on the website shows the sensor details for each serial number of the assembly.

Type iTHERM TM131, TM151 and TM152

The sensor shall be protected by the thermowell as provided or by a thermowell as specified in the instructions.

Type iTHERM TM152

The Union GP shall be tightened with a torque of 80 Nm minimum.

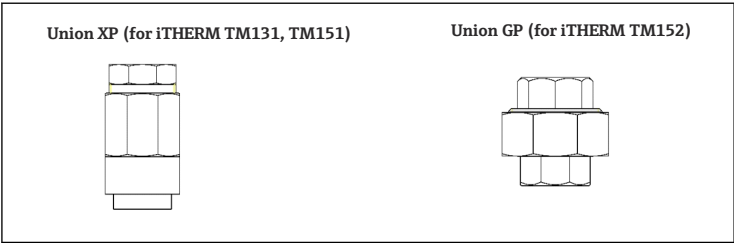

A0059160

Temperature tables

The relation between the type, electrical connection, temperature class, maximum surface temperature, ambient temperature range and process temperature range is shown in the following table.

Temperature assemblies with RTD temperature sensors				
Electrical connection ¹⁾	Temperature class/ Maximum surface temperature	Ambient temperature range	Process temperature range Insert diameter 3 mm ($\frac{1}{8}$ "), 6 mm ($\frac{1}{4}$ ") dual	Process temperature range Insert diameter 6 mm ($\frac{1}{4}$ ")
Type iTHERM TM111				
Terminal block (1A) ²⁾	T6/T85 °C	-50 to +70 °C	-50 to +55 °C	-50 to +68 °C
	T5/T100 °C	-50 to +80 °C	-50 to +70 °C	-50 to +83 °C
	T4/T135 °C	-50 to +120 °C	-50 to +105 °C	-50 to +118 °C
	T3/T200 °C	-50 to +120 °C	-50 to +170 °C	-50 to +183 °C
	T2/T300 °C	-50 to +120 °C	-50 to +265 °C	-50 to +278 °C
	T1/T450 °C	-50 to +120 °C	-50 to +415 °C	-50 to +428 °C
Type iTHERM TM111, TM112 and Type iTHERM TM131, TM151, TM152				
Flying leads (0A) or Transmitter iTEMP TMT31 (2H, 2I) TMT36 (6U) TMT71 (2C) TMT72 (3A) TMT82 (3C, 3D, 3F, 3I) TMT84 (5A) TMT85 (4A) TMT86 (6B, 6C) TMT180 (2A, 2B)	T6/T85 °C	-40 to +65 °C	-50 to +55 °C	-50 to +68 °C
	T5/T100 °C	-40 to +80 °C	-50 to +70 °C	-50 to +83 °C
	T4/T135 °C	-40 to +85 °C	-50 to +105 °C	-50 to +118 °C
	T3/T200 °C	-40 to +85 °C	-50 to +170 °C	-50 to +183 °C
	T2/T300 °C	-40 to +85 °C	-50 to +265 °C	-50 to +278 °C
	T1/T450 °C	-40 to +85 °C	-50 to +415 °C	-50 to +428 °C
Type iTHERM TM112, TM131, TM151, TM152				
Terminal block (1A) ²⁾	T6/T85 °C	-50 to +70 °C	-50 to +55 °C	-50 to +68 °C
	T5/T100 °C	-50 to +80 °C	-50 to +70 °C	-50 to +83 °C
	T4/T135 °C	-50 to +90 °C	-50 to +105 °C	-50 to +118 °C
	T3/T200 °C	-50 to +90 °C	-50 to +170 °C	-50 to +183 °C
	T2/T300 °C	-50 to +90 °C	-50 to +265 °C	-50 to +278 °C
	T1/T450 °C	-50 to +90 °C	-50 to +415 °C	-50 to +428 °C

Temperature assemblies with RTD temperature sensors				
Electrical connection ¹⁾	Temperature class/ Maximum surface temperature	Ambient temperature range	Process temperature range Insert diameter 3 mm (1/8"), 6 mm (1/4") dual	Process temperature range Insert diameter 6 mm (1/4")
Transmitter iTEMP TMT142: 7A iTEMP TMT162: 2D, 2E, 2F, 2G, 4B, 4C, 5B, 5C	T6/T85 °C	-40 to +55 °C	-50 to +55 °C	-50 to +68 °C
	T5/T100 °C	-40 to +70 °C	-50 to +70 °C	-50 to +83 °C
	T4/T135 °C	-40 to +80 °C	-50 to +105 °C	-50 to +118 °C
	T3/T200 °C	-40 to +80 °C	-50 to +170 °C	-50 to +183 °C
	T2/T300 °C	-40 to +80 °C	-50 to +265 °C	-50 to +278 °C
	T1/T450 °C	-40 to +80 °C	-50 to +415 °C	-50 to +428 °C

- 1) iTHERM TM111, TM112 suffix code h, iTHERM TM131, TM151, TM152 suffix code l.
 2) in an enclosure with a blind cover; iTHERM TM111, TM112 suffix code i / iTHERM TM131, TM151, TM152 suffix code m = A1, D1, H1, H3.

Temperature assemblies with thermocouple temperature sensors			
Electrical connection ¹⁾	Temperature class/ Maximum surface temperature	Ambient temperature range	Process temperature range
Type iTHERM TM111			
Terminal block (1A) ²⁾	T6/T85 °C	-50 to +70 °C	-50 to +85 °C
	T5/T100 °C	-50 to +80 °C	-50 to +100 °C
	T4/T135 °C	-50 to +120 °C	-50 to +135 °C
	T3/T200 °C	-50 to +120 °C	-50 to +200 °C
	T2/T300 °C	-50 to +120 °C	-50 to +300 °C
	T1/T450 °C	-50 to +120 °C	-50 to +450 °C
Type iTHERM TM111, TM112 and Type iTHERM TM131, TM151, TM152			
Flying leads (0A) or Transmitter iTEMP TMT71 (2C) TMT72 (3A) TMT82 (3C, 3D, 3F, 3I) TMT84 (5A) TMT85 (4A) TMT86 (6B, 6C)	T6/T85 °C	-40 to +65 °C	-50 to +85 °C
	T5/T100 °C	-40 to +80 °C	-50 to +100 °C
	T4/T135 °C	-40 to +85 °C	-50 to +135 °C
	T3/T200 °C	-40 to +85 °C	-50 to +200 °C
	T2/T300 °C	-40 to +85 °C	-50 to +300 °C
	T1/T450 °C	-40 to +85 °C	-50 to +450 °C
	Type iTHERM TM112, TM131, TM151, TM152		
Terminal block (1A) ²⁾	T6/T85 °C	-50 to +70 °C	-50 to +85 °C
	T5/T100 °C	-50 to +80 °C	-50 to +100 °C

Temperature assemblies with thermocouple temperature sensors			
Electrical connection ¹⁾	Temperature class/ Maximum surface temperature	Ambient temperature range	Process temperature range
	T4/T135 °C	-50 to +90 °C	-50 to +135 °C
	T3/T200 °C	-50 to +90 °C	-50 to +200 °C
	T2/T300 °C	-50 to +90 °C	-50 to +300 °C
	T1/T450 °C	-50 to +90 °C	-50 to +450 °C
Transmitter iTEMP TMT142: 7A iTEMP TMT162: 2D, 2E, 2F, 2G, 4B, 4C, 5B, 5C	T6/T85 °C	-40 to +55 °C	-50 to +85 °C
	T5/T100 °C	-40 to +70 °C	-50 to +100 °C
	T4/T135 °C	-40 to +80 °C	-50 to +135 °C
	T3/T200 °C	-40 to +80 °C	-50 to +200 °C
	T2/T300 °C	-40 to +80 °C	-50 to +300 °C
	T1/T450 °C	-40 to +80 °C	-50 to +450 °C

- 1) iTHERM TM111 suffix code h, TM131 suffix code l.
 2) in an enclosure with a blind cover; iTHERM TM111, TM112 suffix code i / iTHERM TM131, TM151, TM152 suffix code m = A1, D1, H1, H3.

Electrical connection data

Type	Electrical data
iTHERM TM111, TM112 iTHERM TM131 iTHERM TM151, TM152	$U_b \leq 42 V_{DC}$ Current consumption $\leq 30 \text{ mA}$ Remote installation: Voltage max. $10 V_{DC}$ Measuring current $I < 1 \text{ mA}$

Category	Type of protection (ATEX/IECEx)	Type
II1/2G	Ex db IIC T6...T1 Ga/Gb	iTHERM TM131, TM151, TM152
II2G	Ex db IIC T6...T1 Gb	iTHERM TM111, TM112
II1D II2D	Ex ta IIIC T ₂₀₀ T85 °C...T ₂₀₀ 450 °C Da/ Ex tb IIIC T85 °C...T450 °C Db	iTHERM TM131, TM151, TM152
II2D	Ex tb IIIC T85 °C...T450 °C Db	iTHERM TM111, TM112



71710793

www.addresses.endress.com
