

Description of Device Parameters

Proline Promag 10

Electromagnetic flowmeter
IO-Link

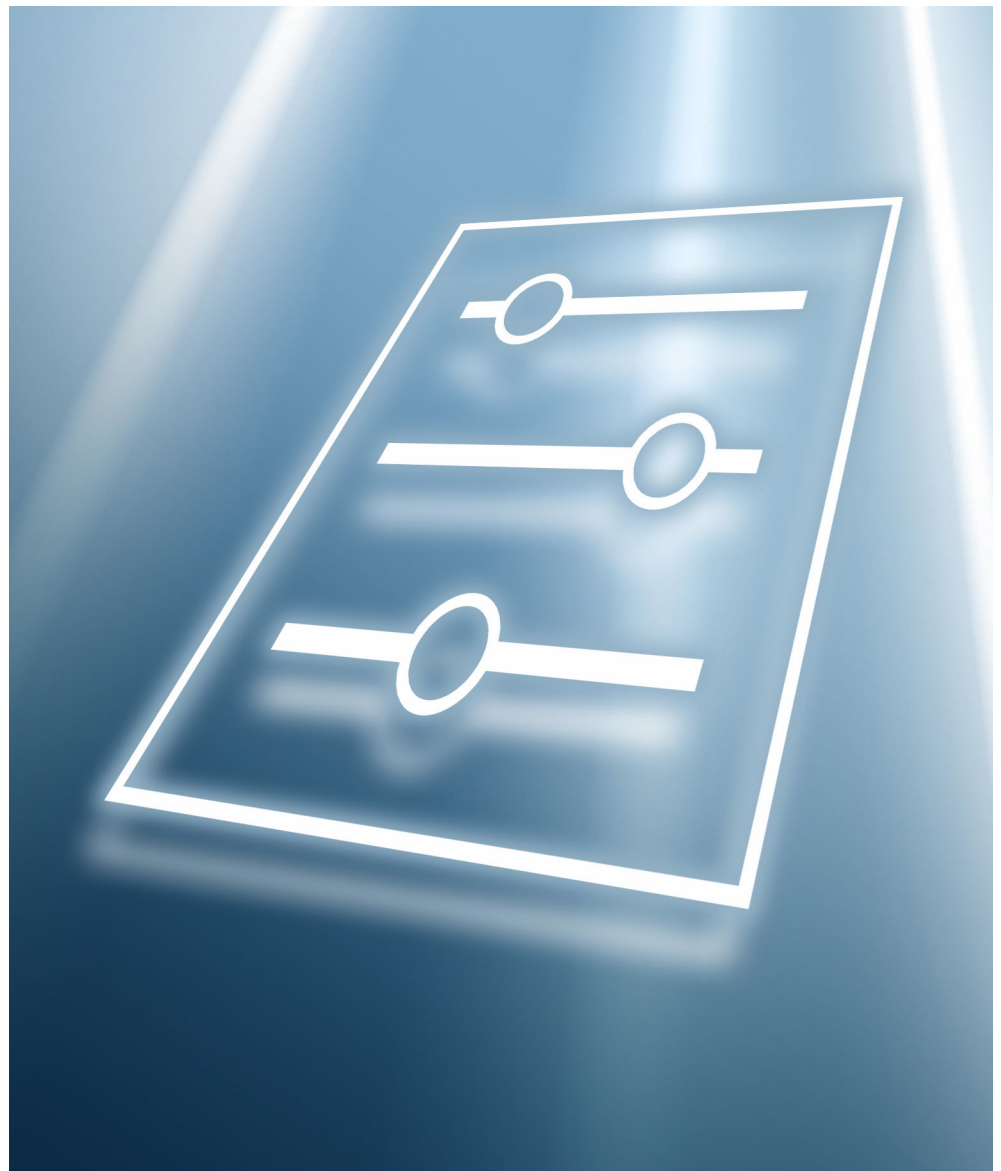
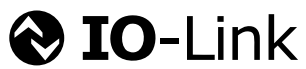


Table of contents

1	About this document	4	5.5	"Information" submenu	80
1.1	Document function	4	5.5.1	"Device" submenu	80
1.2	Target group	4	5.5.2	"Sensor electronic module (ISEM)" submenu	83
1.3	Using this document	4	5.5.3	"Display module" submenu	83
1.3.1	Symbols	4	5.6	"Display" submenu	85
1.3.2	Information on the document structure	4	5.7	"Software configuration" submenu	89
1.3.3	Operation concept	5			
1.3.4	Structure of a parameter description ..	6	6	Explanation of abbreviated units ...	90
1.4	Related documentation	6	6.1	SI units	90
2	"Guidance" menu	7	6.2	US units	90
2.1	"Commissioning" menu	7	6.3	Imperial units	91
2.1.1	"Device identification" wizard	7			
2.1.2	"System units" wizard	8	Index	92	
2.1.3	Totalizer 1 to n	13			
2.1.4	"Measuring conditions" wizard	15			
2.1.5	"Display" wizard	19			
2.1.6	"Date/time" wizard	22			
3	"Diagnostics" menu	24			
3.1	"Active diagnostics" submenu	25			
3.2	"Diagnostic list" submenu	28			
3.3	"Event logbook" submenu	32			
3.4	"Simulation" submenu	33			
3.5	"Heartbeat Technology" submenu	35			
3.6	"Diagnostic settings" submenu	36			
3.6.1	"Properties" submenu	36			
3.6.2	"Diagnostic configuration" submenu ..	36			
4	"Application" menu	45			
4.1	"Measured values" submenu	45			
4.1.1	"Totalizer" submenu	47			
4.2	"System units" submenu	49			
4.3	"Totalizers" submenu	53			
4.3.1	"Totalizer handling" submenu	53			
4.3.2	"Totalizer 1 to n" submenu	53			
4.4	"Sensor" submenu	58			
4.4.1	"Process parameters" submenu	58			
4.4.2	"Low flow cutoff" submenu	61			
4.4.3	"Empty pipe detection" submenu	62			
4.4.4	"Sensor adjustment" submenu	64			
4.4.5	"Calibration" submenu	65			
4.4.6	"Electrode cleaning cycle" submenu ...	66			
4.5	"IO-Link" submenu	69			
5	"System" menu	71			
5.1	"Device management" submenu	72			
5.2	"User management" submenu	74			
5.2.1	"Define Maintenance code" wizard ...	76			
5.3	"Connectivity" submenu	77			
5.3.1	"Bluetooth configuration" submenu ...	77			
5.4	"Date / Time" submenu	78			

1 About this document

1.1 Document function

The document is part of the Operating Instructions and serves as a reference for parameters, providing a detailed explanation of each individual parameter of the operating menus.

It is used to perform tasks that require detailed knowledge of the function of the device:

- Optimal adaptation of the measurement to difficult conditions
- Detailed configuration of the communication interface
- Error diagnostics in difficult cases








1.2 Target group

The document is aimed at experts who work with the device over the entire life cycle and perform specific configurations.

1.3 Using this document





1.3.1 Symbols

Types of information

-  Preferred procedures, processes or actions
-  Permitted procedures, processes or actions
-  Forbidden procedures, processes or actions
-  Additional information
-  Reference to documentation
-  Reference to page
-  Reference to graphic

1.3.2 Information on the document structure

The parameters of all the operating menus and the commissioning wizard are described in this document.

- **Guidance** menu with the **Commissioning** wizard (→  7), which guides the user automatically through all the device parameters that are required for commissioning
- **Application** menu (→  45)
- **Diagnostics** menu (→  24)
- **System** menu (→  71)

1.3.3 Operation concept

Operation method	Operation via: <ul style="list-style-type: none"> SmartBlue app ¹⁾ Commubox FXA291
Reliable operation	<ul style="list-style-type: none"> Operation in local language Uniform operating philosophy in device and in the SmartBlue App Write protection When electronics modules are replaced: configurations are transferred using the T-DAT Backup device memory. The device memory contains process data, device data and the event logbook. No reconfiguration is necessary.
Diagnostic behavior	Efficient diagnostic behavior increases measurement availability: <ul style="list-style-type: none"> Open remedial actions via local display and SmartBlue app Diverse simulation options Logbook of events that have occurred

1) Optional via order code "Display; operation", options H, J or K

IO-Link



The device-specific parameters are configured via IO-Link. There are specific configuration or operating programs from different manufacturers available to the user for this purpose. The device description file (IODD) is provided for the device.

IO-Link operating concept

Operator-oriented menu structure for user-specific tasks. Efficient diagnostic behavior increases measurement availability:

- Diagnostic messages
- Remedial action
- Simulation options

IODD download

Two options to download the IODD :

- www.endress.com/download
- <https://ioddfinder.io-link.com/>

www.endress.com/download

- Select "Device Drivers".
- Select the "IO Device Description (IODD)" entry under "Type".
- Select "Product root".
- Click "Search".
 - A list of search results is displayed.

Select the appropriate version and download.

<https://ioddfinder.io-link.com/>

- Enter "Endress" as the manufacturer and select.
- Select product name.
 - A list of search results is displayed.

Select the appropriate version and download.



For detailed IO-Link information, see "IO-Link" Special Documentation for the device
→ 6

1.3.4 Structure of a parameter description

The individual parts of a parameter description are described in the following section:

Complete parameter name	Write-protected parameter =
Navigation	Navigation path to the parameter via the operating tool The names of the menus, submenus and parameters are abbreviated to the form in which they appear on the display and in the operating tool.
Prerequisite	The parameter is only available under these specific conditions
Description	Description of the parameter function
Selection	List of the individual options for the parameter <ul style="list-style-type: none"> ■ Option 1 ■ Option 2
User entry	Input range for the parameter
User interface	Display value/data for the parameter
Additional information	Additional explanations (e.g. in examples): <ul style="list-style-type: none"> ■ On individual options ■ On display values/data ■ On the input range ■ On the parameter function

1.4 Related documentation

Technical information	Overview of the device with the most important technical data.
Operating instructions	All the information that is required in the various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal as well as the technical data and dimensions.
Sensor Brief Operating Instructions	Incoming acceptance, transport, storage and mounting of the device.
Transmitter Brief Operating Instructions	Electrical connection and commissioning of the device.
Description of Parameters	Detailed explanation of the menus and parameters.
Safety Instructions	Documents for the use of the device in hazardous areas.
Special Documentation	Documents with more detailed information on specific topics.
Installation Instructions	Installation of spare parts and accessories.


The related documentation is available online:

Device Viewer	On the www.endress.com/deviceviewer website, enter the serial number of the device: nameplate
Endress+Hauser Operations App	<ul style="list-style-type: none"> ▶ Scan the Data Matrix code: nameplate ▶ Enter the serial number of the device: nameplate

2 "Guidance" menu

Main functions for use – from fast and safe commissioning to guided support during operation.


Navigation  Guidance

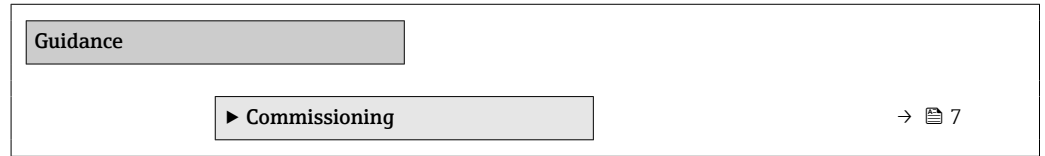

2.1 "Commissioning" menu


Complete this wizard to commission the device. NOTE: If you exit the wizard beforehand, the changes you made will be saved. For this reason, the device may be in an undefined state! In this case, reset the device to the default settings.

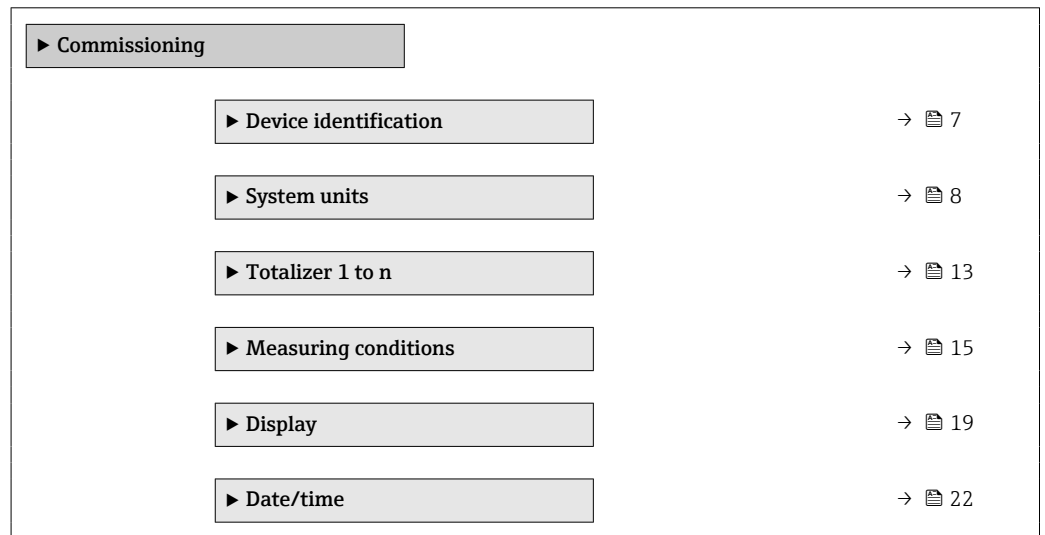


Navigation  Guidance → Commissioning



2.1.1 "Device identification" wizard

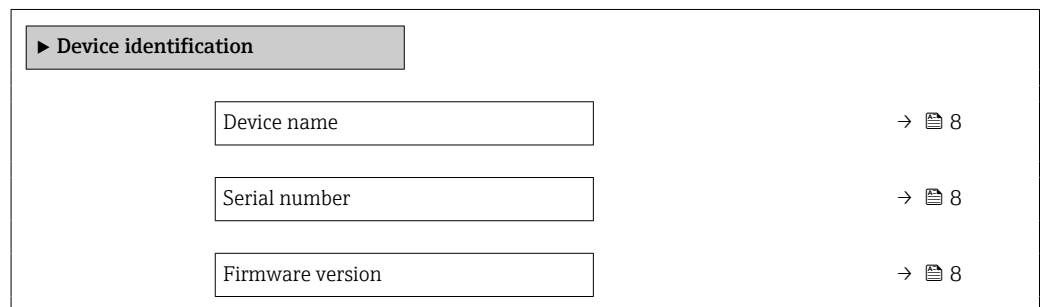Navigation  Guidance → Commissioning → Device ident.








Device name	
Navigation	 Guidance → Commissioning → Device ident. → Device name
Description	Displays the name of the transmitter. The transmitter name is also provided on the nameplate of the transmitter.
User interface	Character string comprising numbers, letters and special characters
Serial number	
Navigation	 Guidance → Commissioning → Device ident. → Serial number
Description	Displays the serial number of the measuring device. The serial number is also provided on the nameplate of the sensor and of the transmitter. The serial number can also be used to retrieve further device-related information and documentation via the Operations app or the Device Viewer on the Endress+Hauser website.
User interface	Character string comprising numbers, letters and special characters
Firmware version	
Navigation	 Guidance → Commissioning → Device ident. → Firmware version
Description	Displays the device firmware version installed.
User interface	Character string comprising numbers, letters and special characters

2.1.2 "System units" wizard

Navigation   Guidance → Commissioning → System units

▶ System units


Volume flow unit	→  9
Mass flow unit	→  11
Density unit	→  11

Temperature unit	→  12
Conductivity unit	→  12

Volume flow unit



Navigation

 Guidance → Commissioning → System units → Volume flow unit

Description

Select the volume flow unit.

Selection*SI units*

- cm³/s
- cm³/min
- cm³/h
- cm³/d
- dm³/s
- dm³/min
- dm³/h
- dm³/d
- m³/s
- m³/min
- m³/h
- m³/d
- ml/s
- ml/min
- ml/h
- ml/d
- l/s
- l/min
- l/h
- l/d
- hl/s
- hl/min
- hl/h
- hl/d
- Ml/s
- Ml/min
- Ml/h
- Ml/d

US units


- af/s
- af/min
- af/h
- af/d
- ft³/s
- ft³/min
- ft³/h
- ft³/d
- MMft³/s
- MMft³/min
- MMft³/h
- Mft³/d
- fl oz/s (us)
- fl oz/min (us)
- fl oz/h (us)
- fl oz/d (us)
- gal/s (us)
- gal/min (us)
- gal/h (us)
- gal/d (us)
- Mgal/s (us)
- Mgal/min (us)
- Mgal/h (us)
- Mgal/d (us)
- bbl/s (us;liq.)
- bbl/min (us;liq.)
- bbl/h (us;liq.)
- bbl/d (us;liq.)
- bbl/s (us;beer)
- bbl/min (us;beer)
- bbl/h (us;beer)
- bbl/d (us;beer)
- bbl/s (us;oil)
- bbl/min (us;oil)
- bbl/h (us;oil)
- bbl/d (us;oil)
- bbl/s (us;tank)
- bbl/min (us;tank)
- bbl/h (us;tank)
- bbl/d (us;tank)
- kgal/s (us)
- kgal/min (us)
- kgal/h (us)
- kgal/d (us)

Imperial units

- gal/s (imp)
- gal/min (imp)
- gal/h (imp)
- gal/d (imp)
- Mgal/s (imp)
- Mgal/min (imp)
- Mgal/h (imp)
- Mgal/d (imp)
- bbl/s (imp;beer)
- bbl/min (imp;beer)
- bbl/h (imp;beer)
- bbl/d (imp;beer)
- bbl/s (imp;oil)
- bbl/min (imp;oil)
- bbl/h (imp;oil)
- bbl/d (imp;oil)

Additional information*Selection*

 For an explanation of the abbreviated units: →  90

 The IO-Link interface only offers the **m³/h** option.

Mass flow unit
**Navigation**

Guidance → Commissioning → System units → Mass flow unit

Description

Select the mass flow unit.

Selection*SI units*

- g/s
- g/min
- g/h
- g/d
- kg/s
- kg/min
- kg/h
- kg/d
- t/s
- t/min
- t/h
- t/d

US units

- oz/s
- oz/min
- oz/h
- oz/d
- lb/s
- lb/min
- lb/h
- lb/d
- STon/s
- STon/min
- STon/h
- STon/d

Additional informationThe IO-Link interface only offers the **kg/s** option.

Density unit
**Navigation**

Guidance → Commissioning → System units → Density unit

Description

Select the density unit.

Selection*SI units*

- g/cm³
- g/m³
- kg/l
- kg/dm³
- kg/m³
- SD4°C
- SD15°C
- SD20°C
- SG4°C
- SG15°C
- SG20°C

US units

- lb/ft³
- lb/gal (us)
- lb/bbl (us;liq.)
- lb/bbl (us;beer)
- lb/bbl (us;oil)
- lb/bbl (us;tank)




Imperial units






- lb/gal (imp)
- lb/bbl (imp;beer)
- lb/bbl (imp;oil)

Additional information*Selection*


For an explanation of the abbreviated units: → 90

The IO-Link interface only offers the **kg/m³** option.





Temperature unit 							
Navigation	 Guidance → Commissioning → System units → Temperature unit						
Prerequisite	Temperature measurement is only optionally available for Promag H 10 (5HBB): Under order code for "Functionality", option D (enhanced transmitter) and order code for "Sensor option", option CI (fluid temperature measurement)						
Description	Select the temperature unit.						
Selection	<table border="0"> <thead> <tr> <th><i>SI units</i></th> <th><i>US units</i></th> </tr> </thead> <tbody> <tr> <td>■ °C</td> <td>■ °F</td> </tr> <tr> <td>■ K</td> <td>■ °R</td> </tr> </tbody> </table>	<i>SI units</i>	<i>US units</i>	■ °C	■ °F	■ K	■ °R
<i>SI units</i>	<i>US units</i>						
■ °C	■ °F						
■ K	■ °R						
Additional information	 The IO-Link interface only offers the °C option.						

Conductivity unit 												
Navigation	 Guidance → Commissioning → System units → Conductiv. unit											
Prerequisite	Conductivity measurement is switched on in the Conductivity measurement parameter (→  59).  Conductivity measurement is only optionally available: Under order code for "Functionality", option D (enhanced transmitter) and order code for "Sensor option", option CX (conductivity measurement)											
Description	Select the conductivity unit.											
Selection	<table border="0"> <thead> <tr> <th><i>SI units</i></th> </tr> </thead> <tbody> <tr><td>■ nS/cm</td></tr> <tr><td>■ µS/cm</td></tr> <tr><td>■ µS/m</td></tr> <tr><td>■ µS/mm</td></tr> <tr><td>■ mS/m</td></tr> <tr><td>■ mS/cm</td></tr> <tr><td>■ S/cm</td></tr> <tr><td>■ S/m</td></tr> <tr><td>■ kS/m</td></tr> <tr><td>■ MS/m</td></tr> </tbody> </table>	<i>SI units</i>	■ nS/cm	■ µS/cm	■ µS/m	■ µS/mm	■ mS/m	■ mS/cm	■ S/cm	■ S/m	■ kS/m	■ MS/m
<i>SI units</i>												
■ nS/cm												
■ µS/cm												
■ µS/m												
■ µS/mm												
■ mS/m												
■ mS/cm												
■ S/cm												
■ S/m												
■ kS/m												
■ MS/m												
Additional information	 The IO-Link interface only offers the unit S/m option.											

2.1.3 Totalizer 1 to n

Navigation  Guidance → Commissioning → Totalizer 1 to n

▶ **Totalizer 1 to n**


Assign process variable 1 to n	→  13
Process variable unit 1 to n	→  13
Totalizer 1 to n operation mode	→  14
Totalizer 1 to n failure behavior	→  15

Assign process variable


Navigation  Guidance → Commissioning → Totalizer 1 to n → AssignVariab. 1 to n

Description Select a process variable to activate the totalizer.
 If the process variable is changed or the totalizer deactivated, the totalizer is reset to "0".

- Selection**
- Off
 - Volume flow
 - Mass flow

Additional information  Totalizer 1 is permanently set to **Volume flow** option and cannot be changed. Totalizers 2 and 3 can be changed.

Process variable unit

Navigation  Guidance → Commissioning → Totalizer 1 to n → VariableUnit 1 to n

Prerequisite A process variable has been selected in the **Assign process variable** parameter in the **Totalizer 1 to n** submenu.

Description Select the unit for the process variable of the totalizer.

- Selection**
- | | |
|---|---|
| <p><i>SI units</i></p> <ul style="list-style-type: none"> ■ g[*] ■ kg[*] ■ t[*] | <p><i>US units</i></p> <ul style="list-style-type: none"> ■ oz[*] ■ lb[*] ■ STon[*] |
|---|---|

* Visibility depends on order options or device settings

or

SI units

- cm³*
- dm³*
- m³*
- ml*
- l*
- hl*
- Ml Mega*

US units

- af*
- ft³*
- Mft³*
- fl oz (us)*
- gal (us)*
- kgal (us)*
- Mgal (us)*
- bbl (us;liq.)*
- bbl (us;beer)*
- bbl (us;oil)*
- bbl (us;tank)*

Imperial units

- gal (imp)*
- Mgal (imp)*
- bbl (imp;beer)*
- bbl (imp;oil)*

* Visibility depends on order options or device settings

or


Other units

None*


* Visibility depends on order options or device settings

Additional information

Description

The unit is selected separately for each totalizer. The unit is independent of the option selected in the **System units** submenu (→  8).

Options


The selection is dependent on the process variable selected in the **Assign process variable** parameter (→  13).

- The IO-Link interface only offers the **kg** option, **m³** option and **Nm³** option.
- Totalizer 1 is permanently set to **Volume flow** option and cannot be changed. Totalizers 2 and 3 can be changed.

Totalizer operation mode



Navigation

 Guidance → Commissioning → Totalizer 1 to n → Operat. mode 1 to n

Prerequisite

A process variable has been selected in the **Assign process variable** parameter in the **Totalizer 1 to n** submenu.

Description

Select the totalizer operation mode, e.g. only totalize forward flow or only totalize reverse flow.

Selection

- Net
- Forward
- Reverse

Additional information	<i>Selection</i> <ul style="list-style-type: none"> ■ Net option The flow values in the forward and reverse flow directions are totalized and netted against each other. Net flow is recorded in the flow direction. ■ Forward option Only the flow in the forward flow direction is totalized. ■ Reverse option Only the flow in the reverse flow direction is totalized (= reverse flow quantity).
-------------------------------	--




Totalizer failure behavior


Navigation	Guidance → Commissioning → Totalizer 1 to n → FailureBehav. 1 to n
Prerequisite	A process variable has been selected in the Assign process variable parameter in the Totalizer 1 to n submenu.
Description	Specify how the totalizer should behave in the event of a device alarm.
Selection	<ul style="list-style-type: none"> ■ Hold ■ Continue ■ Last valid value + continue
Additional information	<i>Selection</i> <ul style="list-style-type: none"> ■ Hold option The totalizer is stopped in the event of a device alarm. ■ Continue option The totalizer continues to totalize based on the current value measured; the device alarm is ignored. ■ Last valid value + continue option The totalizer continues to totalize based on the last valid value measured before the device alarm occurred.

2.1.4 "Measuring conditions" wizard


Navigation Guidance → Commissioning → Meas. conditions

► Measuring conditions	
Flow damping	→ 16
Low flow cutoff	→ 16
On value low flow cutoff	→ 17
Off value low flow cutoff	→ 17
Pressure shock suppression	→ 18

Empty pipe detection	→  19
Empty pipe adjust value	→  19
Full pipe adjust value	→  19

Flow damping

Navigation

 Guidance → Commissioning → Meas. conditions → Flow damping

Description

Enter value for damping of the flow measured value in order to reduce the variability of the flow measured value when exposed to interference.

Additional information:

The depth of the flow filter is determined by this setting. As the filter depth increases, so does the reaction time of the device.

- Value = 0: No damping. Damping of 0 is not recommended, as the measuring signal is then so noisy that it is almost impossible to perform a measurement.
- Value > 0: Damping increases

Optimal damping depends on the measuring period.

Damping impacts the following measuring device variables:


- Outputs
- Low flow cutoff
- Totalizers

User entry

0 to 15

Low flow cutoff

Navigation

 Guidance → Commissioning → Meas. conditions → Low flow cutoff

Description


Select a process variable for low flow cutoff to activate low flow cutoff.

Selection

- Off
- Volume flow
- Mass flow

Additional information

Description

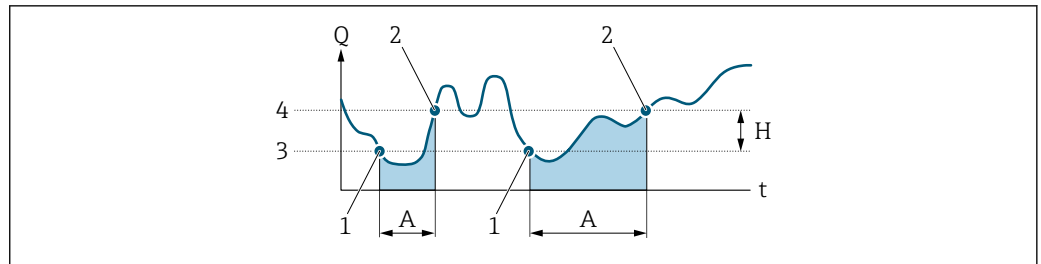

A0012887

- Q* Flow
t Time
H Hysteresis
A Low flow cut off active
 1 Low flow cut off is activated
 2 Low flow cut off is deactivated
 3 On-value entered
 4 Off-value entered

On value low flow cutoff



Navigation

Guidance → Commissioning → Meas. conditions → On value

Description

Enter on value to switch on low flow cutoff.

Value = 0: No low flow cutoff

Value > 0: Low flow cutoff is activated

User entry

Positive floating-point number

Off value low flow cutoff



Navigation

Guidance → Commissioning → Meas. conditions → Off value

Description

Enter off value to switch off low flow cutoff. The off value is entered as a positive hysteresis with respect to the on value.

User entry

0 to 100.0 %

Pressure shock suppression



Navigation

Guidance → Commissioning → Meas. conditions → Pres. shock sup.

Description

Enter a time span for signal suppression (= pressure shock suppression active), for example to prevent the device from registering flow movements in the pipe when a valve is closed.

Pressure shock suppression is activated when the flow rate drops below the on value for low flow cutoff.

Values reported when pressure shock suppression is active:

Flow: 0

Totalizer: Last valid value

Pressure shock suppression is deactivated when the time span specified has elapsed and the flow rate exceeds the off value for low flow cutoff.


User entry

0 to 100 s

Additional information

Example

When a valve is closed, momentarily strong fluid movements may occur in the pipeline, which are registered by the device. These totalized flow values lead to a false totalizer status, particularly during batching processes.

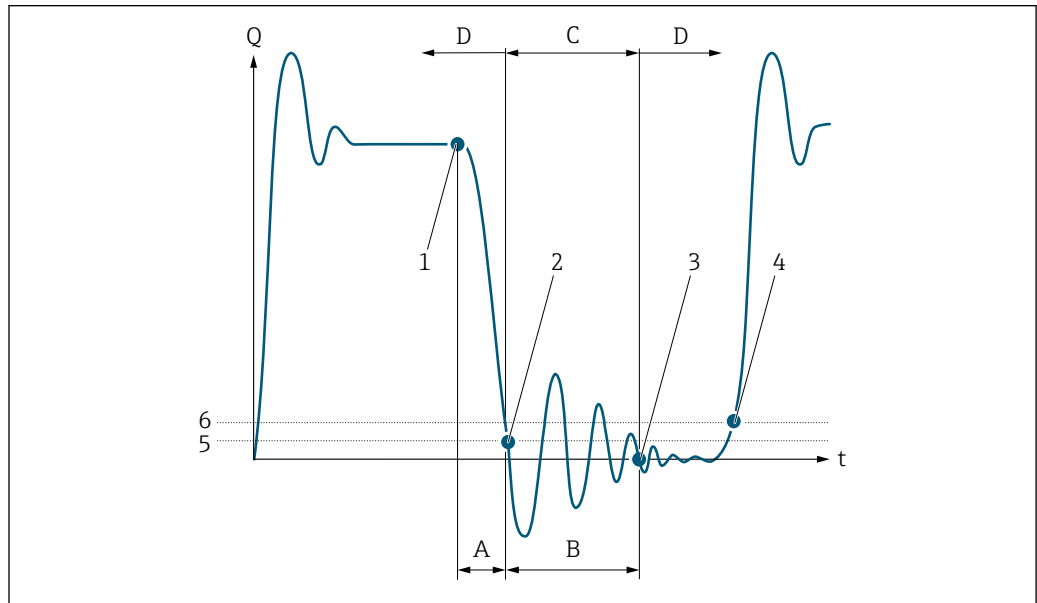

A0012888

- Q Flow
- t Time
- A After run
- B Pressure shock
- C Pressure shock suppression active according to the time entered
- D Pressure shock suppression inactive
- 1 Valve closes
- 2 Flow falls below the on-value of the low flow cut off: pressure shock suppression is activated
- 3 The time entered has elapsed: pressure shock suppression is deactivated
- 4 The current flow value is processed and displayed again.
- 5 On value for low flow cut off
- 6 Off value for low flow cut off

Empty pipe detection



- Navigation** Guidance → Commissioning → Meas. conditions → Empty pipe det.
- Description** Switch empty pipe detection on or off. Switch on empty pipe detection to detect a partially filled or empty measuring tube.
- Selection**
 - Off
 - On

Empty pipe adjust value



- Navigation** Guidance → Commissioning → Meas. conditions → Empty pipe value
- Description** Displays adjustment value when the measuring tube is empty.
NOTE
Users logged on in the Service role have write access!
- User interface** Positive floating-point number

Full pipe adjust value





- Navigation** Guidance → Commissioning → Meas. conditions → Full pipe value
- Description** Displays adjustment value when the measuring tube is full.
NOTE
Users logged on in the Service role have write access!
- User interface** Positive floating-point number

2.1.5 "Display" wizard

Navigation Guidance → Commissioning → Display


▶ **Display**

Value 1 display	→ 20
Value 2 display	→ 20
Value 3 display	→ 21

Value 4 display	→  21
Display damping	→  22

Value 1 display

Navigation

 Guidance → Commissioning → Display → Value 1 display

Description

Select the measured value to display in the first position on the local display.
The unit is set in the "System units" menu.

Selection

- Volume flow
- Mass flow
- Conductivity *
- Corrected conductivity *
- Temperature *
- Totalizer 1
- Totalizer 2
- Totalizer 3
- Noise *
- Coil current shot time *

Value 2 display

Navigation

 Guidance → Commissioning → Display → Value 2 display

Description

Select the measured value to display in the second position on the local display.
The unit is set in the "System units" menu.

Selection

- None
- Volume flow
- Mass flow
- Conductivity *
- Corrected conductivity *
- Temperature *
- Totalizer 1
- Totalizer 2
- Totalizer 3
- Noise *
- Coil current shot time *

* Visibility depends on order options or device settings

Value 3 display
**Navigation**

Guidance → Commissioning → Display → Value 3 display

Description

Select the measured value to display in the third position on the local display.
The unit is set in the "System units" menu.

Selection

- None
- Volume flow
- Mass flow
- Conductivity *
- Corrected conductivity *
- Temperature *
- Totalizer 1
- Totalizer 2
- Totalizer 3
- Noise *
- Coil current shot time *

Value 4 display
**Navigation**

Guidance → Commissioning → Display → Value 4 display

Description

Select the measured value to display in the fourth position on the local display.
The unit is set in the "System units" menu.

Selection

- None
- Volume flow
- Mass flow
- Conductivity *
- Corrected conductivity *
- Temperature *
- Totalizer 1
- Totalizer 2
- Totalizer 3
- Noise *
- Coil current shot time *

* Visibility depends on order options or device settings

Display damping



Navigation

Guidance → Commissioning → Display → Display damping

Description

Enter a time constant to set the reaction time of the display to fluctuations in the measured value (PT1 element).

The smaller the time constant, the faster the display reacts to fluctuations in the measured value.

If the time constant is set to 0, damping is deactivated.

User entry

0.0 to 999.9 s

2.1.6 "Date/time" wizard

Navigation

Guidance → Commissioning → Date/time

▶ **Date/time**

Time format	→ 22
Time zone	→ 22
Set date/time	→ 23

Time format



Navigation

Guidance → Commissioning → Date/time → Time format

Description

Select the time format.

Selection

- 24 h
- 12 h AM/PM

Time zone



Navigation

Guidance → Commissioning → Date/time → Time zone

Description

Select the time zone. Every time the time zone is changed, a logbook entry is created.

Selection*Other units*

- UTC-12:00
- UTC-11:00
- UTC-10:00
- UTC-09:30
- UTC-09:00
- UTC-08:00
- UTC-07:00
- UTC-06:00
- UTC-05:00
- UTC-04:00
- UTC-03:30
- UTC-03:00
- UTC-02:00
- UTC-01:00
- UTC 00:00
- UTC+01:00
- UTC+02:00
- UTC+03:00
- UTC+03:30
- UTC+04:00
- UTC+04:30
- UTC+05:00
- UTC+05:30
- UTC+05:45
- UTC+06:00
- UTC+06:30
- UTC+07:00
- UTC+08:00
- UTC+08:45
- UTC+09:00
- UTC+09:30
- UTC+10:00
- UTC+10:30
- UTC+11:00
- UTC+12:00
- UTC+12:45
- UTC+13:00
- UTC+14:00

Set date/time

**Navigation**

Guidance → Commissioning → Date/time → Set date/time

Description

Set the date and local time. Every time the date or time is changed, a logbook entry is created.







User entry

Date and time

3 "Diagnostics" menu









Troubleshooting and preventive maintenance – settings for device behavior during process and device events as well as assistance and measures for diagnostic purposes.

Navigation  Diagnostics


Diagnostics	
▶ Active diagnostics	→  25
▶ Diagnostic list	→  28
▶ Event logbook	→  32
▶ Simulation	→  33
▶ Heartbeat Technology	→  35
▶ Diagnostic settings	→  36

3.1 "Active diagnostics" submenu


Navigation   Diagnostics → Active diagnos.

▶ Active diagnostics	
Actual diagnostics	→  25
Active diagnostic IO-Link	→  25
Timestamp	→  26
Previous diagnostics	→  26
Last diagnostic IO-Link	→  26
Timestamp	→  26
Operating time from restart	→  26
Operating time	→  27


Actual diagnostics

Navigation	 Diagnostics → Active diagnos. → Actual diagnos.
Prerequisite	A diagnostic event has occurred.
Description	Displays the currently active diagnostic message. If there is more than one pending diagnostic event, the message for the diagnostic event with the highest priority is displayed.
User interface	Positive integer


Active diagnostic IO-Link

Navigation	 Diagnostics → Active diagnos. → ActDiag IO-Link
Description	Displays the IO-Link event code for the currently active diagnostic message. If there is more than one pending diagnostic event, the code for the diagnostic message with the highest priority is displayed.
User interface	0 to 65 535


Timestamp

Navigation	 Diagnostics → Active diagnos. → Timestamp
Description	Displays the timestamp for the currently active diagnostic message.
User interface	Days (d), hours (h), minutes (m), seconds (s)


Previous diagnostics

Navigation	 Diagnostics → Active diagnos. → Prev.diagnostics
Prerequisite	At least two diagnostic events have already occurred.
Description	Displays the diagnostic message for the last diagnostic event that has ended.
User interface	Positive integer


Timestamp

Navigation	 Diagnostics → Active diagnos. → Timestamp
Description	Displays the timestamp of the diagnostic message generated for the last diagnostic event that has ended.
User interface	Days (d), hours (h), minutes (m), seconds (s)

Operating time from restart


Navigation	 Diagnostics → Active diagnos. → Time fr. restart
Description	Indicates how long the device has been in operation since the last time the device was restarted.
User interface	Days (d), hours (h), minutes (m), seconds (s)

Last diagnostic IO-Link

Navigation	 Diagnostics → Active diagnos. → LastDiag IO-Link
Description	Displays the IO-Link event code for the last diagnostic event that has ended.

User interface 0 to 65 535

Operating time

Navigation  Diagnostics → Active diagnos. → Operating time

Description Indicates how long the device has been in operation.

User interface Days (d), hours (h), minutes (m), seconds (s)

3.2 "Diagnostic list" submenu

Navigation  Diagnostics → Diagnostic list

▶ Diagnostic list		
Diagnostics 1	→	 28
Diagnostic 1 IO-Link	→	 29
Timestamp	→	 29
Diagnostics 2	→	 29
Diagnostic 2 IO-Link	→	 29
Timestamp	→	 29
Diagnostics 3	→	 30
Diagnostic 3 IO-Link	→	 30
Timestamp	→	 30
Diagnostics 4	→	 30
Diagnostic 4 IO-Link	→	 31
Timestamp	→	 30
Diagnostics 5	→	 31
Diagnostic 5 IO-Link	→	 31
Timestamp	→	 31


Diagnostics 1

Navigation  Diagnostics → Diagnostic list → Diagnostics 1


Description Displays the currently active diagnostic message with the highest priority.

User interface Positive integer


Diagnostic 1 IO-Link

Navigation	 Diagnostics → Diagnostic list → Diag. 1 IO-Link
Description	Displays the IO-Link event code for the currently active diagnostic message with the highest priority.
User interface	0 to 65 535


Timestamp

Navigation	 Diagnostics → Diagnostic list → Timestamp
Description	Displays the timestamp for the diagnostic message with the highest priority.
User interface	Days (d), hours (h), minutes (m), seconds (s)


Diagnostics 2

Navigation	 Diagnostics → Diagnostic list → Diagnostics 2
Description	Displays the currently active diagnostic message with the second highest priority.
User interface	Positive integer


Timestamp

Navigation	 Diagnostics → Diagnostic list → Timestamp
Description	Displays the timestamp for the diagnostic message with the second highest priority.
User interface	Days (d), hours (h), minutes (m), seconds (s)


Diagnostic 2 IO-Link

Navigation	 Diagnostics → Diagnostic list → Diag. 2 IO-Link
Description	Displays the IO-Link event code for the currently active diagnostic message with the second highest priority.
User interface	0 to 65 535


Diagnostics 3

Navigation	 Diagnostics → Diagnostic list → Diagnostics 3
Description	Displays the currently active diagnostic message with the third highest priority.
User interface	Positive integer


Timestamp

Navigation	 Diagnostics → Diagnostic list → Timestamp
Description	Displays the timestamp for the diagnostic message with the third highest priority.
User interface	Days (d), hours (h), minutes (m), seconds (s)


Diagnostic 3 IO-Link

Navigation	 Diagnostics → Diagnostic list → Diag. 3 IO-Link
Description	Displays the IO-Link event code for the currently active diagnostic message with the third highest priority.
User interface	0 to 65 535


Diagnostics 4

Navigation	 Diagnostics → Diagnostic list → Diagnostics 4
Description	Displays the currently active diagnostic message with the fourth highest priority.
User interface	Positive integer


Timestamp

Navigation	 Diagnostics → Diagnostic list → Timestamp
Description	Displays the timestamp for the diagnostic message with the fourth highest priority.
User interface	Days (d), hours (h), minutes (m), seconds (s)


Diagnostics 5

Navigation	 Diagnostics → Diagnostic list → Diagnostics 5
Description	Displays the currently active diagnostic message with the fifth-highest priority.
User interface	Positive integer


Timestamp

Navigation	 Diagnostics → Diagnostic list → Timestamp
Description	Displays the timestamp for the diagnostic message with the fifth highest priority.
User interface	Days (d), hours (h), minutes (m), seconds (s)

Diagnostic 4 IO-Link


Navigation	 Diagnostics → Diagnostic list → Diag. 4 IO-Link
Description	Displays the IO-Link event code for the currently active diagnostic message with the fourth highest priority.
User interface	0 to 65 535

Diagnostic 5 IO-Link

Navigation	 Diagnostics → Diagnostic list → Diag. 5 IO-Link
Description	Displays the IO-Link event code for the currently active diagnostic message with the fifth highest priority.
User interface	0 to 65 535

3.3 "Event logbook" submenu

Navigation  Diagnostics → Event logbook

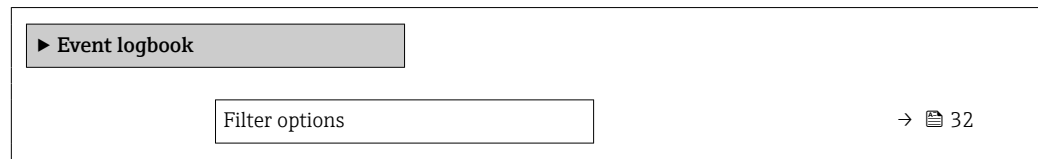

Filter options

Navigation  Diagnostics → Event logbook → Filter options

Description Select the category of event notification to display in the event list.


Additional information:

The status signals F, C, S and M are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107.

Selection

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information (I)

Clear event list

Navigation  Diagnostics → Event logbook → Clear event list

Description Deletes all entries from the events list. Once this function has been executed, the events list is empty and all the events are deleted.





Selection

- Cancel
- Clear data


3.4 "Simulation" submenu

Navigation  Diagnostics → Simulation

▶ Simulation

Assign simulation process variable	→  33
Process value	→  33
Device alarm simulation	→  34
Diagnostic event simulation	→  34

Assign simulation process variable


Navigation  Diagnostics → Simulation → Assign proc.var.

Description Select a process variable to activate the simulation.

- Selection**
- Off
 - Volume flow
 - Mass flow
 - Conductivity *
 - Corrected conductivity *
 - Temperature *

Additional information *Description*
 The display alternates between the measured value and a diagnostics message of the "function check" category (C) when simulation is active.

Process value


Navigation  Diagnostics → Simulation → Process value

Description Enter the process value to simulate.
 The unit is set in the "System units" menu.

User entry Signed floating-point number

* Visibility depends on order options or device settings

Device alarm simulation**Navigation**

 Diagnostics → Simulation → Dev. alarm sim.

Description


Switch the device alarm simulation on or off.

While simulation is in progress, a diagnostic message of the Function Check (C) category is displayed.

Selection

- Off
- On

Diagnostic event simulation**Navigation**

 Diagnostics → Simulation → Diagnostic event


Description

Select the diagnostic event to simulate.

Selection

Off

3.5 "Heartbeat Technology" submenu

The **Heartbeat Technology** submenu (→  35) is only available with the optional "Heartbeat Verification + Monitoring" application package.

- Order code for: Application package
- Option: EB "Heartbeat Verification + Monitoring"



Detailed information and all descriptions of the device parameters of the application package are available in the "Heartbeat Verification + Monitoring" Special Documentation

Navigation





Diagnostics → Heartbeat Techn.


▶ Heartbeat Technology


3.6 "Diagnostic settings" submenu

Navigation  Diagnostics → Diag. settings


▶ Diagnostic settings		
▶ Properties		→  36
▶ Diagnostic configuration		→  36

3.6.1 "Properties" submenu

Navigation  Diagnostics → Diag. settings → Properties

▶ Properties		
Alarm delay		→  36


Alarm delay




Navigation  Diagnostics → Diag. settings → Properties → Alarm delay

Description Enter a delay to suppress momentarily pending diagnostic messages.
Only applies to diagnostic events that allow for a delay before the diagnostic message is generated.



User entry 0 to 60 s

3.6.2 "Diagnostic configuration" submenu

Navigation  Diagnostics → Diag. settings → Diag. config.


▶ Diagnostic configuration		
▶ Sensor		→  37
▶ Electronics		→  37
▶ Process		→  40

"Sensor" submenu

Navigation   Diagnostics → Diag. settings → Diag. config. → Sensor



Assign behavior of diagnostic no. 043

Navigation  Diagnostics → Diag. settings → Diag. config. → Sensor → Diagnostic no. 043


Description Select behavior for diagnostic event "043 Sensor short circuit detected".


- Selection**
- Off
 - Alarm
 - Warning
 - Logbook entry only



Additional information *Selection*

- **Off** option
The diagnostic event is ignored and no diagnostic message is generated or logged.
- **Alarm** option
The device stops measuring. The signal outputs and totalizers assume the specified alarm condition. A diagnostic message is generated.
- **Warning** option
The device continues measuring. The signal outputs and totalizers are not affected. A diagnostic message is generated.
- **Logbook entry only** option
The device continues measuring. The diagnostic message is only displayed in the "Event logbook" submenu and does not alternate with the standard operational information displayed.


"Electronics" submenu

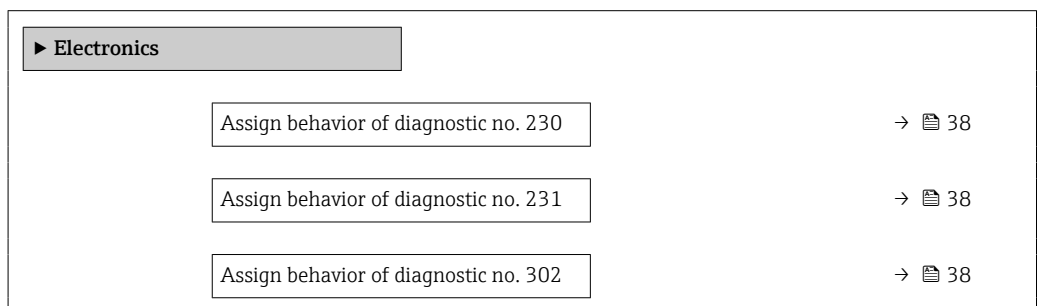Navigation   Diagnostics → Diag. settings → Diag. config. → Electronics



Assign behavior of diagnostic no. 376	→  38
Assign behavior of diagnostic no. 377	→  39


Assign behavior of diagnostic no. 230

Navigation  Diagnostics → Diag. settings → Diag. config. → Electronics → Diagnostic no. 230

Description Select behavior for diagnostic event "230 Date/time incorrect".

- Selection**
- Alarm
 - Warning
 - Logbook entry only


Assign behavior of diagnostic no. 231

Navigation  Diagnostics → Diag. settings → Diag. config. → Electronics → Diagnostic no. 231

Description Select behavior for diagnostic event "231 Date/time not available".

- Selection**
- Alarm
 - Warning
 - Logbook entry only


Assign behavior of diagnostic no. 302

Navigation  Diagnostics → Diag. settings → Diag. config. → Electronics → Diagnostic no. 302

Description Select behavior for diagnostic event "302 Device verification active".

- Selection**
- Off
 - Warning
 - Logbook entry only

Assign behavior of diagnostic no. 376

Navigation  Diagnostics → Diag. settings → Diag. config. → Electronics → Diagnostic no. 376

Description Select behavior for diagnostic event "376 Sensor electronics (ISEM) faulty".


Selection	<ul style="list-style-type: none"> ■ Off ■ Alarm ■ Warning ■ Logbook entry only
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ■ Off option The diagnostic event is ignored and no diagnostic message is generated or logged. ■ Alarm option The device stops measuring. The signal outputs and totalizers assume the specified alarm condition. A diagnostic message is generated. ■ Warning option The device continues measuring. The signal outputs and totalizers are not affected. A diagnostic message is generated. ■ Logbook entry only option The device continues measuring. The diagnostic message is only displayed in the "Event logbook" submenu and does not alternate with the standard operational information displayed.

Assign behavior of diagnostic no. 377












Navigation	Diagnostics → Diag. settings → Diag. config. → Electronics → Diagnostic no. 377
Description	Select behavior for diagnostic event "377 Electrode signal integrity".
Selection	<ul style="list-style-type: none"> ■ Off ■ Alarm ■ Warning ■ Logbook entry only
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ■ Off option The diagnostic event is ignored and no diagnostic message is generated or logged. ■ Alarm option The device stops measuring. The signal outputs and totalizers assume the specified alarm condition. A diagnostic message is generated. ■ Warning option The device continues measuring. The signal outputs and totalizers are not affected. A diagnostic message is generated. ■ Logbook entry only option The device continues measuring. The diagnostic message is only displayed in the "Event logbook" submenu and does not alternate with the standard operational information displayed.

"Process" submenu

Navigation  Diagnostics → Diag. settings → Diag. config. → Process


▶ Process

Assign behavior of diagnostic no. 832	→  40
Assign behavior of diagnostic no. 833	→  41
Assign behavior of diagnostic no. 834	→  41
Assign behavior of diagnostic no. 835	→  42
Assign behavior of diagnostic no. 842	→  42
Assign behavior of diagnostic no. 937	→  43
Assign behavior of diagnostic no. 938	→  43
Assign behavior of diagnostic no. 961	→  44
Assign behavior of diagnostic no. 962	→  44

Assign behavior of diagnostic no. 832



Navigation

 Diagnostics → Diag. settings → Diag. config. → Process → Diagnostic no. 832

Description

Select behavior for diagnostic event "832 Sensor electronics temperature too high".

Selection

- Off
- Alarm
- Warning
- Logbook entry only

Additional information

Selection

- **Off** option
The diagnostic event is ignored and no diagnostic message is generated or logged.
- **Alarm** option
The device stops measuring. The signal outputs and totalizers assume the specified alarm condition. A diagnostic message is generated.
- **Warning** option
The device continues measuring. The signal outputs and totalizers are not affected. A diagnostic message is generated.
- **Logbook entry only** option
The device continues measuring. The diagnostic message is only displayed in the "Event logbook" submenu and does not alternate with the standard operational information displayed.

Assign behavior of diagnostic no. 833


Navigation	Diagnostics → Diag. settings → Diag. config. → Process → Diagnostic no. 833
Description	Select behavior for diagnostic event "833 Sensor electronics temperature too low".
Selection	<ul style="list-style-type: none"> ▪ Off ▪ Alarm ▪ Warning ▪ Logbook entry only
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ▪ Off option The diagnostic event is ignored and no diagnostic message is generated or logged. ▪ Alarm option The device stops measuring. The signal outputs and totalizers assume the specified alarm condition. A diagnostic message is generated. ▪ Warning option The device continues measuring. The signal outputs and totalizers are not affected. A diagnostic message is generated. ▪ Logbook entry only option The device continues measuring. The diagnostic message is only displayed in the "Event logbook" submenu and does not alternate with the standard operational information displayed.

Assign behavior of diagnostic no. 834


Navigation	Diagnostics → Diag. settings → Diag. config. → Process → Diagnostic no. 834
Description	Select behavior for diagnostic event "834 Process temperature too high".
Selection	<ul style="list-style-type: none"> ▪ Off ▪ Alarm ▪ Warning ▪ Logbook entry only
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ▪ Off option The diagnostic event is ignored and no diagnostic message is generated or logged. ▪ Alarm option The device stops measuring. The signal outputs and totalizers assume the specified alarm condition. A diagnostic message is generated. ▪ Warning option The device continues measuring. The signal outputs and totalizers are not affected. A diagnostic message is generated. ▪ Logbook entry only option The device continues measuring. The diagnostic message is only displayed in the "Event logbook" submenu and does not alternate with the standard operational information displayed.

Assign behavior of diagnostic no. 835


Navigation	Diagnostics → Diag. settings → Diag. config. → Process → Diagnostic no. 835
Description	Select behavior for diagnostic event "835 Process temperature too low".
Selection	<ul style="list-style-type: none"> ■ Off ■ Alarm ■ Warning ■ Logbook entry only
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ■ Off option The diagnostic event is ignored and no diagnostic message is generated or logged. ■ Alarm option The device stops measuring. The signal outputs and totalizers assume the specified alarm condition. A diagnostic message is generated. ■ Warning option The device continues measuring. The signal outputs and totalizers are not affected. A diagnostic message is generated. ■ Logbook entry only option The device continues measuring. The diagnostic message is only displayed in the "Event logbook" submenu and does not alternate with the standard operational information displayed.

Assign behavior of diagnostic no. 842


Navigation	Diagnostics → Diag. settings → Diag. config. → Process → Diagnostic no. 842
Description	Select behavior for diagnostic event "842 Process value below limit".
Selection	<ul style="list-style-type: none"> ■ Off ■ Alarm ■ Warning ■ Logbook entry only
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ■ Off option The diagnostic event is ignored and no diagnostic message is generated or logged. ■ Alarm option The device stops measuring. The signal outputs and totalizers assume the specified alarm condition. A diagnostic message is generated. ■ Warning option The device continues measuring. The signal outputs and totalizers are not affected. A diagnostic message is generated. ■ Logbook entry only option The device continues measuring. The diagnostic message is only displayed in the "Event logbook" submenu and does not alternate with the standard operational information displayed.

Assign behavior of diagnostic no. 937


Navigation	Diagnostics → Diag. settings → Diag. config. → Process → Diagnostic no. 937
Description	Select behavior for diagnostic event "937 Sensor symmetry".
Selection	<ul style="list-style-type: none"> ■ Off ■ Alarm ■ Warning ■ Logbook entry only
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ■ Off option The diagnostic event is ignored and no diagnostic message is generated or logged. ■ Alarm option The device stops measuring. The signal outputs and totalizers assume the specified alarm condition. A diagnostic message is generated. ■ Warning option The device continues measuring. The signal outputs and totalizers are not affected. A diagnostic message is generated. ■ Logbook entry only option The device continues measuring. The diagnostic message is only displayed in the "Event logbook" submenu and does not alternate with the standard operational information displayed.

Assign behavior of diagnostic no. 938


Navigation	Diagnostics → Diag. settings → Diag. config. → Process → Diagnostic no. 938
Description	Select behavior for diagnostic event "938 Coil current not stable".
Selection	<ul style="list-style-type: none"> ■ Off ■ Alarm ■ Warning ■ Logbook entry only
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ■ Off option The diagnostic event is ignored and no diagnostic message is generated or logged. ■ Alarm option The device stops measuring. The signal outputs and totalizers assume the specified alarm condition. A diagnostic message is generated. ■ Warning option The device continues measuring. The signal outputs and totalizers are not affected. A diagnostic message is generated. ■ Logbook entry only option The device continues measuring. The diagnostic message is only displayed in the "Event logbook" submenu and does not alternate with the standard operational information displayed.

Assign behavior of diagnostic no. 961


Navigation	Diagnostics → Diag. settings → Diag. config. → Process → Diagnostic no. 961
Description	Select behavior for diagnostic event "961 Electrode potential out of specification".
Selection	<ul style="list-style-type: none"> ■ Off ■ Alarm ■ Warning ■ Logbook entry only
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ■ Off option The diagnostic event is ignored and no diagnostic message is generated or logged. ■ Alarm option The device stops measuring. The signal outputs and totalizers assume the specified alarm condition. A diagnostic message is generated. ■ Warning option The device continues measuring. The signal outputs and totalizers are not affected. A diagnostic message is generated. ■ Logbook entry only option The device continues measuring. The diagnostic message is only displayed in the "Event logbook" submenu and does not alternate with the standard operational information displayed.






Assign behavior of diagnostic no. 962


Navigation	Diagnostics → Diag. settings → Diag. config. → Process → Diagnostic no. 962
Description	Select behavior for diagnostic event "962 Pipe empty".
Selection	<ul style="list-style-type: none"> ■ Off ■ Alarm ■ Warning ■ Logbook entry only
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ■ Off option The diagnostic event is ignored and no diagnostic message is generated or logged. ■ Alarm option The device stops measuring. The signal outputs and totalizers assume the specified alarm condition. A diagnostic message is generated. ■ Warning option The device continues measuring. The signal outputs and totalizers are not affected. A diagnostic message is generated. ■ Logbook entry only option The device continues measuring. The diagnostic message is only displayed in the "Event logbook" submenu and does not alternate with the standard operational information displayed.

4 "Application" menu







Targeted optimization to the application – comprehensive device settings from sensor technology to system integration for optimum application adaptation.

Navigation  Application

Application	
▶ Measured values	→  45
▶ System units	→  49
▶ Totalizers	→  53
▶ Sensor	→  58
▶ IO-Link	→  69

4.1 "Measured values" submenu

Navigation  Application → Measured values


▶ Measured values	
Mass flow	→  45
Volume flow	→  46
Conductivity	→  46
Corrected conductivity	→  46
Temperature	→  47
▶ Totalizer	→  47

Mass flow


Navigation  Application → Measured values → Mass flow

Description Displays the mass flow calculated.
The unit is set in the "System units" menu.

User interface Signed floating-point number


Additional information  The IO-Link interface only offers the **kg/s** option.

Volume flow

Navigation  Application → Measured values → Volume flow


Description Displays the volume flow measured.
The unit is set in the "System units" menu.


User interface Signed floating-point number

Additional information  The IO-Link interface only offers the **m³/h** option.

Conductivity


Navigation  Application → Measured values → Conductivity

Prerequisite Conductivity measurement is switched on in the **Conductivity measurement** parameter (→  59).

 Conductivity measurement is only optionally available: Under order code for "Functionality", option D (enhanced transmitter) and order code for "Sensor option", option CX (conductivity measurement)


Description Displays the conductivity measured.
The unit is set in the "System units" menu.


User interface Positive floating-point number

Additional information  The IO-Link interface only offers the **S/m** option.

Corrected conductivity

Navigation  Application → Measured values → CorrConductivity

Prerequisite Conductivity measurement is switched on in the **Conductivity measurement** parameter (→  59).

 Conductivity measurement is only optionally available: Under order code for "Functionality", option D (extended transmitter) and order code for "Sensor option", option CX (conductivity measurement)

Description Displays the conductivity measured compensated for temperature.
The unit is set in the "System units" menu.

User interface Positive floating-point number

Temperature

Navigation  Application → Measured values → Temperature

Prerequisite Temperature measurement is only optionally available for Promag H 10 (5HBB): Under order code for "Functionality", option D (enhanced transmitter) and order code for "Sensor option", option CI (fluid temperature measurement)


Description Displays the medium temperature measured.
The unit is set in the "System units" menu.

User interface Positive floating-point number


Additional information  The IO-Link interface only offers the °C option.

4.1.1 "Totalizer" submenu


Navigation   Application → Measured values → Totalizer

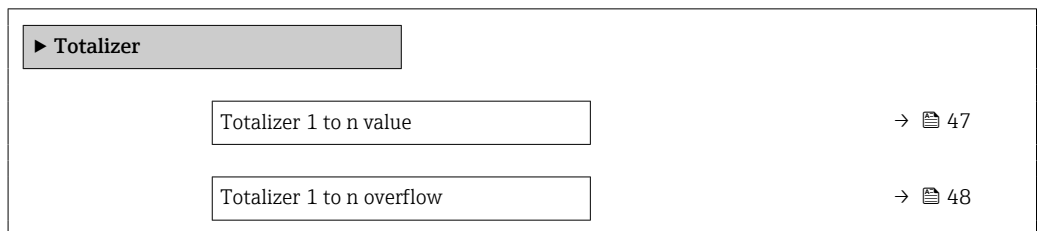


Totalizer value

Navigation  Application → Measured values → Totalizer → Tot. 1 to n value

Prerequisite A process variable has been selected in the **Assign process variable** parameter in the **Totalizer 1 to n** submenu.






Description	<p>Displays the totalizer counter since the last reset.</p> <p>This parameter can only display figures up to 7 digits. If the counter exceeds this range, the overflow is displayed in the "Totalizer overflow " parameter.</p> <p>Example:</p> <p>Value of "Totalizer value" parameter: 1,968,457 m³ Value of "Totalizer overflow " parameter: 1×10^7 (1 overflow) = 10,000,000 m³ Counter (total): 11,968,457 m³</p> <p>In the event of a fault condition, the totalizer behaves as specified in the "Totalizer failure behavior" parameter.</p>
User interface	Signed floating-point number
Additional information	 Totalizer 1 is permanently set to volume flow and cannot be changed. Totalizers 2 and 3 can be changed.

Totalizer overflow


Navigation	 Application → Measured values → Totalizer → Tot. 1 to n overflow
Prerequisite	A process variable has been selected in the Assign process variable parameter in the Totalizer 1 to n submenu.
Description	Displays the number of overflows for the totalizer counter ("Totalizer value" parameter).
User interface	-32 000.0 to 32 000.0

4.2 "System units" submenu

Navigation   Application → System units

▶ System units	
Volume flow unit	→  49
Mass flow unit	→  51
Density unit	→  51
Temperature unit	→  52
Conductivity unit	→  52

Volume flow unit



Navigation  Application → System units → Volume flow unit

Description Select the volume flow unit.

Selection

SI units

- cm³/s
- cm³/min
- cm³/h
- cm³/d
- dm³/s
- dm³/min
- dm³/h
- dm³/d
- m³/s
- m³/min
- m³/h
- m³/d
- ml/s
- ml/min
- ml/h
- ml/d
- l/s
- l/min
- l/h
- l/d
- hl/s
- hl/min
- hl/h
- hl/d
- Ml/s
- Ml/min
- Ml/h
- Ml/d

US units

- af/s
- af/min
- af/h
- af/d
- ft³/s
- ft³/min
- ft³/h
- ft³/d
- MMft³/s
- MMft³/min
- MMft³/h
- Mft³/d
- fl oz/s (us)
- fl oz/min (us)
- fl oz/h (us)
- fl oz/d (us)
- gal/s (us)
- gal/min (us)
- gal/h (us)
- gal/d (us)
- Mgal/s (us)
- Mgal/min (us)
- Mgal/h (us)
- Mgal/d (us)
- bbl/s (us;liq.)
- bbl/min (us;liq.)
- bbl/h (us;liq.)
- bbl/d (us;liq.)
- bbl/s (us;beer)
- bbl/min (us;beer)
- bbl/h (us;beer)
- bbl/d (us;beer)
- bbl/s (us;oil)
- bbl/min (us;oil)
- bbl/h (us;oil)
- bbl/d (us;oil)
- bbl/s (us;tank)
- bbl/min (us;tank)
- bbl/h (us;tank)
- bbl/d (us;tank)
- kgal/s (us)
- kgal/min (us)
- kgal/h (us)
- kgal/d (us)


Imperial units

- gal/s (imp)
- gal/min (imp)
- gal/h (imp)
- gal/d (imp)
- Mgal/s (imp)
- Mgal/min (imp)
- Mgal/h (imp)
- Mgal/d (imp)
- bbl/s (imp;beer)
- bbl/min (imp;beer)
- bbl/h (imp;beer)
- bbl/d (imp;beer)
- bbl/s (imp;oil)
- bbl/min (imp;oil)
- bbl/h (imp;oil)
- bbl/d (imp;oil)

Additional information

Selection

 For an explanation of the abbreviated units: →  90

 The IO-Link interface only offers the **m³/h** option.

Mass flow unit


Navigation Application → System units → Mass flow unit

Description Select the mass flow unit.

Selection

<i>SI units</i>	<i>US units</i>
▪ g/s	▪ oz/s
▪ g/min	▪ oz/min
▪ g/h	▪ oz/h
▪ g/d	▪ oz/d
▪ kg/s	▪ lb/s
▪ kg/min	▪ lb/min
▪ kg/h	▪ lb/h
▪ kg/d	▪ lb/d
▪ t/s	▪ STon/s
▪ t/min	▪ STon/min
▪ t/h	▪ STon/h
▪ t/d	▪ STon/d

Additional information The IO-Link interface only offers the **kg/s** option.

Density unit


Navigation Application → System units → Density unit



Description Select the density unit.





Selection

<i>SI units</i>	<i>US units</i>	<i>Imperial units</i>
▪ g/cm ³	▪ lb/ft ³	▪ lb/gal (imp)
▪ g/m ³	▪ lb/gal (us)	▪ lb/bbl (imp;beer)
▪ kg/l	▪ lb/bbl (us;liq.)	▪ lb/bbl (imp;oil)
▪ kg/dm ³	▪ lb/bbl (us;beer)	
▪ kg/m ³	▪ lb/bbl (us;oil)	
▪ SD4°C	▪ lb/bbl (us;tank)	
▪ SD15°C		
▪ SD20°C		
▪ SG4°C		
▪ SG15°C		
▪ SG20°C		

Additional information *Selection*
 For an explanation of the abbreviated units: → 90

The IO-Link interface only offers the **kg/m³** option.



Temperature unit							
Navigation	 Application → System units → Temperature unit						
Prerequisite	Temperature measurement is only optionally available for Promag H 10 (5HBB): Under order code for "Functionality", option D (enhanced transmitter) and order code for "Sensor option", option CI (fluid temperature measurement)						
Description	Select the temperature unit.						
Selection	<table border="0"> <thead> <tr> <th><i>SI units</i></th> <th><i>US units</i></th> </tr> </thead> <tbody> <tr> <td>■ °C</td> <td>■ °F</td> </tr> <tr> <td>■ K</td> <td>■ °R</td> </tr> </tbody> </table>	<i>SI units</i>	<i>US units</i>	■ °C	■ °F	■ K	■ °R
<i>SI units</i>	<i>US units</i>						
■ °C	■ °F						
■ K	■ °R						
Additional information	 The IO-Link interface only offers the °C option.						

Conductivity unit												
Navigation	 Application → System units → Conductiv. unit											
Prerequisite	Conductivity measurement is switched on in the Conductivity measurement parameter (→  59).  Conductivity measurement is only optionally available: Under order code for "Functionality", option D (enhanced transmitter) and order code for "Sensor option", option CX (conductivity measurement)											
Description	Select the conductivity unit.											
Selection	<table border="0"> <thead> <tr> <th><i>SI units</i></th> </tr> </thead> <tbody> <tr><td>■ nS/cm</td></tr> <tr><td>■ µS/cm</td></tr> <tr><td>■ µS/m</td></tr> <tr><td>■ µS/mm</td></tr> <tr><td>■ mS/m</td></tr> <tr><td>■ mS/cm</td></tr> <tr><td>■ S/cm</td></tr> <tr><td>■ S/m</td></tr> <tr><td>■ kS/m</td></tr> <tr><td>■ MS/m</td></tr> </tbody> </table>	<i>SI units</i>	■ nS/cm	■ µS/cm	■ µS/m	■ µS/mm	■ mS/m	■ mS/cm	■ S/cm	■ S/m	■ kS/m	■ MS/m
<i>SI units</i>												
■ nS/cm												
■ µS/cm												
■ µS/m												
■ µS/mm												
■ mS/m												
■ mS/cm												
■ S/cm												
■ S/m												
■ kS/m												
■ MS/m												
Additional information	 The IO-Link interface only offers the unit S/m option.											

4.3 "Totalizers" submenu

Navigation   Application → Totalizers


▶ Totalizers

- ▶ Totalizer handling →  53
- ▶ Totalizer 1 to n →  53

4.3.1 "Totalizer handling" submenu


Navigation   Application → Totalizers → Totalizer

▶ Totalizer handling

- Reset all totalizers →  53

Reset all totalizers

Navigation

 Application → Totalizers → Totalizer → Reset all tot.

Description

Reset all totalizers to "0" and restart the totalizers. The counter readings are not logged prior to the reset.





Selection



- Cancel
- Reset + totalize


4.3.2 "Totalizer 1 to n" submenu

Navigation   Application → Totalizers → Totalizer 1 to n

▶ Totalizer 1 to n

- Assign process variable 1 to n →  54
- Process variable unit 1 to n →  54
- Totalizer 1 to n operation mode →  55
- Totalizer 1 to n control →  56

Preset value 1 to n	→  56
Totalizer 1 to n failure behavior	→  57

Assign process variable 

Navigation

 Application → Totalizers → Totalizer 1 to n → AssignVariab. 1 to n


Description


Select a process variable to activate the totalizer.
If the process variable is changed or the totalizer deactivated, the totalizer is reset to "0".

Selection

- Off
- Volume flow
- Mass flow

Additional information

 Totalizer 1 is permanently set to **Volume flow** option and cannot be changed. Totalizers 2 and 3 can be changed.

Process variable unit 

Navigation

 Application → Totalizers → Totalizer 1 to n → VariableUnit 1 to n

Prerequisite

A process variable has been selected in the **Assign process variable** parameter in the **Totalizer 1 to n** submenu.

Description

Select the unit for the process variable of the totalizer.

Selection

- | | |
|---|---|
| <p><i>SI units</i></p> <ul style="list-style-type: none"> ■ g[*] ■ kg[*] ■ t[*] | <p><i>US units</i></p> <ul style="list-style-type: none"> ■ oz[*] ■ lb[*] ■ STon[*] |
|---|---|

* Visibility depends on order options or device settings

or

SI units

- cm³ *
- dm³ *
- m³ *
- ml *
- l *
- hl *
- Ml Mega *

US units

- af *
- ft³ *
- Mft³ *
- fl oz (us) *
- gal (us) *
- kgal (us) *
- Mgal (us) *
- bbl (us;liq.) *
- bbl (us;beer) *
- bbl (us;oil) *
- bbl (us;tank) *

Imperial units

- gal (imp) *
- Mgal (imp) *
- bbl (imp;beer) *
- bbl (imp;oil) *

* Visibility depends on order options or device settings


or

Other units


None *

* Visibility depends on order options or device settings

Additional information*Description*

The unit is selected separately for each totalizer. The unit is independent of the option selected in the **System units** submenu (→  8).

Options

The selection is dependent on the process variable selected in the **Assign process variable** parameter (→  13).

- The IO-Link interface only offers the **kg** option, **m³** option and **Nm³** option.
- Totalizer 1 is permanently set to **Volume flow** option and cannot be changed. Totalizers 2 and 3 can be changed.

Totalizer operation mode**Navigation**

 Application → Totalizers → Totalizer 1 to n → Operat. mode 1 to n

Prerequisite

A process variable has been selected in the **Assign process variable** parameter in the **Totalizer 1 to n** submenu.

Description


Select the totalizer operation mode, e.g. only totalize forward flow or only totalize reverse flow.

Selection


- Net
- Forward
- Reverse


Additional information	<i>Selection</i> <ul style="list-style-type: none"> ■ Net option The flow values in the forward and reverse flow directions are totalized and netted against each other. Net flow is recorded in the flow direction. ■ Forward option Only the flow in the forward flow direction is totalized. ■ Reverse option Only the flow in the reverse flow direction is totalized (= reverse flow quantity).
-------------------------------	--

Totalizer control


Navigation	 Application → Totalizers → Totalizer 1 to n → Tot. 1 to n control
Prerequisite	A process variable has been selected in the Assign process variable parameter in the Totalizer 1 to n submenu.
Description	Operate the totalizer.
Selection	<ul style="list-style-type: none"> ■ Totalize ■ Reset + hold ■ Preset + hold ■ Reset + totalize ■ Hold
Additional information	<i>Selection</i> <ul style="list-style-type: none"> ■ Totalize option The totalizer is started or continues running. ■ Reset + hold option The totalizer is reset to "0" and stopped. ■ Preset + hold option The totalizer is stopped and set to the start value specified in the "Preset value " parameter. ■ Reset + totalize option The totalizer is reset to "0" and restarted. ■ Hold option The totalizer is stopped.

Preset value

Navigation	 Application → Totalizers → Totalizer 1 to n → Preset value 1 to n
Prerequisite	A process variable has been selected in the Assign process variable parameter in the Totalizer 1 to n submenu.
Description	Specify a start value for the totalizer.
User entry	Signed floating-point number







Additional information	<p><i>Description</i></p> <p>The unit of the selected process variable is specified for the totalizer in the Unit totalizer parameter (→  13).</p> <p><i>Example</i></p> <p>This configuration is suitable for applications such as iterative filling processes with a fixed batch quantity.</p>
-------------------------------	--

Totalizer failure behavior


Navigation	 Application → Totalizers → Totalizer 1 to n → FailureBehav. 1 to n
Prerequisite	A process variable has been selected in the Assign process variable parameter in the Totalizer 1 to n submenu.
Description	Specify how the totalizer should behave in the event of a device alarm.
Selection	<ul style="list-style-type: none"> ■ Hold ■ Continue ■ Last valid value + continue
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ■ Hold option The totalizer is stopped in the event of a device alarm. ■ Continue option The totalizer continues to totalize based on the current value measured; the device alarm is ignored. ■ Last valid value + continue option The totalizer continues to totalize based on the last valid value measured before the device alarm occurred.








4.4 "Sensor" submenu

Navigation  Application → Sensor

▶ Sensor	
▶ Process parameters	→  58
▶ Low flow cutoff	→  61
▶ Empty pipe detection	→  62
▶ Sensor adjustment	→  64
▶ Calibration	→  65
▶ Electrode cleaning cycle	→  66

4.4.1 "Process parameters" submenu

Navigation  Application → Sensor → Process param.

▶ Process parameters	
Flow damping	→  59
Flow override	→  59
Conductivity measurement	→  59
Conductivity temperature coefficient	→  60
Conductivity damping time	→  60
Temperature damping time	→  60
Fixed density	→  61

Flow damping
**Navigation**

Application → Sensor → Process param. → Flow damping

Description

Enter value for damping of the flow measured value in order to reduce the variability of the flow measured value when exposed to interference.

Additional information:

The depth of the flow filter is determined by this setting. As the filter depth increases, so does the reaction time of the device.

- Value = 0: No damping. Damping of 0 is not recommended, as the measuring signal is then so noisy that it is almost impossible to perform a measurement.

- Value > 0: Damping increases

Optimal damping depends on the measuring period.

Damping impacts the following measuring device variables:

- Outputs
- Low flow cutoff
- Totalizers

User entry

0 to 15

Flow override
**Navigation**

Application → Sensor → Process param. → Flow override

Description

Reports the flow rate as zero until flow override is deactivated. Can be used for example when cleaning the pipeline.

Selection

- Off
- On

Additional information

Selection

"On" option

Activates flow override and the diagnostic message "453 Flow override active" is generated.

Values reported:

Flow variables: Zero

Other process variables: As measured

Totalizers: Stop totalizing

Conductivity measurement
**Navigation**

Application → Sensor → Process param. → Conduct. measur.

Prerequisite


Conductivity measurement is only optionally available: Under order code for "Functionality", option D (extended transmitter) and order code for "Sensor option", option CX (conductivity measurement)


Description


Switch conductivity measurement on or off. To be able to measure conductivity, the medium must have a minimum conductivity of 5 µS/cm.

- Selection**
- Off
 - On

Conductivity temperature coefficient

Navigation  Application → Sensor → Process param. → Cond. temp.coeff


Prerequisite Conductivity measurement is switched on in the **Conductivity measurement** parameter (→  59).


 Conductivity measurement is only optionally available: Under order code for "Functionality", option D (extended transmitter) and order code for "Sensor option", option CX (conductivity measurement)


Description Enter the temperature coefficient to calculate the corrected conductivity.

User entry Signed floating-point number

Conductivity damping time

Navigation  Application → Sensor → Process param. → ConductDampTime

Prerequisite Conductivity measurement is switched on in the **Conductivity measurement** parameter (→  59).

 Conductivity measurement is only optionally available: Under order code for "Functionality", option D (extended transmitter) and order code for "Sensor option", option CX (conductivity measurement)


Description Enter time constant for conductivity damping (PT1 element):
 - Value = 0: No damping
 - Value > 0: Damping increases

Additional information:

Damping is implemented by means of a proportional transmission behavior with first order delay (PT1 element).

User entry 0 to 999.9 s

Temperature damping time

Navigation  Application → Sensor → Process param. → TempDampingTime

Prerequisite Temperature measurement is only optionally available for Promag H 10 (5HBB): Under order code for "Functionality", option D (extended transmitter) and order code for "Sensor option", option CI (medium temperature measurement)

Description Enter time constant for damping the temperature value.

User entry 0 to 999.9 s

Fixed density

Navigation  Application → Sensor → Process param. → Fixed density




Description Enter a fixed value for the density.
The unit is set in the " " menu.

User entry Positive floating-point number


4.4.2 "Low flow cutoff" submenu

Navigation   Application → Sensor → Low flow cutoff

▶ **Low flow cutoff**

Low flow cutoff	→  61
On value low flow cutoff	→  62
Off value low flow cutoff	→  62

Low flow cutoff


Navigation  Application → Sensor → Low flow cutoff → Low flow cutoff

Description Select a process variable for low flow cutoff to activate low flow cutoff.

Selection

- Off
- Volume flow
- Mass flow

Additional information Description

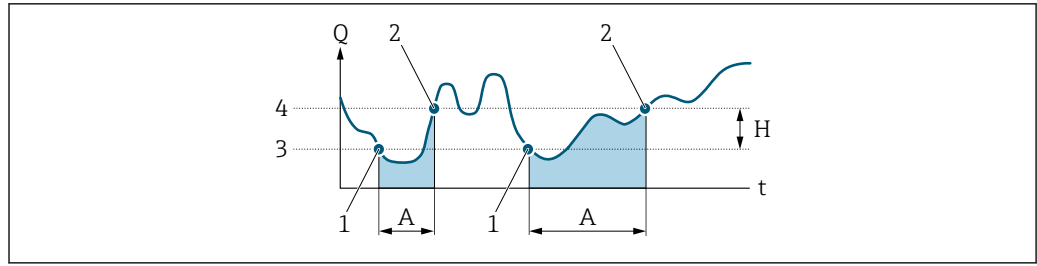

A0012887

- Q* Flow
- t* Time
- H* Hysteresis
- A* Low flow cut off active
- 1* Low flow cut off is activated
- 2* Low flow cut off is deactivated
- 3* On-value entered
- 4* Off-value entered

On value low flow cutoff



Navigation Application → Sensor → Low flow cutoff → On value

Description Enter on value to switch on low flow cutoff.
 Value = 0: No low flow cutoff
 Value > 0: Low flow cutoff is activated

User entry Positive floating-point number

Off value low flow cutoff



Navigation Application → Sensor → Low flow cutoff → Off value

Description Enter off value to switch off low flow cutoff. The off value is entered as a positive hysteresis with respect to the on value.

User entry 0 to 100.0 %

4.4.3 "Empty pipe detection" submenu

Navigation Application → Sensor → Empty pipe det.

▶ Empty pipe detection

Empty pipe detection	→ 63
New adjustment	→ 63

Empty pipe adjust value	→ 63
Full pipe adjust value	→ 64
Measured value EPD	→ 64

Empty pipe detection



Navigation

Application → Sensor → Empty pipe det. → Empty pipe det.

Description

Switch empty pipe detection on or off. Switch on empty pipe detection to detect a partially filled or empty measuring tube.

Selection

- Off
- On

New adjustment



Navigation

Application → Sensor → Empty pipe det. → New adjustment

Description

Select empty pipe or full pipe adjustment to perform a new adjustment. To adjust empty pipe detection, perform the empty pipe adjustment first and then the full pipe adjustment.

Additional information:

The measuring device is pre-adjusted at production using water (approx. 300 µS/cm). For liquids that deviate from this conductivity, a new empty pipe and full pipe adjustment must be performed on site.

Selection

- Cancel
- Empty pipe adjust
- Full pipe adjust

Empty pipe adjust value



Navigation

Application → Sensor → Empty pipe det. → Empty pipe value

Description

Displays adjustment value when the measuring tube is empty.

NOTE

Users logged on in the Service role have write access!

User interface

Positive floating-point number

Full pipe adjust value



- Navigation** Application → Sensor → Empty pipe det. → Full pipe value
- Description** Displays adjustment value when the measuring tube is full.
NOTE
Users logged on in the Service role have write access!
- User interface** Positive floating-point number

Measured value EPD

- Navigation** Application → Sensor → Empty pipe det. → Meas. value EPD
- Description** Displays the value currently measured for empty pipe detection.
- User interface** Positive floating-point number

4.4.4 "Sensor adjustment" submenu

Navigation Application → Sensor → Sensor adjustm.

▶ **Sensor adjustment**

Installation direction	→ 64
Integration time	→ 65
Measuring period	→ 65

Installation direction



- Navigation** Application → Sensor → Sensor adjustm. → Install. direct.
- Description** Select the sign of the flow direction.
- Selection**
 - Forward flow
 - Reverse flow

Integration time



Navigation	Application → Sensor → Sensor adjustm. → Integration time
Description	Displays the duration of an integration cycle. Users logged on in the Service role have write access.
User interface	1 to 65 ms

Measuring period



Navigation	Application → Sensor → Sensor adjustm. → Measuring period
Description	Displays the duration of a full measuring period. The measuring period is the time span over which a magnetic field is produced to create a measuring point. Users logged on in the Service role have write access.
User interface	0 to 1 000 ms

4.4.5 "Calibration" submenu

Navigation Application → Sensor → Calibration


▶ Calibration

Nominal diameter	→ 65
Calibration factor	→ 66
Zero point	→ 66
Conductivity calibration factor	→ 66

Nominal diameter


Navigation	Application → Sensor → Calibration → Nominal diameter
Description	Displays the nominal diameter of the sensor.
User interface	Character string comprising numbers, letters and special characters

Calibration factor

Navigation	 Application → Sensor → Calibration → Cal. factor
Description	Displays the current calibration factor for the sensor. The factory setting for the calibration factor can be found on the sensor's nameplate.
User interface	Positive floating-point number




Zero point



Navigation	 Application → Sensor → Calibration → Zero point
Description	Displays the zero point correction value for the sensor. Users logged on in the Service role have write access.
User interface	Signed floating-point number

Conductivity calibration factor





Navigation	 Application → Sensor → Calibration → Cond. cal. fact.
Prerequisite	Conductivity measurement is switched on in the Conductivity measurement parameter (→  59).  Conductivity measurement is only optionally available: Under order code for "Functionality", option D (extended transmitter) and order code for "Sensor option", option CX (conductivity measurement)
Description	Displays the calibration factor for conductivity measurement. Users logged on in the Service role have write access.
User interface	0.01 to 10 000


4.4.6 "Electrode cleaning cycle" submenu


Navigation   Application → Sensor → Elec. clean cycl


▶ Electrode cleaning cycle


Electrode cleaning cycle	→  67
ECC duration	→  67

ECC recovery time	→ 📄 67
ECC interval	→ 📄 67
ECC polarity	→ 📄 68


Electrode cleaning cycle 

- Navigation**  Application → Sensor → Elec. clean cycl → Elec. clean cycl
- Description** Switch electrode cleaning on or off.
- Selection**
- Off
 - On


ECC duration 

- Navigation**  Application → Sensor → Elec. clean cycl → ECC duration
- Description** Specify the duration of the cleaning phase for the cycle. Diagnostic message "530 Electrode cleaning active" is displayed until the cleaning phase and recovery phase are both complete.
- User entry** 0.01 to 30 s

ECC recovery time 

- Navigation**  Application → Sensor → Elec. clean cycl → ECC recov. time
- Description** Specify the maximum timespan for recovery after the cleaning phase has completed to prevent interference with the signal outputs. The output signal values will be frozen for the duration of the recovery, unless flow measurement can resume beforehand. If the timespan specified is not sufficient for recovery, diagnostic message "512 ECC recovery time exceeded" is generated.
- User entry** 1 to 600 s

ECC interval 

- Navigation**  Application → Sensor → Elec. clean cycl → ECC interval
- Description** Specify the duration of the interval between one cleaning cycle and the next.

User entry 0.5 to 168 h

ECC polarity

Navigation  Application → Sensor → Elec. clean cycl → ECC polarity

Description Displays the setting for the electrode cleaning polarity. The polarity depends on the material of the electrodes.

User interface








- Positive
- Negative

Additional information *User interface*


- **Positive** option
For tantalum, Alloy C22, or stainless steel electrodes
- **Negative** option
For platinum electrodes

4.5 "IO-Link" submenu


Navigation  Application → IO-Link

▶ IO-Link	
Vendor name	→  69
Product name	→  69
Product ID	→  70
Device ID	→  69
Application specific tag	→  70
Function tag	→  70
Location tag	→  70


Vendor name








Navigation	 Application → IO-Link → Vendor name
Description	Displays the manufacturer.
User interface	Character string comprising numbers, letters and special characters

Product name

Navigation	 Application → IO-Link → Product name
Description	Displays the name of the transmitter.
User interface	Character string comprising numbers, letters and special characters

Device ID








Navigation	 Application → IO-Link → Device ID
Description	Displays the device ID registered with the IO-Link Community.
User interface	Positive integer

Product ID	
Navigation	 Application → IO-Link → Product ID
Description	Displays the product root.
User interface	Character string comprising numbers, letters and special characters
Application specific tag 	
Navigation	 Application → IO-Link → Application tag
Description	Enter the tag of the application in which the device is used, e.g. the designation of the production process or step (max. 32 characters).
User entry	Character string comprising numbers, letters and special characters (32)
Function tag 	
Navigation	 Application → IO-Link → Function tag
Description	Enter the tag of the function the device performs in the application (max. 32 characters).
User entry	Character string comprising numbers, letters and special characters (32)
Location tag 	
Navigation	 Application → IO-Link → Location tag
Description	Enter the tag of the device location in the plant (max. 32 characters).
User entry	Character string comprising numbers, letters and special characters (32)

5 "System" menu





Overall device management and security settings – management of system settings and adaption to operational requirements.

Navigation  System


System	
▶ Device management	→  72
▶ User management	→  74
▶ Connectivity	→  77
▶ Date/time	→  78
▶ Information	→  80
▶ Display	→  85
▶ Software configuration	→  89

5.1 "Device management" submenu

Navigation  System → Device manag.

▶ Device management	
Device tag	→  72
Locking status	→  72
Configuration counter	→  73
Device reset	→  73

Device tag

Navigation  System → Device manag. → Device tag

Description Displays the name for the measuring point.

User entry Character string comprising numbers, letters and special characters (32)


Locking status

Navigation  System → Device manag. → Locking status

Description Indicates the write protection with the highest priority that is currently active.


User interface

- Hardware locked
- **Temporarily locked** option (e.g. during IO-Link block configuration or parameter upload)

Additional information 


- The DIP switch is on the back of the display.
- While a block parameterization or the DataStorage mechanism is active via the IO-Link communication, the **Temporarily locked** option becomes active.

Configuration counter

Navigation	 System → Device manag. → Config. counter
Description	<p>Displays the counter for the number of times the device configuration has changed.</p> <p>If the value for a static parameter changes, the counter increments by 1. This is to enable tracking different parameter versions.</p> <p>When multiple parameters are changed simultaneously, e.g. when loading a configuration file into the device from an external source such as FieldCare, the counter may increment.</p> <p>The counter cannot be reset. Nor is it reset to a default value on performing a device reset. Once the counter has incremented to 65535, it restarts at 1.</p>
User interface	0 to 65 535

Device reset







Navigation	 System → Device manag. → Device reset
Description	Reset the device configuration - either entirely or in part - to a defined state.
Selection	<ul style="list-style-type: none"> ■ Cancel ■ To delivery settings ■ Restart device ■ Restore S-DAT backup * ■ Create T-DAT backup ■ Restore T-DAT backup *
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ■ To delivery settings option Every parameter for which a customer-specific default setting was ordered is reset to the customer-specific value. All other parameters are reset to the factory setting. ■ Restart device option The restart resets every parameter with data stored in volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged. ■ Restore S-DAT backup option Restores the data that is saved on the S-DAT. This function can be used to resolve the memory issue "083 Memory content inconsistent" or to restore the S-DAT data when a new S-DAT has been installed. ■ Create T-DAT backup option Creates T-DAT backup. ■ Restore T-DAT backup option Restores the data saved on the T-DAT. This function can be used to resolve the memory issue "283 Memory content inconsistent" or to restore the T-DAT data when a new T-DAT has been installed.


* Visibility depends on order options or device settings

5.2 "User management" submenu

Navigation  System → User manag.

▶ User management		
User role		→  74
Enter access code		→  75
Reset Maintenance code		→  75
▶ Define Maintenance code		→  76

User role


Navigation  System → User manag. → User role

Description Displays the role the user is currently logged on in.
 The role determines the user's access rights for the parameters. Until a "Maintenance" code has been set in the "Define Maintenance code" parameter, all users are automatically logged on in the "Maintenance" role. Once the "Maintenance" code has been set, all users are automatically logged on in the "Operator" role. The access rights can be changed via the "Enter access code" parameter.


- User interface**
- Operator
 - Maintenance
 - Service
 - Production
 - Development

- Additional information** *User interface*
- **Operator** option
Provides only read access to parameters.
 - **Maintenance** option
Provides read and write access to parameters.
For some parameters, the user must be logged on in the Service role to obtain write access.
 - **Service** option
Provides read and write access to Service parameters.

Enter access code


Navigation	 System → User manag. → Ent. access code
Description	For users logged on in the Operator role, enter the Maintenance code to change the access status to Maintenance and disable write protection of parameters. For users logged on in the Maintenance role, enter the Service code to change the access status to Service and enable read and write access to Service parameters.
User entry	Max. 16-digit character string comprising numbers, letters and special characters

Reset Maintenance code



Navigation	 System → User manag. → Reset Maint code
Description	Enter the code provided by Endress+Hauser Technical Support to reset the Maintenance code.
User entry	Character string comprising numbers, letters and special characters (32)

5.2.1 "Define Maintenance code" wizard

Complete this wizard to specify an access code for the Maintenance role.

Navigation  System → User manag. → Def. Maint. code

▶ Define Maintenance code

Define Maintenance code	→  76
Confirm Maintenance code	→  76

Define Maintenance code

Navigation  System → User manag. → Def. Maint. code → Def. Maint. code

Description Specify an access code that is required to obtain the access rights for the Maintenance role.

User entry 0 to 9 999

Confirm Maintenance code


Navigation  System → User manag. → Def. Maint. code → Conf. Maint code

Description Confirm the access code entered for the Maintenance role.



User entry 0 to 9 999


5.3 "Connectivity" submenu

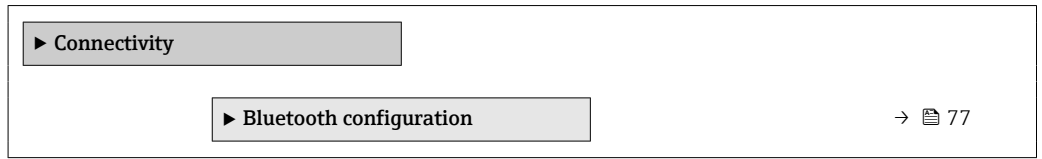Navigation   System → Connectivity




5.3.1 "Bluetooth configuration" submenu

Navigation   System → Connectivity → Bluetooth conf.

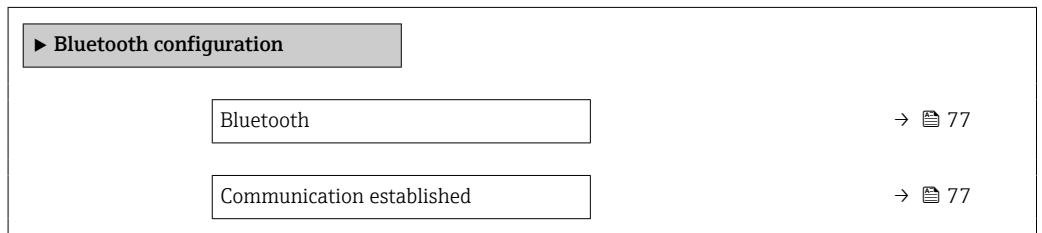

Bluetooth

Navigation  System → Connectivity → Bluetooth conf. → Bluetooth

Description Enable or disable Bluetooth.

- Selection**
- Enable
 - Disable
 - Not available *

Communication established

Navigation  System → Connectivity → Bluetooth conf. → Communi. establ.




- User interface**
- No
 - Yes

* Visibility depends on order options or device settings


5.4 "Date / Time" submenu

Navigation   System → Date / Time

▶ **Date/time**

Set date/time	→  78
Time format	→  78
Time zone	→  78


Set date/time

Navigation  System → Date/time → Set date/time

Description Set the date and local time. Every time the date or time is changed, a logbook entry is created.

User entry Date and time

Time format

Navigation  System → Date/time → Time format

Description Select the time format.

Selection

- 24 h
- 12 h AM/PM

Time zone

Navigation  System → Date/time → Time zone




Description Select the time zone. Every time the time zone is changed, a logbook entry is created.

Selection*Other units*

- UTC-12:00
- UTC-11:00
- UTC-10:00
- UTC-09:30
- UTC-09:00
- UTC-08:00
- UTC-07:00
- UTC-06:00
- UTC-05:00
- UTC-04:00
- UTC-03:30
- UTC-03:00
- UTC-02:00
- UTC-01:00
- UTC 00:00
- UTC+01:00
- UTC+02:00
- UTC+03:00
- UTC+03:30
- UTC+04:00
- UTC+04:30
- UTC+05:00
- UTC+05:30
- UTC+05:45
- UTC+06:00
- UTC+06:30
- UTC+07:00
- UTC+08:00
- UTC+08:45
- UTC+09:00
- UTC+09:30
- UTC+10:00
- UTC+10:30
- UTC+11:00
- UTC+12:00
- UTC+12:45
- UTC+13:00
- UTC+14:00











5.5 "Information" submenu

Navigation  System → Information

▶ Information		
▶ Device		→  80
▶ Sensor electronic module (ISEM)		→  83
▶ Display module		→  83

5.5.1 "Device" submenu

Navigation  System → Information → Device



▶ Device		
Device name		→  80
Device tag		→  81
Serial number		→  81
Order code		→  81
Firmware version		→  81
Extended order code 1		→  82
Extended order code 2		→  82
Extended order code 3		→  82
ENP version		→  82
Manufacturer		→  83


Device name



Navigation  System → Information → Device → Device name


Description Displays the name of the transmitter. The transmitter name is also provided on the nameplate of the transmitter.








User interface Character string comprising numbers, letters and special characters

Device tag		
Navigation	 System → Information → Device → Device tag	
Description	Displays the name for the measuring point.	
User entry	Character string comprising numbers, letters and special characters (32)	


Serial number		
Navigation	 System → Information → Device → Serial number	
Description	Displays the serial number of the measuring device. The serial number is also provided on the nameplate of the sensor and of the transmitter. The serial number can also be used to retrieve further device-related information and documentation via the Operations app or the Device Viewer on the Endress+Hauser website.	
User interface	Character string comprising numbers, letters and special characters	

Order code		
Navigation	 System → Information → Device → Order code	
Description	Displays the device order code. The order code is used for instance to order a replacement or spare device or to verify that the device features specified on the order form match the shipping note.	
User interface	Character string comprising numbers, letters and special characters	



Firmware version		
Navigation	 System → Information → Device → Firmware version	
Description	Displays the device firmware version installed.	
User interface	Character string comprising numbers, letters and special characters	


Extended order code 1 	
Navigation	 System → Information → Device → Ext. order cd. 1
Description	<p>Displays the first, second and/or third part of the extended order code.</p> <p>Due to character length restrictions, the extended order code is split into a maximum of 3 parameters. The extended order code indicates for each feature in the product structure the selected option, thereby uniquely identifying the device model.</p> <p>The extended order code can also be found on the nameplate.</p>
User interface	Character string comprising numbers, letters and special characters
Extended order code 2 	
Navigation	 System → Information → Device → Ext. order cd. 2
Description	<p>Displays the first, second and/or third part of the extended order code.</p> <p>Due to character length restrictions, the extended order code is split into a maximum of 3 parameters. The extended order code indicates for each feature in the product structure the selected option, thereby uniquely identifying the device model.</p> <p>The extended order code can also be found on the nameplate.</p>
User interface	Character string comprising numbers, letters and special characters
Extended order code 3 	
Navigation	 System → Information → Device → Ext. order cd. 3
Description	<p>Displays the first, second and/or third part of the extended order code.</p> <p>Due to character length restrictions, the extended order code is split into a maximum of 3 parameters. The extended order code indicates for each feature in the product structure the selected option, thereby uniquely identifying the device model.</p> <p>The extended order code can also be found on the nameplate.</p>
User interface	Character string comprising numbers, letters and special characters
ENP version	
Navigation	 System → Information → Device → ENP version
Description	Displays the version of the electronic nameplate (ENP).
User interface	Character string comprising numbers, letters and special characters

Manufacturer


Navigation	 System → Information → Device → Manufacturer
Description	Displays the manufacturer.
User interface	Character string comprising numbers, letters and special characters

5.5.2 "Sensor electronic module (ISEM)" submenu

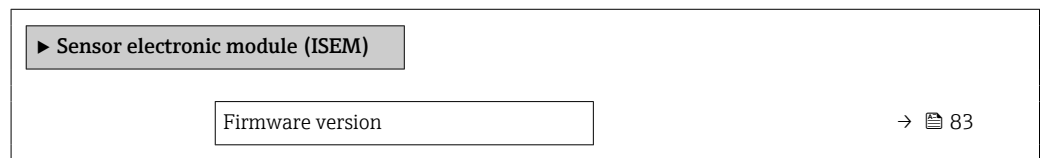

Navigation   System → Information → Sens. electronic




Firmware version


Navigation	 System → Information → Sens. electronic → Firmware version
Description	Displays the firmware version of the module.
User interface	Positive integer

5.5.3 "Display module" submenu

Navigation   System → Information → Display module

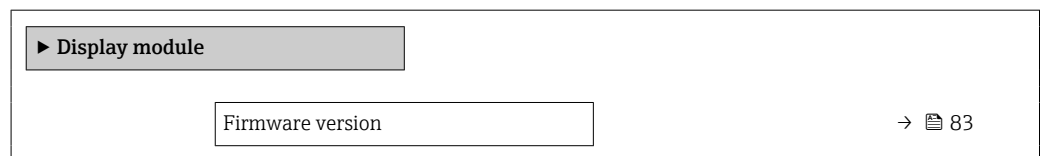

Firmware version










Navigation	 System → Information → Display module → Firmware version
Description	Displays the firmware version of the module.

User interface

Positive integer

5.6 "Display" submenu

Navigation  System → Display

► Display	
Language	→  85
Value 1 display	→  86
Value 2 display	→  86
Value 3 display	→  87
Value 4 display	→  87
Display damping	→  88
Rotation display	→  88
Brightness	→  88
Color scheme	→  88

Language

Navigation  System → Display → Language

Description Set display language.

- Selection
- English
 - Deutsch
 - Français
 - Español
 - Italiano
 - Nederlands
 - Portuguesa
 - Polski
 - русский язык (Russian)
 - Svenska
 - Türkçe
 - 中文 (Chinese)
 - 日本語 (Japanese)
 - 한국어 (Korean)
 - العربية (Arabic) *
 - Bahasa Indonesia *

* Visibility depends on order options or device settings

- ภาษาไทย (Thai) *
- tiếng Việt (Vietnamese) *
- čeština (Czech)

Value 1 display
**Navigation**

System → Display → Value 1 display

Description

Select the measured value to display in the first position on the local display.
The unit is set in the "System units" menu.

Selection

- Volume flow
- Mass flow
- Conductivity *
- Corrected conductivity *
- Temperature *
- Totalizer 1
- Totalizer 2
- Totalizer 3
- Noise *
- Coil current shot time *

Value 2 display
**Navigation**

System → Display → Value 2 display

Description

Select the measured value to display in the second position on the local display.
The unit is set in the "System units" menu.

Selection

- None
- Volume flow
- Mass flow
- Conductivity *
- Corrected conductivity *
- Temperature *
- Totalizer 1
- Totalizer 2
- Totalizer 3
- Noise *
- Coil current shot time *

* Visibility depends on order options or device settings

Value 3 display

**Navigation**

System → Display → Value 3 display

Description

Select the measured value to display in the third position on the local display.
The unit is set in the "System units" menu.

Selection

- None
- Volume flow
- Mass flow
- Conductivity *
- Corrected conductivity *
- Temperature *
- Totalizer 1
- Totalizer 2
- Totalizer 3
- Noise *
- Coil current shot time *

Value 4 display

**Navigation**

System → Display → Value 4 display

Description


Select the measured value to display in the fourth position on the local display.
The unit is set in the "System units" menu.

Selection

- None
- Volume flow
- Mass flow
- Conductivity *
- Corrected conductivity *
- Temperature *
- Totalizer 1
- Totalizer 2
- Totalizer 3
- Noise *
- Coil current shot time *

* Visibility depends on order options or device settings

Display damping




Navigation  System → Display → Display damping

Description Enter a time constant to set the reaction time of the display to fluctuations in the measured value (PT1 element).
The smaller the time constant, the faster the display reacts to fluctuations in the measured value.
If the time constant is set to 0, damping is deactivated.

User entry 0.0 to 999.9 s

Rotation display



Navigation  System → Display → Rotation display

Description Select rotation angle of the display text to optimize local display readability.

Selection

- Auto
- 0 degree
- 90 degree
- 180 degree
- 270 degree


Brightness

Navigation  System → Display → Brightness

Description Adjust brightness.

User entry 0 to 100 %

Color scheme



Navigation  System → Display → Color scheme


Description Select the preferred color scheme.

Selection

- Light
- Dark

5.7 "Software configuration" submenu

Navigation  System → Software config.

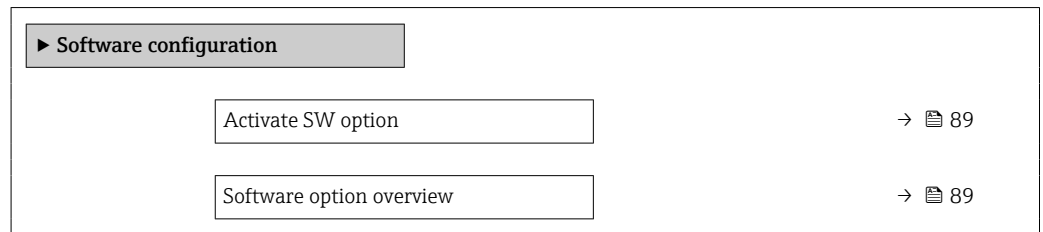

Activate SW option

Navigation  System → Software config. → Activate SW opt.

Description Enter application package code or code of the functionality ordered separately to activate it.

Additional information:

- If a measuring device was ordered with an add-on software option, the activation code is programmed into the measuring device ex factory.
- After entering the activation code: Check whether the new software option is displayed in the "Software option overview" parameter and therefore active.

NOTE

If an invalid code is entered the software options that have already been activated are invalidated!

Before entering a new activation code: Create a record of the existing activation code.

User entry Positive integer

Software option overview

Navigation  System → Software config. → SW option overv.

Description Displays all software options included in the order ex factory or ordered at a later date that have been enabled via the operating interface.

If a new software option is not displayed after entering the activation code, the code entered was inaccurate or invalid. In this case, contact the appropriate Endress+Hauser sales organization for assistance.

User interface

- Extended HistoROM
- Heartbeat Verification
- Heartbeat Monitoring

6 Explanation of abbreviated units

6.1 SI units

Process variable	Units	Explanation
Density	g/cm ³ , g/m ³	Gram/volume unit
	kg/dm ³ , kg/l, kg/m ³	Kilogram/volume unit
	SD4°C, SD15°C, SD20°C	Specific density: The specific density is the ratio of the density of the fluid to the density of water at a water temperature of 4 °C (39 °F), 15 °C (59 °F), 20 °C (68 °F).
	SG4°C, SG15°C, SG20°C	Specific gravity: The specific gravity is the ratio of the density of the fluid to the density of water at a water temperature of 4 °C (39 °F), 15 °C (59 °F), 20 °C (68 °F).
Mass	g, kg, t	Gram, kilogram, metric ton
Mass flow	g/s, g/min, g/h, g/d	Gram/time unit
	kg/s, kg/min, kg/h, kg/d	Kilogram/time unit
	t/s, t/min, t/h, t/d	Metric ton/time unit
Temperature	°C, K	Celsius, Kelvin
Volume	cm ³ , dm ³ , m ³	Cubic centimeter, cubic decimeter, cubic meter
	ml, l, hl, Ml Mega	Milliliter, liter, hectoliter, megaliter
Time	s, m, h, d, y	Second, minute, hour, day, year

6.2 US units

Process variable	Units	Explanation
Density	lb/ft ³ , lb/gal (us)	Pound/cubic foot, pound/gallon
	lb/bbl (us;liq.), lb/bbl (us;beer), lb/bbl (us;oil), lb/bbl (us;tank)	Pound/volume unit
Mass	oz, lb, STon	Ounce, pound, standard ton
Mass flow	oz/s, oz/min, oz/h, oz/d	Ounce/time unit
	lb/s, lb/min, lb/h, lb/d	Pound/time unit
	STon/s, STon/min, STon/h, STon/d	Standard ton/time unit
Temperature	°F, °R	Fahrenheit, Rankine
Volume	af	Acre foot
	ft ³	Cubic foot
	fl oz (us), gal (us), kgal (us), Mgal (us)	Fluid ounce, gallon, kilogallon, million gallon
	bbl (us;liq.), bbl (us;beer), bbl (us;oil), bbl (us;tank)	Barrel (normal liquids), barrel (beer), barrel (petrochemicals), barrel (filling tanks)
Volume flow	af/s, af/min, af/h, af/d	Acre foot/time unit
	ft ³ /s, ft ³ /min, ft ³ /h, ft ³ /d	Cubic foot/time unit
	fl oz/s (us), fl oz/min (us), fl oz/h (us), fl oz/d (us)	Fluid ounce/time unit
	gal/s (us), gal/min (us), gal/h (us), gal/d (us)	Gallon/time unit
	kgal/s (us), kgal/min (us), kgal/h (us), kgal/d (us)	Kilogallon/time unit

Process variable	Units	Explanation
	Mgal/s (us), Mgal/min (us), Mgal/h (us), Mgal/d (us)	Million gallon/time unit
	bbbl/s (us;liq.), bbl/min (us;liq.), bbl/h (us;liq.), bbl/d (us;liq.)	Barrel/time unit (normal liquids) Normal liquids: 31.5 gal/bbl
	bbbl/s (us;beer), bbl/min (us;beer), bbl/h (us;beer), bbl/d (us;beer)	Barrel /time unit (beer) Beer: 31.0 gal/bbl
	bbbl/s (us;oil), bbl/min (us;oil), bbl/h (us;oil), bbl/d (us;oil)	Barrel/time unit (petrochemicals) Petrochemicals: 42.0 gal/bbl
	bbbl/s (us;tank), bbl/min (us;tank), bbl/h (us;tank), bbl/d (us;tank)	Barrel/time unit (filling tank) Filling tanks: 55.0 gal/bbl
Time	s, m, h, d, y	Second, minute, hour, day, year
	am, pm	Ante meridiem (before midday), post meridiem (after midday)

6.3 Imperial units

Process variable	Units	Explanation
Density	lb/gal (imp), lb/bbl (imp;beer), lb/bbl (imp;oil)	Pound/volume unit
Volume	gal (imp), Mgal (imp)	Gallon, mega gallon
	bbl (imp;beer), bbl (imp;oil)	Barrel (beer), barrel (petrochemicals)
Volume flow	gal/s (imp), gal/min (imp), gal/h (imp), gal/d (imp)	Gallon/time unit
	Mgal/s (imp), Mgal/min (imp), Mgal/h (imp), Mgal/d (imp)	Mega gallon/time unit
	bbbl/s (imp;beer), bbl/min (imp;beer), bbl/h (imp;beer), bbl/d (imp;beer)	Barrel /time unit (beer) Beer: 36.0 gal/bbl
	bbbl/s (imp;oil), bbl/min (imp;oil), bbl/h (imp;oil), bbl/d (imp;oil)	Barrel/time unit (petrochemicals) Petrochemicals: 34.97 gal/bbl
Time	s, m, h, d, y	Second, minute, hour, day, year
	am, pm	Ante meridiem (before midday), post meridiem (after midday)

Index

A

Activate SW option (Parameter)	89
Active diagnostic IO-Link (Parameter)	25
Active diagnostics (Submenu)	25
Actual diagnostics (Parameter)	25
Alarm delay (Parameter)	36
Application (Menu)	45
Application specific tag (Parameter)	70
Assign behavior of diagnostic no. 043 (Parameter)	37
Assign behavior of diagnostic no. 230 (Parameter)	38
Assign behavior of diagnostic no. 231 (Parameter)	38
Assign behavior of diagnostic no. 302 (Parameter)	38
Assign behavior of diagnostic no. 376 (Parameter)	38
Assign behavior of diagnostic no. 377 (Parameter)	39
Assign behavior of diagnostic no. 832 (Parameter)	40
Assign behavior of diagnostic no. 833 (Parameter)	41
Assign behavior of diagnostic no. 834 (Parameter)	41
Assign behavior of diagnostic no. 835 (Parameter)	42
Assign behavior of diagnostic no. 842 (Parameter)	42
Assign behavior of diagnostic no. 937 (Parameter)	43
Assign behavior of diagnostic no. 938 (Parameter)	43
Assign behavior of diagnostic no. 961 (Parameter)	44
Assign behavior of diagnostic no. 962 (Parameter)	44
Assign process variable 1 to n (Parameter)	13, 54
Assign simulation process variable (Parameter)	33

B

Bluetooth (Parameter)	77
Bluetooth configuration (Submenu)	77
Brightness (Parameter)	88

C

Calibration (Submenu)	65
Calibration factor (Parameter)	66
Clear event list (Parameter)	32
Color scheme (Parameter)	88
Commissioning (Menu)	7
Communication established (Parameter)	77
Conductivity (Parameter)	46
Conductivity calibration factor (Parameter)	66
Conductivity damping time (Parameter)	60
Conductivity measurement (Parameter)	59
Conductivity temperature coefficient (Parameter)	60
Conductivity unit (Parameter)	12, 52
Configuration counter (Parameter)	73
Confirm Maintenance code (Parameter)	76
Connectivity (Submenu)	77
Corrected conductivity (Parameter)	46

D

Date / Time (Submenu)	78
Date/time (Wizard)	22
Define Maintenance code (Parameter)	76
Define Maintenance code (Wizard)	76
Density unit (Parameter)	11, 51
Device (Submenu)	80

Device alarm simulation (Parameter)	34
Device ID (Parameter)	69
Device identification (Wizard)	7
Device management (Submenu)	72
Device name (Parameter)	8, 80
Device reset (Parameter)	73
Device tag (Parameter)	72, 81
Diagnostic 1 IO-Link (Parameter)	29
Diagnostic 2 IO-Link (Parameter)	29
Diagnostic 3 IO-Link (Parameter)	30
Diagnostic 4 IO-Link (Parameter)	31
Diagnostic 5 IO-Link (Parameter)	31
Diagnostic configuration (Submenu)	36
Diagnostic event simulation (Parameter)	34
Diagnostic list (Submenu)	28
Diagnostic settings (Submenu)	36
Diagnostics (Menu)	24
Diagnostics 1 (Parameter)	28
Diagnostics 2 (Parameter)	29
Diagnostics 3 (Parameter)	30
Diagnostics 4 (Parameter)	30
Diagnostics 5 (Parameter)	31
Display (Submenu)	85
Display (Wizard)	19
Display damping (Parameter)	22, 88
Display module (Submenu)	83
Document	
Target group	4

E

ECC duration (Parameter)	67
ECC interval (Parameter)	67
ECC polarity (Parameter)	68
ECC recovery time (Parameter)	67
Electrode cleaning cycle (Parameter)	67
Electrode cleaning cycle (Submenu)	66
Electronics (Submenu)	37
Empty pipe adjust value (Parameter)	19, 63
Empty pipe detection (Parameter)	19, 63
Empty pipe detection (Submenu)	62
ENP version (Parameter)	82
Enter access code (Parameter)	75
Event logbook (Submenu)	32
Extended order code 1 (Parameter)	82
Extended order code 2 (Parameter)	82
Extended order code 3 (Parameter)	82

F

Filter options (Parameter)	32
Firmware version (Parameter)	8, 81, 83
Fixed density (Parameter)	61
Flow damping (Parameter)	16, 59
Flow override (Parameter)	59
Full pipe adjust value (Parameter)	19, 64
Function tag (Parameter)	70

G

Guidance (Menu) 7

H

Heartbeat Technology (Submenu) 35

I

Information (Submenu) 80

Installation direction (Parameter) 64

Integration time (Parameter) 65

IO-Link (Submenu) 69

L

Language (Parameter) 85

Last diagnostic IO-Link (Parameter) 26

Location tag (Parameter) 70

Locking status (Parameter) 72

Low flow cutoff (Parameter) 16, 61

Low flow cutoff (Submenu) 61

M

Manufacturer (Parameter) 83

Mass flow (Parameter) 45

Mass flow unit (Parameter) 11, 51

Measured value EPD (Parameter) 64

Measured values (Submenu) 45

Measuring conditions (Wizard) 15

Measuring period (Parameter) 65

Menu

Application 45

Commissioning 7

Diagnostics 24

Guidance 7

System 71

N

New adjustment (Parameter) 63

Nominal diameter (Parameter) 65

O

Off value low flow cutoff (Parameter) 17, 62

On value low flow cutoff (Parameter) 17, 62

Operating time (Parameter) 27

Operating time from restart (Parameter) 26

Order code (Parameter) 81

P

Preset value 1 to n (Parameter) 56

Pressure shock suppression (Parameter) 18

Previous diagnostics (Parameter) 26

Process (Submenu) 40

Process parameters (Submenu) 58

Process value (Parameter) 33

Process variable unit 1 to n (Parameter) 13, 54

Product ID (Parameter) 70

Product name (Parameter) 69

Properties (Submenu) 36

R

Reset all totalizers (Parameter) 53

Reset Maintenance code (Parameter) 75

Rotation display (Parameter) 88

S

Sensor (Submenu) 37, 58

Sensor adjustment (Submenu) 64

Sensor electronic module (ISEM) (Submenu) 83

Serial number (Parameter) 8, 81

Set date/time (Parameter) 23

Simulation (Submenu) 33

Software configuration (Submenu) 89

Software option overview (Parameter) 89

Submenu

Active diagnostics 25

Bluetooth configuration 77

Calibration 65

Connectivity 77

Date / Time 78

Device 80

Device management 72

Diagnostic configuration 36

Diagnostic list 28

Diagnostic settings 36

Display 85

Display module 83

Electrode cleaning cycle 66

Electronics 37

Empty pipe detection 62

Event logbook 32

Heartbeat Technology 35

Information 80

IO-Link 69

Low flow cutoff 61

Measured values 45

Process 40

Process parameters 58

Properties 36

Sensor 37, 58

Sensor adjustment 64

Sensor electronic module (ISEM) 83

Simulation 33

Software configuration 89

System units 49

Totalizer 47

Totalizer 1 to n 53

Totalizer handling 53

Totalizers 53

User management 74

System (Menu) 71

System units (Submenu) 49

System units (Wizard) 8

T

Target group 4

Temperature (Parameter) 47

Temperature damping time (Parameter) 60

Temperature unit (Parameter) 12, 52

Time format (Parameter) 22

Time zone (Parameter) 22

Timestamp (Parameter)	26, 29, 30, 31
Totalizer (Submenu)	47
Totalizer 1 to n (Submenu)	53
Totalizer 1 to n (Wizard)	13
Totalizer 1 to n control (Parameter)	56
Totalizer 1 to n failure behavior (Parameter)	15, 57
Totalizer 1 to n operation mode (Parameter)	14, 55
Totalizer 1 to n overflow (Parameter)	48
Totalizer 1 to n value (Parameter)	47
Totalizer handling (Submenu)	53
Totalizers (Submenu)	53

U

User management (Submenu)	74
User role (Parameter)	74

V

Value 1 display (Parameter)	20, 86
Value 2 display (Parameter)	20, 86
Value 3 display (Parameter)	21, 87
Value 4 display (Parameter)	21, 87
Vendor name (Parameter)	69
Volume flow (Parameter)	46
Volume flow unit (Parameter)	9, 49

W

Wizard	
Date/time	22
Define Maintenance code	76
Device identification	7
Display	19
Measuring conditions	15
System units	8
Totalizer 1 to n	13

Z

Zero point (Parameter)	66
----------------------------------	----



71758448

www.addresses.endress.com
