


HAZARDOUS LOCATION


Class I, Div. 1, Groups A, B, C, D
Class I, Zone 0, Ex ia IIC Ga
Class II, Div. 1, Groups E, F, G
Class III

F-type housing:
IS / II, III / 1/A, B, C, D, E, F, G

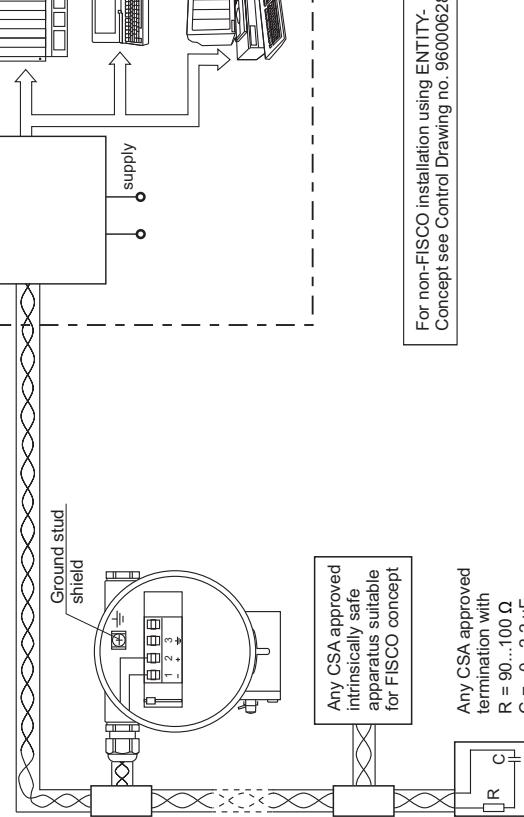


NON HAZARDOUS LOCATION

Any CSA approved associated apparatus suitable for FISCO concept

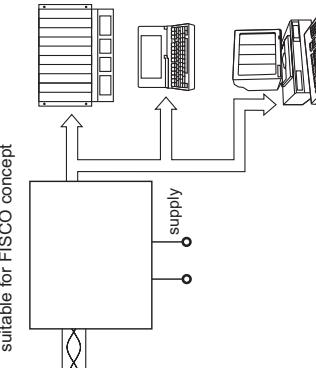

For non-FISCO installation using ENTITY-Concept see Control Drawing no. 960006281

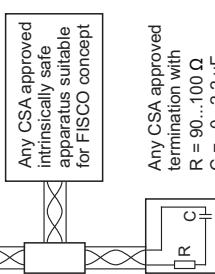

Intrinsically safe installation: **FISCO-Concept**
Intrinsically Safe (Ex ia). Class I, Div. 1, Groups A, B, C, D, Class II, Div. 1, Groups E, F, G

Hazardous Location Installation
1. The FISCO Concept allows interconnection of intrinsically safe apparatus to associated apparatus not specifically examined in such combination. The criteria for interconnection is that the voltage (U_0 or V_{max}), the current (I_0 or I_{max}) and (P_0 or P_{max}) which intrinsically safe apparatus can receive and remain intrinsically safe, considering faults, must be equal or the power greater than the voltage (U_0 or V_{oc} or V_i) the current (I_0 or I_{sc} or I_i) and the power (P_0 or P_{oc}) levels which can be delivered by the associated apparatus, considering faults and application factors. In addition, the maximum unprotected capacitance (C) and inductance (L) of each apparatus (other than the termination) connected to the fieldbus must be less than or equal to 5 nF and $10\text{ }\mu\text{H}$ respectively. In each segment only one active device, normally the associated apparatus, is allowed to provide the necessary energy for the fieldbus system. The voltage (U_0 or V_{oc} or V_i) of the associated apparatus has to be limited to the range of 14 V to 24 Vdc . All other equipment connected to the bus cable has to be passive, meaning that they are not allowed to provide energy to the system, except to a leakage current of $50\text{ }\mu\text{A}$ for each connected device. Separately powered equipment needs a galvanic isolation to assure that the intrinsically safe fieldbus circuit remains passive.

The cable used to interconnect the devices needs to have the parameters in the following range:
loop resistance R : $15 \dots 150\text{ }\Omega/\text{km}$
inductance per unit length L : $0.4 \dots 1.0\text{ mH/km}$
capacitance per unit length C : $80 \dots 200\text{ }\text{pF/km}$
 $C = C_{line} + 0.5 C_{shield}$, if both lines are floating or $C = C_{line} + C_{shield}$, if the screen is connected to one line.
 $R = 90 \dots 100\text{ }\Omega$, $C = 0 \dots 2.2\text{ }\mu\text{F}$.

At each end of the trunk cable an approved infallible line termination with the following parameters is suitable:
 $R = 90 \dots 100\text{ }\Omega$, $C = 0 \dots 2.2\text{ }\mu\text{F}$.
One of the allowed terminations might already be integrated in the associated apparatus. The number of passive devices connected to the bus segment is not limited due to I.S. reasons. If the above rules are respected, up to a total length of 1000 m (sum of the length of trunk cable and all spur cables), the inductance and capacitance of the cable will not impair the intrinsic safety of the installation.

2. The cable used to interconnect the devices needs to have the parameters in the following range:
loop resistance R : $15 \dots 150\text{ }\Omega/\text{km}$
length of spur cable: $\leq 30\text{ m}$
length of trunk cable: $\leq 1\text{ km}$
length of splice: $\leq 1\text{ m}$
3. The installation must be in accordance with the Canadian Electrical Code (CEC).
4. Warning: Substitution of components peut compromettre la sécurité intrinsèque.
5. CSA certified apparatus must be installed in accordance with manufacturer instructions and must meet the following conditions: $U_0/V_{oc} \leq U/V_{max}$ and $I_0/I_{sc} \leq I/I_{max}$ and $P_0/P_{oc} \leq P/P_{max}$.
Prosonic FMU40/41/42/44 with electronic insert for PROFIBUS PA or FOUNDATION Fieldbus (FISCO-Model):

$U_0/V_{max} [\text{V}]$	$I_0/I_{max} [\text{mA}]$	$P_0/P_{max} [\text{W}]$	$C_1 [\text{nF}]$	$L_1 [\mu\text{H}]$	Leakage [μA]
17.5	500	5.5	≤ 5	≤ 10	≤ 50

Area of application

The compact instruments are suitable for use in areas subject to explosion caused by gases, vapours or mists.

Permissible ambient temperature:

Electronics: intrinsically safe, 'F'-type enclosure:
Sensors: (FMU40, FMU41, FMU42, FMU44);
-40...+80 °C (-40...+176 °F)
-40...+80 °C (-40...+176 °F)

Permissible process / ambient temperature and temperature code:

Temperature code of FMU40/41/42/44	Permissible medium temperature (flange)	Permissible ambient temperature of electronics compartment as a function of medium temperature (sensor)
T6	+60 °C	+60 °C
T5	+80 °C	+75 °C
T4	+80 °C	+80 °C

In case of FMU44 avoid electrostatic charge at the sensor (e.g. do not rub with dry cloth; do not install within the filling curtain).

For Class II and III, Div. 1:

Warning: Keep covers tight when explosive dust atmosphere is present.
Avertissement : Garder les couvercles bien fermés en présence d'une atmosphère poussiéreuse explosive.

Intrinsically safe installation - Avant de déconnecter l'équipement, couper le courant ou s'assurer que l'emplacement désigne non dangereux.

Warning: Explosion hazard - Substitution of components may impair suitability for Class I, Div. 2.

Avertissement : Risque d'explosion - La substitution de composants peut rendre ce matériel inacceptable pour les emplacements de Class I, Div. 2.

3. The Prosonic M may be provided with an external connector which provides non-incendive field wiring circuits for connection to CSA certified Endress+Hauser Remote Display, Type FHX40. The FHX40 is for use in Class I hazardous locations only and has a T-code of T5 at max. ambient 75 °C. Refer to safety instructions of the external display unit FHX40.

4. Internal CDI connector provides intrinsically safe circuits for connection to CSA certified Endress+Hauser Service Interface, type Commubox FXA193 with ToF-Cable from Endress+Hauser. FXA193 must be located in the non-hazardous area. Refer to safety instructions of the Commubox FXA193.

XAO2000F-D/00/EN/01.19
CCS/FM10
CSA/D 29.05.19



CSA Control Drawing
960006279 D
Prosonic M
FMU40, FMU41, FMU42, FMU44
PROFIBUS PA, FOUNDATION Fieldbus
FISCO-installation

71463314


Endress+Hauser

People for Process Automation

HAZARDOUS LOCATION

Class I, Div. 1, Groups A, B, C, D
 Class I, Zone 0, Ex ia IIC Ga
 Class II, Div. 1, Groups E, F, G
 Class III

'F'-type housing:
 IS / II.III / '1/A, B, C, D, E, F, G

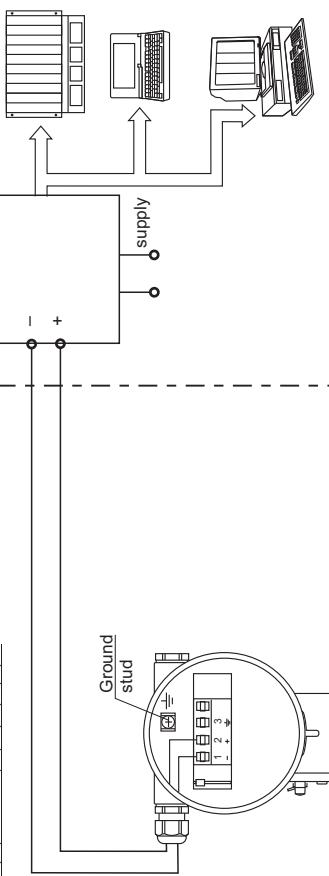

NON HAZARDOUS LOCATION

Notes:

Intrinsically safe installation

Intrinsically Safe (Ex ia), Class I, Div. 1, Groups A, B, C, D, Class II, Div. 1, Groups A, B, C, D, Class II, Div. 1, Groups E, F, G

Hazardous Location Installation

1. Control room equipment may not use or generate over 250V_{RMS}.

2. The installation must be in accordance with the Canadian Electrical Code (CEC).

3. Warning: Substitution of components may impair intrinsic safety.

4. Ex ia (S) is defined as intrinsically safe / sécurité intrinsèque.

5. For entity installation use CSA certified safety barrier or other associated equipment that satisfy the following conditions: with $U_o / V_{oc} \leq U_{max}$, $I_o / I_{sc} \leq I_{max}$, $C_o / C_a \geq C_i + C_{cable}$, $L_o / L_a \geq L_i + L_{cable}$

U_i / V_{max} [V]	I_i / I_{max} [mA]	P_i / P_{max} [W]	C_i / nF	$L_i / \mu H$
or 17.5	500	5.5	≤ 5	≤ 10
24.0	250	1.2	≤ 5	≤ 10

6. Caution: Use only supply wires suitable for 5K above surrounding temperature.
 Utiliser des fils de l'alimentation qui conviennent à une température de 5K au-dessus de la température ambiante.

7. Install barrier / associated apparatus in accordance with manufacturer's instructions.

8. The polarity for connecting + (2) and - (1) is of no importance due to an internal rectifier.

9. The Prosonic M may be provided with an external connector which provides intrinsically safe circuits for connection to a CSA certified Endress+Hauser Remote Display, Type FHx40. The FHx40 is for use in Class I hazardous locations only and has a T-code of T5 at max. ambient 75 °C. Refer to safety instructions of the external display unit FHx40.

10. Internal CDI connector provides intrinsically safe circuits for connection to CSA certified Endress+Hauser Service Interface, type Commubox FXA193 with ToF-Cable from Endress+Hauser. FXA193 must be located in the non-hazardous area. Refer to safety instructions of the Commubox FXA193.

Non-Intrinsically safe installation

Class I, Div. 2, Groups A, B, C, D and Class II, III, Div. 1, Groups E, F, G, Hazardous Location Installation

1. Install per Canadian Electrical Code (CEC) using wiring methods described in the applicable Rules of Appendix J for the location of installation. Intrinsic safety barrier not required. Max. supply voltage 30V. For T-code see table.

2. Warning: Explosion Hazard - Do not disconnect equipment unless power has been switched off or the area is known to be non-hazardous.

Avertissement : Risque d'explosion - Avant de déconnecter l'équipement, couper le courant ou s'assurer que l'emplacement est désigné non dangereux.

Warning: Explosion hazard - Substitution of components may impair suitability for Class I, Div. 2.

Avertissement : Risque d'explosion - La substitution de composants peut rendre ce matériel incompatible pour les emplacements de Class I, Div. 2.

3. The Prosonic M may be provided with an external connector which provides non-intrinsically safe field wiring circuits for connection to a CSA certified Endress+Hauser Remote Display, Type FHx40. The FHx40 is for use in Class I hazardous locations only and has a T-code of T5 at max. ambient 75 °C. Refer to safety instructions of the external display unit FHx40.

4. Internal CDI connector provides non-intrinsically safe field wiring circuits for connection to CSA certified Endress+Hauser Service Interface, type Commubox FXA193 with ToF-Cable from Endress+Hauser. FXA193 must be located in the non-hazardous area. Refer to safety instructions of the Commubox FXA193.

For installation acc. FISCO-Concept
 see Control drawing no. 960006279

Temperature code of FMU40/41/42/44	Permissible medium temperature (flange)	Permissible ambient temperature of electronics compartment as a function of medium temperature (sensor)
T6	+60 °C	+60 °C
T5	+80 °C	+75 °C
T4	+80 °C	+80 °C

In case of FMU44 avoid electrostatic charge at the sensor (e.g. do not rub with dry cloth, do not install within the filling curtain).

For Class II and III, Div. 1:
 Warning: Keep covers tight when explosive dust atmosphere is present.
 Avertissement : Garder les couvercles bien fermés en présence d'une atmosphère poussiéreuse explosive.

XAO2000F-D/00/EN/01.19
 CCS/EMI
 CSA/D 29.05.19

CSA Control Drawing 960006281 D

Prosonic M
 FMU40, FMU41, FMU42, FMU44
 PROFIBUS PA, FOUNDATION Fieldbus
 ENTITY-installation

Endress+Hauser

People for Process Automation

