Technical Information **RN22**

Active barrier or signal doubler, HART-transparent



1- or 2-channel active barrier for separation of 0/4 to 20 mA standard signal circuits, optionally available as a signal doubler, 24 V DC. HARTtransparent

Application

- 1- or 2-channel active barrier or signal doubler
- Transmission and galvanic isolation of analog 0/4 to 20 mA signals, optionally intrinsically safe [Ex-ia] from the hazardous area
- Bidirectional transmission of digital HART communication signals
- Power supply for loop-powered transmitters, supply voltage > 16.5 V
- Transmission and galvanic isolation of 4-wire analog signals
- For safety-oriented applications up to SIL 2 (SC 3) in accordance with IEC61508 (optional)
- For ambient temperatures -40 to +60 °C (-40 to 140 °F)

Your benefits

- Input 0/4 to 20 mA, power-supplying or non power-supplying
- Output 0/4 to 20 mA, active or passive
- Connection lugs integrated on front for HART communicators
- Optional installation in Ex zone 2, "ec" explosion protection
- Simple and quick wiring with plug-in terminals, optional power supply via DIN rail bus connector
- Compact housing width: 12.5 mm (0.49 in)



Table of contents

Function and system design Product description Dependability	3 3 3
Input	3 3 3
Output Output data	3 3 4 4 4
Power supply Terminal assignment Connecting the supply voltage Performance characteristics Power supply failure Terminals Cable specification	4 4 4 5 5 5 5
Performance characteristics	5 5 5 5 5 5
Installation	6 6 6
Environment	6 6 6 6
Mechanical construction	7 7 7 7 7
Display and operating elements	8 8
Ordering information	8
Accessories	8 9 9
Certificates and approvals	9 9

Functional safety	. 9
Supplementary documentation	10
Brief Operating Instructions (KA)	10
Operating Instructions (BA)	10
Safety Instructions (XA)	10
Supplementary device-dependent documentation	10

Product description	Product design			
	Active barrier, 1-channel			
	 The active barrier is used for the transmission and galvanic isolation of 0/4 to 20 mA signals. The device has an active/passive current input to which a 2- or 4-wire transmitter can be directly connected. The output of the device can be operated actively or passively. The current signal is then available to the PLC / controller or to other instrumentation at plug-in screw terminals or optional push-in terminals. HART communication signals are transmitted bidirectionally by the device. Connecting points for connecting HART communicators are integrated into the front of the device. The device is optionally available as an "associated apparatus", which allows devices to be connected in Ex Zone 0/20 [ia] and operated in Ex Zone 2 [ec]. 2-wire transmitters are supplied with power, and transmit analog 0/4 to 20 mA measured values from the hazardous area to the non-hazardous area. These devices are accompanied by separate Ex documentation, which is an integral part of this manual. Compliance with the installation instructions and connection data in this documentation is mandatory! 			
	Active barrier, 2-channel			
	With the "2-channel" option, the device has a second channel, which is galvanically isolated from channel 1, while maintaining the same width. Otherwise, the function corresponds to the 1-channel device.			
	Active barrier as signal doubler			
	With the signal doubler option, the active barrier is used for the galvanic isolation of a 0/4 to 20 mA signal, which is transmitted to two galvanically isolated outputs.			
	 Output 1 is HART-transparent. HART communication signals are transmitted bidirectionally between the input and output 1. As output 2 contains a HART filter, only the galvanically isolated analog 4 to 20 mA signal is transmitted. 			
Dependability	We only provide a warranty if the device is installed and used as described in the Operating Instructions.			

Function and system design

Input


Version	The following versions are available: • 1-channel • 2-channel • Signal doubler		
Input data, measuring range	Input signal range (underrange / overrange)	0 to 22 mA	
	Function range, input signal	0/4 to 20 mA	
	Input voltage drop signal for 4-wire connection	< 7 V at 20 mA	
	Transmitter supply voltage	17.5 V ±1 V at 20 mA Open-circuit voltage: 24.5 V ±5 %	

Output


Output data	Output signal range (underrange / overrange)	0 to 22 mA
	Function range, output signal	0/4 to 20 mA

	Transmission behavior	1:1 to input signal	
	NAMUR NE 43	A current at the input that is valid according to NAMUR NE 43 is transmitted to the output (within the specified measuring uncertainty range)	
	Maximum load, active mode	≤ 500 Ω	
	Open-circuit voltage, active mode 17.5 V (± 5%)		
	Maximum load, passive mode	Rmax = (Uext - 2 V) / 0.022 A	
	External voltage, passive mode	Uext = 12 to 30 V	
	Transmissible communication protocols	HART	
Signal on alarm	Line break in input	Input 0 mA / output 0 mA	
	Line short circuit in input	Input > 22 mA/ output > 22 mA	
Ex connection data	See associated XA Safety Instructions		
Galvanic isolation	Power supply / input; power supply / output Input / output; output / output	Testing voltage: 3 000 V_{AC} 50 Hz, 1 min	
	Input / input	Testing voltage: 500 V _{AC} 50 Hz, 1 min	

Power supply

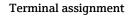

Quick wiring guide

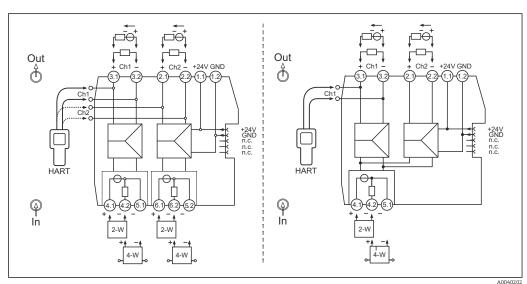

■ 1 Terminal assignment: 1- and 2-channel version (left), signal doubler (right)

HART communicators can be connected to the HART connecting points. Ensure an adequate external resistance ($\geq 230 \Omega$) in the output circuit.

Connecting the supply voltage

Power can be supplied via terminals 1.1 and 1.2 or via the DIN rail bus connector.

The device may only be powered by a power unit with an energy-limited circuit in accordance with UL/EN/IEC 61010-1, Section 9.4 and the requirements of Table 18.

Performance characteristics

Power supply ¹⁾

Fower supply	
Supply voltage	24 V _{DC} (-20% / +25%)
Supply current to the DIN rail bus connector	max. 400 mA
Power consumption at 24 V_{DC}	1-channel: \leq 1.5 W (20 mA) / \leq 1.6 W (22 mA) 2-channel: \leq 3 W (20 mA) / \leq 3.2 W (22 mA) Signal doubler: \leq 2.4 W (20 mA) / \leq 2.5 W (22 mA)
Current consumption at 24 $\rm V_{\rm DC}$	1-channel: \leq 0.07 A (20 mA) / \leq 0.07 A (22 mA) 2-channel: \leq 0.13 A (20 mA) / \leq 0.14 A (22 mA) Signal doubler: \leq 0.1 A (20 mA) / \leq 0.11 A (22 mA)
Power loss at 24 V_{DC}	$\begin{array}{l} \mbox{1-channel:} \le 1.2 \ \mbox{W} \ (20 \ \mbox{mA}) \ / \le 1.3 \ \mbox{W} \ (22 \ \mbox{mA}) \\ \mbox{2-channel:} \le 2.4 \ \mbox{W} \ (20 \ \mbox{mA}) \ / \le 2.5 \ \mbox{W} \ (22 \ \mbox{mA}) \\ \mbox{Signal doubler:} \le 2.1 \ \mbox{W} \ (20 \ \mbox{mA}) \ / \le 2.2 \ \mbox{W} \ (22 \ \mbox{mA}) \end{array}$

1) The data apply for the following operating scenario: input active / output active / output load 0 Ω . When external voltages are connected to the output, the power loss in the device may increase. The power loss in the device can be reduced by connecting an external output load.

Power supply failure To meet SIL and NE21 requirements, voltage interruptions of up to 20 ms must be bridged with a suitable power supply.

Terminals	Terminal design	Cable design	Cable cross-section
	Screw terminals Tightening torque: minimum 0.5 Nm/maximum 0.6 Nm	Rigid or flexible (Stripping length = 7 mm (0.28 in)	0.2 to 2.5 mm ² (24 to 14 AWG)
		Flexible with wire end ferrules (with or without plastic ferrule)	0.25 to 2.5 mm ² (24 to 14 AWG)
	Push-in spring terminals	Rigid or flexible (Stripping length = 10 mm (0.39 in)	0.2 to 2.5 mm ² (24 to 14 AWG)
		Flexible with wire end ferrules (with or without plastic ferrule)	0.25 to 2.5 mm ² (24 to 14 AWG)

Cable specification

A shielded cable is recommended for HART communication. Observe grounding concept of the plant.

Performance characteristics

Response time	Step response (10 to 90 %) ≤ 1 ms			
	Step response (10 to 90 %) signal doubler output 2 HART filter	< 50 ms		
Reference operating conditions	• Calibration temperature: +25 °C ±3 K (77 °F ±5.4 °F) • Supply voltage: 24 V_{DC} / 230 V_{AC} • Output load: 225 Ω • External output voltage (passive output): 20 V_{DC} • Warm-up: > 1 h			
Maximum measured error	Accuracies			
	Transmission error	< 0.1 % / of full scale value (< 20 $\mu A)$		
Temperature coefficient< 0.01 % /K				
Long-term drift	Max. ±0.1 %/year (of full scale value)			


Installation

Mounting location	The device is designed for installation on 35 mm (1.38 in) DIN rails in accordance with IEC 60715 (TH35).		
	 NOTICE When using in hazardous areas, the limit values of the certificates and approvals must be observed. 		
Installing a DIN rail device	The device can be installed in any position (horizontal or vertical) on the DIN rail without lateral clearance from neighboring devices. No tools are required for installation. The use of end brackets (type "WEW 35/1" or similar) on the DIN rail is recommended to fix the device.		
	If several devices are installed side by side, it is important to ensure that the maximum side wall temperature of 85 °C (185 °F) is not exceeded. If this cannot be guaranteed, mount the devices at a distance from one another or ensure sufficient cooling.		

Environment


Important ambient conditions	Ambient temperature range	−40 to 60 °C (−40 to 140 °F)	Storage temperature	−40 to 80 °C (−40 to 176 °F)	
	Degree of protection	IP 20	Overvoltage category	II	
	Pollution degree	2	Humidity	5 to 95 %	
	Altitude	≤ 2 000 m (6 562 ft)	Insulation class	Class III	
Maximum temperature change rate					
Shock and vibration resistance	Sinusoidal vibrations, in accordance with IEC 60068-2-6 • 5 to 13.2 Hz: 1 mm peak • 13.2 to 100 Hz: 0.7g peak				
Electromagnetic	CE compliance				
compatibility (EMC)	Electromagnetic compatibility in accordance with all the relevant requirements of the IEC/EN 61326 series and NAMUR Recommendation EMC (NE21). For details, refer to the Declaration of Conformity.				
	 Maximum measured error < 1% of measuring range Strong, pulse-like EMC interference can result in transient (< 1) deviations in the output signal (≥ ±1%). Interference immunity as per IEC/EN 61326 series, industrial requirements Interference emission as per IEC/EN 61326 series (CISPR 11) Group 1 Class A 				
	This unit is not intended for use in residential environments and cannot guarantee adeguate				

This unit is not intended for use in residential environments and cannot guarantee adequate protection of the radio reception in such environments.

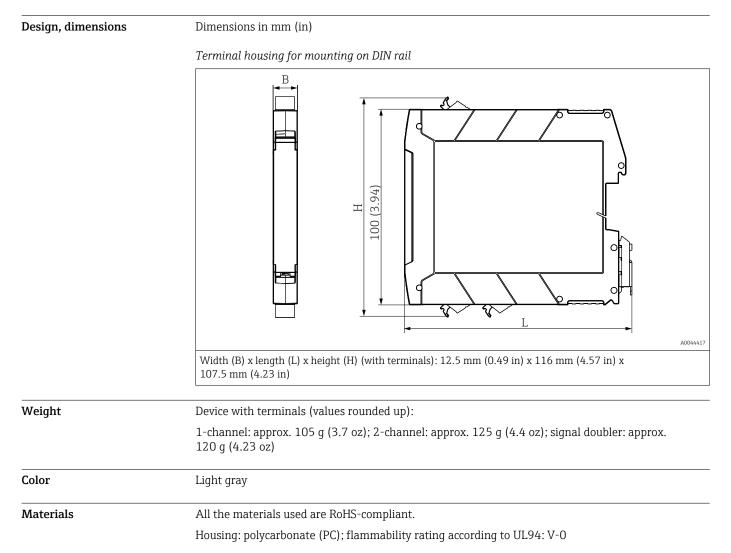

Mechanical construction

Display and operating elements

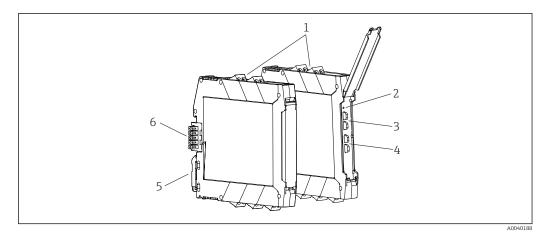

2 Display and operating elements

- 1 Plug-in screw or push-in terminal
- 2 Green LED "On", power supply
- 3 Connection lugs for HART communication (channel 1)
- 4 Connection lugs for HART communication (channel 2, option)
- 5 DIN rail clip for DIN rail mounting
- 6 DIN rail bus connector (optional)

Local operation

Hardware settings / configuration

No manual hardware settings are required at the device for commissioning.

Attention must be paid to the different terminal assignment when connecting 2/4-wire transmitters. At the output side, the connected system is detected and automatic switching takes place between the active and passive mode.

Ordering information

Detailed ordering information is available for your nearest sales organization www.addresses.endress.com or in the Product Configurator under www.endress.com :

- 1. Click Corporate
- 2. Select the country
- 3. Click Products
- 4. Select the product using the filters and search field
- 5. Open the product page

The Configuration button to the right of the product image opens the Product Configurator.

Product Configurator - the tool for individual product configuration

- Up-to-the-minute configuration data
- Depending on the device: Direct input of measuring point-specific information such as measuring range or operating language
- Automatic verification of exclusion criteria
- Automatic creation of the order code and its breakdown in PDF or Excel output format
- Ability to order directly in the Endress+Hauser Online Shop

Accessories

Various accessories, which can be ordered with the device or subsequently from Endress+Hauser, are available for the device. Detailed information on the order code in question is available from your

local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.

Device-specific accessories	Туре	Order code
	DIN rail bus connector 12.5 mm (x 1)	71505349
	System power supply	RNB22
	Power and error message module	RNF22

Service-specific accessories	Accessories

Accessories	Description
Configurator	 Product Configurator - the tool for individual product configuration Up-to-the-minute configuration data Depending on the device: Direct input of measuring point-specific information such as measuring range or operating language Automatic verification of exclusion criteria Automatic creation of the order code and its breakdown in PDF or Excel output format Ability to order directly in the Endress+Hauser Online Shop
	The Configurator is available on the Endress+Hauser website at: www.endress.com -> Click "Corporate" -> Select your country -> Click "Products" -> Select the product using the filters and search field -> Open product page -> The "Configure" button to the right of the product image opens the Product Configurator.
Accessories	Description
W@M	Life cycle management for your plant W@M offers assistance with a wide range of software applications over the entire process: from planning and procurement to the installation, commissioning and operation of the measuring devices. All the relevant information is available for every measuring device over the entire life cycle, such as the device status, device- specific documentation, spare parts etc. The application already contains the data of your Endress+Hauser device. Endress+Hauser also takes care of maintaining and updating the data records. W@M is available: Via the Internet: www.endress.com/lifecyclemanagement

Certificates and approvals

For the approvals available, see the Configurator on the specific product page: www.endress.com \rightarrow (search for device name)

CE mark	The product meets the requirements of the harmonized European standards. As such, it complies with the legal specifications of the EC directives. The manufacturer confirms successful testing of the product by affixing to it the CE-mark.
Functional safety	A SIL version of the device is optionally available. It can be used in safety equipment in accordance with IEC 61508 up to SIL 2 (SC 3).
	Please refer to Safety Manual FY01034K for the use of the device in safety instrumented systems according to IEC 61508.

	Supplementary documentation
	The following types of documentation are available in the Download Area of the Endress+Hauser website (www.endress.com/downloads):
	 For an overview of the scope of the associated Technical Documentation, refer to the following: W@M Device Viewer (www.endress.com/deviceviewer): Enter the serial number from nameplate Endress+Hauser Operations App: Enter the serial number from the nameplate or scan the 2D matrix code (QR code) on the nameplate
Brief Operating Instructions (KA)	Guide that takes you quickly to the 1st measured value The Brief Operating Instructions contain all the essential information from incoming acceptance to initial commissioning.
Operating Instructions (BA)	Your reference guide These Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.
Safety Instructions (XA)	Depending on the approval, the following Safety Instructions (XA) are supplied with the device. They are an integral part of the Operating Instructions.
	The nameplate indicates the Safety Instructions (XA) that are relevant to the device.
Supplementary device- dependent documentation	Additional documents are supplied depending on the device version ordered: Always comply strictly with the instructions in the supplementary documentation. The supplementary documentation is an integral part of the device documentation.



www.addresses.endress.com

