

Safety Instructions

Nivector FTI26

II 1/3 D Ex ta/tc IIIC T100°C Da/Dc



Nivector FTI26

Table of contents

Associated documentation	4
Supplementary documentation	4
Manufacturer's certificates	4
Manufacturer address	4
Other standards	4
Extended order code	5
Safety instructions: General	6
Safety instructions: Special conditions	6
Safety instructions: Installation	7
Temperature tables	8
Connection data	8

Associated documentation	<p>This document is an integral part of the following Operating Instructions:</p> <ul style="list-style-type: none">■ BA01830F/00■ BA01832F/00
Supplementary documentation	<p>Explosion-protection brochure: CP00021Z/11</p> <p>The Explosion-protection brochure is available:</p> <ul style="list-style-type: none">■ In the download area of the Endress+Hauser website: www.endress.com -> Downloads -> Brochures and Catalogs -> Text Search: CP00021Z■ On the CD for devices with CD-based documentation
Manufacturer's certificates	<p>UK Declaration of Conformity</p> <p>Declaration Number: UK00058</p> <p>The UK Declaration of Conformity is available: In the download area of the Endress+Hauser website: www.endress.com -> Downloads -> Declaration -> Type: UKCA Declaration -> Product Code: ...</p> <p>UKCA type-examination certificate</p> <p>Certificate number: CML 21UKEX1453X</p> <p>List of applied standards: See UK Declaration of Conformity.</p>
Manufacturer address	<p>Endress+Hauser SE+Co. KG Hauptstraße 1 79689 Maulburg, Germany</p> <p>Address of the manufacturing plant: See nameplate.</p>
Other standards	<p>Among other things, the following standards shall be observed in their current version for proper installation:</p> <ul style="list-style-type: none">■ IEC/EN 60079-14: "Explosive atmospheres - Part 14: Electrical installations design, selection and erection"■ EN 1127-1: "Explosive atmospheres - Explosion prevention and protection - Part 1: Basic concepts and methodology"

Extended order code

The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional information about the nameplate is provided in the associated Operating Instructions.

Structure of the extended order code

FTI26	–	*****	+	A*B*C*D*E*F*G*..
<i>(Device type)</i>		<i>(Basic specifications)</i>		<i>(Optional specifications)</i>

* = Placeholder

At this position, an option (number or letter) selected from the specification is displayed instead of the placeholders.

Basic specifications

The features that are absolutely essential for the device (mandatory features) are specified in the basic specifications. The number of positions depends on the number of features available. The selected option of a feature can consist of several positions.

Optional specifications

The optional specifications describe additional features for the device (optional features). The number of positions depends on the number of features available. The features have a 2-digit structure to aid identification (e.g. JA). The first digit (ID) stands for the feature group and consists of a number or a letter (e.g. J = Test, Certificate). The second digit constitutes the value that stands for the feature within the group (e.g. A = 3.1 material (wetted parts), inspection certificate).

More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

Extended order code: Nivector



The following specifications reproduce an extract from the product structure and are used to assign:

- This documentation to the device (using the extended order code on the nameplate).
- The device options cited in the document.

Device type

FTI26

Basic specifications

Position 1, 2 (Approval)		
Selected option		Description
FTI26	UO	UK Ex II 1/3 D Ex ta/tc IIIC T100°C Da/Dc

Position 3 (Power Supply, Output)		
Selected option		Description
FTI26	4	12-30VDC; 3-wire PNP
	7	IO-Link; DC-PNP

Optional specifications

No options specific to hazardous locations are available.

Safety instructions:
General

- Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device:
 - Be suitably qualified for their role and the tasks they perform
 - Be trained in explosion protection
 - Be familiar with national regulations
- Install the device according to the manufacturer's instructions and national regulations.
- Do not operate the device outside the specified electrical, thermal and mechanical parameters.
- Avoid electrostatic charging:
 - Of plastic surfaces (e.g. enclosure, sensor element, special varnishing, attached additional plates, ..)
 - Of isolated capacities (e.g. isolated metallic plates)


Safety instructions:
Special conditions

Permitted ambient temperature range at the electronics enclosure:
→  8, "Temperature tables".

In the event of additional or alternative special varnishing on the enclosure or other metal parts:

- Observe the danger of electrostatic charging and discharge.
- Do not rub surfaces with a dry cloth.

Safety instructions: Installation

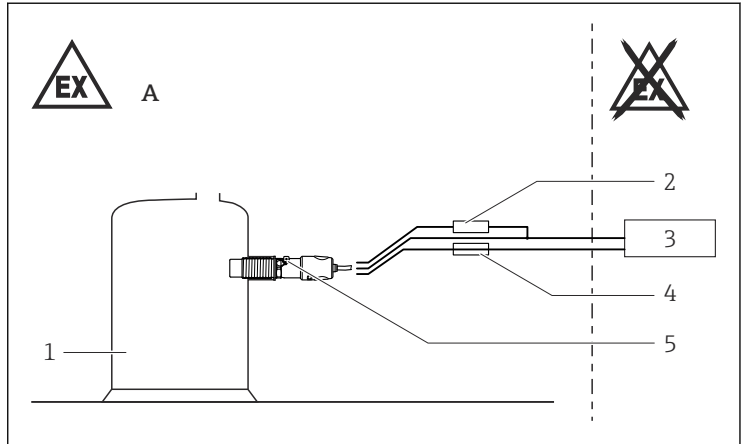

A0036221

1


- A Zone 22
 1 Tank; Zone 20
 2 Load:
 When using one output: 200 mA
 When using both outputs: 105 mA each
 3 Power supply or switching unit
 4 Fuse: 500 mA delayed
 5 Potential equalization


- Do not open in a potentially explosive dust atmosphere.
- Install the device to exclude any mechanical damage or friction during the application. Pay particular attention to flow conditions and tank fittings.
- Lay connecting cable and secure.
- Do not disconnect M12 plug connector when energized.

Potential equalization

Integrate the threaded sleeve into the local potential equalization.

Protective cover for hazardous locations

-  To ensure safety in the explosion-hazardous area:
 Mount the protective cover before operating the device.

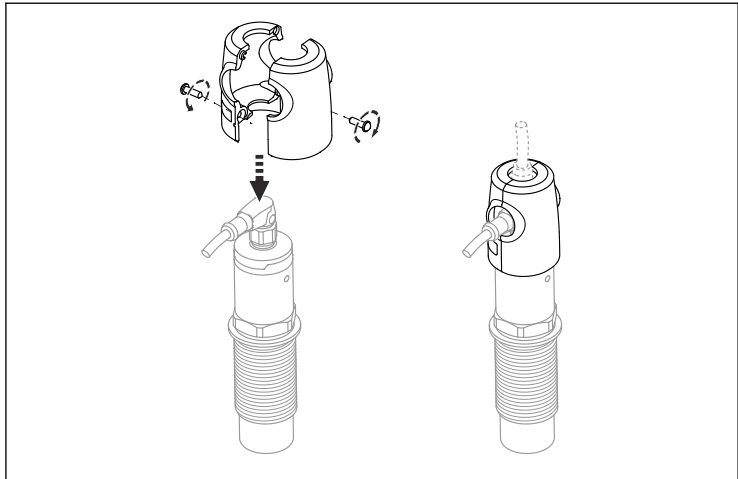

A0036220

Temperature tables

Maximum surface temperature (limited by fuse in the device)

100 °C

Permitted ambient temperature range

Zone 20: $-20\text{ °C} \leq T_a \leq +75\text{ °C}$ Zone 22: $-25\text{ °C} \leq T_a \leq +70\text{ °C}$

Connection data

Power supply

Operating voltage: 12 to 35 V

Connectable loads:

- When using one output: 200 mA
- When using both outputs: 105 mA each



71531974

www.addresses.endress.com
