Technical Information **Oil leak detector NAR300**

Oil leak detector equipped with two types of immobile sensors: conductive and tuning fork



Application

This system is designed to be installed in an oil dike pit in a tank or a sump pit near a pump yard, where it can provide the ultimate in leak detection function for petrochemicals or vegetable oils. Sensors with two distinct detection functions, conductive and vibronic, are used to closely monitor conditions. Highly accurate alarm recognition is attained through a two-stage logic process that ensures safe tank yard operation with minimal equipment configuration.

Flame proof system

Using transmitter NRR261 for outdoor installation, it is possible to connect directly to switch input from an existing level transmitter, for example, and send alarm output to a host controller.

Intrinsically safe system

Combining transmitter NRR262 for indoor installation with the sensor I/F Ex box for outdoor installation enables the configuration of an alarm system independent from tank gauging.

Features

- SIL2 certified
- New, proprietary sensors with twin functions provide reliable detection:
 - Conductive sensor: Distinguishes between water and other substances (oil and air)
 - Tuning fork sensor: Distinguishes between air and liquid (oil and water)
- Does not require any special attachments, even for empty pits
- No moving parts, long service life and reduced maintenance costs
- Safe and reliable fail-safe function with alarm output in the event of power failure, frozen pit water, etc.
- Detection mechanism that is not affected by the dielectric constant of the object to be detected as long as the oil is water-insoluble
- Improved for less susceptibility to material deposits
- Ex [ia] structure



Table of contents

Document information	
Documentation	
Function and system design	6 6
Operating conditions	11
Input and output Ex d [ia] transmitter NRR261 Ex [ia] transmitter NRR262	12 12 12
Power supply Float sensor NAR300 Sensor I/F Ex box Transmitter NRR261 Transmitter NRR262	13 13 13 13 13
Electrical Connection Procedure for wiring grounding cables NRR261-2/4/A/B/C wiring NRR262-2/4/A/B/C wiring NRR261-3/5 wiring Wiring diagram	14 15 17 19 21
Installation Installation conditions Mounting the NAR300 system	22 22 24
Environment	26 26
Process . Float sensor NAR300	27
Mechanical construction	28 28 31 31 32
Certificates and approvals CE mark Ex-approval Functional safety certification	33 33 33 34
Order information	35
Accessories	

U-bolt/cable gland (waterproof connection) 37

Document information

Symbols used

Safety symbols

A DANGER This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.

WARNING

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.

A CAUTION

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.

NOTICE

This symbol contains information on procedures and other facts which do not result in personal injury.

Electrical symbols

5

Alternating current

$\overline{\mathbf{x}}$

Direct current and alternating current

Direct current

╧

Ground connection

A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.

Protective earth (PE)

Ground terminals that must be connected to ground prior to establishing any other connections.

- The ground terminals are located on the interior and exterior of the device:
- Interior ground terminal: protective earth is connected to the mains supply.
- Exterior ground terminal: device is connected to the plant grounding system.

Tool symbols

06

Phillips head screwdriver

00 Flat blade screwdriver

06

Torx screwdriver

0 Allen key

Ŕ

Open-ended wrench

Symbols for certain types of information and graphics

Permitted

Procedures, processes or actions that are permitted

√ √ Preferred

Procedures, processes or actions that are preferred

Forbidden

Procedures, processes or actions that are forbidden

🚹 Tip

Indicates additional information

Reference to documentation

Reference to graphic

►

Notice or individual step to be observed

1., 2., 3. Series of steps

Result of a step

۲ Visual inspection

Operation via operating tool

Write-protected parameter

1, 2, 3, ... Item numbers

A, B, C, ... Views

 $\underline{\Lambda} \rightarrow \underline{\square}$ Safety instructions

Observe the safety instructions contained in the associated Operating Instructions

Specifies the minimum value of the temperature resistance of the connection cables

Documentation The fol

The following documents can be found in the Download area of our website (www.endress.com/downloads).

For an overview of the scope of the associated Technical Documentation, refer to the following: *W@M Device Viewer* (www.endress.com/deviceviewer): Enter the serial number from nameplate

Technical Information (TI)

Planning aid

The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.

Brief Operating Instructions (KA)

Guide that takes you quickly to the 1st measured value

The Brief Operating Instructions contain all the essential information from incoming acceptance to initial commissioning.

Operating Instructions (BA)

The Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.

Safety Instructions (XA)

Depending on the approval, the following Safety Instructions (XA) are supplied with the device. They are an integral part of the Operating Instructions.



The nameplate indicates the Safety Instructions (XA) that are relevant to the device.

Function and system design


The intrinsically safe Ex ia IIB T4 oil leak detector NAR300 system is available in three configurations for a variety of applications.

The TIIS specification certificate will differ depending on the NAR300 system combination. For more details, see "Certificates and approvals."

Flame-proof system
(integrated type) Ex d [ia] IIBThis system can handle the entire process, from oil leak detection to alarm output, in hazardous
outdoor locations.T4Ex [ia] specification is used in the circuitry from the NAR300 float sensor to the wiring terminal box
of Ex d [ia] transmitter NRR261 (the dedicated cable and cable entry in between are supplied by

of Ex d [ia] transmitter NRR261 (the dedicated cable and cable entry in between are supplied by Endress+Hauser). Ex d wiring is used from the main unit of Ex d [ia] transmitter NRR261, and it can be connected directly to the junction box that is installed in a yard or to the liquid level transmitter relay input. In this system, the maximum distance between the float sensor and the transmitter is 30 m (98.43 ft).

- TIIS: NAR300-11xxxx + NRR261-2xx
- JPN Ex: NAR300-21xxxx + NRR261-4xx
- ATEX: NAR300-A1xxxx + NRR261-Axx
- IECEx: NAR300-B1xxxx + NRR261-Bxx
- FM: NAR300-C1xxxx + NRR261-Cxx

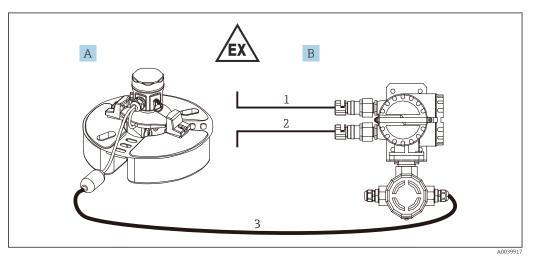

■ 1 System configuration 1

- A Float sensor NAR300-x1xxxx
- *B Ex d* [*ia*] *transmitter* NRR261 (*integrated type*)
- 1 Alarm output: Alarm/PLC/DCS, etc.
- 2 Power supply (AC/DC)
- 3 Ex [ia] dedicated connection cable (6 to 30 m (19.69 to 98.43 ft))

Intrinsically safe systemIn this system, Ex [ia] transmitter NRR262 is installed in a non-hazardous location, such as an
instrument room, and alarm output is imported by the indoor alarm panel and the host
instrumentation receiver.

The signal from the NAR300 float sensor is imported by the Ex [ia] wiring of transmitter NRR262 via sensor I/F Ex box. For the connection between the float sensor and the sensor I/F Ex box, a dedicated cable and cable entry are provided by Endress+Hauser.

- TIIS: NAR300-15xxxx + NRR262-2x
- JPN Ex: NAR300-25xxxx + NRR262-4x
- ATEX: NAR300-A5xxxx + NRR262-Ax
- IECEx: NAR300-B5xxxx + NRR262-Bx
- FM: NAR300-C5xxxx + NRR262-Cx

	A Float sensor NAR300-x5xxxx B Sensor I/F Ex box C Ex [ia] transmitter NRR262 1 Ex [ia] dedicated connection cable (6 to 30 m (19.69 to 98.43 ft)) 2 Cable for sensor I/F Ex box and transmitter (see process conditions) 3 Alarm output: Alarm/PLC/DCS, etc. 4 Power supply (AC/DC)
Flame-proof system (separate type) Ex d [ia] IIB T4	 This system can handle the entire process, from oil leak detection to alarm output, at hazardous outdoor locations. Ex [ia] specification is used in the circuitry from the NAR300 float sensor to the wiring terminal box of Ex d [ia] transmitter NRR261. The signal from the NAR300 float sensor is imported by the Ex [ia] wiring of transmitter NRR261 via sensor I/F Ex box. Ex d wiring is used from the main unit of Ex d [ia] transmitter NRR261, and it can be connected directly to the junction box that is installed in a yard or to the liquid level transmitter relay input. TIIS: NAR300-15xxxx + NRR261-3xx
	 JPN Ex: NAR300-25xxxx + NRR261-5xx For ATEX, IECEx and FM specifications, contact your Endress+Hauser Sales Center.

- 🛃 3 System configuration 3
- Float sensor NAR300-x5xxxx Α
- Sensor I/F Ex box В
- С *Ex d* [*ia*] *transmitter NR*261 (*separate type*)
- 1

1

- *Ex* [ia] dedicated connection cable (6 to 30 m (19.69 to 98.43 ft)) Cable for sensor *I/F* Ex box and transmitter (see process conditions) 2 3
- Alarm output: Alarm/PLC/DCS, etc. Power supply (AC/DC)
- 4

A0039919

e III

2

(III)

4

眧

Operating principles

Tuning fork sensor


The tuning fork sensor determines if there is liquid (water or oil, ON) or no liquid (air, OFF). In addition, it vibrates when the liquid is below the operating point (no liquid), and stops vibrating when the liquid is above the operating point (liquid is present).

Conductive sensor

The conductive sensor detects and determines whether there is conductive substance (water, OFF) or non-conductive substance (air or oil, ON) between the electrode and the main unit of the float.

Name	Water	Air	Oil
Tuning fork sensor	ON	OFF	ON
Conductive sensor	OFF	ON	ON

An alarm is activated when the tuning fork sensor and the conductive sensor are both ON.

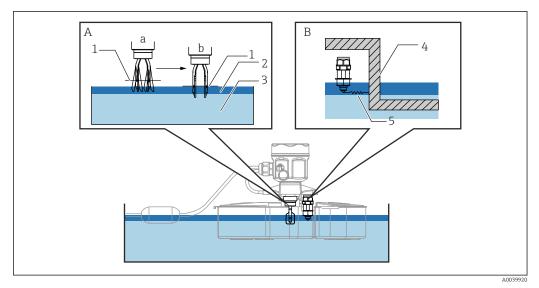

4 Principles of the sensors

- A Tuning fork sensor
- B Conductive sensor
- a Vibrating (liquid is below the operating point)
- *b* Vibration stopped (liquid is above the operating point)
- 1 Operating point
- 2 Oil
- 3 Water
- 4 Metal portion of the main unit of the float
- 5 Measuring conductivity

Detection in water-filled pits

- 1. The conductive sensor continuously monitors conductivity between the probe and the main unit of the float before the tuning fork sensor does.
- 2. Since the conductive sensor is normally detecting water, which is a conductive substance, it stays OFF and an alarm status is not recognized regardless of the status of the tuning fork sensor.
- 3. If an accident causes oil flow and an oil layer begins to form on the water surface, the conductive sensor will detect the non-conductive oil and the alarm status switches to ON.
- 4. Since the tuning fork sensor has already detected liquid and its alarm status is ON, this establishes an ON/ON logic.
- 5. An alarm is activated.

Detection in an empty pit (installed on a ground surface)

1. In an empty pit with no water, the alarm status is ON because the conductive sensor is monitoring non-conductive air.

2. However, since it is an empty pit and there is no liquid, the tuning fork sensor remains OFF, and therefore an alarm status is not recognized.

- 3. If the main unit of the float sensor floats on water surface, such as when water has entered the pit due to rainfall, water is now present and it will switch to detection logic.
- 4. If an accident causes oil infiltration, the tuning fork sensor will detect liquid following the conductive sensor, which is already ON, establishing an ON/ON logic.
- 5. An alarm is activated.

Operating principles of alarm activation

The oil leak detection signal detected by the NAR300 float sensor is converted to a current signal in the transmitter or the sensor I/F Ex box. After this, it is connected to the current detection circuit via the Ex [ia] safety barrier in the transmitter. In the current detection circuit, the presence or absence of an oil leak alarm signal is determined by the magnitude of electrical current values, and the alarm output relay is turned on or off by the operation delay circuit. The delay time can be set, and there is a trimmer for setting the delay time in the alarm delay circuit. A fail-safe function is also available for the relay contact output (refer to the "Alarm output operation table" on the next page).

Alarm output operation table

Between terminals	NRR262 between NC and COM	NRR262 between NO and COM
Condition	NRR261 between NC and COM terminal No. 11, 13	NRR261 between NO and COM terminal No. 13, 15
Non-alarm	Contact point is open	Contact point is closed
Oil leak alarm	Contact point is closed	Contact point is open
Power OFF	-	
Frozen liquid	-	

NAR300 current value		
Non-alarm	12 mA	
Oil leak alarm	16 mA	
Other trouble	< 10 mA or 14 mA <	

The only adjustment that can be made on the transmitter is the delayed activation time (ON delay) setting for the alarm output relay. Time is set on the delay trimmer. In NRR261, the delay trimmer can be found by turning off the power and opening the main unit's cover. In NRR262, the delay trimmer is found on the case surface. Match the setting to the necessary delay time in units of seconds. Delayed activation is used to prevent a false alarm by recognizing an alarm condition that continues over a certain period of time as an alarm while not outputting an alarm when the alarm condition stops within the delay time setting. This can be set to 30 seconds for TIIS specification, and up to a maximum of 15 seconds for all other specifications.



A response delay time in the detection circuit of approximately 6 seconds is always added to the delay time of the delay trimmer.

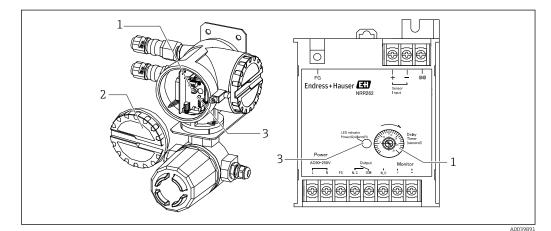


Image: Transmitter NRR261 (left) / Transmitter NRR262 (right)

- 2 Cover
- 3 LED power (green) / Alarm (red)


¹ Delay trimmer

 Operating conditions
 Detection sensitivity

 If the electrode tip is pulled out of the lower-layer water due to increased thickness of the oil layer, water may cling onto the electrode tip like an icicle even if the electrode tip is in oil. In this case, detection sensitivity may increase by 1 to 2 mm (0.04 to 0.08 in). When an accurate sensitivity check is required, apply a small amount of neutral detergent to the electrode tip to keep water from clinging to the electrode.

 • Water-filled pit: Set to 10 (0.39) ± 1 mm (0.04 in) with kerosene at the time of shipment from the factory

 • Empty pit: 50 (1.97) ± 5 mm (0.2 in) with kerosene



Set with oil (kerosene: specific gravity approx. 0.8), lower-layer water (water: specific gravity approx. 1.0), static level condition and/or without surface tension.

Pit water

Do not use in sea water

The oil leak detector is not designed for use in sea water. The following problems may occur if it is used in sea water:

- Failed or delayed alarm when overturned by waves
- Delayed alarm caused by generation of a bypass circuit between the conductive sensor and the float itself due to salt coating
- Corrosion of the float sensor caused by sea water

Other special pit water

If the float sensor is used in certain liquids such as a solvent blend, it may be corroded or damaged.

Pit water with high electrical resistance

Use in pit water with high electrical resistance, such as in a steam drain and pure water, may activate the alarm. Ensure that the pit water is at least 10 μ S/cm (not more than 100 k Ω ·cm).

Example: Pure water: 1 to 0.1 μ S/cm (1 to 10 MQ·cm)

Frozen pit water

If ice forms in the pit, the alarm may be triggered (fail-safe function). Implement anti-freeze measures to prevent freezing.

Gasoline application

If the object to be detected is gasoline, check with your Endress+Hauser Sales Center and order the gasoline application specifications under special specifications.

Ex d [ia] transmitter NRR261	Contact output	1SPDT
	Maximum contact rating	250 V _{AC} , 1 A, 100 VA 100 V _{DC} : 1 A, 25 W
	Fail-safe function	Fail safe function: When the power is off, when frozen (see "Alarm output operation table")
Ex [ia] transmitter NRR262	Contact output	1SPDT
	Maximum contact rating	250 V _{AC} , 1 A, 100 VA 100 V _{DC} : 1 A, 25 W
	Fail-safe function	Fail safe function: When the power is off, when frozen (see "Alarm output operation table")

Input and output

Float sensor NAR300	Power supply	Provided by a sensor I/F Ex box or NRR261 (NAR300 integrated type)
	I/O cable	Dedicated shielded cable (PVC) / with cable float (standard 6 m (19.69 ft))
Sensor I/F Ex box	Power supply	Provided by NRR261 or NRR262
	Cable entry	 NAR300 (float sensor) side: G1/2, with cable gland NRR261 or NRR262 (transmitter) side: G1/2, NPT1/2, M20
Transmitter NRR261	Power supply	 AC power type: 90 to 250 V_{AC}, 50/60 Hz
	i ower suppry	 DC power type: 22 to 26 V_{DC} (integrated power supply arrester)
	Maximum power consumption	AC power type: 20 VADC Power type: 2 W
	Power supply port	 G3/4 x2 (Ex d), G1/2 x1 (Ex ia) G1/2 x2 (Ex d), G1/2 x1 (Ex ia) NPT3/4 x2 (Ex d), NPT1/2 x1 (Ex ia) NPT1/2 x2 (Ex d), NPT1/2 x1 (Ex ia) M25 x2 (Ex d), M20 x1 (Ex ia) M20 (Ex d), M20 x1 (Ex ia) With TIIS Ex specified cable gland model SXBM
	Surge protection	Integrated (power supply arrester)
Transmitter NRR262	Power supply	 AC power type: 90 to 250 V_{AC}, 50/60 Hz DC power type: 22 to 26 V_{DC} (integrated power supply arrester AV3P-2)
	Maximum power consumption	AC power type: 20 VADC Power type: 2 W
	Surge protection	Integrated (power supply arrester)
	· · · · · · · · · · · · · · · · · · ·	

Power supply

Electrical Connection

Connect the external grounding terminal according to the "Class A grounding" standards (\leq 10 Ω) in the shortest implementable distance.

When using Ex [ia] float sensor NAR300 and Ex d [ia] transmitter NRR261, it is necessary to ground the NRR261 to a built-in safety barrier by following the procedure below (TIIS specifications only).


- The grounding cable for the safety barrier should be connected independently from grounding cables that are used for other purposes (lightning arrester), and it must be connected to a grounding point in accordance with "Class A grounding" standards in non-hazardous locations.
- Use a conductive grounding cable with a cross-sectional area of at least 2 mm². The communication cable shield of field devices with Class A grounding in an instrument room may also be used.

Class A grounding overview

Grounding resistance value	10 Ω
Grounding cable type	Metal cable with a tensile strength of at least 1.04 kN or an annealed copper cable with a diameter of at least 2.6 mm (0.1 in)

Procedure for wiring grounding cables


If performing Class A grounding from an Ex [ia] terminal instead of performing Class A grounding from an Ex d terminal, refer to the figure below.

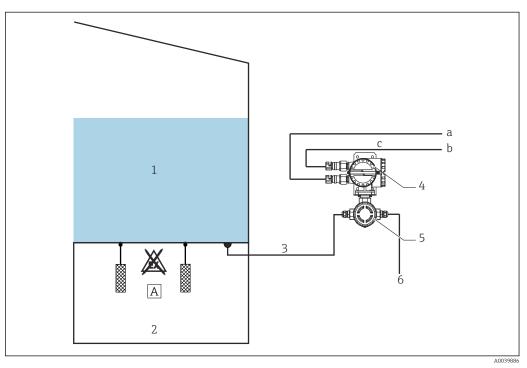

■ 6 Example of grounding transmitter NRR261

- A Non-hazardous location Class A grounding work (TIIS specification only)
- a Power supply
- b Alarm output
- c Ex d line
- 1 Tank
- 2 Underground
- 3 Grounding cable (TIIS specification only)
- 4 Ex d side terminal
- 5 Ex [ia] side terminal
- 6 From float sensor NAR300

NRR261-2/4/A/B/C wiring

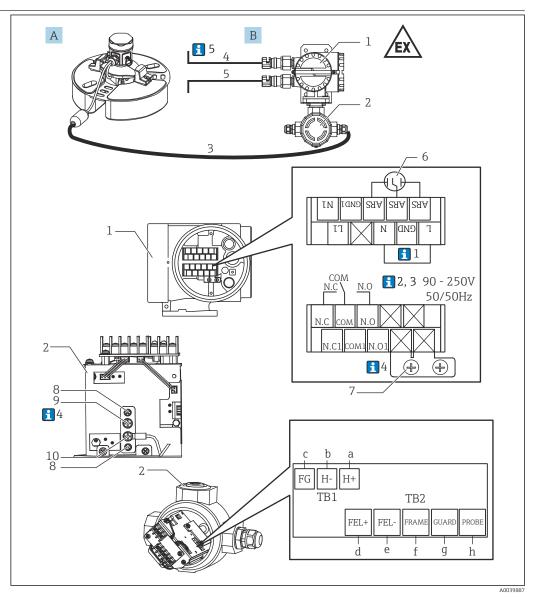

■ 7 Wiring of Ex d [ia] transmitter NRR261-2/A/B/C

- A Float sensor NAR300-x1xxxx
- *B Ex d* [*ia*] *transmitter NRR261* (*integrated type*)
- a Blue 1 (already wired at shipping)/Thread (M3)
- b Blue 2 (already wired at shipping)/Thread (M3)
- c Green/Thread (M3)
- d Red/Thread (M3)
- e Blue 3/Thread (M3)
- f Yellow/Thread (M3)
- g Black/Thread (M3)
- h White/Thread (M3)
- 1 Ex d terminal
- 2 Ex [ia] terminal
- 3 Ex [ia]-dedicated connection cable used (6 to 30 m (19.69 to 98.43 ft): Attached to the product depending on the option code)
- 4 Power supply: AC/DC
- 5 Alarm output: Alarm/PLC/DCS, etc.
- 6 Power supply arrester (installed)
- 7 Green-yellow: FG safety barrier GND (for Class A grounding)/Thread (M4) (TIIS specification only), see 4 below

- 8 Terminal fixing screws (M3) (TIIS specification only)
- 9 FG safety barrier GND (for Class A grounding)/Thread (M4) (TIIS specification only), see 4 below
- 10 Blue 4: Internal wiring from Zener barrier/Thread (M4)




1. The GND between L and N of NRR261 is connected when an FG-equipped AC cable is used.

2. When using a 22 to 26 V_{DC} power supply, terminal number L is + (positive) and N is - (negative).

3. In order to maintain the Ex [ia] performance, ensure that the power supply voltage does not exceed 250 V_{AC} 50/60 Hz and 250 V_{DC} during normal time and abnormal time, respectively.

4. Perform Class A grounding work at a non-hazardous location using one of the FG safety barrier GNDs on terminal number 7 or 9 (TIIS specification only).

5. The cable for connecting NAR300 and NRR261 (3) is included with NAR300. The alarm output cable (4) from NRR261 and the power cable (5) to NRR261 are not included and must be prepared by the customer. For detailed information on the connection cables, see the "Process conditions" section.

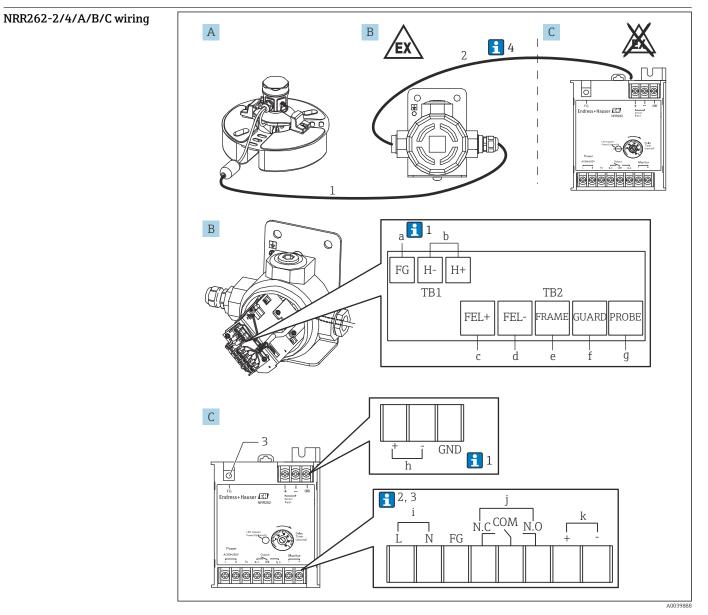

■ 8 Wiring of Ex [ia] transmitter NRR262-2/A/B/C

- A Float sensor NAR300-x5xxxx (sensor I/F Ex box is also included in the code)
- B Sensor I/F Ex box
- C Ex [ia] transmitter NRR262
- a Green/Thread (M3) (see 1 below)
- b Output to NRR262/Thread (M3)
- c Red/Thread (M3)
- d Blue/Thread (M3)
- e Yellow/Thread (M3)
- f Black/Thread (M3)
- g White/Thread (M3)
- h Input from sensor I/F Ex box/Thread (M3)
- *i* 90 to 250 V_{AC} 50/60 Hz/Thread (M3)
- j Alarm output/Thread (M3)
- k Check monitor output/Thread (M3)


- 1 Ex [ia]-dedicated connection cable used (6 to 30 m (19.69 to 98.43 ft): Attached to the product depending on the option code)
- 2 Sensor I/F Ex box and NRR262 cable (must be prepared by the customer)
- 3 For Class A grounding for intrinsic safety/Thread (M4)


I. Normally, only the FG of a sensor I/F Ex box is shielded; however, depending on the installation environment, either the GND of NRR262 alone or both the FG of the sensor I/F Ex box and the GND of NRR262 are connected.

2. When using a 22 to 26 V_{DC} power supply, terminal number L is + (positive) and N is - (negative).

3. In order to maintain the Ex [ia] performance, ensure that the power supply voltage does not exceed 250 V_{AC} 50/60 Hz and 250 V_{DC} during normal time and abnormal time, respectively.

4. Although cable (1) that connects NAR300 and a sensor I/F Ex box is included with the device, a cable (2) that connects a sensor I/F Ex box and NRR262 is not included, and it must be prepared by the customer. For detailed information on the connection cables, see the "Process conditions" section.



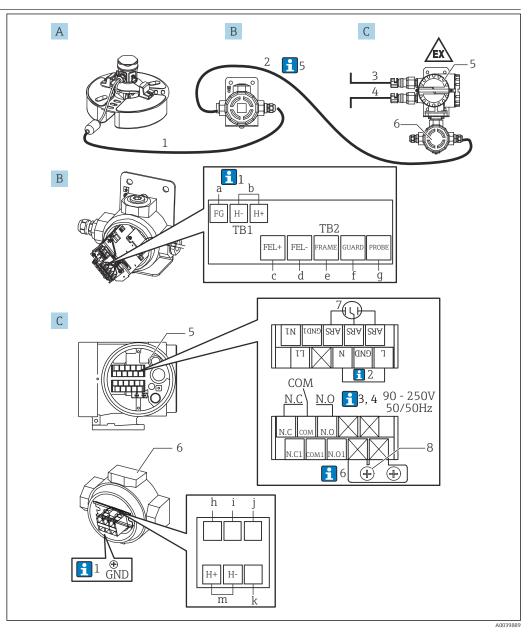

☑ 9 Wiring of Ex d [ia] transmitter NRR261-3

- A Float sensor NAR300-x5xxxx (sensor I/F Ex box is also included in the code)
- B Sensor I/F Ex box
- *C Ex d* [*ia*] *transmitter NRR261* (*separate type*)
- a Green/Thread (M3) (see 1 below)
- b Output to NRR261-3/5xx/Thread (M3)
- c Red/Thread (M3)
- d Blue 1/Thread (M3)
- e Yellow/Thread (M3)
- f Black/Thread (M3)
- g White/Thread (M3)
- *h* Blue 2/Thread (M4) (connected at the time of shipping)
- *i* Blue 3/Thread (M4) (connected at the time of shipping)
- *j* Blue 4/Thread (M4) (connected at the time of shipping) (TIIS specification only)
- k Class A grounding connection terminal (TIIS specification only)/Thread (M4)
- m Input from sensor I/F Ex box/Thread (M4)
- 1 Ex [ia]-dedicated connection cable used (6 to 30 m (19.69 to 98.43 ft): Attached to the product depending on the option code)
- 2 Sensor I/F Ex box and NRR261 cable (must be prepared by the customer)
- *3 Power supply: AC/DC*
- 4 Alarm output: Alarm/PLC/DCS, etc.
- 5 Ex d terminal

- 6 Intrinsically safe terminal
- 7 Power supply arrester (installed)/Thread (M3)
- 8 Green-yellow: FG safety barrier GND (for Class A grounding/TIIS specification only)/Thread (M4) (see 6 below)

1 Normally, only the FG of a sensor I/F Ex box is shielded; however, depending on the installation environment, either the GND of NRR262 alone or both the FG of the sensor I/F Ex box and the GND of NRR262 are connected.

2. The GND between L and N of NRR261 is connected when an FG-equipped AC cable is used.


3. When using a 22 to 26 V_{DC} power supply, terminal number L is + (positive) and N is - (negative).

4. In order to maintain the Ex [ia] performance, ensure that the power supply voltage does not exceed 250 V_{AC} 50/60 Hz and 250 V_{DC} during normal time and abnormal time, respectively.

5. Cable (1) for connecting NAR300 and the sensor I/F Ex box is included with NAR300. Cable (2) for connecting the sensor I/F Ex box to NRR261, the alarm output cable (3) from NRR261, as well as the power cable (4) to NRR261 are not included and must be prepared by the customer. For detailed information on the connection cables, see the "Process conditions" section.

6. Perform Class A grounding work at a non-hazardous location using one of the FG safety barrier GNDs on terminal number 8 or k (TIIS specification only).

Wiring diagram

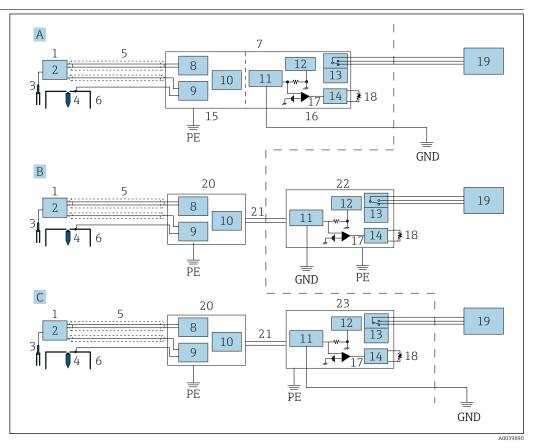

🔄 10 🛛 Wiring diagram

- *A Ex d*-type transmitter system (integrated type)
- *B* Intrinsically safe-type transmitter system (separate type)
- C Ex d [ia] transmitter system (separate type)
- PE Protection earth (protective grounding)

GND Class A grounding (TIIS specifications only)


- 1 Float sensor NAR300
- 2 Tuning fork driving unit
- 3 Tuning fork
- 4 Conductivity detection electrode (sensor)
- 5 Dedicated cable
- 6 Conductivity detection electrode (float)
- 7 Transmitter NRR261 (integrated type)
- 8 Liquid detection circuit
- 9 Conductivity detection circuit
- 10 Current output circuit
- 11 Safety barrier
- 12 Power supply circuit
- 13 Relay
- 14 Delay circuit
- 15 Ex [ia] circuit
- 16 Ex d circuit
- 17 Current detection
- 18 Delay trimmer
- 19 Alarm
- 20 Sensor I/F Ex box
- 21 Current signal
- 22 Transmitter NRR262
- 23 Transmitter NRR261 (separate type)



Although a Class A grounding cable can be shared with grounding of other safety barriers, it cannot be shared with grounding of a lightning arrester.

Installation

Installation conditions

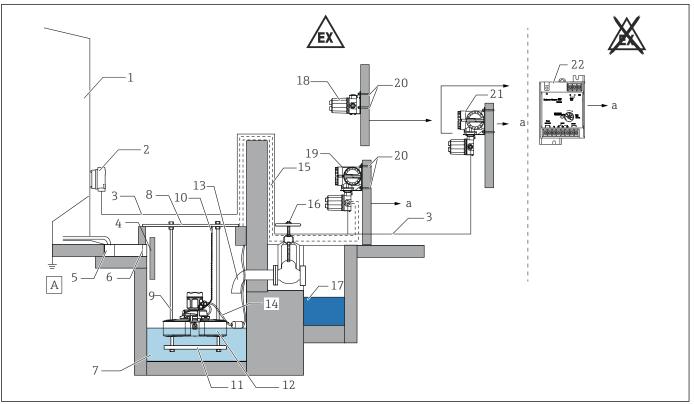

- Α Class A grounding work (TIIS specification only)
- Alarm output а
- 1 Tank
- 2 Junction box
- Ground wire (TIIS specification only) 3
- 4 Divider
- U-shaped groove 5
- 6 Screen
- 7 Pit
- 8 Pit cover
- 9 Float guide
- 10 Chain 11 Weight
- Float sensor NAR300 12
- 13
- Dispensing nozzle (100 mm (3.94 in) or above) 14 Dedicated cable (included with NAR300)
- 15 Cable
- 16 Valve

1

- 17 Drainage groove 18 Ex [ia] sensor I/F Ex box
- 19 NRR261 (Ex d [ia] transmitter)
- 20 U-bolts (JIS F 3022 B50)
- 21 NRR261 (Ex d [ia] transmitter)
- 22 NRR262 (Ex [ia] transmitter]
 - To ground the barrier, connect to the tank or use the remote cable's shield. For more on using the remote cable's shield, refer to "Electrical connection."


Installation/mounting-related precautions

- 1. Installation of debris protection, a roof or a cover is recommended to prevent debris or snow from entering the pit. If there is snow accumulation on the float sensor, each 50 g of snow accumulation will cause an increase in draft by 1 mm (0.04 in), resulting in reduced sensitivity. If there is a risk of ambient temperature exceeding 50 °C (122 °F), install a sun shade to protect the float sensor from direct sunlight. Mount a covering above the top of the pit inlet to avoid submerging the float sensor housing if the pit water overflows due to heavy rainfall, etc. If the float sensor becomes submerged, a malfunction or damage may result.
- 2. If the float sensor becomes off balance (tilted by approximately 3 ° or more), it may cause a malfunction or delayed alarm. To prevent this, use a float guide as much as possible and arrange the cables and chains strategically.
- 3. Install a screen at the pit inlet so that debris can be removed. Periodically inspect and clean the sensor and the pit as clogging caused by debris and foreign matter may result in a malfunction.
- 4. Attaching a chain to the side ring on the float sensor head ahead of time will improve convenience. However, each 50 g of increased load on the float will increase the draft by 1 mm (0.04 in), resulting in reduced sensitivity. Also, if a chain is used to prevent the float sensor from flowing out, do not yank on the chain during inspection, etc.
- 5. When the pit is completely filled with water, an oil layer will not form inside the pit even if oil spills out. Ensure that the water is drained as necessary so that an oil layer can form.
- 6. Do not yank on the cables or carry the device by holding on to the cables as this may cause a malfunction and/or poor waterproofing.
- 7. If the valve is constantly open, ensure that an oil layer can form such as by bending the tip of the discharge nozzle downwards by at least 100 mm (3.94 in). Failure to do so may cause oil to discharge from the pit before it can form a detectable layer on the water surface, resulting in a delayed alarm or detection failure. For pits without a discharge nozzle as shown above, install an oil-water divider so that an oil layer can form.
- 8. Install a divider to prevent large waves, cross-currents or water from splashing onto the float when liquid flows in.
- **9.** If the pit is too large, divide the pit with an oil separator. Oil leakage cannot be detected unless there is significant outflow of oil in proportion to the surface area.
- 10. Install NAR300, NRR261 and a sensor I/F Ex box at least 50 cm (1.64 ft) apart from each other.

Mounting the NAR300 system

Handling precautions

Always use both hands to hold the float when carrying NAR300. Do not lift or hold by any of the components shown in the figure below, and do not lift by the upper portion of the float sensor. In addition, do not rotate the housing. Doing so may cause device failure.

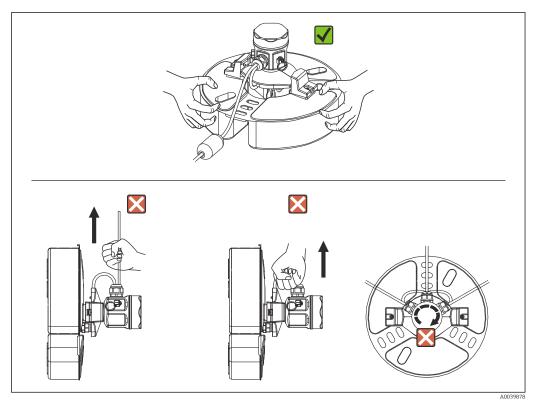


■ 12 Handling the NAR300

Float guide mounting

NAR300 may be mounted on a float guide that has been installed for existing products (CFD10, CFD30, UFD10, NAR291, NAR292).

If the float guide is shorter than 2 000 mm (78.74 in), either cut and use it or follow the protocol for when it is 2 000 mm (78.74 in) or longer and contact your Endress+Hauser Sales Center.

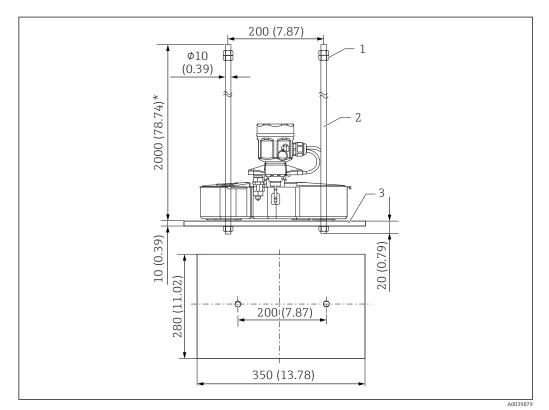

■ 13 NAR300/float guide. Unit of measurement mm (in)

- 1 Nut (M10)
- 2 Float guide
- 3 Weight

Environment

Protection class

Items	Description
Float sensor NAR300	
Sensor I/F Ex box	ID67 (for outside installation)
Transmitter NRR261	IP67 (for outside installation)
Transmitter NRR262	

Process

Float sensor NAR300

Items Description	
Conditions for detected substance	 Density 0.7 g/cm³ or higher and less than 1.0 g/cm³ Floats in water (if the density is 0.9 g/cm³ or higher then the viscosity should be 1 mPa·s or higher;water 1 mPa·s) Water-insoluble Non-conductive Liquid
Operating temperature	 Ambient temperature: -20 to 60 °C (-4 to 140 °F) Measured liquid temperature: -20 to 60 °C (-4 to 140 °F)
Conditions for water in pit	 Density 1.0 g/cm³ or higher and less than 1.13 g/cm³ (however, at a dynamic viscosity of 1 mm²/sec)¹⁾ Non-freezing Electric conductivity 10 μS/cm or higher (100 kΩ • cm or lower);however, this should be 1 μS/cm or higher in cases where the float is always floating in the pit water. Cannot be used by the sea or in locations where seawater may possibly ingress
Other	 Promptly remove any debris that sticks to the sensor. Do not let mud or other dry substances harden on the float sensor. Avoid installation conditions that cause the float sensor to tilt off-balance or change the draft line. Install wave protection walls to avoid crosscurrents and standing waves.

1) This will be accompanied by changes in sensitivity at a lower layer water specific gravity different from factory conditions during configuration, such as when using antifreeze, etc.


Sensor I/F Ex box / Transmitter NRR261/ NRR262

Items	Description
Connector cable (connection to transmitter NRR261/NRR262 from sensor I/F Ex box)	
Operating temperature	Ambient temperature: -20 to 60 °C (-4 to 140 °F)

Mechanical construction

NAR300 system dimensions

Dimensions of NAR300 float sensor

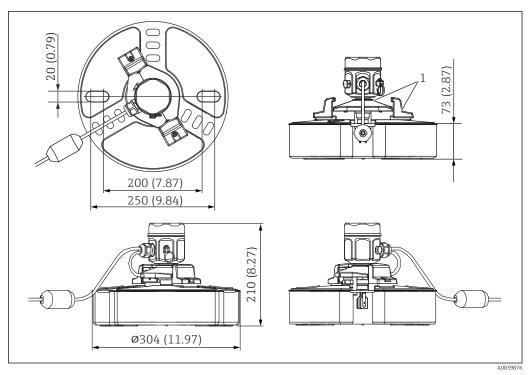

🖻 14 Outline of float sensor NAR300. Unit of measurement mm (in)


1 Float sensor cover

Dimensions of Ex d [ia] transmitter NRR261

Only NRR261 with TIIS and JPN Ex explosion-proof specifications are delivered with a cable gland (external diameter of compatible cables: φ 12 to 16 mm (0.47 to 1.02 in))

Use the order code of Ex d [ia] transmitter NRR261 to specify the electrical conduit connection port.

Normally, Ex d [ia] transmitter NRR261 is mounted on a tank yard's pipe and secured in place with a U-bolt (JIS F 3022 B 50 type). It can also be mounted directly onto wall surfaces (requires 4- ϕ 12 mm (0.47 in) holes and M10 securing nuts and bolts (not included in the delivery)).

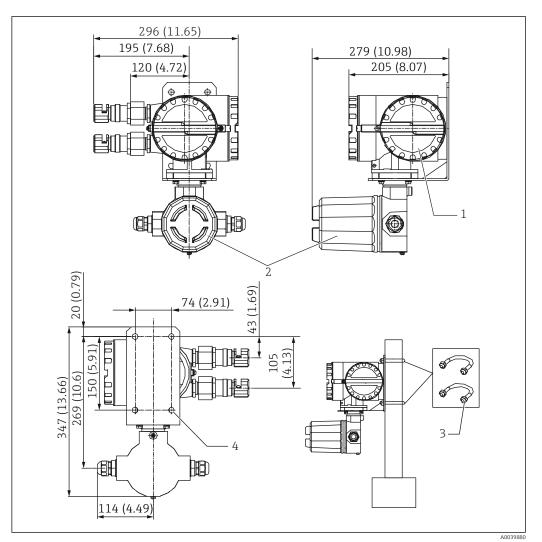


■ 15 Outline of NRR261. Unit of measurement mm (in)

- 1 Ex d side terminal
- 2 Ex [ia] side terminal
- 3 U-bolt (JIS F3022 B50 material: Iron (chromate), 2 nuts and 2 flat washers included)
- 4 4-φ12 holes

Dimensions of Ex [ia] transmitter NRR262

NRR262 is installed indoors, such as in instrument rooms, and it can be mounted easily with two M4 screws. In addition, "one-touch" snap-in mounting is possible using a DIN rail EN50022 (not included in the delivery). This rail-mounted method is beneficial in cases where multiple transmitters are mounted in series, and in cases where installation of additional transmitters is expected in the future.

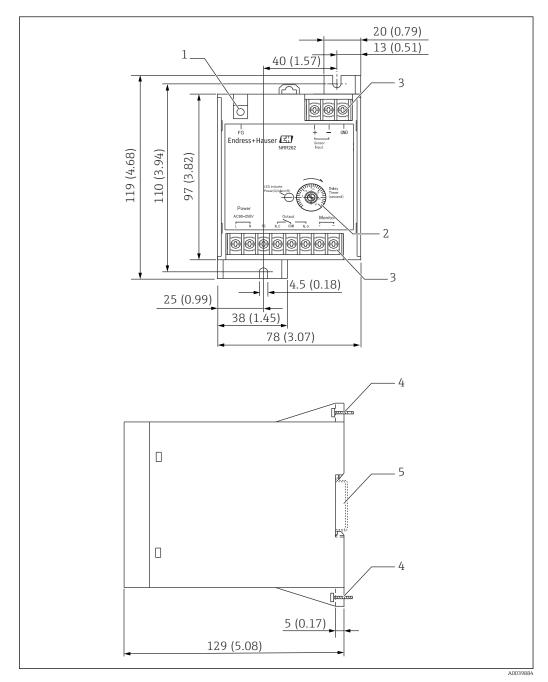


■ 16 Outline of NRR262. Unit of measurement mm (in)

- 1 Thread (M4) for intrinsic safety Class A grounding
- 2 Delay trimmer
- 3 Thread (M3)
- 4 Screw (M4)
- 5 DIN rail: EN50022-compliant

Dimensions of Ex [ia] sensor I/F Ex box

The Ex [ia] sensor I/F Ex box is used in combination with Ex d [ia] transmitter NRR261 or Ex [ia] transmitter NRR262 in order to convert signals from the float sensor into electric current signals. Normally, it is mounted on a tank yard's pipe and secured in place with a U-bolt (JIS F 3022 B 50 type). It can also be mounted directly onto wall surfaces (requires $4-\phi12 \text{ mm} (0.47 \text{ in})$ holes and M10 securing nuts and bolts (not included in the delivery)).

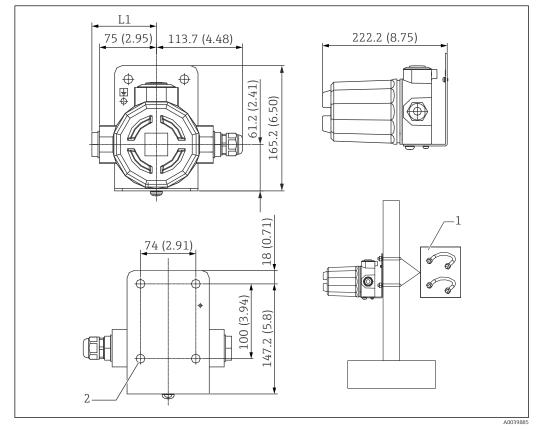

■ 17 Outline of Ex [ia] sensor I/F Ex box. Unit of measurement mm (in)

- L1 For G1/2, NPT1/2: 85 mm (3.35 in), for M25: 107 mm (4.21 in)
- 1 U-bolt (JIS F3022 B50 material: Iron (chromate), 2 nuts and 2 flat washers included)
- 2 4-φ12 mm (0.47 in) holes

Use the order code of float sensor NAR300 to specify the conduit connection port. When installing NAR300-15Axxx, however, specify NAR300-15AxxB since the electrical conduit connection port will be G1/2.

Weight of the NAR300 system	Float sensor NAR300	Approx. 2.5 kg (5.51 lb) (including the dedicated shielded cable (PVC) 6 m (19.69 ft)
	Ex [ia] sensor I/F Ex box	Approx. 3.2 kg (7.05 lb)
	Ex d [ia] transmitter NRR261	Approx. 10 kg (22.05 lb)
	Ex [ia] transmitter NRR262	Approx. 0.6 kg (1.32 lb)
Detection sensitivity	Float sensor NAR300	 Water-filled pit: Set to 10 (0.39) ± 1 mm (0.04 in) with kerosene at the time of shipment from the factory Empty pit: 50 (1.97) ± 5 mm (0.2 in) with kerosene

Wetted material

Wetted material: NAR300	 Float: SUS316L Conductive sensor: SUS316+PTFE Tuning fork sensor: SUS316L-equivalent 	
Non-wetted parts: Ex [ia] sensor I/F Ex box	Housing/cover: Aluminum casting	
Ex d [ia] transmitter NRR261	Housing/cover: Aluminum casting	
Ex [ia] transmitter NRR262	Housing: Plastic	


Certificates and approvals

 CE mark
 The measuring system meets the legal requirements of the applicable EC guidelines. Although it is listed in the relevant "EC declaration of conformity," it also meets the standards. Endress+Hauser warrants that the product has passed the tests by attaching the CE mark to it.

 Ex-approval
 The NAR300 system has the following four certificates and qualifications:


 • ATEX Certificate: FM.14ATEX0048X

- IECEx Certificate: IECEx FMG 14.0024X
- FM Certificate: 3049525
- JPN Ex Qualification: CML 18JPN8362X
- The TIIS specification certificate will differ depending on the NAR300 system combination.
 - In TIIS specification, the FTL qualification is separate.TIIS and JPN Ex devices cannot be mixed.

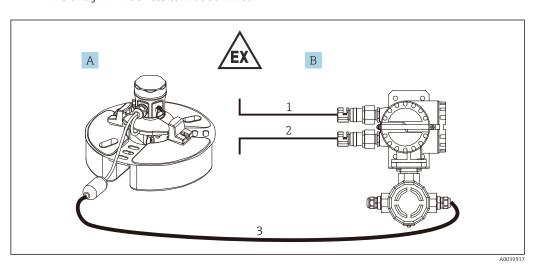


🗉 18 System configuration 1 (TIIS qualification: TC18322 (NAR300 + NRR261) / TC18327 (FTL)

- A Float sensor NAR300-x1xxxx
- *B Ex d* [*ia*] *transmitter NRR261* (*integrated type*)
- 1 Alarm output: Alarm/PLC/DCS, etc.
- 2 Power supply (AC/DC)
- 3 Ex [ia] dedicated connection cable (6 to 30 m (19.69 to 98.43 ft))

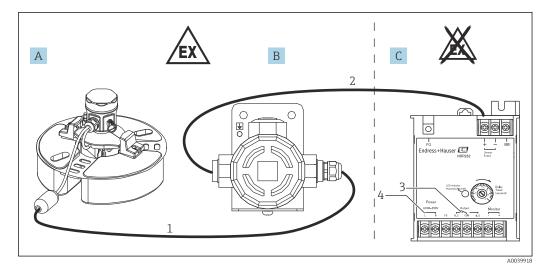

🖻 19 System configuration 2 (TIIS qualification: TC18324 (NAR300) / TC18327 (FTL) / TC18326 (NRR262))

- A Float sensor NAR300-x5xxxx
- B Sensor I/F Ex box
- C Ex [ia] transmitter NRR262
- 1 Ex [ia] dedicated connection cable (6 to 30 m (19.69 to 98.43 ft))
- 2 Cable for sensor I/F Ex box and transmitter (see process conditions)
- 3 Alarm output: Alarm/PLC/DCS, etc.
- 4 Power supply (AC/DC)

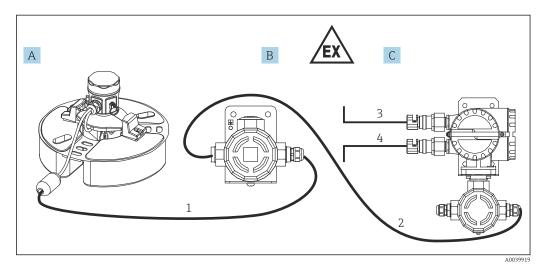

🗷 20 System configuration 3 (TIIS qualification: TC18324 (NAR300) / TC18327 (FTL) / TC18325 (NRR261))

- A Float sensor NAR300-x5xxxx
- B Sensor I/F Ex box
- *C Ex d* [*ia*] *transmitter NR*261 (*separate type*)
- 1 Ex [ia] dedicated connection cable (6 to 30 m (19.69 to 98.43 ft))
- 2 Cable for sensor I/F Ex box and transmitter (see process conditions)
- 3 Alarm output: Alarm/PLC/DCS, etc.
- 4 Power supply (AC/DC)

Functional safety certification

SIL2 IEC61508 (ATEX, IECEx, FM, JPN Ex)

For TIIS specifications, contact your Endress+Hauser Sales Center.

Order information


Detailed ordering information is available from the following sources:

- In the Product Configurator on the Endress+Hauser website: www.endress.com -> Click "Corporate"
 -> Select your country -> Click "Products" -> Select the product using the filters and search field ->
 Open product page -> The "Configure" button to the right of the product image opens the Product
 Configurator.
- From your nearest Endress+Hauser sales organization: www.addresses.endress.com
- Product Configurator the tool for individual product configuration
 - Up-to-the-minute configuration data
 - Depending on the device: Direct input of measuring point-specific information such as measuring range or operating language
 - Automatic verification of exclusion criteria
 - Automatic creation of the order code and its breakdown in PDF or Excel output format
 - Ability to order directly in the Endress+Hauser Online Shop

Accessories

Float guide

If you ordered a device that is equipped with a float guide, install the float horizontally. Remove any debris or stones so that the float sensor can land horizontally. The standard length of a float guide is 2 m (6.57 in); however, if you need a different length, contact your Endress+Hauser Sales Center.

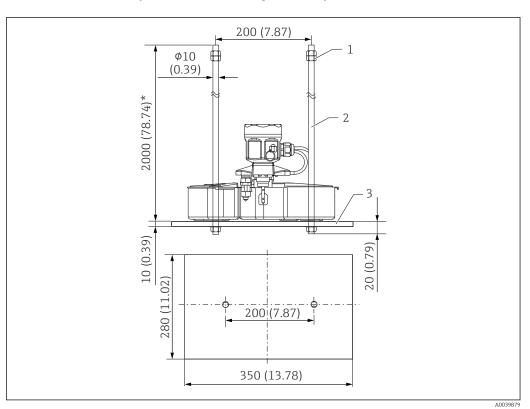

■ 21 Float guide. Unit of measurement mm (in)


- 1 Nut (M10)
- 2 Float guide
- 3 Weight


Name	Delivered quantity	Materials	
Float guide	2	SUS304	
Weight	1	Selectable as options from SS400 or SUS304	
Nut (M10)	6	SUS304	

U-bolt/cable gland (waterproof connection)

1

The U-bolt (JIS F3022 B50) is used when mounting a transmitter. Have a spare 50A (2B ϕ 60.5 mm (198.5 in)) pipe ready. Tighten and secure the cable gland after inserting the cable from NAR300.

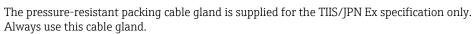

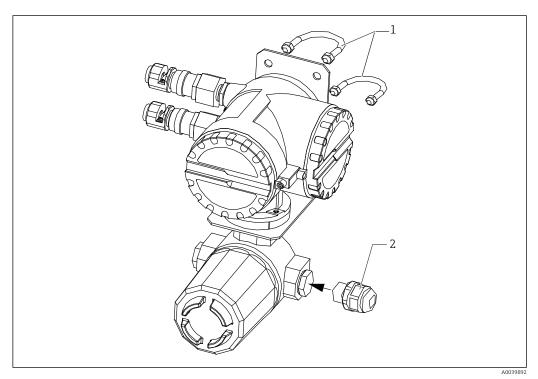

- ☑ 22 U-bolt/cable gland
- 1 U-bolts (JIS F 3022 B50)
- 2 Cable gland (waterproof connection)

Name		Delivered quantity	Materials
U-bolt		2	Iron (chromate)
U-bolt accessory	Nut	4	
	Flat washer	4	
Cable gland (waterproof connection)		1	Nylon



www.addresses.endress.com

