



Brief Operating Instructions F2058HRTD

4 to 20 mA RTD transmitter

These Instructions are Brief Operating Instructions; they do not replace the Operating Instructions included in the scope of supply.
Please refer to the Operating Instructions and other documentation provided by your supplier for detailed information.

Basic safety instructions

Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfil the following requirements:

- ▶ Trained, qualified specialists: must have a relevant qualification for this specific function and task
- ▶ Are authorized by the plant owner/operator
- ▶ Are familiar with federal/national regulations
- ▶ Before beginning work, the specialist staff must have read and understood the instructions in the manuals and supplementary documentation as well as in the certificates (depending on the application)
- ▶ Follow instructions and comply with basic conditions

The operating personnel must fulfil the following requirements:

- ▶ Are instructed and authorized according to the requirements of the task by the facility's owner-operator
- ▶ Follow the instructions in this manual


Intended use

The device is a universal and configurable temperature transmitter with a sensor input for resistance thermometers (RTD). The head transmitter version of the device is intended for mounting in a terminal head (flat face) as per DIN EN 50446. It is also possible to mount the device on a DIN rail using the optional DIN rail clip.

Mounting

Mounting requirements

Dimensions

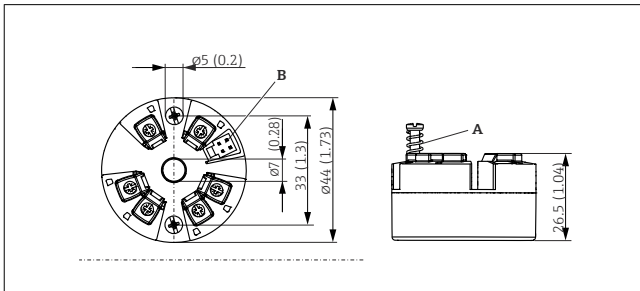

1 Head transmitter version with screw terminals. Dimensions in mm (in)

- A Spring travel $L \geq 5$ mm (not for US - M4 securing screws)
B CDI interface for connecting a configuration tool



The same dimensions apply to the version with push-in terminals.
Exception: housing height $H = 30$ mm (1.18 in).

Operational safety

- ▶ Operate the device only if it is in proper technical condition, free from errors and faults.
- ▶ The operator is responsible for trouble-free operation of the device.

Hazardous area

To eliminate a danger for persons or for the facility when the device is used in the hazardous area (e.g. explosion protection or safety equipment):

- ▶ Based on the technical data on the nameplate, check whether the ordered device is permitted for the intended use in the hazardous area. The nameplate can be found on the side of the transmitter housing.
- ▶ Comply with the instructions in the separate supplementary documentation, which is an integral part of this manual.

NOTICE

- ▶ The device must be powered only by a power unit that operates using a limited-energy circuit in accordance with UL/EN/IEC 61010-1, Section 9.4 and the requirements in Table 18.

Mounting location

- In the terminal head, flat face, as per DIN EN 50446, direct mounting on insert with cable entry (middle hole 7 mm)
- With DIN rail clip on DIN rail as per IEC 60715, TH35



When installing the device in a terminal head, make sure there is enough space in the terminal head!


Important ambient conditions

- Ambient temperature: -40 to $+85$ °C (-40 to 185 °F)
- Head transmitter in accordance with climate class C1, DIN rail transmitter in accordance with B2 as per EN 60654-1
- Condensation as per IEC 60068-2-33 permitted for head transmitter, not permitted for DIN rail transmitter
- Max. rel. humidity: 95% as per IEC 60068-2-30
- Degree of protection:
Head transmitter with screw terminals: IP 00, with push-in terminals: IP 30.
In installed state, depends on the terminal head or field housing used.

Mounting the device

A Phillips head screwdriver is required to mount the head transmitter:

- Maximum torque for securing screws = 1 Nm (¾ foot-pound), screwdriver: Pozidriv Z2
- Maximum torque for screw terminals = 0.35 Nm (¼ foot-pound), screwdriver: Pozidriv Z1

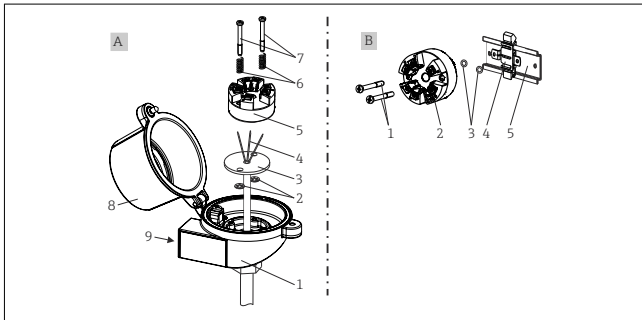

2 Head transmitter mounting

Procedure for mounting in a terminal head, item A:


1. Open the terminal head cover (8) on the terminal head.
2. Guide the connection wires (4) of the insert (3) through the center hole in the head transmitter (5).
3. Fit the mounting springs (6) on the mounting screws (7).
4. Guide the mounting screws (7) through the side boreholes of the head transmitter and the insert (3). Then fix both mounting screws with the snap rings (2).
5. Then tighten the head transmitter (5) along with the insert (3) in the terminal head.
6. After wiring, close the terminal head cover (8) tightly again.

Electrical connection

CAUTION

- ▶ Switch off the power supply before installing or connecting the device. Non-compliance may result in the destruction of parts of the electronics.
- ▶ Do not occupy the CDI connection. An incorrect connection can destroy the electronics.

Quick wiring guide

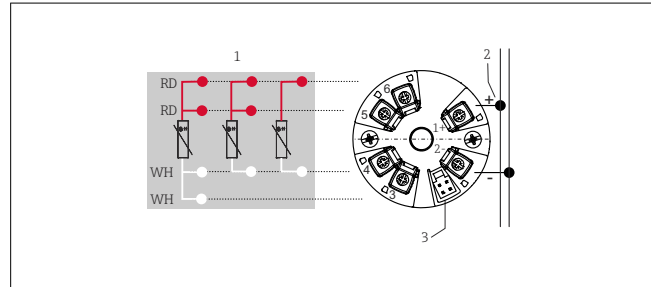

3 Terminal assignment of head transmitter

- 1 RTD sensor input: 4-, 3- and 2-wire
- 2 Power supply
- 3 CDI interface

NOTICE

- ▶ ESD - Electrostatic discharge. Protect the terminals from electrostatic discharge. Non-compliance may result in the destruction or malfunction of parts of the electronics.

Maximum torque for screw terminals = 0.35 Nm (¼ lbf ft), screwdriver: Pozidriv Z1