# Technical Information **Proline Promass I 500**

Coriolis flowmeter



## Combines in-line viscosity and flow measurement with a remote transmitter version with up to $4\ \text{I/Os}$

#### Application

- Measuring principle operates independently of physical fluid properties such as viscosity or density
- Measuring liquids and gases in applications requiring low pressure loss and gentle fluid treatment

#### Device properties

- Straight, easy-to-clean single-tube system
- TMB technology
- Measuring tube made of Titanium
- Remote version with up to 4 I/Os
- Backlit display with touch control and WLAN access
- Standard cable between sensor and transmitter

#### Your benefits

- Energy-saving full-bore design enables minimal pressure loss
- Fewer process measuring points multivariable measurement (flow, density, temperature)
- Space-saving installation no in-/outlet run needs
- Full access to process and diagnostic information numerous, freely combinable I/Os and Ethernet
- Reduced complexity and variety freely configurable I/O functionality
- Integrated verification Heartbeat Technology



## Table of contents

About this document		Environment	
Symbols	. 4	Ambient temperature range	67
		Storage temperature	67
Function and system design	5	Climate class	67
Measuring principle		Relative humidity	67
Measuring system		Operating height	
Equipment architecture		Degree of protection	68
Security		Vibration- and shock-resistance	
Security		Interior cleaning	68
		Mechanical load	68
Input		Electromagnetic compatibility (EMC)	69
Measured variable			
Measuring range		Process	69
Operable flow range		Medium temperature range	
Input signal	13	Density	69
		Pressure-temperature ratings	69
Output	15	Sensor housing	73
Output and input variants		Flow limit	73
Output signal		Pressure loss	73
Signal on alarm		System pressure	74
Load		Thermal insulation	74
Ex connection data	25	Heating	
Low flow cut off	27	Vibrations	75
Galvanic isolation	27	vibracións	, ,
Protocol-specific data	27		
<b>.</b>		Mechanical construction	76
Danisa armala	22	Dimensions in SI units	
	33	Dimensions in US units	
Terminal assignment			101
Available device plugs	35	Materials	102
Pin assignment, device plug			105
Supply voltage	38	Surface roughness	105
Power consumption	38		
Current consumption	38	Operability	105
Power supply failure	38		105
Overcurrent protection element	38		106
Electrical connection	38 51		106
Potential equalization	51		106
Terminals			112
Cable entries	51 51	Network integration	114
Cable specification		Supported operating tools	
Overvoltage protection	5/	HistoROM data management	
	57	Certificates and approvals	118
Reference operating conditions	57		118
Maximum measured error		UKCA marking	118
Repeatability	59	RCM mark	118
Response time	59	Ex approval	118
Influence of ambient temperature	59	Hygienic compatibility	121
Influence of medium temperature	59		122
Influence of medium pressure	60		122
Design fundamentals	61	HART certification	122
		FOUNDATION Fieldbus certification	122
Installation	62	Certification PROFIBUS	122
Mounting location		EtherNet/IP certification	122
Orientation	63	Certification PROFINET	122
Inlet and outlet runs	63	Certification PROFINET with Ethernet-APL	123
Mounting the transmitter housing	64	Pressure Equipment Directive	123
Special mounting instructions	65		123
		Tadio approvar	ريد

2

Additional certification	
Ordering information	124
Application packages Diagnostic functionality Heartbeat Technology Concentration measurement Viscosity Special density OPC-UA Server	124 125 125 125 125 125 126
Accessories  Device-specific accessories  Communication-specific accessories  Service-specific accessories  System components	126
<b>Documentation</b>	129
Registered trademarks	131

## About this document

#### Symbols Electrical symbols

Symbol	Meaning
===	Direct current
~	Alternating current
$\overline{}$	Direct current and alternating current
=	Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
	Potential equalization connection (PE: protective earth) Ground terminals that must be connected to ground prior to establishing any other connections.
	The ground terminals are located on the interior and exterior of the device:  Interior ground terminal: potential equalization is connected to the supply network.  Exterior ground terminal: device is connected to the plant grounding system.

#### Communication-specific symbols

Symbol	Meaning
<b>?</b>	Wireless Local Area Network (WLAN) Communication via a wireless, local network.
•	LED Light emitting diode is off.
- <del>\</del>	LED Light emitting diode is on.
	LED Light emitting diode is flashing.

#### Symbols for certain types of information

Symbol	Meaning
<b>✓</b>	Permitted Procedures, processes or actions that are permitted.
	Preferred Procedures, processes or actions that are preferred.
X	Forbidden Procedures, processes or actions that are forbidden.
i	Tip Indicates additional information.
(A)	Reference to documentation
A <sup>=</sup>	Reference to page
	Reference to graphic
	Visual inspection

#### Symbols in graphics

Symbol	Meaning
1, 2, 3,	Item numbers
1., 2., 3.,	Series of steps
A, B, C,	Views
A-A, B-B, C-C,	Sections
EX	Hazardous area
×	Safe area (non-hazardous area)
≋➡	Flow direction

## Function and system design

#### Measuring principle

The measuring principle is based on the controlled generation of Coriolis forces. These forces are always present in a system when both translational and rotational movements are superimposed.

 $F_c = 2 \cdot \Delta m (v \cdot \omega)$ 

 $F_c$  = Coriolis force

 $\Delta m = moving mass$ 


 $\omega$  = rotational velocity

v = radial velocity in rotating or oscillating system

The amplitude of the Coriolis force depends on the moving mass  $\Delta m$ , its velocity v in the system and thus on the mass flow. Instead of a constant rotational velocity  $\omega$ , the sensor uses oscillation.

In the sensor, an oscillation is produced in the measuring tube. The Coriolis forces produced at the measuring tube cause a phase shift in the tube oscillations (see illustration):

- If there is zero flow (i.e. when the fluid stands still), the oscillation measured at points A and B has the same phase (no phase difference) (1).
- Mass flow causes deceleration of the oscillation at the inlet of the tubes (2) and acceleration at the outlet (3).

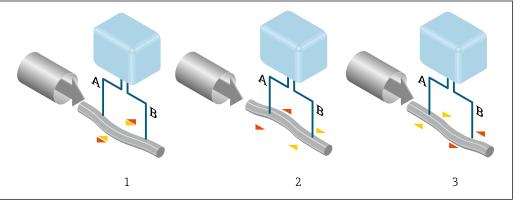

A002993

The phase difference (A-B) increases with increasing mass flow. Electrodynamic sensors register the tube oscillations at the inlet and outlet. System balance is ensured by the antiphase oscillation of an eccentrically arranged swinging mass. The measuring principle operates independently of temperature, pressure, viscosity, conductivity and flow profile.

#### Density measurement

The measuring tube is continuously excited at its resonance frequency. A change in the mass and thus the density of the oscillating system (comprising measuring tube and fluid) results in a corresponding, automatic adjustment in the oscillation frequency. The resonance frequency is thus a function of the medium density. The microprocessor utilizes this relationship to obtain a density signal.

#### Volume measurement

Together with the measured mass flow, this is used to calculate the volume flow.

#### Temperature measurement

The temperature of the measuring tube is determined in order to calculate the compensation factor due to temperature effects. This signal corresponds to the process temperature and is also available as an output signal.

#### Gas Fraction Handler (GFH)

The Gas Fraction Handler is a Promass software function that improves measurement stability and repeatability. The function continuously checks for the presence of disturbances in single-phase flow, i.e. gas bubbles in liquids or droplets in gas. In the presence of the second phase, flow and density become increasingly unstable. The Gas Fraction Handler function improves measurement stability with respect to the severity of the disturbances, without any effect under single-phase flow conditions.



The Gas Fraction Handler is only available in device versions with HART, Modbus RS485, PROFINET and PROFINET with Ethernet-APL.




For detailed information on the Gas Fraction Handler, see the Special Documentation for "Gas Fraction Handler"  $\to \ \cong \ 130$ 

#### Measuring system

The measuring system consists of a transmitter and a sensor. The transmitter and sensor are mounted in physically separate locations. They are interconnected by connecting cables.

#### Transmitter

Two versions of the transmitter are available.

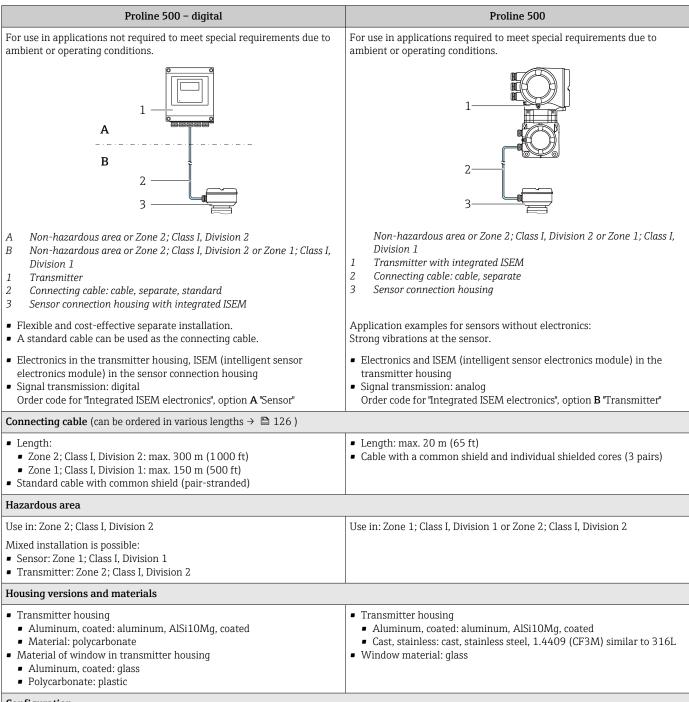

#### Configuration


- External operation via 4-line, illuminated graphic local display (LCD) with touch control and guided menus ("Make-it-run" wizards) for application-specific commissioning.
- Via service interface or WLAN interface:
  - Operating tools (e.g. FieldCare, DeviceCare)
  - Web server (access via Web browser, e.g. Microsoft Internet Explorer, Microsoft Edge)

#### Sensor connection housing


Different versions of the connection housing are available.

Order code for "Sensor connection housing", option A, "Aluminum, coated": Aluminum, AlSi10Mg, coated  This device version is only available in conjunction with the Proline 500 – digital transmitter.
Order code for "Sensor connection housing", option B, "Stainless":  Hygienic version, stainless steel 1.4301 (304)  Optional: order code for "Sensor feature", option CC "Hygienic version, for maximum corrosion resistance": stainless steel 1.4404 (316L)
Order code for "Sensor connection housing", option C, "Ultra-compact hygienic, stainless":  Hygienic version, stainless steel 1.4301 (304)  Optional: order code for "Sensor feature", option CC "Hygienic version, for maximum corrosion resistance": stainless steel 1.4404 (316L)  This device version is only available in conjunction with the Proline 500 – digital transmitter.
Order code for "Sensor connection housing", option L, "Cast, stainless": 1.4409 (CF3M) similar to 316L

#### Sensor

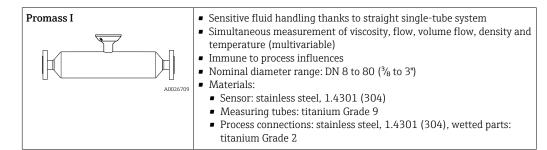

#### Equipment architecture

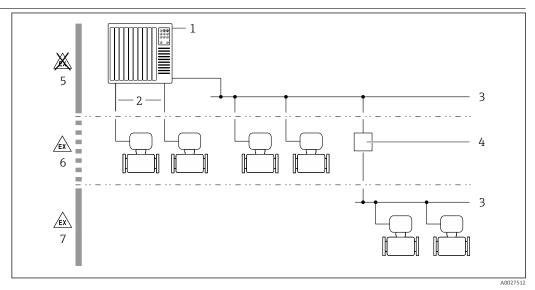

 $\blacksquare$  1 Possibilities for integrating measuring devices into a system

- 1 Control system (e.g. PLC)
- 2 Connecting cable (0/4 to 20 mA HART etc.)
- 3 Fieldbus
- 4 Coupler
- 5 Non-hazardous area
- 6 Hazardous area: Zone 2; Class I, Division 2
- 7 Hazardous area: Zone 1; Class I, Division 1

#### Security

#### IT security

Our warranty is valid only if the product is installed and used as described in the Operating Instructions. The product is equipped with security mechanisms to protect it against any inadvertent changes to the settings.

IT security measures, which provide additional protection for the product and associated data transfer, must be implemented by the operators themselves in line with their security standards.

#### **Device-specific IT security**

The device offers a range of specific functions to support protective measures on the operator's side. These functions can be configured by the user and guarantee greater in-operation safety if used correctly. An overview of the most important functions is provided in the following section:

Function/interface	Factory setting	Recommendation
Write protection via hardware write protection switch $\Rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $	Not enabled	On an individual basis following risk assessment
Access code (also applies for Web server login or FieldCare connection) → 🖺 10	Not enabled (0000)	Assign a customized access code during commissioning
WLAN (order option in display module)	Enabled	On an individual basis following risk assessment
WLAN security mode	Enabled (WPA2- PSK)	Do not change
WLAN passphrase (password) → 🖺 10	Serial number	Assign a customized WLAN passphrase during commissioning
WLAN mode	Access point	On an individual basis following risk assessment
Web server → 🖺 10	Enabled	On an individual basis following risk assessment
CDI-RJ45 service interface → 🖺 11	-	On an individual basis following risk assessment

Protecting access via hardware write protection

Write access to the parameters of the device via the local display, Web browser or operating tool (e.g. FieldCare, DeviceCare) can be disabled via a write protection switch (DIP switch on the main electronics module). When hardware write protection is enabled, only read access to the parameters is possible.

Hardware write protection is disabled when the device is delivered.

#### Protecting access via a password

Different passwords are available to protect write access to the device parameters or access to the device via the WLAN interface.

- User-specific access code
  - Protect write access to the device parameters via the local display, Web browser or operating tool (e.g. FieldCare, DeviceCare). Access authorization is clearly regulated through the use of a user-specific access code.
- WLAN passphrase
  - The network key protects a connection between an operating unit (e.g. notebook or tablet) and the device via the WLAN interface which can be ordered as an option.
- Infrastructure mode
  - When the device is operated in infrastructure mode, the WLAN passphrase corresponds to the WLAN passphrase configured on the operator side.

User-specific access code

Write access to the device parameters via the local display, Web browser or operating tool (e.g. FieldCare, DeviceCare) can be protected by the modifiable, user-specific access code.

WLAN passphrase: Operation as WLAN access point

A connection between an operating unit (e.g. notebook or tablet) and the device via the WLAN interface, which can be ordered as an optional extra, is protected by the network key. The WLAN authentication of the network key complies with the IEEE 802.11 standard.

When the device is delivered, the network key is pre-defined depending on the device. It can be changed via the **WLAN settings** submenu in the **WLAN passphrase** parameter.

Infrastructure mode

A connection between the device and WLAN access point is protected by means of an SSID and passphrase on the system side. Please contact the relevant system administrator for access.

General notes on the use of passwords

- The access code and network key supplied with the device should be changed during commissioning.
- Follow the general rules for generating a secure password when defining and managing the access code or network key.
- The user is responsible for the management and careful handling of the access code and network key.

#### Access via Web server

The device can be operated and configured via a Web browser with the integrated Web server. The connection is via the service interface (CDI-RJ45) or the WLAN interface. For device versions with the EtherNet/IP and PROFINET communication protocols, the connection can also be established via the terminal connection for signal transmission with EtherNet/IP, PROFINET (RJ45 plug) or PROFINET with Ethernet-APL (two-wire).

The Web server is enabled when the device is delivered. The Web server can be disabled if necessary (e.g. after commissioning) via the **Web server functionality** parameter.

The device and status information can be hidden on the login page. This prevents unauthorized access to the information.

For detailed information on device parameters, see:

The "Description of Device Parameters" document  $\rightarrow \implies 130$ 

#### Access via OPC-UA

The device can communicate with OPC UA clients using the "OPC UA Server" application package.

The OPC UA server integrated in the device can be accessed via the WLAN access point using the WLAN interface - which can be ordered as an optional extra - or the service interface (CDI- RJ45) via Ethernet network. Access rights and authorization as per separate configuration.

The following Security Modes are supported as per the OPC UA Specification (IEC 62541):

- None
- Basic128Rsa15 signed
- Basic128Rsa15 signed and encrypted

Access via service interface (CDI-RJ45)

The device can be connected to a network via the service interface (CDI-RJ45). Device-specific functions quarantee the secure operation of the device in a network.

The use of relevant industrial standards and guidelines that have been defined by national and international safety committees, such as IEC/ISA62443 or the IEEE, is recommended. This includes organizational security measures such as the assignment of access authorization as well as technical measures such as network segmentation.

- Transmitters with an Ex de approval may not be connected via the service interface (CDI-RJ45)!

  Order code for "Approval transmitter + sensor", options (Ex de): BA, BB, C1, C2, GA, GB, MA, MB, NA, NB
- The device can be incorporated into a ring topology. The device is integrated via the terminal connection for signal transmission (output 1) and the connection to the service interface (CDI-RJ45).

## Input

#### Measured variable

#### Direct measured variables

- Mass flow
- Density
- Temperature
- Viscosity

#### Calculated measured variables

- Volume flow
- Corrected volume flow
- Reference density

#### Measuring range

#### Measuring range for liquids

DN		Measuring range full scale values $\dot{m}_{min(F)}$ to $\dot{m}_{max(F)}$	
[mm]	[in]	[kg/h]	[lb/min]
8	<sup>3</sup> / <sub>8</sub>	0 to 2 000	0 to 73.50
15	1/2	0 to 6 500	0 to 238.9
15 FB	½ FB	0 to 18000	0 to 661.5
25	1	0 to 18000	0 to 661.5
25 FB	1 FB	0 to 45 000	0 to 1654
40	1½	0 to 45 000	0 to 1654
40 FB	1½ FB	0 to 70 000	0 to 2 573
50	2	0 to 70 000	0 to 2 573
50 FB	2 FB	0 to 180 000	0 to 6615
80	3	0 to 180 000	0 to 6615
FB = Full bore			

#### Measuring range for gases

The full scale value depends on the density and the sound velocity of the gas used and can be calculated with the formula below:

The full scale value depends on the density and the sound velocity of the gas used. The full scale value can be calculated with the following formulas:

- $$\begin{split} & \quad \dot{m}_{max(G)} = minimum \; (\dot{m}_{max(F)} \cdot \rho_G : x \; ) \\ & \quad \dot{m}_{max(G)} = minimum \; (\rho_G \cdot (c_G/2) \cdot d_i^2 \cdot (\pi/4) \cdot 3600 \cdot n) \end{split}$$

m <sub>max(G)</sub>	Maximum full scale value for gas [kg/h]	
m <sub>max(F)</sub>	Maximum full scale value for liquid [kg/h]	
$\dot{m}_{\max(G)} < \dot{m}_{\max(F)}$	$\dot{m}_{ max(G)}$ can never be greater than $\dot{m}_{ max(F)}$	
$ ho_{G}$	Gas density in [kg/m³] at operating conditions	
х	Limitation constant for max. gas flow [kg/m³]	
$c_G$	Sound velocity (gas) [m/s]	
d <sub>i</sub>	Measuring tube internal diameter [m]	
π	Pi	
n = 1	Number of measuring tubes	

DN		х
[mm]	[in]	[kg/m³]
8	3/8	60
15	1/2	80
15 FB	½ FB	90
25	1	90
25 FB	1 FB	90
40	1½	90
40 FB	1½ FB	90
50	2	90
50 FB	2 FB	110
80	3	110
FB = Full bore	,	

If calculating the full scale value using the two formulas:

- 1. Calculate the full scale value with both formulas.
- 2. The smaller value is the value that must be used.

#### Recommended measuring range



Flow limit  $\rightarrow$   $\blacksquare$  73

#### Operable flow range

Over 1000:1.

Flow rates above the preset full scale value do not override the electronics unit, with the result that the totalizer values are registered correctly.

#### Input signal

#### Output and input variants

→ 🖺 15

#### External measured values

To increase the accuracy of certain measured variables or to calculate the corrected volume flow for gases, the automation system can continuously write different measured values to the measuring device:

- Operating pressure to increase accuracy (Endress+Hauser recommends the use of a pressure measuring device for absolute pressure, e.g. Cerabar M or Cerabar S)
- Medium temperature to increase accuracy (e.g. iTEMP)
- Reference density for calculating the corrected volume flow for gases
- Various pressure and temperature measuring devices can be ordered from Endress+Hauser: see "Accessories" section  $\rightarrow \stackrel{ riangle}{=} 129$

It is recommended to read in external measured values to calculate the corrected volume flow.

#### HART protocol

The measured values are written from the automation system to the measuring device via the HART protocol. The pressure transmitter must support the following protocol-specific functions:

- HART protocol
- Burst mode

#### Current input

#### Digital communication

The measured values can be written by the automation system via:

- FOUNDATION Fieldbus
- PROFIBUS DP
- PROFIBUS PA
- Modbus RS485
- EtherNet/IP
- PROFINET
- PROFINET with Ethernet-APL

#### Current input 0/4 to 20 mA

Current input	0/4 to 20 mA (active/passive)
Current span	<ul><li>4 to 20 mA (active)</li><li>0/4 to 20 mA (passive)</li></ul>
Resolution	1 μΑ
Voltage drop	Typically: 0.6 to 2 V for 3.6 to 22 mA (passive)
Maximum input voltage	≤ 30 V (passive)
Open-circuit voltage	≤ 28.8 V (active)
Possible input variables	<ul><li>Pressure</li><li>Temperature</li><li>Density</li></ul>

#### Status input

Maximum input values	■ DC $-3$ to 30 V ■ If status input is active (ON): $R_i > 3 \text{ k}\Omega$
Response time	Configurable: 5 to 200 ms
Input signal level	<ul> <li>Low signal: DC -3 to +5 V</li> <li>High signal: DC 12 to 30 V</li> </ul>
Assignable functions	<ul> <li>Off</li> <li>Reset the individual totalizers separately</li> <li>Reset all totalizers</li> <li>Flow override</li> </ul>

## Output

#### Output and input variants

Depending on the option selected for output/input 1, different options are available for the other outputs and inputs. Only one option can be selected for each output/input 1 to 4. The following tables must be read vertically  $(\downarrow)$ .

Example: If the option BA "4-20 mA HART" was selected for output/input 1, one of the options A, B, D, E, F, H, I or J is available for output 2 and one of the options A, B, D, E, F, H, I or J is available for output 3 and 4.

#### Output/input 1 and options for output/input 2



Options for output/input 3 and 4  $\rightarrow$   $\stackrel{\triangle}{=}$  16

Order code for "Output; input 1" (020) →	Order code for "Output; input 1" (020) → Possible options												
Current output 4 to 20 mA HART	ВА												
Current output 4 to 20 mA HART Ex i passive	<b>\</b>	CA											
Current output 4 to 20 mA HART Ex i active		<b>\</b>	СС										
FOUNDATION Fieldbus			4	SA									
FOUNDATION Fieldbus Ex i				4	TA								
PROFIBUS DP					4	LA							
PROFIBUS PA						4	GA						
PROFIBUS PA Ex i							4	НА					
Modbus RS485								1	MA				
EtherNet/IP 2-port switch integrated									1	NA			
PROFINET 2-port switch integrated										$\rightarrow$	RA		
PROFINET with Ethernet-APL											<b>\</b>	RB	
PROFINET with Ethernet-APL Ex i												<b>\</b>	RC
Order code for "Output; input 2" (021) →	<b>→</b>	<b>\</b>	4	4	4	<b>4</b>	4	4	4	<b>→</b>	<b>\</b>	<b>\</b>	<b>\</b>
Not assigned	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α
Current output 4 to 20 mA	В			В		В	В		В	В	В	В	
Current output 4 to 20 mA Ex i passive		С	С		С			С					С
User-configurable input/output <sup>1)</sup>	D			D		D	D		D	D	D	D	
Pulse/frequency/switch output	Е			Е		Е	Е		Е	Е	Е	Е	
Double pulse output <sup>2)</sup>	F								F				
Pulse/frequency/switch output Ex i passive		G	G		G			G					G
Relay output	Н			Н		Н	Н		Н	Н	Н	Н	
Current input 0/4 to 20 mA	I			I		I	I		I	I	I	I	
Status input	J			J		J	J		J	J	J	J	

<sup>2)</sup> If double pulse output (F) is selected for output/input 2 (021), only the double pulse output (F) option is available for selection for output/input 3 (022).

#### Output/input 1 and options for output/input 3 and 4

Options for output/input  $2 \rightarrow \triangleq 15$ 

Order code for "Output; input 1" (020) →						Possi	ble o	ption	.s				
Current output 4 to 20 mA HART	BA												
Current output 4 to 20 mA HART Ex i passive	1	CA											
Current output 4 to 20 mA HART Ex i active		<b>4</b>	СС										
FOUNDATION Fieldbus			4	SA									
FOUNDATION Fieldbus Ex i				4	TA								
PROFIBUS DP					<b>4</b>	LA							
PROFIBUS PA						4	GA						
PROFIBUS PA Ex i							<b>\</b>	НА					
Modbus RS485								4	MA				
EtherNet/IP 2-port switch integrated									<b>\</b>	NA			
PROFINET 2-port switch integrated										4	RA		
PROFINET with Ethernet-APL											4	RB	
PROFINET with Ethernet-APL Ex i												4	RC
Order code for "Output; input 3" (022), "Output; input 4" (023) $^{1)}$ $\rightarrow$	<b>+</b>	<b>\</b>	4	4	<b>+</b>	4	<b>\</b>	4	<b>\</b>	4	<b>\</b>	4	<b>4</b>
Not assigned	A	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α
Current output 4 to 20 mA	В					В			В	В	В	В	
Current output 4 to 20 mA Ex i passive <sup>2)</sup>		С	С										
User-configurable input/output	D					D			D	D	D	D	
Pulse/frequency/switch output	Е					Е			Е	Е	Е	Е	
Double pulse output (slave) <sup>3)</sup>	F								F				
Pulse/frequency/switch output Ex i passive 4)		G	G										
Relay output	Н					Н			Н	Н	Н	Н	
Current input 0/4 to 20 mA	I					I			I	I	I	I	
Status input	J					J			J	J	J	J	

The order code for "Output; input 4" (023) is only available for the Proline 500-digital transmitter, order code for "Integrated ISEM electronics", 1)

The current output 4 to 20 mA Ex i passive (C) option is not available for input/output 4.

The double pulse output (F) option is not available for input/output 4.

The pulse/frequency/switch output Ex i passive (G) option is not available for input/output 4. 3) 4)

#### Output signal

#### Current output 4 to 20 mA HART

Order code	"Output; input 1" (20): Option BA: current output 4 to 20 mA HART
Signal mode	Can be set to:  Active Passive
Current range	Can be set to:  4 to 20 mA NAMUR  4 to 20 mA US  4 to 20 mA  0 to 20 mA (only if the signal mode is active)  Fixed current
Open-circuit voltage	DC 28.8 V (active)
Maximum input voltage	DC 30 V (passive)
Load	250 to 700 Ω
Resolution	0.38 μΑ
Damping	Configurable: 0 to 999.9 s
Assignable measured variables	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>Electronics temperature</li> <li>Oscillation frequency 0</li> <li>Oscillation damping 0</li> <li>Signal asymmetry</li> <li>Exciter current 0</li> <li>The range of options increases if the measuring device has one or more application packages.</li> </ul>

#### Current output 4 to 20 mA HART Ex i

Order code	"Output; input 1" (20) choose from:  ■ Option CA: current output 4 to 20 mA HART Ex i passive  ■ Option CC: current output 4 to 20 mA HART Ex i active
Signal mode	Depends on the selected order version.
Current range	Can be set to:  4 to 20 mA NAMUR  4 to 20 mA US  4 to 20 mA  0 to 20 mA  for independent of the signal mode is active)  Fixed current
Open-circuit voltage	DC 21.8 V (active)
Maximum input voltage	DC 30 V (passive)
Load	<ul> <li>250 to 400 Ω (active)</li> <li>250 to 700 Ω (passive)</li> </ul>
Resolution	0.38 μΑ

Damping	Configurable: 0 to 999.9 s
Assignable measured variables	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>Electronics temperature</li> <li>Oscillation frequency 0</li> <li>Oscillation damping 0</li> <li>Signal asymmetry</li> <li>Exciter current 0</li> <li>The range of options increases if the measuring device has one or more application packages.</li> </ul>

#### FOUNDATION Fieldbus

FOUNDATION Fieldbus	H1, IEC 61158-2, galvanically isolated
Data transfer	31.25 kbit/s
<b>Current consumption</b>	10 mA
Permitted supply voltage	9 to 32 V
Bus connection	With integrated reverse polarity protection

#### PROFIBUS DP

Signal encoding	NRZ code
Data transfer	9.6 kBaud12 MBaud
Terminating resistor	Integrated, can be activated via DIP switches

#### PROFIBUS PA

PROFIBUS PA	In accordance with EN 50170 Volume 2, IEC 61158-2 (MBP), galvanically isolated
Data transmission	31.25 kbit/s
<b>Current consumption</b>	10 mA
Permitted supply voltage	9 to 32 V
Bus connection	With integrated reverse polarity protection

#### Modbus RS485

Physical interface	RS485 in accordance with EIA/TIA-485 standard
Terminating resistor	Integrated, can be activated via DIP switches

#### EtherNet/IP

Standards	In accordance with IEEE 802.3	
-----------	-------------------------------	--

#### PROFINET

Standards	In accordance with IEEE 802.3
-----------	-------------------------------

#### PROFINET with Ethernet-APL

Device use	Device connection to an APL field switch
	The device may only be operated according to the following APL port
	classifications:
	If used in hazardous areas: SLAA or SLAC 1)  If used in non-hazardous areas: SLAX  If used in non-hazardous areas: SLAX
	Connection values of APL field switch (corresponds to APL port classification SPCC or SPAA, for instance):
	<ul> <li>Maximum input voltage: 15 V<sub>DC</sub></li> <li>Minimum output values: 0.54 W</li> </ul>
	Device connection to an SPE switch
	The device may only be operated according to the following PoDL power class: If used in the non-hazardous area: PoDL power class 10
	Connection values of SPE switch (corresponds to PoDL power class 10, 11 or 12):  • Maximum input voltage: 30 V <sub>DC</sub> • Minimum output values: 1.85 W
PROFINET	According to IEC 61158 and IEC 61784
Ethernet-APL	According to IEEE 802.3cg, APL port profile specification v1.0, galvanically isolated
Data transfer	10 Mbit/s
Current consumption	Transmitter
•	■ Max. 400 mA(24 V)
	■ Max. 200 mA (110 V, 50/60 Hz; 230 V, 50/60 Hz)
Permitted supply voltage	9 to 30 V
Network connection	With integrated reverse polarity protection

1) For more information on using the device in the hazardous area, see the Ex-specific Safety Instructions

#### Current output 4 to 20 mA

Order code	"Output; input 2" (21), "Output; input 3" (022) or "Output; input 4" (023): Option B: current output 4 to 20 mA
Signal mode	Can be set to:  Active Passive
Current span	Can be set to:  4 to 20 mA NAMUR  4 to 20 mA US  4 to 20 mA  0 to 20 mA  for independent of the signal mode is active)  Fixed current
Maximum output values	22.5 mA
Open-circuit voltage	DC 28.8 V (active)
Maximum input voltage	DC 30 V (passive)
Load	$0$ to $700\Omega$
Resolution	0.38 μΑ

Damping	Configurable: 0 to 999.9 s
Assignable measured variables	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>Electronics temperature</li> <li>Oscillation frequency 0</li> <li>Oscillation damping 0</li> <li>Signal asymmetry</li> <li>Exciter current 0</li> </ul> The range of options increases if the measuring device has one or more
	application packages.

#### Current output 4 to 20 mA Ex i passive

Order code	"Output; input 2" (21), "Output; input 3" (022): Option C: current output 4 to 20 mA Ex i passive
Signal mode	Passive
Current span	Can be set to:  4 to 20 mA NAMUR  4 to 20 mA US  4 to 20 mA  Fixed current
Maximum output values	22.5 mA
Maximum input voltage	DC 30 V
Load	$0$ to $700\Omega$
Resolution	0.38 μΑ
Damping	Configurable: 0 to 999 s
Assignable measured variables	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>Electronics temperature</li> <li>Oscillation frequency 0</li> <li>Oscillation damping 0</li> <li>Signal asymmetry</li> <li>Exciter current 0</li> <li>The range of options increases if the measuring device has one or more application packages.</li> </ul>

## Pulse/frequency/switch output

Function	Can be configured as pulse, frequency or switch output
Version	Open collector
	Can be set to:  Active Passive Passive NAMUR  Ex-i, passive
Maximum input values	DC 30 V, 250 mA (passive)
Open-circuit voltage	DC 28.8 V (active)
Voltage drop	For 22.5 mA: ≤ DC 2 V

Pulse output	
Maximum input values	DC 30 V, 250 mA (passive)
Maximum output current	22.5 mA (active)
Open-circuit voltage	DC 28.8 V (active)
Pulse width	Configurable: 0.05 to 2 000 ms
Maximum pulse rate	10 000 Impulse/s
Pulse value	Configurable
Assignable measured	■ Mass flow
variables	<ul> <li>Volume flow</li> <li>Corrected volume flow</li> </ul>
Frequency output	
Maximum input values	DC 30 V, 250 mA (passive)
Maximum output current	22.5 mA (active)
Open-circuit voltage	DC 28.8 V (active)
Output frequency	Configurable: end value frequency 2 to $10000\text{Hz}(f_{max}=12500\text{Hz})$
Damping	Configurable: 0 to 999.9 s
Pulse/pause ratio	1:1
Assignable measured variables	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>Electronics temperature</li> <li>Oscillation frequency 0</li> <li>Oscillation damping 0</li> <li>Signal asymmetry</li> <li>Exciter current 0</li> <li>The range of options increases if the measuring device has one or more application packages.</li> </ul>
Switch output	
Maximum input values	DC 30 V, 250 mA (passive)
Open-circuit voltage	DC 28.8 V (active)
Switching behavior	Binary, conductive or non-conductive
Switching delay	Configurable: 0 to 100 s
Number of switching cycles	Unlimited
Assignable functions	■ Off ■ On ■ Diagnostic behavior ■ Limit value ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Density ■ Reference density ■ Temperature ■ Totalizer 1-3 ■ Flow direction monitoring ■ Status ■ Partially filled pipe detection ■ Low flow cut off  The range of options increases if the measuring device has one or more application packages.

#### Double pulse output

Function	Double pulse
Version	Open collector
	Can be set to:  Active Passive Passive NAMUR
Maximum input values	DC 30 V, 250 mA (passive)
Open-circuit voltage	DC 28.8 V (active)
Voltage drop	For 22.5 mA: ≤ DC 2 V
Output frequency	Configurable: 0 to 1000 Hz
Damping	Configurable: 0 to 999 s
Pulse/pause ratio	1:1
Assignable measured variables	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>The range of options increases if the measuring device has one or more application packages.</li> </ul>

#### Relay output

Function	Switch output
Version	Relay output, galvanically isolated
Switching behavior	Can be set to: NO (normally open), factory setting NC (normally closed)
Maximum switching capacity (passive)	■ DC 30 V, 0.1 A ■ AC 30 V, 0.5 A
Assignable functions	■ Off ■ On ■ Diagnostic behavior ■ Limit value ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Density ■ Reference density ■ Temperature ■ Totalizer 1-3 ■ Flow direction monitoring ■ Status ■ Partially filled pipe detection ■ Low flow cut off  The range of options increases if the measuring device has one or more application packages.

#### User-configurable input/output

 $\textbf{One} \ specific input \ or \ output \ is \ assigned \ to \ a \ user-configurable \ input/output \ (configurable \ I/O) \ during \ device \ commissioning.$ 

The following inputs and outputs are available for assignment:

- Choice of current output: 4 to 20 mA (active), 0/4 to 20 mA (passive)
- Pulse/frequency/switch output
- Choice of current input: 4 to 20 mA (active), 0/4 to 20 mA (passive)
- Status input

The technical values correspond to those of the inputs and outputs described in this section.

#### Signal on alarm

Depending on the interface, failure information is displayed as follows:

#### **HART** current output

Device diagnostics	Device condition can be read out via HART Command 48

#### **PROFIBUS PA**

Status and alarm messages	Diagnostics in accordance with PROFIBUS PA Profile 3.02
Failure current FDE (Fault Disconnection Electronic)	0 mA

#### **PROFIBUS DP**

Status and alarm	Diagnostics in accordance with PROFIBUS PA Profile 3.02
messages	

#### EtherNet/IP

Device diagnostics	Device condition can be read out in Input Assembly
--------------------	--

#### **PROFINET**

#### PROFINET with Ethernet-APL

Device diagnostics	Diagnostics according to PROFINET PA Profile 4
--------------------	--

#### FOUNDATION Fieldbus

Status and alarm messages	Diagnostics in accordance with FF-891
Failure current FDE (Fault Disconnection Electronic)	0 mA

#### Modbus RS485

Failure mode	Choose from:
	■ NaN value instead of current value
	■ Last valid value

#### Current output 0/4 to 20 mA

#### 4 to 20 mA

Failure mode	Choose from:  4 to 20 mA in accordance with NAMUR recommendation NE 43  4 to 20 mA in accordance with US  Min. value: 3.59 mA  Max. value: 22.5 mA  Freely definable value between: 3.59 to 22.5 mA  Actual value  Last valid value
--------------	---

#### 0 to 20 mA

Failure mode	Choose from:
	■ Maximum alarm: 22 mA
	■ Freely definable value between: 0 to 20.5 mA

#### Pulse/frequency/switch output

Pulse output	
Failure mode	Choose from:  Actual value No pulses
Frequency output	
Failure mode	Choose from:  Actual value  O Hz  Defined value (f max 2 to 12 500 Hz)
Switch output	
Failure mode	Choose from:  Current status  Open Closed

#### Relay output

Choose from:
<ul><li>Current status</li></ul>
■ Open
■ Closed

#### Local display

Plain text display	With information on cause and remedial measures
Backlight	Red backlighting indicates a device error.

Status signal as per NAMUR recommendation NE 107

#### Interface/protocol

- Via digital communication:
  - HART protocol
  - FOUNDATION Fieldbus
  - PROFIBUS PA
  - PROFIBUS DP
  - Modbus RS485
  - EtherNet/IP
  - PROFINET
  - PROFINET with Ethernet-APL
- Via service interface
  - CDI-RJ45 service interface
  - WLAN interface

Plain text display	With information on cause and remedial measures
--------------------	---



#### Web browser

Plain text display	With information on cause and remedial measures
--------------------	---

#### Light emitting diodes (LED)

Status information	Status indicated by various light emitting diodes
	The following information is displayed depending on the device version:  Supply voltage active  Data transmission active  Device alarm/error has occurred  EtherNet/IP network available  EtherNet/IP connection established  PROFINET network available  PROFINET connection established  PROFINET blinking feature

Load

Output signal  $\rightarrow$   $\blacksquare$  17

#### Ex connection data

#### Safety-related values

Order code for "Output; input 1"	Output type	Safety-related values "Output; input 1"	
		26 (+)	27 (-)
Option <b>BA</b>	Current output 4 to 20 mA HART	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$	
Option <b>GA</b>	PROFIBUS PA	$U_{N} = 32 V_{DC}$ $U_{M} = 250 V_{AC}$	
Option <b>LA</b>	PROFIBUS DP	$U_{N} = 32 V_{DC}$ $U_{M} = 250 V_{AC}$	
Option <b>MA</b>	Modbus RS485	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$	
Option <b>SA</b>	FOUNDATION Fieldbus	$U_{N} = 32 V_{DC}$ $U_{M} = 250 V_{AC}$	
Option <b>NA</b>	EtherNet/IP	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$	

Order code for "Output; input 1"	Output type	Safety-related values "Output; input 1"	
		26 (+)	27 (-)
Option <b>RA</b>	PROFINET	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$	
Option <b>RB</b>	PROFINET with Ethernet- APL	$ \begin{array}{l} \text{APL port profile SLAX} \\ \text{SPE PoDL classes 10, 11, 12} \\ U_{N} = 30 \ V_{DC} \\ U_{M} = 250 \ V_{AC} \\ \end{array} $	2

Order code for	Output type	Safety-related values						
"Output; input 2"; "Output; input 3" "Output; input 4"		Output;	input 2	Output;			ut; input 4 <sup>1)</sup>	
. , .		24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)	
Option <b>B</b>	Current output 4 to 20 mA	$U_{\rm N} = 30 \text{ V}$ $U_{\rm M} = 250 \text{ C}$	20					
Option <b>D</b>	User-configurable input/ output	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$						
Option <b>E</b>	Pulse/frequency/switch output	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$						
Option <b>F</b>	Double pulse output	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$						
Option <b>H</b>	Relay output	$U_N = 30 \text{ V}_{DC}$ $I_N = 100 \text{ mA}_{DC}/500 \text{ mA}_{AC}$ $U_M = 250 \text{ V}_{AC}$						
Option <b>I</b>	Current input 4 to 20 mA	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$						
Option <b>J</b>	Status input	$U_{\rm N} = 30  \text{V}$ $U_{\rm M} = 250  \text{C}$	DC					

<sup>1)</sup> The order code "Output; input 4" is only available for the Proline 500 – digital transmitter.

#### Intrinsically safe values

Order code "Output; input 1"	Output type	Intrinsically safe values "Output; input 1"		
		26 (+)	27 (-)	
Option CA	Current output 4 to 20 mA HART Ex i passive	$\begin{split} &U_{i} = 30 \text{ V} \\ &l_{i} = 100 \text{ mA} \\ &P_{i} = 1.25 \text{ W} \\ &L_{i} = 0  \mu\text{H} \\ &C_{i} = 6 \text{ nF} \end{split}$		
Option CC	Current output 4 to 20 mA HART Ex i active	$\begin{aligned} &\textbf{Ex ia}^{\ 1)} \\ &\textbf{U}_0 = 21.8 \ \textbf{V} \\ &\textbf{l}_0 = 90 \ \text{mA} \\ &\textbf{P}_0 = 491 \ \text{mW} \\ &\textbf{L}_0 = 4.1 \ \text{mH (IIC)/15 mH (IIB)} \\ &\textbf{C}_0 = 160 \ \text{nF (IIC)/} \\ &\textbf{1160 \ \text{nF (IIB)}} \end{aligned}$	Ex ic $^{2}$ ) $U_{0} = 21.8 \text{ V}$ $l_{0} = 90 \text{ mA}$ $P_{0} = 491 \text{ mW}$ $L_{0} = 9 \text{ mH (IIC)/39 mH}$ (IIB) $C_{0} = 600 \text{ nF (IIC)/}$ $4000 \text{ nF (IIB)}$	
		$\begin{split} &U_i = 30 \text{ V} \\ &l_i = 10 \text{ mA} \\ &P_i = 0.3 \text{ W} \\ &L_i = 5  \mu\text{H} \\ &C_i = 6 \text{ nF} \end{split}$		

Order code "Output; input 1"	Output type	Intrinsically safe values "Output; input 1"		
		26 (+)	27 (-)	
Option <b>HA</b>	PROFIBUS PA Ex i (FISCO Field Device)	$Ex ia ^{1)} \\ U_i = 30 V \\ l_i = 570 mA \\ P_i = 8.5 W \\ L_i = 10 \mu H \\ C_i = 5 nF$	Ex ic $^{2}$ ) $U_{i} = 32 \text{ V}$ $l_{i} = 570 \text{ mA}$ $P_{i} = 8.5 \text{ W}$ $L_{i} = 10  \mu\text{H}$ $C_{i} = 5 \text{ nF}$	
Option <b>TA</b>	FOUNDATION Fieldbus Ex i	$Ex ia ^{1} \\ U_{i} = 30 V \\ l_{i} = 570 mA \\ P_{i} = 8.5 W \\ L_{i} = 10 \mu H \\ C_{i} = 5 nF$	Ex ic $^{2}$ ) $U_{i} = 32 \text{ V}$ $I_{i} = 570 \text{ mA}$ $P_{i} = 8.5 \text{ W}$ $L_{i} = 10  \mu\text{H}$ $C_{i} = 5 \text{ nF}$	
Option RC	PROFINET with Ethernet-APL Ex i	Ex ia <sup>1)</sup> 2-WISE power load APL port profile SLAA	<b>Ex ic</b> <sup>2)</sup> 2-WISE power load APL port profile SLAC	

- 1) Only available for Proline 500 transmitter Zone 1; Class I, Division 1.
- 2) Only available for transmitter Zone 2; Class I, Division 2 and only for Proline 500 digital transmitter

Order code for "Output; input 2";	Output type	Intrinsically safe values or NIFW values Output; input 2   Output; input 3   Output; in					
"Output; input 3"; "Output; input 4"		24 (+) 25 (-)		22 (+)	23 (-)	20 (+)	21 (-)
Option C	Current output 4 to 20 mA Ex i passive	$U_{i} = 30 \text{ V}$ $l_{i} = 100 \text{ m}$ $P_{i} = 1.25$ $L_{i} = 0$ $C_{i} = 0$	nA	22 (*)	22()	20 (1)	22()
Option G	Pulse/frequency/switch output Ex i passive	$\begin{aligned} &U_i = 30 \text{ V} \\ &l_i = 100 \text{ n} \\ &P_i = 1.25 \\ &L_i = 0 \\ &C_i = 0 \end{aligned}$	nA				

1) The order code "Output; input 4" is only available for the Proline 500 – digital transmitter.

#### Low flow cut off

The switch points for low flow cut off are user-selectable.

#### Galvanic isolation

The outputs are galvanically isolated:

- ullet from the power supply
- ullet from one another
- from the potential equalization (PE) terminal

#### Protocol-specific data

#### HART

Manufacturer ID	0x11
Device type ID	0x3B
HART protocol revision	7
Device description files (DTM, DD)	Information and files under: www.endress.com
HART load	Min. 250 Ω
System integration	Information on system integration: Operating Instructions → 🗎 129.  ■ Measured variables via HART protocol  ■ Burst Mode functionality

#### FOUNDATION Fieldbus

Manufacturer ID	0x452B48 (hex)
Ident number	0x103B (hex)
Device revision	1
DD revision	Information and files under:
CFF revision	<ul><li>www.endress.com</li><li>www.fieldcommgroup.org</li></ul>
Interoperability Test Kit (ITK)	Version 6.2.0
ITK Test Campaign Number	Information:  www.endress.com  www.fieldcommgroup.org
Link Master capability (LAS)	Yes
Choice of "Link Master" and "Basic Device"	Yes Factory setting: Basic Device
Node address	Factory setting: 247 (0xF7)
Supported functions	The following methods are supported:  Restart  ENP Restart  Diagnostic  Set to OOS  Set to AUTO  Read trend data  Read event logbook
Virtual Communication Relation	onships (VCRs)
Number of VCRs	44
Number of link objects in VFD	50
Permanent entries	1
Client VCRs	0
Server VCRs	10
Source VCRs	43
Sink VCRs	0
Subscriber VCRs	43
Publisher VCRs	43
Device Link Capabilities	
Slot time	4
Min. delay between PDU	8
Max. response delay	16
System integration	Information regarding system integration: Operating Instructions → 🖺 129.  Cyclic data transmission Description of the modules Execution times Methods

#### PROFIBUS DP

Manufacturer ID	0x11
Ident number	0x156F
Profile version	3.02

Device description files (GSD, DTM, DD)	Information and files under:  ■ https://www.endress.com/download On the device product page: PRODUCTS → Product Finder → Links ■ https://www.profibus.com
Supported functions	Identification & Maintenance     Simplest device identification on the part of the control system and nameplate     PROFIBUS upload/download     Reading and writing parameters is up to ten times faster with PROFIBUS upload/download     Condensed status     Simplest and self-explanatory diagnostic information by categorizing diagnostic messages that occur
Configuration of the device address	<ul> <li>DIP switches on the I/O electronics module</li> <li>Via operating tools (e.g. FieldCare)</li> </ul>
Compatibility with earlier model	If the device is replaced, the measuring device Promass 500 supports the compatibility of the cyclic data with previous models. It is not necessary to adjust the engineering parameters of the PROFIBUS network with the Promass 500 GSD file.
	Previous model: Promass 83 PROFIBUS DP  ID No.: 1529 (hex)  Extended GSD file: EH3x1529.gsd  Standard GSD file: EH3_1529.gsd  Description of the function scope of compatibility:
Country into another	Operating Instructions → 🗎 129.
System integration	Information regarding system integration: Operating Instructions → 🗎 129.  ■ Cyclic data transmission  ■ Block model  ■ Description of the modules

#### PROFIBUS PA

Manufacturer ID	0x11
Ident number	0x156D
Profile version	3.02
Device description files (GSD, DTM, DD)	Information and files under:  ■ https://www.endress.com/download On the device product page: PRODUCTS → Product Finder → Links ■ https://www.profibus.com
Supported functions	Identification & Maintenance     Simplest device identification on the part of the control system and nameplate     PROFIBUS upload/download     Reading and writing parameters is up to ten times faster with PROFIBUS upload/download     Condensed status     Simplest and self-explanatory diagnostic information by categorizing diagnostic messages that occur
Configuration of the device address	<ul> <li>DIP switches on the I/O electronics module</li> <li>Local display</li> <li>Via operating tools (e.g. FieldCare)</li> </ul>

Compatibility with earlier model	If the device is replaced, the measuring device Promass 500 supports the compatibility of the cyclic data with previous models. It is not necessary to adjust the engineering parameters of the PROFIBUS network with the Promass 500 GSD file.  Earlier models:
	<ul> <li>Promass 80 PROFIBUS PA</li> <li>ID No.: 1528 (hex)</li> <li>Extended GSD file: EH3x1528.gsd</li> <li>Standard GSD file: EH3_1528.gsd</li> <li>Promass 83 PROFIBUS PA</li> <li>ID No.: 152A (hex)</li> <li>Extended GSD file: EH3x152A.gsd</li> <li>Standard GSD file: EH3x152A.gsd</li> <li>Standard GSD file: EH3_152A.gsd</li> </ul>
	Description of the function scope of compatibility: Operating Instructions → 🖺 129.
System integration	Information regarding system integration: Operating Instructions → 🗎 129.  Cyclic data transmission Block model Description of the modules

#### Modbus RS485

Protocol	Modbus Applications Protocol Specification V1.1					
Response times	<ul> <li>Direct data access: typically 25 to 50 ms</li> <li>Auto-scan buffer (data range): typically 3 to 5 ms</li> </ul>					
Device type	Slave					
Slave address range	1 to 247					
Broadcast address range	0					
Function codes	<ul> <li>03: Read holding register</li> <li>04: Read input register</li> <li>06: Write single registers</li> <li>08: Diagnostics</li> <li>16: Write multiple registers</li> <li>23: Read/write multiple registers</li> </ul>					
Broadcast messages	Supported by the following function codes:  O6: Write single registers  16: Write multiple registers  23: Read/write multiple registers					
Supported baud rate	■ 1200 BAUD ■ 2400 BAUD ■ 4800 BAUD ■ 9600 BAUD ■ 19200 BAUD ■ 38400 BAUD ■ 57600 BAUD ■ 115200 BAUD					
Data transfer mode	ASCII     RTU					
Data access	Each device parameter can be accessed via Modbus RS485.  For Modbus register information					

Compatibility with earlier model	If the device is replaced, the measuring device Promass 500 supports the compatibility of the Modbus registers for the process variables and the diagnostic information with the previous model Promass 83. It is not necessary to change the engineering parameters in the automation system.  □ Description of the function scope of compatibility:  Operating Instructions → □ 129.					
System integration	Information on system integration: Operating Instructions → 🗎 129.  ■ Modbus RS485 information  ■ Function codes  ■ Register information  ■ Response time  ■ Modbus data map					

#### EtherNet/IP

Protocol	<ul> <li>The CIP Networks Library Volume 1: Common Industrial Protocol</li> <li>The CIP Networks Library Volume 2: EtherNet/IP Adaptation of CIP</li> </ul>				
Communication type	■ 10Base-T ■ 100Base-TX				
Device profile	Generic device (product type: 0x2B)				
Manufacturer ID	0x000049E				
Device type ID	0x103B				
Baud rates	Automatic <sup>10</sup> / <sub>100</sub> Mbit with half-duplex and full-duplex detection				
Polarity	Auto-polarity for automatic correction of crossed TxD and RxD pairs				
Supported CIP connections	Max. 3 connections				
Explicit connections	Max. 6 connections				
I/O connections	Max. 6 connections (scanner)				
Configuration options for measuring device	<ul> <li>DIP switches on the electronics module for IP addressing</li> <li>Manufacturer-specific software (FieldCare)</li> <li>Add-on Profile Level 3 for Rockwell Automation control systems</li> <li>Web browser</li> <li>Electronic Data Sheet (EDS) integrated in the measuring device</li> </ul>				
Configuration of the EtherNet interface	<ul> <li>Speed: 10 MBit, 100 MBit, auto (factory setting)</li> <li>Duplex: half-duplex, full-duplex, auto (factory setting)</li> </ul>				
Configuration of the device address	<ul> <li>DIP switches on the electronics module for IP addressing (last octet)</li> <li>DHCP</li> <li>Manufacturer-specific software (FieldCare)</li> <li>Add-on Profile Level 3 for Rockwell Automation control systems</li> <li>Web browser</li> <li>EtherNet/IP tools, e.g. RSLinx (Rockwell Automation)</li> </ul>				
Device Level Ring (DLR)	Yes				
System integration	Information regarding system integration: Operating Instructions → 🗎 129.				
	<ul> <li>Cyclic data transmission</li> <li>Block model</li> <li>Input and output groups</li> </ul>				

#### PROFINET

Protocol	Application layer protocol for decentral device periphery and distributed automation, Version 2.3
Communication type	100 MBit/s
Conformance Class	Conformance Class B
Netload Class	Netload Class 2 0 Mbps

David natas	Automotic 100 Mbit /a with full dupley detection						
Baud rates	Automatic 100 Mbit/s with full-duplex detection						
Cycle times	From 8 ms						
Polarity	Auto-polarity for automatic correction of crossed TxD and RxD pairs						
Media Redundancy Protocol (MRP)	Yes						
System redundancy support	System redundancy S2 (2 AR with 1 NAP)						
Device profile	Application interface identifier 0xF600 Generic device						
Manufacturer ID	0x11						
Device type ID	0x843B						
Device description files (GSD, DTM, DD)	Information and files under:  ■ www.endress.com  On the product page for the device: Documents/Software → Device drivers  ■ www.profibus.com						
Supported connections	<ul> <li>2 x AR (IO Controller AR)</li> <li>1 x AR (IO-Supervisor Device AR connection allowed)</li> <li>1 x Input CR (Communication Relation)</li> <li>1 x Output CR (Communication Relation)</li> <li>1 x Alarm CR (Communication Relation)</li> </ul>						
Configuration options for measuring device	<ul> <li>DIP switches on the electronics module, for device name assignment (last part)</li> <li>Asset management software (FieldCare, DeviceCare, Field Xpert)</li> <li>Integrated Web server via Web browser and IP address</li> <li>Device master file (GSD), can be read out via the integrated Web server of the measuring device.</li> <li>Onsite operation</li> </ul>						
Configuration of the device name	<ul> <li>DIP switches on the electronics module, for device name assignment (last part)</li> <li>DCP protocol</li> <li>Asset management software (FieldCare, DeviceCare, Field Xpert)</li> <li>Integrated Web server</li> </ul>						
Supported functions	<ul> <li>Identification &amp; Maintenance, simple device identifier via:</li> <li>Control system</li> <li>Nameplate</li> <li>Measured value status         The process variables are communicated with a measured value status     </li> <li>Blinking feature via the local display for simple device identification and assignment</li> <li>Device operation via asset management software (e.g. FieldCare, DeviceCare, SIMATIC PDM)</li> </ul>						
System integration	Information regarding system integration: Operating Instructions → 🗎 129.  Cyclic data transmission Overview and description of the modules Status coding Startup configuration Factory setting						

#### PROFINET with Ethernet-APL

Protocol Application layer protocol for decentral device periphery and distributed automation, Version 2.4						
Communication type	Ethernet Advanced Physical Layer 10BASE-T1L					
Conformance Class	Conformance Class B (PA)					
Netload Class	Netload Class 2 0 Mbps					
Baud rates	10 Mbit/s Full-duplex					
Cycle times	64 ms					

Polarity	Automatic correction of crossed "APL signal +" and "APL signal -" signal lines						
Media Redundancy Protocol (MRP)	Not possible (point-to-point connection to APL field switch)						
System redundancy support	System redundancy S2 (2 AR with 1 NAP)						
Device profile	PROFINET PA profile 4 (Application interface identifier API: 0x9700)						
Manufacturer ID	0x11						
Device type ID	0xA43B						
Device description files (GSD, DTM, FDI)	Information and files under:  ■ www.endress.com/download  On the device product page: PRODUCTS → Product Finder → Links  ■ www.profibus.com						
Supported connections	<ul> <li>2x AR (IO Controller AR)</li> <li>2x AR (IO Supervisor Device AR connection allowed)</li> </ul>						
Configuration options for measuring device	<ul> <li>DIP switches on the electronics module, for device name assignment (last part)</li> <li>Asset management software (FieldCare, DeviceCare, Field Xpert)</li> <li>Integrated Web server via Web browser and IP address</li> <li>Device master file (GSD), can be read out via the integrated Web server of the measuring device.</li> <li>Onsite operation</li> </ul>						
Configuration of the device name	<ul> <li>DIP switches on the electronics module, for device name assignment (last part)</li> <li>DCP protocol</li> <li>Asset management software (FieldCare, DeviceCare, Field Xpert)</li> <li>Integrated Web server</li> </ul>						
Supported functions	<ul> <li>Identification &amp; Maintenance, simple device identifier via:</li> <li>Control system</li> <li>Nameplate</li> <li>Measured value status         The process variables are communicated with a measured value status     </li> <li>Blinking feature via the local display for simple device identification and assignment</li> <li>Device operation via asset management software (e.g. FieldCare, DeviceCare, SIMATIC PDM with FDI package)</li> </ul>						
System integration	Information regarding system integration: Operating Instructions → 🗎 129.  Cyclic data transmission Overview and description of the modules Status coding Startup configuration Factory setting						

## **Power supply**

#### Terminal assignment

Transmitter: supply voltage, input/outputs

#### HART

Supply voltage		Input/output 1		Input/output 2		Input/output 3		Input/output 4			
1 (+)	2 (-)	26 (+)	27 (-)	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)		
		The terminal assignment depends on the specific device version ordered $\Rightarrow  riangleq 15$ .									

#### FOUNDATION Fieldbus

Supply voltage		Input/output 1		Input/output 2		Input/output 3		Input/output 4			
1 (+)	2 (-)	26 (A)	27 (B)	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)		
		The terminal assignment depends on the specific device version ordered $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $									

#### PROFIBUS DP

Supply	ly voltage Input/output I		Input/	Input/output 2		Input/output 3		Input/output 4			
1 (+)	2 (-)	26 (B)	27 (A)	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)		
		The terminal assignment depends on the specific device version ordered $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $									

#### PROFIBUS PA

Supply voltage		Input/output 1		Input/output 2		Input/output 3		Input/output 4		
1 (+)	2 (-)	26 (B)	27 (A)	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)	
		The terminal assignment depends on the specific device version ordered $\Rightarrow  riangleq 15$ .								

#### Modbus RS485

Supply voltage		Input/output 1		Input/output 2		Input/output 3		Input/output 4			
1 (+)	2 (-)	26 (B)	27 (A)	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)		
		The terminal assignment depends on the specific device version ordered $\Rightarrow  binom{1}{2}$ 15.									

#### EtherNet/IP

Sup	Supply voltage		Input/output 1	Input/output 2		Input/output 3		Input/output 4	
1 (	+)	2 (-)	EtherNet/IP (RJ45 connector)		1	22 (+) ment depen ordered	Į.	<u>l</u>	

#### PROFINET

Supply voltage		Input/output 1	Input/output 2		Input/output 3		Input/output 4			
1 (+)	2 (-)	PROFINET (RJ45 connector)		I	22 (+)	l	I	l l		
			The terminal assignment depends on the specific device version ordered $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $							

#### PROFINET with Ethernet-APL

Supply voltage		Input/output 1	Input/output 2		Input/output 3		Input/output 4	
1 (+)	2 (-)	EtherNet/IP	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
		(RJ45 connector)	The terminal assignment depends on the specific device version ordered $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $					

#### Transmitter and sensor connection housing: connecting cable

The sensor and transmitter, which are mounted in separate locations, are interconnected by a connecting cable. The cable is connected via the sensor connection housing and the transmitter housing.

Terminal assignment and connection of the connecting cable:

- Proline 500 digital → 🖺 38
- Proline 500 → 🖺 39

#### Available device plugs



Device plugs may not be used in hazardous areas!

#### Device plugs for fieldbus systems:

Order code for "Input; output 1"

- Option **SA** "FOUNDATION Fieldbus" → 🖺 35
- Option **GA** "PROFIBUS PA" → 🗎 35
- Option **NA** "EtherNet/IP" → 🖺 35
- Option RA "PROFINET" → 

  36
- Option **RB** "PROFINET with Ethernet-APL" → 🖺 36

#### Device plug for connecting to the service interface:

Order code for "Accessory mounted"

Option NB, adapter RJ45 M12 (service interface) → 🖺 37

#### Order code for "Input; output 1", option SA "FOUNDATION Fieldbus"

Order code for	Cable entry/connection → 🖺 40				
"Electrical connection"	2	3			
M, 3, 4, 5	7/8" connector	-			

#### Order code for "Input; output 1", option GA "PROFIBUS PA"

Order code for	Cable entry/connection → 🖺 40				
"Electrical connection"	2	3			
L, N, P, U	Connector M12 × 1	-			

#### Order code for "Input; output 1", option NA "EtherNet/IP"

Order code for	Cable entry/connection → 🗎 40			
"Electrical connection"	2	3		
L, N, P, U	Connector M12 × 1	-		
R <sup>1)2)</sup> , S <sup>1)2)</sup> , T <sup>1)2)</sup> , V <sup>1)2)</sup>	Connector M12 × 1	Connector M12 × 1		

- Cannot be combined with an external WLAN antenna (order code for "Enclosed accessories", option P8) of an RJ45 M12 adapter for the service interface (order code for "Accessories mounted", option NB) or of the remote display and operating module DKX001
- 2) Suitable for integrating the device in a ring topology.

#### Order code for "Input; output 1", option RA "PROFINET"

Order code for	Cable entry/connection → 🖺 40				
"Electrical connection"	2	3			
L, N, P, U	Connector M12 × 1	-			
R <sup>1) 2)</sup> , S <sup>1) 2)</sup> , T <sup>1) 2)</sup> , V <sup>1) 2)</sup>	Connector M12 × 1	Connector M12 × 1			

- Cannot be combined with an external WLAN antenna (order code for "Enclosed accessories", option P8) of 1) an RJ45 M12 adapter for the service interface (order code for "Accessories mounted", option NB) or of the remote display and operating module DKX001.
- 2) Suitable for integrating the device in a ring topology.

#### Order code for "Input; output 1", option RB "PROFINET with Ethernet-APL"

Order code	Cable entry/connection $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $				
"Electrical connection"	2	3			
L, N, P, U	M12 plug × 1	-			

#### Order code for "Accessory mounted", option NB "Adapter RJ45 M12 (service interface)"

Order code	Cable entry/coupling → 🗎 40		
"Accessory mounted"	Cable entry 2	Cable entry 3	
NB	Plug M12 × 1	-	

#### Pin assignment, device plug

#### **FOUNDATION Fieldbus**


	Pin		Assignment	Coding	Plug/socket
2 3	1	+	Signal +	A	Plug
1 4	2	-	Signal –		
	3		Grounding		
	4		Not assigned		

#### **PROFIBUS PA**

	Pin		Assignment	Coding	Plug/socket
2 3	1	+	PROFIBUS PA +	A	Plug
1 4	2		Grounding		
	3	-	PROFIBUS PA -		
	4		Not assigned		

- Recommended plug:
  Binder, series 713, part no. 99 1430 814 04
  - Phoenix, part no. 1413934 SACC-FS-4QO SH PBPA SCO

### **PROFINET**

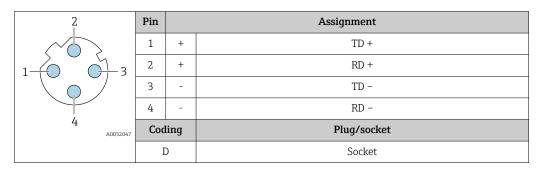

Recommended plug:

Binder, series 825, part no. 99 3729 810 04

■ Phoenix, part no. 1543223 SACC-M12MSD-4Q

### PROFINET with Ethernet-APL

	Pin		Assignment	Coding	Plug/socket
3 4	1	-	APL signal -	А	Socket
2 1	2	+	APL signal +		
\frac{1}{2}	3		Cable shield <sup>1</sup>		
	4		Not assigned		
	Metal plug housing		Cable shield		
	<sup>1</sup> If a cable shield is used				

Recommended plug:

Binder, series 713, part no. 99 1430 814 04

Phoenix, part no. 1413934 SACC-FS-4QO SH PBPA SCO

# EtherNet/IP

2	Pin		Assignment
	1	+	Tx
1 3	2	+	Rx
	3	-	Tx
	4	-	Rx
4 A0032047	Cod	ling	Plug/socket
	I	)	Socket


Recommended plug:

Binder, series 763, part no. 99 3729 810 04

■ Phoenix, part no. 1543223 SACC-M12MSD-4Q

# Service interface

Order code for "Accessories mounted", option NB: Adapter RJ45 M12 (service interface)

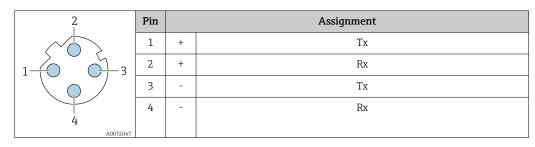

Coding	Plug/socket
D	Socket

- Recommended plug:
  Binder, series 763, part no. 99 3729 810 04
  - Phoenix, part no. 1543223 SACC-M12MSD-4Q

# Supply voltage

Order code for "Power supply"	Terminal voltage		Frequency range
Option <b>D</b>	DC 24 V	±20%	-
Option <b>E</b>	AC 100 to 240 V	-15 to +10%	50/60 Hz
Option I	DC 24 V	±20%	-
Option I	AC 100 to 240 V	-15 to +10%	50/60 Hz

### Power consumption

### Transmitter

Max. 10 W (active power)

switch-on current Max. 36 A (<5 ms) as per NAMUR Recommendation NE 21		
---	--	--

### **Current consumption**

### Transmitter

- Max. 400 mA (24 V)
- Max. 200 mA (110 V, 50/60 Hz; 230 V, 50/60 Hz)

### Power supply failure

- Totalizers stop at the last value measured.
- Depending on the device version, the configuration is retained in the device memoryor in the pluggable data memory (HistoROM DAT).
- Error messages (incl. total operated hours) are stored.


### Overcurrent protection element

The device must be operated with a dedicated circuit breaker, as it does not have an ON/OFF switch

- The circuit breaker must be easy to reach and labeled accordingly.
- Permitted nominal current of the circuit breaker: 2 A up to maximum 10 A.

# **Electrical connection**

# Connection of connecting cable: Proline 500 - digital

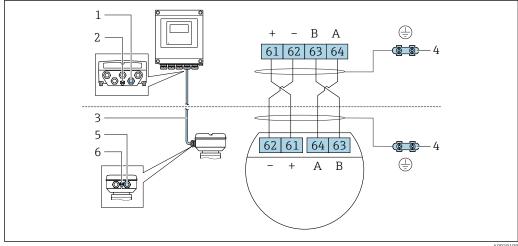

- Cable entry for cable on transmitter housing 1
- 2 Terminal connection for potential equalization (PE)
- 3 Connecting cable ISEM communication
- 4 Grounding via ground connection; in the version with a device plug, grounding is ensured through the plug
- 5 Cable entry for cable or connection of device plug on sensor connection housing
- Terminal connection for potential equalization (PE)

38

Depending on the device version of the sensor connection housing, the connecting cable is connected via terminals or device plugs.

Sensor connection housing Order code for "Housing"	Connection on connection housing via	Connection on transmitter housing via
Option <b>A</b> : aluminum coated	Terminals	Terminals
Option <b>B</b> : stainless	Terminals	Terminals
Option <b>C</b> : ultra-compact, hygienic, stainless	Device plug	Terminals
Option L: cast, stainless	Terminals	Terminals

Pin assignment, device plug


Device plugs are only available for device version, order code for "Housing":

Option  ${\bf C}$ : ultra-compact, hygienic, stainless

For connection to sensor connection housing.


2	Pin	Color 1)		Assignment	Connection to terminal
	1	Brown	+	Supply voltage	61
3 0 0 1	2	White	А	ISEM communication	64
	3	Blue	В	15EM communication	63
4	4	Black	-	Supply voltage	62
	5	-		_	-
	Coding		Plug/socket		
	A			Plug	

1) Cable colors of connecting cable

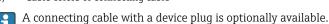

# Connection of the connecting cable: Proline 500

The connecting cable is connected via terminals.

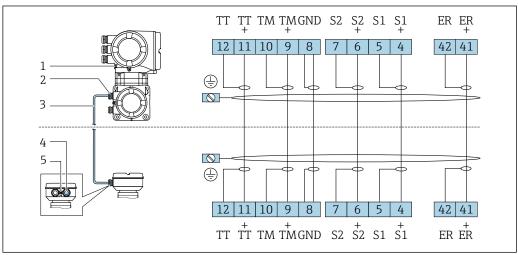

A002819


- 1 Terminal connection for potential equalization (PE)
- 2 Cable entry for connecting cable on transmitter connection housing
- 3 Connecting cable
- 4 Cable entry for connecting cable on sensor connection housing
- 5 Terminal connection for potential equalization (PE)

### Transmitter connection



- Terminal assignment → 🖺 33
- Device plug pin assignment → 🖺 36

Transmitter connection: Proline 500 - digital

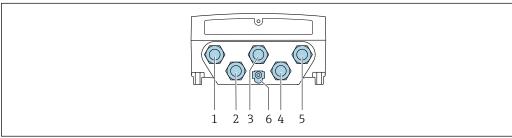


- Terminal connection for supply voltage
- 2 Terminal connection for signal transmission, input/output
- Terminal connection for signal transmission, input/output 3
- Terminal connection for connecting cable between sensor and transmitter
- Terminal connection for signal transmission, input/output or terminal for network connection (DHCP client) via service interface (CDI-RJ45); optional: terminal connection for external WLAN antenna
- Terminal connection for potential equalization (PE)
- An adapter for RJ45 to the M12 plug is optionally available: Order code for "Accessories", option NB: "Adapter RJ45 M12 (service interface)"

The adapter connects the service interface (CDI-RJ45) to an M12 plug mounted in the cable entry. Therefore the connection to the service interface can be established via an M12 plug without opening the device.

Network connection (DHCP client) via service interface (CDI-RJ45) → 🖺 112

Connecting the transmitter: Proline 500

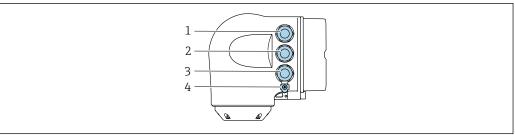

- Terminal connection for supply voltage
- Terminal connection for signal transmission, input/output 2
- 3 Terminal connection for signal transmission, input/output or terminal for network connection (DHCP client) via service interface (CDI-RJ45); optional: terminal connection for external WLAN antenna
- Terminal connection for potential equalization (PE)
- An adapter for RJ45 to the M12 plug is optionally available: Order code for "Accessories", option NB: "Adapter RJ45 M12 (service interface)"

The adapter connects the service interface (CDI-RJ45) to an M12 plug mounted in the cable entry. Therefore the connection to the service interface can be established via an M12 plug without opening the device.

Network connection (DHCP client) via service interface (CDI-RJ45) → 🖺 112


### Connecting in a ring topology

Device versions with EtherNet/IP and PROFINET communication protocols can be integrated into a ring topology. The device is integrated via the terminal connection for signal transmission (output 1) and the connection to the service interface (CDI-RJ45).

- Transmitters with an Ex de approval may **not** be connected via the service interface (CDI-RJ45)! Order code for "Approval transmitter + sensor", options (Ex de): BA, BB, C1, C2, GA, GB, MA, MB, NA, NB
- Integrate the transmitter in a ring topology:

  EtherNet/IP
  - PROFINET


Transmitter: Proline 500 – digital

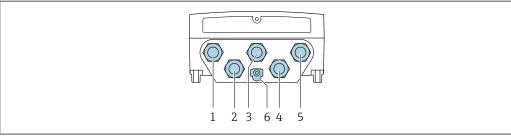

Δ002820

- 1 Terminal connection for supply voltage
- 2 Terminal connection for signal transmission, input/output
- 2 Terminal connection for signal transmission: PROFINET or EtherNet/IP (RJ45 plug)
- 4 Terminal connection for connecting cable between sensor and transmitter
- 5 Terminal connection to service interface (CDI-RJ45)
- 6 Terminal connection for potential equalization (PE)

Transmitter: Proline 500

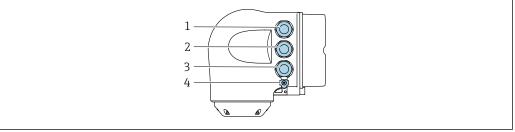


A0026781

- 1 Terminal connection for supply voltage
- 2 Terminal connection for signal transmission: PROFINET or EtherNet/IP (RJ45 plug)
- 3 Terminal connection to service interface (CDI-RJ45)
- 4 Terminal connection for potential equalization (PE)
- If the device has additional inputs/outputs, these are routed in parallel via the cable entry for connection to the service interface.


### **Connection examples**

Current output 4 to 20 mA HART

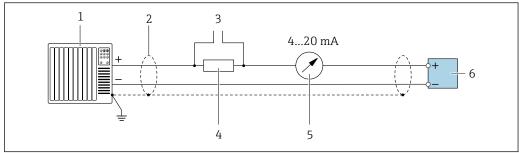

A0029055


- 2 Connection example for 4 to 20 mA HART current output (active)
- 1 Automation system with current input (e.g. PLC)
- 3 Connection for HART operating devices  $\rightarrow \blacksquare 106$
- 4 Resistor for HART communication ( $\geq 250 \Omega$ ): observe maximum load  $\Rightarrow \triangleq 17$
- 5 Analog display unit: observe maximum load  $\rightarrow \square$  17
- 6 Transmitter

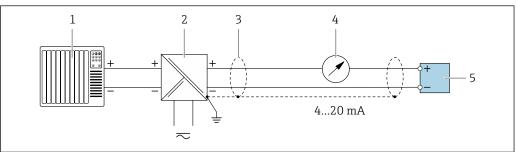

A002876

- 3 Connection example for 4 to 20 mA HART current output (passive)
- 1 Automation system with current input (e.g. PLC)
- 2 Power supply
- 3 Cable shield provided at one end. The cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications  $\rightarrow \stackrel{\triangle}{=} 51$
- 4 Analog display unit: observe maximum load → 🖺 17
- 5 Transmitter


### HART input

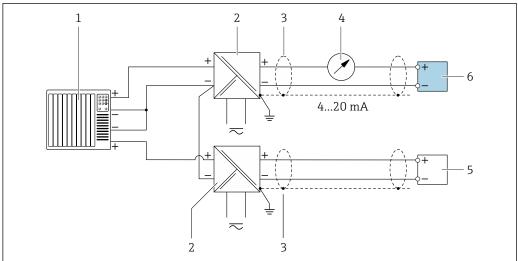

A0029763


- 4 Connection example for HART input with a common negative (passive)
- 1 Automation system with HART output (e.g. PLC)
- 2 Active barrier for power supply (e.g. RN221N)
- 3 Cable shield provided at one end. The cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- 4 Analog display unit: observe maximum load  $\rightarrow$   $\stackrel{\triangle}{=}$  17
- 5 Pressure transmitter (e.g. Cerabar M, Cerabar S): see requirements
- 6 Transmitter

# PROFIBUS PA

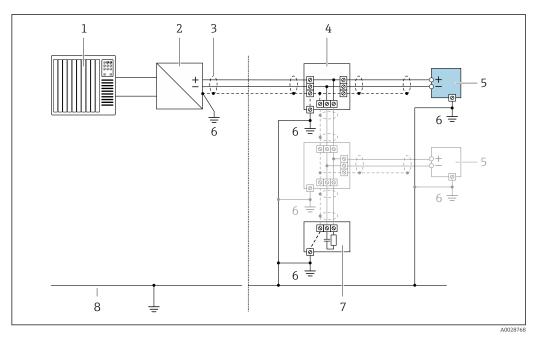


- 5 Connection example for PROFIBUS PA
- 1 Control system (e.g. PLC)
- 2 PROFIBUS PA segment coupler
- 3 Cable shield provided at one end. The cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- 4 T-box
- 5 Measuring device
- 6 Local grounding
- 7 Bus terminator
- 8 Potential matching line

### PROFIBUS DP

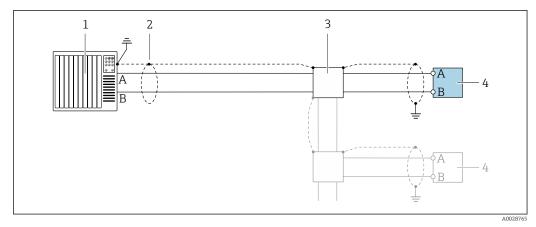

- $\blacksquare$  6 Connection example for PROFIBUS DP, non-hazardous area and Zone 2/Div. 2
- 1 Control system (e.g. PLC)
- 2 Cable shield provided at one end. The cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- 3 Distribution box
- 4 Transmitter
- If baud rates > 1.5 MBaud an EMC cable entry must be used and the cable shield must continue as far as the terminal wherever possible.


### EtherNet/IP

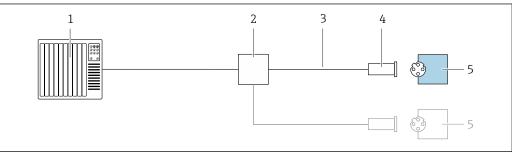

A002876


- 7 Connection example for EtherNet/IP
- 1 Control system (e.g. PLC)
- 2 Ethernet switch
- 3 Observe cable specifications
- 4 Device plug
- 5 Transmitter

# EtherNet/IP: DLR (Device Level Ring)

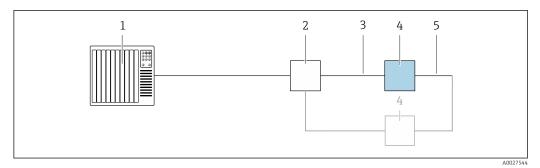

- 1 Control system (e.g. PLC)
- 2 Ethernet switch
- 3 Observe cable specifications →  $\bigcirc$  51
- 4 Transmitter
- 5 Connecting cable between the two transmitters


# PROFINET

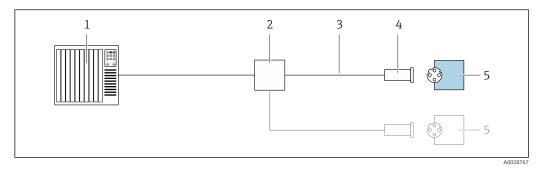

■ 8 Connection example for PROFINET


- 1 Control system (e.g. PLC)
- 2 Ethernet switch
- 3 Observe cable specifications
- 4 Device plug
- 5 Transmitter

### PROFINET with Ethernet-APL

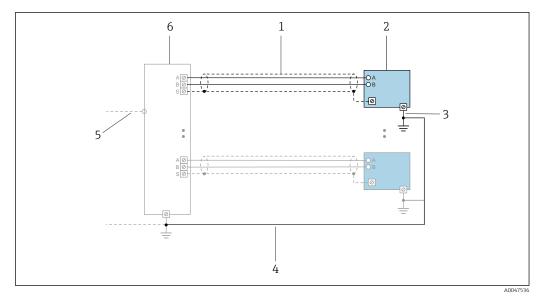

- **9**  ${\it Connection example for PROFINET with Ethernet-APL}$
- 1 Cable shield
- 2 Measuring device
- 3 Local grounding
- Potential equalization
  Trunk or TCP
- 5
- Field switch

# PROFINET: MRP (Media Redundancy Protocol)

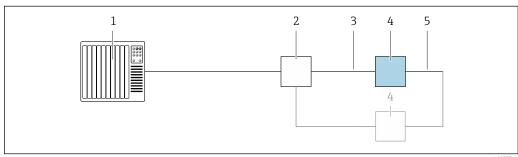


A0027544

- Control system (e.g. PLC) Ethernet switch
- 2
- 3 *Observe cable specifications*  $\rightarrow \implies 51$
- Transmitter 4
- ${\it Connecting\ cable\ between\ the\ two\ transmitters}$

46


### PROFINET: system redundancy S2

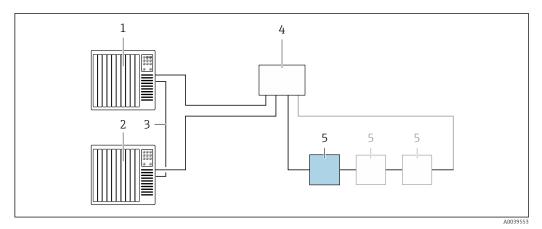

**■** 10 Connection example for system redundancy S2

- Control system 1 (e.g. PLC)
- Synchronization of control systems 2
- Control system 2 (e.g. PLC)
- Industrial Ethernet Managed Switch 4
- Transmitter


### FOUNDATION Fieldbus

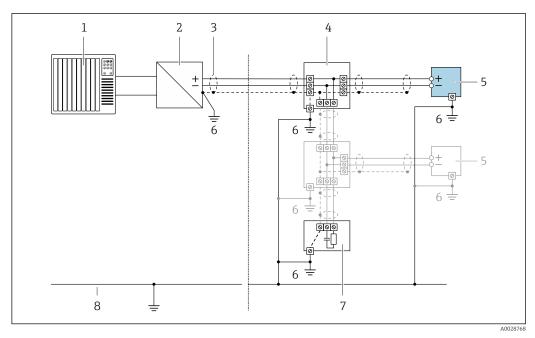

#### ■ 11 Connection example for FOUNDATION Fieldbus

- 1
- Control system (e.g. PLC) Power Conditioner (FOUNDATION Fieldbus) 2
- 3 Cable shield provided at one end. The cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- T-box
- Measuring device
- Local grounding 6
- Bus terminator
- Potential matching line


### Modbus RS485

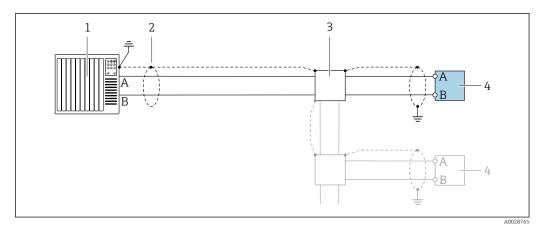

 $\blacksquare$  12 Connection example for Modbus RS485, non-hazardous area and Zone 2; Class I, Division 2

- 1 Control system (e.g. PLC)
- 2 Cable shield provided at one end. The cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- 3 Distribution box
- 4 Transmitter


### Current output 4-20 mA

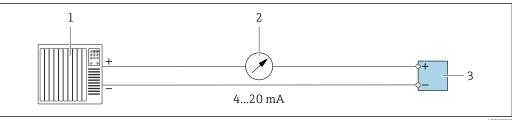

A00287

# ■ 13 Connection example for 4-20 mA current output (active)

- 1 Automation system with current input (e.g. PLC)
- 2 Analog display unit: observe maximum load  $\rightarrow \square$  17
- 3 Transmitter

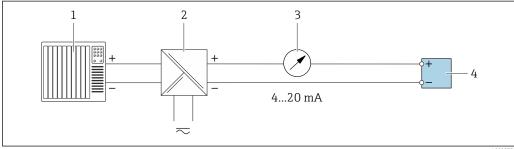


A0028759

# ■ 14 Connection example for 4-20 mA current output (passive)

- 1 Automation system with current input (e.g. PLC)
- 2 Active barrier for power supply (e.g. RN221N)
- 3 Analog display unit: observe maximum load  $\rightarrow \blacksquare 17$
- 4 Transmitter


# Pulse/frequency output

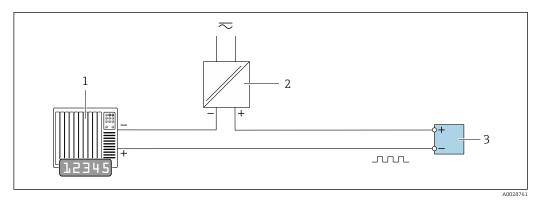

■ 15 Connection example for pulse/frequency output (passive)

- Automation system with pulse/frequency input (e.g. PLC with 10 kΩ pull-up or pull-down resistor)
- 2 Power supply
- 3 Transmitter: observe input values  $\rightarrow \triangleq 20$


### Switch output

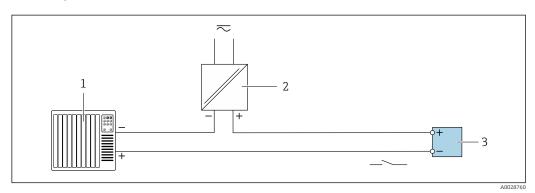

■ 16 Connection example for switch output (passive)


- Automation system with switch input (e.g. PLC with a 10 kΩ pull-up or pull-down resistor)
- 2 Power supply
- 3 Transmitter: observe input values  $\rightarrow \triangleq 20$

### Double pulse output

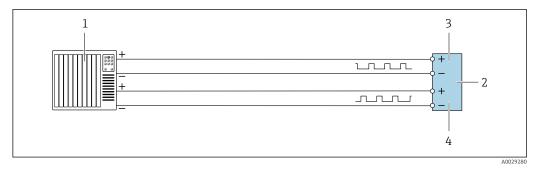

■ 17 Connection example for double pulse output (active)


- 1 Automation system with double pulse input (e.g. PLC)
- 2 Transmitter: observe input values → 🗎 22
- 3 Double pulse output
- 4 Double pulse output (slave), phase-shifted

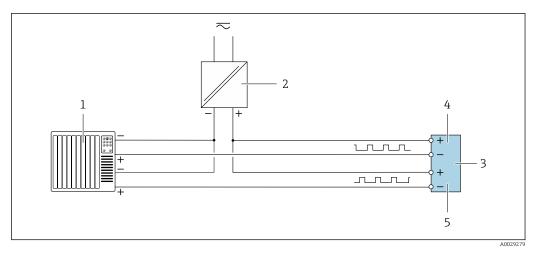

■ 18 Connection example for double pulse output (passive)

- 1 Automation system with double pulse input (e.g. PLC with a 10  $k\Omega$  pull-up or pull-down resistor)
- 2 Power supply
- 4 Double pulse output
- 5 Double pulse output (slave), phase-shifted


# Relay output

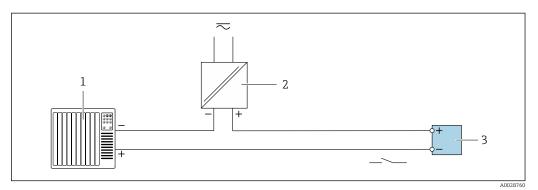

■ 19 Connection example for relay output (passive)

- 1 Automation system with relay input (e.g. PLC)
- 2 Power supply


# Current input

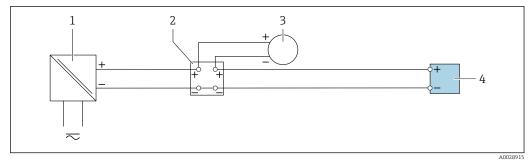

■ 20 Connection example for 4 to 20 mA current input

- 1 Power supply
- 2 Terminal box
- 3 External measuring device (to read in pressure or temperature, for instance)
- 4 Transmitter

## Status input

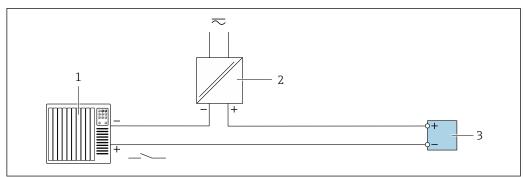

A002876

■ 21 Connection example for status input

- 1 Automation system with status output (e.g. PLC)
- 2 Power supply
- 3 Transmitter

### Potential equalization

### Requirements

For potential equalization:

- Pay attention to in-house grounding concepts
- Take account of operating conditions like the pipe material and grounding
- Connect the medium, sensor and transmitter to the same electrical potential
- Use a ground cable with a minimum cross-section of 6 mm<sup>2</sup> (0.0093 in<sup>2</sup>) and a cable lug for potential equalization connections



For devices intended for use in hazardous locations, please observe the guidelines in the  $\operatorname{Ex}$  documentation (XA).

### **Terminals**

Spring-loaded terminals: Suitable for strands and strands with ferrules. Conductor cross-section 0.2 to  $2.5~\mathrm{mm}^2$  (24 to  $12~\mathrm{AWG}$ ).

### Cable entries

- Cable gland: M20 × 1.5 with cable Ø 6 to 12 mm (0.24 to 0.47 in)
- Thread for cable entry:
  - NPT ½"
  - G 1/2"
  - M20
- Device plug for connecting cable: M12
   A device plug is always used for the device version with the order code for "Sensor connection housing", option C "Ultra-compact, hygienic, stainless".

### Cable specification

### Permitted temperature range

- The installation guidelines that apply in the country of installation must be observed.
- The cables must be suitable for the minimum and maximum temperatures to be expected.

# Power supply cable (incl. conductor for the inner ground terminal)

Standard installation cable is sufficient.

### Protective grounding cable for the outer ground terminal

Conductor cross-section  $< 2.1 \text{ mm}^2 \text{ (14 AWG)}$ 

The use of a cable lug enables the connection of larger cross-sections.

The grounding impedance must be less than 2  $\Omega$ .

### Signal cable

Current output 4 to 20 mA HART

A shielded cable is recommended. Observe grounding concept of the plant.

### PROFIBUS PA

Twisted, shielded two-wire cable. Cable type A is recommended.



For further information on planning and installing PROFIBUS networks see:

- Operating Instructions "PROFIBUS DP/PA: Guidelines for planning and commissioning" (BA00034S)
- PNO Directive 2.092 "PROFIBUS PA User and Installation Guideline"
- IEC 61158-2 (MBP)

### PROFIBUS DP

The IEC 61158 standard specifies two types of cable (A and B) for the bus line which can be used for every transmission rate. Cable type A is recommended.

Cable type	A	
Characteristic impedance	135 to 165 $\Omega$ at a measuring frequency of 3 to 20 MHz	
Cable capacitance	< 30 pF/m	
Wire cross-section	> 0.34 mm <sup>2</sup> (22 AWG)	
Cable type	Twisted pairs	
Loop resistance	≤110 Ω/km	
Signal damping	Max. 9 dB over the entire length of the cable cross-section	
Shield	Copper braided shielding or braided shielding with foil shield. When grounding the cable shield, observe the grounding concept of the plant.	



For further information on planning and installing PROFIBUS networks see:

- Operating Instructions "PROFIBUS DP/PA: Guidelines for planning and commissioning" (BA00034S)
- PNO Directive 2.092 "PROFIBUS PA User and Installation Guideline"
- IEC 61158-2 (MBP)

### EtherNet/IP

The standard ANSI/TIA/EIA-568-B.2 Annex specifies CAT 5 as the minimum category for a cable used for EtherNet/IP. CAT 5e and CAT 6 are recommended.



For more information on planning and installing EtherNet/IP networks, please refer to the "Media Planning and Installation Manual. EtherNet/IP" of ODVA Organization

### PROFINET

Standard IEC 61156-6 specifies CAT 5 as the minimum category for a cable used for PROFINET. CAT 5e and CAT 6 are recommended.



For more information on planning and installing PROFINET networks, see: "PROFINET Cabling and Interconnection Technology", Guideline for PROFINET

### PROFINET with Ethernet-APL

The reference cable type for APL segments is fieldbus cable type A, MAU type 1 and 3 (specified in IEC 61158-2). This cable meets the requirements for intrinsically safe applications according to IEC TS 60079-47 and can also be used in non-intrinsically safe applications.

Cable type	A	
Cable capacitance	45 to 200 nF/km	
Loop resistance	15 to 150 Ω/km	
Cable inductance	0.4 to 1 mH/km	

Further details are provided in the Ethernet-APL Engineering Guideline (https://www.ethernet-apl.org).

### FOUNDATION Fieldbus

Twisted, shielded two-wire cable.



For further information on planning and installing FOUNDATION Fieldbus networks see:

- Operating Instructions for "FOUNDATION Fieldbus Overview" (BA00013S)
- FOUNDATION Fieldbus Guideline
- IEC 61158-2 (MBP)

### Modbus RS485

The EIA/TIA-485 standard specifies two types of cable (A and B) for the bus line which can be used for every transmission rate. Cable type A is recommended.

Cable type	A	
Characteristic impedance	135 to 165 $\Omega$ at a measuring frequency of 3 to 20 MHz	
Cable capacitance	< 30 pF/m	
Wire cross-section	> 0.34 mm <sup>2</sup> (22 AWG)	
Cable type	Twisted pairs	
Loop resistance	≤110 Ω/km	
Signal damping	Max. 9 dB over the entire length of the cable cross-section	
Shield	Copper braided shielding or braided shielding with foil shield. When grounding the cable shield, observe the grounding concept of the plant.	

Current output 0/4 to 20 mA

Standard installation cable is sufficient

Pulse /frequency /switch output

Standard installation cable is sufficient

Double pulse output

Standard installation cable is sufficient

Relay output

Standard installation cable is sufficient.

Current input 0/4 to 20 mA


Standard installation cable is sufficient

Status input

Standard installation cable is sufficient

### Choice of connecting cable between the transmitter and sensor

Depends on the type of transmitter and the installation zones

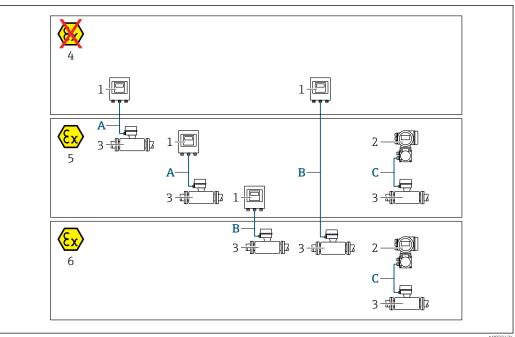

- Proline 500 digital transmitter 1
- Proline 500 transmitter 2
- 3 Sensor Promass
- 4 Non-hazardous area
- 5 Hazardous area: Zone 2; Class I, Division 2
- Hazardous area: Zone 1; Class I, Division 1 6
- Standard cable to 500 digital transmitter  $\rightarrow \implies 54$ Transmitter installed in the non-hazardous area or hazardous area: Zone 2; Class I, Division 2 / sensor installed in the hazardous area: Zone 2; Class I, Division 2
- Standard cable to 500 digital transmitter  $\rightarrow \implies 55$ В Transmitter installed in the hazardous area: Zone 2; Class I, Division 2 / sensor installed in the hazardous area: Zone 1; Class I, Division 1
- Signal cable to 500 transmitter  $\rightarrow \implies 57$ Transmitter and sensor installed in the hazardous area: Zone 2; Class I, Division 2 or Zone 1; Class I, Division 1

# A: Connecting cable between sensor and transmitter: Proline 500 – digital

### Standard cable

A standard cable with the following specifications can be used as the connecting cable.

Design	4 cores (2 pairs); uninsulated stranded CU wires; pair-stranded with common shield	
Shielding	Tin-plated copper braid, optical cover ≥ 85 %	
Loop resistance	Power supply line (+, –): maximum 10 Ω	
Cable length	Maximum 300 m (900 ft), see the following table.	

Cross-section	Cable length [max.]
0.34 mm <sup>2</sup> (AWG 22)	80 m (240 ft)
0.50 mm <sup>2</sup> (AWG 20)	120 m (360 ft)
0.75 mm <sup>2</sup> (AWG 18)	180 m (540 ft)
1.00 mm <sup>2</sup> (AWG 17)	240 m (720 ft)
1.50 mm <sup>2</sup> (AWG 15)	300 m (900 ft)

# Optionally available connecting cable

Design	$2 \times 2 \times 0.34~\text{mm}^2$ (AWG 22) PVC cable $^{1)}$ with common shield (2 pairs, uninsulated stranded CU wires; pair-stranded)
Flame resistance	According to DIN EN 60332-1-2
Oil-resistance	According to DIN EN 60811-2-1
Shielding	Tin-plated copper braid, optical cover ≥ 85 %
Operating temperature	When mounted in a fixed position: $-50$ to $+105$ °C ( $-58$ to $+221$ °F); when cable can move freely: $-25$ to $+105$ °C ( $-13$ to $+221$ °F)
Available cable length	Fixed: 20 m (60 ft); variable: up to maximum 50 m (150 ft)


 $\ \, \text{UV radiation can impair the cable outer sheath. Protect the cable from direct sunshine where possible.}$ 

B: Connecting cable between sensor and transmitter: Proline 500 - digital

# Standard cable

A standard cable with the following specifications can be used as the connecting cable.

Design	4, 6, 8 cores (2, 3, 4 pairs); uninsulated stranded CU wires; pair-stranded with common shield
Shielding	Tin-plated copper braid, optical cover ≥ 85 %
Capacitance C	Maximum 760 nF IIC, maximum 4.2 μF IIB
Inductance L	Maximum 26 μH IIC, maximum 104 μH IIB
Inductance/resistance ratio (L/R)	Maximum 8.9 $\mu H/\Omega$ IIC, maximum 35.6 $\mu H/\Omega$ IIB (e.g. according to IEC 60079-25)
Loop resistance	Power supply line (+, –): maximum 5 $\Omega$
Cable length	Maximum 150 m (450 ft), see the following table.

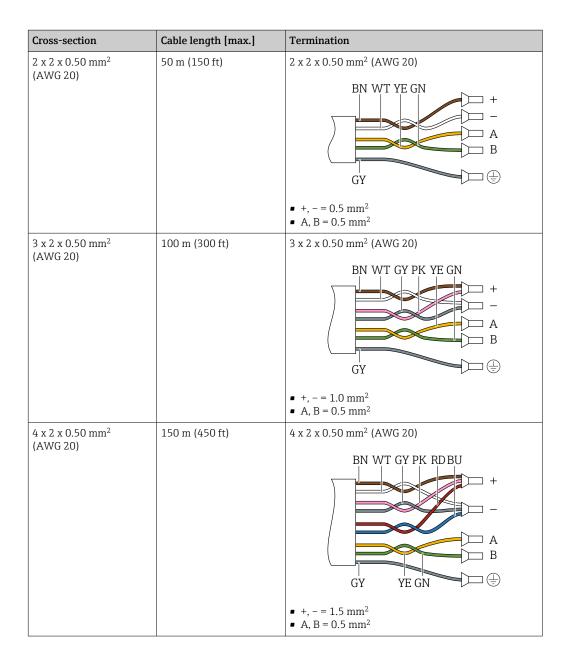

# Optionally available connecting cable

Connecting cable for	Zone 1; Class I, Division 1	
Standard cable	$2\times2\times0.5~\text{mm}^2$ (AWG 20) PVC cable $^{1)}$ with common shield (2 pairs, pairstranded)	
Flame resistance	According to DIN EN 60332-1-2	
Oil-resistance	According to DIN EN 60811-2-1	
Shielding	Tin-plated copper braid, optical cover ≥ 85 %	
Operating temperature	When mounted in a fixed position: $-50$ to $+105$ °C ( $-58$ to $+221$ °F); when cable can move freely: $-25$ to $+105$ °C ( $-13$ to $+221$ °F)	
Available cable length	Fixed: 20 m (60 ft); variable: up to maximum 50 m (150 ft)	

1) UV radiation can impair the cable outer sheath. Protect the cable from direct sunshine where possible.

C: Connecting cable between sensor and transmitter: Proline 500

Design	$6\times0.38~\text{mm}^2$ PVC cable $^{1)}$ with individual shielded cores and common copper shield		
Conductor resistance	$\leq 50 \Omega/\text{km} (0.015 \Omega/\text{ft})$		
Capacitance: core/shield	≤ 420 pF/m (128 pF/ft)		
Cable length (max.)	20 m (60 ft)		
Cable lengths (available for order)	5 m (15 ft), 10 m (30 ft), 20 m (60 ft)		
Cable diameter	11 mm (0.43 in) ± 0.5 mm (0.02 in)		
Continuous operating temperature	Max. 105 °C (221 °F)		

 $UV\ radiation\ can impair\ the\ cable\ outer\ sheath.\ Protect\ the\ cable\ from\ direct\ sunshine\ where\ possible.$ 

### Overvoltage protection

Mains voltage fluctuations	→ 🖺 38
Overvoltage category	Overvoltage category II
Short-term, temporary overvoltage	Up to 1200 V between cable and ground, for max. 5 s
Long-term, temporary overvoltage	Up to 500 V between cable and ground

# Performance characteristics

### Reference operating conditions

- Error limits based on ISO 11631
- Water with +15 to +45  $^{\circ}$ C (+59 to +113  $^{\circ}$ F) at 2 to 6 bar (29 to 87 psi)
- Specifications as per calibration protocol
- Accuracy based on accredited calibration rigs that are traced to ISO 17025.

# Maximum measured error

o.r. = of reading;  $1 \text{ g/cm}^3 = 1 \text{ kg/l}$ ; T = medium temperature

### Base accuracy



Properties: Design fundamentals  $\rightarrow \stackrel{\triangle}{=} 61$ 

Mass flow and volume flow (liquids)

±0.10 % o.r.

Mass flow (gases)

±0.50 % o.r.

Density (liquids)

Under reference conditions	Standard density calibration 1)	Wide-range Density specification <sup>2) 3)</sup>
[g/cm³]	[g/cm³]	[g/cm³]
±0.0005	±0.02	±0.004

- 1) Valid over the entire temperature and density range
- Valid range for special density calibration: 0 to 2  $g/cm^3$ , +10 to +80 °C (+50 to +176 °F) 2)
- order code for "Application package", option EE "Special density"

# Temperature

 $\pm 0.5 \,^{\circ}\text{C} \pm 0.005 \cdot \text{T} \,^{\circ}\text{C} \, (\pm 0.9 \,^{\circ}\text{F} \pm 0.003 \cdot (\text{T} - 32) \,^{\circ}\text{F})$ 

# Zero point stability

D	N	Zero poin	t stability			
[mm]	[in]	[kg/h]	[lb/min]			
8	<sup>3</sup> / <sub>8</sub>	0.150	0.0055			
15	1/2	0.488	0.0179			
15 FB	½ FB	1.350	0.0496			
25	1	1.350	0.0496			
25 FB	1 FB	3.375	0.124			
40	1½	3.375	0.124			
40 FB	1 ½ FB	5.25	0.193			
50	2	5.25	0.193			
50 FB	2 FB	13.5	0.496			
80	3	13.5	0.496			
FB = Full bore	FB = Full bore					

# Flow values

Flow values as turndown parameters depending on the nominal diameter.

# SI units

DN	1:1	1:10	1:20	1:50	1:100	1:500
[mm]	[kg/h]	[kg/h]	[kg/h]	[kg/h]	[kg/h]	[kg/h]
8	2 000	200	100	40	20	4
15	6500	650	325	130	65	13
15 FB	18000	1800	900	360	180	36
25	18000	1800	900	360	180	36
25 FB	45 000	4500	2 2 5 0	900	450	90
40	45 000	4500	2 2 5 0	900	450	90
40 FB	70000	7 000	3 5 0 0	1400	700	140
50	70000	7 000	3 5 0 0	1400	700	140
50 FB	180 000	18000	9000	3 6 0 0	1800	360
80	180 000	18000	9000	3 600	1800	360
FB = Full bore						

# US units

DN	1:1	1:10	1:20	1:50	1:100	1:500
[inch]	[lb/min]	[lb/min]	[lb/min]	[lb/min]	[lb/min]	[lb/min]
3/8	73.50	7.350	3.675	1.470	0.735	0.147
1/2	238.9	23.89	11.95	4.778	2.389	0.478
½ FB	661.5	66.15	33.08	13.23	6.615	1.323
1	661.5	66.15	33.08	13.23	6.615	1.323

DN	1:1	1:10	1:20	1:50	1:100	1:500
[inch]	[lb/min]	[lb/min]	[lb/min]	[lb/min]	[lb/min]	[lb/min]
1 FB	1654	165.4	82.70	33.08	16.54	3.308
11/2	1654	165.4	82.70	33.08	16.54	3.308
1½ FB	2 573	257.3	128.7	51.46	25.73	5.146
2	2 573	257.3	128.7	51.46	25.73	5.146
2 FB	6615	661.5	330.8	132.3	66.15	13.23
3	6615	661.5	330.8	132.3	66.15	13.23
FB = Full bo	FB = Full bore					

# Accuracy of outputs

The outputs have the following base accuracy specifications.

Current output

Accuracy	±5 μA
,	

Pulse/frequency output

o.r. = of reading

Accuracy	Max. ±50 ppm o.r. (over the entire ambient temperature range)
----------	---

### Repeatability

o.r. = of reading;  $1 \text{ g/cm}^3 = 1 \text{ kg/l}$ ; T = medium temperature

# Base repeatability



Mass flow and volume flow (liquids)

±0.05 % o.r.

Mass flow (gases)

±0.25 % o.r.

Density (liquids)

 $\pm 0.00025 \text{ g/cm}^3$ 

Temperature

 $\pm 0.25$  °C  $\pm 0.0025$  · T °C ( $\pm 0.45$  °F  $\pm 0.0015$  · (T-32) °F)

# Response time

The response time depends on the configuration (damping).

# Influence of ambient temperature

### **Current output**

Temperature coefficient	Max. 1 μA/°C
-------------------------	--------------

## Pulse/frequency output

Temperature coefficient	No additional effect. Included in accuracy.
-------------------------	---

# Influence of medium temperature

Mass flow and volume flow

o.f.s. = of full scale value


If there is a difference between the temperature during zero adjustment and the process temperature, the additional measured error of the sensors is typically  $\pm 0.0002$  %o.f.s./°C ( $\pm 0.0001$  % o.f.s./°F).

The influence is reduced when the zero adjustment is performed at process temperature.

If there is a difference between the density calibration temperature and the process temperature, the measured error of the sensors is typically  $\pm 0.0001$  g/cm<sup>3</sup>/°C ( $\pm 0.00005$  g/cm<sup>3</sup>/°F). Field density adjustment is possible.

# Wide-range density specification (special density calibration)

If the process temperature is outside the valid range ( $\rightarrow \stackrel{\triangle}{=} 57$ ) the measured error is  $\pm 0.0001 \text{ g/cm}^3 / ^{\circ}\text{C} (\pm 0.00005 \text{ g/cm}^3 / ^{\circ}\text{F})$ 

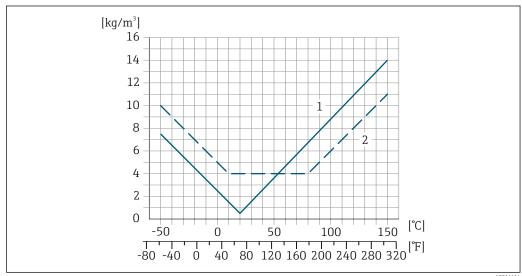

- 1 Field density adjustment, for example at +20 °C (+68 °F)
- Special density calibration

### Temperature

 $\pm 0.005 \cdot \text{T} \,^{\circ}\text{C} \, (\pm 0.005 \cdot (\text{T} - 32) \,^{\circ}\text{F})$ 

### Influence of medium pressure

The tables below show the effect that a difference in pressure between the calibration pressure and the process pressure has on the accuracy in the case of the mass flow and density.

o.r. = of reading



It is possible to compensate for the effect by:

- Reading in the current pressure measured value via the current input or a digital input.
- Specifying a fixed value for the pressure in the device parameters.



Operating Instructions  $\rightarrow \blacksquare 129$ .

DN		[% o.r./bar]	[% o.r./psi]
[mm]	[in]		
8	3/8	no influence	no influence
15	1/2	no influence	no influence
15 FB	½ FB	+0.003	+0.0002
25	1	+0.003	+0.0002
25 FB	1 FB	no influence	no influence
40	11/2	no influence	no influence
40 FB	1½ FB	no influence	no influence

DN		[% o.r./bar]	[% o.r./psi]
[mm]	[in]		
50	2	no influence	no influence
50 FB	2 FB	no influence	no influence
80	3	no influence	no influence
FB = Full bore			

# Design fundamentals

o.r. = of reading, o.f.s. = of full scale value

 $\label{eq:baseAccu} {\tt BaseAccu = base\ accuracy\ in\ \%\ o.r.,\ BaseRepeat = base\ repeatability\ in\ \%\ o.r.}$ 

MeasValue = measured value; ZeroPoint = zero point stability


Calculation of the maximum measured error as a function of the flow rate

Flow rate	Maximum measured error in % o.r.
$\geq \frac{\text{ZeroPoint}}{\text{BaseAccu}} \cdot 100$	± BaseAccu
A0021332	70021333
$< \frac{\text{ZeroPoint}}{\text{BaseAccu}} \cdot 100$	± ZeroPoint MeasValue · 100
A0021333	A0021334

Calculation of the maximum repeatability as a function of the flow rate

Flow rate	Maximum repeatability in % o.r.
$\geq \frac{\frac{1}{2} \cdot ZeroPoint}{BaseRepeat} \cdot 100$	± BaseRepeat
A0021335	
$<\frac{\frac{1}{2} \cdot \text{ZeroPoint}}{\text{BaseRepeat}} \cdot 100$	$\pm \frac{1}{2} \cdot \frac{\text{ZeroPoint}}{\text{MeasValue}} \cdot 100$
A0021336	A0021337


# Example of maximum measured error

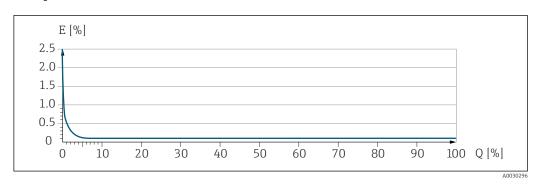

- E Maximum measured error in % o.r. (example)
- Q Flow rate in % of maximum full scale value

# Installation

# Mounting location

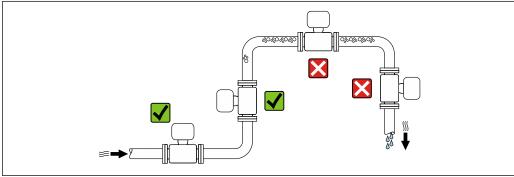


A0028772

To prevent measuring errors arising from accumulation of gas bubbles in the measuring pipe, avoid the following mounting locations in the piping:

- Highest point of a pipeline.
- Directly upstream of a free pipe outlet in a down pipe.

# Installation in down pipes

However, the following installation suggestion allows for installation in an open vertical pipeline. Pipe restrictions or the use of an orifice with a smaller cross-section than the nominal diameter prevent the sensor running empty while measurement is in progress.

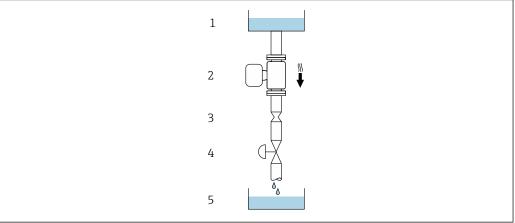

A0028773

 $\blacksquare$  22 Installation in a down pipe (e.g. for batching applications)

- 1 Supply tank
- 2 Sensor
- 3 Orifice plate, pipe restriction
- 4 Valve
- 5 Batching tank

DN		Ø orifice plate, pipe restriction	
[mm]	[in]	[mm]	[in]
8	<sup>3</sup> / <sub>8</sub>	6	0.24
15	1/2	10	0.40
15 FB	½ FB	15	0.60
25	1	14	0.55
25 FB	1 FB	24	0.95
40	1½	22	0.87
40 FB	1½ FB	35	1.38

DN		Ø orifice plate, pipe restriction	
[mm]	[in]	[mm]	[in]
50	2	28	1.10
50 FB	2 FB	54	2.13
80	3	50	1.97
FB = Full bore			

# Orientation

The direction of the arrow on the sensor nameplate helps you to install the sensor according to the flow direction (direction of medium flow through the piping).

	Orientatio	n	Recommendation
A	Vertical orientation	A0015591	<b>V V</b> 1)
В	Horizontal orientation, transmitter at top	A0015589	<b>√ √</b> <sup>2)</sup>
С	Horizontal orientation, transmitter at bottom	A0015590	<b>✓ ✓</b> <sup>3)</sup>
D	Horizontal orientation, transmitter at side	A0015592	


- 1) This orientation is recommended to ensure self-draining.
- 2) Applications with low process temperatures may reduce the ambient temperature. To maintain the minimum ambient temperature for the transmitter, this orientation is recommended.
- 3) Applications with high process temperatures may increase the ambient temperature. To maintain the maximum ambient temperature for the transmitter, this orientation is recommended.

# Inlet and outlet runs

# Mounting the transmitter housing


# Proline 500 - digital transmitter

### Post mounting

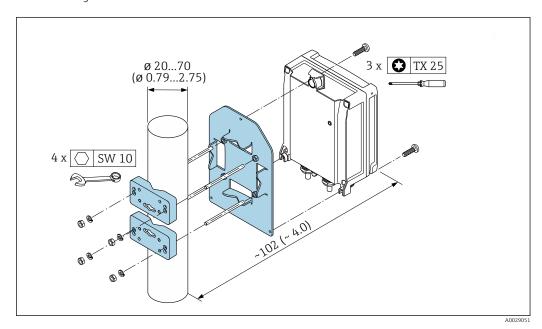

■ 23 Engineering unit mm (in)

# Wall mounting

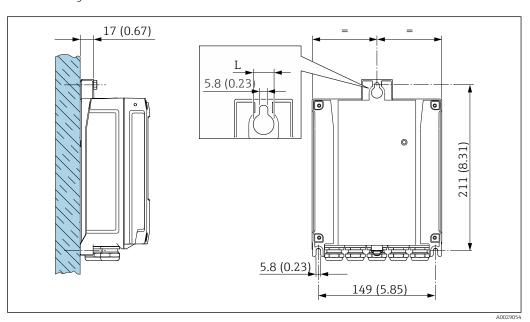

■ 24 Engineering unit mm (in)

L Depends on order code for "Transmitter housing"

Order code for "Transmitter housing"

- Option **A**, aluminum, coated: L = 14 mm (0.55 in)
- Option **D**, polycarbonate: L = 13 mm (0.51 in)

64

### Proline 500 transmitter


Post mounting

### **MARNING**

Order code for "Transmitter housing", option L "Cast, stainless": cast transmitters are very heavy.


They are unstable if they are not mounted on a secure, fixed post.

▶ Only mount the transmitter on a secure, fixed post on a stable surface.

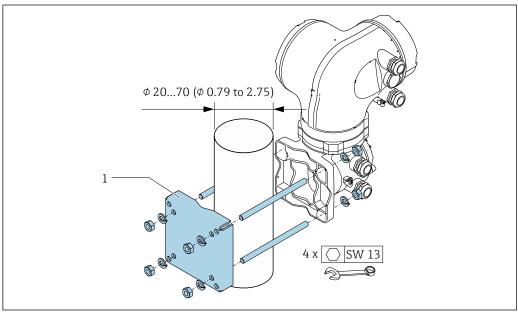

🖪 25 Engineering unit mm (in)

### Wall mounting

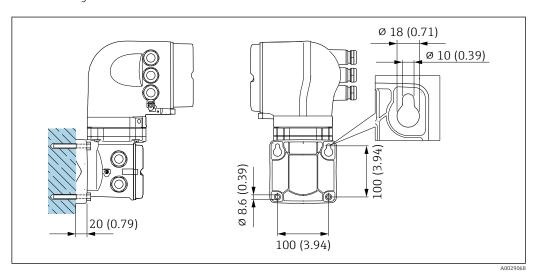

■ 26 Engineering unit mm (in)

# Special mounting instructions


### **Drainability**

When installed vertically, the measuring tube can be drained completely and protected against buildup.

When the sensor is installed in a horizontal line, eccentric clamps can be used to ensure complete drainability. When the system is pitched in a specific direction and at a specific slope, gravity can be used to achieve complete drainability. The sensor must be mounted in the correct position to ensure full drainability in the horizontal position. Markings on the sensor show the correct mounting position to optimize drainability.

Endress+Hauser 65

A002905

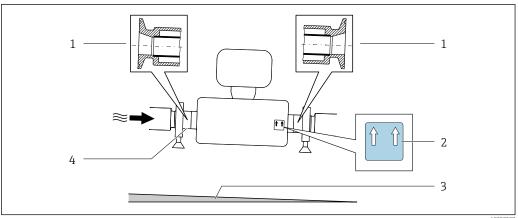

- Eccentric clamp connection
- "This side up" label indicates which side is up 2
- 3 Slope the device in accordance with the hygiene guidelines. Slope: approx. 2 % or 21 mm/m (0.24 in/feet)
- *Line on the underside indicates the lowest point of the eccentric process connection.*


### Hygienic compatibility

When installing in hygienic applications, please refer to the information in the "Certificates and approvals/hygienic compatibility" section → 🗎 121

### Securing with mounting clamp in the case of hygiene connections


It is not necessary to provide additional support for the sensor for operational performance purposes. If, however, additional support is required for installation purposes, the following dimensions must be observed.

Use mounting clamp with lining between clamp and measuring instrument.

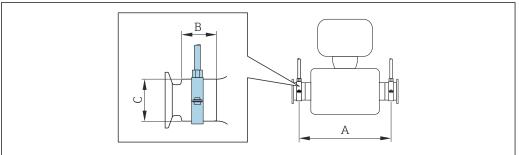


DN		A		В		С	
[mm]	[in]	[mm]	[in]	[mm]	[in]	[mm]	[in]
8	8	373	14.69	20	0.79	40	1.57
15	15	409	16.1	20	0.79	40	1.57
15 FB	15 FB	539	21.22	30	1.18	44.5	1.75
25	25	539	21.22	30	1.18	44.5	1.75
25 FB	25 FB	668	26.3	28	1.1	60	2.36
40	40	668	26.3	28	1.1	60	2.36
40 FB	40 FB	780	30.71	35	1.38	80	3.15
50	50	780	30.71	35	1.38	80	3.15
50 FB	50 FB	1152	45.35	57	2.24	90	3.54
80	80	1152	45.35	57	2.24	90	3.54

### Weather protection cover

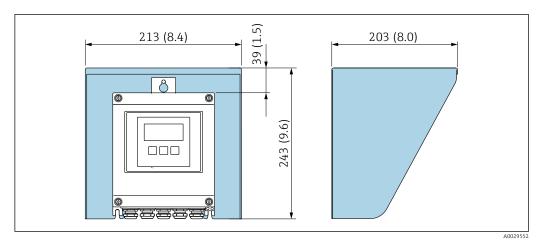

■ 27 Weather protection cover for Proline 500 – digital; engineering unit mm (in)

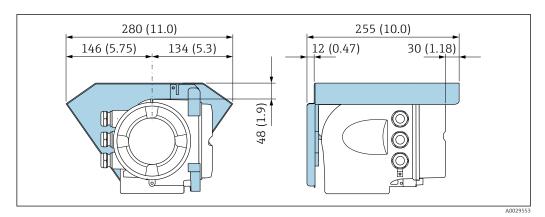

3 28 Weather protection cover for Proline 500; engineering unit mm (in)

# **Environment**

Ambient temperature range	Measuring device	<ul> <li>-40 to +60 °C (-40 to +140 °F)</li> <li>Order code for "Test, certificate", option JP:</li> <li>-50 to +60 °C (-58 to +140 °F)</li> </ul>
	Readability of the local display	-20 to $+60$ °C ( $-4$ to $+140$ °F) The readability of the display may be impaired at temperatures outside the temperature range.

- If operating outdoors:
   Avoid direct sunlight, particularly in warm climatic regions.

Storage temperature	−50 to +80 °C (−58 to +176 °F)
Climate class	DIN EN 60068-2-38 (test Z/AD)
Relative humidity	The device is suitable for use in outdoor and indoor areas with a relative humidity of 4 to 95%.

### Operating height

According to EN 61010-1

- $\le 2000 \,\mathrm{m} \,(6562 \,\mathrm{ft})$
- > 2 000 m (6 562 ft) with additional overvoltage protection (e.g. Endress+Hauser HAW Series)

### Degree of protection

### Transmitter

- IP66/67, Type 4X enclosure, suitable for pollution degree 4
- When the housing is open: IP20, Type 1 enclosure, suitable for pollution degree 2
- Display module: IP20, Type 1 enclosure, suitable for pollution degree 2

### Sensor

- IP66/67, Type 4X enclosure, suitable for pollution degree 4
- When the housing is open: IP20, Type 1 enclosure, suitable for pollution degree 2

### Optional

Order code for "Sensor options", option CM "IP69

### External WLAN antenna

IP67

### Vibration- and shockresistance

### Vibration sinusoidal, in accordance with IEC 60068-2-6

#### Sensor

- 2 to 8.4 Hz, 3.5 mm peak
- 8.4 to 2000 Hz, 1 g peak

### Transmitter

- 2 to 8.4 Hz, 7.5 mm peak
- 8.4 to 2000 Hz, 2 g peak

### Vibration broad-band random, according to IEC 60068-2-64

### Sensor

- 10 to 200 Hz,  $0.003 g^2/Hz$
- $\blacksquare$  200 to 2000 Hz, 0.001 g<sup>2</sup>/Hz
- Total: 1.54 g rms

### Transmitter

- 10 to 200 Hz,  $0.01 \text{ g}^2/\text{Hz}$
- 200 to 2000 Hz, 0.003 q<sup>2</sup>/Hz
- Total: 2.70 g rms

# Shock half-sine, according to IEC 60068-2-27

- Sensor
- 6 ms 30 g
- Transmitter6 ms 50 q

### Rough handling shocks, according to IEC 60068-2-31

### Interior cleaning

- Cleaning in place (CIP)
- Sterilization in place (SIP)
- Cleaning with pigs

### **Options**

Oil- and grease-free version for wetted parts, without declaration Order code for "Service", option HA

### Mechanical load

Transmitter housing and sensor connection housing:

- Protect against mechanical effects, such as shock or impact
- Do not use as a ladder or climbing aid

# Electromagnetic compatibility (EMC)


- As per IEC/EN 61326 and NAMUR Recommendation 21 (NE 21)
- Device version with PROFIBUS DP: Complies with emission limits for industry as per EN 50170
   Volume 2, IEC 61784
- The following applies for PROFIBUS DP: If baud rates > 1.5 MBaud, an EMC cable entry must be used and the cable shield must continue as far as the terminal wherever possible.
- Details are provided in the Declaration of Conformity.
- This unit is not intended for use in residential environments and cannot guarantee adequate protection of the radio reception in such environments.

# **Process**

### Medium temperature range

-50 to +150 °C (-58 to +302 °F)

### Dependency of ambient temperature on medium temperature

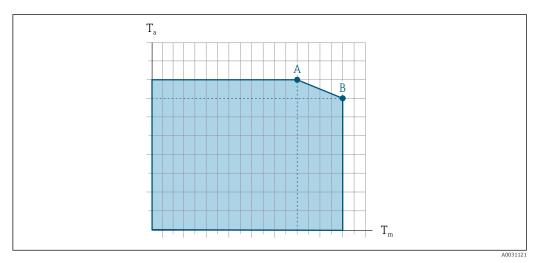

29 Exemplary representation, values in the table below.

 $T_a$  Ambient temperature

 $T_m$  Medium temperature

- A Maximum permitted medium temperature  $T_m$  at  $T_{a max}$  = 60 °C (140 °F); higher medium temperatures  $T_m$  require a reduction in the ambient temperature  $T_a$
- B Maximum permitted ambient temperature  $T_a$  for the maximum specified medium temperature  $T_m$  of the sensor
- Values for devices that are used in the hazardous area: Separate Ex documentation (XA) for the device  $\rightarrow \triangleq 130$ .

	Not insulated				Insulated			
	A		В		A		В	
Version	Ta	T <sub>m</sub>	Ta	$T_{m}$	Ta	T <sub>m</sub>	Ta	T <sub>m</sub>
Promass I 500 – digital	60°C	140 °C	55 ℃	150 ℃	60 °C	90 ℃	45 °C	150 °C
Promass I 500	(140 °F)	(284°F)	(131°F)	(302 °F)	(140 °F)	(194°F)	(113°F)	(302 °F)


### Density

0 to  $5000 \text{ kg/m}^3$  (0 to 312 lb/cf)

# Pressure-temperature ratings


The following pressure/temperature diagrams apply to all pressure-bearing parts of the device and not just the process connection. The diagrams show the maximum permissible medium pressure depending on the specific medium temperature.

### Flange according to EN 1092-1 (DIN 2501)

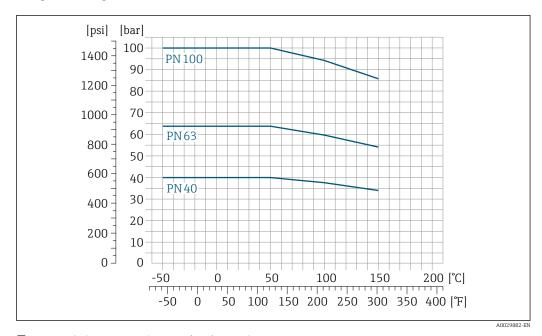


■ 30 With flange material 1.4301 (304); wetted parts: titanium

# Flange according to ASME B16.5

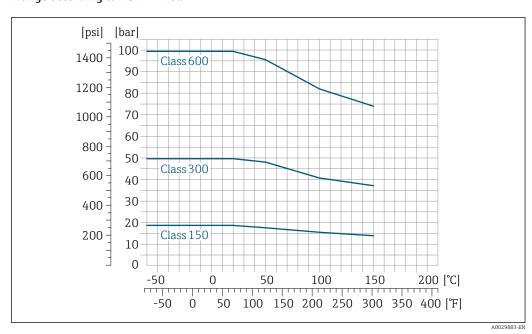


■ 31 With flange material 1.4301 (304); wetted parts: titanium

# Flange JIS B2220

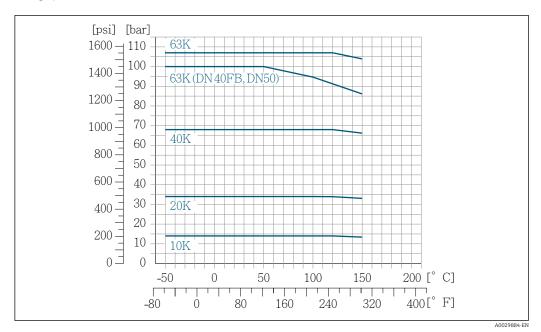


■ 32 With flange material 1.4301 (304). Wetted parts: titanium.

# Flange DIN 11864-2 Form A

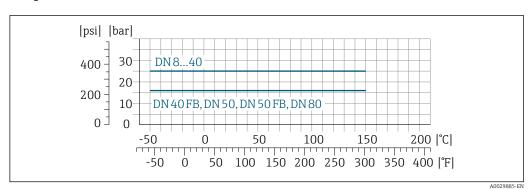

 $\blacksquare$  33 With flange material Grade 2 titanium


# Thread DIN 11851

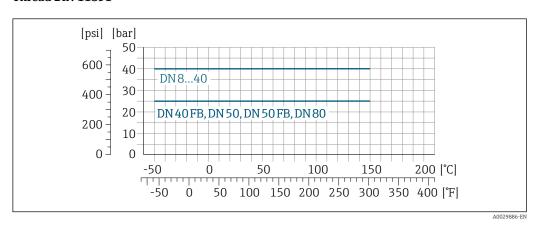

■ 34 With connection material Grade 2 titanium

DIN 11851 allows for applications up to +140  $^{\circ}$ C (+284  $^{\circ}$ F) if suitable sealing materials are used. Please take this into account when selecting seals and counterparts, as these components can limit the pressure and temperature range.


### Thread DIN 11864-1 Form A

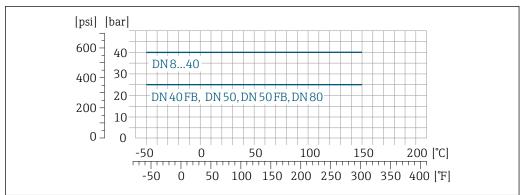

■ 35 With connection material Grade 2 titanium

#### A0029887-EN


### Thread ISO 2853

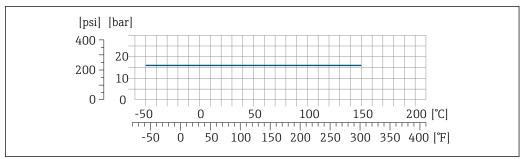

■ 36 With connection material Grade 2 titanium

### A0029888-EN

### Thread SMS 1145

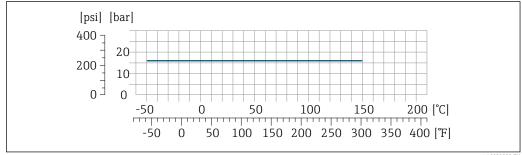

A002

■ 37 With connection material Grade 2 titanium

SMS 1145 allows for applications up to 16 bar (232 psi) if suitable sealing materials are used. Please take this into account when selecting seals and counterparts, as these components can limit the pressure and temperature range.

## Tri-Clamp

The clamp connections are suitable up to a maximum pressure of 16 bar (232 psi). Please observe the operating limits of the clamp and seal used as they can be over 16 bar (232 psi). The clamp and seal are not included in the scope of supply.

### Sensor housing

The sensor housing is filled with dry nitrogen gas and protects the electronics and mechanics inside.

If a measuring tube fails (e.g. due to process characteristics like corrosive or abrasive fluids), the fluid will initially be contained by the sensor housing.

If the sensor is to be purged with gas (gas detection), it should be equipped with purge connections.

Do not open the purge connections unless the containment can be filled immediately with a dry, inert gas. Use only low pressure to purge.

Maximum pressure: 5 bar (72.5 psi)

### Burst pressure of the sensor housing

The following sensor housing burst pressures are only valid for standard devices and/or devices equipped with closed purge connections (not opened/as delivered).

If a device fitted with purge connections (order code for "Sensor option", option CH "Purge connection") is connected to the purge system, the maximum pressure is determined by the purge system itself or by the device, depending on which component has the lower pressure classification.

The sensor housing burst pressure refers to a typical internal pressure which is reached prior to mechanical failure of the sensor housing and which was determined during type testing. The corresponding type test declaration can be ordered with the device (order code for "Additional approval", option LN "Sensor housing burst pressure, type test").

D	N	Sensor housing	burst pressure
[mm]	[in]	[bar]	[psi]
8	3/8	220	3 190
15	1/2	220	3 190
15 FB	½ FB	235	3 408
25	1	235	3 408
25 FB	1 FB	220	3 190
40	1½	220	3 190
40 FB	1 ½ FB	235	3 408
50	2	235	3 408
50 FB	2 FB	460	6670
80	3	460	6670
FB = Full bore			

For information on the dimensions: see the "Mechanical construction" section  $\rightarrow \triangleq 76$ 

# Flow limit

Select the nominal diameter by optimizing between the required flow range and permissible pressure loss.

- For an overview of the full scale values for the measuring range, see the "Measuring range" section → 🗎 12
- The minimum recommended full scale value is approx. 1/20 of the maximum full scale value
- In most applications, 20 to 50 % of the maximum full scale value can be considered ideal
- A low full scale value must be selected for abrasive media (such as liquids with entrained solids): flow velocity < 1 m/s (< 3 ft/s).
- For gas measurement the following rules apply:
  - The flow velocity in the measuring tubes should not exceed half the sound velocity (0.5 Mach).
  - The maximum mass flow depends on the density of the gas: formula  $\rightarrow$  🖺 12

### **Pressure loss**


To calculate the pressure loss, use the *Applicator* sizing tool  $\rightarrow$  128

### System pressure

It is important that cavitation does not occur, or that gases entrained in the liquids do not outgas. This is prevented by means of a sufficiently high system pressure.

For this reason, the following mounting locations are recommended:

- At the lowest point in a vertical pipe
- Downstream from pumps (no danger of vacuum)

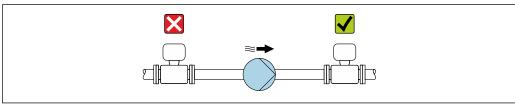

A002877

### Thermal insulation

In the case of some fluids, it is important to keep the heat radiated from the sensor to the transmitter to a low level. A wide range of materials can be used for the required insulation.


The following device versions are recommended for versions with thermal insulation: Version with extended neck for insulation:

Order code for "Sensor option", option CG with an extended neck length of  $105\ mm$  (4.13 in).

### NOTICE

### Electronics overheating on account of thermal insulation!

- Recommended orientation: horizontal orientation, sensor connection housing pointing downwards.
- ▶ Do not insulate the sensor connection housing.
- Maximum permissible temperature at the lower end of the sensor connection housing: 80 °C (176 °F)
- ► Thermal insulation with not isolated extended neck: We recommend that you do not insulate the extended neck in order to ensure optimum dissipation of heat.

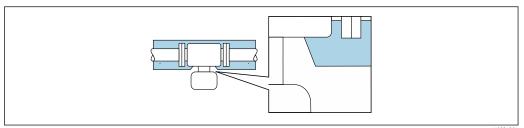

A003

38 Thermal insulation with not isolated extended neck

### Heating

Some fluids require suitable measures to avoid loss of heat at the sensor.

# Heating options

- Electrical heating, e.g. with electric band heaters <sup>1)</sup>
- Via pipes carrying hot water or steam
- Via heating jackets

74

# NOTICE

# Danger of overheating when heating

- ▶ Ensure that the temperature at the lower end of the transmitter housing does not exceed  $80 \,^{\circ}\text{C}$  (176  $^{\circ}\text{F}$ ).
- ▶ Ensure that sufficient convection takes place at the transmitter neck.
- ► Ensure that a sufficiently large area of the transmitter neck remains exposed. The uncovered part serves as a radiator and protects the electronics from overheating and excessive cooling.
- ▶ When using in potentially explosive atmospheres, observe the information in the device-specific Ex documentation. For detailed information on the temperature tables, see the separate document entitled "Safety Instructions" (XA) for the device.

### Vibrations


The high oscillation frequency of the measuring tubes ensures that the correct operation of the measuring system is not influenced by plant vibrations.

# Mechanical construction

### Dimensions in SI units

Housing of Proline 500 – digital transmitter

Non-hazardous area or hazardous area: Zone 2; Class I, Division 2

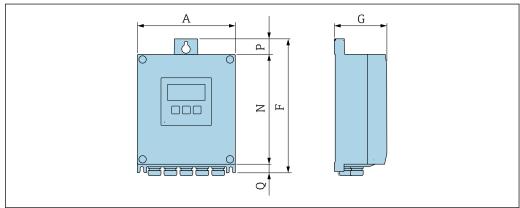

A003378

Order code for "Transmitter housing", option A "Aluminum, coated" and order code for "Integrated ISEM electronics", option A "Sensor"


A	F	G	N	P	Q
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]
167	232	89	187	24	

 ${\it Order\ code\ for\ "Transmitter\ housing",\ option\ D\ "Polycarbonate"\ and\ order\ code\ for\ "Integrated\ ISEM\ electronics",\ option\ A\ "Sensor"$ 

A	F	G	N	P	Q
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]
177	234	89	197	17	

# Housing of Proline 500 transmitter

Hazardous area: Zone 2; Class I, Division 2 or Zone 1; Class I, Division 1

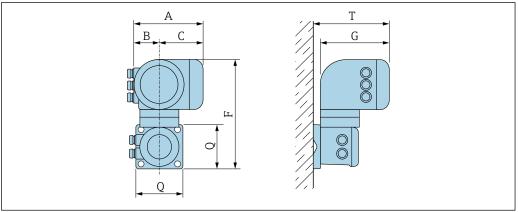

A003378

Order code for "Transmitter housing", option A "Aluminum, coated" and order code for "Integrated ISEM electronics", option B "Transmitter"


A	B	C	F	G	Q	T
[mm]						
188	85	103	318	217	130	

76

 $\label{lem:code} \textit{Order code for "Transmitter housing", option L "Cast, stainless" and order code for "Integrated ISEM electronics", option B "Transmitter"$ 

A	B	C	F	G	Q	T
[mm]						
188	85	103	295	217	130	

# Sensor connection housing

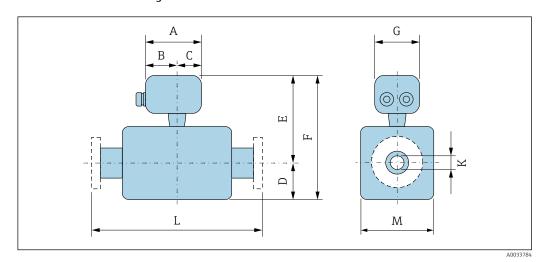

Order code for "Sensor connection housing", option A "Aluminum, coated"

DN	A 1)	B 1)	С	D	E 2)	F <sup>2)</sup>	G	К	L	М
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]
8	148	94	54	57	207	264	136	8.56	3)	115
15	148	94	54	57	207	264	136	11.4	3)	115
15 FB	148	94	54	57	207	264	136	17.1	3)	115
25	148	94	54	57	207	264	136	17.1	3)	115
25 FB	148	94	54	71	217	288	136	26.4	3)	142
40	148	94	54	71	217	288	136	26.4	3)	142
40 FB	148	94	54	84	231	315	136	35.6	3)	169
50	148	94	54	84	231	315	136	35.6	3)	169
50 FB	148	94	54	109.5	256.5	366	136	54.8	3)	220
80	148	94	54	109.5	256.5	366	136	54.8	3)	220

- 1) Depending on the cable gland used: values up to  $\pm$  30 mm
- 2) With order code for "Sensor option", option CG: values +70 mm
- 3) Depending on the process connection

Order code for "Sensor connection housing", option B "Stainless"

DN	A 1)	В	С	D	E 2)	F <sup>2)</sup>	G	K	L	M
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]
8	137	78	59	57	202	259	134	8.56	3)	115
15	137	78	59	57	202	259	134	11.4	3)	115
15 FB	137	78	59	57	202	259	134	17.1	3)	115
25	137	78	59	57	202	259	134	17.1	3)	115
25 FB	137	78	59	71	212	283	134	26.4	3)	142

DN	A 1)	В	С	D	E <sup>2)</sup>	F <sup>2)</sup>	G	K	L	М
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]
40	137	78	59	71	212	283	134	26.4	3)	142
40 FB	137	78	59	84	226	310	134	35.6	3)	169
50	137	78	59	84	226	310	134	35.6	3)	169
50 FB	137	78	59	109.5	251.5	361	134	54.8	3)	220
80	137	78	59	109.5	251.5	361	134	54.8	3)	220

- 1) Depending on the cable gland used: values up to + 30 mm
- 2) 3) With order code for "Sensor option", option CG: values +70 mm
- Depending on the process connection

# Order code for "Sensor connection housing", option C "Ultra-compact hygienic, stainless"

DN	A 1)	В	С	D	E 2)	F <sup>2)</sup>	G	K	L	М
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]
8	124	68	56	57	202	259	112	8.56	3)	115
15	124	68	56	57	202	259	112	11.4	3)	115
15 FB	124	68	56	57	202	259	112	17.1	3)	115
25	124	68	56	57	202	259	112	17.1	3)	115
25 FB	124	68	56	71	212	283	112	26.4	3)	142
40	124	68	56	71	212	283	112	26.4	3)	142
40 FB	124	68	56	84	226	310	112	35.6	3)	169
50	124	68	56	84	226	310	112	35.6	3)	169
50 FB	124	68	56	109.5	251.5	361	112	54.8	3)	220
80	124	68	56	109.5	251.5	361	112	54.8	3)	220

- Depending on the cable gland used: values up to  $\pm$  30 mm 1)
- 2) 3) With order code for "Sensor option", option CG: values +70 mm
- Depending on the process connection


# Order code for "Sensor connection housing", option L "Cast, stainless"

DN	A 1)	В	С	D	E 2)	F <sup>2)</sup>	G	K	L	М
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]
8	145	86	59	57	230	287	136	8.56	3)	115
15	145	86	59	57	230	287	136	11.4	3)	115
15 FB	145	86	59	57	230	287	136	17.1	3)	115
25	145	86	59	57	230	287	136	17.1	3)	115
25 FB	145	86	59	71	240	311	136	26.4	3)	142
40	145	86	59	71	240	311	136	26.4	3)	142
40 FB	145	86	59	84	254	338	136	35.6	3)	169
50	145	86	59	84	254	338	136	35.6	3)	169
50 FB	145	86	59	109.5	279.5	389	136	54.8	3)	220
80	145	86	59	109.5	279.5	389	136	54.8	3)	220

- 1) Depending on the cable gland used: values up to  $\pm$  30 mm
- 2) With order code for "Sensor option", option CG: values +70 mm
- Depending on the process connection

# Flange connections

Fixed flange EN 1092-1, ASME B16.5, JIS B2220

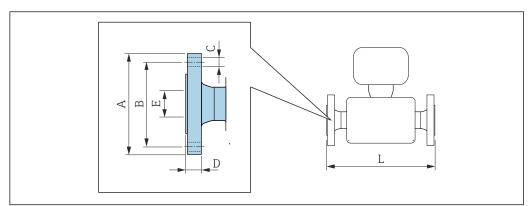

A0015621

Length tolerance for dimension L in mm: +1.5 / -2.0

Flange according to EN 1092-1 (DIN 2501) Form B1 (DIN 2526 Form C): PN 40 1.4301 (304), wetted parts: titanium  Order code for "Process connection", option D2W										
DN         A         B         C         D         E         L           [mm]         [mm]         [mm]         [mm]         [mm]										
8 <sup>1)</sup>	95	65	4 × Ø14	16	17.30	403				
15	95	65	4 × Ø14	16	17.30	439				
15 FB	95	65	4 × Ø14	15	17.07	573				
25	115	85	4 × Ø14	19	28.50	579				
25 FB	115	85	4 × Ø14	18	26.40	702				
40	150	110	4 × Ø18	22	43.10	707.5				
40 FB	150	110	4 × Ø18	20	35.62	821				
50	165	125	4 × Ø18	24	54.50	829				
50 FB	165	125	4 × Ø18	36	54.8	1211.5				
80 200 160 8 × Ø18 33 82.5 1211										
FB = Full bore Surface roughness: Ra 3.2 to 12.5 μm										

1) DN 8 with DN 15 flanges as standard

1.4301 (304),	Flange according to EN 1092-1 (DIN 2501) Form B2 (DIN 2526 Form E): PN 63 1.4301 (304), wetted parts: titanium Order code for "Process connection", option D3W											
DN [mm]												
50	180	135	4 × Ø22	34	54.5	833						
50 FB	180	135	4 × Ø22	45	54.8	1211.5						
80 215 170 8ר22 41 81.7 1211												
FB = Full bore Surface roughness (flange): Ra 0.8 to 3.2 μm												

# Flange according to EN 1092-1 (DIN 2501) Form B2 (DIN 2526 Form E): PN 100 1.4301 (304), wetted parts: titanium

Order code for "Process connection", option D4W

DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]
8 <sup>1)</sup>	105	75	4 × Ø14	25	17.30	403
15	105	75	4 × Ø14	25	17.30	439
15 FB	105	75	4 × Ø14	26	17.07	573
25	140	100	4 × Ø18	29	28.50	579
25 FB	140	100	4 × Ø18	31	26.40	702
40	170	125	4 × Ø22	32	42.50	707.5
40 FB	170	125	4 × Ø22	33	35.62	821
50	195	145	4 × Ø26	36	53.90	833
50 FB	195	145	4 × Ø26	48	54.8	1211.5
80	230	180	8 × Ø26	58	80.9	1236.5

FB = Full bore

Surface roughness (flange): Ra 0.8 to 3.2  $\mu m$ 

# 1) DN 8 with DN 15 flanges as standard

#### Flange according to ASME B16.5: Class 150 1.4301 (304), wetted parts: titanium Order code for "Process connection", option AAW С D Е Α [mm] [mm] [mm] [mm] [mm] [mm] [mm] 8 1) 4 × Ø15.7 90 60.3 20 15.70 403 15 90 60.3 4 × Ø15.7 20 15.70 439 15 FB 90 60.3 4 × Ø15.7 19 17.07 573 25 110 79.4 4 × Ø15.7 23 26.70 579 25 FB 4 × Ø15.7 110 79.4 22 26.40 702 40 125 98.4 4 × Ø15.7 26 40.90 707.5 40 FB 125 98.4 4 × Ø15.7 35.62 821 24 50 150 120.7 $4 \times Ø19.1$ 28 52.60 829 50 FB 150 120.7 4 × Ø19.1 40 54.8 1211.5 78 80 190 152.4 4 × Ø19.1 37 1211 FB = Full bore Surface roughness (flange): Ra 3.2 to 6.3 µm

1) DN 8 with DN 15 flanges as standard

1.4301 (304)	Flange according to ASME B16.5: Class 300 1.4301 (304), wetted parts: titanium Order code for "Process connection", option ABW								
DN         A         B         C         D         E         L           [mm]         [mm]         [mm]         [mm]         [mm]									
8 <sup>1)</sup>	95	66.7	4 × Ø15.7	20	15.70	403			
15	95	66.7	4 × Ø15.7	20	15.70	439			
15 FB	95	66.7	4 × Ø15.7	19	17.07	573			
25	125	88.9	4 × Ø19.1	23	26.70	579			

# Flange according to ASME B16.5: Class 300 1.4301 (304), wetted parts: titanium

Order code for "Process connection", option ABW

DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]
25 FB	125	88.9	4 × Ø19.1	22	26.40	702
40	155	114.3	4 × Ø22.4	26	40.90	707.5
40 FB	155	114.3	4 × Ø22.4	24	35.62	821
50	165	127.0	8 × Ø19.1	28	52.60	829
50 FB	165	127.0	8 × Ø19.1	43	54.8	1211.5
80	210	168.3	8 × Ø22.3	42	78	1211

FB = Full bore

Surface roughness (flange): Ra 3.2 to 6.3  $\mu m$ 

# 1) DN 8 with DN 15 flanges as standard

# Flange according to ASME B16.5: Class 600 1.4301 (304), wetted parts: titanium

Order code for "Process connection", option ACW

order code for Process connection, option New							
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]	
8 <sup>1)</sup>	95	66.7	4 × Ø15.7	20	13.80	403	
15	95	66.7	4 × Ø15.7	20	13.80	439	
15 FB	95	66.7	4 × Ø15.7	22	17.07	573	
25	125	88.9	4 × Ø19.1	23	24.40	579	
25 FB	125	88.9	4 × Ø19.1	25	26.40	702	
40	155	114.3	4 × Ø22.4	28	38.10	707.5	
40 FB	155	114.3	4 × Ø22.4	29	35.62	821	
50	165	127.0	8 × Ø19.1	33	49.30	833	
50 FB	165	127.0	8 × Ø19.1	46	54.8	1211.5	
80	210	168.3	8 × Ø22.3	53	73.7	1223	
		·	·			·	

FB = Full bore

Surface roughness (flange): Ra 3.2 to 6.3 µm

### 1) DN 8 with DN 15 flanges as standard

# Flange JIS B2220: 10K 1.4301 (304), wetted parts: titanium

Order code for "Process connection", option NDW

DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]
50	155	120	4 × Ø19	28	50	829
50 FB	155	120	4 × Ø19	40	54.8	1211.5
80	185	150	8 × Ø19	33	80	1211

FB = Full bore

Surface roughness (flange): Ra 3.2 to 6.3  $\mu m$ 

Flange JIS B2220: 20K 1.4301 (304), wetted parts: titanium Order code for "Process connection", option NEW									
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]			
8 <sup>1)</sup>	95	70	4 × Ø15	20	15.00	403			
15	95	70	4 × Ø15	20	15.00	439			
15 FB	95	70	4 × Ø15	19	17.07	573			
25	125	90	4 × Ø19	23	25.00	579			
25 FB	125	90	4 × Ø19	22	26.40	702			
40	140	105	4 × Ø19	26	40.00	707.5			
40 FB	140	105	4 × Ø19	24	35.62	821			
50	155	120	8 × Ø19	28	50.00	829			
50 FB	155	120	8 × Ø19	42	54.8	1211.5			
80	200	160	8 × Ø23	36	80	1211			
	FB = Full bore Surface roughness (flange): Ra 3.2 to 6.3 μm								

1) DN 8 with DN 15 flanges as standard

Flange JIS B2220: 40K 1.4301 (304), wetted parts: titanium Order code for "Process connection", option NFW								
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]		
8 <sup>1)</sup>	115	80	4 × Ø19	25	15.00	403		
15	115	80	4 × Ø19	25	15.00	439		
15 FB	115	80	4 × Ø19	26	17.07	573		
25	130	95	4 × Ø19	27	25.00	579		
25 FB	130	95	4 × Ø19	29	26.40	702		
40	160	120	4 × Ø23	30	38.00	707.5		
40 FB	160	120	4 × Ø23	31	35.62	821		
50	165	130	8 × Ø19	32	50.00	829		
50 FB	165	130	8 × Ø19	43	54.8	1211.5		
80	210	170	8 × Ø23	46	75	1211		
FB = Full bore Surface roughness (flange): Ra 3.2 to 6.3 μm								

1) DN 8 with DN 15 flanges as standard

Flange JIS B2220: 63K 1.4301 (304), wetted parts: titanium Order code for "Process connection", option NHW								
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]		
8 <sup>1)</sup>	120	85	4 × Ø19	28	12.00	403		
15	120	85	4 × Ø19	28	12.80	439		
15 FB	120	85	4 × Ø19	29	17.07	573		
25	140	100	4 × Ø23	30	22.00	579		


Flange JIS B2220: 63K 1.4301 (304), wetted parts: titanium Order code for "Process connection", option NHW									
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]			
25 FB	140	100	4 × Ø23	32	26.40	702			
40	175	130	4 × Ø25	36	35.00	707.5			
40 FB	175	130	4 × Ø25	37	35.62	821			
50	185	145	8 × Ø23	40	48.00	833			
50 FB	185	145	8 × Ø23	47	54.8	1211.5			
80	230	185	8 × Ø25	55	73	1226.5			
ED - Eull boro	ED - Evil have								

FB = Full bore

Surface roughness (flange): Ra 3.2 to 6.3  $\mu m$ 

#### 1) DN 8 with DN 15 flanges as standard

# Fixed flange DIN 11864-2

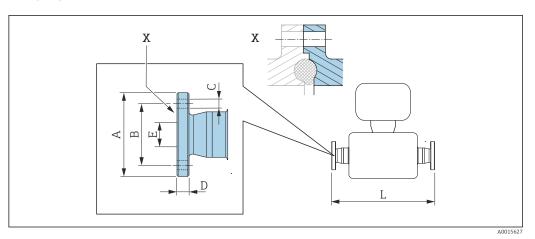

 $Detail \it{X:} A symmetrical \ process \ connection; the \ part \ shown \ in \ gray \ is \ provided \ by \ the \ supplier.$ 

Flange DIN11864-2 Form A, for pipe according to DIN11866 series A, flange with notch

# Length tolerance for dimension L in mm: +1.5 / -2.0

Order code for "Process connection", option <b>KFW</b>								
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]		
8 1)	54	37	4 × Ø9	10	10	448		
15	59	42	4 × Ø9	10	16	484		
25	70	53	4 × Ø9	10	26	622		
40	82	65	4 × Ø9	10	38	750		
50	94	77	4 × Ø9	10	50	872		
80	133	112	8 × Ø11	12	81	1269		


3A version available: order code for "Additional approval", option LP in conjunction with

 $Ra_{max}$  = 0.76 µm: order code for "Measuring tube material", option CB or  $Ra_{max}$  = 0.38 µm: order code for "Measuring tube material", option CD

### DN 8 with DN 10 flanges

# **Clamp connections**

# Tri-Clamp

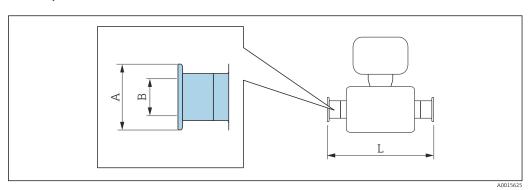

Length tolerance for dimension L in mm: +1.5 / -2.0

Tri-Clamp ( ≥ 1"), DIN 11866 series C  Titanium  Order code for "Process connection", option FTW							
DN [mm]	Clamp [in]	A [mm]	B [mm]	L [mm]			
8	1	50.4	22.1	426			
15	1	50.4	22.1	462			
15 FB	see ¾" Tri-Clamp connection						
25	1	50.4	22.1	602			
25 FB	1	50.4	22.1	730.5			
40	1 ½	50.4	34.8	730.5			
40 FB	1 ½	50.4	34.8	850			
50	2	63.9	47.5	850			
50 FB <sup>1)</sup>	2 1/2	77.4	60.3	1268.5			
80	3	90.9	72.9	1268.5			

FB = Full bore

3A version available: order code for "Additional approval", option LP in conjunction with  $\rm Ra_{max}$  = 0.76  $\mu m$ : order code for "Measuring tube material", option CB or

 $Ra_{max}$  = 0.38  $\mu m$  order code for "Measuring tube material", option CD

# Order code for "Process connection", option FRW

34" Tri-Clamp, DIN 11866 series C Titanium Order code for "Process connection", option FEW							
DN         Clamp         A         B         L           [mm]         [in]         [mm]         [mm]							
8	3/4	25.0	16.0	426			
15	3/4	25.0	16.0	462			
15 FB	3/4	25.0	16.0	602			

 ${\tt 3A\ version\ available: order\ code\ for\ "Additional\ approval",\ option\ LP\ in\ conjunction\ with}$ 

 $Ra_{max}$  = 0.76  $\mu m$  : order code for "Measuring tube material", option CB or

 $Ra_{max} = 0.38 \ \mu m$ : order code for "Measuring tube material", option CD

# ½" Tri-Clamp, DIN 11866 series C

Titanium

Order code for "Process connection", option FBW

DN [mm]	Clamp [in]	A [mm]	B [mm]	L [mm]
8	1/2	25.0	9.5	426
15	1/2	25.0	9.5	462

3A version available: order code for "Additional approval", option LP in conjunction with

 $Ra_{max}$  = 0.76 µm: order code for "Measuring tube material", option CB or  $Ra_{max}$  = 0.38 µm: order code for "Measuring tube material", option CD

Eccentric Tri-Clamp, DIN 11866 series C Titanium						
DN [mm]	Order code for "Process connection", option	Clamp [in]	A [mm]	B [mm]	L [mm]	
8	FEA	1/2	25	9.5	426	
15	FEC	3/4	25	15.75	462	
15 FB	FEE	1	50.5	22.1	602	
25	FEE	1	50.5	22.1	602	
25 FB	FEG	1½	50.5	34.8	730.5	
40	FEG	1½	50.5	34.8	730.5	
40 FB	FEJ	2	64	47.5	850	
50	FEJ	2	64	47.5	850	
50 FB	FEL	2 ½	77.5	60.3	1268.5	
50 FB	FEM	3	91	72.9	1268.5	
80	FEL	2 ½	77.5	60.3	1268.5	
80	FEM	3	91	72.9	1268.5	


3A version available: order code for "Additional approval", option LP in conjunction with

 $Ra_{max}$  = 0.76 µm: order code for "Measuring tube material", option CB or  $Ra_{max}$  = 0.38 µm: order code for "Measuring tube material", option CD

Additional information regarding "Eccentric clamps"

# Couplings

Thread DIN 11851

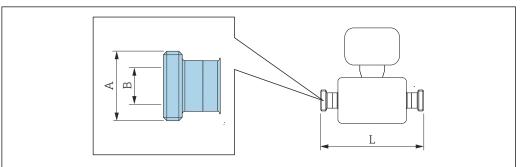

A0015628

Length tolerance for dimension L in mm: +1.5 / -2.0

1268.5

Thread DIN 11851, for pipe according to DIN11866 series A Titanium Order code for "Process connection", option KCW					
DN [mm]	A [in]	B [mm]	L [mm]		
8	Rd 34 × 1/8	16	426		
15	Rd 34 × 1/8	16	462		
15 FB	Rd 34 × 1/8	16	602		
25	Rd 52 × 1/6	26	602		
25 FB	Rd 52 × 1/6	26	737		
40	Rd 65 × 1/6	38	730.5		
40 FB	Rd 65 × 1/6	38	856		
50	Rd 78 × 1/6	50	856		
50 FB	Rd 78 × 1/6	50	1268.5		

FB = Full bore

80

 ${\tt 3A\ version\ available: order\ code\ for\ "Additional\ approval",\ option\ LP\ in\ conjunction\ with}$ 

Rd 110 × 1/4

 $Ra_{max} = 0.76 \ \mu m$ : order code for "Measuring tube material", option CB

Thread Rd 28 × 1/8" DIN 11851, for pipe according to DIN11866 series A  Titanium  Order code for "Process connection", option KAW				
DN [mm]	A [in]	B [mm]	L [mm]	
8	Rd 28 × 1/8	10	426	
15	Rd 28 × 1/8	10	462	

3A version available: order code for "Additional approval", option LP in conjunction with  $Ra_{max}$  = 0.76  $\mu m$ : order code for "Measuring tube material", option CB

Thread DIN11864-1 Form A, for pipe according to DIN11866 series A  Titanium  Order code for "Process connection", option KEW					
DN [mm]	B [mm]	L [mm]			
8 1)	Rd 28 × 1/8	10	426		
15	Rd 34 × 1/8	16	462		
15 FB	Rd 34 × 1/8	16	602		
25	Rd 52 × 1/6	26	602		
25 FB	Rd 52 × 1/6	26	735		
40	Rd 65 × 1/6	38	730.5		
40 FB	Rd 65 × 1/6	38	856		
50	Rd 78 × 1/6	50	856		
50 FB	Rd 78 × 1/6	50	1268.5		
80	Rd 110 × 1/4	81	1268.5		

FB = Full bore


3A version available (order code for "Additional approval", option LP) in combination with Ra $_{max}$  = 0.76  $\mu$ m, Ra $_{max}$  = 0.38  $\mu$ m (order code for "Measuring tube material", option CB, CD)

1) DN 8 with DN 10 thread as standard


86

Thread SMS 1145 Titanium Order code for "Process connection", option SAW						
DN [mm]	A [in]	B [mm]	L [mm]			
8	Rd 40 × 1/6	22.5	426			
15	Rd 40 × 1/6	22.5	462			
25	Rd 40 × 1/6	22.5	602			
25 FB	Rd 40 × 1/6	22.5	737			
40	Rd 60 × 1/6	35.5	738.5			
40 FB	Rd 60 × 1/6	35.5	858			
50	Rd 70 × 1/6	48.5	858			
50 FB	Rd 70 × 1/6	48.5	1258.5			
80	Rd 98 × 1/6	72	1268.5			
FB = Full bore 3A version available ( $Ra_{max}$ = 0.76 $\mu$ m) (order code for "Additional approval", option LP)						

# Thread ISO 2853

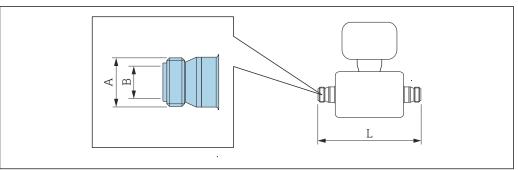

A001562

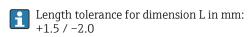

Thread ISO 2853, for pipe according to ISO 2037 Titanium Order code for "Process connection", option JSE							
DN A B L [mm] [mm]							
8 1)	37.13	22.6	434				
15	37.13	22.6	470				
15 FB	37.13	22.6	610				
25 FB	37.13	22.6	745				
40	50.65	35.6	736.5				
40 FB	50.65	35.6	861				
50	64.16	48.6	858				
50 FB	64.1	48.6	1268.5				

Titanium	Thread ISO 2853, for pipe according to ISO 2037  Titanium  Order code for "Process connection", option JSE					
DN [mm]	A [in]	B [mm]	L [mm]			
80	91.19	72.9	1268.5			


FB = Full bore

3A version available (order code for "Additional approval", option LP) in combination with  $Ra_{max}$  = 0.76  $\mu$ m,  $Ra_{max}$  = 0.38  $\mu$ m (order code for "Measuring tube material", option CB, CD)

1) DN 8 with DN 15 thread as standard

### Accessories

### Rinse connections

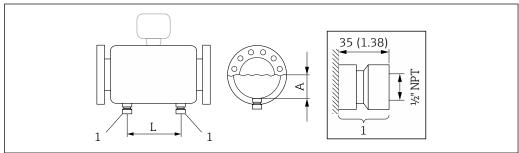


A0029


1 Connection nipple for purge connections: order code for "Sensor options", option CH "Purge connection"

DN	А	L
[mm]	[mm]	[mm]
8	90.65	122
15	90.65	158
15 FB	90.65	158
25	90.65	296
25 FB	90.65	296
40	103.35	392
40 FB	103.35	392
50	117.75	488
50 FB	145.5	814
80	145.5	814

# Weather protection cover

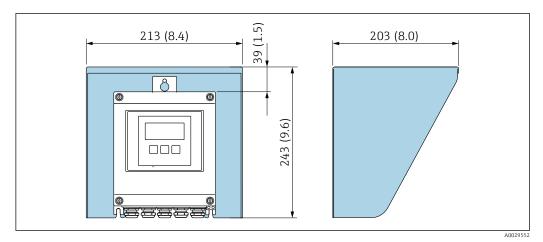

Weather protection cover for Proline 500 – digital; engineering unit mm (in)

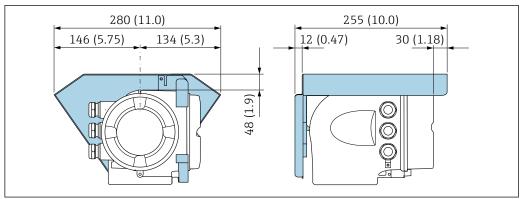


**₽** 41 Weather protection cover for Proline 500; engineering unit mm (in)

# External WLAN antenna

The external WLAN antenna is not suitable for use in hygienic applications.

Proline 500 – digital


# External WLAN antenna mounted on device

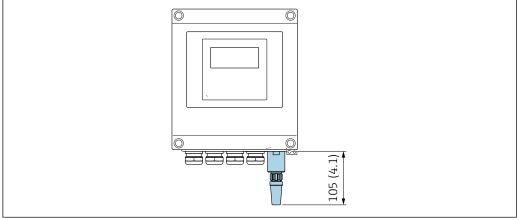

**■** 42 Engineering unit mm (in)

### External WLAN antenna mounted with cable


The external WLAN antenna can be mounted separately from the transmitter if the transmission/reception conditions at the transmitter mounting location are poor.

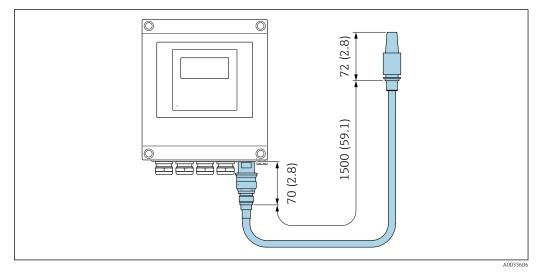

🖪 43 Engineering unit mm (in)

### Proline 500


### External WLAN antenna mounted on device

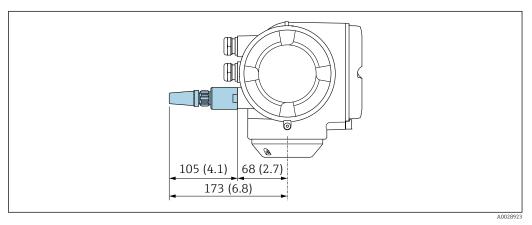

■ 44 Engineering unit mm (in)

# External WLAN antenna mounted with cable

The external WLAN antenna can be mounted separately from the transmitter if the transmission/reception conditions at the transmitter mounting location are poor.

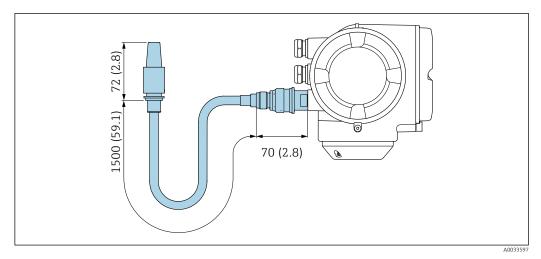


■ 45 Engineering unit mm (in)

# **Dimensions in US units**

# Housing of Proline 500 – digital transmitter

Non-hazardous area or hazardous area: Zone 2; Class I, Division 2

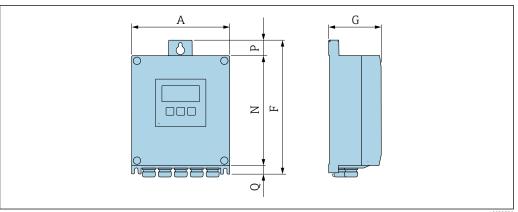

A003378

 $\label{lem:code} \textit{Order code for "Transmitter housing", option A "Aluminum, coated" and order code for "Integrated ISEM electronics", option A "Sensor"$ 


A	F	G	N	P	Q
[in]	[in]	[in]	[in]	[in]	[in]
6.57	9.13	3.50	7.36	0.94	

 $\label{lem:code} \textit{Order code for "Transmitter housing", option D "Polycarbonate" and order code for "Integrated ISEM electronics", option A "Sensor"$ 

A	F	G	N	P	Q
[in]	[in]	[in]	[in]	[in]	[in]
6.97	9.21	3.50	7.76	0.67	

# Housing of Proline 500 transmitter

Hazardous area: Zone 2; Class I, Division 2 or Zone 1; Class I, Division  $\bf 1$ 

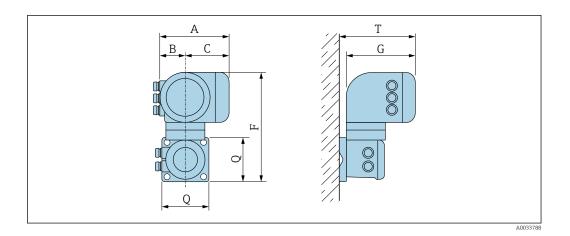


 $\label{lem:code_for_problem} \textit{Order code for "Transmitter housing", option A "Aluminum, coated" and order code for "Integrated ISEM electronics", option B "Transmitter"$ 

A	B	C	F	G	Q	T
[in]						
7.40	3.35	4.06	12.5	8.54	5.12	

 $\label{lem:code} \textit{Order code for "Transmitter housing", option L "Cast, stainless" and order code for "Integrated ISEM electronics", option B "Transmitter"}$ 

A	B	C	F	G	Q	T
[in]						
7.40	3.35	4.06	11.6	8.54	5.12	

# Sensor connection housing

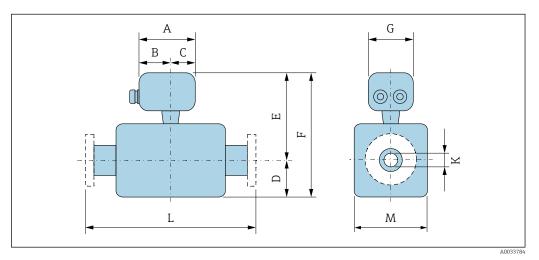

Order code for "Sensor connection housing", option A "Aluminum, coated"

DN	A 1)	B 1)	С	D	E 2)	F 2)	G	K	L	М
[in]	[in]	[in]	[in]	[in]						
3/8	5.83	3.70	2.13	2.24	8.15	10.39	5.35	0.34	3)	4.53
1/2	5.83	3.70	2.13	2.24	8.15	10.39	5.35	0.45	3)	4.53
½ FB	5.83	3.70	2.13	2.24	8.15	10.39	5.35	0.67	3)	4.53
1	5.83	3.70	2.13	2.24	8.15	10.39	5.35	0.67	3)	4.53
1 FB	5.83	3.70	2.13	2.8	8.54	11.34	5.35	1.04	3)	5.59

DN	A 1)	B 1)	С	D	E 2)	F 2)	G	К	L	М
[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]
1½	5.83	3.70	2.13	2.8	8.54	11.34	5.35	1.04	3)	5.59
1½ FB	5.83	3.70	2.13	3.31	9.09	12.4	5.35	1.40	3)	6.65
2	5.83	3.70	2.13	3.31	9.09	12.4	5.35	1.40	3)	6.65
2 FB	5.83	3.70	2.13	4.31	10.1	14.41	5.35	2.16	3)	8.66
3	5.83	3.70	2.13	4.31	10.1	14.41	5.35	2.16	3)	8.66

- Depending on the cable gland used: values up to +1.18 in
- 2) With order code for "Sensor option", option CG: values +2.76 in
- 3) Depending on the process connection

# Order code for "Sensor connection housing", option B "Stainless, hygienic"

DN	A 1)	В	С	D	E 2)	F <sup>2)</sup>	G	К	L	М
[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]
3/8	5.39	3.07	2.32	2.24	7.95	10.2	5.28	0.34	3)	4.53
1/2	5.39	3.07	2.32	2.24	7.95	10.2	5.28	0.45	3)	4.53
½ FB	5.39	3.07	2.32	2.24	7.95	10.2	5.28	0.67	3)	4.53
1	5.39	3.07	2.32	2.24	7.95	10.2	5.28	0.67	3)	4.53
1 FB	5.39	3.07	2.32	2.8	8.35	11.14	5.28	1.04	3)	5.59
1½	5.39	3.07	2.32	2.8	8.35	11.14	5.28	1.04	3)	5.59
1½ FB	5.39	3.07	2.32	3.31	8.9	12.2	5.28	1.40	3)	6.65
2	5.39	3.07	2.32	3.31	8.9	12.2	5.28	1.40	3)	6.65
2 FB	5.39	3.07	2.32	4.31	9.9	14.21	5.28	2.16	3)	8.66
3	5.39	3.07	2.32	4.31	9.9	14.21	5.28	2.16	3)	8.66

- Depending on the cable gland used: values up to +1.18 in 1)
- With order code for "Sensor option", option CG: values  $\pm 2.76$  in
- 2) 3) Depending on the process connection

# Order code for "Sensor connection housing", option C "Ultra-compact hygienic, stainless"

DN	A 1)	В	С	D	E 2)	F <sup>2)</sup>	G	K	L	M
[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]
3/8	4.88	2.68	2.20	2.24	7.95	10.2	4.41	0.34	3)	4.53
1/2	4.88	2.68	2.20	2.24	7.95	10.2	4.41	0.45	3)	4.53
½ FB	4.88	2.68	2.20	2.24	7.95	10.2	4.41	0.67	3)	4.53
1	4.88	2.68	2.20	2.24	7.95	10.2	4.41	0.67	3)	4.53
1 FB	4.88	2.68	2.20	2.8	8.35	11.14	4.41	1.04	3)	5.59
11/2	4.88	2.68	2.20	2.8	8.35	11.14	4.41	1.04	3)	5.59
1½ FB	4.88	2.68	2.20	3.31	8.9	12.2	4.41	1.40	3)	6.65
2	4.88	2.68	2.20	3.31	8.9	12.2	4.41	1.40	3)	6.65
2 FB	4.88	2.68	2.20	4.31	9.9	14.21	4.41	2.16	3)	8.66
3	4.88	2.68	2.20	4.31	9.9	14.21	4.41	2.16	3)	8.66

- 1) Depending on the cable gland used: values up to  $\pm 1.18$  in
- 2) With order code for "Sensor option", option CG: values +2.76 in
- 3) Depending on the process connection


Order code for "Sensor connection housing", option L "Cast, stainless	Order code	for "Sensor	connection	housina".	option L	"Cast.	stainless'
---	------------	-------------	------------	-----------	----------	--------	------------

DN	A 1)	В	С	D	E 2)	F <sup>2)</sup>	G	K	L	М
[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]
3/8	5.71	3.39	2.32	2.24	9.06	11.3	5.35	0.34	3)	4.53
1/2	5.71	3.39	2.32	2.24	9.06	11.3	5.35	0.45	3)	4.53
½ FB	5.71	3.39	2.32	2.24	9.06	11.3	5.35	0.67	3)	4.53
1	5.71	3.39	2.32	2.24	9.06	11.3	5.35	0.67	3)	4.53
1 FB	5.71	3.39	2.32	2.8	9.45	12.24	5.35	1.04	3)	5.59
1½	5.71	3.39	2.32	2.8	9.45	12.24	5.35	1.04	3)	5.59
1½ FB	5.71	3.39	2.32	3.31	10	13.31	5.35	1.40	3)	6.65
2	5.71	3.39	2.32	3.31	10	13.31	5.35	1.40	3)	6.65
2 FB	5.71	3.39	2.32	4.31	11	15.31	5.35	2.16	3)	8.66
3	5.71	3.39	2.32	4.31	11	15.31	5.35	2.16	3)	8.66

- 1)
- Depending on the cable gland used: values up to +1.18 in With order code for "Sensor option", option CG: values +2.76 in 2)
- 3) Depending on the process connection

# Flange connections

# Fixed flange ASME B16.5

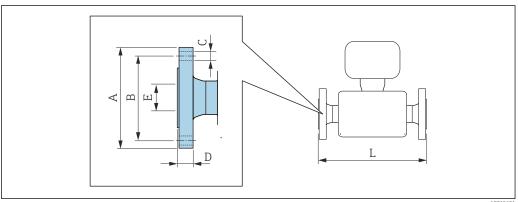

Length tolerance for dimension L in inch:  $+0.06 \ / \ -0.08$ 

1.4301 (304), w	Flange according to ASME B16.5: Class 150 1.4301 (304), wetted parts: titanium  Order code for "Process connection", option AAW										
DN [in]	A [in]	B [in]	C [in]	D [in]	E [in]	L [in]					
3/8 1)	3.54	2.37	4 × Ø0.62	0.79	0.62	15.87					
1/2	3.54	2.37	4 × Ø0.62	0.79	0.62	17.28					
½ FB	3.54	2.37	4 × Ø0.62	0.75	0.67	22.56					
1	4.33	3.13	4 × Ø0.62	0.91	1.05	22.8					
1 FB	4.33	3.13	4 × Ø0.62	0.87	1.04	27.64					
1½	4.92	3.87	4 × Ø0.62	1.02	1.61	27.85					
1½ FB	4.92	3.87	4 × Ø0.62	0.94	1.4	32.32					
2	5.91	4.75	4 × Ø0.75	1.1	2.07	32.64					

1.4301 (304), w	Flange according to ASME B16.5: Class 150 1.4301 (304), wetted parts: titanium  Order code for "Process connection", option AAW										
DN         A         B         C         D         E         L           [in]         [in]         [in]         [in]         [in]											
2 FB	5.91	4.75	4 × Ø0.75	1.57	2.16	47.7					
3	7.48	6.00	4 × Ø0.75	1.46	3.07	47.68					
FB = Full bore Surface roughness (flange): Ra 126 to 248 μin											

1) DN 3/8" with DN ½" flanges as standard;

	Process connec	1	 I	1	1	1
DN [in]	A [in]	B [in]	C [in]	D [in]	E [in]	L [in]
3/8 1)	3.74	2.63	4 × Ø0.62	0.79	0.62	15.87
1/2	3.74	2.63	4 × Ø0.62	0.79	0.62	17.28
½ FB	3.74	2.63	4 × Ø0.62	0.75	0.67	22.56
1	4.92	3.50	4 × Ø0.75	0.91	1.05	22.8
1 FB	4.92	3.50	4 × Ø0.75	0.87	1.04	27.64
1½	6.10	4.50	4 × Ø0.88	1.02	1.61	27.85
1½ FB	6.10	4.50	4 × Ø0.88	0.94	1.4	32.32
2	6.50	5.00	8 × Ø0.75	1.1	2.07	32.64
2 FB	6.50	5.00	8 × Ø0.75	1.69	2.16	47.7
3	8.27	6.63	8 × Ø0.88	1.65	3.07	47.68

1) DN 3/8" with DN ½" flanges as standard;

Flange according to ASME B16.5: Class 600 1.4301 (304), wetted parts: titanium Order code for "Process connection", option ACW										
DN [in]	A [in]	B [in]	C [in]	D [in]	E [in]	L [in]				
3/8 1)	3.74	2.63	4 × Ø0.62	0.79	0.54	15.87				
1/2	3.74	2.63	4 × Ø0.62	0.79	0.54	17.28				
½ FB	3.74	2.63	4 × Ø0.62	0.87	0.67	22.56				
1	4.92	3.50	4 × Ø0.75	0.91	0.96	22.8				
1 FB	4.92	3.50	4 × Ø0.75	0.98	1.04	27.64				
1½	6.10	4.50	4 × Ø0.88	1.1	1.5	27.85				
1½ FB	6.10	4.50	4 × Ø0.88	1.14	1.4	32.32				
2	6.50	5.00	8 × Ø0.75	1.3	1.94	32.8				
2 FB	6.50	5.00	8 × Ø0.75	1.81	2.16	47.7				

1.4301 (304), w	Flange according to ASME B16.5: Class 600 1.4301 (304), wetted parts: titanium  Order code for "Process connection", option ACW									
DN [in]	A [in]	B [in]	C [in]	D [in]	E [in]	L [in]				
3	8.27	6.63	8 × Ø0.88	2.09	2.9	48.15				


FB = Full bore

Surface roughness (flange): Ra 126 to 248  $\mu in$ 

DN 3/8" with DN  $\frac{1}{2}$ " flanges as standard;

# **Clamp connections**

# Tri-Clamp

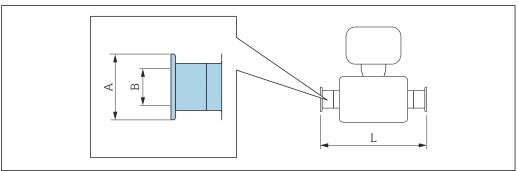

Length tolerance for dimension L in inch:  $+0.06\ /\ -0.08$ 

Tri-Clamp ( ≥ 1"), DIN 11866 series C  Titanium  Order code for "Process connection", option FTW				
DN [in]	Clamp [in]	A [in]	B [in]	L [in]
3/8	1	1.98	0.87	16.77
1/2	1	1.98	0.87	18.19
½ FB	see ¾" Tri-Clamp connection			
1	1	1.98	0.87	23.7
1 FB	1	1.98	0.87	28.76
11/2	1 ½	1.98	1.37	28.76
1½ FB	1 ½	1.98	1.37	33.46
2	2	2.52	1.87	33.46
2 FB <sup>1)</sup>	2 ½	3.05	2.37	49.92
3	3	3.58	2.87	49.92

3A version available: order code for "Additional approval", option LP in conjunction with

 $Ra_{max}$  = 30  $\mu$ in: order code for "Measuring tube material", option CB or  $Ra_{max}$  = 15  $\mu$ in: order code for "Measuring tube material", option CD

Order code for "Process connection", option FRW

96

# 3/4" Tri-Clamp, DIN 11866 series C

Titanium

Order code for "Process connection", option FEW

DN [in]	Clamp [in]	A [in]	B [in]	L [in]
3/8	3/4	0.98	0.63	16.77
1/2	3/4	0.98	0.63	18.19
½ FB	3/4	0.98	0.63	23.7

FB = Full bore

3A version available: order code for "Additional approval", option LP in conjunction with

 $Ra_{max} = 30 \mu in$ : order code for "Measuring tube material", option CB or

 $Ra_{max} = 15 \mu in$ : order code for "Measuring tube material", option CD

#### 1/2" Tri-Clamp, DIN 11866 series C Titanium Order code for "Process connection", option FBW DN Clamp В L [in] [in] [in] [in] [in] 3/8 0.98 0.37 16.77 0.98 0.37 18.19

3A version available: order code for "Additional approval", option LP in conjunction with

 $Ra_{max}$  = 30  $\mu$ in: order code for "Measuring tube material", option CB or

 $Ra_{max} = 15 \mu in$ : order code for "Measuring tube material", option CD

Eccentric Tri-Clamp, DIN 11866 series C Titanium					
DN [in]	Order code for "Process connection", option	Clamp [in]	A [in]	B [in]	L [in]
3/8	FEA	1/2	0.98	0.37	16.77
1/2	FEC	3/4	0.98	0.62	18.19
½ FB	FEE	1	1.99	0.87	23.7
1	FEE	1	1.99	0.87	23.7
1 FB	FEG	1½	1.99	1.37	28.76
1½	FEG	1½	1.99	1.37	28.76
1½ FB	FEJ	2	2.52	1.87	33.46
2	FEJ	2	2.52	1.87	33.46
2 FB	FEL	2 ½	3.05	2.37	49.94
2 FB	FEM	3	3.58	2.87	49.94
3	FEL	2 ½	3.05	2.37	49.94
3	FEM	3	3.58	2.87	49.94

FB = Full bore

3A version available: order code for "Additional approval", option LP in conjunction with


 $Ra_{max} = 30 \mu in$ : order code for "Measuring tube material", option CB or

 $Ra_{max} = 15 \mu in$ : order code for "Measuring tube material", option CD

Additional information regarding "Eccentric clamps"

# Couplings

# Thread SMS 1145

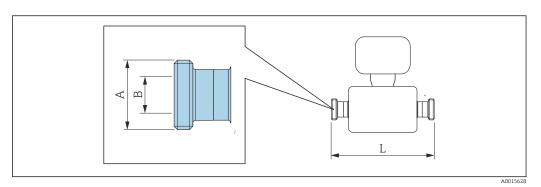


Length tolerance for dimension L in inch: +0.06 / -0.08

Thread SMS 1145 Titanium Order code for "Process connection", option SAW			
DN [in]	A [in]	B [in]	L [in]
3/8	Rd 40 × 1/6	0.89	16.77
1/2	Rd 40 × 1/6	0.89	18.19
1	Rd 40 × 1/6	0.89	23.7
1 FB	Rd 40 × 1/6	0.89	29.02
11/2	Rd 60 × 1/6	1.4	29.07
1½ FB	Rd 60 × 1/6	1.4	33.78
2	Rd 70 × 1/6	1.91	33.78
2 FB	Rd 70 × 1/6	1.91	49.55
3	Rd 98 × 1/6	2.83	49.94
FB = Full bore Ra <sub>max</sub> = 30 μin: order cod	e for "Measuring tube material", optio	n CB or	'

# Accessories


# Rinse connections

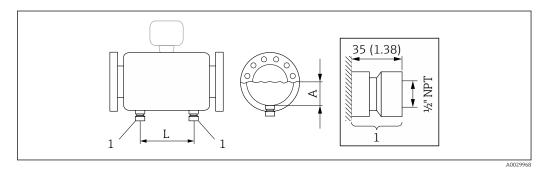


 $1 \qquad \textit{Connection nipple for purge connections: order code for "Sensor options", option \textit{CH "Purge connection"}}$ 

DN	A	L
[in]	[in]	[in]
3/8	3.569	4.8
1/2	3.569	6.22
½ FB	3.569	6.22
1	3.569	11.65
1 FB	3.569	11.65
1½	4.069	15.43
1½ FB	4.069	15.43
2	4.636	19.21
2 FB	5.73	32.05
3	5.73	32.05

# Weather protection cover

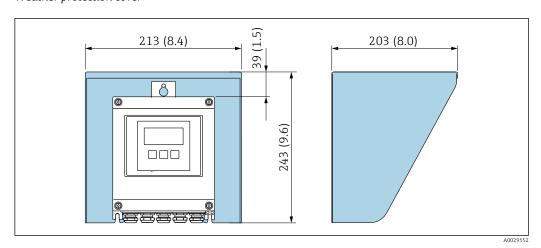

■ 46 Weather protection cover for Proline 500 – digital; engineering unit mm (in)

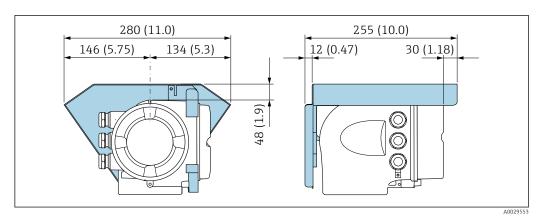


■ 47 Weather protection cover for Proline 500; engineering unit mm (in)

# External WLAN antenna

The external WLAN antenna is not suitable for use in hygienic applications.

# Proline 500 – digital


# External WLAN antenna mounted on device

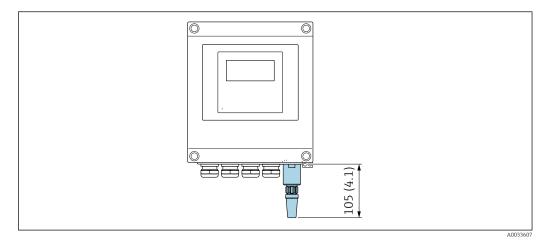

■ 48 Engineering unit mm (in)

# External WLAN antenna mounted with cable


The external WLAN antenna can be mounted separately from the transmitter if the transmission/reception conditions at the transmitter mounting location are poor.

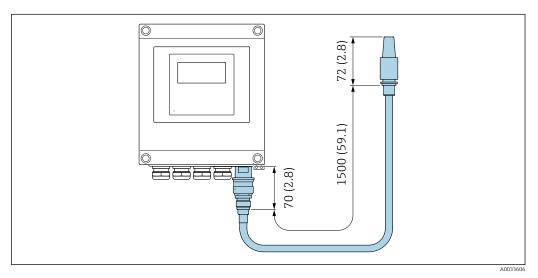

■ 49 Engineering unit mm (in)

### Proline 500


### External WLAN antenna mounted on device

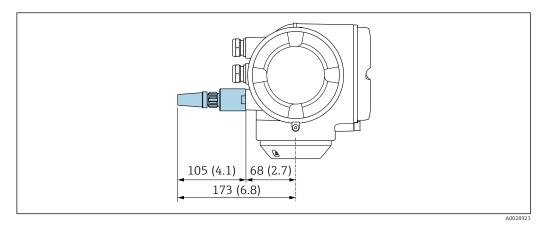

🖪 50 Engineering unit mm (in)

### External WLAN antenna mounted with cable

The external WLAN antenna can be mounted separately from the transmitter if the transmission/reception conditions at the transmitter mounting location are poor.

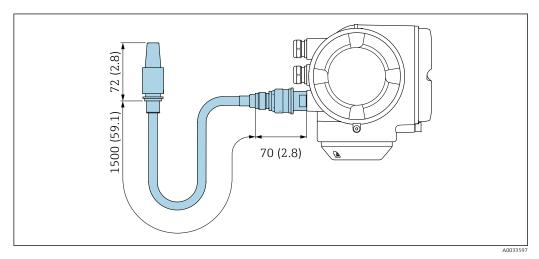

🖪 51 Engineering unit mm (in)

# Weight

All values (weight exclusive of packaging material) refer to devices with EN/DIN PN 40 flanges.

# Transmitter

- Proline 500 digital polycarbonate: 1.4 kg (3.1 lbs)
- Proline 500 digital aluminum: 2.4 kg (5.3 lbs)
- Proline 500 aluminum: 6.5 kg (14.3 lbs)
- Proline 500 cast, stainless: 15.6 kg (34.4 lbs)

### Sensor

- Sensor with cast connection housing version, stainless: +3.7 kg (+8.2 lbs)
- Sensor with aluminum connection housing version:

# Weight in SI units

DN [mm]	Weight [kg]
8	11
15	13
15 FB	19

DN [mm]	Weight [kg]
25	20
25 FB	39
40	40
40 FB	65
50	67
50 FB	118
80	122
FB = Full bore	

# Weight in US units

DN [in]	Weight [lbs]
3/8	24
1/2	29
½ FB	42
1	44
1 FB	86
1½	88
1½ FB	143
2	148
2 FB	260
3	269
FB = Full bore	

# Materials Transmitter housing

Housing of Proline 500 – digital transmitter

Order code for "Transmitter housing":

- Option A "Aluminum coated": aluminum, AlSi10Mg, coated
- Option **D** "Polycarbonate": polycarbonate

Housing of Proline 500 transmitter

Order code for "Transmitter housing":

- Option A "Aluminum coated": aluminum, AlSi10Mg, coated
- Option **L** "Cast, stainless": cast, stainless steel, 1.4409 (CF3M) similar to 316L

Window material

Order code for "Transmitter housing":

- Option **A** "Aluminum, coated": glass
- Option **D** "Polycarbonate": plastic
- Option **L** "Cast, stainless": glass

Fastening components for mounting on a post

- Screws, threaded bolts, washers, nuts: stainless A2 (chrome-nickel steel)
- Metal plates: stainless steel, 1.4301 (304)


102

# Sensor connection housing

Order code for "Sensor connection housing":

- Option A "Aluminum coated": aluminum, AlSi10Mg, coated
- Option **B** "Stainless":
  - Stainless steel 1.4301 (304)
  - Optional: Order code for "Sensor feature", option CC "Hygienic version, for maximum corrosion resistance": stainless steel, 1.4404 (316L)
- Option **C** "Ultra-compact, stainless":
  - Stainless steel 1.4301 (304)
  - Optional: Order code for "Sensor feature", option **CC** "Hygienic version, for maximum corrosion resistance": stainless steel, 1.4404 (316L)
- Option L "Cast, stainless": 1.4409 (CF3M) similar to 316L

### Cable entries/cable glands

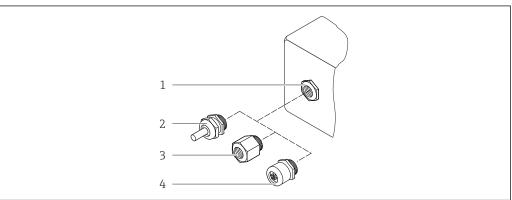

A0028352

# ■ 52 Possible cable entries/cable glands

- 1 Female thread M20  $\times$  1.5
- 2 Cable gland  $M20 \times 1.5$
- 3 Adapter for cable entry with female thread G  $\frac{1}{2}$ " or NPT  $\frac{1}{2}$ "
- 4 Device plug

Cable entries and adapters	Material
Cable gland M20 × 1.5	Plastic
■ Adapter for cable entry with female thread G ½" ■ Adapter for cable entry with female thread NPT ½" ■ Only available for certain device versions: ■ Order code for "Transmitter housing": ■ Option A "Aluminum, coated" ■ Option D "Polycarbonate" ■ Order code for "Sensor connection housing": ■ Proline 500 – digital: Option A "Aluminum coated" Option B "Stainless" Option L "Cast, stainless" ■ Proline 500: Option B "Stainless" Option L "Cast, stainless"	Nickel-plated brass

Cable entries and adapters	Material
<ul> <li>Adapter for cable entry with female thread G ½"</li> <li>Adapter for cable entry with female thread NPT ½"</li> </ul>	Stainless steel, 1.4404 (316L)
Only available for certain device versions:  Order code for "Transmitter housing": Option L "Cast, stainless"  Order code for "Sensor connection housing": Option L "Cast, stainless"	
Adapter for device plug	Stainless steel, 1.4404 (316L)
<ul> <li>Device plug for digital communication:         Only available for certain device versions →          ■ 35.</li> <li>Device plug for connecting cable:         A device plug is always used for the device version, order code for "Sensor connection housing", option C (ultracompact, hygienic, stainless).</li> </ul>	

# Device plug

Electrical connection	Material
Plug M12x1	<ul> <li>Socket: Stainless steel, 1.4404 (316L)</li> <li>Contact housing: Polyamide</li> <li>Contacts: Gold-plated brass</li> </ul>

### Connecting cable



 $\ensuremath{\mathsf{UV}}$  rays can impair the cable outer sheath. Protect the cable from exposure to sun as much as possible.

Connecting cable for sensor - Proline 500 - digital transmitter

PVC cable with copper shield

 ${\it Connecting\ cable\ for\ sensor\ -\ Proline\ 500\ transmitter}$ 

 $\ensuremath{\mathsf{PVC}}$  cable with copper shield

# Sensor housing

- Acid and alkali-resistant outer surface
- Stainless steel 1.4301 (304)

# Measuring tubes

Grade 9 titanium

### **Process connections**

- Flanges according to EN 1092-1 (DIN 2501) / according to ASME B16.5/ according to JIS:
  - Stainless steel 1.4301 (304)
  - Wetted parts: Grade 2 titanium
- All other process connections:
   Grade 2 titanium



Available process connections  $\rightarrow$   $\blacksquare$  105

### Seals

Welded process connections without internal seals

# Accessories

Protective cover

Stainless steel, 1.4404 (316L)

### External WLAN antenna

- Antenna: ASA plastic (acrylic ester-styrene-acrylonitrile) and nickel-plated brass
- Adapter: Stainless steel and nickel-plated brass
- Cable: Polyethylene
- Plug: Nickel-plated brass
- Angle bracket: Stainless steel

### **Process connections**

- Fixed flange connections:
  - EN 1092-1 (DIN 2501) flange
  - EN 1092-1 (DIN 2512N) flange
  - ASME B16.5 flange
  - JIS B2220 flange
  - DIN 11864-2 Form A flange, DIN 11866 series A, flange with notch
- Clamp connections:

Tri-Clamp (OD tubes), DIN 11866 series C

Eccentric clamp connection:

Eccen. Tri-Clamp, DIN 11866 series C

- Thread:
  - DIN 11851 thread, DIN 11866 series A
  - SMS 1145 thread
  - ISO 2853 thread, ISO 2037
  - DIN 11864-1 Form A thread, DIN 11866 series A



# Surface roughness

All data refer to parts in contact with the medium. The following surface roughness categories can be ordered.

- Not polished
- $Ra_{max} = 0.76 \mu m (30 \mu in)$
- $Ra_{max} = 0.38 \mu m (15 \mu in)$

# Operability

### Operating concept

### Operator-oriented menu structure for user-specific tasks

- Commissioning
- Operation
- Diagnostics
- Expert level

### Fast and safe commissioning

- Guided menus ("Make-it-run" wizards) for applications
- Menu guidance with brief descriptions of the individual parameter functions
- Access to the device via Web server
- WLAN access to the device via mobile handheld terminal, tablet or smart phone

### Reliable operation

- Operation in local language
- Uniform operating philosophy applied to device and operating tools
- If replacing electronic modules, transfer the device configuration via the integrated memory (HistoROM backup) which contains the process and measuring device data and the event logbook. No need to reconfigure.

# Efficient diagnostic behavior increases measurement availability

- Troubleshooting measures can be called up via the device and in the operating tools
- Diverse simulation options, logbook for events that occur and optional line recorder functions

### Languages

Can be operated in the following languages:

- Via local operation
   English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish, Chinese, Japanese, Korean, Vietnamese, Czech, Swedish
- Via Web browser
   English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish, Chinese, Japanese, Vietnamese, Czech, Swedish
- Via "FieldCare", "DeviceCare" operating tool: English, German, French, Spanish, Italian, Chinese, Japanese

### Local operation

### Via display module


Equipment:

- Order code for "Display; operation", option F "4-line, illuminated, graphic display; touch control"
- Order code for "Display; operation", option G "4-line, illuminated, graphic display; touch control + WLAN"



Information about WLAN interface → 

113

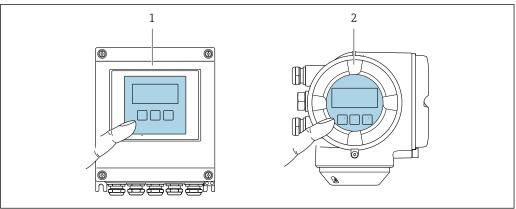

A002823

■ 53 Operation with touch control

- 1 Proline 500 digital
- 2 Proline 500

# Display elements

- 4-line, illuminated, graphic display
- White background lighting; switches to red in event of device errors
- Permitted ambient temperature for the display: -20 to +60 °C (-4 to +140 °F) The readability of the display may be impaired at temperatures outside the temperature range.

# Operating elements


- External operation via touch control (3 optical keys) without opening the housing: ±, ⊡, ©
- Operating elements also accessible in the various zones of the hazardous area

### Remote operation

### Via HART protocol


This communication interface is available in device versions with a HART output.

106

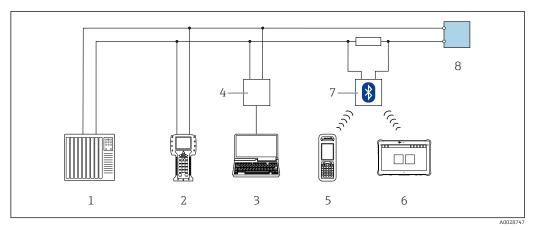

■ 54 Options for remote operation via HART protocol (active)

- 1 Control system (e.g. PLC)
- 2 Field Communicator 475
- 3 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or computer with operating tool (e.g. FieldCare, DeviceCare, AMS Device Manager, SIMATIC PDM) with COM DTM "CDI Communication TCP/IP"
- 4 Commubox FXA195 (USB)
- 5 Field Xpert SFX350 or SFX370
- 6 Field Xpert SMT70
- 7 VIATOR Bluetooth modem with connecting cable
- 8 Transmitter

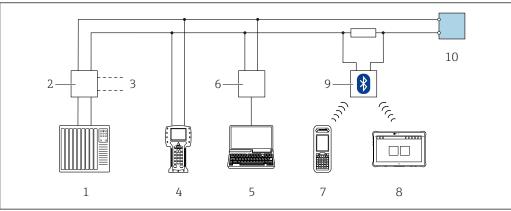


A0028746

**■** 55 Options for remote operation via HART protocol (passive)

- 1 Control system (e.g. PLC)
- 2 Transmitter power supply unit, e.g. RN221N (with communication resistor)
- 3 Connection for Commubox FXA195 and Field Communicator 475
- 4 Field Communicator 475
- 5 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or computer with operating tool (e.g. FieldCare, DeviceCare, AMS Device Manager, SIMATIC PDM) with COM DTM "CDI Communication TCP/IP"
- 6 Commubox FXA195 (USB)
- 7 Field Xpert SFX350 or SFX370
- 8 Field Xpert SMT70
- 9 VIATOR Bluetooth modem with connecting cable
- 10 Transmitter

### Via FOUNDATION Fieldbus network

This communication interface is available in device versions with FOUNDATION Fieldbus.

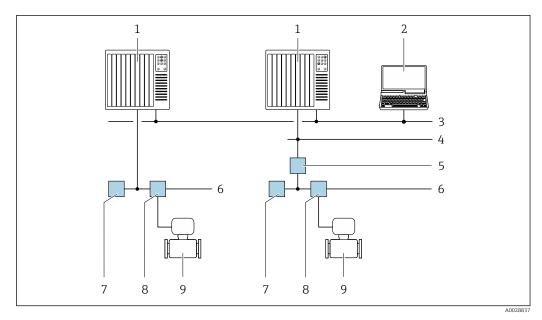


 $\blacksquare$  56 Options for remote operation via FOUNDATION Fieldbus network

- 1 Automation system
- 2 Computer with FOUNDATION Fieldbus network card
- *3 Industry network*
- 4 High Speed Ethernet FF-HSE network
- 5 Segment coupler FF-HSE/FF-H1
- 6 FOUNDATION Fieldbus FF-H1 network
- 7 Power supply FF-H1 network
- 8 T-box
- 9 Measuring device

### Via PROFIBUS DP network

This communication interface is available in device versions with PROFIBUS DP.

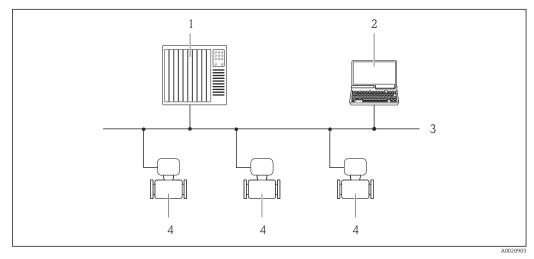


 $\blacksquare$  57 Options for remote operation via PROFIBUS DP network

- 1 Automation system
- 2 Computer with PROFIBUS network card
- 3 PROFIBUS DP network
- 4 Measuring device

# Via PROFIBUS PA network

This communication interface is available in device versions with PROFIBUS PA.

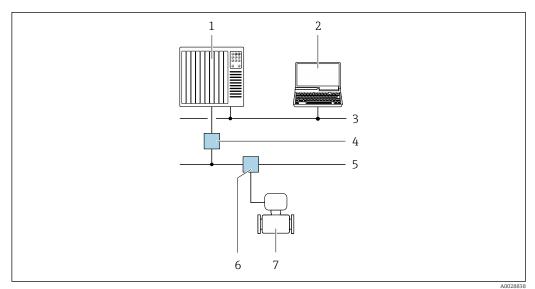


■ 58 Options for remote operation via PROFIBUS PA network

- 1 Automation system
- 2 Computer with PROFIBUS network card
- 3 PROFIBUS DP network
- 4 Segment coupler PROFIBUS DP/PA
- 5 PROFIBUS PA network
- 6 T-box
- 7 Measuring device

### Via Modbus RS485 protocol

This communication interface is available in device versions with a Modbus-RS485 output.

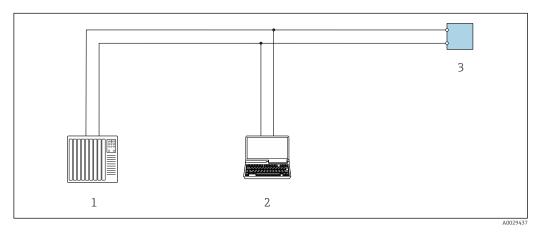


■ 59 Options for remote operation via Modbus-RS485 protocol (active)

- 1 Control system (e.g. PLC)
- 2 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or with operating tool (e.g. FieldCare, DeviceCare) with COM DTM "CDI Communication TCP/IP" or Modbus DTM
- 3 Transmitter

### Via EtherNet/IP network

This communication interface is available in device versions with EtherNet/IP.

### Star topology

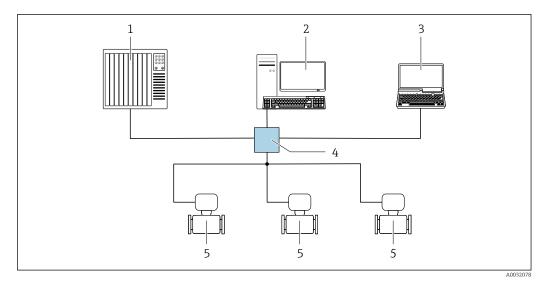


■ 60 Options for remote operation via EtherNet/IP network: star topology

- 1 Automation system, e.g. "RSLogix" (Rockwell Automation)
- 2 Workstation for measuring device operation: with Custom Add-On Profile for "RSLogix 5000" (Rockwell Automation) or with Electronic Data Sheet (EDS)
- 3 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated Web server or computer with operating tool (e.g. FieldCare, DeviceCare) with COM DTM "CDI Communication TCP/IP"
- 4 Standard Ethernet switch, e.g. Scalance X204 (Siemens)
- 5 Measuring device

### Ring topology

The device is integrated via the terminal connection for signal transmission (output 1) and the service interface (CDI-RJ45).

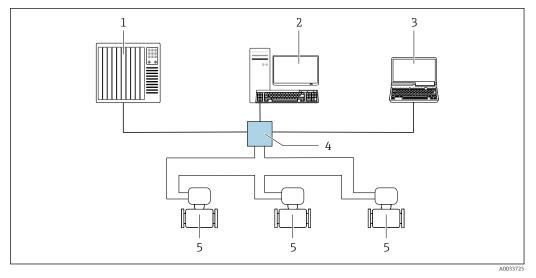


■ 61 Options for remote operation via EtherNet/IP network: ring topology

- 1 Automation system, e.g. "RSLogix" (Rockwell Automation)
- 2 Workstation for measuring device operation: with Custom Add-On Profile for "RSLogix 5000" (Rockwell Automation) or with Electronic Data Sheet (EDS)
- 3 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated Web server or computer with operating tool (e.g. FieldCare, DeviceCare) with COM DTM "CDI Communication TCP/IP"
- 4 Standard Ethernet switch, e.g. Scalance X204 (Siemens)
- 5 Measuring device

### Via PROFINET network

This communication interface is available in device versions with PROFINET.

### Star topology

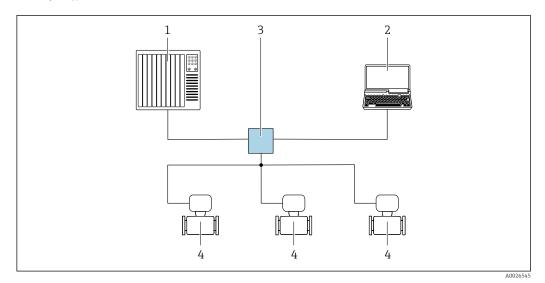


■ 62 Options for remote operation via PROFINET network: star topology

- 1 Automation system, e.g. Simatic S7 (Siemens)
- 2 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated Web server or computer with operating tool (e.g. FieldCare, DeviceCare, SIMATIC PDM) with COM DTM "CDI Communication TCP/IP"
- 3 Standard Ethernet switch, e.g. Scalance X204 (Siemens)
- 4 Measuring device

### Ring topology


The device is integrated via the terminal connection for signal transmission (output 1) and the service interface (CDI-RJ45).

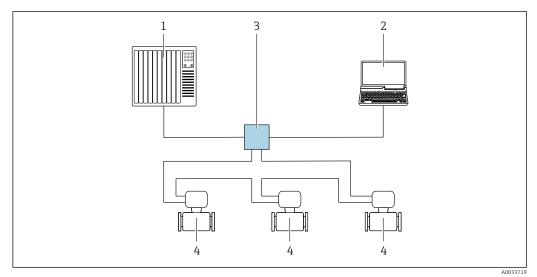

■ 63 Options for remote operation via PROFINET network: ring topology

- 1 Automation system, e.g. Simatic S7 (Siemens)
- 2 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated Web server or computer with operating tool (e.g. FieldCare, DeviceCare, SIMATIC PDM) with COM DTM "CDI Communication TCP/IP"
- 3 Standard Ethernet switch, e.g. Scalance X204 (Siemens)
- 4 Measuring device

### Via APL network

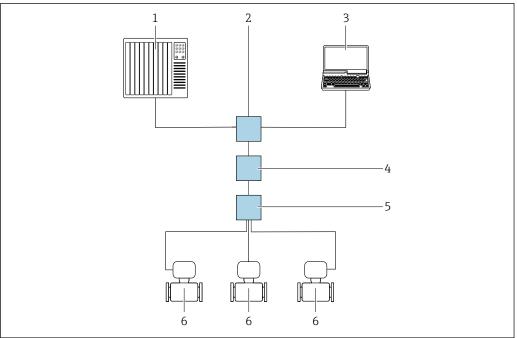

A0046117

■ 64 Options for remote operation via APL network

- 1 Automation system, e.g. Simatic S7 (Siemens)
- 2 Ethernet switch, e.g. Scalance X204 (Siemens)
- 3 Computer with Web browser (e.g. Internet Explorer) for access to integrated Web server or computer with operating tool (e.g. FieldCare or DeviceCare with PROFINET COM DTM or SIMATIC PDM with FDI-Package)
- 4 APL power switch (optional)
- 5 APL field switch
- 6 Measuring device

## Service interface

## Via service interface (CDI-RJ45)


A point-to-point connection can be established via onsite device configuration. With the housing open, the connection is established directly via the service interface (CDI-RJ45) of the device.



An adapter for RJ45 to the M12 plug is optionally available: Order code for "Accessories", option **NB**: "Adapter RJ45 M12 (service interface)"

The adapter connects the service interface (CDI-RJ45) to an M12 plug mounted in the cable entry. The connection to the service interface can be established via an M12 plug without opening the device.


### Proline 500 – digital transmitter

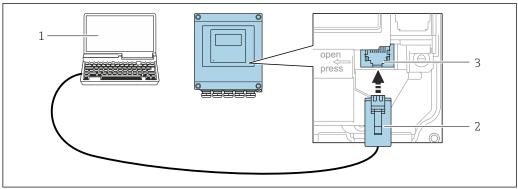

Connection via service interface (CDI-RJ45)

- Computer with Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integratedWeb server or with "FieldCare", "DeviceCare" operating tool with COM DTM "CDI Communication TCP/IP" or Modbus DTM
- Standard Ethernet connecting cable with RJ45 plug
- Service interface (CDI-RJ45) of the measuring device with access to the integrated Web server

### Proline 500 transmitter

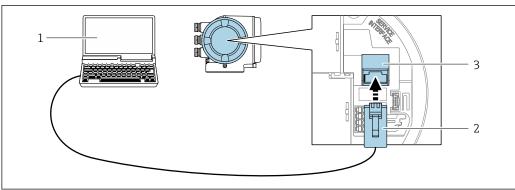


€ 66 Connection via service interface (CDI-RJ45)

- Computer with Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated Web server or with "FieldCare", "DeviceCare" operating tool with COM DTM "CDI Communication TCP/IP" or Modbus DTM
- Standard Ethernet connecting cable with RJ45 plug
- Service interface (CDI-RJ45) of the measuring device with access to the integrated Web server

### Via WLAN interface

The optional WLAN interface is available on the following device version: Order code for "Display; operation", option G "4-line, illuminated; touch control + WLAN"

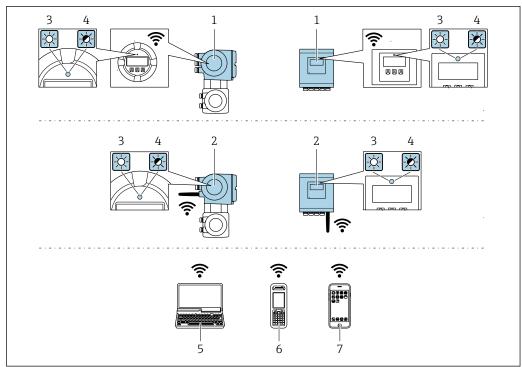

A003456

- 1 Transmitter with integrated WLAN antenna
- 2 Transmitter with external WLAN antenna
- 3 LED lit constantly: WLAN reception is enabled on measuring device
- 4 LED flashing: WLAN connection established between operating unit and measuring device
- 5 Computer with WLAN interface and Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device Web server or with operating tool (e.g. FieldCare, DeviceCare)
- Mobile handheld terminal with WLAN interface and Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device Web server or operating tool (e.g. FieldCare, DeviceCare)
- 7 Smart phone or tablet (e.g. Field Xpert SMT70)

Function	WLAN: IEEE 802.11 b/g (2.4 GHz) • Access Point with DHCP server (factory setting) • Network
Encryption	WPA2-PSK AES-128 (in accordance with IEEE 802.11i)
Configurable WLAN channels	1 to 11
Degree of protection	IP67
Available antennas	<ul> <li>Internal antenna</li> <li>External antenna (optional)         In the event of poor transmission/reception conditions at the place of installation.         Available as an accessory .     </li> <li>Only 1 antenna is active at any one time!</li> </ul>
Range	<ul> <li>Internal antenna: typically 10 m (32 ft)</li> <li>External antenna: typically 50 m (164 ft)</li> </ul>
Materials (external antenna)	<ul> <li>Antenna: ASA plastic (acrylic ester-styrene-acrylonitrile) and nickel-plated brass</li> <li>Adapter: Stainless steel and nickel-plated brass</li> <li>Cable: Polyethylene</li> <li>Plug: Nickel-plated brass</li> <li>Angle bracket: Stainless steel</li> </ul>

Network integration


•

Network integration is only available for the HART communication protocol.

With the optional "OPC-UA Server" application package, the device can be integrated into an Ethernet network via the service interface (CDI-RJ45 and WLAN) and communicate with OPC-UA clients. If the device is used in this way, IT security must be considered.

Transmitters with an Ex de approval may **not** be connected via the service interface (CDI-RJ45)! Order code for "Approval transmitter + sensor", options (Ex de): BA, BB, C1, C2, GA, GB, MA, MB, NA, NB

For permanent access to device data and for device configuration via the Web server, the device is incorporated directly in a network via the service interface (CDI-RJ45). In this way, the device can be accessed any time from the control station. The measured values are processed separately via the inputs and outputs through the automation system.

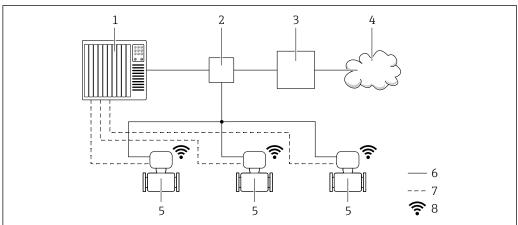

Δ0033618

- 1 Automation system, e.g. Simatic S7 (Siemens)
- 2 Ethernet switch
- 3 Edge Gateway
- 4 Cloud
- 5 Measuring device
- 6 Ethernet network
- 7 Measured values via inputs and outputs
- 8 Optional WLAN interface
- The optional WLAN interface is available on the following device version:


  Order code for "Display; operation", option **G** "4-line, backlit, graphic display; touch control + WLAN"

### Supported operating tools

Different operating tools can be used for local or remote access to the measuring device. Depending on the operating tool used, access is possible with different operating units and via a variety of interfaces.

Supported operating tools	Operating unit	Interface	Additional information
Web browser	Notebook, PC or tablet with Web browser	<ul> <li>CDI-RJ45 service interface</li> <li>WLAN interface</li> <li>Ethernet-based fieldbus (EtherNet/IP, PROFINET)</li> </ul>	Special Documentation for the device → 🗎 130
DeviceCare SFE100	Notebook, PC or tablet with Microsoft Windows system	<ul><li>CDI-RJ45 service interface</li><li>WLAN interface</li><li>Fieldbus protocol</li></ul>	→ 🖺 128
FieldCare SFE500	Notebook, PC or tablet with Microsoft Windows system	<ul><li>CDI-RJ45 service interface</li><li>WLAN interface</li><li>Fieldbus protocol</li></ul>	→ 🖺 128

Supported operating tools	Operating unit	Interface	Additional information
Field Xpert	SMT70/77/50	<ul> <li>All fieldbus protocols</li> <li>WLAN interface</li> <li>Bluetooth</li> <li>CDI-RJ45 service interface</li> </ul>	Operating Instructions BA01202S Device description files: Use update function of handheld terminal
SmartBlue app	Smart phone or tablet with iOs or Android	WLAN	→ 🖺 128

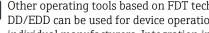

Other operating tools based on FDT technology with a device driver such as DTM/iDTM or DD/EDD can be used for device operation. These operating tools are available from the individual manufacturers. Integration into the following operating tools, among others, is supported:

- FactoryTalk AssetCentre (FTAC) from Rockwell Automation  $\rightarrow$  www.rockwellautomation.com
- Process Device Manager (PDM) from Siemens → www.siemens.com
- Asset Management Solutions (AMS) from Emerson → www.emersonprocess.com
- FieldCommunicator 375/475 from Emerson → www.emersonprocess.com
- Field Device Manager (FDM) from Honeywell → www.process.honeywell.com
- FieldMate from Yokogawa → www.yokogawa.com
- PACTWare → www.pactware.com

The related device description files are available: www.endress.com → Downloads

#### Web server

Thanks to the integrated Web server the device can be operated and configured via a Web browser and via the service interface (CDI-RI45) or via the WLAN interface. The structure of the operating menu is the same as for the local display. In addition to the measured values, device status information is also displayed and allows users to monitor the status of the device. Furthermore the device data can be managed and the network parameters can be configured.

A device that has a WLAN interface (can be ordered as an option) is required for the WLAN connection: order code for "Display; operation", option G "4-line, illuminated; touch control + WLAN". The device acts as an Access Point and enables communication by computer or a mobile handheld terminal.

## Supported functions

Data exchange between the operating unit (such as a notebook for example) and the measuring

- Upload the configuration from the measuring device (XML format, configuration backup)
- Save the configuration to the measuring device (XML format, restore configuration)
- Export event list (.csv file)
- Export parameter settings (.csv file or PDF file, document the measuring point configuration)
- Export the Heartbeat verification log (PDF file, only available with the "Heartbeat Verification" application package)
- Flash firmware version for device firmware upgrade, for instance
- Download driver for system integration
- Visualize up to 1000 saved measured values (only available with the **Extended HistoROM** application package  $\rightarrow \implies 124$ )



Web server special documentation  $\rightarrow \triangleq 130$ 

## HistoROM data management

The measuring device features HistoROM data management. HistoROM data management comprises both the storage and import/export of key device and process data, making operation and servicing far more reliable, secure and efficient.



When the device is delivered, the factory settings of the configuration data are stored as a backup in the device memory. This memory can be overwritten with an updated data record, for example after commissioning.

### Additional information on the data storage concept

There are different types of data storage units in which device data are stored and used by the device:

	HistoROM backup	T-DAT	S-DAT
Available data	<ul> <li>Event logbook such as diagnostic events for example</li> <li>Parameter data record backup</li> <li>Device firmware package</li> <li>Driver for system integration for exporting via Web server, e.g:</li> <li>GSD for PROFIBUS DP</li> <li>GSD for PROFIBUS PA</li> <li>GSDML for PROFINET</li> <li>EDS for EtherNet/IP</li> <li>DD for FOUNDATION Fieldbus</li> </ul>	<ul> <li>Measured value logging         ("Extended HistoROM" order         option)</li> <li>Current parameter data record         (used by firmware at run time)</li> <li>Maximum indicators (min/max         values)</li> <li>Totalizer values</li> </ul>	<ul> <li>Sensor data: nominal diameter etc.</li> <li>Serial number</li> <li>Calibration data</li> <li>Device configuration (e.g. SW options, fixed I/O or multi I/O)</li> </ul>
Storage location	Fixed on the user interface board in the connection compartment	Attachable to the user interface board in the connection compartment	In the sensor plug in the transmitter neck part

### Data backup

### **Automatic**

- The most important device data (sensor and transmitter) are automatically saved in the DAT modules
- If the transmitter or measuring device is replaced: once the T-DAT containing the previous device data has been exchanged, the new measuring device is ready for operation again immediately without any errors
- If the sensor is replaced: once the sensor has been replaced, new sensor data are transferred from the S-DAT in the measuring device and the measuring device is ready for operation again immediately without any errors
- If exchanging the electronics module (e.g. I/O electronics module): Once the electronics module has been replaced, the software of the module is compared against the current device firmware. The module software is upgraded or downgraded where necessary. The electronics module is available for use immediately afterwards and no compatibility problems occur.

### Manual

Additional parameter data record (complete parameter settings) in the integrated device memory HistoROM backup for:

- Data backup function
   Backup and subsequent restoration of a device configuration in the device memory HistoROM backup
- Data comparison function
   Comparison of the current device configuration with the device configuration saved in the device memory HistoROM backup

### Data transmission

### Manual

- Transfer of a device configuration to another device using the export function of the specific operating tool, e.g. with FieldCare, DeviceCare or Web server: to duplicate the configuration or to store in an archive (e.g. for backup purposes)
- Transmission of the drivers for system integration via Web server, e.g.:
  - GSD for PROFIBUS DP
  - GSD for PROFIBUS PA
  - GSDML for PROFINET
  - EDS for EtherNet/IP
  - DD for FOUNDATION Fieldbus

### **Event list**

### **Automatic**

- Chronological display of up to 20 event messages in the events list
- If the Extended HistoROM application package (order option) is enabled: up to 100 event messages are displayed in the events list along with a time stamp, plain text description and remedial measures
- The events list can be exported and displayed via a variety of interfaces and operating tools e.g. DeviceCare, FieldCare or Web server

### Data logging

#### Manual

If the **Extended HistoROM** application package (order option) is enabled:

- Record up to 1000 measured values via 1 to 4 channels
- User configurable recording interval
- Record up to 250 measured values via each of the 4 memory channels
- Export the measured value log via a variety of interfaces and operating tools e.g. FieldCare, DeviceCare or web server

## Certificates and approvals

Current certificates and approvals that are available for the product can be selected via the Product Configurator at <a href="https://www.endress.com">www.endress.com</a>:

- 1. Select the product using the filters and search field.
- 2. Open the product page.
- 3. Select **Configuration**.

### CE mark

The device meets the legal requirements of the applicable EU Directives. These are listed in the corresponding EU Declaration of Conformity along with the standards applied.

Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.

### **UKCA** marking

The device meets the legal requirements of the applicable UK regulations (Statutory Instruments). These are listed in the UKCA Declaration of Conformity along with the designated standards. By selecting the order option for UKCA marking, Endress+Hauser confirms a successful evaluation and testing of the device by affixing the UKCA mark.

Contact address Endress+Hauser UK:

Endress+Hauser Ltd.

Floats Road

Manchester M23 9NF

United Kingdom

www.uk.endress.com

### RCM mark

The measuring system meets the EMC requirements of the "Australian Communications and Media Authority (ACMA)".

### Ex approval

The measuring device is certified for use in hazardous areas and the relevant safety instructions are provided in the separate "Safety Instructions" (XA) document. Reference is made to this document on the nameplate.

The following devices have equipment protection level (EPL) Gb (Zone 1 in the measuring tube):

- Device versions with the order code for "Integrated ISEM electronics", option A and the order code for "Approval; transmitter; sensor", option BI, BJ, BM or BN.
- Device versions with the order code for "Integrated ISEM electronics", option B and the order code for "Approval; transmitter; sensor", option BA, BB, BC or BD.
- The separate Ex documentation (XA) containing all the relevant explosion protection data is available from your Endress+Hauser sales center.

118

## Proline 500 - digital

## ATEX/IECEx

Currently, the following versions for use in hazardous areas are available:

## Ex ia

	Transmitter		Sensor	
Category	Type of protection	Category	Type of protection	
II(1)G	[Ex ia] IIC	II1/2G	Ex ia IIC T6T1 Gb Ex ia IIB T6T1 Gb	
II(1)G	[Ex ia] IIC	II2G	Ex ia IIC T6T1 Gb Ex ia IIB T6T1 Gb	
II3(1)G	Ex ec [ia Ga] IIC T5T4 Gc	II1/2G	Ex ia IIC T6T1 Gb Ex ia IIB T6T1 Gb	
II3(1)G	Ex ec [ia Ga] IIC T5T4 Gc	II2G	Ex ia IIC T6T1 Gb Ex ia IIB T6T1 Gb	

## Ex tb

	Transmitter		Sensor
Category	Type of protection	Category	Type of protection
II(1)D	[Ex ia] IIIC	II2D	Ex ia tb IIIC T** °C Db

### Non-Ex / Ex ec

Transmitter		Sensor	
Category	Type of protection	Category	Type of protection
Non - Ex	Non-Ex	II3G	Ex ec IIC T5T1 Gc
II3G	Ex ec IIC T5T4 Gc	II3G	Ex ec IIC T5T1 Gc

## $_{C}CSA_{US}$

Currently, the following versions for use in hazardous areas are available:

## IS (Ex nA, Ex i)

Transmitter	Sensor
Class I Division 2 Groups A - D	Class I, II, III Division 1 Groups A-G
Class I Division 2 Groups A - D	Class I, II, III Division 1 Groups C-G

## NI (Ex nA)

Transmitter	Sensor
Class I Division 2 Groups	A - D

### Ex nA / Ex i

Transmitter	Sensor
Class I, Zone 2 AEx/ Ex nA [ia Ga] IIC T5T4 Gb	Class I, Zone 1 AEx/ Ex ia IIC T6T1 Gb Class I, Zone 1 AEx/ Ex ia IIB T6T1 Gb
Class I, Zone 2 AEx/ Ex nA [ia Ga] IIC T5T4 Gb	Class I, Zone 1 AEx/ Ex ia IIC T6T1 Gb Class I, Zone 1 AEx/ Ex ia IIB T6T1 Gb

### Ex nA

Transmitter	Sensor
Class I, Zone 2 AEx/ Ex nA IIC T5T4 Gc	Class I, Zone 2 AEx/ Ex nA IIC T5T1 Gc

## Ex tb

Transmitter	Sensor
[AEx / Ex ia ] IIIC	Zone 21 AEx/ Ex ia tb IIIC T** °C Db

## Proline 500

## ATEX/IECEx

Currently, the following versions for use in hazardous areas are available:

## Ex db eb

	Transmitter		Sensor
Category	Type of protection	Category	Type of protection
II2G	Ex db eb ia IIC T6T4 Gb	II2G	Ex ia IIC T6T1 Gb
II2G	Ex db eb ia IIB T6T4 Gb	II2G	Ex ia IIB T6T1 Gb
II2G	Ex db eb ia IIC T6T4 Gb	II2G	Ex ia IIC T6T1 Gb
II2G	Ex db eb ia IIB T6T4 Gb	II2G	Ex ia IIB T6T1 Gb

## Ex db

	Transmitter		Sensor
Category	Type of protection	Category	Type of protection
II2G	Ex db ia IIC T6T4 Gb	II2G	Ex ia IIC T6T1 Gb
II2G	Ex db ia IIB T6T4 Gb	II2G	Ex ia IIB T6T1 Gb
II2G	Ex db ia IIC T6T4 Gb	II2G	Ex ia IIC T6T1 Gb
II2G	Ex db ia IIB T6T4 Gb	II2G	Ex ia IIB T6T1 Gb

### Ex tb

Category	Type of protection		
	Transmitter Sensor		
II2D	Ex tb IIIC T85°C Db	Ex ia tb IIIC T** °C Db	

### Ех ес

Category	Type of protection	
	Transmitter Sensor	
II3G	Ex ec IIC T5T4 Gc	Ex ec IIC T5T1 Gc

## $_{C}CSA_{US}$

Currently, the following versions for use in hazardous areas are available:

### IS (Ex i) and XP (Ex d)

Transmitter	Sensor
Class I, II, III Division 1 Groups A-G	
Class I, II, III Division 1 Gr	roups C-G

### NI (Ex nA)

Transmitter	Sensor
Class I Division 2 Groups	ABCD

### Ex de

Transmitter	Sensor
Class I, Zone 1 AEx/ Ex de ia IIC T6T4 Gb	Class I, Zone 1 AEx/ Ex ia IIC T6T1 Gb
Class I, Zone 1 AEx/ Ex de ia IIB T6T4 Gb	Class I, Zone 1 AEx/ Ex ia IIB T6T1 Gb
Class I, Zone 1 AEx/ Ex de ia IIC T6T4 Gb	Class I, Zone 1 AEx/ Ex ia IIC T6T1 Gb
Class I, Zone 1 AEx/ Ex de ia IIB T6T4 Gb	Class I, Zone 1 AEx/ Ex ia IIB T6T1 Gb

### Ex d

Transmitter	Sensor
Class I, Zone 1 AEx/ Ex d ia IIC T6T4 Gb	Class I, Zone 1 AEx/ Ex ia IIC T6T1 Gb
Class I, Zone 1 AEx/ Ex d ia IIB T6T4 Gb	Class I, Zone 1 AEx/ Ex ia IIB T6T1 Gb
Class I, Zone 1 AEx/ Ex d ia IIC T6T4 Gb	Class I, Zone 1 AEx/ Ex ia IIC T6T1 Gb
Class I, Zone 1 AEx/ Ex d ia IIB T6T4 Gb	Class I, Zone 1 AEx/ Ex ia IIB T6T1 Gb

### Ex nA

Transmitter	Sensor
Class I, Zone 2 AEx/ Ex nA IIC T5T4 Gc	Class I, Zone 2 AEx/ Ex nA IIC T5T1 Gc

### Ex tb

Transmitter	Sensor
Zone 21 AEx/ Ex tb IIIC T85°C Db	Zone 21 AEx/ Ex ia tb IIIC T** °C Db

### Hygienic compatibility

- 3-A approval
  - Only measuring devices with the order code for "Additional approval", option LP "3A" have 3-A approval.
  - The 3-A approval refers to the measuring device.
  - When installing the measuring device, ensure that no liquid can accumulate on the outside of the measuring device.
    - A remote display module must be installed in accordance with the 3-A Standard.
  - Accessories (e.g. heating jacket, weather protection cover, wall holder unit) must be installed in accordance with the 3-A Standard.
  - Each accessory can be cleaned. Disassembly may be necessary under certain circumstances.
- EHEDG-tested
  - Only devices with the order code for "Additional approval", option LT "EHEDG" have been tested and meet the requirements of the EHEDG.
  - To meet the requirements for EHEDG certification, the device must be used with process connections in accordance with the EHEDG position paper entitled "Easy cleanable Pipe couplings and Process connections" (www.ehedg.org).
- FDA
- Food Contact Materials Regulation (EC) 1935/2004

### Pharmaceutical compatibility

- FDA 21 CFR 177
- USP <87>
- USP <88> Class VI 121 °C
- TSE/BSE Certificate of Suitability
- cGMP

Devices with the order code for "Test, certificate", option JG "Conformity with cGMP-derived requirements, declaration" comply with the requirements of cGMP with regard to the surfaces of parts in contact with the medium, design, FDA 21 CFR material conformity, USP Class VI tests and TSE/BSE conformity.

A serial number-specific declaration is generated.

### **Functional safety**

The measuring device can be used for flow monitoring systems (min., max., range) up to SIL 2 (single-channel architecture; order code for "Additional approval", option LA) and SIL 3 (multichannel architecture with homogeneous redundancy) and is independently evaluated and certified in accordance with IEC 61508.

The following types of monitoring in safety equipment are possible:

- Mass flow
- Volume flow
- Density



### **HART** certification

### **HART** interface

The measuring device is certified and registered by the FieldComm Group. The measuring system meets all the requirements of the following specifications:

- Certified according to HART 7
- The device can also be operated with certified devices of other manufacturers (interoperability)

# FOUNDATION Fieldbus certification

### FOUNDATION Fieldbus interface

The measuring device is certified and registered by the FieldComm Group. The measuring system meets all the requirements of the following specifications:

- Certified in accordance with FOUNDATION Fieldbus H1
- Interoperability Test Kit (ITK), revision version 6.2.0 (certificate available on request)
- Physical Layer Conformance Test
- The device can also be operated with certified devices of other manufacturers (interoperability)

### **Certification PROFIBUS**

### PROFIBUS interface

The measuring device is certified and registered by the PNO (PROFIBUS Nutzerorganisation e.V./ PROFIBUS User Organization). The measuring system meets all the requirements of the following specifications:

- Certified according to PA Profile 3.02
- The device can also be operated with certified devices of other manufacturers (interoperability)

### EtherNet/IP certification

The measuring device is certified and registered by the ODVA (Open Device Vendor Association). The measuring system meets all the requirements of the following specifications:

- Certified in accordance with the ODVA Conformance Test
- EtherNet/IP Performance Test
- EtherNet/IP PlugFest compliance
- The device can also be operated with certified devices of other manufacturers (interoperability)

### Certification PROFINET

### PROFINET interface

The measuring device is certified and registered by the PNO (PROFIBUS Nutzerorganisation e.V. / PROFIBUS User Organization). The measuring system meets all the requirements of the following specifications:

- Certified according to:
  - Test specification for PROFINET devices
  - PROFINET Security Level 2 Netload Class 2 0 Mbps
- The device can also be operated with certified devices of other manufacturers (interoperability)
- The device supports PROFINET S2 system redundancy.

# Certification PROFINET with Ethernet-APL

#### PROFINET interface

The measuring device is certified and registered by the PNO (PROFIBUS Nutzerorganisation e.V. / PROFIBUS User Organization). The measuring system meets all the requirements of the following specifications:

- Certified according to:
  - Test specification for PROFINET devices
  - PROFINET PA Profile 4
  - PROFINET Security Level 2 Netload Class 2 0 Mbps
  - APL conformance test
- The device can also be operated with certified devices of other manufacturers (interoperability)
- The device supports PROFINET S2 system redundancy.

# Pressure Equipment Directive

The devices can be ordered with or without a PED or UKCA approval. If a device with a PED or UKCA approval is required, this must be explicitly stated in the order. For devices with nominal diameters less than or equal to DN 25 (1"), this is neither possible nor necessary. A UK Ex approval must be selected for UKCA.

- With the marking:
  - a) PED/G1/x (x = category) or
  - b) UK/G1/x (x = category)

on the sensor nameplate, Endress+Hauser confirms compliance with the "Essential Safety Requirements"

- a) specified in Annex I of the Pressure Equipment Directive 2014/68/EU or
- b) Schedule 2 of Statutory Instruments 2016 No. 1105.
- Devices bearing this marking (PED or UKCA) are suitable for the following types of medium:
  - Media in Group 1 and 2 with a vapor pressure greater than, or smaller and equal to 0.5 bar (7.3 psi)
  - Unstable gases
- Devices not bearing this marking (without PED or UKCA) are designed and manufactured according to sound engineering practice. They meet the requirements of
  - a) Art. 4 Para. 3 of the Pressure Equipment Directive 2014/68/EU or
  - b) Part 1, Para. 8 of Statutory Instruments 2016 No. 1105.

The scope of application is indicated

- a) in diagrams 6 to 9 in Annex II of the Pressure Equipment Directive 2014/68/EU or
- b) Schedule 3, Para. 2 of Statutory Instruments 2016 No. 1105.

### Radio approval

The measuring device has radio approval.



For detailed information on the radio approval, see the Special Documentation  $\rightarrow \implies 130$ 

### Additional certification

### CRN approval

Some device versions have CRN approval. A CRN-approved process connection with a CSA approval must be ordered for a CRN-approved device.

### Tests and certificates

- EN10204-3.1 material certificate, wetted parts and sensor housing
- Pressure test, internal process, inspection certificate
- $\,\blacksquare\,$  Compliance with requirements derived from cGMP, Declaration
- EN10204-2.1 confirmation of compliance with the order and EN10204-2.2 test report

# Other standards and quidelines

■ EN 60529

Degrees of protection provided by enclosures (IP code)

■ IEC/EN 60068-2-6

Environmental influences: Test procedure - Test Fc: vibrate (sinusoidal).

■ IEC/EN 60068-2-31

Environmental influences: Test procedure - Test Ec: shocks due to rough handling, primarily for devices.

■ EN 61010-1

Safety requirements for electrical equipment for measurement, control and laboratory use - general requirements

■ IEC/EN 61326-2-3

Emission in accordance with Class A requirements. Electromagnetic compatibility (EMC requirements).

■ NAMUR NE 21

Electromagnetic compatibility (EMC) of industrial process and laboratory control equipment

NAMUR NE 32

Data retention in the event of a power failure in field and control instruments with microprocessors

NAMUR NE 43

Standardization of the signal level for the breakdown information of digital transmitters with analog output signal.

■ NAMUR NE 53

Software of field devices and signal-processing devices with digital electronics

■ NAMUR NE 80

The application of the pressure equipment directive to process control devices

■ NAMUR NE 105

Specifications for integrating fieldbus devices in engineering tools for field devices

■ NAMUR NE 107

Self-monitoring and diagnosis of field devices

NAMUR NE 131

Requirements for field devices for standard applications

■ NAMUR NE 132

Coriolis mass meter

## Ordering information

Detailed ordering information is available from your nearest sales organization www.addresses.endress.com or in the Product Configurator at www.endress.com:

- 1. Select the product using the filters and search field.
- 2. Open the product page.
- 3. Select **Configuration**.

### Product Configurator - the tool for individual product configuration

- Up-to-the-minute configuration data
- Depending on the device: Direct input of measuring point-specific information such as measuring range or operating language
- Automatic verification of exclusion criteria
- Automatic creation of the order code and its breakdown in PDF or Excel output format
- Ability to order directly in the Endress+Hauser Online Shop

## **Application packages**

Many different application packages are available to enhance the functionality of the device. Such packages might be needed to address safety aspects or specific application requirements.

The application packages can be ordered with the device or subsequently from Endress+Hauser. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: <a href="https://www.endress.com">www.endress.com</a>.



Detailed information on the application packages: Special Documentation for the device  $\rightarrow \implies 130$ 

### Diagnostic functionality

Order code for "Application package", option EA "Extended HistoROM"

Comprises extended functions concerning the event log and the activation of the measured value memory.

Event log:

Memory volume is extended from 20 message entries (standard version) to up to 100 entries.

Data logging (line recorder):

- Memory capacity for up to 1000 measured values is activated.
- 250 measured values can be output via each of the 4 memory channels. The recording interval can
  be defined and configured by the user.
- Measured value logs can be accessed via the local display or operating tool e.g. FieldCare, DeviceCare or Web server.



For detailed information, see the Operating Instructions for the device.

### **Heartbeat Technology**

Order code for "Application package", option EB "Heartbeat Verification + Monitoring"

#### Heartbeat Verification

Meets the requirement for traceable verification to DIN ISO 9001:2008 Chapter 7.6 a) "Control of monitoring and measuring equipment".

- Functional testing in the installed state without interrupting the process.
- Traceable verification results on request, including a report.
- Simple testing process via local operation or other operating interfaces.
- Clear measuring point assessment (pass/fail) with high test coverage within the framework of manufacturer specifications.
- Extension of calibration intervals according to operator's risk assessment.

### **Heartbeat Monitoring**

Continuously supplies data, which are characteristic of the measuring principle, to an external condition monitoring system for the purpose of preventive maintenance or process analysis. These data enable the operator to:

- Draw conclusions using these data and other information about the impact the process influences (e.g. corrosion, abrasion, formation of buildup etc.) have on measuring performance over time.
- Schedule servicing in time.
- Monitor the process or product quality, e.g. gas pockets.



For detailed information, see the Special Documentation for the device.

## **Concentration measurement**

Order code for "Application package", option ED "Concentration"

Calculation and outputting of fluid concentrations.

The measured density is converted to the concentration of a substance of a binary mixture using the "Concentration" application package:

- Choice of predefined fluids (e.g. various sugar solutions, acids, alkalis, salts, ethanol etc.).
- Common or user-defined units (Brix, Plato, mass, volume, mol/l etc.) for standard applications.
- Concentration calculation from user-defined tables.



For detailed information, see the Special Documentation for the device.

### Viscosity

Order code for "Application package", option EG "Viscosity"

### In-line and real-time viscosity measurement

Promass I with the "Viscosity" application package also measures the real-time viscosity of the fluid directly in the process, in addition to measuring the mass flow/volume flow/ temperature and density.

The following viscosity measurements are performed on liquids:

- Dynamic viscosity
- Kinematic viscosity
- Temperature-compensated viscosity (kinematic and dynamic) in relation to the reference temperature

Viscosity measurement can be used for Newtonian and non-Newtonian applications and supplies accurate measured data irrespective of the flow, even under difficult conditions.



For detailed information, see the Special Documentation for the device.

## Special density

Order code for "Application package", option EE "Special density"

Many applications use density as a key measured value for monitoring quality or controlling processes. The device measures the density of the fluid as standard and makes this value available to the control system.

The "Special Density" application package offers high-precision density measurement over a wide density and temperature range particularly for applications subject to varying process conditions.



For detailed information, see the Operating Instructions for the device.

### **OPC-UA Server**

Order code for "Application package", option EL "OPC-UA Server"

The application package provides an integrated OPC-UA server for comprehensive device services for IoT and SCADA applications.



For detailed information, see the Special Documentation for the device.  $\label{eq:condition}$ 

## Accessories

Various accessories, which can be ordered with the device or subsequently from Endress+Hauser, are available for the device. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.

## Device-specific accessories

### For the transmitter

Accessories	Description
Transmitter Proline 500 – digital Proline 500	Transmitter for replacement or storage. Use the order code to define the following specifications:  Approvals  Output  Input  Display/operation  Housing  Software
	Proline 500 – digital transmitter: Order number: 8X5BXX-******* Proline 500 transmitter: Order number: 8X5BXX-*********B
	Proline 500 transmitter for replacement: It is essential to specify the serial number of the current transmitter when ordering. On the basis of the serial number, the device-specific data (e.g. calibration factors) of the replaced device can be used for the new transmitter.
	<ul> <li>Proline 500 – digital transmitter: Installation Instructions EA01151D</li> <li>Proline 500 transmitter: Installation Instructions EA01152D</li> </ul>
External WLAN antenna	External WLAN antenna with 1.5 m (59.1 in) connecting cable and two angle brackets. Order code for "Accessory enclosed", option P8 "Wireless antenna wide area".
	<ul> <li>The external WLAN antenna is not suitable for use in hygienic applications.</li> <li>Additional information regarding the WLAN interface → 113.</li> </ul>
	Order number: 71351317
	Installation Instructions EA01238D

Ding mounting got	Ding mounting set for transmitter
Pipe mounting set	Pipe mounting set for transmitter.
	Proline 500 – digital transmitter Order number: 71346427
	Installation Instructions EA01195D
	Proline 500 transmitter Order number: 71346428
Weather protection cover	Is used to protect the measuring device from the effects of the weather: e.g.
Transmitter	rainwater, excess heating from direct sunlight.
<ul><li>Proline 500 – digital</li><li>Proline 500</li></ul>	Proline 500 – digital transmitter Order number: 71343504
Profifie 500	Proline 500 transmitter
	Order number: 71343505
	Installation Instructions EA01191D
Display guard Proline 500 – digital	Is used to protect the display against impact or scoring, for example from sand in desert areas.
	Order number: 71228792
	Installation Instructions EA01093D
Connecting cable Proline 500 – digital	The connecting cable can be ordered directly with the measuring device (order code for "Cable, sensor connection) or as an accessory (order number DK8012).
Sensor – Transmitter	The following cable lengths are available: order code for "Cable, sensor connection"  • Option B: 20 m (65 ft)
	Option E: User-configurable up to max. 50 m
	Option F: User-configurable up to max. 165 ft
	Maximum possible cable length for a Proline 500 – digital connecting cable: 300 m (1000 ft)
Connecting cable Proline 500	The connecting cable can be ordered directly with the measuring device (order code for "Cable, sensor connection") or as an accessory (order number DK8012).
Sensor – Transmitter	The following cable lengths are available: order code for "Cable, sensor connection"  Option 1: 5 m (16 ft)  Option 2: 10 m (32 ft)  Option 3: 20 m (65 ft)
	Possible cable length for a Proline 500 connecting cable: max. 20 m (65 ft)

### For the sensor

Accessories	Description
Heating jacket	Is used to stabilize the temperature of the fluids in the sensor. Water, water vapor and other non-corrosive liquids are permitted for use as fluids.
	If using oil as a heating medium, please consult with Endress+Hauser.
	Use the order code with the product root DK8003.
	Special Documentation SD02158D

# Communication-specific accessories

Accessories	Description
Commubox FXA195 HART	For intrinsically safe HART communication with FieldCare via the USB interface.  Technical Information TI00404F
HART Loop Converter HMX50	Is used to evaluate and convert dynamic HART process variables to analog current signals or limit values.
	<ul><li>Technical Information TI00429F</li><li>Operating Instructions BA00371F</li></ul>

Fieldgate FXA42	Is used to transmit the measured values of connected 4 to 20 mA analog measuring devices, as well as digital measuring devices  Technical Information T101297S
	<ul> <li>Operating Instructions BA01778S</li> <li>Product page: www.endress.com/fxa42</li> </ul>
Field Xpert SMT50	The Field Xpert SMT70 tablet PC for device configuration enables mobile plant asset management in non-hazardous areas. It is suitable for commissioning and maintenance staff to manage field instruments with a digital communication interface and to record progress.  This tablet PC is designed as an all-in-one solution with a preinstalled driver library and is an easy-to-use, touch-sensitive tool which can be used to manage field instruments throughout their entire life cycle.
	<ul> <li>Technical Information TI01342S</li> <li>Operating Instructions BA01709S</li> <li>Product page: www.endress.com/smt50</li> </ul>
Field Xpert SMT70	The Field Xpert SMT70 tablet PC for device configuration enables mobile plant asset management in hazardous and non-hazardous areas. It is suitable for commissioning and maintenance staff to manage field instruments with a digital communication interface and to record progress.  This tablet PC is designed as an all-in-one solution with a preinstalled driver library and is an easy-to-use, touch-sensitive tool which can be used to manage field instruments throughout their entire life cycle.
	<ul> <li>Technical Information TI01342S</li> <li>Operating Instructions BA01709S</li> <li>Product page: www.endress.com/smt70</li> </ul>
Field Xpert SMT77	The Field Xpert SMT77 tablet PC for device configuration enables mobile plant asset management in areas categorized as Ex Zone 1.
	<ul> <li>Technical Information TI01418S</li> <li>Operating Instructions BA01923S</li> <li>Product page: www.endress.com/smt77</li> </ul>

## Service-specific accessories

Accessory	Description
Applicator	Software for selecting and sizing Endress+Hauser measuring devices:  Choice of measuring devices with industrial requirements  Calculation of all the necessary data for identifying the optimum flowmeter: e.g. nominal diameter, pressure loss, flow velocity and accuracy.  Graphic illustration of the calculation results  Determination of the partial order code, administration, documentation and access to all project-related data and parameters over the entire life cycle of a project.  Applicator is available:  Via the Internet: https://portal.endress.com/webapp/applicator  As a downloadable DVD for local PC installation.
W@M	W@M Life Cycle Management Improved productivity with information at your fingertips. Data relevant to a plant and its components is generated from the first stages of planning and during the asset's complete life cycle.  W@M Life Cycle Management is an open and flexible information platform with online and on-site tools. Instant access for your staff to current, in-depth data shortens your plant's engineering time, speeds up procurement processes and increases plant uptime.  Combined with the right services, W@M Life Cycle Management boosts productivity in every phase. For more information, see:  www.endress.com/lifecyclemanagement
FieldCare	FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.  Operating Instructions BA00027S and BA00059S
DeviceCare	Tool for connecting and configuring Endress+Hauser field devices.  Innovation brochure IN01047S

System components	Accessories	Description
	Memograph M graphic data manager	The Memograph M graphic data manager provides information on all the relevant measured variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on a SD card or USB stick.
		<ul><li>Technical Information TI00133R</li><li>Operating Instructions BA00247R</li></ul>
	Cerabar M	The pressure transmitter for measuring the absolute and gauge pressure of gases, steam and liquids. It can be used to read in the operating pressure value.
		<ul> <li>Technical Information TI00426P and TI00436P</li> <li>Operating Instructions BA00200P and BA00382P</li> </ul>
	Cerabar S	The pressure transmitter for measuring the absolute and gauge pressure of gases, steam and liquids. It can be used to read in the operating pressure value.
		<ul><li>Technical Information TI00383P</li><li>Operating Instructions BA00271P</li></ul>
	iTEMP	The temperature transmitters can be used in all applications and are suitable for the measurement of gases, steam and liquids. They can be used to read in the medium temperature.
		"Fields of Activity" document FA00006T

## **Documentation**



For an overview of the scope of the associated Technical Documentation, refer to the following:

- Device Viewer (www.endress.com/deviceviewer): Enter serial number from nameplate.
- *Endress+Hauser Operations app*: Enter serial number from nameplate or scan matrix code on nameplate.

### Standard documentation

## **Brief Operating Instructions**

Brief Operating Instructions for the sensor

Measuring device	Documentation code
Proline Promass I	KA01284D

### Brief Operating Instructions for the transmitter

	Documentatio	Documentation code						
Measuring device	HART	FOUNDATIO N Fieldbus	PROFIBUS PA	PROFIBUS DP	Modbus RS485	EtherNet/IP	PROFINET	PROFINET with Ethernet- APL
Proline 500 – digital	KA01315D	KA01233D	KA01392D	KA01390D	KA01319D	KA01346D	KA01351D	KA01521D
Proline 500	KA01314D	KA01291D	KA01391D	KA01389D	KA01318D	KA01347D	KA01350D	KA01520D

### **Operating Instructions**

Measuring device	Documentatio	Documentation code						
	HART	FOUNDATIO N Fieldbus	PROFIBUS PA	PROFIBUS DP	Modbus RS485	EtherNet/IP	PROFINET	PROFINET with Ethernet- APL
Promass I 500	BA01531D	BA01564D	BA01553D	BA01875D	BA01542D	BA01752D	BA01763D	BA02126D

## **Description of Device Parameters**

	Documentation code							
Measuring device	HART	FOUNDATIO N Fieldbus	PROFIBUS PA	PROFIBUS DP	Modbus RS485	EtherNet/IP	PROFINET	PROFINET with Ethernet- APL
Promass 500	GP01060D	GP01096D	GP01061D	GP01137D	GP01062D	GP01120D	GP01121D	GP01173D

Supplementary devicedependent documentation

Safety instructions

Safety instructions for electrical equipment for hazardous areas.

Documentation code
Measuring device
XA01473D
XA01474D
XA01475D
XA01509D
XA01510D
XA01476D
XA01477D
XA01478D
XA01479D
XA01658D
XA01659D
XA01780D

## **Functional Safety Manual**

Contents	Documentation code
Proline Promass 500	SD01729D

## **Special Documentation**

Contents	Documentation code
Information on the Pressure Equipment Directive	SD01614D
Radio approvals for WLAN interface for A309/A310 display module	SD01793D
OPC-UA server 1)	SD02040D

1) This Special Documentation is only available for device versions with a HART output.

Contents	Documentation code							
	HART	FOUNDATIO N Fieldbus	PROFIBUS PA	PROFIBUS DP	Modbus RS485	PROFINET	EtherNet/IP	PROFINET with Ethernet- APL
Web server	SD01666D	SD01669D	SD01668D	SD02232D	SD01667D	SD01971D	SD01970D	SD02769D
Heartbeat Technology	SD01643D	SD01608D	SD01705D	SD02203D	SD01704D	SD01989D	SD01983D	SD02732D

Contents	Documentation code							
	HART	FOUNDATIO N Fieldbus	PROFIBUS PA	PROFIBUS DP	Modbus RS485	PROFINET	EtherNet/IP	PROFINET with Ethernet- APL
Concentration measurement	SD01645D	SD01709D	SD01711D	SD02213D	SD01710D	SD02007D	SD02006D	SD02736D
Viscosity measurement	SD01647D	SD01723D	SD01725D	SD02211D	SD01724D	SD01995D	SD01994	SD02742D
Gas Fraction Handler	SD02584D	-	-	-	SD02584D	SD02584D	-	SD02584D

### **Installation Instructions**

Contents	Comment
Installation instructions for spare part sets and accessories	Documentation code: specified for each individual accessory $\rightarrow$ $\  \   \  \   \  \   \  \   \   $

## Registered trademarks

### **HART®**

Registered trademark of the FieldComm Group, Austin, Texas, USA

#### **PROFIBUS®**

Registered trademark of the PROFIBUS Nutzerorganisation e.V. (PROFIBUS User Organization), Karlsruhe, Germany

## FOUNDATION™ Fieldbus

Registration-pending trademark of the FieldComm Group, Austin, Texas, USA

### Modbus®

Registered trademark of SCHNEIDER AUTOMATION, INC.

### EtherNet/IP™

Trademark of ODVA, Inc.

### Ethernet-APL $^{TM}$

Registered trademark of the PROFIBUS Nutzerorganisation e.V. (PROFIBUS User Organization), Karlsruhe, Germany

### **PROFINET®**

Registered trademark of the PROFIBUS Nutzerorganisation e.V. (PROFIBUS User Organization), Karlsruhe, Germany

### TRI-CLAMP®

Registered trademark of Ladish & Co., Inc., Kenosha, USA



www.addresses.endress.com

