Safety Instructions **Nivotester FTW325**

[Ex ia Ga] IIC X [Ex ia Ga] IIB X [Ex ia Da] IIIC X







Nivotester FTW325

Table of contents

About this document	4
Associated documentation	4
Supplementary documentation	4
Manufacturer's certificates	4
Manufacturer address	4
Extended order code	4
Safety instructions: General	6
Safety instructions: Installation	7
Temperature tables	9
Connection data	9

About this document



This document has been translated into several languages. Legally determined is solely the English source text.

Associated documentation

This document is an integral part of the following Operating Instructions:

KA00199F. TI00373F

Supplementary documentation

Explosion-protection brochure: CP00021Z/11

The Explosion-protection brochure is available:

 In the download area of the Endress+Hauser website: www.endress.com -> Downloads -> Brochures and Catalogs -> Text Search: CP000217.

On the CD for devices with CD-based documentation

Manufacturer's certificates

Certificate of Conformity TP TC 012/2011

Inspection authority: LLC NANIO CCVE (OOO «HAHNO LICBЭ»)

Certificate number:

EA3C RU C-DE AA87 B 00993/22

Affixing the certificate number certifies conformity with the following standards (depending on the device version):

- GOST 31610.0-2014 (IEC 60079-0:2011)
- GOST 31610.11-2014 (IEC 60079-11:2011)

Manufacturer address

Endress+Hauser SE+Co. KG

Hauptstraße 1

79689 Maulburg, Germany

Address of the manufacturing plant: See nameplate.

Extended order code

The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional information about the nameplate is provided in the associated Operating Instructions.

Structure of the extended order code

FTW325	-	******	+	A*B*C*D*E*F*G*.
(Device		(Basic		(Optional
type)		specifications)		specifications)

* = Placeholder

At this position, an option (number or letter) selected from the specification is displayed instead of the placeholders.

Basic specifications

The features that are absolutely essential for the device (mandatory features) are specified in the basic specifications. The number of positions depends on the number of features available.

The selected option of a feature can consist of several positions.

Optional specifications

The optional specifications describe additional features for the device (optional features). The number of positions depends on the number of features available. The features have a 2-digit structure to aid identification (e.g. JA). The first digit (ID) stands for the feature group and consists of a number or a letter (e.g. J = Test, Certificate). The second digit constitutes the value that stands for the feature within the group (e.g. A = 3.1 material (wetted parts), inspection certificate).

More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

Extended order code: Nivotester



The following specifications reproduce an extract from the product structure and are used to assign:

- This documentation to the device (using the extended order code on the nameplate).
- The device options cited in the document.

Device type

FTW325

Basic specifications

Position 1 (Approval)		
Selected option Description		
FTW325	8	EAC [Ex ia Ga] IIC EAC [Ex ia Ga] IIB EAC [Ex ia Da] IIIC

Position 2 (Housing)		
Selected option		Description
FTW325 2		Rail mounting, 22.5 mm, 2-channel

Position 3	(Power Su	pply)
Selected option Description		
FTW325 A		85-253 V AC
B 20-30 V AC / 20-60 V DC		20-30 V AC / 20-60 V DC

Position 4 (Switch O	utput)
Selected option Description	
FTW325 1 1x SPDT level + 1x SPST alarm	


Optional specifications

No options specific to hazardous locations are available.

Safety instructions: General

- Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device:
 - Be suitably qualified for their role and the tasks they perform
 - Be trained in explosion protection
 - Be familiar with national regulations
- Comply with the installation and safety instructions in the Operating Instructions.
- Install the device according to the manufacturer's instructions and national regulations.
- Do not operate the device outside the specified electrical, thermal and mechanical parameters.
- Avoid electrostatic charging.


Safety instructions: Installation

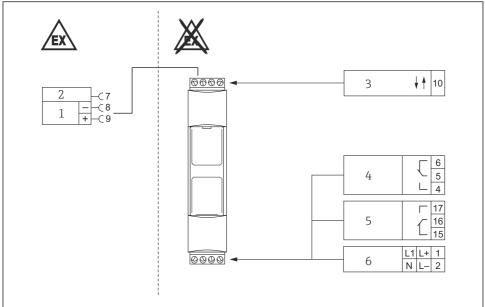

A003/470

■ 1

- 1 Sensor, Limit level Ex ia IIC/IIB
- 2 Earth
- 3 Master / Slave
- 4 Limit relay 1
- 5 Limit relay 2 / Alarm relay
- 6 Power supply

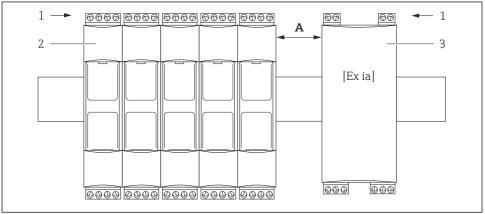

A0034705

₽ 2

- A Min. 6 mm
- 1 Intrinsically safe contacts
- 2 Nivotester FTW325
- 3 Other type, other product
- To achieve an ingress protection of at least IP55: Protect the device from dust and humidity, e.g. in control rooms, or located in a suitable protective enclosure.
- The device is an associated apparatus: Only use the device outside explosion hazardous areas.
- If an intrinsically safe circuit is connected to the device passes through dust explosion-hazardous areas of Zones 20 or Zone 21, make sure that the devices connected to this circuit meet the requirements of categories 1 D or 2 D and are certified accordingly.
- There must be a distance (thread measure) of at least 50 mm between intrinsically safe and nonintrinsically safe terminals.
- When combining the device with other types and products on the same top-hat rail: Keep the distances comply to the relevant standards and rules.
- When combining with devices from other manufacturers: Observe ingress protection of the enclosure.

Intrinsic safety

- Observe the pertinent guidelines when interconnecting intrinsically safe circuits.
- The intrinsically-safe input circuits are galvanically isolated from other circuits up to a peak value of the nominal voltage of 375 V.
- All devices that are connected to the intrinsically safe circuits must be included in the potential equalization.

Temperature tables

Ambient temperature range	
Individual installation	$-20^{\circ}\text{C} \le T_a \le +60^{\circ}\text{C}$
Series installation	$-20^{\circ}\text{C} \le T_a \le +50^{\circ}\text{C}$

Connection data

Power supply circuit					
Terminal connections: 1, 2	AC voltage	U = 85 to 253 V_{AC} , 50/60 Hz $P \le 5.2 \text{ VA}$			
	DC voltage	$\label{eq:U} \begin{split} U &= 20 \text{ to } 60 \text{ V}_{DC} \\ U &= 20 \text{ to } 30 \text{ V}_{AC}, \text{ 50/60 Hz} \\ P &\leq 1.2 \text{ W} \\ P &\leq 2.0 \text{ VA} \end{split}$			

Contact circuit			
Limit relay Terminal connections: Channel 1 (CH1): 4, 5, 6 Channel 2 (CH2): 15, 16, 17 1)	$U \le 250~V_{AC},~I \le 2~A,~P \le 500~VA$ at $\cos~\phi \ge 0.7$ $U \le 40~V_{DC},~I \le 2~A,~P \le 80~W$		
Alarm relay Terminal connections: 15, 16, 17 ¹⁾			

1) dependent on the configuration

Sensor circuit					
Terminal connections: Channel 1 (CH1): 9 Channel 2 (CH2): 8 ¹⁾ Earth: 7	Connection data:	$\begin{array}{c} U_o \leq 13.8 \text{ V} \\ I_o \leq 15.5 \text{ m.} \\ P_o \leq 116 \text{ m.} \end{array}$ Trapezium-	A	cteristic	
		[Ex ia Ga] IIC [Ex ia Ga] IIB [Ex ia Da] IIIC			
		Lo	Co	Lo	Co
	Max. external	0.5 mH	730 nF	2.0 mH	2.8 μF
	capacitance at max. external inductance	1.0 mH	610 nF	5.0 mH	2.1 µF
	Max. external capacitance or max. external inductance	100 mH	760 nF	100 mH	4.9 μF
If using explosion protection group		[Ex ib Gb] IIC		[Ex ib Gb] IIB	
[Ex ib Gb] IIC/IIB the application is limited to II (2) ${\bf G}$		L _o	C _o	L _o	C _o
	Max. external capacitance or max. external inductance	100 mH	760 nF	100 mH	4.9 μF

1) dependent on the configuration



The values of the max. external capacitance and inductance of Group IIB are applicable for the explosion hazards arising from dust.





www.addresses.endress.com