

# Safety Instructions

## Micropilot

### FMR60B/62B/63B/66B/67B

II 1/2 G Ex ia IIC T6 Ga/Gb

II 2 G Ex ia IIC T6 Gb

**UK  
CA**





# Micropilot FMR60B/62B/63B/66B/67B

## Table of contents

Associated documentation .....	4
Supplementary documentation .....	4
Manufacturer's certificates .....	4
Manufacturer address .....	5
Other standards .....	5
Extended order code .....	5
Safety instructions: General .....	9
Safety instructions: Special conditions .....	10
Safety instructions: Installation .....	11
Safety instructions: Zone separation Zone 0, Zone 1 .....	12
Temperature tables .....	13
Connection data .....	21

**Associated documentation**

This document is an integral part of the following Operating Instructions:

**HART**

- BA02247F (FMR60B)
- BA02248F (FMR62B)
- BA02249F (FMR63B)
- BA02250F (FMR66B)
- BA02251F (FMR67B)

**PROFIBUS PA**

- BA02261F (FMR60B)
- BA02262F (FMR62B)
- BA02263F (FMR63B)
- BA02264F (FMR66B)
- BA02265F (FMR67B)

**PROFINET**

- BA02266F (FMR60B)
- BA02267F (FMR62B)
- BA02268F (FMR63B)
- BA02269F (FMR66B)
- BA02270F (FMR67B)

**Supplementary documentation**

Explosion protection brochure: CP00021Z

The Explosion-protection brochure is available:

- In the download area of the Endress+Hauser website:  
[www.endress.com](http://www.endress.com) -> Downloads -> Brochures and Catalogs ->  
Text Search: CP00021Z
- On the CD for devices with CD-based documentation

**Manufacturer's certificates****UK Declaration of Conformity**

Declaration Number:

UK\_00019

The UK Declaration of Conformity is available:

In the download area of the Endress+Hauser website:

[www.endress.com](http://www.endress.com) -> Downloads -> Declaration ->  
Type: UKCA Declaration -> Product Code: ...

**UKCA type-examination certificate**

Certificate number:

CML 22UKEX2610X

List of applied standards: See UK Declaration of Conformity.

<b>Manufacturer address</b>	Endress+Hauser SE+Co. KG Hauptstraße 1 79689 Maulburg, Germany Address of the manufacturing plant: See nameplate.
<b>Other standards</b>	Among other things, the following standards shall be observed in their current version for proper installation: <ul style="list-style-type: none"> <li>■ IEC/EN 60079-14: "Explosive atmospheres - Part 14: Electrical installations design, selection and erection"</li> <li>■ EN 1127-1: "Explosive atmospheres - Explosion prevention and protection - Part 1: Basic concepts and methodology"</li> </ul>
<b>Extended order code</b>	The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional information about the nameplate is provided in the associated Operating Instructions.

#### Structure of the extended order code

FMR6xB	–	*****	+	A*B*C*D*E*F*G*..
<i>(Device type)</i>		<i>(Basic specifications)</i>		<i>(Optional specifications)</i>

\* = Placeholder

At this position, an option (number or letter) selected from the specification is displayed instead of the placeholders.

#### *Basic specifications*

The features that are absolutely essential for the device (mandatory features) are specified in the basic specifications. The number of positions depends on the number of features available. The selected option of a feature can consist of several positions.

#### *Optional specifications*

The optional specifications describe additional features for the device (optional features). The number of positions depends on the number of features available. The features have a 2-digit structure to aid identification (e.g. JA). The first digit (ID) stands for the feature group and consists of a number or a letter (e.g. J = Test, Certificate). The second digit constitutes the value that stands for the feature within the group (e.g. A = 3.1 material (wetted parts), inspection certificate).

More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

### Extended order code: Micropilot



The following specifications reproduce an extract from the product structure and are used to assign:

- This documentation to the device (using the extended order code on the nameplate).
- The device options cited in the document.

#### *Device type*

FMR60B, FMR62B, FMR63B, FMR66B, FMR67B

#### *Basic specifications*

Position 1, 2 (Approval)		
Selected option		Description
FMR6xB	UB	UK Ex II 1/2 G Ex ia IIC T6...T1 Ga/Gb UK Ex II 2 G Ex ia IIC T6...T1 Gb

Position 3, 4 (Output)		
Selected option		Description
FMR6xB	BA	2-wire, 4-20 mA HART
	DA	2-wire, PROFIBUS PA
	FA	2-wire, PROFINET, 10Mbit/s (APL)

Position 5 (Display, Operation)		
Selected option		Description
FMR6xB	L	Prepared for display FHX50B + M12 connection
	M	Prepared for display FHX50B + Gland M20
	N	Prepared for display FHX50B + Thread NPT1/2
	O	Prepared for display FHX50B + Thread M20

Position 6 (Housing, Material)		
Selected option		Description
FMR6xB	B	Single compartment; Alu, coated
	J	Dual compartment; Alu, coated
	K	Dual compartment; 316L
	M	Dual compartment L-shape; Alu, coated
	N	Dual compartment L-shape; 316L, coated

Position 8 (Application)		
Selected option		Description
FMR60B	B	Process temperature -20...+150°C
FMR62B	D	Process temperature -20...+200°C
FMR63B		
FMR67B		
FMR60B	F	Process temperature -40...+80°C
FMR66B		
FMR67B		
FMR60B	H	Process temperature -40...+130°C
FMR66B		
FMR6xB	J	Process temperature -40...+150°C
	L	Process temperature -40...+200°C
FMR62B	N	Process temperature -40...+280°C
FMR67B	P	Process temperature -40...+450°C
FMR62B	R	Process temperature -60...+200°C
	T	Process temperature -196...+200°C
FMR62B	V	Process temperature -20...+150°C, Steam application
FMR63B	W	Process temperature -20...+200°C, Steam application

Position 9, 10 (Antenna)		
Selected option		Description
FMR60B	BS	Encapsulated, PVDF, 40mm/1-1/2"
FMR66B		
FMR60B	GA	Drip-off, PTFE 50mm/2"
FMR62B		
FMR66B		
FMR67B		
FMR60B	GE	Integrated, PEEK, 20mm/3/4"
FMR63B		

Position 9, 10 (Antenna)		
Selected option		Description
FMR60B	GF	Integrated, PEEK, 40mm/1-1/2"
FMR62B	GM	Cladded flush mount, PTFE, 50mm/2"
FMR63B	GN	Cladded flush mount, PTFE, 80mm/3"
FMR67B	GP	Flush mount, PTFE, 80mm/3"
FMR63B	GQ	Cladded, flush mount, PEEK, 20mm/3/4"
	GR	Cladded, flush mount, PEEK, 40mm/1-1/2"
FMR62B FMR67B	GT	Horn, 316L, 65mm/2.6"

Position 11, 12 (Process Connection, Sealing Surface)		
Selected option		Description
FMR67B	JD	Alignment device, UNI flange

Position 16 (Seal)		
Selected option		Description
FMR60B FMR66B	A	PVDF encapsulated
FMR62B FMR63B	B	PTFE cladded
FMR63B	C	PEEK cladded
FMR6xB	D	VKM Viton GLT
	G	EPDM
FMR60B FMR62B FMR63B FMR67B	J	HNBR
	P	FFKM Kalrez
FMR62B FMR67B	U	Graphite

Position 17 (Air Purge Connection)		
Selected option		Description
FMR6xB	1	G1/4
	2	NPT1/4
	3	Adapter G1/4
	4	Adapter NPT1/4



*Optional specifications*

ID Jx, Kx (Test, Certificate, Declaration)		
Selected option	Description	
FMR6xB	JL	Ambient temp. transmitter -50°C/-58°F, sensor see specification

ID Nx, Ox (Accessory Mounted)		
Selected option	Description	
FMR6xB	NA	Overvoltage protection <sup>1)</sup>
	NC	Gas-tight feed through

1) Only in connection with Position 6 = J, K, M, N

ID Px, Rx (Accessory Enclosed)		
Selected option	Description	
FMR6xB	PA	Weather protection cover, 316L <sup>1)</sup>
	PB	Weather protection cover, plastic <sup>2)</sup>

1) Only in connection with Position 6 = J, K, M, N

2) Only in connection with Position 6 = B

**Safety instructions:**  
**General**

- The device is intended to be used in explosive atmospheres as defined in the scope of EN IEC 60079-0 or equivalent national standards. If no potentially explosive atmospheres are present or if additional protective measures have been taken: The device may be operated according to the manufacturer's specifications.
- Devices suitable for zone separation (marked Ga/Gb or Da/Db) are always suitable for installation in the less critical zone (Gb or Db). Due to space limitations the corresponding marking maybe not indicated on the nameplate.
- Comply with the installation and safety instructions in the Operating Instructions.
- Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device:
  - Be suitably qualified for their role and the tasks they perform
  - Be trained in explosion protection
  - Be familiar with national regulations
- Install the device according to the manufacturer's instructions and national regulations.
- Do not operate the device outside the specified electrical, thermal and mechanical parameters.

- Only use the device in media to which the wetted materials have sufficient durability.
- Avoid electrostatic charging:
  - Of plastic surfaces (e.g. enclosure, sensor element, special varnishing, attached additional plates, ..)
  - Of isolated capacities (e.g. isolated metallic plates)
- Alterations to the device can affect the explosion protection and must be carried out by staff authorized to perform such work by Endress+Hauser.

**Safety  
instructions:  
Special conditions**

- To avoid electrostatic charging: Do not rub surfaces with a dry cloth.
- In the event of additional or alternative special varnishing on the enclosure or other metal parts or for adhesive plates:
  - Observe the danger of electrostatic charging and discharge.
  - Do not install in the vicinity of processes ( $\leq 0.5$  m) generating strong electrostatic charges.
- Avoid sparks caused by impact and friction.
- In the case of process connections made of polymeric material or with polymeric coatings, avoid electrostatic charging of the plastic surfaces.
- Avoid electrostatic charging of the sensor (e.g. do not rub dry and install outside the filling flow).

*Optional specification, ID Px, Rx = PA*

Connect the weather protection cover to the local potential equalization.


*Device type FMR67B and Basic specification, Position 11, 12 = JD*

- In Zone 0, avoid sparks caused by impact and friction.
- Changing the position of the alignment device must be impossible:
  - After the alignment of the antenna via the pivot bracket
  - After tightening of the clamping flange
  - After setting the damping ring (torque 10 to 11 Nm)
- Degree of protection IP67 must be fulfilled.

*Device type FMR67B and Basic specification, Position 17 = 1, 2, 3, 4*

- In Zone 0, avoid sparks caused by impact and friction.
- After removing the air purge connection: Lock the opening with a suitable plug.  
Torque: 6-7 Nm
- Degree of protection IP67 must be fulfilled.

## Safety instructions: Installation

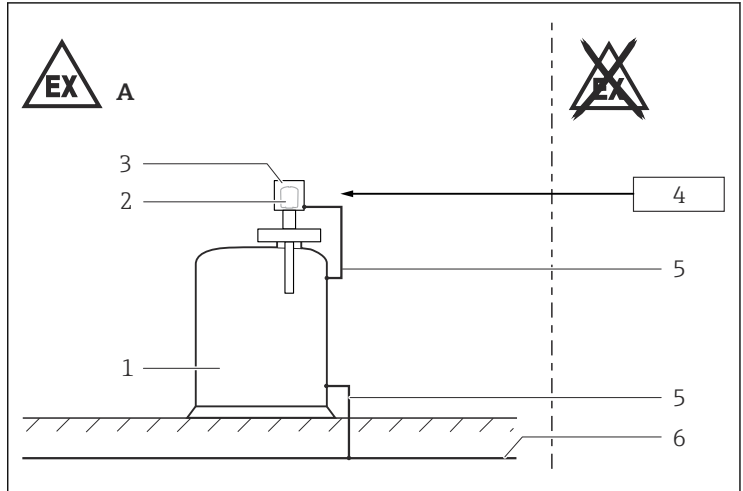

A0025536

- A Zone 1
- 1 Tank; Zone 0, Zone 1
- 2 Electronic insert
- 3 Enclosure
- 4 Associated intrinsically safe power supply units
- 5 Potential equalization line
- 6 Local potential equalization

- After aligning (rotating) the enclosure, retighten the fixing screw.
- When the device is connected to certified intrinsically safe circuits of Category Ex ib for Equipment Groups IIC and IIB, the type of protection changes to Ex ib IIC and Ex ib IIB. Do not operate the sensor in Zone 0 if connecting to an intrinsically safe circuit of Category Ex ib.
- Continuous service temperature of the connecting cable:  $\geq T_a + 20 \text{ K}$ .
- Observe the pertinent guidelines when interconnecting intrinsically safe circuits.
- Observe the maximum process conditions according to the manufacturer's Operating Instructions.
- Install the device to exclude any mechanical damage or friction during the application. Pay particular attention to flow conditions and tank fittings.

*Basic specification, Position 5 = N, O*

Observe the requirements according to IEC/EN 60079-14 for conduit systems and the wiring- and installation instructions of the suitable Safety Instructions (XA). In addition, observe national regulations and standards for conduit systems.

### Intrinsic safety

- The device is only suitable for connection to certified, intrinsically safe equipment with explosion protection Ex ia / Ex ib.
- The intrinsically safe input power circuit of the device is isolated from ground. The dielectric strength is at least  $500 V_{\text{rms}}$ .

*Optional specification, ID Nx, Ox = NA*

The intrinsically safe input power circuit of the device is isolated from ground. The dielectric strength is at least  $290 V_{\text{rms}}$ .

### Potential equalization

Integrate the device into the local potential equalization.

### Safety

#### instructions:

#### Zone separation

#### Zone 0, Zone 1

*Basic specification, Position 9, 10 = BS*

Material specification of the separating element:

- PVDF plastic:  $\geq 1 \text{ mm}$
- Maximum process temperature  $T_p$ :  $130 \text{ }^\circ\text{C}$
- Maximum Working Pressure (MWP): 3 bar

*Basic specification, Position 9, 10 = Gx*

- The separating element is not directly in contact with the process (process-wetted).
- Material specification of the separating element:
  - Glass feedthrough:  $\geq 1 \text{ mm}$
  - Stainless steel weld:  $\geq 1 \text{ mm}$

*Basic specification, Position 9, 10 in connection with Position 16*

The sealing is directly in contact with the process (process-wetted).

*With Optional specification, ID Nx, Ox = NC*

The device has a partition wall.

*Without Optional specification, ID Nx, Ox = NC*

- The device has no partition wall.
- The device is suitable for installation in a partition wall within the scope of the resistance of the ordered sealing material and in compliance with the permissible operating conditions ( $T_p$ ,  $T_a$  and maximum working pressure) in order to ensure safe zone separation (IP67) by the device.

## Temperature tables



- The specified ambient and process temperature ranges exclusively refer to the explosion protection and must not be exceeded. Operationally permitted ambient temperature ranges can be restricted depending on the version: See Operating Instructions.
- Do not exceed the max. ambient temperature at the enclosure.



*Optional specification, ID Jx, Kx = JL*

Lower limit of the ambient temperature for explosion protection changes to  $-50\text{ °C}$ .

*Optional specification, ID Px, Rx = PB*

When using the weather protection cover: Reduce the admissible ambient temperature by 10 K.

## Description notes




Unless otherwise indicated, the positions always refer to the basic specification.

1st column: Temperature classes T6 (85 °C) to T1 (450 °C)


Column P1 to P5: Position (temperature value) on the axes of the derating

- $T_a$ : Ambient temperature in °C
- $T_p$ : Process temperature in °C

### Example diagrams of possible deratings

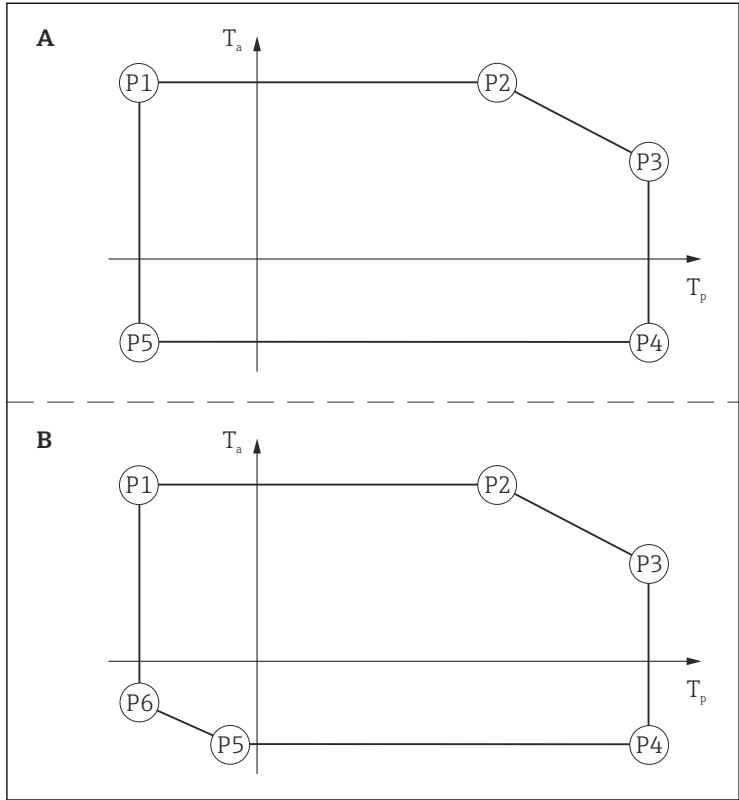

A0022717

	<b>Position 6 (Housing, Material)</b>
	B, J, M

**FMR60B, FMR66B**

<b>Position 8 (Application)</b>
H

<b>Position 9, 10 (Antenna)</b>
BS

	P1		P2		P3		P4		P5		P6	
	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>
T6	-40	46	46	46	80	28	80	-40	-40	-40	-	-
T5	-40	61	61	61	95	43	95	-40	-40	-40	-	-
T4...T1	-40	65	65	65	130	55	130	-40	-40	-40	-	-

**FMR60B, FMR62B, FMR63B, FMR66B, FMR67B**

<b>Position 8 (Application)</b>
B, J, V

<b>Position 9, 10 (Antenna)</b>
GA, GE, GF, GQ, GR

	P1		P2		P3		P4		P5		P6	
	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>
T6	-40 <sup>1)</sup>	46	46	46	80	32	80	-40 <sup>2)</sup>	-40 <sup>1)</sup>	-40 <sup>2)</sup>	-	-
T5	-40 <sup>1)</sup>	61	61	61	95	47	95	-40 <sup>2)</sup>	-40 <sup>1)</sup>	-40 <sup>2)</sup>	-	-
T4	-40 <sup>1)</sup>	65	65	65	130	54	130	-40 <sup>2)</sup>	-40 <sup>1)</sup>	-40 <sup>2)</sup>	-	-
T3...T1	-40 <sup>1)</sup>	65	65	65	150	51	150	-40 <sup>2)</sup>	-40 <sup>1)</sup>	-40 <sup>2)</sup>	-	-

- 1) Position 16 = J, P: -20 °C
- 2) Optional specification, ID Jx, Kx = JL: -50 °C

**FMR62B, FMR63B, FMR67B****Position 8 (Application)**

D, L, R, T, W

**Position 9, 10 (Antenna)**

GM, GN, GQ, GR, GP

	P1		P2		P3		P4		P5		P6	
	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>
T6	-196 <sup>1) 2) 3)</sup>	46	46	46	80	37	80	-40 <sup>4)</sup>	-50 <sup>1) 2) 3)</sup>	-40 <sup>4)</sup>	-196	-6
T5	-196 <sup>1) 2) 3)</sup>	61	61	61	95	52	95	-40 <sup>4)</sup>	-50 <sup>1) 2) 3)</sup>	-40 <sup>4)</sup>	-196	-6
T4	-196 <sup>1) 2) 3)</sup>	65	65	65	130	56	130	-40 <sup>4)</sup>	-50 <sup>1) 2) 3)</sup>	-40 <sup>4)</sup>	-196	-6
T3	-196 <sup>1) 2) 3)</sup>	65	65	65	195	47	195	-40 <sup>4)</sup>	-50 <sup>1) 2) 3)</sup>	-40 <sup>4)</sup>	-196	-6
T2...T1	-196 <sup>1) 2) 3)</sup>	65	65	65	200	46	200	-40 <sup>4)</sup>	-50 <sup>1) 2) 3)</sup>	-40 <sup>4)</sup>	-196	-6

- 1) Position 8 = D, W: -20 °C; P6 not relevant
- 2) Position 8 = L: -40 °C; P6 not relevant
- 3) Position 8 = R: -60 °C; P6 not relevant
- 4) Optional specification, ID Jx, Kx = JL: -50 °C



### FMR62B, FMR67B

Position 8 (Application)												
N, R, T												

Position 9, 10 (Antenna)												
GT												

	P1		P2		P3		P4		P5		P6	
	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>
T6	-196 <sup>1) 2)</sup>	46	46	46	80	43	80	-40 <sup>3)</sup>	-50 <sup>1) 2)</sup>	-40 <sup>3)</sup>	-196	-32
T5	-196 <sup>1) 2)</sup>	61	61	61	95	58	95	-40 <sup>3)</sup>	-50 <sup>1) 2)</sup>	-40 <sup>3)</sup>	-196	-32
T4	-196 <sup>1) 2)</sup>	65	65	65	130	61	130	-40 <sup>3)</sup>	-50 <sup>1) 2)</sup>	-40 <sup>3)</sup>	-196	-32
T3	-196 <sup>1) 2)</sup>	65	65	65	195	57	195	-40 <sup>3)</sup>	-50 <sup>1) 2)</sup>	-40 <sup>3)</sup>	-196	-32
T2...T1	-196 <sup>1) 2)</sup>	65	65	65	280 <sup>4)</sup>	52	280 <sup>4)</sup>	-40 <sup>3)</sup>	-50 <sup>1) 2)</sup>	-40 <sup>3)</sup>	-196	-32


- 1) Position 8 = N: -40 °C; P6 not relevant
- 2) Position 8 = R: -60 °C; P6 not relevant
- 3) Optional specification, ID Jx, Kx = JL: -50 °C
- 4) Position 8 = R, T: 200 °C

Position 8 (Application)												
P												

Position 9, 10 (Antenna)												
GT												

	P1		P2		P3		P4		P5		P6	
	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>
T6	-40	46	46	46	80	43	80	-40 <sup>1)</sup>	-40	-40 <sup>1)</sup>	-	-
T5	-40	61	61	61	95	58	95	-40 <sup>1)</sup>	-40	-40 <sup>1)</sup>	-	-
T4	-40	65	65	65	130	61	130	-40 <sup>1)</sup>	-40	-40 <sup>1)</sup>	-	-
T3	-40	65	65	65	195	57	195	-40 <sup>1)</sup>	-40	-40 <sup>1)</sup>	-	-
T2	-40	65	65	65	290	51	290	-40 <sup>1)</sup>	-40	-40 <sup>1)</sup>	-	-
T1	-40	65	65	65	440	39	440	-40 <sup>1)</sup>	-40	-40 <sup>1)</sup>	-	-

- 1) Optional specification, ID Jx, Kx = JL: -50 °C

	<b>Position 6 (Housing, Material)</b>
	K, N

**FMR60B, FMR66B**

<b>Position 8 (Application)</b>
H

<b>Position 9, 10 (Antenna)</b>
BS

	P1		P2		P3		P4		P5		P6	
	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>
T6	-40	46	46	46	80	29	80	-40	-40	-40	-	-
T5	-40	61	61	61	95	44	95	-40	-40	-40	-	-
T4...T1	-40	65	65	65	130	54	130	-40	-40	-40	-	-

**FMR60B, FMR62B, FMR63B, FMR66B, FMR67B**

<b>Position 8 (Application)</b>
B, J, V

<b>Position 9, 10 (Antenna)</b>
GA, GE, GF, GQ, GR

	P1		P2		P3		P4		P5		P6	
	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>
T6	-40 <sup>1)</sup>	46	46	46	80	28	80	-40 <sup>2)</sup>	-40 <sup>1)</sup>	-40 <sup>2)</sup>	-	-
T5	-40 <sup>1)</sup>	61	61	61	95	43	95	-40 <sup>2)</sup>	-40 <sup>1)</sup>	-40 <sup>2)</sup>	-	-
T4	-40 <sup>1)</sup>	65	65	65	130	53	130	-40 <sup>2)</sup>	-40 <sup>1)</sup>	-40 <sup>2)</sup>	-	-
T3...T1	-40 <sup>1)</sup>	65	65	65	150	42	150	-40 <sup>2)</sup>	-40 <sup>1)</sup>	-40 <sup>2)</sup>	-	-

1) Position 16 = J, P: -20 °C

2) Optional specification, ID Jx, Kx = JL: -50 °C

**FMR62B, FMR63B, FMR67B****Position 8 (Application)**

D, L, R, T, W

**Position 9, 10 (Antenna)**

GM, GN, GQ, GR, GP

	P1		P2		P3		P4		P5		P6	
	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>
T6	-196 <sup>1) 2) 3)</sup>	46	46	46	80	34	80	-40 <sup>4)</sup>	-50 <sup>1) 2) 3)</sup>	-40 <sup>4)</sup>	-196	-2
T5	-196 <sup>1) 2) 3)</sup>	61	61	61	95	49	95	-40 <sup>4)</sup>	-50 <sup>1) 2) 3)</sup>	-40 <sup>4)</sup>	-196	-2
T4	-196 <sup>1) 2) 3)</sup>	65	65	65	130	56	130	-40 <sup>4)</sup>	-50 <sup>1) 2) 3)</sup>	-40 <sup>4)</sup>	-196	-2
T3	-196 <sup>1) 2) 3)</sup>	65	65	65	195	39	195	-40 <sup>4)</sup>	-50 <sup>1) 2) 3)</sup>	-40 <sup>4)</sup>	-196	-2
T2...T1	-196 <sup>1) 2) 3)</sup>	65	65	65	200	37	200	-40 <sup>4)</sup>	-50 <sup>1) 2) 3)</sup>	-40 <sup>4)</sup>	-196	-2

- 1) Position 8 = D, W: -20 °C; P6 not relevant
- 2) Position 8 = L: -40 °C; P6 not relevant
- 3) Position 8 = R: -60 °C; P6 not relevant
- 4) Optional specification, ID Jx, Kx = JL: -50 °C

**FMR62B, FMR67B****Position 8 (Application)**

N, R, T

**Position 9, 10 (Antenna)**

GT

	P1		P2		P3		P4		P5		P6	
	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>
T6	-196 <sup>1)2)</sup>	46	46	46	80	42	80	-40 <sup>3)</sup>	-50 <sup>1)2)</sup>	-40 <sup>3)</sup>	-196	-30
T5	-196 <sup>1)2)</sup>	61	61	61	95	57	95	-40 <sup>3)</sup>	-50 <sup>1)2)</sup>	-40 <sup>3)</sup>	-196	-30
T4	-196 <sup>1)2)</sup>	65	65	65	130	61	130	-40 <sup>3)</sup>	-50 <sup>1)2)</sup>	-40 <sup>3)</sup>	-196	-30
T3	-196 <sup>1)2)</sup>	65	65	65	195	57	195	-40 <sup>3)</sup>	-50 <sup>1)2)</sup>	-40 <sup>3)</sup>	-196	-30
T2...T1	-196 <sup>1)2)</sup>	65	65	65	280 <sup>4)</sup>	52	280 <sup>4)</sup>	-40 <sup>3)</sup>	-50 <sup>1)2)</sup>	-40 <sup>3)</sup>	-196	-30

- 1) Position 8 = N: -40 °C; P6 not relevant
- 2) Position 8 = R: -60 °C; P6 not relevant
- 3) Optional specification, ID Jx, Kx = JL: -50 °C
- 4) Position 8 = R, T: 200 °C

**Position 8 (Application)**

P

**Position 9, 10 (Antenna)**

GT

	P1		P2		P3		P4		P5		P6	
	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>
T6	-40	46	46	46	80	42	80	-40 <sup>1)</sup>	-40	-40 <sup>1)</sup>	-	-
T5	-40	61	61	61	95	57	95	-40 <sup>1)</sup>	-40	-40 <sup>1)</sup>	-	-
T4	-40	65	65	65	130	61	130	-40 <sup>1)</sup>	-40	-40 <sup>1)</sup>	-	-
T3	-40	65	65	65	195	57	195	-40 <sup>1)</sup>	-40	-40 <sup>1)</sup>	-	-
T2	-40	65	65	65	290	51	290	-40 <sup>1)</sup>	-40	-40 <sup>1)</sup>	-	-
T1	-40	65	65	65	440	32	440	-40 <sup>1)</sup>	-40	-40 <sup>1)</sup>	-	-

- 1) Optional specification, ID Jx, Kx = JL: -50 °C

**Connection data***Basic specification, Position 3 = BA*

Power supply	
$U_i \leq 30 \text{ V}_{\text{DC}}$ $I_i \leq 300 \text{ mA}$ $P_i \leq 1 \text{ W}$ $C_i \leq 10 \text{ nF}$ $L_i = 0$	

*Basic specification, Position 3 = DA*

Power supply	
FISCO	Entity
$U_i \leq 17.5 \text{ V}_{\text{DC}}$ $I_i \leq 380 \text{ mA}$ $P_i \leq 5.32 \text{ W}$ $C_i \leq 5 \text{ nF}$ $L_i = 0$	$U_i \leq 24 \text{ V}_{\text{DC}}$ $I_i \leq 300 \text{ mA}$ $P_i \leq 1.2 \text{ W}$ $C_i \leq 5 \text{ nF}$ $L_i = 0$

*Basic specification, Position 3 = FA*

Power supply	
2-WISE	Entity
$U_i \leq 17.5 \text{ V}_{\text{DC}}$ $I_i \leq 380 \text{ mA}$ $P_i \leq 5.32 \text{ W}$ $C_i \leq 5 \text{ nF}$ $L_i = 0$	$U_i \leq 17.5 \text{ V}_{\text{DC}}$ $I_i \leq 300 \text{ mA}$ $P_i \leq 1.2 \text{ W}$ $C_i \leq 5 \text{ nF}$ $L_i = 0$

In connection with: *Basic specification, Position 5 = L, M, N, O*  
 Installation according to the specifications of FHX50B.



Only the type of protection suitable for the device shall be connected!







71590682

[www.addresses.endress.com](http://www.addresses.endress.com)

---