

# Safety Instructions

## Proline Promass K 10

INMETRO: Zone 2





# Proline Promass K 10

## Table of contents

Associated documentation .....	4
Certificate holder .....	4
Certificates and declarations .....	4
Extended order code .....	5
Safety instructions: General .....	7
Safety instructions: Installation .....	7
Temperature tables .....	8
Connection values: Signal circuits .....	11

**Associated documentation**

For an overview of the scope of the associated Technical Documentation, refer to the following:

- *Device Viewer* ([www.endress.com/deviceviewer](http://www.endress.com/deviceviewer)): Enter serial number from nameplate.
- *Endress+Hauser Operations app*: Enter serial number from nameplate or scan matrix code on nameplate.

To commission the device, please observe the Operating Instructions pertaining to the device:

Measuring device	Documentation code	
	HART	Modbus
Promass K 10	BA02074D	BA02075D

*Additional documentation*

Contents	Document type	Documentation code
Explosion Protection	Brochure	CP00021Z/11

Please note the documentation associated with the device.

**Certificate holder**

Endress+Hauser Flowtec AG  
Kägenstrasse 7  
4153 Reinach BL  
Switzerland

**Certificates and declarations****Declaration of conformity**

INMETRO CERTIFICADO DE CONFORMIDADE

**Certificate of Conformity**

Certificate number:

- TÜV 21.0884X
- TÜV 23.0043X
- TÜV 23.0044X
- TÜV 23.0045X


Affixing the certificate number certifies conformity with the standards under [www.abnt.org.br](http://www.abnt.org.br) (depending on the device version).

- ABNT NBR IEC 60079-0: 2020
- ABNT NBR IEC 60079-7: 2018
- ABNT NBR IEC 60079-11: 2013

**Extended order code**

The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional information about the nameplate is provided in the associated Operating Instructions.

**Structure of the extended order code**



\* = Placeholder  
 At this position, an option (number or letter) selected from the specification is displayed instead of the placeholders.

*Device type*

The device and the device design is defined in the "Device type" section (Product root).

*Basic specifications*

The features that are absolutely essential for the device (mandatory features) are specified in the basic specifications. The number of positions depends on the number of features available. The selected option of a feature can consist of several positions.

*Optional specifications*

The optional specifications describe additional features for the device (optional features). The number of positions depends on the number of features available. The features have a 2-digit structure to aid identification (e.g. JA). The first digit (ID) stands for the feature group and consists of a number or a letter (e.g. J = Test, Certificate). The second digit constitutes the value that stands for the feature within the group (e.g. A = 3.1 material (wetted parts), inspection certificate).

More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

**Device type**

Position	Order code for	Option selected	Description
1	Instrument family	B	Coriolis flowmeter
2	Sensor	K <sup>1)</sup>	Sensor type
3	Transmitter	B	Transmitter type: 4-wire, compact version

Position	Order code for	Option selected	Description
4	Generation index	B	Platform generation
5, 6	Nominal diameter	Examples: 02, 04, 40, 50, 1H, 3E <sup>2)</sup> 3)	Nominal diameter of sensor

- 1) For replacement transmitter only: X
- 2) For the exact specification of the nominal diameter, see nameplate
- 3) For replacement transmitter only: XX

## Basic specifications

Position 1, 2 Order Code "Approval; Transmitter + Sensor" Option selected	Position 4, 5 Order Code "Output; Input" Option selected	Type of protection
MS	C, U	Ex ec ic [ic] IIB T4...T1 Gc
	B, M	Ex ec ic IIB T4...T1 Gc

Position	Order code for	Option selected	Description
4	Output, input 1	B	4-20mA HART, Pulse/frequency/switch output
		C	4-20mA HART, Pulse/frequency/switch output Ex i
		M	Modbus RS485, 4-20mA
		U	Modbus RS485, 4-20mA Ex i
5	Display; Operation	A	W/o; via communication
		H	W/o; SmartBlue app
		J	LCD, 2,40"; SmartBlue app
		K	LCD, 2,40"; Touch Screen, SmartBlue app
6	Housing	A	Alu. coated
14, 15	Device Model	A1	1

## Optional specifications

No options specific to hazardous locations are available.

**Safety  
instructions:  
General**

- Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device:
  - Be suitably qualified for their role and the tasks they perform
  - Be trained in explosion protection
  - Be familiar with national regulations or guidelines (e.g. ABNT NBR IEC 60079-14)
- Install the device according to the manufacturer's instructions and national regulations.
- Do not operate the device outside the specified electrical, thermal and mechanical parameters.
- Only use the device in media to which the wetted materials have sufficient durability.
- Refer to the temperature tables for the relationship between the permitted ambient temperature for the sensor and/or transmitter, depending on the range of application, and the temperature classes.
- Alterations to the device can affect the explosion protection and must be carried out by staff authorized to perform such work by Endress+Hauser.
- Observe all the technical data of the device (see nameplate).
- Attached nameplates must be included in potential equalization.
- Replaced transmitter or sensors shall not be re-used in any other application.

**Safety  
instructions:  
Installation**

- In potentially explosive atmospheres:
  - Do not disconnect the electrical connection of the power supply circuit when energized.
  - Do not open the connection compartment cover when energized.
- Continuous service temperature of the connecting cable: -40 to +80 °C; in accordance with the range of service temperature taking into account additional influences of the process conditions ( $T_{a,min}$  and  $T_{a,max} + 20$  K).
- Seal unused entry glands with approved sealing plugs that correspond to the type of protection. The plastic transport sealing plug does not meet this requirement and must therefore be replaced during installation.
- Only use certified cable entries or sealing plugs. The metal sealing plugs supplied meet this requirement.
- Supplied cable glands  $M20 \times 1.5$  are only suitable for fixed installation of cables and connections. In the installation, a strain relief must be provided.

- Only use certified cable entries suitable for the application. Observe selection criteria as per ABNT NBR IEC 60079-14.
- When the measuring device is connected, attention must be paid to explosion protection at the transmitter.
- Please note the following if using an RFID TAG:
  - The RFID TAG shall never be exposed to high electromagnetic fields according to ABNT NBR IEC 60079-14.
  - Electrostatic charge shall be avoided. The RFID TAG shall never be used next to strong charge-generating processes.
- Only use certified sealing plugs. The metal sealing plugs supplied meet this requirement.
- Equipment in type of protection Ex ec, shall be installed using a transient protection not exceeding 140% of the peak rated voltage value at the power supply terminals and IO terminals.

### **Intrinsic safety**

- The device can be connected to the Endress+Hauser service tool FXA291; pay attention to the Operating Instructions. Connection to the service connector is only permitted if the atmosphere is not a potentially explosive atmosphere.
- Observe the guidelines for interconnecting intrinsically safe circuits (e.g. ABNT NBR IEC 60079-14 , Proof of Intrinsic Safety).
- For display use only battery from Renata type lithium CR1632, 3V.
- The use of the device without a display module is not permitted.

### **Potential equalization**

- Integrate the device into the potential equalization .
- If the ground connection has been established via the pipe as specified, it is also possible to integrate the sensor into the potential equalization system via the pipe.

## **Temperature tables**

### **Ambient temperature**

*Minimum ambient temperature*

$$T_a = -40 \text{ }^\circ\text{C}$$

*Maximum ambient temperature*

$T_a = +60 \text{ }^\circ\text{C}$  depending on the medium temperature and temperature class.

### **Medium temperature**

*Minimum medium temperature*

$$T_m = -40 \text{ }^\circ\text{C}$$




*Maximum medium temperature*

$T_m$  for T4...T1 depending on the maximum ambient temperature  $T_a$

**Compact version****NOTICE****In case of heating, risk of overheating.**

- ▶ On devices with Heating jacket the corresponding temperature tables for isolated sensor, are to be observed.
- ▶ Make sure that the heating medium, may not exceeded the maximum specified medium temperature of the exact used temperature classes of the device.

*Maximum medium temperature with thermal insulation according to Endress+Hauser specifications*

 For information on the thermal insulation of the device, see the "Thermal insulation" section of the "Operating instructions" document .

DN	$T_a$ [°C]	$T_m$ [°C]					
		T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
8...15	60	-	-	115	135	150	150
25...80	60	-	-	95	135	150	150


*Maximum medium temperature without thermal insulation according to Endress+Hauser specifications*

DN	$T_a$ [°C]	$T_m$ [°C]					
		T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
8...15	55	-	-	115	150	150	150
	60	-	-	115	140	150	150
25...80	60	-	-	95	140	150	150

*With thermal insulation without Endress+Hauser specifications*

The specified reference temperature  $T_{ref}$  and the maximum medium temperature  $T_{m, max}$  for each temperature class must not be exceeded:

→  9

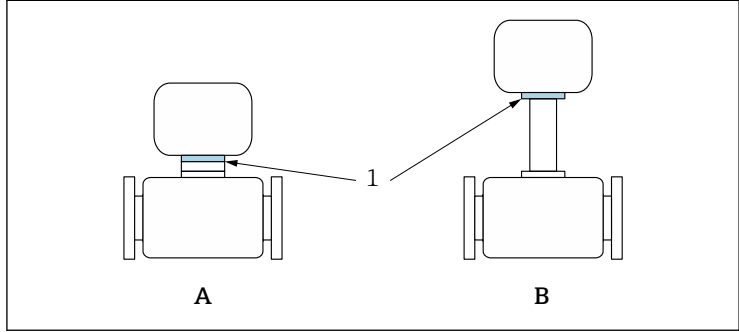

A0031198

- A Standard version
- B Extended neck for insulation
- 1 Reference point ( $T_{ref}$ )

Reference temperature  $T_{ref}$

T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
-	-	67	68	69	69

**Connection values: Signal circuits**

The following tables contain specifications which are dependent on the transmitter type and its input and output assignment. Compare the following specifications with those on the nameplate of the transmitter.

**Safety-related values**

Order code "Output; input"		Terminal assignment	Safety-related values
Option B	Current output 4 to 20 mA HART (active)	26 (+), 27 (-)	$U_n = 30 V_{cc}$ $U_m = 250 V_{ca}$
	Current output 4 to 20 mA HART (passive)	24 (+), 25 (-)	
	Pulse/frequency/switch output	22 (+), 23 (-)	
Option M	Current output 4 to 20 mA (active)	26 (+), 27 (-)	
	Current output 4 to 20 mA (passive)	24 (+), 25 (-)	
	Modbus RS485	22 (B), 23 (A)	$U_n = 3.3 V_{cc}$ $U_m = 250 V_{ca}$

**Intrinsically safe values**

Order code "Output; input"		Terminal assignment	Safety-related values
Option C	Current output 4 to 20 mA HART (active)	26 (+), 27 (-)	$U_0 = 22.3 V$ $I_0 = 93 mA$ $P_0 = 520 mW$ $L_0 = 29 mH$ $C_0 = 1400 nF$  $U_i = 6.5 V$ $I_i = 10 mA$ $P_i = 20 mW$
	Current output 4 to 20 mA HART (passive)	24 (+), 25 (-)	$U_i = 30 V$ $I_i = 100 mA$ $P_i = 1.25 W$ $L_i = 0 \mu H$ $C_i = 6 nF$
	Pulse/frequency/switch output	22 (+), 23 (-)	$U_i = 30 V$ $I_i = 100 mA$ $P_i = 1.25 W$ $L_i = 0 \mu H$ $C_i = 10 nF$

Order code "Output; input"		Terminal assignment	Safety-related values
Option U	Current output 4 to 20 mA (active)	26 (+), 27 (-)	$U_0 = 22.3 \text{ V}$ $I_0 = 93 \text{ mA}$ $P_0 = 520 \text{ mW}$ $L_0 = 29 \text{ mH}$ $C_0 = 1400 \text{ nF}$  $U_1 = 6.5 \text{ V}$ $I_1 = 10 \text{ mA}$ $P_1 = 20 \text{ mW}$
	Current output 4 to 20 mA (passive)	24 (+), 25 (-)	$U_1 = 30 \text{ V}$ $I_1 = 100 \text{ mA}$ $P_1 = 1.25 \text{ W}$ $L_1 = 0 \text{ }\mu\text{H}$ $C_1 = 6 \text{ nF}$
	Modbus RS485	22 (B), 23 (A)	$U_1 = 4.2 \text{ V}$ $I_1 = \text{N/A}$ $P_1 = \text{N/A}$ $L_1 = 0 \text{ }\mu\text{H}$ $C_1 = 6 \text{ nF}$  $U_0 = 4.2 \text{ V}$ $I_0 = 120 \text{ mA}$ $P_0 = 130 \text{ mW}$ $L_0 = 20 \text{ mH}$ $C_0 = 900 \text{ }\mu\text{F}$ $L_0/R_0 = 2.5 \text{ mH}/\Omega$









71606558

[www.addresses.endress.com](http://www.addresses.endress.com)

---