# Safety Instructions **Proline Prowirl 200**

INMETRO: Zone 2







# **Proline Prowirl 200**

#### Table of contents

Associated documentation	4
Certificates and declarations	4
Certificate holder	5
Extended order code	6
Safety instructions: General	9
Safety instructions: Installation	9
Temperature tables 1	11
Explosion hazards arising from gas and dust 1	19
Connection values: Signal circuits 1	19

#### Associated documentation

For an overview of the scope of the associated Technical Documentation, refer to the following:

- *Device Viewer* (www.endress.com/deviceviewer): Enter serial number from nameplate.
- *Endress+Hauser Operations app*: Enter serial number from nameplate or scan matrix code on nameplate.

To commission the device, please observe the Operating Instructions pertaining to the device:

Measuring		Documentation code	
device	HART	FOUNDATION Fieldbus	PROFIBUS PA
Prowirl D 200	BA01685D	BA01693D	BA01689D
Prowirl F 200	BA01686D	BA01694D	BA01690D
Prowirl O 200	BA01687D	BA01695D	BA01691D
Prowirl R 200	BA01688D	BA01696D	BA01692D

#### Additional documentation

Contents	Document type	Documentation code
Remote display FHX50	Special documentation	SD01007F
	Safety Instructions <ul> <li>Ex ia</li> <li>Ex ic</li> </ul>	<ul><li>XA01077F</li><li>XA01079F</li></ul>
Explosion Protection	Brochure	CP00021Z/11

Please note the documentation associated with the device.

Certificates and<br/>declarationsDeclaration of conformityINMETRO CERTIFICADO DE CONFORMIDADE

#### **Certificate of Conformity**

Certificate number:

- TÜV 18.0687
- TÜV 23.0020
- TÜV 23.0021
- TÜV 23.0022

Affixing the certificate number certifies conformity with the standards under www.abnt.org.br (depending on the device version).

- ABNT NBR IEC 60079-0: 2020
- ABNT NBR IEC 60079-7: 2018
- ABNT NBR IEC 60079-11: 2013
- ABNT NBR IEC 60079-26: 2016

Certificate holder

Endress+Hauser Flowtec AG Kägenstrasse 7 4153 Reinach BL Switzerland

# Extended order code

The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional information about the nameplate is provided in the associated Operating Instructions.

#### Structure of the extended order code

* * * * * *	_ **********	+	A*B*C*D*E*F*G*
(Device type)	(Basic specifications)		(Optional specifications)
* =	Placeholder At this position, an option (number or l specification is displayed instead of the		,

#### Device type

The device and the device design is defined in the "Device type" section (Product root).

#### Basic specifications

The features that are absolutely essential for the device (mandatory features) are specified in the basic specifications. The number of positions depends on the number of features available. The selected option of a feature can consist of several positions.

#### Optional specifications

The optional specifications describe additional features for the device (optional features). The number of positions depends on the number of features available. The features have a 2-digit structure to aid identification (e.g. JA). The first digit (ID) stands for the feature group and consists of a number or a letter (e.g. J = Test, Certificate). The second digit constitutes the value that stands for the feature within the group (e.g. A = 3.1 material (wetted parts), inspection certificate).

More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

Position	Order code for	Option selected	Description
1	Instrument family	7	Vortex flowmeter
2	Sensor	D, F, O, R	Sensor type
3	Transmitter	2	Transmitter type: 2-wire, compact version Remote version

#### Device type

Position	Order code for	Option selected	Description
4	Generation index	С	Platform generation
5, 6	Nominal diameter	D: DN 15 to 150 F: DN 15 to 300 O: DN 15 to 300 R: • Reducer DN 25 to 200 • Super reducer DN 40 to 250	Nominal diameter of sensor

#### **Basic specifications**

Position	Order code for	Selected option	Type of protection		
			Compact version	Remote version	
				Transmitter	Sensor
1, 2		MG	Ex ec IIC T6T1 Gc 1)		

1) The labeling changes according to whether the "Display; Operation" equals "L" oder "M": Ex ec[ia Ga] IIC T6...T1 Gc

Position	Order code for	Selected option	Description
3	Output; Input	A	4-20mA HART
		В	4-20mA HART, Pulse/ frequency/switch output
		D	4-20mA HART, Pulse/ frequency/switch output, 4-20mA input
		Е	FOUNDATION Fieldbus, Pulse/frequency/switch output
		G	PROFIBUS PA, Pulse/ frequency/switch output
4	Display; Operation	А	W/o; via communication
		С	SD02 4-line; push buttons + data backup function
		Е	SD03 4-line, illum.; touch control + data backup function
		L	Prepared for display FHX50 + M12 connection <sup>1)</sup>
		М	Prepared for display FHX50 + custom connection <sup>1)</sup>

Position	Order code for	Selected option	Description
8, 9	Sensor version; DSC sensor; measuring tube Only available for sensors F, O, R with the HART communication protocol.	DA	Mass steam; 316L; 316L (integrated pressure/ temperature measurement), -200 to +400 °C (-328 to +750 °F)
		DB	Mass gas/liquid; 316L; 316L (integrated pressure/ temperature measurement), -40 to +260 °C (-40 to +500 °F)
		DC	Mass steam; Alloy 718; 316L (integrated pressure/ temperature measurement), -200 to +400 °C (-328 to +750 °F)
		DD	Mass gas/liquid; Alloy 718; 316L (integrated pressure/ temperature measurement), -40 to +100 °C (-40 to +212 °F)
11	Pressure component	А	Not used
	Only available for sensors F, O, R with the HART communication protocol.	В	Pressure measuring cell 2bar/29psi abs
	communication protocol.	С	Pressure measuring cell 4bar/58psi abs
		D	Pressure measuring cell 10bar/145psi abs
		E	Pressure measuring cell 40bar/580psi abs
		F	Pressure measuring cell 100bar/1450psi abs
		G	Pressure measuring cell 160bar/2320psi abs
16, 17	Device Model	A1	1

1) FHX50 is separately approved.

### **Optional specifications**

ID	Order code for	Option selected	Description
Jx	Test, certificate	JN	Ambient temperature transmitter –50 °C
Nx	Accessory mounted	NA	Overvoltage Protection (OVP)

Safety instructions: General	<ul> <li>Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device:</li> <li>Be suitably qualified for their role and the tasks they perform</li> <li>Be trained in explosion protection</li> <li>Be familiar with national regulations or guidelines (e.g. ABNT NBR IEC 60079-14)</li> <li>Install the device according to the manufacturer's instructions and national regulations.</li> <li>Do not operate the device outside the specified electrical, thermal and mechanical parameters.</li> <li>Only use the device in media to which the wetted materials have sufficient durability.</li> <li>Refer to the temperature tables for the relationship between the permitted ambient temperature for the sensor and/or transmitter, depending on the range of application, and the temperature classes.</li> <li>Alterations to the device can affect the explosion protection and must be carried out by staff authorized to perform such work by Endress+Hauser.</li> <li>Observe all the technical data of the device (see nameplate).</li> </ul>
Safety instructions: Installation	<ul> <li>Continuous service temperature of the connecting cable: -40 to +80 °C (-50 to +80 °C for optional specifications, ID Jx (Test, Certificate) = JN); in accordance with the range of service temperature taking into account additional influences of the process conditions (T<sub>a,min</sub> and T<sub>a,max</sub> + 20 K).</li> <li>Only use certified cable entries suitable for the application. Observe selection criteria as per ABNT NBR IEC 60079-14.</li> <li>When the measuring device is connected, attention must be paid to explosion protection at the transmitter.</li> <li>In potentially explosive atmospheres:</li> <li>Do not disconnect the electrical connection of the power supply circuit when energized.</li> <li>Do not open the connection compartment cover when energized.</li> </ul>

#### Endress+Hauser

*Type of protection Ex ec* 

- In potentially explosive atmospheres: Do not disconnect the electrical connection of the power supply circuit when energized.
- Seal unused entry glands with approved sealing plugs that correspond to the type of protection. The plastic transport sealing plug does not meet this requirement and must therefore be replaced during installation.
- Only use certified cable entries and sealing plugs. The metal cable entries, extensions and sealing plugs supplied meet this requirement.

Basic specification, position 8, 9 (sensor version; DSC sensor; measuring tube) = DA, DB, DC, DD and position 11 (pressure component) = B, C, D, E, F, G

- The maximum medium temperature is limited for device versions with a pressure component that is installed directly on the sensor F, O, R:
  - To 40 °C for T6 and T5
  - To 90 °C for T4 and T1
- In the case of T4 ... T1 and medium temperatures > 90 °C the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R.
  - The spacer tube must have a minimum length of 50 cm (1.97 in).
  - The spacer tube supplied meets this requirement.

#### Intrinsic safety

- Observe the guidelines for interconnecting intrinsically safe circuits (e.g. ABNT NBR IEC 60079-14, Proof of Intrinsic Safety).
- The intrinsically safe input power circuit of the device is isolated from ground. If the device is only equipped with one input, the dielectric strength of the input is at least 500  $V_{rms}$ . If the device is equipped with more than one input, the dielectric strength of each individual input to ground is at least 500  $V_{rms}$ , and the dielectric strength of the inputs vis-à-vis one another is also at least 500  $V_{rms}$ .
- The device can be connected to the Endress+Hauser FXA291 service tool: refer to the Operating Instructions.
- The device can be connected to the remote display FHX50 with Ex ia explosion protection; refer to the Special Documentation and Ex documentation.

#### Basic specification, position 3 (Output; input) = A, B, C, D, E, G:

When the intrinsically safe Ex ic circuits of the device are connected to certified intrinsically safe circuits of Category Ex ic for Equipment Groups IIB, the type of protection changes from Ex ic IIC to Ex ic IIB.

#### Potential equalization

- Integrate the device into the potential equalization .
- If the ground connection has been established via the pipe as specified, it is also possible to integrate the sensor into the potential equalization system via the pipe.

#### **Overvoltage protection**

Optional specification, ID Nx (Accessory Mounted) = NA

- Minimum ambient temperature when using Overvoltage Protection (OVP): –40  $^\circ\text{C}$
- When using the internal overvoltage protection: Reduce the admissible ambient temperature at the housing by 2 K.
- For installations which require overvoltage protection to comply with national regulations or standards, install the device using overvoltage protection (e.g. HAW56x from Endress+Hauser).
- Observe the safety instructions of the overvoltage protection.
- If an overvoltage protection against atmospheric over voltages is required: no other circuits may leave the enclosure during normal operation without additional measures.
- The intrinsically safe input power circuit of the device is isolated from ground. If the device is only equipped with one input, the dielectric strength of the input is at least 290  $V_{rms}$ . If the device is equipped with more than one input, the dielectric strength of each individual input to ground is at least 290  $V_{rms}$ , and the dielectric strength of the inputs vis-à-vis one another is also at least 290  $V_{rms}$ .

Temperature	Ambient temperature
tables	Minimum ambient temperature
	Basic specification, position 3 (Output; Input) = A, B, D in conjunction with optional specification, ID Jx (Test, Certificate) = JN $T_a = -50$ °C (Not permitted in conjunction with optional specification, ID Nx (Accessory Mounted) = NA $\rightarrow \cong 11$ )
	Basic specification, position 3 (Output; input) = A, B, C, D, E, G:
	$T_a = -40 \degree C$

Maximum ambient temperature:

Compact version

 $T_{a}$  = +70  $^{\circ}\text{C}$  depending on the medium temperature and temperature class

Transmitter remote version

 $T_a$  = +75  $^\circ C$  depending on the medium temperature and temperature class

Sensor remote version

 $T_{a}$  = +85  $^{\circ}\text{C}$  depending on the medium temperature and temperature class

#### Medium temperature

The following relationship of ambient temperature to medium temperature applies when  $T_{\rm m}$  < –50 °C:

T <sub>m</sub> [°C]	-50	-100	-150	-200
T <sub>a</sub> [°C]	-50	-47	-44	-39

#### **Compact version**

Basic specification, position 3 (Output; Input) = A

Versior	n with max.	T <sub>m</sub> = 280 °C				
Т <sub>а</sub> [°С]	T6 [85 °C]	T5 [100 °C]	T4 [135 ℃]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
40	80 <sup>1)</sup>	95 <sup>1)</sup>	130 <sup>1)</sup>	195 <sup>1)</sup>	280 <sup>1)</sup>	-
60	-	95 <sup>1) 2)</sup>	130 <sup>1)</sup>	195 <sup>1)</sup>	280 <sup>1)</sup>	-
65	-	-	130 <sup>1)</sup>	195 <sup>1)</sup>	280 <sup>1)</sup>	-
70	-	-	130 <sup>1)</sup>	-	-	-

 For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (1.97 in).

2)  $T_a = 55$  °C for device versions with pressure component option DA, DB, DC, DD.

Versior	n with max. '	Γ <sub>m</sub> = 280 °C				
Т <sub>а</sub> [°С]	T6 [85 °C]	T5 [100 °C]	T4 [135 ℃]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
35 <sup>1)</sup>	80 <sup>2)</sup>	95 <sup>2)</sup>	130 <sup>2)</sup>	195 <sup>2)</sup>	280 <sup>2)</sup>	-
50 <sup>3)</sup>	-	95 <sup>2)</sup>	130 <sup>2)</sup>	195 <sup>2)</sup>	280 <sup>2)</sup>	-

Basic specification, position 3 (Output; Input) = B

Version	with max. T	Γ <sub>m</sub> = 280 °C				
T <sub>a</sub> [°C]	T6 [85 ℃]	T5 [100 °C]	T4 [135 ℃]	T3 [200 ℃]	T2 [300 °C]	T1 [450 °C]
60	-	-	130 <sup>2)</sup>	195 <sup>2)</sup>	280 <sup>2)</sup>	-
65	-	-	130 <sup>2)</sup>	195 <sup>2)</sup>	280 2) 4)	-
70	_	-	130 <sup>2)</sup>	195 <sup>2) 5)</sup>	280 <sup>5)</sup>	-

1)  $T_a = 40$  °C for pulse/frequency/switch output P<sub>i</sub> = 0.85 W

- 2) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (1.97 in).
- 3)  $T_a = 55 \text{ °C for pulse/frequency/switch output } P_i = 0.85 \text{ W}$
- 4)  $T_a = 65 \text{ °C}$  for pulse/frequency/switch output  $P_i = 0.7 \text{ W}$
- 5)  $T_a = 70 \degree C$  for pulse/frequency/switch output  $P_i = 0.7 \text{ W}$

Versior	n with max.	T <sub>m</sub> = 280 °C				
Т <sub>а</sub> [°С]	T6 [85 °C]	T5 [100 °C]	T4 [135 ℃]	T3 [200 °C]	T2 [300 °C]	T1 [450 ℃]
40	80 <sup>1)</sup>	95 <sup>1)</sup>	130 <sup>1)</sup>	195 <sup>1)</sup>	280 <sup>1)</sup>	-
55	-	95 <sup>1)</sup>	130 <sup>1)</sup>	195 <sup>1)</sup>	280 <sup>1)</sup>	-
65	-	-	130 <sup>1)</sup>	195 <sup>1)</sup>	280 1) 2)	-
70	-	-	130 <sup>1)</sup>	195 <sup>1) 3)</sup>	280 <sup>3) 1)</sup>	-

Basic specification, positions 1, 2 (approval) = MG

- For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ... T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (1.97 in).
- 2)  $T_a = 65 \text{ °C for pulse/frequency/switch output } P_i = 0.7 \text{ W}$
- 3)  $T_a = 70 \degree C$  for pulse/frequency/switch output  $P_i = 0.7 \text{ W}$

*Basic specification, position 3 (Output; Input) = C* 

Version	n with max.	T <sub>m</sub> = 280 °C				
Т <sub>а</sub> [°С]	T6 [85 °C]	T5 [100 °C]	T4 [135 ℃]	T3 [200 °C]	T2 [300 °C]	T1 [450 ℃]
40	80 <sup>1)</sup>	95 <sup>1)</sup>	130 <sup>1)</sup>	195 <sup>1)</sup>	280 <sup>1)</sup>	-
55	-	95 <sup>1)</sup>	130 <sup>1)</sup>	195 <sup>1)</sup>	280 <sup>1)</sup>	-
60	-	-	130 <sup>1)</sup>	195 <sup>1)</sup>	280 1)	-

Versior	n with max.	T <sub>m</sub> = 280 °C				
T <sub>a</sub> [°C]	T6 [85 ℃]	T5 [100 °C]	T4 [135 ℃]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
65	-	-	130 <sup>1)</sup>	195 <sup>1)</sup>	280 <sup>1) 2)</sup>	-
70	-	-	130 <sup>1)</sup>	_	_	-

- 1) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (1.97 in).
- 2)  $T_a = 65$  °C for pulse/frequency/switch output  $P_i = 0$  W

Versior	n with max.	T <sub>m</sub> = 280 °C				
Т <sub>а</sub> [°С]	T6 [85 °C]	T5 [100 °C]	T4 [135 ℃]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
35	80 <sup>1)</sup>	95 <sup>1)</sup>	130 <sup>1)</sup>	195 <sup>1)</sup>	280 <sup>1)</sup>	-
50	-	95 <sup>1)</sup>	130 <sup>1)</sup>	195 <sup>1)</sup>	280 <sup>1)</sup>	-
55	-	-	-	195 <sup>1)</sup>	280 <sup>1)</sup>	-
60	-	-	_	195 <sup>1)</sup>	-	-

#### Basic specification, position 3 (Output; Input) = D

 For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (1.97 in).

	Basic specification,	position 3	(Output; Input)	= E, G
--	----------------------	------------	-----------------	--------

Versior	n with max.	T <sub>m</sub> = 280 °C				
Т <sub>а</sub> [°С]	T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
40	80 <sup>1)</sup>	95 <sup>1)</sup>	130 <sup>1)</sup>	195 <sup>1)</sup>	280 <sup>1)</sup>	-
50	-	95 <sup>1)</sup>	130 <sup>1) 2)</sup>	195 <sup>1) 2)</sup>	280 <sup>1) 2)</sup>	-
60	-	-	130 <sup>1)</sup>	195 <sup>1)</sup>	280 <sup>1)</sup>	-
65	-	-	130 <sup>1)</sup>	195 <sup>1)</sup>	280 <sup>1) 3)</sup>	-
70	-	-	130 <sup>1)</sup>	195 <sup>1) 4)</sup>	280 1) 4)	-

 For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (1.97 in).

- 2)  $T_a = 60 \text{ °C}$  for pulse/frequency/switch output  $P_i = 0 \text{ W}$
- 3)  $T_a = 65 \text{ °C for pulse/frequency/switch output } P_i = 0 \text{ W}$
- 4)  $T_a = 70$  °C for pulse/frequency/switch output  $P_i = 0$  W

#### **High-temperature version**

Basic specification, position 3 (output; input) = A

Version	n with max.	T <sub>m</sub> = 440 °C				
T <sub>a</sub> [°C]	T6 [85 °C]	T5 [100 °C]	T4 [135 ℃]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
40	80 <sup>1)</sup>	95 <sup>1)</sup>	130 <sup>1)</sup>	195 <sup>1)</sup>	290 <sup>1)</sup>	440 <sup>1)</sup>
60	-	95 <sup>2) 1)</sup>	130 <sup>1)</sup>	195 <sup>1)</sup>	290 <sup>1)</sup>	440 <sup>1)</sup>
70	-	-	130 <sup>1)</sup>	195 <sup>1)</sup>	290 <sup>1)</sup>	440 <sup>1)</sup>

- 1) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (1.97 in).
- 2)  $T_a = 55$  °C for device versions with pressure component option DA, DB, DC, DD.

Versior	with max.	$\Gamma_{\rm m}$ = 440 °C				
T <sub>a</sub> [°C]	T6 [85 °C]	T5 [100 °C]	T4 [135 ℃]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
35 <sup>1)</sup>	80 <sup>2)</sup>	95 <sup>2)</sup>	130 <sup>2)</sup>	195 <sup>2)</sup>	290 <sup>2)</sup>	440 <sup>2)</sup>
50 <sup>3)</sup>	-	95 <sup>2)</sup>	130 <sup>2)</sup>	195 <sup>2)</sup>	290 <sup>2)</sup>	440 <sup>2)</sup>
65	-	-	130 <sup>2)</sup>	195 <sup>2)</sup>	290 <sup>2)</sup>	440 <sup>2)</sup>
70	-	-	130 <sup>2)</sup>	195 <sup>4) 2)</sup>	290 <sup>2)4)</sup>	440 <sup>2)4)</sup>

#### Basic specification, position 3 (output; input) = B

1)  $T_a = 40$  °C for pulse/frequency/switch output  $P_i = 0.85$  W

2) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (1.97 in).

3)  $T_a = 55 \text{ °C}$  for pulse/frequency/switch output  $P_i = 0.85 \text{ W}$ 

4)  $T_a = 70$  °C for pulse/frequency/switch output  $P_i = 0.85$  W

Basic specification, positions 1, 2 (approval) = MG

Versior	Version with max. $T_m = 440 \ ^\circ C$								
Т <sub>а</sub> [°С]	T6 [85 ℃]	T5 [100 °C]	T4 [135 ℃]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]			
40	80 <sup>1)</sup>	95 <sup>1)</sup>	130 <sup>1)</sup>	195 <sup>1)</sup>	290 <sup>1)</sup>	440 <sup>1)</sup>			
55	-	95 <sup>1)</sup>	130 <sup>1)</sup>	195 <sup>1)</sup>	290 <sup>1)</sup>	440 <sup>1)</sup>			
65	-	-	130 <sup>1)</sup>	195 <sup>1)</sup>	290 <sup>1)</sup>	440 <sup>1)</sup>			
70	-	-	130 <sup>1)</sup>	195 <sup>1) 2)</sup>	290 <sup>1) 2)</sup>	440 <sup>1)2)</sup>			

 For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (1.97 in).

2)  $T_a = 70$  °C for pulse/frequency/switch output  $P_i = 0.85$  W

Basic specification, position 3 (output; input) = C

Versior	Version with max. $T_m = 440 \ ^\circ C$								
Т <sub>а</sub> [°С]	T6 [85 °C]	T5 [100 °C]	T4 [135 ℃]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]			
40	80 <sup>1)</sup>	95 <sup>1)</sup>	130 <sup>1)</sup>	195 <sup>1)</sup>	290 <sup>1)</sup>	440 <sup>1)</sup>			
55	-	95 <sup>1)</sup>	130 <sup>1)</sup>	195 <sup>1)</sup>	290 <sup>1)</sup>	440 <sup>1)</sup>			
65	-	-	130 <sup>1)</sup>	195 <sup>1)</sup>	290 <sup>1)</sup>	440 <sup>1)</sup>			
70	-	-	130 <sup>1)</sup>	195 <sup>1) 2)</sup>	290 <sup>2)1)</sup>	440 <sup>2)1)</sup>			

 For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (1.97 in).

2)  $T_a = 70 \text{ °C}$  for pulse/frequency/switch output  $P_i = 0 \text{ W}$ 

Basic specification, position 3 (output; input) = D

Versior	Version with max. $T_m = 440 \ ^\circ C$							
Т <sub>а</sub> [°С]	T6 [85 ℃]	T5 [100 ℃]	T4 [135 ℃]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]		
35	80 <sup>1)</sup>	95 <sup>1)</sup>	130 <sup>1)</sup>	195 <sup>1)</sup>	290 <sup>1)</sup>	440 <sup>1)</sup>		
50	-	95 <sup>1)</sup>	130 <sup>1)</sup>	195 <sup>1)</sup>	290 <sup>1)</sup>	440 <sup>1)</sup>		
55	-	_	-	195 <sup>1)</sup>	290 <sup>1)</sup>	440 <sup>1)</sup>		

Version with max. $T_m$ = 440 °C							
T <sub>a</sub> [°C]	T6 [85 °C]	T5 [100 °C]	T4 [135 ℃]	T3 [200 °C]	T2 [300 °C]	T1 [450 ℃]	
60	-	-	-	195 <sup>1)</sup>	290 <sup>1)</sup>	440 <sup>1)</sup>	
65	_	_	_	_	290 <sup>1)</sup>	-	

1) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ... T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (1.97 in).

Basic specification, position 3 (output; input) = E, G	

Versior	Version with max. $T_m$ = 440 °C							
Т <sub>а</sub> [°С]	T6 [85 °C]	T5 [100 °C]	T4 [135 ℃]	T3 [200 °C]	T2 [300 °C]	T1 [450 ℃]		
40	80 <sup>1)</sup>	95 <sup>1)</sup>	130 <sup>1)</sup>	195 <sup>1)</sup>	290 <sup>1)</sup>	440 <sup>1)</sup>		
50	-	95 <sup>1)</sup>	130 <sup>1) 2)</sup>	195 <sup>1) 2)</sup>	290 <sup>1) 2)</sup>	440 <sup>1)2)</sup>		
65	-	-	130 <sup>1)</sup>	195 <sup>1)</sup>	290 <sup>1)</sup>	440 <sup>1)</sup>		
70	-	_	130 <sup>1)</sup>	195 <sup>1) 3)</sup>	290 <sup>3) 1)</sup>	440 <sup>3)1)</sup>		

1) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (1.97 in).

2)  $T_a = 60 \text{ °C for pulse/frequency/switch output } P_i = 0 \text{ W}$ 

3)  $T_a = 70$  °C for pulse/frequency/switch output  $P_i = 0$  W

#### **Remote version**

#### Transmitter

Basic specification, position 3 Output; Input	Basic specification, position 1, 2 Approval	T6 [85 °C]	T5 [100 °C]	T4 [135 ℃]
А	MG	40	60	75
В	MG	40	55	70 <sup>1)</sup>
С	MG	40	55	70 <sup>2)</sup>

Basic specification, position 3 Output; Input	Basic specification, position 1, 2 Approval	T6 [85 °C]	T5 [100 ℃]	T4 [135 ℃]
D	MG	35	50	65
E G	MG	40	55	70 <sup>2)</sup>

1)  $T_a = 75$  °C for pulse/frequency/switch output  $P_i = 0.85$  W

2)  $T_a = 75$  °C for pulse/frequency/switch output  $P_i = 0$  W

Sensor

Version	Version with max. $T_m = 280 \ ^\circ C$							
T <sub>a</sub> [°C]	T6 [85 ℃]	T5 [100 ℃]	T4 [135 ℃]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]		
55	80 1) 2)	95 <sup>2)</sup>	130 <sup>2)</sup>	195 <sup>2)</sup>	280 <sup>2)</sup>	-		
70	-	95 <sup>2) 3)</sup>	130 <sup>2)</sup>	195 <sup>2)</sup>	280 <sup>2)</sup>	-		
85	-	-	130 <sup>2)</sup>	195 <sup>2)</sup>	280 <sup>2)</sup>	-		

1)  $T_a = 40$  °C For device versions with pressure component option DA, DB, DC, DD.

2) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to and to 90 °C for T4 ...T1. In the case of T4 ...T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (1.97 in).

3)  $T_a = 55$  °C for device versions with pressure component option DA, DB, DC, DD.

Version	Version with max. $T_m = 440 \ ^\circ C$							
Т <sub>а</sub> [°С]	T6 [85 ℃]	T5 [100 °C]	T4 [135 ℃]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]		
55	80 1) 2)	95 <sup>2)</sup>	130 <sup>2)</sup>	195 <sup>2)</sup>	290 <sup>2)</sup>	440 <sup>2)</sup>		
70	-	95 <sup>2) 3)</sup>	130 <sup>2)</sup>	195 <sup>2)</sup>	290 <sup>2)</sup>	440 <sup>2)</sup>		
85	-	-	130 <sup>2)</sup>	195 <sup>2)</sup>	290 <sup>2)</sup>	440 <sup>2)</sup>		

#### High-temperature version

1)  $T_a = 40$  °C For device versions with pressure component option DA, DB, DC, DD.

2) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ... T5 and to and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (1.97 in).

3)  $T_a = 55 \text{ °C}$  for device versions with pressure component option DA, DB, DC, DD.

#### Explosion hazards arising from gas and dust


# Determining the temperature class and surface temperature with the temperature table

- In the case of gas: Determine the temperature class as a function of the maximum ambient temperature  $T_a$  and the maximum medium temperature  $T_m$ .
- In the case of dust: Determine the maximum surface temperature as a function of the maximum ambient temperature  $T_a$  and the maximum medium temperature  $T_m$ .

#### Example

╘

- Measured maximum ambient temperature:  $T_{ma} = 63 \text{ °C}$
- Measured maximum medium temperature:  $T_{mm}$  = 108 °C

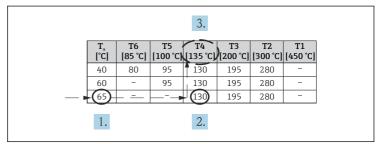


A0031266

I Procedure for determining the temperature class and surface temperature

- 1. In the column for the maximum ambient temperature  $T_a$  select the temperature that is immediately greater than or equal to the maximum ambient temperature  $T_{ma}$  that is present.
  - $T_a = 65$  °C. The row showing the maximum medium temperature is determined.
- 2. Select the maximum medium temperature  $T_m$  of this row, which is immediately greater than or equal to the maximum medium temperature  $T_{mm}$  that is present.
  - → The column with the temperature class for gas is determined:  $108 \degree C \le 130 \degree C \rightarrow T4$ .
- 3. The maximum temperature of the temperature class determined corresponds to the maximum surface temperature for dust: T4 =  $135 \degree$ C.

Connection values: Signal circuits The following tables contain specifications which are dependent on the transmitter type and its input and output assignment. Compare the following specifications with those on the nameplate of the transmitter.

### Connecting the transmitter

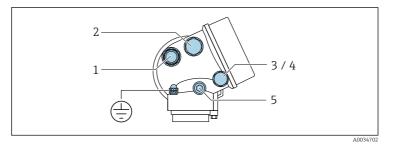

Position		Basic specification, Position 1, 2 Approval	Type of protection used for cable entry	Description
1	Cable entry for output 1	MG	Ex ec	The following applies for devices with basic specification, position 1, 2 (approval) = MG: In the case of device versions with a plastic transport sealing plug, this plug does not meet the explosion protection requirements and must be replaced during installation by a suitable entry that meets the approval specifications. In the case of device versions with a cable entry, this entry has a separate component approval and meets the requirements of the explosion protection indicated on the nameplate.
2	Cable entry for output 2	MG	Ex ec	The following applies for devices with basic specification, position 1, 2 (approval) = MG: In the case of device versions with metal extensions and sealing plugs, the latter are part of the device approval and meet the requirements of the explosion protection indicated on the nameplate. In the case of device versions with a cable entry, this entry has a separate component approval and meets the requirements of the explosion protection indicated on the nameplate.
3	Optional order code <sup>1)</sup> : Cable entry of the remote display and operating module FHX50	MG	Ex ec <sup>2)</sup>	The following applies for devices with basic specification, position 1, 2 (approval) = MG: In the case of device versions with metal extensions and sealing plugs, the latter are part of the device approval and meet the requirements of the explosion protection indicated on the nameplate. In the case of device versions with a cable entry, this entry has a separate component approval and meets the requirements of the explosion protection indicated on the nameplate.

4	Optional order code <sup>31</sup> : Cable entry of pressure measuring cell	MG	Ex ec	The following applies for devices with basic specification, position 1, 2 (approval) = MG: In the case of device versions with metal extensions and sealing plugs, the latter are part of the device approval and meet the requirements of the explosion protection indicated on the nameplate. In the case of device versions with a cable entry, this entry has a separate component approval and meets the requirements of the explosion protection indicated on the nameplate.			
Pos	sition		Description				
5	Pressure compen	sation plug	NOTICE Housing degree of protection voided due to insufficient sealing of the housing. ► Do not open - not a cable entry.				
۲	Potential equaliz	ation	NOTICE           Terminal for connection to potential equalization.           ▶ Pay attention to the grounding concept of the facility.				

1)

2)

Basic specification, position 4 (display; operation) = L, M The labeling changes according to whether "Display; operation" = "L" or "M": Ex ec[ia Ga] IIC T6...T1 Gc. Basic specification, position 8, 9 (sensor version; DSC sensor; measuring tube) = DA, DA, DC, DD and position 11 (pressure component) = B, C, D, E, F, G 3)

#### Terminal assignment

#### Transmitter

The order code is part of the extended order code. Detailed information on the features of the device and on the structure of the extended order code  $\rightarrow \cong 6$ .

#### Connection versions

Order code for	Terminal numbers						
"Output"	Output 1		Output 2		Input		
	1 (+)	2 (-)	3 (+)	4 (-)	5 (+)	6 (-)	
Option <b>A</b>	4-20mA HART (passive)		-		-		
Option <b>B</b> <sup>1)</sup>	4-20mA HART (passive)		Pulse/frequency/ switch output (passive)		-		
Option <b>C</b> <sup>1)</sup>	4-20mA HART (passive)		4-20mA analog (passive)		-		
Option $\mathbf{D}^{(1)(2)}$		A HART sive)	Pulse/frequency/ switch output (passive)		4-20mA current input (passive)		
Option <b>E</b> <sup>1) 3)</sup>		FOUNDATION Fieldbus		Pulse/frequency/ switch output (passive)		-	
Option <b>G</b> $^{1) (4)}$	PROFII	BUS PA	Pulse/frequency/ switch output (passive)		-		

1) Output 1 must always be used; output 2 is optional.

- 2) The integrated overvoltage protection is not used with option D: Terminals 5 and 6 (current input) are not protected against overvoltage.
- 3) FOUNDATION Fieldbus with integrated reverse polarity protection.
- 4) PROFIBUS PA with integrated reverse polarity protection.

#### Safety-related values

The order code is part of the extended order code. Detailed information on the features of the device and on the structure of the extended order code  $\rightarrow \cong 6$ .

Order code for "Output"	Output type	Safety-related values	
Option A	4-20mA HART	U <sub>nom</sub> = DC 35 V U <sub>max</sub> = 250 V	
Option B	4-20mA HART	U <sub>nom</sub> = DC 35 V U <sub>max</sub> = 250 V	
	Pulse/frequency/switch output	$U_{nom} = DC 35 V$ $U_{max} = 250 V$ $P_{max} = 1 W^{1}$	
Option C	4-20mA HART	U <sub>nom</sub> = DC 30 V U <sub>max</sub> = 250 V	
	4-20mA analog		
Option D	4-20mA HART	U <sub>nom</sub> = DC 35 V U <sub>max</sub> = 250 V	
	Pulse/frequency/switch output	$U_{nom} = DC 35 V$ $U_{max} = 250 V$ $P_{max} = 1 W$	
	4 to 20 mA current input	U <sub>nom</sub> = DC 35 V U <sub>max</sub> = 250 V	
Option E	FOUNDATION Fieldbus	$U_{nom} = DC 32 V$ $U_{max} = 250 V$ $P_{max} = 0.88 W$	
	Pulse/frequency/switch output	$U_{nom} = DC 35 V$ $U_{max} = 250 V$ $P_{max} = 1 W$	
Option G	PROFIBUS PA	$U_{nom} = DC 32 V$ $U_{max} = 250 V$ $P_{max} = 0.88 W$	
	Pulse/frequency/switch output	$U_{nom} = DC 35 V$ $U_{max} = 250 V$ $P_{max} = 1 W$	

#### Type of protection Ex ec

1) Internal circuit limited by  $R_i = 760.5 \Omega$ 

#### Remote display FHX50

Basic specification, position 1, 2 Approval	Cable specification	Basic specification, position Display; operation Option L, M	
Option <b>MG</b>		U <sub>o</sub> = 7.3 V	
		I <sub>o</sub> = 327 mA	
		$P_0 = 362 \text{ mW}$	
	Max. cable length: 60 m (196.85 ft)	L <sub>o</sub> = 149 μH	
		C <sub>o</sub> = 388 nF	
		C <sub>c</sub> ≤ 125 nF	
		$L_c \le 149 \ \mu H$	



71606382

## www.addresses.endress.com

