

# Safety Instructions

## **Proline Promass 100**

EAC: Zone 2



---

# Proline Promass 100

## Table of contents

|  |   |
|--|---|
| About this document .....                | 4 |
| Associated documentation .....           | 4 |
| Manufacturer's certificates .....        | 4 |
| Manufacturer address .....               | 5 |
| Extended order code .....                | 5 |
| Safety instructions: General .....       | 6 |
| Safety instructions: Installation .....  | 6 |
| Temperature tables .....                 | 7 |
| Connection values: Signal circuits ..... | 9 |

**About this document**

The document number of these Safety Instructions (XA) must match the information on the nameplate.

**Associated documentation**

For an overview of the scope of the associated Technical Documentation, refer to the following:

- *Device Viewer* ([www.endress.com/deviceviewer](http://www.endress.com/deviceviewer)): Enter serial number from nameplate.
- *Endress+Hauser Operations app*: Enter serial number from nameplate or scan matrix code on nameplate.

To commission the device, please observe the Operating Instructions pertaining to the device:

| Measuring device              | Documentation code |             |              |             |          |
|-------------------------------|--------------------|-------------|--------------|-------------|----------|
|                               | HART               | PROFIBUS DP | Modbus RS485 | EtherNet/IP | PROFINET |
| Promass A 100                 | BA01187D           | BA01246D    | BA01179D     | BA01182D    | BA01424D |
| Promass E 100<br>(8E1B**-...) | BA01167D           | BA01248D    | BA01056D     | BA01064D    | BA01426D |
| Promass E 100<br>(8E1C**-...) | BA01713D           | BA01714D    | BA01711D     | BA01712D    | BA01715D |
| Promass F 100                 | BA01168D           | BA01249D    | BA01057D     | BA01065D    | BA01427D |
| Promass G 100                 | BA01346D           | BA01348D    | BA01345D     | BA01347D    | BA01433D |
| Promass H 100                 | BA01189D           | BA01250D    | BA01177D     | BA01184D    | BA01428D |
| Promass I 100                 | BA01190D           | BA01251D    | BA01058D     | BA01066D    | BA01429D |
| Promass O 100                 | BA01191D           | BA01252D    | BA01180D     | BA01185D    | BA01430D |
| Promass P 100                 | BA01192D           | BA01253D    | BA01059D     | BA01067D    | BA01431D |
| Promass S 100                 | BA01193D           | BA01254D    | BA01060D     | BA01068D    | BA01432D |
| Promass X 100                 | BA01194D           | BA01255D    | BA01181D     | BA01186D    | BA01437D |

*Additional documentation*

| Contents             | Document type | Documentation code |
|----------------------|---------------|--------------------|
| Explosion Protection | Brochure      | CP00021Z/11        |

Please note the documentation associated with the device.

**Manufacturer's certificates**

Measuring instruments meet the fundamental health and safety requirements for the design and construction of devices and protective systems intended for use in potentially explosive atmospheres in accordance with TR CU 012/2011.

**Certification body**

LLP "T-Standard"

**Certificate number**

EAЭC KZ 7500525.01.01.01551


Affixing the certificate number certifies conformity with the standards under (depending on the device version).

- GOCT 31610-0-2019 (IEC 60079-0-2017)
- GOCT 31610.7-2017 (IEC 60079-7:2015)

**Manufacturer address**  
 Endress+Hauser Flowtec AG  
 Kägenstrasse 7  
 4153 Reinach BL  
 Switzerland

**Extended order code**  
 The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional information about the nameplate is provided in the associated Operating Instructions.

**Structure of the extended order code**

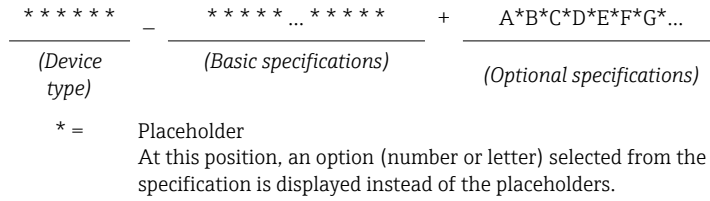

*Device type*

The device and the device design is defined in the "Device type" section (Product root).

*Basic specifications*

The features that are absolutely essential for the device (mandatory features) are specified in the basic specifications. The number of positions depends on the number of features available. The selected option of a feature can consist of several positions.

*Optional specifications*

The optional specifications describe additional features for the device (optional features). The number of positions depends on the number of features available. The features have a 2-digit structure to aid identification (e.g. JA). The first digit (ID) stands for the feature group and consists of a number or a letter (e.g. J = Test, Certificate). The second digit constitutes the value that stands for the feature within the group (e.g. A = 3.1 material (wetted parts), inspection certificate).

More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

**Device type**

| Position | Order code for    | Option selected                                      | Description                                  |
|----------|-------------------|--|--|
| 1        | Instrument family | 8  | Coriolis flowmeter                           |
| 2        | Sensor            | A, E, F, G, H, I, O, P, S, X <sup>1)</sup>           | Sensor type                                  |
| 3        | Transmitter       | 1  | Transmitter type:<br>4-wire, compact version |
| 4        | Generation index  | B, C   | Platform generation                          |
| 5, 6     | Nominal diameter  | Examples:<br>02, 04, 40, 50, 1H, 3E <sup>2) 3)</sup> | Nominal diameter of sensor                   |

- 1) For replacement transmitter only: X
- 2) For the exact specification of the nominal diameter, see nameplate
- 3) For replacement transmitter only: XX

### Basic specifications

| Position | Order code for | Option selected | Type of protection      |
|----------|----------------|-----------------|-------------------------|
| 1, 2     | Approval       | GS, BS, I5, I6  | 2Ex ec IIC T6...T1 Gc X |

| Position | Order code for             | Option selected | Description                                |
|----------|----------------------------|-----------------|--|
| 3        | Output, input              | B               | 4-20mA HART, Pulse/frequency/switch output |
|          |                            | L               | PROFIBUS DP                                |
|          |                            | M               | Modbus RS485                               |
|          |                            | N               | EtherNet/IP                                |
|          |                            | R               | PROFINET IO                                |
| 4        | Display; Operation         | A               | W/o; via communication                     |
| 5        | Housing                    | A               | Compact, alu, coated                       |
|          |                            | B               | Compact hygienic, stainless                |
|          |                            | C               | Ultra compact hygienic, stainless          |
| 13, 14   | Device Model <sup>1)</sup> | A1              | 1  |

1) Order code for "Device model" only for measuring devices with product code 8E1C

### Optional specifications

No options specific to hazardous locations are available.

#### Safety instructions: General

- Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device:
  - Be suitably qualified for their role and the tasks they perform
  - Be trained in explosion protection
  - Be familiar with national regulations or guidelines (e.g. GOCT IEC 60079-14-2013)
- Install the device according to the manufacturer's instructions and national regulations.
- Do not operate the device outside the specified electrical, thermal and mechanical parameters.
- Only use the device in media to which the wetted materials have sufficient durability.
- Refer to the temperature tables for the relationship between the permitted ambient temperature for the sensor and/or transmitter, depending on the range of application, and the temperature classes.
- Alterations to the device can affect the explosion protection and must be carried out by staff authorized to perform such work by Endress+Hauser.
- Observe all the technical data of the device (see nameplate).
- Avoid electrostatic charge (e.g. caused by friction, cleaning, maintenance, strong currents in the medium):
  - On the attached stainless steel nameplate and on painted metallic housings that are not integrated into the local potential equalization system.

#### Safety instructions: Installation

- In potentially explosive atmospheres: Do not connect or disconnect the electrical connection of the power supply circuit when energized.
- Only use certified cable entries and connection plugs M12×1 suitable for the application. Please comply with the selection criteria as defined in GOCT IEC 60079-14-2013.
- Continuous service temperature of the connecting cable: -40 to +80 °C; however, at least in accordance with the range of service temperature taking into account additional influences of the process conditions ( $T_{a,min}$  and  $T_{a,max} + 20$  K).
- Seal unused entry glands with approved sealing plugs that correspond to the type of protection. The plastic transport sealing plug does not meet this requirement and must therefore be replaced during installation.

- Only use certified cable entries or sealing plugs. The metal sealing plugs supplied meet this requirement.
- Supplied cable glands M20 × 1.5 are only suitable for fixed installation of cables and connections. In the installation, a strain relief must be provided.
- Basic specification, order code for "Housing", option B, C:  
To protect the housing of stainless steel housings: Ensure that the housing gasket is flat and not bent when closing the housing cover. Replace bent gaskets.

**Potential equalization**

- Integrate the device into the potential equalization .
- If the ground connection has been established via the pipe as specified, it is also possible to integrate the sensor into the potential equalization system via the pipe.

**Temperature tables**

**Ambient temperature**

Minimum ambient temperature:

$$T_{a, \min} = -40 \text{ }^\circ\text{C}$$

Maximum ambient temperature:

$$T_{a, \max} = +60 \text{ }^\circ\text{C}$$
 depending on the medium temperature and temperature class

**Medium temperature**

*Minimum medium temperature*

- Promass A, F, G, H, I, P, S, X:  
 $T_{m, \min} = -50 \text{ }^\circ\text{C}$
- Promass E, O:  
 $T_{m, \min} = -40 \text{ }^\circ\text{C}$

*Maximum medium temperature*

$T_{m, \max}$  for T6...T1 depending on the maximum ambient temperature  $T_{a, \max}$ .

**Compact version**

*Basic specifications, position 5 (housing) = A, B*

| $T_{a, \max}$<br>[°C] | $T_{m, \max}$ [°C] |                |                |                      |                         |                         |
|-----------------------|--------------------|----------------|----------------|----------------------|-------------------------|-------------------------|
|                       | T6<br>[85 °C]      | T5<br>[100 °C] | T4<br>[135 °C] | T3<br>[200 °C]       | T2<br>[300 °C]          | T1<br>[450 °C]          |
| 35                    | 50                 | 85             | 120            | 150 <sup>1) 2)</sup> | 150 <sup>1) 3) 4)</sup> | 150 <sup>1) 3) 4)</sup> |
| 50                    | -                  | 85             | 120            | 150 <sup>1) 2)</sup> | 150 <sup>1) 3) 4)</sup> | 150 <sup>1) 3) 4)</sup> |
| 60                    | -                  | -              | 120            | 150 <sup>1) 2)</sup> | 150 <sup>1) 3) 4)</sup> | 150 <sup>1) 3) 4)</sup> |

- 1) The medium temperature for Promass 8E1B\*\*... is limited to  $T_{m, \max} = 140 \text{ }^\circ\text{C}$ .
- 2) The following applies to specified sensors with a maximum medium temperature  $T_{m, \max \text{ range}} = 205 \text{ }^\circ\text{C}$ :  $T_{m, \max} = 170 \text{ }^\circ\text{C}$
- 3) The following applies to specified sensors with a maximum medium temperature  $T_{m, \max \text{ range}} = 205 \text{ }^\circ\text{C}$ :  $T_{m, \max} = 205 \text{ }^\circ\text{C}$
- 4) Maximum medium temperature =  $T_{m, \max} 240 \text{ }^\circ\text{C}$  for Promass F version with maximum  $T_{m, \max \text{ range}} = 240 \text{ }^\circ\text{C}$ . For medium temperature above 205 °C, the transmitter shall not be installed above the sensor.

Basic specifications, position 5 (housing) = C

| $T_{a, \max}$<br>[°C] | $T_{m, \max}$ [°C] |                |                |                      |                         |                         |
|-----------------------|--------------------|----------------|----------------|----------------------|-------------------------|-------------------------|
|                       | T6<br>[85 °C]      | T5<br>[100 °C] | T4<br>[135 °C] | T3<br>[200 °C]       | T2<br>[300 °C]          | T1<br>[450 °C]          |
| 50                    | -                  | 85             | 120            | 150 <sup>1) 2)</sup> | 150 <sup>1) 3) 4)</sup> | 150 <sup>1) 3) 4)</sup> |
| 60                    | -                  | -              | 120            | 150 <sup>1) 2)</sup> | 150 <sup>1) 3) 4)</sup> | 150 <sup>1) 3) 4)</sup> |

- 1) The medium temperature for Promass 8E1B\*\*-... is limited to  $T_{m, \max} = 140$  °C.
- 2) The following applies to specified sensors with a maximum medium temperature  $T_{m, \max \text{ range}} = 205$  °C:  $T_{m, \max} = 170$  °C
- 3) The following applies to specified sensors with a maximum medium temperature  $T_{m, \max \text{ range}} = 205$  °C:  $T_{m, \max} = 205$  °C
- 4) Maximum medium temperature =  $T_{m, \max} 240$  °C for Promass F version with maximum  $T_{m, \max \text{ range}} = 240$  °C. For medium temperature above 205 °C, the transmitter shall not be installed above the sensor.



**Connection values: Signal circuits**

The following tables contain specifications which are dependent on the transmitter type and its input and output assignment. Compare the following specifications with those on the nameplate of the transmitter.

**Terminal assignment**


*Transmitter*

 The order code constitutes part of the extended order code. For detailed information on the device features and the structure of the extended order code →  5.

*Connection version 4-20 mA HART with pulse/frequency/switch output*

Order code for "Output", option **B**

Depending on the housing version, the transmitters can be ordered with terminals or device plugs.

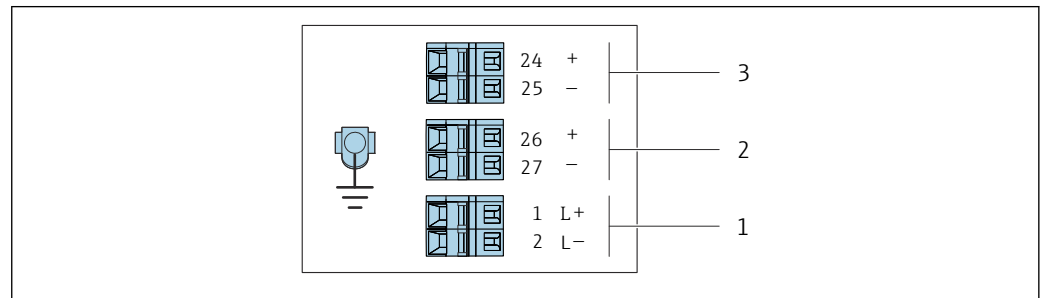

A0016888

 1 Terminal assignment 4-20 mA HART with pulse/frequency/switch output


- 1 Power supply: DC 24 V
- 2 Output 1: 4-20 mA HART (active)
- 3 Output 2: pulse/frequency/switch output (passive)

| Order code "Output"   | Terminal number |        |                       |        |   |        |
|---|-----------------|--------|-----------------------|--------|---|--------|
|   | Power supply    |        | Output 1              |        | Output 2                                |        |
|   | 2 (L-)          | 1 (L+) | 27 (-)                | 26 (+) | 25 (-)                                  | 24 (+) |
| Option B  | DC 24 V         |        | 4-20 mA HART (active) |        | Pulse/frequency/switch output (passive) |        |
| Order code for "Output":<br>Option B: 4-20 mA HART with pulse/frequency/switch output |                 |        |                       |        |   |        |

*PROFIBUS DP connection version*

Order code for "Output", option **L**

Depending on the housing version, the transmitters can be ordered with terminals or device plugs.

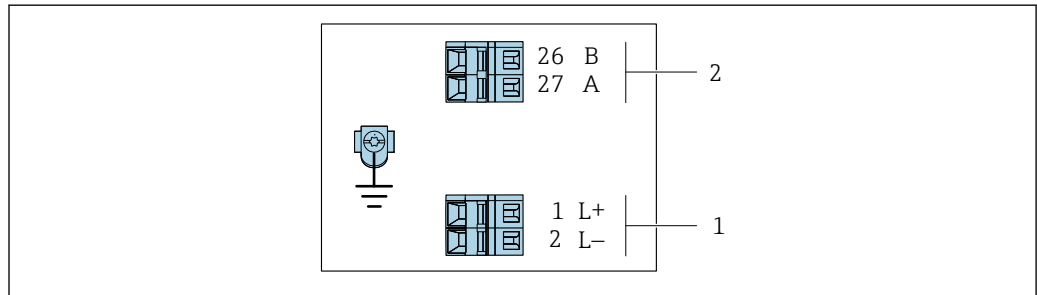

A0022716

2 PROFIBUS DP terminal assignment


- 1 Power supply: DC 24 V
- 2 PROFIBUS DP

| Order code<br>"Output"   | Terminal number |        |                                 |
|--|-----------------|--------|---------------------------------|
|  | Power supply    |        | Output                          |
|  | 2 (L-)          | 1 (L+) | 26 (RxD/TxD-P)   27 (RxD/TxD-N) |
| Option L   | DC 24 V         |        | B   A                           |
| Order code for "Output":<br>Option L: PROFIBUS DP, for use in non-hazardous areas and Zone 2 |                 |        |                                 |

*Modbus RS485 connection version*

Order code for "Output", option **M**

Depending on the housing version, the transmitters can be ordered with terminals or device plugs.

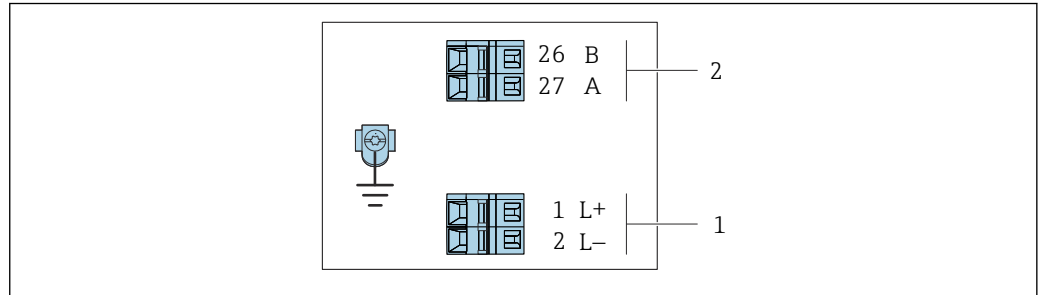

3 *Modbus RS485 terminal assignment, connection version for use in non-hazardous areas and Zone 2*


- 1 Power supply: DC 24 V
- 2 Modbus RS485

| Order code<br>"Output"  | Terminal number |        |              |        |
|---|-----------------|--------|--------------|--------|
|   | Power supply    |        | Output       |        |
|   | 1 (L+)          | 2 (L-) | 26 (B)       | 27 (A) |
| Option <b>M</b>   | DC 24 V         |        | Modbus RS485 |        |
| Order code for "Output":<br>Option <b>M</b> : Modbus RS485, for use in non-hazardous areas and Zone 2 |                 |        |              |        |

*EtherNet/IP connection version*

Order code for "Output", option **N**

Depending on the housing version, the transmitters can be ordered with terminals or device plugs.

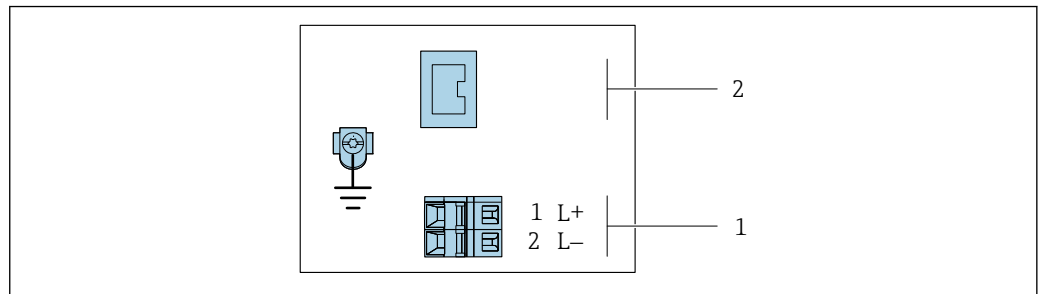

4 *EtherNet/IP terminal assignment*


- 1 Power supply: DC 24 V
- 2 EtherNet/IP

| Order code<br>"Output"                                    | Terminal number |        |                   |
|---|-----------------|--------|-------------------|
|   | Power supply    |        | Output            |
|   | 2 (L-)          | 1 (L+) | Device plug M12x1 |
| Option <b>N</b>   | DC 24 V         |        | EtherNet/IP       |
| Order code for "Output":<br>Option <b>N</b> : EtherNet/IP |                 |        |                   |

*PROFINET connection version*

Order code for "Output", option **R**

Depending on the housing version, the transmitters can be ordered with terminals or device plugs.

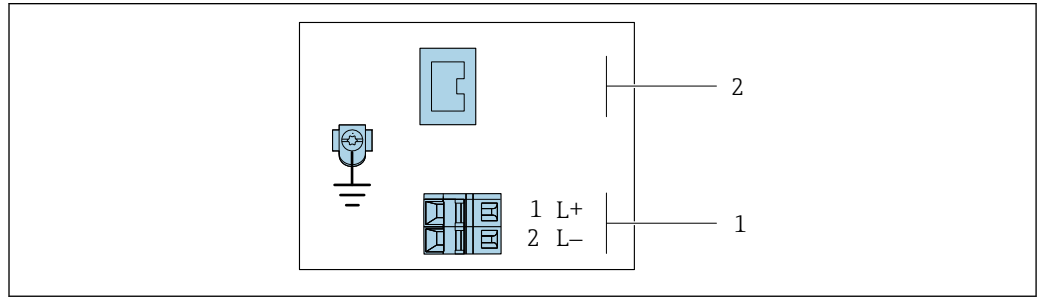

A0017054

5 PROFINET terminal assignment

- 1 Power supply: DC 24 V
- 2 PROFINET

| Order code "Output"                            | Terminal number        |        | Output<br>Device plug M12x1 |
|--|------------------------|--------|-----------------------------|
|  | Power supply<br>2 (L-) | 1 (L+) |                             |
| Option R                                       | DC 24 V                |        | PROFINET                    |
| Order code for "Output":<br>Option R: PROFINET |                        |        |                             |

**Pin assignment, device plug**

Supply voltage

For all connection versions (device side)

| Pin    | Assignment |                     |
|--------|------------|---------------------|
|        | 1          | L+                  |
| 2      |            | Not assigned        |
| 3      |            | Not assigned        |
| 4      | L-         | DC 24 V             |
| 5      |            | Grounding/shielding |
| Coding |            | Plug/socket         |
| A      |            | Plug                |

4-20 mA HART with pulse/frequency/switch output

Device plug for signal transmission (device side)

| Pin    | Assignment |   |
|--------|------------|---|
|        | 1          | +                                       |
| 2      | -          | 4-20 mA HART (active)                   |
| 3      | +          | Pulse/frequency/switch output (passive) |
| 4      | -          | Pulse/frequency/switch output (passive) |
| 5      |            | Grounding/shielding                     |
| Coding |            | Plug/socket                             |
| A      |            | Socket                                  |

*PROFIBUS DP*

*Device plug for signal transmission (device side)*

|        | Pin | Assignment  |                     |
|--------|-----|-------------|---------------------|
|        | 1   |             | Not assigned        |
|        | 2   | A           | PROFIBUS DP         |
|        | 3   |             | Not assigned        |
|        | 4   | B           | PROFIBUS DP         |
|        | 5   |             | Grounding/shielding |
| Coding |     | Plug/socket |                     |
| B      |     | Socket      |                     |

*MODBUS RS485*

*Device plug for signal transmission (device side)*

|        | Pin | Assignment  |                     |
|--------|-----|-------------|---------------------|
|        | 1   |             | Not assigned        |
|        | 2   | A           | Modbus RS485        |
|        | 3   |             | Not assigned        |
|        | 4   | B           | Modbus RS485        |
|        | 5   |             | Grounding/shielding |
| Coding |     | Plug/socket |                     |
| B      |     | Socket      |                     |

*EtherNet/IP*

*Device plug for signal transmission (device side)*

|   | Pin    | Assignment |             |
|---|--------|------------|-------------|
|   | 1      | +          | Tx          |
|   | 2      | +          | Rx          |
|   | 3      | -          | Tx          |
|   | 4      | -          | Rx          |
|   | Coding |            | Plug/socket |
| D |        | Socket     |             |

*PROFINET*

*Device plug for signal transmission (device side)*

|   | Pin    | Assignment |             |
|---|--------|------------|-------------|
|   | 1      | +          | TD +        |
|   | 2      | -          | RD +        |
|   | 3      | +          | TD -        |
|   | 4      | -          | RD -        |
|   | Coding |            | Plug/socket |
| D |        | Socket     |             |

---

---



[www.addresses.endress.com](http://www.addresses.endress.com)

---