# Safety Instructions **Micropilot**

# FMR60B/62B/63B/66B/67B

Ex ia IIC T6...T1 Ga/Gb Ex ia IIC T6...T1 Gb







# Micropilot FMR60B/62B/63B/66B/67B

# Table of contents

About this document
Associated documentation
Supplementary documentation
Certificates and declarations
Manufacturer address 5
Extended order code 5
Safety instructions: General9
Safety instructions: Specific conditions of use
Safety instructions: Installation
Safety instructions: Zone separation Zone 0, Zone 1
Temperature tables
Connection data

# About this document



The document number of these Safety Instructions (XA) must match the information on the nameplate.

# Associated documentation

All documentation is available on the Internet: www.endress.com/Deviceviewer (enter the serial number from the nameplate).

To commission the device, please observe the Operating Instructions pertaining to the device:

#### HART

- BA02247F (FMR60B)
- BA02248F (FMR62B)
- BA02249F (FMR63B)
- BA02250F (FMR66B)
- BA02251F (FMR67B)

#### PROFIBUS PA

- BA02261F (FMR60B)
- BA02262F (FMR62B)
- BA02263F (FMR63B)
- BA02264F (FMR66B)
- BA02265F (FMR67B)

#### PROFINET

- BA02266F (FMR60B)
- BA02267F (FMR62B)
- BA02268F (FMR63B)
- BA02269F (FMR66B)
- BA02270F (FMR67B)

# Supplementary documentation

Explosion protection brochure: CP00021Z

The explosion protection brochure is available on the Internet: www.endress.com/Downloads

# Certificates and declarations

#### **NEPSI Declaration of Conformity**

Certificate number: GYJ23.1015X

Affixing the certificate number certifies conformity with the following standards (depending on the device version):

- GB/T 3836.1-2021
- GB/T 3836.4-2021
- IEC 60079-26:2021-02

# Manufacturer address

Endress+Hauser SE+Co. KG Hauptstraße 1

79689 Maulburg, Germany

Address of the manufacturing plant: See nameplate.

# Extended order code

The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional information about the nameplate is provided in the associated Operating Instructions.

#### Structure of the extended order code

FMR6xB	-	******	+	A*B*C*D*E*F*G*
(Device		(Basic		(Optional
type)		specifications)		specifications)

#### \* = Placeholder

At this position, an option (number or letter) selected from the specification is displayed instead of the placeholders.

# Basic specifications

The features that are absolutely essential for the device (mandatory features) are specified in the basic specifications. The number of positions depends on the number of features available. The selected option of a feature can consist of several positions.

#### Optional specifications

The optional specifications describe additional features for the device (optional features). The number of positions depends on the number of features available. The features have a 2-digit structure to aid identification (e.g. JA). The first digit (ID) stands for the feature group and consists of a number or a letter (e.g. J = Test, Certificate). The second digit constitutes the value that stands for the feature within the group (e.g. A = 3.1 material (wetted parts), inspection certificate).

More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

# Extended order code: Micropilot



The following specifications reproduce an extract from the product structure and are used to assign:

- This documentation to the device (using the extended order code on the nameplate).
- The device options cited in the document.

#### Device type

FMR60B, FMR62B, FMR63B, FMR66B, FMR67B

#### Basic specifications

Position 1,	Position 1, 2 (Approval)		
Selected option		Description	
FMR6xB	NB	NEPSI Ex ia IIC T6T1 Ga/Gb NEPSI Ex ia IIC T6T1 Gb	

Position 3,	Position 3, 4 (Output)		
Selected option		Description	
FMR6xB	ВА	2-wire, 4-20 mA HART	
	BB	2-wire, 4-20 mA HART, switch output <sup>1)</sup>	
	ВС	2-wire, 4-20 mA HART + 4 to 20 mA analog <sup>1)</sup>	
	DA	2-wire, PROFIBUS PA	
	FA	PROFINET over Ethernet-APL, 10Mbit/s	

#### 1) Only in connection with Position 6 = J, K, M, N

Position 5 (	Position 5 (Display, Operation)		
Selected option		Description	
FMR6xB	L	Prepared for display FHX50B + M12 connection	
	M	Prepared for display FHX50B + Gland M20	
	N	Prepared for display FHX50B + Thread NPT1/2	
	0	Prepared for display FHX50B + Thread M20	

Position 6 (Housing, Material)		
Selected option		Description
FMR6xB	Α	Single compartment; plastic
	В	Single compartment; Alu, coated
	D	Single compartment; 316L, hygiene
	J	Dual compartment; Alu, coated
	K	Dual compartment; 316L
	М	Dual compartment L-shape; Alu, coated
	N	Dual compartment L-shape; 316L, coated

Position 8 (	Position 8 (Application)		
Selected option		Description	
FMR60B	В	Process temperature -20+150°C	
FMR62B FMR63B	D	Process temperature -20+200°C	
FMR60B FMR66B FMR67B	F	Process temperature -40+80°C	
FMR60B FMR66B	Н	Process temperature -40+130°C	
FMR60B	J	Process temperature -40+150°C	
FMR62B FMR63B FMR67B	L	Process temperature -40+200°C	
FMR63B	Q	Process temperature -10150°C	
	S	Process temperature -10200°C	
FMR62B	N	Process temperature -40+280°C	
FMR67B	P	Process temperature -40+450°C	
FMR62B	R	Process temperature -60+150°C	
	T	Process temperature -196+200°C	
FMR62B	V	Process temperature -20+150°C, Steam application	
FMR63B	W	Process temperature -20+200°C, Steam application	

Position 9, 10 (Antenna)		
Selected option		Description
FMR60B FMR66B	BS	Encapsulated, PVDF, 40mm/1-1/2"
FMR60B FMR62B FMR66B FMR67B	GA	Drip-off, PTFE 50mm/2"
FMR60B FMR63B	GE	Integrated, PEEK, 20mm/3/4"
FMR60B	GF	Integrated, PEEK, 40mm/1-1/2"
FMR62B	GM	Cladded flush mount, PTFE, 50mm/2"
FMR63B	GN	Cladded flush mount, PTFE, 80mm/3"
FMR67B	GP	Flush mount, PTFE, 80mm/3"
FMR63B	GQ	Cladded, flush mount, PEEK, 20mm/3/4"
	GR	Cladded, flush mount, PEEK, 40mm/1-1/2"
FMR62B FMR67B	GT	Horn, 316L, 65mm/2.6"

Position 11, 12 (Process Connection, Sealing Surface)		ess Connection, Sealing Surface)
	Selected option	Description
	FMR67B JD	Alignment device, UNI flange

Position 16	Position 16 (Seal)		
Selected opt	tion	Description	
FMR60B FMR66B	A	PVDF encapsulated	
FMR62B FMR63B	В	PTFE cladded	
FMR63B	С	PEEK cladded	
FMR6xB	D	VKM Viton GLT	
FMR60B FMR62B	J	HNBR	
FMR60B	P	FFKM Kalrez	
FMR62B FMR63B	G	EPDM	
FMR62B FMR67B	U	Graphite	

Position 17	Position 17 (Air Purge Connection)		
Selected option		Description	
FMR67B	1	G1/4	
	2	NPT1/4	
	3	Adapter G1/4	
	4	Adapter NPT1/4	

#### Optional specifications

ID Jx, Kx (Test, Certificate, Declaration)								
Selected option		Description						
FMR62B JL FMR67B		Ambient temp. transmitter -50°C/-58°F, sensor see specification						

ID Nx, Ox (Accessory Mounted)							
Selected option		Description					
FMR6xB	NA	Overvoltage protection 1)					
	NC	Gas-tight feed through					

1) Only in connection with Position 6 = J, K, M, N

ID Px, Rx (A	ID Px, Rx (Accessory Enclosed)							
Selected op	tion	Description						
FMR6xB	PA	Weather protection cover, 316L 1)						
	PB	Weather protection cover, plastic <sup>2)</sup>						

- 1) Only in connection with Position 6 = J, K, M, N
- 2) Only in connection with Position 6 = B

#### Safety instructions: General

- The device is intended to be used in explosive atmospheres as defined in the scope of IEC 60079-0 or equivalent national standards. If no potentially explosive atmospheres are present or if additional protective measures have been taken: The device may be operated according to the manufacturer's specifications.
- Devices suitable for zone separation (marked Ga/Gb or Da/Db) are always suitable for installation in the less critical zone (Gb or Db).
  Due to space limitations the corresponding marking maybe not indicated on the nameplate.
- Comply with the installation and safety instructions in the Operating Instructions.

- Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device:
  - Be suitably qualified for their role and the tasks they perform
  - Be trained in explosion protection
  - Be familiar with national regulations
- For installation, use and maintenance of the device, users must also observe the requirements stated in the Operating Instructions and the standards:
  - GB 50257-2014: "Code for construction and acceptance of electric device for explosion atmospheres and fire hazard electrical equipment installation engineering".
  - GB/T 3836.13-2021: "Explosive atmospheres, Part 13: Equipment repair, overhaul, reclamation and modification".
  - GB/T 3836.15-2017: "Explosive atmospheres, Part 15: Electrical installations design, selection and erection".
  - GB/T 3836.16-2022: "Explosive atmospheres, Part 16: Electrical installations inspection and maintenance".
  - GB/T 3836.18-2017: "Explosive atmospheres, Part 18: Intrinsically safe electrical systems".
- Install the device according to the manufacturer's instructions and national regulations.
- Do not operate the device outside the specified electrical, thermal and mechanical parameters.
- Only use the device in media to which the wetted materials have sufficient durability.
- Avoid electrostatic charging:
  - Of plastic surfaces (e.g. enclosure, sensor element, special varnishing, attached additional plates, ...)
  - Of isolated capacities (e.g. isolated metallic plates)
- Alterations to the device can affect the explosion protection and must be carried out by staff authorized to perform such work by Endress+Hauser.

#### Safety instructions: Specific conditions of use

- To avoid electrostatic charging: Do not rub surfaces with a dry cloth.
- In the event of additional or alternative special varnishing on the enclosure or other metal parts or for adhesive plates:
  - Observe the danger of electrostatic charging and discharge.
  - Do not install in the vicinity of processes (≤ 0.5 m) generating strong electrostatic charges.
- Avoid sparks caused by impact and friction.
- In the case of process connections made of polymeric material or with polymeric coatings, avoid electrostatic charging of the plastic surfaces.
- Avoid electrostatic charging of the sensor (e.g. do not rub dry and install outside the filling flow).

Optional specification, ID Px, Rx = PAConnect the weather protection cover to the local potential equalization.

*Device type FMR67B and Basic specification, Position 11, 12 = JD* 

- In Zone 0, avoid sparks caused by impact and friction.
- Changing the position of the alignment device must be impossible:
  - After the alignment of the antenna via the pivot bracket
  - After tightening of the clamping flange
  - After setting the damping ring (torque 10 to 11 Nm)
- Degree of protection IP67 must be fulfilled.


Device type FMR67B and Basic specification, Position 17 = 1, 2, 3, 4

- In Zone 0, avoid sparks caused by impact and friction.
- After removing the air purge connection: Lock the opening with a suitable plug.

Torque: 6-7 Nm

Degree of protection IP67 must be fulfilled.

#### Safety instructions: Installation

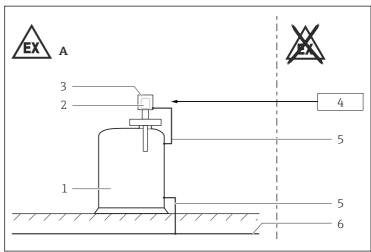

A002553

- A Zone 1
- 1 Tank: Zone 0. Zone 1
- 2 Electronic insert
- 3 Enclosure
- 4 Associated intrinsically safe power supply units
- 5 Potential equalization line
- 6 Local potential equalization

- After aligning (rotating) the enclosure, retighten the fixing screw.
- When the device is connected to certified intrinsically safe circuits of Category Ex ib for Equipment Groups IIC and IIB, the type of protection changes to Ex ib IIC and Ex ib IIB. Do not operate the sensor in Zone 0 if connecting to an intrinsically safe circuit of Category Ex ib.
- Continuous service temperature of the connecting cable:  $\geq T_a + 20 \text{ K}$ .
- Observe the pertinent guidelines when interconnecting intrinsically safe circuits.
- Observe the maximum process conditions according to the manufacturer's Operating Instructions.
- Install the device to exclude any mechanical damage or friction during the application. Pay particular attention to flow conditions and tank fittings.

Basic specification, Position 5 = N, O

Observe the requirements according to IEC/EN 60079-14 for conduit systems and the wiring- and installation instructions of the suitable Safety Instructions (XA). In addition, observe national regulations and standards for conduit systems.

#### Intrinsic safety

- The device is only suitable for connection to certified, intrinsically safe equipment with explosion protection Ex ia / Ex ib.
- $\blacksquare$  The intrinsically safe input power circuit of the device is isolated from ground. The dielectric strength is at least 500  $V_{\rm rms}.$

Optional specification, ID Nx, Ox = NA

The intrinsically safe input power circuit of the device is isolated from ground. The dielectric strength is at least 290  $V_{\text{rms}}.\;$ 

# Potential equalization

Integrate the device into the local potential equalization.

Safety instructions: Zone separation Zone 0, Zone 1 Basic specification, Position 9, 10 = BS

Material specification of the separating element:

- PVDF plastic: ≥ 1 mm
- Maximum process temperature T<sub>p</sub>: 130 °C
- Maximum Working Pressure (MWP): 3 bar

Basic specification, Position 9, 10 = Gx

- The separating element is not directly in contact with the process (process-wetted).
- Material specification of the separating element:
  - Glass feedthrough:  $\geq 1 \text{ mm}$
  - Stainless steel weld: > 1 mm


Basic specification, Position 9, 10 in connection with Position 16 The sealing is directly in contact with the process (process-wetted).

With *Optional specification, ID Nx, Ox = NC* The device has a partition wall.

Without Optional specification, ID Nx, Ox = NC

- The device has no partition wall.
- The device is suitable for installation in a partition wall within the scope of the resistance of the ordered sealing material and in compliance with the permissible operating conditions (T<sub>p</sub>, T<sub>a</sub> and maximum working pressure) in order to ensure safe zone separation (IP67) by the device.

# Temperature tables

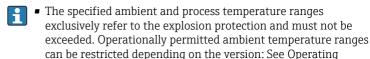

- Instructions.Do not exceed the max. ambient temperature at the enclosure.
- Basic specification, Position 16 = J, P Lower limit of the ambient temperature for explosion protection changes to -20 °C.

Optional specification, ID Jx, Kx = JLLower limit of the ambient temperature for explosion protection changes to -50 °C.

Optional specification, ID Px, Rx = PBWhen using the weather protection cover: Reduce the admissible ambient temperature by 10 K.

# **Description notes**


Unless otherwise indicated, the positions always refer to the basic specification.

1st column: Temperature classes T6 (85 °C) to T1 (450 °C)

Column P1 to P6: Position (temperature value) on the axes of the derating

- T<sub>a</sub>: Ambient temperature in °C
- $T_p$ : Process temperature in °C

# Example diagrams of possible deratings

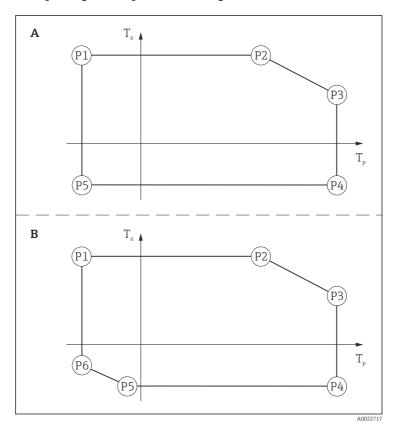

# Basic specification, Position 3, 4 = BA, DA, FA (Channel 1)

Position 6 (Housing, Material)
A, B, D, J, K, M, N

# FMR60B, FMR66B

Position 8 (Application)	
F, H	

Position 9, 10 (Antenna)	
BS	

Depending on the enclosure, higher temperatures are possible: up to 3 K.

	P1		P2		Р3		P4		P5		P6	
	T <sub>p</sub>	Ta	Tp	Ta	Tp	Ta	Tp	Ta	T <sub>p</sub>	Ta	Tp	Ta
Т6	-40	60	60	60	80	55	80	-40	-40	-40	1	-
T5	-40	65	65	65	95 <sup>1)</sup>	61	95 <sup>1)</sup>	-40	-40	-40	-	-
T4T1	-40	65	65	65	130 <sup>1)</sup>	54	130 <sup>1)</sup>	-40	-40	-40	ī	-

1) Position 8 = F: 80 °C

# FMR60B, FMR62B, FMR63B, FMR66B, FMR67B

#### Position 8 (Application)

B, F, H, J, Q, V

#### Position 9, 10 (Antenna)

GA, GE, GF, GM, GN, GP, GQ, GR

Depending on the enclosure, higher temperatures are possible: up to 13 K.

	P1		P2		Р3		P4		P5		P6	
	T <sub>p</sub>	Ta	Tp	Ta	Tp	Ta	T <sub>p</sub>	Ta	T <sub>p</sub>	Ta	Tp	Ta
Т6	-40 <sup>1) 2)</sup>	60	60	60	80	51	80	-40	-40 <sup>1) 2)</sup>	-40	-	-
T5	-40 <sup>1) 2)</sup>	65	65	65	95 <sup>3)</sup>	53	95 <sup>3)</sup>	-40	-40 <sup>1) 2)</sup>	-40	-	-
T4T1	-40 <sup>1) 2)</sup>	65	65	65	130 <sup>3)</sup>	41	130 <sup>3)</sup>	-40	-40 <sup>1) 2)</sup>	-40	-	-

- 1) Position  $8 = Q: -10 \,^{\circ}C$
- 2) Position 8 = B, V: -20 °C
- 3) Position 8 = F: 80 °C

#### Position 8 (Application)

R

#### Position 9, 10 (Antenna)

GA, GE, GF, GM, GN, GP, GQ, GR

Depending on the enclosure, higher temperatures are possible: up to 13 K.

	P1		P2		P3		P4		P5		P6	
	T <sub>p</sub>	Ta	Tp	Ta	T <sub>p</sub>	Ta	T <sub>p</sub>	Ta	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>
Т6	-60	60	60	60	80	51	80	-40	-40	-40	-60	-28
T5	-60	65	65	65	95	53	95	-40	-40	-40	-60	-28
T4T1	-60	65	65	65	130	41	130	-40	-40	-40	-60	-28

# FMR60B, FMR62B, FMR63B, FMR67B

# Position 8 (Application)

D, L, S, T, W

#### Position 9, 10 (Antenna)

GA, GE, GF, GM, GN, GP, GQ, GR

Depending on the enclosure, higher temperatures are possible: up to 13 K.

	P1		P2		P3		P4		P5		P6	
	T <sub>p</sub>	Ta	Tp	Ta	Tp	Ta	Tp	Ta	T <sub>p</sub>	Ta	T <sub>p</sub>	Ta
Т6	-196 <sup>1) 2) 3)</sup>	60	60	60	80	53	80	-40	-50 <sup>1) 2) 3)</sup>	-40	-196	42
T5	-196 <sup>1) 2) 3)</sup>	65	65	65	95	55	95	-40	-50 <sup>1) 2) 3)</sup>	-40	-196	42
T4	-196 <sup>1) 2) 3)</sup>	65	65	65	130	43	130	-40	-50 <sup>1) 2) 3)</sup>	-40	-196	42
T3T1	-196 <sup>1) 2) 3)</sup>	65	65	65	140	40	140	-40	-50 <sup>1) 2) 3)</sup>	-40	-196	42

- 1) Position 8 = S: -10 °C; P6 not relevant
- 2) Position 8 = D, W: -20 °C; P6 not relevant
- 3) Position 8 = L: -40 °C; P6 not relevant

# FMR62B, FMR67B

	Position 8	(Application)
--	------------	---------------

N, T

#### Position 9, 10 (Antenna)

GT

Depending on the enclosure, higher temperatures are possible: up to 12 K.

	P1		P2		Р3		P4		P5		P6	
	Tp	Ta	Tp	Ta	T <sub>p</sub>	Ta	T <sub>p</sub>	Ta	T <sub>p</sub>	Ta	T <sub>p</sub>	Ta
Т6	-196 <sup>1)</sup>	60	60	60	80	57	80	-40	-50 <sup>1)</sup>	-40	-196	-9
T5	-196 <sup>1)</sup>	65	65	65	95	60	95	-40	-50 <sup>1)</sup>	-40	-196	-9
T4	-196 <sup>1)</sup>	65	65	65	130	55	130	-40	-50 <sup>1)</sup>	-40	-196	-9
Т3	-196 <sup>1)</sup>	65	65	65	195	46	195	-40	-50 <sup>1)</sup>	-40	-196	-9
T2T1	-196 <sup>1)</sup>	65	65	65	240 <sup>2)</sup>	40	240 <sup>2)</sup>	-40	-50 <sup>1)</sup>	-40	-196	-9

Position 8 = N: -40 °C; P6 not relevant Position 8 = T: 200 °C

1) 2)

Position 8	(Application)	١
------------	---------------	---

P

# Position 9, 10 (Antenna)

GT

Depending on the enclosure, higher temperatures are possible: up to  $11\,\mathrm{K}$ .

	P1		P2		P3		P4		P5		P6	
	T <sub>p</sub>	Ta	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	Ta						
T6	-40	60	60	60	80	57	80	-40	-40	-40	-	-
T5	-40	65	65	65	95	60	95	-40	-40	-40	-	-
T4	-40	65	65	65	130	55	130	-40	-40	-40	-	-
T3	-40	65	65	65	195	46	195	-40	-40	-40	-	-
T2	-40	65	65	65	240	40	240	-40	-40	-40	-	-
T1	-40	65	65	65	320	33	320	-40	-40	-40	-	-

# Basic specification, Position 3, 4 = BB, BC (Channel 2)

Position 6 (Housing, Material)
J, K, M, N

# FMR60B, FMR66B

Position 8 (Application)	
F, H	

Position 9, 10 (Antenna)	
BS	

Depending on the enclosure, higher temperatures are possible: up to 1 K.  $\,$ 

	P1		P2		Р3		P4		P5		P6	
	T <sub>p</sub>	Ta	Tp	Ta	T <sub>p</sub>	Ta	T <sub>p</sub>	Ta	T <sub>p</sub>	Ta	Tp	Ta
Т6	-40	58	58	58	80	55	80	-40	-40	-40	-	-
T5	-40	63	63	63	95 <sup>1)</sup>	60	95 <sup>1)</sup>	-40	-40	-40	-	-
T4T1	-40	63	63	63	130 <sup>1)</sup>	55	130 <sup>1)</sup>	-40	-40	-40	-	-

1) Position 8 = F: 80 °C

# FMR60B, FMR62B, FMR63B, FMR66B, FMR67B

#### Position 8 (Application)

B, F, H, J, Q, V

#### Position 9, 10 (Antenna)

GA, GE, GF, GM, GN, GP, GQ, GR

Depending on the enclosure, higher temperatures are possible: up to 4 K.

	P1 P2		P2	P2 P3		P4			P5	P6		
	Tp	Ta	Tp	Ta	Tp	Ta	Tp	Ta	T <sub>p</sub>	Ta	Tp	Ta
T6	-40 <sup>1) 2)</sup>	58	58	58	80	54	80	-40	-40 <sup>1) 2)</sup>	-40	-	-
T5	-40 <sup>1) 2)</sup>	63	63	63	95 <sup>3)</sup>	57	95 <sup>3)</sup>	-40	-40 <sup>1) 2)</sup>	-40	-	-
T4	-40 <sup>1) 2)</sup>	63	63	63	130 <sup>3)</sup>	51	130 <sup>3)</sup>	-40	-40 <sup>1) 2)</sup>	-40	-	-
T3T1	-40 <sup>1) 2)</sup>	63	63	63	150 <sup>3)4)</sup>	44	150 <sup>3) 4)</sup>	-40	-40 <sup>1) 2)</sup>	-40	-	-

- 1) Position  $8 = Q: -10 \,^{\circ}C$
- 2) Position 8 = B, V: -20 °C
- 3) Position  $8 = F: 80 ^{\circ}C$
- 4) Position 8 = H: 130 °C

#### Position 8 (Application)

R

#### Position 9, 10 (Antenna)

GA, GE, GF, GM, GN, GP, GQ, GR

Depending on the enclosure, higher temperatures are possible: up to 4 K.

	P1		P2		P3	P3		P4			P6	
	T <sub>p</sub>	Ta	Tp	Ta	T <sub>p</sub>	Ta	T <sub>p</sub>	Ta	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	Ta
Т6	-60	58	58	58	80	54	80	-40	-40	-40	-60	-28
T5	-60	63	63	63	95	57	95	-40	-40	-40	-60	-28
T4	-60	63	63	63	130	51	130	-40	-40	-40	-60	-28
T3T1	-60	63	63	63	150	44	150	-40	-40	-40	-60	-28

# FMR60B, FMR62B, FMR63B, FMR67B

# Position 8 (Application)

D, L, S, T, W

#### Position 9, 10 (Antenna)

GA, GE, GF, GM, GN, GP, GQ, GR

Depending on the enclosure, higher temperatures are possible: up to  $10\ \text{K}$ .

	P1		P2		Р3	P3			P5		P6	
	T <sub>p</sub>	Ta	Tp	Ta	T <sub>p</sub>	Ta	T <sub>p</sub>	Ta	T <sub>p</sub>	Ta	Tp	Ta
Т6	-196 <sup>1) 2) 3)</sup>	58	58	58	80	55	80	-40	-50 <sup>1) 2) 3)</sup>	-40	-196	17
T5	-196 <sup>1) 2) 3)</sup>	63	63	63	95	58	95	-40	-50 <sup>1) 2) 3)</sup>	-40	-196	17
T4	-196 <sup>1) 2) 3)</sup>	63	63	63	130	53	130	-40	-50 <sup>1) 2) 3)</sup>	-40	-196	17
Т3	-196 <sup>1) 2) 3)</sup>	63	63	63	195	41	195	-40	-50 <sup>1) 2) 3)</sup>	-40	-196	17
T2T1	-196 <sup>1) 2) 3)</sup>	63	63	63	200	39	200	-40	-50 <sup>1) 2) 3)</sup>	-40	-196	17

<sup>1)</sup> Position 8 = S: -10 °C; P6 not relevant

<sup>2)</sup> Position 8 = D, W: -20 °C; P6 not relevant

<sup>3)</sup> Position 8 = L: -40 °C; P6 not relevant

# FMR62B, FMR67B

N, T

#### Position 9, 10 (Antenna)

GT

Depending on the enclosure, higher temperatures are possible: up to 3 K.

	P1		P2		P3		P4		P5		P6	
	Tp	Ta	Tp	Ta	T <sub>p</sub>	Ta	T <sub>p</sub>	Ta	T <sub>p</sub>	Ta	T <sub>p</sub>	Ta
Т6	-196 <sup>1)</sup>	58	58	58	80	56	80	-40	-50 <sup>1)</sup>	-40	-196	-18
T5	-196 <sup>1)</sup>	63	63	63	95	61	95	-40	-50 <sup>1)</sup>	-40	-196	-18
T4	-196 <sup>1)</sup>	63	63	63	130	58	130	-40	-50 <sup>1)</sup>	-40	-196	-18
T3	-196 <sup>1)</sup>	63	63	63	195	55	195	-40	-50 <sup>1)</sup>	-40	-196	-18
T2T1	-196 <sup>1)</sup>	63	63	63	280 <sup>2)</sup>	49	280 <sup>2)</sup>	-40	-50 <sup>1)</sup>	-40	-196	-18

Position 8 = N: -40 °C; P6 not relevant Position 8 = T: 200 °C

<sup>1)</sup> 2)

# Position 8 (Application)

Р

#### Position 9, 10 (Antenna)

GT

Depending on the enclosure, higher temperatures are possible: up to 6 K.

	P1		P2		Р3	Р3		P4			P6	
	T <sub>p</sub>	Ta	T <sub>p</sub>	Ta	T <sub>p</sub>	Ta						
Т6	-40	58	58	58	80	56	80	-40	-40	-40	-	-
T5	-40	63	63	63	95	61	95	-40	-40	-40	-	-
T4	-40	63	63	63	130	58	130	-40	-40	-40	-	-
T3	-40	63	63	63	195	55	195	-40	-40	-40	-	-
T2	-40	63	63	63	290	49	290	-40	-40	-40	-	-
T1	-40	63	63	63	440	33	440	-40	-40	-40	-	-

#### Connection data

Basic specification, Position 3, 4 = BA, BB, BC

Power supply	
Channel 1	Channel 2 (only <i>BB</i> , <i>BC</i> )
$\begin{aligned} &U_i \leq 30 \ V_{DC} \\ &I_i \leq 300 \ mA \\ &P_i \leq 1 \ W \\ &C_i \leq 10 \ nF \\ &L_i = 0 \end{aligned}$	$\begin{split} &U_i \leq 30 \ V_{DC} \\ &I_i \leq 300 \ mA \\ &P_i \leq 1 \ W \\ &C_i \leq 10 \ nF \\ &L_i = 0 \end{split}$

# *Basic specification, Position 3 = DA*

Power supply	
FISCO	Entity
$\begin{split} &U_i \leq 17.5 \ V_{DC} \\ &I_i \leq 380 \ mA \\ &P_i \leq 5.32 \ W \\ &C_i \leq 5 \ nF \\ &L_i = 0 \end{split}$	$\begin{split} &U_i \leq 24 \ V_{DC} \\ &I_i \leq 300 \ mA \\ &P_i \leq 1.2 \ W \\ &C_i \leq 5 \ nF \\ &L_i = 0 \end{split}$

# Basic specification, Position 3 = FA

Power supply	
2-WISE	Entity
$\begin{split} &U_{i} \leq 17.5 \ V_{DC} \\ &I_{i} \leq 380 \ mA \\ &P_{i} \leq 5.32 \ W \\ &C_{i} \leq 5 \ nF \\ &L_{i} = 0 \end{split}$	$\begin{split} &U_i \leq 17.5 \ V_{DC} \\ &I_i \leq 300 \ mA \\ &P_i \leq 1.2 \ W \\ &C_i \leq 5 \ nF \\ &L_i = 0 \end{split}$

In connection with: Basic specification, Position 5 = L, M, N, O Installation according to the specifications of FHX50B.



Only the type of protection suitable for the device shall be connected!





www.addresses.endress.com