

# Description of Device Parameters

## Tankside Monitor NRF81

Tank Gauging





## Table of contents

<b>1</b>	<b>About this document .....</b>	<b>4</b>
1.1	Document function .....	4
1.2	Symbols .....	4
1.3	Documentation .....	6
<b>2</b>	<b>Overview of the operating menu .....</b>	<b>7</b>
<b>3</b>	<b>The "Expert" menu .....</b>	<b>25</b>
3.1	"System" submenu .....	27
3.2	"Input/output" submenu .....	52
3.3	"Communication" submenu .....	112
3.4	"Application" submenu .....	154
3.5	"Tank values" submenu .....	217
3.6	"Diagnostics" submenu .....	229
	<b>Index .....</b>	<b>257</b>

# 1 About this document

## 1.1 Document function

The document is part of the Operating Instructions and serves as a reference for parameters, providing a detailed explanation of each individual parameter of the operating menu.

## 1.2 Symbols

### 1.2.1 Safety symbols

#### DANGER

This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.

#### WARNING

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.

#### CAUTION

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.

#### NOTICE

This symbol contains information on procedures and other facts which do not result in personal injury.

### 1.2.2 Electrical symbols



Alternating current



Direct current and alternating current



Direct current



Ground connection

A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.

#### Protective earth (PE)

Ground terminals that must be connected to ground prior to establishing any other connections.

The ground terminals are located on the interior and exterior of the device:

- Interior ground terminal: protective earth is connected to the mains supply.
- Exterior ground terminal: device is connected to the plant grounding system.

### 1.2.3 Tool symbols



Phillips head screwdriver



Flat blade screwdriver



Torx screwdriver



Allen key



Open-ended wrench

#### 1.2.4 Symbols for certain types of information and graphics

**Permitted**

Procedures, processes or actions that are permitted

**Preferred**

Procedures, processes or actions that are preferred

**Forbidden**

Procedures, processes or actions that are forbidden

**Tip**

Indicates additional information



Reference to documentation



Reference to graphic



Notice or individual step to be observed

1, 2, 3.

Series of steps



Result of a step



Visual inspection



Operation via operating tool



Write-protected parameter

1, 2, 3, ...

Item numbers

**A, B, C, ...**

Views

→ **Safety instructions**

Observe the safety instructions contained in the associated Operating Instructions

**Temperature resistance of the connection cables**

Specifies the minimum value of the temperature resistance of the connection cables

## 1.3 Documentation

The following documentation types are available in the Downloads area of the Endress +Hauser website ([www.endress.com/downloads](http://www.endress.com/downloads)):

-  For an overview of the scope of the associated Technical Documentation, refer to the following:
- *Device Viewer* ([www.endress.com/deviceviewer](http://www.endress.com/deviceviewer)): Enter the serial number from the nameplate
  - *Endress+Hauser Operations app*: Enter serial number from nameplate or scan matrix code on nameplate.

### 1.3.1 Technical Information (TI)

#### Planning aid

The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.

### 1.3.2 Brief Operating Instructions (KA)

#### Guide that takes you quickly to the 1st measured value

The Brief Operating Instructions contain all the essential information from incoming acceptance to initial commissioning.

### 1.3.3 Operating Instructions (BA)

The Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.

It also contains a detailed explanation of each individual parameter in the operating menu (except the **Expert** menu). The description is aimed at those who work with the device over the entire life cycle and perform specific configurations.

### 1.3.4 Description of Device Parameters (GP)

The Description of Device Parameters provides a detailed explanation of each individual parameter in the 2nd part of the operating menu: the **Expert** menu. It contains all the device parameters and allows direct access to the parameters by entering a specific code. The description is aimed at those who work with the device over the entire life cycle and perform specific configurations.

### 1.3.5 Safety Instructions (XA)

Depending on the approval, the following Safety Instructions (XA) are supplied with the device. They are an integral part of the Operating Instructions.

-  The nameplate indicates the Safety Instructions (XA) that are relevant to the device.

### 1.3.6 Installation instructions (EA)

Installation Instruction are used to replace a faulty unit with a functioning unit of the same type.

## 2 Overview of the operating menu



- The following table lists all parameters the **Expert** menu (→ 7) may contain. The page number refers to where a description of the parameter can be found.
- Depending on the device version and parametrization some parameters will not be available in a given situation. For details on the conditions refer to the "Prerequisite" category in the description of the respective parameter.
- The representation essentially corresponds to the menu seen when using an operating tool (e.g. FieldCare). On the local display there may be minor differences in the menu structure. Details are mentioned in the description of the respective submenu.

Navigation

Expert

<b>► Expert</b>	
Locking status	→ 25
Access status display	→ 26
User role	→ 26
Enter access code	→ 26
<b>► System</b>	→ 27
<b>► Display</b>	→ 28
Language	→ 28
Format display	→ 29
Value 1 to 4 display	→ 30
Decimal places 1 to 4	→ 31
Separator	→ 32
Number format	→ 32
Header	→ 32
Header text	→ 33
Display interval	→ 33
Display damping	→ 34
Backlight	→ 34
Contrast display	→ 34

<b>► System units</b>	→  35
Units preset	→  35
Distance unit	→  36
Pressure unit	→  36
Temperature unit	→  36
Density unit	→  37
Decimal places length	→  37
Decimal places pressure	→  37
Decimal places temperature	→  38
Decimal places density	→  38
<b>► Date / time</b>	→  42
Date/time	→  43
Set date	→  43
Year	→  43
Month	→  44
Day	→  44
Hour	→  44
Minute	→  45
<b>► Administration</b>	→  48
Define access code	→  49
Activate SW option	→  49
Software option overview	→  49
Device reset	→  50

► Input/output	→  52
► HART devices	→  53
Number of devices	→  53
► HART Device(s)	→  54
Device name	→  55
Polling address	→  55
Device tag	→  55
Operating mode	→  55
Communication status	→  56
Status signal	→  56
#blank#(HART PV - description dependent on device)	→  57
#blank#(HART SV - description dependent on device)	→  57
#blank#(HART TV - description dependent on device)	→  57
#blank#(HART QV - description dependent on device)	→  57
HART device PV mA	→  58
HART device PV %	→  58
Output pressure	→  58
Output density	→  59
Output temperature	→  59
Output vapor temperature	→  59
Output level	→  60
► HART device information	→  61
► Element values	→  67

▶ Diagnostics	→  68
▶ Diagnostics	→  69
▶ NMT device config	→  71
▶ NMT device config	→  77
▶ Forget device	→  82
Forget device	→  82
▶ #blank#	→  82
Operating mode	→  83
Current	→  83
▶ Analog IP	→  84
Operating mode	→  85
RTD type	→  85
Ohms offset	→  86
Thermocouple type	→  86
RTD connection type	→  87
Process value	→  87
Process variable	→  87
0 % value	→  88
100 % value	→  88
Input value percent	→  88
Input value	→  89
Temperature offset after conversion	→  89
Minimum probe temperature	→  89
Maximum probe temperature	→  90
Probe position	→  90

Calibration type AIP	→  91
Active calibration	→  91
Damping factor	→  91
Gauge current	→  92
<b>► Analog I/O</b>	→  93
Operating mode	→  94
Current span	→  95
Fixed current	→  96
Analog input source	→  96
Failure mode	→  97
Error value	→  98
Output out of range	→  98
Error on event	→  98
Input value	→  99
0 % value	→  99
100 % value	→  99
Input value %	→  100
Output value	→  100
Readback value	→  100
Feedback threshold	→  101
Process variable	→  101
Analog input 0% value	→  101
Analog input 100% value	→  102
Error event type	→  102
Process value	→  102

Input value in mA	→ ↗ 103
Input value percent	→ ↗ 103
Damping factor	→ ↗ 103
Calibration	→ ↗ 104
Active calibration	→ ↗ 104
Used for SIL/WHG	→ ↗ 104
► Digital Xx-x	→ ↗ 106
Operating mode	→ ↗ 107
Digital input source	→ ↗ 107
Input value	→ ↗ 108
Contact type	→ ↗ 108
Output simulation	→ ↗ 109
Output value	→ ↗ 110
Readback value	→ ↗ 110
Error on event	→ ↗ 110
Damping factor	→ ↗ 111
Used for SIL/WHG	→ ↗ 111
► Communication	→ ↗ 112
► "Modbus Xx-x" / "V1 Xx-x" / WM550 submenu	
Communication interface protocol	→ ↗ 114
Modbus value 1 to 4	→ ↗ 114
Modbus discrete 1 to 4	→ ↗ 114
► Configuration	→ ↗ 115
Baudrate	→ ↗ 115

Parity	→  116
Modbus address	→  116
Float swap mode	→  116
Invalid data	→  117
Word type	→  117
CRC seed	→  117
Old TSM mode	→  118
Bus termination	→  118
<b>► Integer conversion</b>	→  119
Level 0%	→  119
Level 100%	→  120
Temperature 0%	→  120
Temperature 100%	→  120
Pressure 0%	→  121
Pressure 100%	→  121
Density 0%	→  121
Density 100%	→  122
User 0%	→  122
User 100%	→  122
Percent 0%	→  123
Percent 100%	→  123
<b>► User value source</b>	→  124
User value 1 to 8 source	→  124
<b>► GP values</b>	→  125
GP 1 value 0%	→  125

GP 1 value 100%	→ ↗ 125
GP 2 value 0%	→ ↗ 126
GP 2 value 100%	→ ↗ 126
GP 3 value 0%	→ ↗ 126
GP 3 value 100%	→ ↗ 127
GP 4 value 0%	→ ↗ 127
GP 4 value 100%	→ ↗ 127
► Discrete selector	→ ↗ 128
Discrete 1 to 8 selector	→ ↗ 128
► Configuration	→ ↗ 129
Communication interface protocol variant	→ ↗ 129
V1 address(V1 / MDP)	→ ↗ 129
V1 address(BBB / MIC+232)	→ ↗ 130
Level mapping	→ ↗ 130
Line impedance	→ ↗ 131
Compatibility mode	→ ↗ 131
► V1 input selector	→ ↗ 132
User value 1 to 8 source	→ ↗ 132
Alarm 1 input source	→ ↗ 133
Alarm 2 input source	→ ↗ 133
Alarm 3 input source	→ ↗ 134
Alarm 4 input source	→ ↗ 134
SP 1 value selector	→ ↗ 135
SP 2 value selector	→ ↗ 135

SP 3 value selector	→  136
SP 4 value selector	→  136
Value percent selector	→  137
<b>► Configuration</b>	→  137
Baudrate	→  137
WM550 address	→  138
Software ID	→  138
Compatibility mode	→  138
<b>► WM550 input selector</b>	→  139
Discrete 1 to 4 selector (13260-1 to 4)	→  139
<b>► HART output</b>	→  140
<b>► HART configuration</b>	→  141
System polling address	→  141
No. of preambles	→  142
PV source	→  142
Assign PV	→  142
0 % value	→  143
100 % value	→  144
PV mA selector	→  144
Primary variable (PV)	→  144
Percent of range	→  145
Assign SV	→  145
Secondary variable (SV)	→  146
Assign TV	→  146
Tertiary variable (TV)	→  147

	Assign QV	→  147
	Quaternary variable (QV)	→  148
<b>► Information</b>		→  149
	HART short tag	→  149
	Device tag	→  150
	Device revision	→  150
	Device ID	→  150
	Device type	→  151
	Manufacturer ID	→  151
	HART revision	→  151
	HART descriptor	→  152
	HART message	→  152
	Hardware revision	→  152
	Software revision	→  153
	HART date code	→  153
<b>► Application</b>		→  154
<b>► Tank configuration</b>		→  154
<b>► Level</b>		→  155
	Level source (14601)	→  155
	Operation mode (14656)	→  156
	Tank reference height (14603)	→  156
	Tank level (14655)	→  156
	Upper interface level (15003)	→  157
	Lower interface level (15004)	→  157
	Water level source (14971)	→  157

Water level (14970)	→  157
Manual water level (14959)	→  158
<b>► Temperature</b>	→  159
Liquid temp source	→  159
Manual liquid temperature	→  160
Liquid temperature	→  160
Air temperature source	→  160
Manual air temperature	→  161
Air temperature	→  161
Vapor temp source	→  161
Manual vapor temperature	→  162
Vapor temperature	→  162
<b>► Density</b>	→  163
Observed density source (13454)	→  163
Observed density (13452)	→  164
Air density (14980)	→  164
Vapor density (14981)	→  164
Upper density input source (15006)	→  164
Manual upper density (14998)	→  165
Measured upper density (15001)	→  166
Measured middle density (14997)	→  166
Measured lower density (15002)	→  166
Water density (13757)	→  166
<b>► Pressure</b>	→  167
P1 (bottom) source	→  168

P1 (bottom)	→  168
P1 (bottom) manual pressure	→  168
P1 position	→  169
P1 offset	→  169
P1 absolute / gauge	→  169
P2 (middle) source	→  170
P2 (middle)	→  170
P2 (middle) manual pressure	→  170
P2 offset	→  171
P1-2 distance	→  171
P2 absolute / gauge	→  171
P3 (top) source	→  172
P3 (top)	→  172
P3 (top) manual pressure	→  172
P3 position	→  173
P3 offset	→  173
P3 absolute / gauge	→  173
Ambient pressure	→  174
<b>► GP values</b>	→  175
GP 1 to 4 source (14989-1 to 4)	→  175
GP 1 to 4 name (14963-1 to 4)	→  176
GP Value 1 (14966)	→  176
GP Value 2 (14967)	→  176
GP Value 3 (14968)	→  176
GP Value 4 (14969)	→  177

▶ Tank calculation	→ 177
Local gravity	→ 177
▶ HyTD	→ 180
HyTD correction value	→ 180
HyTD mode	→ 180
Starting level	→ 180
Deformation factor	→ 181
▶ CTS <sub>h</sub>	→ 185
CTS <sub>h</sub> correction value	→ 185
CTS <sub>h</sub> mode	→ 186
Covered tank	→ 186
Stilling well	→ 186
Calibration temperature	→ 187
Linear expansion coefficient	→ 187
▶ CLG	→ 188
CLG mode	→ 189
CLG to tank level	→ 189
Gas 1 to 4	→ 190
Gas 1 to 4 refractive index	→ 190
Gas 1 to 4 ratio	→ 190
CLG correction value	→ 191
CLG corrected level	→ 191
▶ HTMS	→ 204
HTMS mode	→ 204
Manual density	→ 205

Density value	→  205
Minimum level	→  205
Minimum pressure	→  206
Safety distance	→  206
Hysteresis	→  206
Water density	→  207
<b>► Alarm</b>	→  208
<b>► Alarm</b>	→  208
Alarm mode	→  209
Error value	→  210
Alarm value source	→  211
Alarm value	→  212
HH alarm value	→  212
H alarm value	→  212
L alarm value	→  213
LL alarm value	→  213
HH alarm	→  213
H alarm	→  214
HH+H alarm	→  214
L alarm	→  214
LL alarm	→  214
LL+L alarm	→  215
Any error	→  215
Clear alarm	→  215

	Alarm hysteresis	→  216
	Damping factor	→  216
► Tank values		→  217
► Level		→  217
	Tank level	→  217
	Tank Level %	→  218
	Tank ullage	→  218
	Tank ullage %	→  218
	Upper interface level	→  218
	Lower interface level	→  219
	Bottom level	→  219
	Water level	→  219
	Measured level	→  219
► Temperature		→  220
	Liquid temperature	→  220
	Vapor temperature	→  220
	Air temperature	→  221
► NMT element values		→  221
► Element temperature		→  221
► Element position		→  221
► Density		→  223
	Observed density	→  223
	Observed density temperature	→  223
	Vapor density	→  224
	Air density	→  224

Measured upper density	→  224
Measured middle density	→  224
Measured lower density	→  225
<b>► Pressure</b>	→  226
P1 (bottom)	→  226
P2 (middle)	→  226
P3 (top)	→  226
<b>► GP values</b>	→  227
GP 1 to 4 name (14963-1 to 4)	→  227
GP Value 1 (14966)	→  227
GP Value 2 (14967)	→  227
GP Value 3 (14968)	→  228
GP Value 4 (14969)	→  228
<b>► Diagnostics</b>	→  229
Actual diagnostics	→  231
Timestamp	→  231
Previous diagnostics	→  232
Timestamp	→  232
Operating time from restart	→  232
Operating time	→  233
Date/time	→  233
<b>► Diagnostic list</b>	→  234
Diagnostics 1 to 5 (0692-1 to 5)	→  234
Timestamp 1 to 5 (0683-1 to 5)	→  234

<b>► Simulation</b>	→  237
Device alarm simulation	→  237
Diagnostic event simulation	→  237
Current output 1 to 2 simulation	→  238
Simulation value	→  238
<b>► Device information</b>	→  239
Device tag	→  239
Serial number	→  240
Firmware version	→  240
Firmware CRC	→  240
Weight and measures configuration CRC	→  240
Device name	→  241
Order code	→  241
Extended order code 1 to 3 (0023-1 to 3)	→  241
ENP version	→  241
Device type	→  242
Build version	→  242
Module type	→  242
Communication Slot	→  242
Recovery state	→  243
<b>► Board info</b>	→  244
Date/time	→  244
System temperature	→  244
W&M lock switch	→  244

► Data logging	→ ↗ 246
Assign channel 1 to 4 (0851–1 to 4)	→ ↗ 247
Logging interval	→ ↗ 248
Clear logging data	→ ↗ 249
► LRC	→ ↗ 251
► LRC 1 to 2	→ ↗ 251
LRC Mode	→ ↗ 251
Allowed difference	→ ↗ 251
Check fail threshold	→ ↗ 252
Reference level source	→ ↗ 252
Reference switch source	→ ↗ 253
Reference switch mode	→ ↗ 253
Reference level	→ ↗ 253
Reference switch level	→ ↗ 254
Reference point level	→ ↗ 254
Reference switch state	→ ↗ 254
Start reference measurement	→ ↗ 255
Check level	→ ↗ 255
Check status	→ ↗ 255
Check timestamp	→ ↗ 256

### 3 The "Expert" menu

*Navigation*

Expert

Expert	
Locking status	→ 25
Access status display	→ 26
User role	→ 26
Enter access code	→ 26
▶ System	→ 27
▶ Input/output	→ 52
▶ Communication	→ 112
▶ Application	→ 154
▶ Tank values	→ 217
▶ Diagnostics	→ 229

---

#### Locking status

---

**Navigation**

Expert → Locking status (0004)

**Description**

Indicates the type of locking.

"Hardware locked" (HW)

The device is locked by the "WP" switch on the main electronics module. To unlock, set the switch into the OFF position.

"WHG locked" (SW)

Unlock the device by entering the appropriate access code in "Enter access code".

"SIL locked" (SW)

Unlock the device by entering the appropriate access code in "Enter access code".

"Temporarily locked" (SW)

The device is temporarily locked by processes in the device (e.g. data upload/download, reset). The device will automatically be unlocked after completion of these processes.

**Additional information**

Read access	Operator
Write access	-

---

## Access status display

---

**Navigation**   Expert → Access stat.disp (0091)

**Prerequisite** The device has a local display.

**Description** Indicates access authorization to parameters via local display.

**Additional information**

Read access	Operator
Write access	-

 The access authorization can be changed via the **Enter access code** parameter ( $\rightarrow$   26).

 If an additional write protection is active, this restricts the current access authorization even further. The write protection status can be viewed via the **Locking status** parameter ( $\rightarrow$   25).

---

## User role

---

**Navigation**   Expert → User role (0005)

**Description** Shows the access authorization to the parameters via the operating tool

**Additional information**

Read access	Operator
Write access	-

---

## Enter access code

---

**Navigation**   Expert → Ent. access code (0003)

**Description** Enter access code to disable write protection of parameters.


**Additional information**

Read access	Operator
Write access	Operator

### 3.1 "System" submenu

*Navigation*

☰ ☰ Expert → System

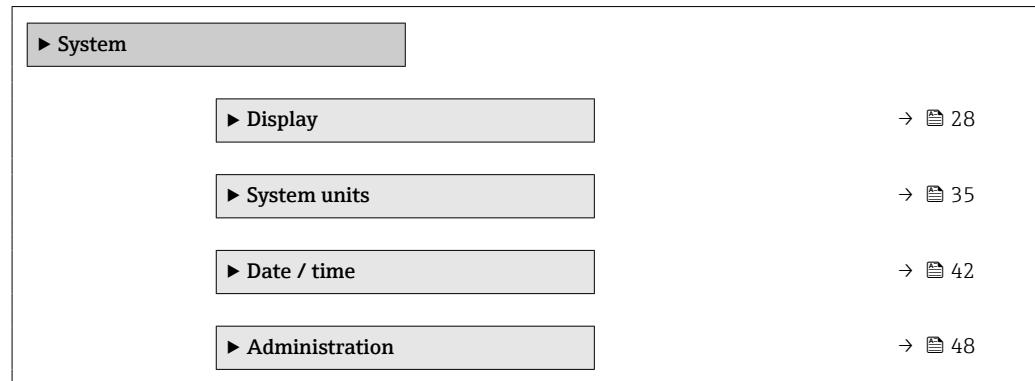

### 3.1.1 "Display" submenu

Navigation

Expert → System → Display

▶ Display	
Language	→ 28
Format display	→ 29
Value 1 to 4 display	→ 30
Decimal places 1 to 4	→ 31
Separator	→ 32
Number format	→ 32
Header	→ 32
Header text	→ 33
Display interval	→ 33
Display damping	→ 34
Backlight	→ 34
Contrast display	→ 34

---

#### Language

---

Navigation

Expert → System → Display → Language (0104)

Prerequisite

The device has a local display.

Description

Set display language.

Selection

- English
- Deutsch
- русский язык (Russian)
- 日本語 (Japanese)
- Español
- 中文 (Chinese)

Factory setting

English

**Additional information**

<b>Read access</b>	Operator
<b>Write access</b>	Operator

**Format display****Navigation**

④⑤ Expert → System → Display → Format display (0098)

**Prerequisite**

The device has a local display.

**Description**


Select how measured values are shown on the display.

**Selection**

- 1 value, max. size
- 1 bargraph + 1 value
- 2 values
- 1 value large + 2 values
- 4 values


**Factory setting**

1 value, max. size

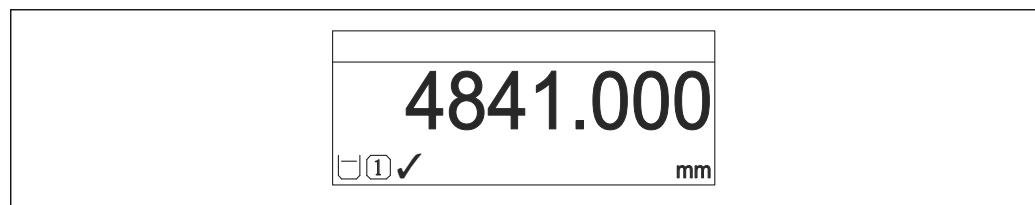**Additional information**


A0019963

④ 1 "Format display" = "1 value, max. size"

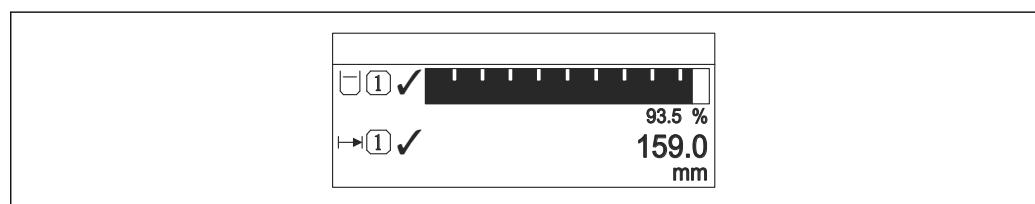


A0019964

④ 2 "Format display" = "1 bargraph + 1 value"

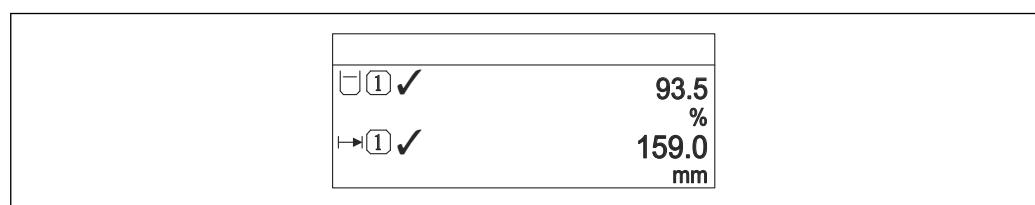


A0019965

④ 3 "Format display" = "2 values"

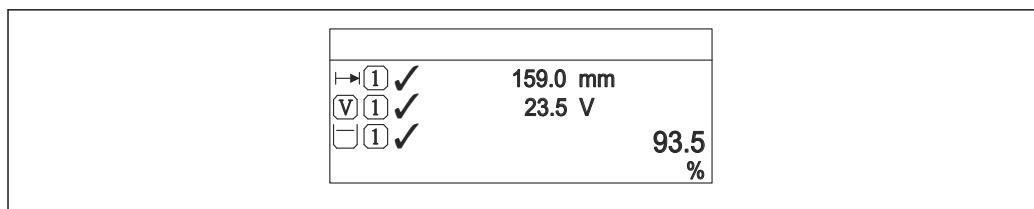

A0019966

4 "Format display" = "1 value large + 2 values"

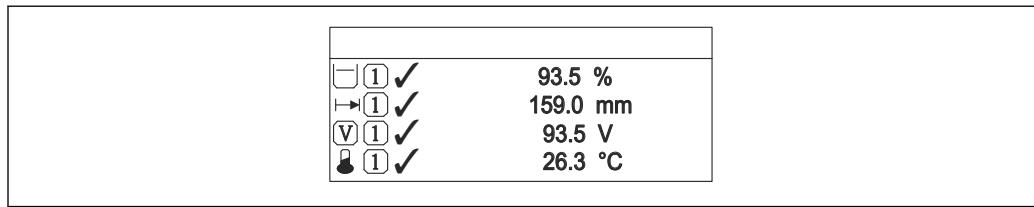

A0019968

5 "Format display" = "4 values"

Read access	Operator
Write access	Operator

- The **Value 1 to 4 display** (→ 30) parameters specify which measured values are shown on the display and in which order.
- If more measured values are specified than the current display mode permits, the values alternate on the device display. The display time until the next change is configured in the **Display interval** parameter (→ 33).

## Value 1 to 4 display



### Navigation

Expert → System → Display → Value 1 display (0107)

### Prerequisite

The device has a local display.

### Description

Select the measured value that is shown on the local display.

### Selection

- None <sup>1)</sup>
- Tank level
- Measured level
- Level linearized
- Tank level %
- Water level <sup>1)</sup>
- Liquid temperature <sup>1)</sup>
- Vapor temperature <sup>1)</sup>
- Air temperature <sup>1)</sup>
- Tank ullage
- Tank ullage %
- Observed density value <sup>1)</sup>
- P1 (bottom) <sup>1)</sup>
- P2 (middle) <sup>1)</sup>
- P3 (top) <sup>1)</sup>

1) not available for the **Value 1 display** parameter

- GP 1 value <sup>1)</sup>
- GP 2 value <sup>1)</sup>
- GP 3 value <sup>1)</sup>
- GP 4 value <sup>1)</sup>
- Gauge command <sup>1)</sup>
- Gauge status <sup>1)</sup>
- AIO B1-3 value <sup>1)</sup>
- AIO B1-3 value mA <sup>1)</sup>
- AIO B1-3 value % <sup>1)</sup>
- AIO C1-3 value <sup>1)</sup>
- AIO C1-3 value mA <sup>1)</sup>
- AIO C1-3 value % <sup>1)</sup>
- AIP B4-8 value <sup>1)</sup>
- AIP B4-8 value mA <sup>1)</sup>
- AIP B4-8 value % <sup>1)</sup>
- AIP C4-8 value <sup>1)</sup>
- AIP C4-8 value mA <sup>1)</sup>
- AIP C4-8 value % <sup>1)</sup>

**Factory setting** Depending on device version

**Additional information**

Read access	Operator
Write access	Maintenance

## Decimal places 1 to 4



**Navigation**

Expert → System → Display → Decimal places 1 (0095)

**Prerequisite**

The device has a local display.

**Description**

This selection does not affect the measurement and calculation accuracy of the device.

**Selection**

- X
- X.X
- X.XX
- X.XXX
- X.XXXX

**Factory setting**

X.X

**Additional information**

The setting does not affect the measuring or computational accuracy of the device.

Read access	Operator
Write access	Maintenance

---

**Separator****Navigation**

Expert → System → Display → Separator (0101)

**Prerequisite**

The device has a local display.

**Description**

Select decimal separator for displaying numerical values.

**Selection**

- .
- ,

**Factory setting**

.

**Additional information**

Read access	Operator
Write access	Maintenance

---

**Number format****Navigation**

Expert → System → Display → Number format (0099)

**Prerequisite**

The device has a local display.

**Description**

Choose number format for the display.

**Selection**

- Decimal
- ft-in-1/16"

**Factory setting**

Decimal

**Additional information**

Read access	Operator
Write access	Maintenance

 The **ft-in-1/16"** option is only valid for distance values.

---

**Header****Navigation**

Expert → System → Display → Header (0097)

**Prerequisite**

The device has a local display.

**Description**

Select header contents on local display.

**Selection**

- Device tag
- Free text

**Factory setting**

Device tag

**Additional information**

<b>Read access</b>	Operator
<b>Write access</b>	Maintenance

**Meaning of the options****■ Device tag**

The header contents is defined in the **Device tag** parameter (→ [150](#)).

**■ Free text**

The header contents is defined in the **Header text** parameter (→ [33](#)).

**Header text****Navigation**

Expert → System → Display → Header text (0112)

**Prerequisite**

**Header** (→ [32](#)) = **Free text**

**Description**

Enter display header text.

**User entry**

Character string comprising numbers, letters and special characters (11)

**Factory setting**

TG-Platform

**Additional information**

<b>Read access</b>	Operator
<b>Write access</b>	Maintenance

**Display interval****Navigation**

Expert → System → Display → Display interval (0096)

**Description**

Set time measured values are shown on display if display alternates between values.

**User entry**

1 to 10 s

**Factory setting**

5 s

**Additional information**

This parameter is only relevant if the number of selected measuring values exceeds the number of values the selected display format can display simultaneously.

<b>Read access</b>	Operator
<b>Write access</b>	Operator

## Display damping

**Navigation**

Expert → System → Display → Display damping (0094)

**Prerequisite**

The device has a local display.

**Description**

Set display reaction time to fluctuations in the measured value.

**User entry**

0.0 to 999.9 s

**Factory setting**

0.0 s

**Additional information**

Read access	Operator
Write access	Maintenance

## Backlight

**Navigation**

Expert → System → Display → Backlight (0111)

**Prerequisite**

The device has a local display.

**Description**

Switch the local display backlight on and off.

**Selection**

- Disable
- Enable

**Factory setting**

Enable

**Additional information**

Read access	Operator
Write access	Operator

## Contrast display

**Navigation**

Expert → System → Display → Contrast display (0105)

**Prerequisite**

The device has a local display.

**Description**

Adjust local display contrast setting to ambient conditions (e.g. lighting or reading angle)

**User entry**

20 to 80 %

**Factory setting**

30 %

**Additional information**

Read access	Operator
Write access	Operator

### 3.1.2 "System units" submenu

*Navigation*

Expert → System → System units

► System units	
Units preset	→ 35
Distance unit	→ 36
Pressure unit	→ 36
Temperature unit	→ 36
Density unit	→ 37
Decimal places length	→ 37
Decimal places pressure	→ 37
Decimal places temperature	→ 38
Decimal places density	→ 38

#### Units preset



**Navigation**

Expert → System → System units → Units preset (0605)

**Description**

Defines a set of units for length, pressure and temperature.

**Selection**

- mm, bar, °C
- m, bar, °C
- mm, PSI, °C
- ft, PSI, °F
- ft-in-16, PSI, °F
- ft-in-8, PSI, °F
- Customer value

**Factory setting**

mm, bar, °C

**Additional information**

Read access	Operator
Write access	Maintenance

If the **Customer value** option is selected, the units are defined in the following parameters. In any other case these are read-only parameters used to indicate the respective unit:

- Distance unit (→ 36)
- Pressure unit (→ 36)
- Temperature unit (→ 36)

**Distance unit****Navigation**

Expert → System → System units → Distance unit (0551)

**Description**

Select distance unit.

**Selection***SI units*

- m
- mm
- cm

*US units*

- ft
- in
- ft-in-16
- ft-in-8

**Factory setting**

mm

**Additional information**

Read access	Operator
Write access	Maintenance (if Units preset (→  35) = Customer value)

**Pressure unit****Navigation**

Expert → System → System units → Pressure unit (0564)

**Selection***SI units*

- bar
- Pa
- kPa
- MPa
- mbar a

*US units*

psi

*Other units*

- inH2O
- inH2O (68°F)
- ftH2O (68°F)
- mmH2O
- mmHg

**Factory setting**

bar

**Additional information**

Read access	Operator
Write access	Maintenance (if Units preset (→  35) = Customer value)

**Temperature unit****Navigation**

Expert → System → System units → Temperature unit (0557)

**Description**

Select temperature unit.

**Selection***SI units*

- °C
- K

*US units*

- °F
- °R

**Factory setting**

°C

**Additional information**

Read access	Operator
Write access	Maintenance (if Units preset (→  35) = Customer value)

**Density unit****Navigation**

Expert → System → System units → Density unit (0555)

**Description**

Select density unit.

**Selection***SI units*

- g/cm<sup>3</sup>
- g/ml
- g/l
- kg/l
- kg/dm<sup>3</sup>
- kg/m<sup>3</sup>

*US units*

- lb/ft<sup>3</sup>
- lb/gal (us)
- lb/in<sup>3</sup>
- STon/yd<sup>3</sup>

*Other units*

- °API
- SGU

**Factory setting**

kg/m<sup>3</sup>

**Additional information**

Read access	Operator
Write access	Maintenance (if Units preset (→  35) = Customer value)

**Decimal places length****Navigation**

Expert → System → System units → Decimal length (0573)

**Description**

Number of decimal places for length values.

**Selection**

- X
- X.X
- X.XX
- X.XXX
- X.XXXX

**Factory setting**

X.X

**Additional information**

Read access	Operator
Write access	Maintenance



The setting does not affect the accuracy of the measurement or the calculations.

**Decimal places pressure****Navigation**

Expert → System → System units → Decimal pressure (0608)

**Description**

Number of decimal places for pressure values.

**Selection**

- X
- X.X
- X.XX
- X.XXX
- X.XXXX

**Factory setting**

X.XXX

**Additional information**

Read access	Operator
Write access	Maintenance

 The setting does not affect the accuracy of the measurement or the calculations.

---

**Decimal places temperature****Navigation** Expert → System → System units → Decimal temp. (0614)**Description**

Number of decimal places for temperature values.

**Selection**

- X
- X.X
- X.XX
- X.XXX
- X.XXXX

**Factory setting**

X.X

**Additional information**

Read access	Operator
Write access	Maintenance

 The setting does not affect the accuracy of the measurement or the calculations.

---

**Decimal places density****Navigation** Expert → System → System units → Decimal density (0609)**Description**

Number of decimal places for density values.

**Selection**

- X
- X.X
- X.XX
- X.XXX
- X.XXXX

**Factory setting**

X.X

**Additional information**

Read access	Operator
Write access	Maintenance



The setting does not affect the accuracy of the measurement or the calculations.

### 3.1.3 "Date / time" submenu

The **Date / time** submenu is used to set the real-time clock of the device.


#### Setting the real-time clock via the display and operating module

1. Navigate to Expert → System → Date / time → Set date.  
↳ The current value of the real-time clock is displayed.
2. If the displayed value is correct: Press to terminate the wizard.
3. If the displayed value is not correct: Press to edit it.  
↳ The current value of the **Year** parameter is displayed.
4. If the displayed value is correct: Press to go to the next value.
5. If the displayed value is incorrect: Press and enter the correct value. Confirm the new value by pressing .
6. Repeat the last two steps for the following parameters: **Month, Day, Hour, Minute**.  
↳ The new value of the real-time clock is displayed.
7. Confirm the new value of the real-time clock by pressing .
8. Quit the wizard by pressing again.

### Setting the real-time clock via an operating tool (e.g. FieldCare)

1. Navigate to: Expert → System → Date / time

2.

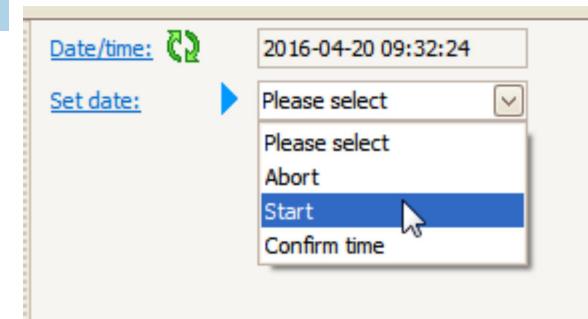


Go to the **Set date** parameter (→ 43) and select the **Start** option.

3.

Date/time:		2016-04-20 09:34:25
Set date:		Please select
Year:		2016
Month:		4
Day:		20
Hour:		9
Minute:		34

Use the following parameters to set the date and time: **Year**, **Month**, **Day**, **Hour**, **Minutes**.

4.

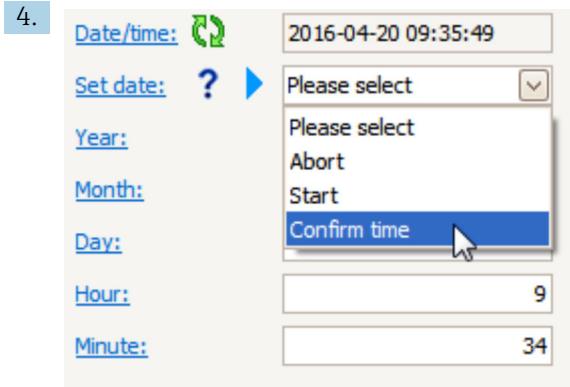


Go to the **Set date** parameter (→ 43) and select the **Confirm time** option.


► The real-time clock is set to the current date and time.

**Structure of the submenu on the display and operating module***Navigation*

Expert → System → Date / time

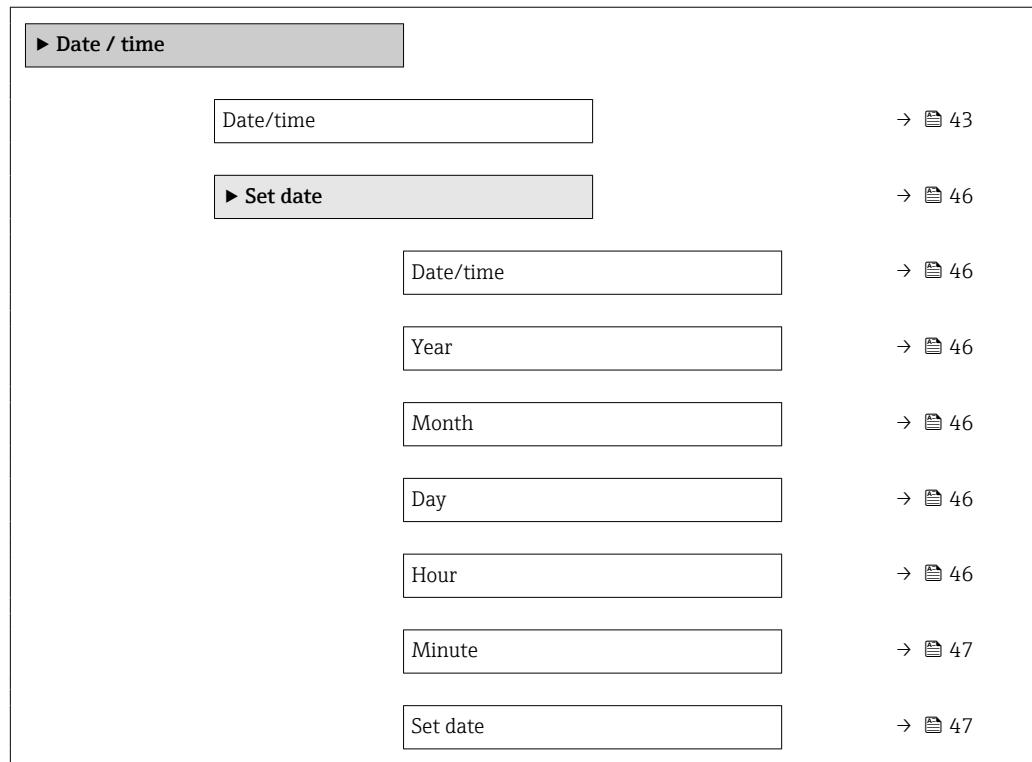**Structure of the submenu in an operating tool (e.g. FieldCare)***Navigation*

Expert → System → Date / time

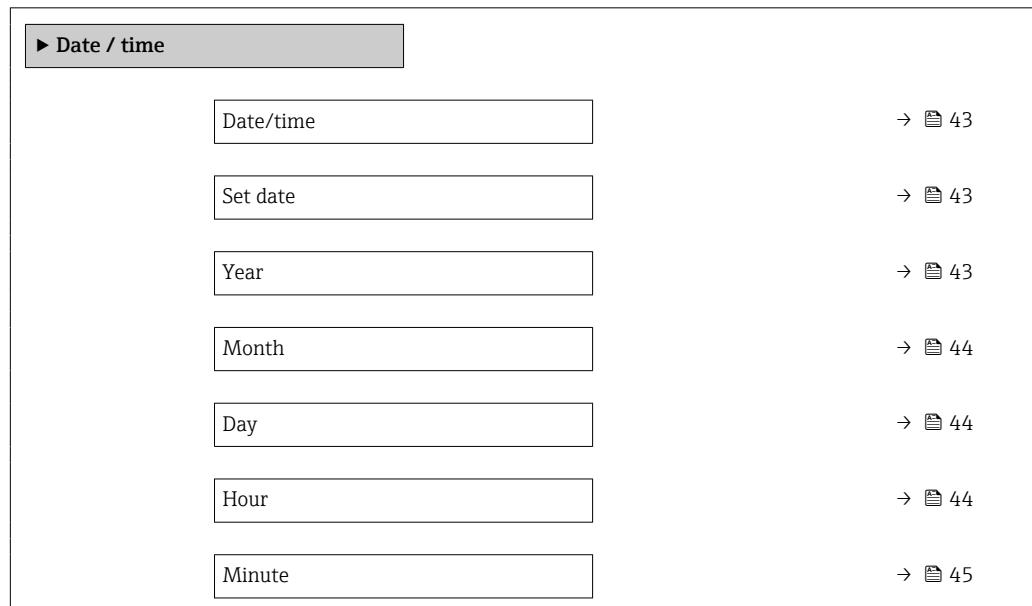

### Description of parameters

*Navigation*

Expert → System → Date / time

#### Date/time

**Navigation**

Expert → System → Date / time → Date/time (0790)

**Description**

Displays the device internal real time clock.

**Additional information**

Read access	Operator
Write access	-

#### Set date



**Navigation**

Expert → System → Date / time → Set date (0792)

**Description**

Controls the setting of the real-time clock.

**Selection**

- Please select
- Abort
- Start
- Confirm time

**Factory setting**

Please select

**Additional information**

Read access	Operator
Write access	Maintenance

#### Meaning of the options

**■ Please select**

Prompts the user to select an action.

**■ Abort**

Discards the entered date and time.

**■ Start**

Starts the setting of the real time clock.

**■ Confirm time**

Sets the real-time clock to the entered date and time.

#### Year



**Navigation**

Expert → System → Date / time → Year (0782)

**Prerequisite**

Set date (→ 43) = Start

**Description** Enter the current year.

**User entry** 2016 to 2079

**Factory setting** 2016

**Additional information**

Read access	Operator
Write access	Maintenance

## Month



**Navigation** ☰ Expert → System → Date / time → Month (0787)

**Prerequisite** Set date (→ ☰ 43) = Start

**Description** Enter the current month.

**User entry** 1 to 12

**Factory setting** 1

**Additional information**

Read access	Operator
Write access	Maintenance

## Day



**Navigation** ☰ Expert → System → Date / time → Day (0788)

**Prerequisite** Set date (→ ☰ 43) = Start

**Description** Enter the current day.

**User entry** 1 to 31

**Factory setting** 1

**Additional information**

Read access	Operator
Write access	Maintenance

## Hour



**Navigation** ☰ Expert → System → Date / time → Hour (0789)

**Prerequisite** Set date (→ ☰ 43) = Start

**Description** Enter the current hour.

**User entry** 0 to 23

**Factory setting** 0

**Additional information**

Read access	Operator
Write access	Maintenance

---

## Minute



**Navigation** ☰ Expert → System → Date / time → Minute (0791)

**Prerequisite** Set date (→ ☰ 43) = Start

**Description** Enter the current minute.

**User entry** 0 to 59

**Factory setting** 0

**Additional information**

Read access	Operator
Write access	Maintenance

*"Set date" wizard**Navigation*

Expert → System → Date / time → Set date

---

**Date/time****Navigation**

Expert → System → Date / time → Set date → Date/time (0790)

**Description**

→ 43

---

**Year****Navigation**

Expert → System → Date / time → Set date → Year (0782)

**Description**

→ 43

---

**Month****Navigation**

Expert → System → Date / time → Set date → Month (0787)

**Description**

→ 44

---

**Day****Navigation**

Expert → System → Date / time → Set date → Day (0788)

**Description**

→ 44

---

**Hour****Navigation**

Expert → System → Date / time → Set date → Hour (0789)

**Description**

→ 44

---

**Minute**

**Navigation** Expert → System → Date / time → Set date → Minute (0791)

**Description** → 45

---

**Set date**

**Navigation** Expert → System → Date / time → Set date → Set date


**Description** Confirm the displayed new value of the real-time clock by pressing .

### 3.1.4 "Administration" submenu

#### Structure of the submenu on the display and operating module

Navigation


☰ Expert → System → Administration

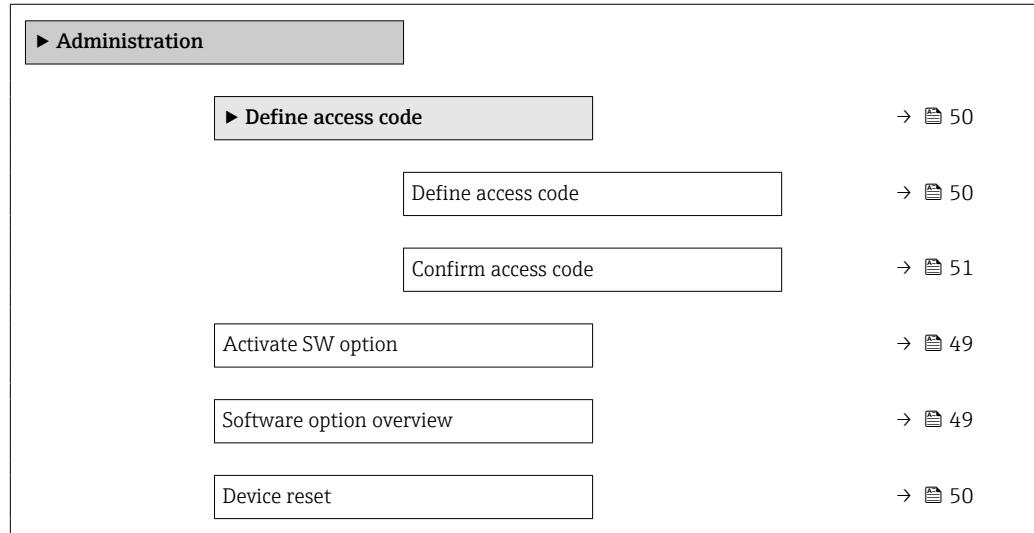

#### Structure of the submenu in an operating tool (e.g. FieldCare)

Navigation

☰ Expert → System → Administration

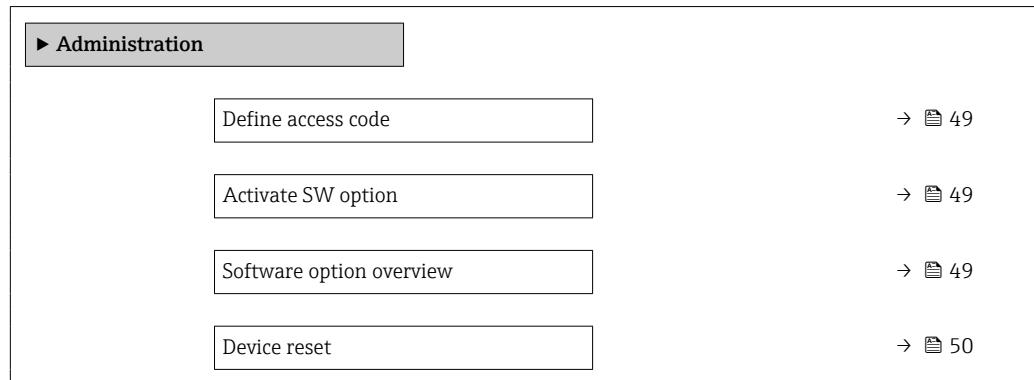

## Description of parameters

*Navigation*

Expert → System → Administration



### Define access code

**Navigation** Expert → System → Administration → Def. access code (0093)

**Description** Define release code for write access to parameters.

**User entry** 0 to 9 999

**Factory setting** 0

**Additional information**

Read access	Operator
Write access	Maintenance

If the factory setting is not changed or 0 is defined as the access code, the parameters are not write-protected and the configuration data of the device can then always be modified. The user is logged on in the *Maintenance* role.

The write protection affects all parameters marked with the symbol in this document.

Once the access code has been defined, write-protected parameters can only be modified if the access code is entered in the **Enter access code** parameter (→ 26).



### Activate SW option

**Navigation** Expert → System → Administration → Activate SW opt. (0029)

**Description** Enter the application package code or code of another re-ordered functionality to enable it

**User entry** Positive integer

**Factory setting** 0

**Additional information**

Read access	Operator
Write access	Maintenance



### Software option overview

**Navigation** Expert → System → Administration → SW option overv. (0015)

**Description** Shows all enabled software options

**User interface**

- Extended HistoROM
- SIL
- WHG
- CLG

**Additional information**

Read access	Operator
Write access	-

**Device reset****Navigation**

Diagram: Expert → System → Administration → Device reset (0000)

**Description**

Reset the device configuration - either entirely or in part - to a defined state

**Selection**

- Cancel
- To factory defaults
- Restart device

**Factory setting**

Cancel

**Additional information****Meaning of the options**

- **Cancel**  
No action
- **To factory defaults**  
All parameters are reset to the order-code specific factory setting.
- **Restart device**  
The restart resets every parameter which is stored in the volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.

Read access	Operator
Write access	Maintenance

*"Define access code" wizard***Navigation**

Diagram: Expert → System → Administration → Def. access code

**Define access code****Navigation**

Diagram: Expert → System → Administration → Def. access code → Def. access code

**Description**

→ Diagram 49

**Confirm access code**

**Navigation** Expert → System → Administration → Def. access code → Confirm code

**Description** Confirm the entered access code.

**User entry** 0 to 9 999

**Factory setting** 0


**Additional information**

Read access	Operator
Write access	Maintenance

## 3.2 "Input/output" submenu

*Navigation*

☰ ☰ Expert → Input/output

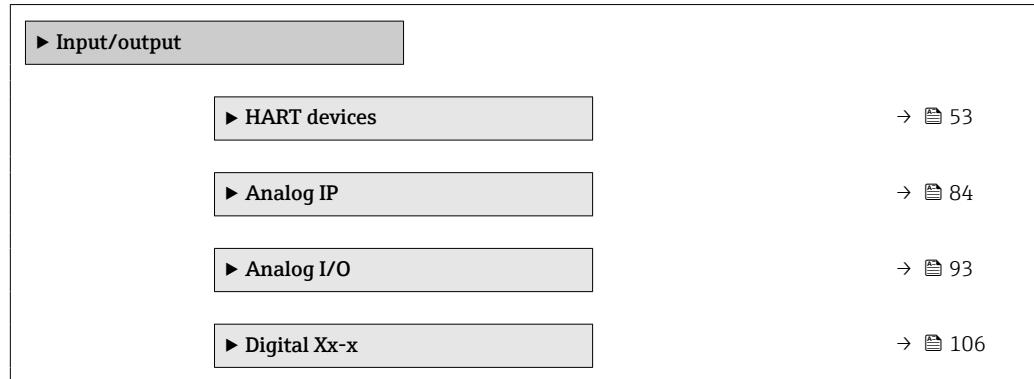

### 3.2.1 "HART devices" submenu

Navigation

Expert → Input/output → HART devices

▶ HART devices	
Number of devices	→ 53
▶ HART Device(s)	→ 54
▶ Forget device	→ 82
▶ #blank#	→ 82

---

#### Number of devices

---

Navigation

Expert → Input/output → HART devices → Number devices (13051)

Description

Shows the number of devices on the HART bus.

Additional information

Read access	Operator
Write access	-

**"HART Device(s)" submenu**

 There is a **HART Device(s)** submenu for each HART slave device found on the HART loop.

*Navigation* Expert → Input/output → HART devices → HART Device(s)

<b>► HART Device(s)</b>	
Device name	→  55
Polling address	→  55
Device tag	→  55
Operating mode	→  55
Communication status	→  56
Status signal	→  56
#blank# (PV - designation dependent on device)	→  57
#blank#(SV - designation dependent on device)	→  57
#blank#(TV - designation dependent on device)	→  57
#blank#(QV - designation dependent on device)	→  57
HART device PV mA	→  58
HART device PV %	→  58
Output pressure	→  58
Output density	→  59
Output temperature	→  59
Output vapor temperature	→  59
Output level	→  60
<b>► HART device information</b>	→  61
<b>► Element values</b>	→  67

▶ Diagnostics	→ 68
▶ Diagnostics	→ 69
▶ NMT device config	→ 71

**Device name**

**Navigation**  Expert → Input/output → HART devices → HART Device(s) → Device name (14722)

**Description** Shows the name of the transmitter.

**Additional information**

Read access	Operator
Write access	-

**Polling address**

**Navigation**  Expert → Input/output → HART devices → HART Device(s) → Polling address (14712)

**Description** Shows the polling address of the transmitter.

**Additional information**

Read access	Operator
Write access	-

**Device tag**

**Navigation**  Expert → Input/output → HART devices → HART Device(s) → Device tag (14713)

**Description** Shows the device tag of the transmitter.

**Additional information**

Read access	Operator
Write access	-

**Operating mode** 

**Navigation**  Expert → Input/output → HART devices → HART Device(s) → Operating mode (14745)

**Prerequisite** Not available if the HART device is a Prothermo NMT.

---

<b>Description</b>	Selection of the operation mode PV only or PV,SV,TV,QV. Devines which values are polled from the connected HART Device.				
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ PV only</li> <li>■ PV,SV,TV &amp; QV</li> <li>■ Level<sup>2)</sup></li> <li>■ Measured level<sup>2)</sup></li> </ul>				
<b>Factory setting</b>	PV,SV,TV & QV				
<b>Additional information</b>	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 2px;">Read access</td> <td style="padding: 2px;">Operator</td> </tr> <tr> <td style="padding: 2px;">Write access</td> <td style="padding: 2px;">Maintenance</td> </tr> </table>	Read access	Operator	Write access	Maintenance
Read access	Operator				
Write access	Maintenance				

---

### Communication status

---

<b>Navigation</b>	 Expert → Input/output → HART devices → HART Device(s) → Comm. status (14710)				
<b>Description</b>	Shows the operating status of the transmitter.				
<b>User interface</b>	<ul style="list-style-type: none"> <li>■ Operating normally</li> <li>■ Device offline</li> </ul>				
<b>Additional information</b>	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 2px;">Read access</td> <td style="padding: 2px;">Operator</td> </tr> <tr> <td style="padding: 2px;">Write access</td> <td style="padding: 2px;">-</td> </tr> </table>	Read access	Operator	Write access	-
Read access	Operator				
Write access	-				

---

### Status signal

---

<b>Navigation</b>	 Expert → Input/output → HART devices → HART Device(s) → Status signal (14760)
<b>Description</b>	Indicates the current device status in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107.
<b>User interface</b>	<ul style="list-style-type: none"> <li>■ OK</li> <li>■ Failure (F)</li> <li>■ Function check (C)</li> <li>■ Out of specification (S)</li> <li>■ Maintenance required (M)</li> <li>■ ---</li> <li>■ No effect (N)</li> <li>■ ---</li> </ul>
<b>Factory setting</b>	---

---

2) only visible if the connected device is a Micropilot

---

**#blank# ( HART PV - designation dependent on device)**


---

**Navigation**  Expert → Input/output → HART devices → HART Device(s) → #blank# (14716)

**Description** Shows the first HART variable (PV).

<b>Additional information</b>	Read access	Operator
	Write access	-

---

**#blank# (HART SV - designation dependent on device)**


---

**Navigation**  Expert → Input/output → HART devices → HART Device(s) → #blank# (14705)

**Prerequisite** For HART devices other than NMT: **Operating mode** (→  55) = PV,SV,TV & QV

**Description** Shows the second HART variable (SV).

<b>Additional information</b>	Read access	Operator
	Write access	-

---

**#blank# (HART TV - designation dependent on device)**


---

**Navigation**  Expert → Input/output → HART devices → HART Device(s) → #blank# (14706)

**Prerequisite** For HART devices other than NMT: **Operating mode** (→  55) = PV,SV,TV & QV

**Description** Shows the third HART variable (TV).

<b>Additional information</b>	Read access	Operator
	Write access	-

---

**#blank# (HART QV - designation dependent on device)**


---

**Navigation**  Expert → Input/output → HART devices → HART Device(s) → #blank# (14716)

**Prerequisite** For HART devices other than NMT: **Operating mode** (→  55) = PV,SV,TV & QV

**Description** Shows the fourth HART variable (QV).

<b>Additional information</b>	Read access	Operator
	Write access	-

---

**HART device PV mA**

---

**Navigation**

  Expert → Input/output → HART devices → HART Device(s) → HARTDEV PV mA (14708)

**Prerequisite**

Not available for Micropilot S FMR5xx and Prothermo 53x.

**Description**

Shows the first HART variable (PV) in mA.

**Additional information**

Read access	Operator
Write access	-

---

**HART device PV %**

---

**Navigation**

  Expert → Input/output → HART devices → HART Device(s) → HARTDEV PV % (14709)

**Prerequisite**

Not available for Micropilot S FMR5xx and Prothermo 53x.

**Description**

Shows the first HART variable (PV) in percentage.

**Additional information**

Read access	Operator
Write access	-

---

**Output pressure**

---

**Navigation**

  Expert → Input/output → HART devices → HART Device(s) → Output pressure (14719)

**Prerequisite**

Not available for Micropilot S FMR5xx, Prothermo NMT53x and Prothermo NMT8x. In these cases the measured variables are allocated automatically.

**Description**

Defines which HART variable is the pressure.

**Selection**

- No value
- Primary variable (PV)
- Secondary variable (SV)
- Tertiary variable (TV)
- Quaternary variable (QV)

**Factory setting**

No value

**Additional information**

Read access	Operator
Write access	Maintenance

---

**Output density**

---

**Navigation**

Diagram: Expert → Input/output → HART devices → HART Device(s) → Output density (14720)

**Prerequisite**

Not available for Micropilot S FMR5xx, Prothermo NMT53x and Prothermo NMT8x. In these cases the measured variables are allocated automatically.

**Description**

Defines which HART variable is the density.

**Selection**

- No value
- Primary variable (PV)
- Secondary variable (SV)
- Tertiary variable (TV)
- Quaternary variable (QV)

**Factory setting**

No value

**Additional information**

Read access	Operator
Write access	Maintenance

---



---

**Output temperature**

---

**Navigation**

Diagram: Expert → Input/output → HART devices → HART Device(s) → Output temp. (14721)

**Prerequisite**

Not available for Micropilot S FMR5xx, Prothermo NMT53x and Prothermo NMT8x. In these cases the measured variables are allocated automatically.

**Description**

Defines which HART variable is the temperature.

**Selection**

- No value
- Primary variable (PV)
- Secondary variable (SV)
- Tertiary variable (TV)
- Quaternary variable (QV)

**Factory setting**

No value

**Additional information**

Read access	Operator
Write access	Maintenance

---



---

**Output vapor temperature**

---

**Navigation**

Diagram: Expert → Input/output → HART devices → HART Device(s) → Output vapor tmp (14726)

**Prerequisite**

Not available for Micropilot S FMR5xx, Prothermo NMT53x and Prothermo NMT8x. In these cases the measured variables are allocated automatically.

**Description** Defines which HART variable is the vapor temperature.

**Selection**

- No value
- Primary variable (PV)
- Secondary variable (SV)
- Tertiary variable (TV)
- Quaternary variable (QV)

**Factory setting** No value

**Additional information**

Read access	Operator
Write access	Maintenance

## Output level



**Navigation** Expert → Input/output → HART devices → HART Device(s) → Output level (14718)

**Prerequisite**

Not available for Micropilot S FMR5xx, Prothermo NMT53x and Prothermo NMT8x. In these cases the measured variables are allocated automatically.

**Description** Defines which HART variable is the level.

**Selection**

- No value
- Primary variable (PV)
- Secondary variable (SV)
- Tertiary variable (TV)
- Quaternary variable (QV)

**Factory setting** No value

**Additional information**

Read access	Operator
Write access	Maintenance

*"HART device information" submenu**Navigation*

Diagram Expert → Input/output → HART devices → HART Device(s)  
 → HART device info

► HART device information	
Pressure	→ <a href="#">61</a>
Density	→ <a href="#">62</a>
Temperature	→ <a href="#">62</a>
Vapor temperature	→ <a href="#">62</a>
Water level	→ <a href="#">63</a>
Level source	→ <a href="#">63</a>
Tank level to NMT	→ <a href="#">63</a>
Manual value	→ <a href="#">64</a>
HART bus	→ <a href="#">64</a>
Device type	→ <a href="#">64</a>
Device ID	→ <a href="#">64</a>
Device date	→ <a href="#">65</a>
Device description	→ <a href="#">65</a>
Device message	→ <a href="#">65</a>
Software version	→ <a href="#">65</a>
Firmware CRC	→ <a href="#">66</a>
Custody transfer	→ <a href="#">66</a>

**Pressure****Navigation**

Diagram Expert → Input/output → HART devices → HART Device(s) → HART device info  
 → Pressure (14723)

**Prerequisite**

**Output pressure (→ [58](#)) ≠ No value**

**Description** Shows the pressure value measured by the connected HART device.

**Additional information**

Read access	Operator
Write access	-

---

## Density

---

**Navigation**   Expert → Input/output → HART devices → HART Device(s) → HART device info  
→ Density (14724)

**Prerequisite**

**Output density (→  59) ≠ No value**

**Description**

Shows the density value measured by the connected HART device.

**Additional information**

Read access	Operator
Write access	-

---

## Temperature

---

**Navigation**   Expert → Input/output → HART devices → HART Device(s) → HART device info  
→ Temperature (14725)

**Prerequisite**

**Output temperature (→  59) ≠ No value**

**Description**

Shows the temperature measured by the connected HART device.

**Additional information**

Read access	Operator
Write access	-

---

## Vapor temperature

---

**Navigation**   Expert → Input/output → HART devices → HART Device(s) → HART device info  
→ Vapor temp. (14727)

**Prerequisite**

**Output vapor temperature (→  59) ≠ No value**

**Description**

Shows the temperature value of the vapor phase measured by the connected HART device.

**Additional information**

Read access	Operator
Write access	-

---

**Water level**

---

**Navigation**   Expert → Input/output → HART devices → HART Device(s) → HART device info  
→ Water level (14717)

**Prerequisite** Output level (→  60) ≠ No value

**Description** Shows the water level value measured by the connected HART device.

**Additional information**

Read access	Operator
Write access	-

---

**Level source**

---

**Navigation**   Expert → Input/output → HART devices → HART Device(s) → HART device info  
→ Level source (14749)

**Prerequisite** Prothermo NMT53x

**Description** Shows which source should be used for level reference sent to NMT to determine liquid/vapour temperature. Tank level or manual level.

**Selection**

- Manual value
- Tank level

**Factory setting** Tank level

**Additional information**

Read access	Maintenance
Write access	Maintenance

---

**Tank level to NMT**

---

**Navigation**   Expert → Input/output → HART devices → HART Device(s) → HART device info  
→ Tank lvl to NMT (14750)

**Prerequisite** Prothermo NMT53x with level measurement

**Description** Shows the level transferred to NMT.

**Additional information**

Read access	Maintenance
Write access	-

---

**Manual value**

**Navigation** Expert → Input/output → HART devices → HART Device(s) → HART device info  
→ Manual value (14746)

**Prerequisite** Prothermo NMT53x with level measurement

**Description** Shows the manual set level.

**User entry** Signed floating-point number

**Factory setting** 0 mm

**Additional information**

Read access	Maintenance
Write access	Maintenance

---

**HART bus**

**Navigation** Expert → Input/output → HART devices → HART Device(s) → HART device info  
→ HART bus (14711)

**Description** Information about the used IO-Slot.

**Additional information**

Read access	Operator
Write access	-

---

**Device type**

**Navigation** Expert → Input/output → HART devices → HART Device(s) → HART device info  
→ Device type (14701)

**Description** Shows the device type with which the measuring device is registered with the HART Communication Foundation.

**Additional information**

Read access	Operator
Write access	-

---

**Device ID**

**Navigation** Expert → Input/output → HART devices → HART Device(s) → HART device info  
→ Device ID (14702)

**Description** Shows the device ID of the connected HART device.

**Additional information**

<b>Read access</b>	Operator
<b>Write access</b>	-

**Device date****Navigation**

Expert → Input/output → HART devices → HART Device(s) → HART device info  
→ Device date (14707)

**Description**

Shows the date of the connected HART device. (e.g.: the last configuration change).

**Additional information**

<b>Read access</b>	Operator
<b>Write access</b>	-

**Device description****Navigation**

Expert → Input/output → HART devices → HART Device(s) → HART device info  
→ Device descrip. (14704)

**Description**

Shows a user defined HART descriptor of the connected device.

**Additional information**

<b>Read access</b>	Operator
<b>Write access</b>	-

**Device message****Navigation**

Expert → Input/output → HART devices → HART Device(s) → HART device info  
→ Device message (14703)

**Description**

Shows a user defined HART message of the connected device.

**Additional information**

<b>Read access</b>	Operator
<b>Write access</b>	-

**Software version****Navigation**

Expert → Input/output → HART devices → HART Device(s) → HART device info  
→ Software version (14747)

**Prerequisite**

Prothermo NMT53x

**Description**

Shows the software version of the NMT device.

**Additional information**

Read access	Maintenance
Write access	-

**Firmware CRC****Navigation**

 Expert → Input/output → HART devices → HART Device(s) → HART device info  
→ Firmware CRC (14758)

**User interface**

Positive integer

**Factory setting**

0

**Additional information**

Read access	Maintenance
Write access	-

**Custody transfer****Navigation**

 Expert → Input/output → HART devices → HART Device(s) → HART device info  
→ Custody transfer (14748)

**Prerequisite**

Prothermo NMT53x with temperature measurement

**Description**

Shows information about hardware lock of NMT device. Off -&gt; NMT parameter can be changed. On -&gt; NMT parameter can not be changed.

**Additional information**

Read access	Maintenance
Write access	-

*"Element values" submenu*

This submenu is only available for Prothermo NMT53x.

*Navigation*

Expert → Input/output → HART devices → HART Device(s)  
→ Element values

*"Element temperature" submenu**Navigation*

Expert → Input/output → HART devices → HART Device(s)  
→ Element values → Element temp.

**Element temperature 1 to 24****Navigation**

Expert → Input/output → HART devices → HART Device(s) → Element values  
→ Element temp. → Element temp. 1 to 24 (14984–1 to 24)

**Description**

Shows the temperature of an element in the NMT.

**Additional information**

Read access	Operator
Write access	-

*"Element position" submenu**Navigation*

Expert → Input/output → HART devices → HART Device(s)  
→ Element values → Element position

**Element position 1 to 24****Navigation**

Expert → Input/output → HART devices → HART Device(s) → Element values  
→ Element position → Element pos. 1 to 24 (15014–1 to 24)

**Description**

Shows the position of the selected element in the NMT.

**Additional information**

Read access	Operator
Write access	-

*"Diagnostics" submenu*

 This submenu is only available for Prothermo NMT53x.

**Navigation**

Diagram: Expert → Input/output → HART devices → HART Device(s) → Diagnostics

 <b>Diagnostics</b>	
Diagnostic code	→  68
Last diagnostic	→  68
Reference 0	→  68
Reference 17	→  69

**Diagnostic code****Navigation**

Diagram: Expert → Input/output → HART devices → HART Device(s) → Diagnostics → Diag. code (14739)

**Description**

Shows the current diagnostic code of NMT. Check NMT manual for details.

**Additional information**

Read access	Operator
Write access	-

**Last diagnostic****Navigation**

Diagram: Expert → Input/output → HART devices → HART Device(s) → Diagnostics → Last Diagnostic (14742)

**Description**

Shows the previous diagnostic code of NMT. Check NMT manual for details.

**Additional information**

Read access	Operator
Write access	-

**Reference 0****Navigation**

Diagram: Expert → Input/output → HART devices → HART Device(s) → Diagnostics → Reference 0 (14740)

**Prerequisite**

Prothermo NMT53x with temperature measurement.

**Description** Shows the temperature of internal reference element 0.

**Additional information**

Read access	Operator
Write access	-

## Reference 17

**Navigation**  Expert → Input/output → HART devices → HART Device(s) → Diagnostics  
→ Reference 17 (14741)

**Prerequisite** Prothermo NMT53x with temperature measurement.

**Description** Shows the temperature of internal reference element 17.

**Additional information**

Read access	Operator
Write access	-

### "Diagnostics" submenu

 This submenu is only available for Prothermo NMT8x.

*Navigation*  Expert → Input/output → HART devices → HART Device(s)  
→ Diagnostics

 Diagnostics	
Active diagnostics	→  69
Previous diagnostics	→  70
Test resistance	→  70
WB frequency ratio	→  70

## Active diagnostics

**Navigation**  Expert → Input/output → HART devices → HART Device(s) → Diagnostics → Active diagnos. (14754)

**User interface** Character string comprising numbers, letters and special characters

**Factory setting**

**Additional information**

Read access	Operator
Write access	-

**Previous diagnostics****Navigation**

Diagram: Expert → Input/output → HART devices → HART Device(s) → Diagnostics  
 → Prev.diagnostics (14755)

**User interface**

Character string comprising numbers, letters and special characters

**Factory setting****Additional information**

Read access	Operator
Write access	-

**Test resistance****Navigation**

Diagram: Expert → Input/output → HART devices → HART Device(s) → Diagnostics → Test resistance (14752)

**User interface**

Signed floating-point number

**Factory setting**

0 Ohm

**Additional information**

Read access	Operator
Write access	-

**WB frequency ratio****Navigation**

Diagram: Expert → Input/output → HART devices → HART Device(s) → Diagnostics → WB freq. ratio (14753)

**User interface**

Signed floating-point number

**Factory setting**

0

**Additional information**

Read access	Operator
Write access	-

*"NMT device config" submenu*

 This submenu is only present if the connected HART device is a Prothermo NMT5xx.

*Navigation*

 Expert → Input/output → HART devices → HART Device(s) → NMT dev. config

► NMT device config	
Configure device?	→  71
Access code	→  72
Total no. element	→  72
Bottom point	→  73
Temperature element short	→  73
Temperature element open	→  73
Output at error	→  74
Gain adjust	→  74
Kind of interval	→  74
Element interval	→  75
Update water level	→  75
► Element setup	
Select element	→  76
Zero adjust	→  76
Element temperature	→  77
Element position	→  77

**Configure device?****Navigation**

 Expert → Input/output → HART devices → HART Device(s) → NMT dev. config → Config. device? (14728)

**Description**

Enable NMT device configuration.

<b>Selection</b>	<ul style="list-style-type: none"> <li>■ No</li> <li>■ Yes</li> </ul>				
<b>Factory setting</b>	No				
<b>Additional information</b>	<b>Meaning of the options</b> <ul style="list-style-type: none"> <li>■ <b>No</b> Not configurable</li> <li>■ <b>Yes</b> Configurable</li> </ul>				
	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 2px;">Read access</td> <td style="padding: 2px;">Operator</td> </tr> <tr> <td style="padding: 2px;">Write access</td> <td style="padding: 2px;">Maintenance</td> </tr> </table>	Read access	Operator	Write access	Maintenance
Read access	Operator				
Write access	Maintenance				

<b>Access code</b>					
<b>Navigation</b>	  Expert → Input/output → HART devices → HART Device(s) → NMT dev. config → Access code (14714)				
<b>Prerequisite</b>	<b>Configure device? (→  71) = Yes</b>				
<b>Description</b>	Shows the access code to configure the NMT device. Code is read from NMT device at start up.				
<b>User entry</b>	0 to 65 535				
<b>Factory setting</b>	0				
<b>Additional information</b>	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 2px;">Read access</td> <td style="padding: 2px;">Operator</td> </tr> <tr> <td style="padding: 2px;">Write access</td> <td style="padding: 2px;">Maintenance</td> </tr> </table>	Read access	Operator	Write access	Maintenance
Read access	Operator				
Write access	Maintenance				

<b>Total no. element</b>					
<b>Navigation</b>	  Expert → Input/output → HART devices → HART Device(s) → NMT dev. config → Total elements (14730)				
<b>Description</b>	Shows the total amount of configurable temperature elements.				
<b>Additional information</b>	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 2px;">Read access</td> <td style="padding: 2px;">Operator</td> </tr> <tr> <td style="padding: 2px;">Write access</td> <td style="padding: 2px;">-</td> </tr> </table>	Read access	Operator	Write access	-
Read access	Operator				
Write access	-				

**Bottom point**

**Navigation** Expert → Input/output → HART devices → HART Device(s) → NMT dev. config  
→ Bottom point (14729)

**Description** Shows the bottom clearance from the end of temperature probe or WB probe.

**User entry** Signed floating-point number

**Factory setting** 0 mm

**Additional information**

Read access	Operator
Write access	Maintenance

**Temperature element short**

**Navigation** Expert → Input/output → HART devices → HART Device(s) → NMT dev. config  
→ Temp elem. short (14731)

**Description** Sets the displayed temperature if element is broken (shorten).

**User entry** Signed floating-point number

**Factory setting** 0 °C

**Additional information**

Read access	Operator
Write access	Maintenance

**Temperature element open**

**Navigation** Expert → Input/output → HART devices → HART Device(s) → NMT dev. config  
→ Temp. elem. open (14732)

**Description** Sets the displayed temperature if element is not connected (open).

**User entry** Signed floating-point number

**Factory setting** 0 °C

**Additional information**

Read access	Operator
Write access	Maintenance

**Output at error****Navigation**

Expert → Input/output → HART devices → HART Device(s) → NMT dev. config  
→ Output at error (14733)

**Description**

Off -> Defective element will not be used in average calculation. On -> Defective element generate error at output value.

**Selection**

- Off
- On

**Factory setting**

Off

**Additional information**

Read access	Operator
Write access	Maintenance

**Gain adjust****Navigation**

Expert → Input/output → HART devices → HART Device(s) → NMT dev. config  
→ Gain adjust (14736)

**Description**

Adjustment of all shown temperature elements. Also reference elements 0 and 17. e.g. 0.8 -> 80% 1.0 -> 100% of factory calibration 1.2 -> 120%.

**User entry**

Signed floating-point number

**Factory setting**

0

**Additional information**

Read access	Operator
Write access	Maintenance

**Kind of interval****Navigation**

Expert → Input/output → HART devices → HART Device(s) → NMT dev. config  
→ Kind of interval (14744)

**Description**

Determines how the element positions are defined.

**Selection**

- Even
- Not even

**Factory setting**

Even

**Additional information****Meaning of the options**

- **Even**  
First position bottom point + element interval for every next element.
- **Not even**  
Position of elements can be set manually.

Read access	Operator
Write access	Maintenance

**Element interval****Navigation**

Diagram: Expert → Input/output → HART devices → HART Device(s) → NMT dev. config  
→ Element interval (14743)

**Prerequisite**

**Kind of interval** (→ 74) = **Even**

**Description**

Shows the distance between the temperature elements used if kind of interval parameter is set to even.

**User entry**

Signed floating-point number

**Factory setting**

0 mm

**Additional information**

Read access	Operator
Write access	Maintenance

**Update water level****Navigation**

Diagram: Expert → Input/output → HART devices → HART Device(s) → NMT dev. config  
→ Water level upd. (14751)

**Description**

Select if water level value is transferred to NMT or not.

**Selection**

- Enabled
- Disabled

**Factory setting**

Disabled

**Additional information**

- Enabled: Water level value is transferred
- Disabled: Water level value is **not** transferred

The NMT delivers the average liquid temperature value in a tank by picking up the value of all temperature elements which are covered by liquid and calculating the average value. To select the submerged temperature elements, the NMT receives level information from a tank gauging device. If the water bottom temperature shall be excluded from the measurement, the water level value is used to exclude the temperature elements which are submerged in water.

Read access	Operator
Write access	Maintenance

*"Element setup" submenu***Navigation**

④ ⑤ Expert → Input/output → HART devices → HART Device(s)  
→ NMT dev. config → Element setup

**Select element****Navigation**

④ ⑤ Expert → Input/output → HART devices → HART Device(s) → NMT dev. config  
→ Element setup → Select element (14734)

**Description**

Chooses the temperature element to be configured manually.

**User entry**

1 to 24

**Factory setting**

1

**Additional information**

Read access	Operator
Write access	Maintenance

**Zero adjust****Navigation**

④ ⑤ Expert → Input/output → HART devices → HART Device(s) → NMT dev. config  
→ Element setup → Zero adjust (14735)

**Description**

Adjusts the offset of the selected temperature element.

**User interface**

Signed floating-point number

**Factory setting**

0 None

**Additional information**

Read access	Operator
Write access	Service

**Element temperature**

**Navigation**      Expert → Input/output → HART devices → HART Device(s) → NMT dev. config  
→ Element setup → Element temp. (14737)

**Description**      Shows the temperature of the element.

**Additional information**

Read access	Operator
Write access	-

**Element position**

**Navigation**      Expert → Input/output → HART devices → HART Device(s) → NMT dev. config  
→ Element setup → Element position (14738)

**Description**      Shows the position of the temperature element.

**User interface**      Signed floating-point number

**Factory setting**      0 mm

**Additional information**

Read access	Operator
Write access	Service

*"NMT device config" submenu*

This submenu is only present if the connected HART device is a Prothermo NMT8x.

**Navigation**      Expert → Input/output → HART devices → HART Device(s)  
→ NMT dev. config

► NMT device config	
Configure device?	→  78
Total no. element	→  78
Bottom point	→  79
No element in phase	→  79
Water bottom level offset	→  79

Update water level	→  80
▶ Element setup	→  80
Select element	→  80
Zero adjust	→  81
Element temperature	→  81
Element position	→  81

**Configure device?****Navigation**

Expert → Input/output → HART devices → HART Device(s) → NMT dev. config  
→ Config. device? (14728)

**Description**

Enable NMT device configuration.

**Selection**

- No
- Yes

**Factory setting**

No

**Additional information****Meaning of the options**

- **No**  
Not configurable
- **Yes**  
Configurable

Read access	Operator
Write access	Maintenance

**Total no. element****Navigation**

Expert → Input/output → HART devices → HART Device(s) → NMT dev. config  
→ Total elements (14730)

**Description**

Shows the total amount of configurable temperature elements.

**Additional information**

Read access	Operator
Write access	-

**Bottom point**

**Navigation** Expert → Input/output → HART devices → HART Device(s) → NMT dev. config → Bottom point (14729)

**Description** Shows the bottom clearance from the end of temperature probe or WB probe.

**User entry** Signed floating-point number

**Factory setting** 0 mm

**Additional information**

Read access	Operator
Write access	Maintenance

**No element in phase**

**Navigation** Expert → Input/output → HART devices → HART Device(s) → NMT dev. config → No elm. in phase (14756)

**Selection**

- Alarm
- Warning
- Logbook entry only

**Factory setting** Alarm

**Additional information**

Read access	Operator
Write access	Operator

**Water bottom level offset**

**Navigation** Expert → Input/output → HART devices → HART Device(s) → NMT dev. config → WB level offset (14757)

**User entry** Signed floating-point number

**Factory setting** 0 mm

**Additional information**

Read access	Operator
Write access	Operator

**Update water level****Navigation**

Expert → Input/output → HART devices → HART Device(s) → NMT dev. config  
→ Water level upd. (14751)

**Description**

Select if water level value is transferred to NMT or not.

**Selection**

- Enabled
- Disabled

**Factory setting**

Disabled

**Additional information**

- Enabled: Water level value is transferred
- Disabled: Water level value is **not** transferred

The NMT delivers the average liquid temperature value in a tank by picking up the value of all temperature elements which are covered by liquid and calculating the average value. To select the submerged temperature elements, the NMT receives level information from a tank gauging device. If the water bottom temperature shall be excluded from the measurement, the water level value is used to exclude the temperature elements which are submerged in water.

<b>Read access</b>	Operator
<b>Write access</b>	Maintenance

*"Element setup" submenu***Navigation**

Expert → Input/output → HART devices → HART Device(s)  
→ NMT dev. config → Element setup

Element setup	
Select element	→  80
Zero adjust	→  81
Element temperature	→  81
Element position	→  81

**Select element****Navigation**

Expert → Input/output → HART devices → HART Device(s) → NMT dev. config  
→ Element setup → Select element (14734)

**Description**

Chooses the temperature element to be configured manually.

**User entry** 1 to 24

**Factory setting** 1

**Additional information**

Read access	Operator
Write access	Maintenance

## Zero adjust



**Navigation** Expert → Input/output → HART devices → HART Device(s) → NMT dev. config  
→ Element setup → Zero adjust (14759)

**User interface** Signed floating-point number

**Factory setting** 0 °C

**Additional information**

Read access	Operator
Write access	Maintenance

## Element temperature

**Navigation** Expert → Input/output → HART devices → HART Device(s) → NMT dev. config  
→ Element setup → Element temp. (14737)

**Description** Shows the temperature of the element.

**Additional information**

Read access	Operator
Write access	-

## Element position



**Navigation** Expert → Input/output → HART devices → HART Device(s) → NMT dev. config  
→ Element setup → Element position (14738)

**Description** Shows the position of the temperature element.

**User interface** Signed floating-point number

**Factory setting** 0 mm

**Additional information**

Read access	Operator
Write access	Service

**"Forget device" wizard**

 This submenu is only available if there is at least one unlocked device at the bus.

Navigation

 Expert → Input/output → HART devices → Forget device
**Forget device****Navigation**
 Expert → Input/output → HART devices → Forget device → Forget device
**Description**

With this function an offline device can be deleted from the device list.

**Selection**

- HART Device 1 \*
- HART Device 2 \*
- HART Device 3 \*
- HART Device 4 \*
- HART Device 5 \*
- HART Device 6 \*
- HART Device 7 \*
- HART Device 8 \*
- HART Device 9 \*
- HART Device 10 \*
- HART Device 11 \*
- HART Device 12 \*
- HART Device 13 \*
- HART Device 14 \*
- HART Device 15 \*
- None

**Factory setting**


None

**Additional information**

Read access	Operator
Write access	Maintenance

**HART Bus interface**

Navigation

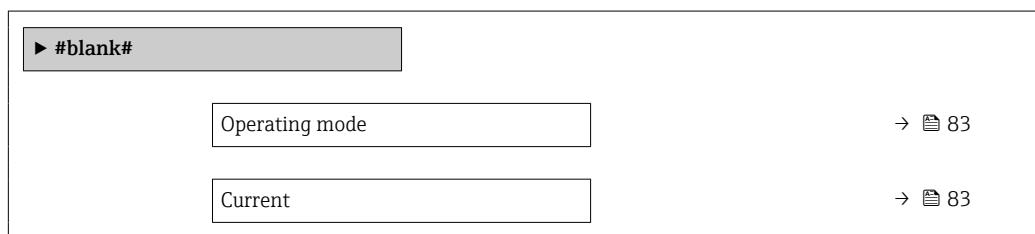 Expert → Input/output → HART devices → #blank#


\* Visibility depends on order options or device settings

---

## Operating mode

---

**Navigation**       Expert → Input/output → HART devices → #blank# → Operating mode (14453)

**Description**      Shows the operation mode of this HART bus.

**User interface**

- None
- Disable
- HART master
- HART slave +4..20mA output
- HART tunnel

**Factory setting**      None

<b>Additional information</b>	Read access	Operator
	Write access	-

---

## Current

---

**Navigation**       Expert → Input/output → HART devices → #blank# → Current (14457)

**Description**      Shows the actual current on this HART bus.


**User interface**      0 to 100 000 mA

**Factory setting**      0 mA

<b>Additional information</b>	Read access	Operator
	Write access	-

### 3.2.2 "Analog IP" submenu

**i** There is an **Analog IP** submenu (→ 84) for each Analog I/O module of the device. This submenu refers to terminals 4 to 8 of this module (the analog input). They are primarily used to connect an RTD. For terminals 1 to 3 (analog input or output) refer to → 93.

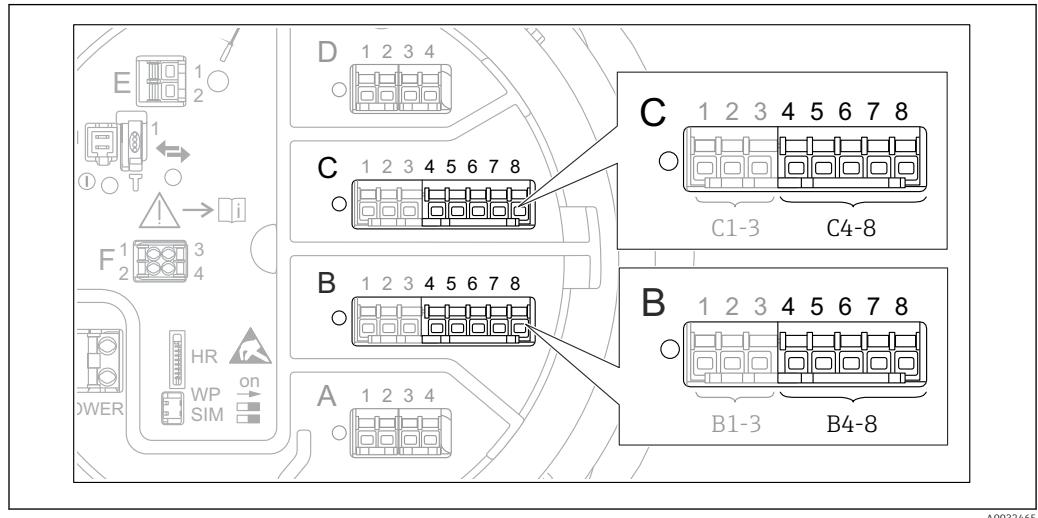

A0032465

6 Terminals for the "Analog IP" submenu (→ 84) ("B4-8" or "C4-8", respectively)

Navigation

Expert → Input/output → Analog IP

▶ Analog IP	
Operating mode	→ 85
RTD type	→ 85
Ohms offset	→ 86
Thermocouple type	→ 86
RTD connection type	→ 87
Process value	→ 87
Process variable	→ 87
0 % value	→ 88
100 % value	→ 88
Input value percent	→ 88
Input value	→ 89
Temperature offset after conversion	→ 89

Minimum probe temperature	→  89
Maximum probe temperature	→  90
Probe position	→  90
Calibration type AIP	→  91
Active calibration	→  91
Damping factor	→  91
Gauge current	→  92

## Operating mode



**Navigation** Expert → Input/output → Analog IP → Operating mode (14014)

**Description** Defines the operating mode of the analog input.

**Selection**

- Disabled
- RTD temperature input
- Gauge power supply

**Factory setting** Disabled

**Additional information**

Read access	Operator
Write access	Maintenance

## RTD type



**Navigation** Expert → Input/output → Analog IP → RTD type (14021)

**Prerequisite** **Operating mode (→ 85) = RTD temperature input**

**Description** Defines the type of the connected RTD.

**Selection**

- Cu50 (w=1.428, GOST)
- Cu53 (w=1.426, GOST)
- Cu90; 0°C (w=1.4274, GOST)
- Cu100; 25°C (w=1.4274, GOST)
- Cu100; 0°C(w=1.4274, GOST)
- Pt46 (w=1.391, GOST)
- Pt50 (w=1.391, GOST)
- Pt100(385) (a=0.00385, IEC751)
- Pt100(389) (a=0.00389, Canadian)
- Pt100(391) (a=0.003916, JIS1604)

- Pt100 (w=1.391, GOST)
- Pt500(385) (a=0.00385, IEC751)
- Pt1000(385) (a=0.00385, IEC751)
- Ni100(617) (a=0.00617, DIN43760)
- Ni120(672) (a=0.00672, DIN43760)
- Ni1000(617) (a=0.00617, DIN43760)

**Factory setting** Pt100(385) (a=0.00385, IEC751)

**Additional information**

Read access	Operator
Write access	Maintenance

**Ohms offset**



**Navigation** Expert → Input/output → Analog IP → Ohms offset (14026)

**Prerequisite**

**Operating mode** (→ 85) = RTD temperature input

**Description**

Defines a offset for the resistance.

This value is added to the measured resistance before the calculation of the temperature.

**User entry**

-10.0 to 10.0 Ohm

**Factory setting**

0 Ohm

**Additional information**

The value entered in this parameter is added to the measured resistance before the calculation of the temperature.

Read access	Operator
Write access	Maintenance

**Thermocouple type**



**Navigation** Expert → Input/output → Analog IP → Thermocouple typ (14008)

**Description**

Defines the type of the connected thermocouple.

**Selection**

- N type
- B type
- C type
- D type
- J type
- K type
- L type
- L GOST type
- R type
- S type
- T type
- U type

**Factory setting** N type

---

### RTD connection type



**Navigation** Expert → Input/output → Analog IP → RTD connect type (14022)

**Prerequisite** Operating mode (→ [85](#)) = RTD temperature input

**Description** Defines the connection type of the RTD.

**Selection**

- 4 wire RTD connection
- 2 wire RTD connection
- 3 wire RTD connection

**Factory setting** 4 wire RTD connection

**Additional information**

Read access	Operator
Write access	Maintenance

---

### Process value

**Navigation** Expert → Input/output → Analog IP → Process value (14003)

**Prerequisite** Operating mode (→ [85](#)) ≠ Disabled

**Description** Shows the measured value received via the analog input.

**Additional information**

Read access	Operator
Write access	-

---

### Process variable



**Navigation** Expert → Input/output → Analog IP → Process variable (14016)

**Prerequisite** Operating mode (→ [85](#)) ≠ RTD temperature input

**Description** Determines type of measured value.

**Selection**

- Level linearized
- Temperature
- Pressure
- Density

**Factory setting** Level linearized

**Additional information**

Read access	Operator
Write access	Maintenance

**0 % value****Navigation**

Expert → Input/output → Analog IP → 0 % value (14001)

**Prerequisite**

**Operating mode (→ 85) = 4..20mA input**

**Description**

Defines the value represented by a current of 4mA.

**User entry**

Signed floating-point number

**Factory setting**

0 mm

**Additional information**

Read access	Operator
Write access	Maintenance

**100 % value****Navigation**

Expert → Input/output → Analog IP → 100 % value (14013)

**Prerequisite**

**Operating mode (→ 85) = 4..20mA input**

**Description**

Defines the value represented by a current of 20mA.

**User entry**

Signed floating-point number

**Factory setting**

0 mm

**Additional information**

Read access	Operator
Write access	Maintenance

**Input value percent****Navigation**

Expert → Input/output → Analog IP → Input value [%] (14002)

**Prerequisite**

**Operating mode (→ 85) = 4..20mA input**

**Description**

Shows the input value in percent.

0% corresponds to 4 mA.

100% corresponds to 20 mA.

**Additional information**

- 0% corresponds to 4 mA
- 100% corresponds to 20 mA

Read access	Operator
Write access	-

**Input value****Navigation**

Expert → Input/output → Analog IP → Input value (14015)

**Prerequisite**

**Operating mode (→ 85) ≠ Disabled**

**Description**

Shows the value received via the analog input.

**Additional information**

Read access	Operator
Write access	-

**Temperature offset after conversion****Navigation**

Expert → Input/output → Analog IP → Temp. offset (14025)

**Prerequisite**

**Operating mode (→ 85) = RTD temperature input**

**Description**

Defines an offset for the measured temperature.

The offset is applied after the resistance of the RTD has been converted to a temperature.

**User entry**

-20 to 20 °C

**Factory setting**

0 °C

**Additional information**

The offset defined in this parameter is applied after the resistance of the RTD has been converted to a temperature.

Read access	Operator
Write access	Maintenance

**Minimum probe temperature****Navigation**

Expert → Input/output → Analog IP → Min. probe temp (14010)

**Prerequisite**

**Operating mode (→ 85) = RTD temperature input**

**Description**

Minimum approved temperature of the connected probe.

If the temperature falls below this value, the W&M status will be "invalid".

User entry -213 to 927 °C

Factory setting -100 °C

**Additional information**

Read access	Operator
Write access	Maintenance

---

## Maximum probe temperature



**Navigation** Expert → Input/output → Analog IP → Max. probe temp (14011)

**Prerequisite** **Operating mode (→ 85) = RTD temperature input**

**Description** Maximum approved temperature of the connected probe.  
If the temperature rises above this value, the W&M status will be "invalid".

User entry -213 to 927 °C

Factory setting 250 °C

**Additional information**

Read access	Operator
Write access	Maintenance

---

## Probe position



**Navigation** Expert → Input/output → Analog IP → Probe position (14009)

**Prerequisite** **Operating mode (→ 85) = RTD temperature input**

**Description** Position of the temperature probe, measured from zero position (tank bottom or datum plate). This parameter, in conjunction with the measured level, determines whether the temperature probe is still covered by the product. If this is no longer the case, the status of the temperature value will be "invalid".

User entry -5 000 to 30 000 mm

Factory setting 5 000 mm

**Additional information**

Read access	Operator
Write access	Maintenance

---

**Calibration type AIP**

---

**Navigation** Expert → Input/output → Analog IP → Cal type AIP (14018)**Prerequisite** **Operating mode (→ 85) ≠ Disabled****Description** Select calibration state of the analog input or output.**Selection**

- User calibration
- Factory calibration

**Factory setting** Factory calibration**Additional information** **Meaning of the options**

- Not calibrated  
This is a display option only. It can not be selected. It is shown if the analog input is not in a calibrated state.
- User calibration  
Activates a user calibration. The user calibration itself is defined in the **User calibration wizard**.
- Factory calibration  
Activates the factory calibration which is permanently stored in the device.

Read access	Operator
Write access	Maintenance

---

**Active calibration**

---

**Navigation** Expert → Input/output → Analog IP → Act. calibration (14012)**Prerequisite** **Operating mode (→ 85) ≠ Disabled****Description** Shows calibration state of the analog input.**Additional information**

Read access	Operator
Write access	-

---

**Damping factor**

---

**Navigation** Expert → Input/output → Analog IP → Damping factor (14004)**Prerequisite** **Operating mode (→ 85) ≠ Disabled****Description** Defines the damping constant (in seconds).**User entry** 0 to 999.9 s

**Factory setting** 0 s

**Additional information**

Read access	Operator
Write access	Maintenance

---

## Gauge current

---

**Navigation**   Expert → Input/output → Analog IP → Gauge current (14027)

**Prerequisite** **Operating mode (→  85) = Gauge power supply**


**Description** Shows the current on the power supply line for the connected device.

**Additional information**

Read access	Operator
Write access	-

### 3.2.3 "Analog I/O" submenu

**i** There is a **Analog I/O** submenu (→ 93) for each Analog I/O module of the device.  
This submenu refers to terminals 1 to 3 of this module (an analog input or output).  
For terminals 4 to 8 (always an analog input) refer to → 84.

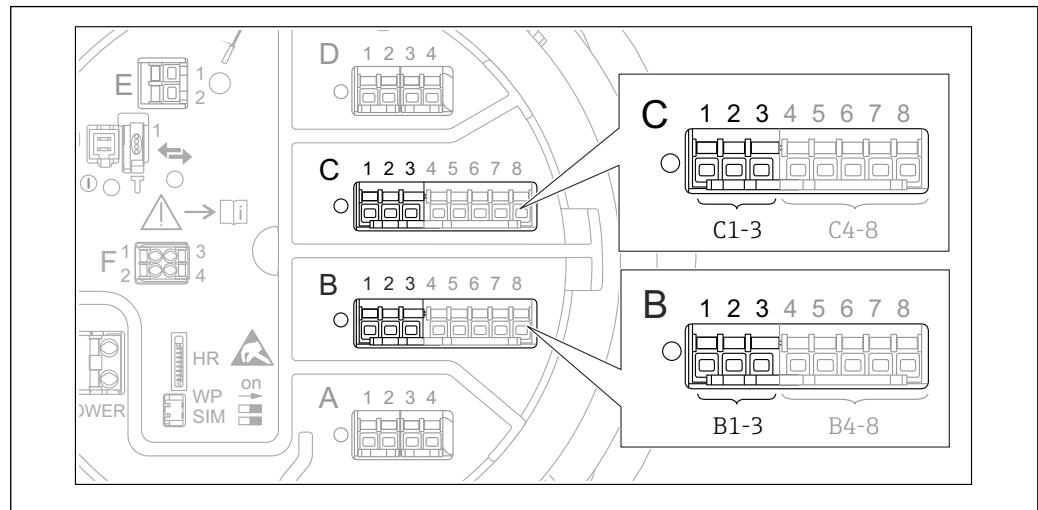

A0032464

7 Terminals for the "Analog I/O" submenu (→ 93) ("B1-3" or "C1-3", respectively)

Navigation

Expert → Input/output → Analog I/O

► Analog I/O	
Operating mode	→ 94
Current span	→ 95
Fixed current	→ 96
Analog input source	→ 96
Failure mode	→ 97
Error value	→ 98
Output out of range	→ 98
Error on event	→ 98
Input value	→ 99
0 % value	→ 99
100 % value	→ 99
Input value %	→ 100

Output value	→  100
Readback value	→  100
Feedback threshold	→  101
Process variable	→  101
Analog input 0% value	→  101
Analog input 100% value	→  102
Error event type	→  102
Process value	→  102
Input value in mA	→  103
Input value percent	→  103
Damping factor	→  103
Calibration	→  104
Active calibration	→  104
Used for SIL/WHG	→  104

**Operating mode****Navigation**

Expert → Input/output → Analog I/O → Operating mode (13958)

**Description**

Defines the operating mode of the analog I/O module.

**Selection**

- Disabled
- 4..20mA input
- HART master+4..20mA input
- HART master
- 4..20mA output
- HART slave +4..20mA output

**Factory setting**

Disabled

**Additional information**

Read access	Operator
Write access	Maintenance

*Meaning of the options*

Operating mode (→ 94)	Direction of signal	Type of signal
Disabled	-	-
4..20mA input	Input from 1 external device	Analog (4...20mA)
HART master+4..20mA input	Input from 1 external device	■ Analog (4...20mA) ■ HART
HART master	Input from up to 6 external devices	HART
4..20mA output	Output to higher-level unit	Analog (4...20mA)
HART slave +4..20mA output	Output to higher-level unit	■ Analog (4...20mA) ■ HART

Depending on the terminals used, the Analog I/O module is used in the passive or active mode.

Mode	Terminals of the I/O module		
	1	2	3
Passive (power supply from external source)	-	+	not used
Active (power supplied by the device itself)	not used	-	+



In the active mode the following conditions must be met:

- Maximum current consumption of the connected HART devices: 24 mA (i.e. 4 mA per device if 6 devices are connected).
- Output voltage of the Ex-d module: 17.0 V@4 mA to 10.5 V@22 mA
- Output voltage of the Ex-ia module: 18.5 V@4 mA to 12.5 V@22 mA

**Current span****Navigation**

Expert → Input/output → Analog I/O → Current span (13987)

**Prerequisite**

**Operating mode** parameter (→ 94) ≠ **Disabled** option or **HART master** option

**Description**

Defines the current range for the measured value transmission.

**Selection**

- 4...20 mA NE (3.8...20.5 mA)
- 4...20 mA US (3.9...20.8 mA)
- 4...20 mA (4...20.5 mA)
- Fixed value \*

**Factory setting**

4...20 mA NE (3.8...20.5 mA)

**Additional information**

Read access	Operator
Write access	Maintenance

\* Visibility depends on order options or device settings

*Meaning of the options*

Option	Current range for process variable	Minimum value	Lower alarm signal level	Upper alarm signal level	Maximum value
4...20 mA (4...20.5 mA)	4 to 20.5 mA	3.5 mA	< 3.6 mA	> 21.95 mA	22.6 mA
4...20 mA NE (3.8...20.5 mA)	3.8 to 20.5 mA	3.5 mA	< 3.6 mA	> 21.95 mA	22.6 mA
4...20 mA US (3.9...20.8 mA)	3.9 to 20.8 mA	3.5 mA	< 3.6 mA	> 21.95 mA	22.0 mA
Fixed current	Constant current, defined in the <b>Fixed current</b> parameter (→ 96).				

 In the case of an error, the output current assumes the value defined in the **Failure mode** parameter (→ 97).

**Fixed current****Navigation**

  Expert → Input/output → Analog I/O → Fixed current (13989)

**Prerequisite**

**Current span** (→ 95) = **Fixed current**

**Description**

Defines the fixed output current.

**User entry**

4 to 22.5 mA

**Factory setting**

4 mA

**Additional information**

Read access	Operator
Write access	Maintenance

**Analog input source****Navigation**

  Expert → Input/output → Analog I/O → Analog source (13974)

**Prerequisite**

- **Operating mode** (→ 94) = 4..20mA output or HART slave +4..20mA output
- **Current span** (→ 95) ≠ **Fixed current**

**Description**

Defines the process variable transmitted via the AIO.

**Selection**

- None
- Tank level
- Tank level %
- Tank ullage
- Tank ullage %
- Measured level
- Distance
- Displacer position
- Water level

- Upper interface level
- Lower interface level
- Bottom level
- Tank reference height
- Liquid temperature
- Vapor temperature
- Air temperature
- Observed density value
- Average profile density <sup>3)</sup>
- Upper density
- Middle density
- Lower density
- P1 (bottom)
- P2 (middle)
- P3 (top)
- GP 1 ... 4 value
- AIO B1-3 value <sup>3)</sup>
- AIO B1-3 value mA <sup>3)</sup>
- AIO C1-3 value <sup>3)</sup>
- AIO C1-3 value mA <sup>3)</sup>
- AIP B4-8 value <sup>3)</sup>
- AIP C4-8 value <sup>3)</sup>
- Element temperature 1 ... 24 <sup>3)</sup>
- HART device 1...15 PV <sup>3)</sup>
- HART device 1 ... 15 PV mA <sup>3)</sup>
- HART device 1 ... 15 PV % <sup>3)</sup>
- HART device 1 ... 15 SV <sup>3)</sup>
- HART device 1 ... 15 TV <sup>3)</sup>
- HART device 1 ... 15 QV <sup>3)</sup>

**Factory setting** Tank level

**Additional information**

Read access	Operator
Write access	Maintenance

---

**Failure mode**



**Navigation**

Diagram: Expert → Input/output → Analog I/O → Failure mode (13988)

**Prerequisite**

Operating mode (→ [Diagram 94](#)) = 4..20mA output or HART slave +4..20mA output

**Description**

Defines the output behavior in case of an error.

**Selection**

- Min.
- Max.
- Last valid value
- Actual value
- Defined value

**Factory setting**

Max.

---

3) Visibility depends on order options or device settings

**Additional information**

Read access	Operator
Write access	Maintenance

**Error value****Navigation**

Expert → Input/output → Analog I/O → Error value (13972)

**Prerequisite**

**Failure mode (→ 97) = Defined value**

**Description**

Defines the output value in case of an error.

**User entry**

3.4 to 22.6 mA

**Factory setting**

22 mA

**Additional information**

Read access	Operator
Write access	Maintenance

**Output out of range****Navigation**

Expert → Input/output → Analog I/O → Output out range (13971)

**Prerequisite**

**Operating mode (→ 94) = 4..20mA output or HART slave +4..20mA output**

**Description**

Behavior of current output if the value is out of allowed range.

**Selection**

- Last valid value
- Alarm
- None

**Factory setting**

Alarm

**Additional information**

Read access	Operator
Write access	Maintenance

**Error on event****Navigation**

Expert → Input/output → Analog I/O → Error on event (13967)

**Prerequisite**

**Operating mode (→ 94) = 4..20mA output or HART slave +4..20mA output**

**Description**

Defines to which type of event (alarm or warning) the output responds.

<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Output related error</li> <li>■ Any error</li> <li>■ Any error or warning</li> </ul>
------------------	---

<b>Factory setting</b>	Output related error
------------------------	----------------------

<b>Additional information</b>	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 2px;">Read access</td><td style="padding: 2px;">Operator</td></tr> <tr> <td style="padding: 2px;">Write access</td><td style="padding: 2px;">Maintenance</td></tr> </table>	Read access	Operator	Write access	Maintenance
Read access	Operator				
Write access	Maintenance				

---

**Input value**

---

<b>Navigation</b>	  Expert → Input/output → Analog I/O → Input value (13979)
-------------------	--

<b>Prerequisite</b>	<ul style="list-style-type: none"> <li>■ Operating mode (→ <a href="#">94</a>) = 4..20mA output or HART slave +4..20mA output</li> <li>■ Current span (→ <a href="#">95</a>) ≠ Fixed current</li> </ul>
---------------------	---

<b>Description</b>	Shows the input value of the analog I/O module.
--------------------	---

<b>Additional information</b>	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 2px;">Read access</td><td style="padding: 2px;">Operator</td></tr> <tr> <td style="padding: 2px;">Write access</td><td style="padding: 2px;">-</td></tr> </table>	Read access	Operator	Write access	-
Read access	Operator				
Write access	-				

---

**0 % value**

---



<b>Navigation</b>	  Expert → Input/output → Analog I/O → 0 % value (13954)
-------------------	--

<b>Prerequisite</b>	<ul style="list-style-type: none"> <li>■ Operating mode (→ <a href="#">94</a>) = 4..20mA output or HART slave +4..20mA output</li> <li>■ Current span (→ <a href="#">95</a>) ≠ Fixed current</li> </ul>
---------------------	---

<b>Description</b>	Value corresponding to an output current of 0% (4mA).
--------------------	---

<b>User entry</b>	Signed floating-point number
-------------------	------------------------------

<b>Factory setting</b>	0 Unitless
------------------------	------------

<b>Additional information</b>	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 2px;">Read access</td><td style="padding: 2px;">Operator</td></tr> <tr> <td style="padding: 2px;">Write access</td><td style="padding: 2px;">Maintenance</td></tr> </table>	Read access	Operator	Write access	Maintenance
Read access	Operator				
Write access	Maintenance				

---

**100 % value**

---



<b>Navigation</b>	  Expert → Input/output → Analog I/O → 100 % value (13968)
-------------------	--

<b>Prerequisite</b>	<ul style="list-style-type: none"> <li>■ Operating mode (→ <a href="#">94</a>) = 4..20mA output or HART slave +4..20mA output</li> <li>■ Current span (→ <a href="#">95</a>) ≠ Fixed current</li> </ul>
---------------------	---

**Description** Value corresponding to an output current of 100% (20mA).

**User entry** Signed floating-point number

**Factory setting** 0 Unitless

#### Additional information

Read access	Operator
Write access	Maintenance

---

### Input value %

---

**Navigation**   Expert → Input/output → Analog I/O → Input value % (13955)

**Prerequisite**

- **Operating mode** (→ [94](#)) = 4..20mA output or HART slave +4..20mA output
- **Current span** (→ [95](#)) ≠ Fixed current

**Description** Shows the output value as a percentage of the complete 4...20mA range.

**Additional information**

Read access	Operator
Write access	-

---

### Output value

---

**Navigation**   Expert → Input/output → Analog I/O → Output value (13969)

**Operating mode** (→ [94](#)) = 4..20mA output or HART slave +4..20mA output

**Description** Shows the output value in mA.

**Additional information**

Read access	Operator
Write access	-

---

### Readback value

---

**Navigation**   Expert → Input/output → Analog I/O → Readback value (13957)

**Operating mode** (→ [94](#)) = 4..20mA output or HART slave +4..20mA output

**Description** Shows the measured (feedback) current at the output.

**User interface** 0 to 65 535 µA

**Factory setting** 0 µA

**Additional information**

Read access	Operator
Write access	-

**Feedback threshold****Navigation**
  Expert → Input/output → Analog I/O → Feedback thresh. (13956)
**Prerequisite**
**Operating mode (→  94) = 4..20mA output or HART slave +4..20mA output**
**Description**

Shows the feedback threshold.

**Additional information**

Read access	Operator
Write access	-

**Process variable****Navigation**
  Expert → Input/output → Analog I/O → Process variable (13964)
**Prerequisite**
**Operating mode (→  94) = 4..20mA input or HART master+4..20mA input**
**Description**

Defines the type of measuring variable.

**Selection**

- Level linearized
- Temperature
- Pressure
- Density

**Factory setting**

Level linearized

**Additional information**

Read access	Operator
Write access	Maintenance

**Analog input 0% value****Navigation**
  Expert → Input/output → Analog I/O → AI 0% value (13977)
**Prerequisite**
**Operating mode (→  94) = 4..20mA input or HART master+4..20mA input**
**Description**

Value corresponding to an input current of 0% (4mA).

**User entry**

Signed floating-point number

**Factory setting**

0 mm

**Additional information**

Read access	Operator
Write access	Maintenance

**Analog input 100% value****Navigation**

Expert → Input/output → Analog I/O → AI 100% value (13965)

**Prerequisite**

**Operating mode (→ [94](#)) = 4..20mA input or HART master+4..20mA input**

**Description**

Value corresponding to an input current of 100% (20mA).

**User entry**

Signed floating-point number

**Factory setting**

0 mm

**Additional information**

Read access	Operator
Write access	Maintenance

**Error event type****Navigation**

Expert → Input/output → Analog I/O → Error event type (13953)

**Prerequisite**

**Operating mode (→ [94](#)) ≠ Disabled or HART master**

**Description**

Defines the type of event message (alarm/warning) in case of an error or output out of range in the analog I/O module.

**Selection**

- None
- Warning
- Alarm

**Factory setting**

Warning

**Additional information**

Read access	Operator
Write access	Maintenance

**Process value****Navigation**

Expert → Input/output → Analog I/O → Process value (13963)

**Prerequisite**

**Operating mode (→ [94](#)) = 4..20mA input or HART master+4..20mA input**

**Description**

Shows the input value scaled to customer units.

**Additional information**

<b>Read access</b>	Operator
<b>Write access</b>	-

**Input value in mA****Navigation**

④⑤ Expert → Input/output → Analog I/O → Input val. in mA (13970)

**Prerequisite**

**Operating mode (→ 94) = 4..20mA input or HART master+4..20mA input**

**Description**

Shows the input value in mA.

**Additional information**

<b>Read access</b>	Operator
<b>Write access</b>	-

**Input value percent****Navigation**

④⑤ Expert → Input/output → Analog I/O → Input value [%] (13978)

**Prerequisite**

**Operating mode (→ 94) = 4..20mA input or HART master+4..20mA input**

**Description**

Shows the input value as a percentage of the complete 4...20mA current range.

**Additional information**

<b>Read access</b>	Operator
<b>Write access</b>	-

**Damping factor****Navigation**

④⑤ Expert → Input/output → Analog I/O → Damping factor (13951)

**Prerequisite**

**Operating mode (→ 94) ≠ Disabled or HART master**

**Description**

Defines the damping constant (in seconds).

**User entry**

0 to 999.9 s

**Factory setting**

0 s

**Additional information**

<b>Read access</b>	Operator
<b>Write access</b>	Maintenance

**Calibration****Navigation**

Expert → Input/output → Analog I/O → Calibration (13966)

**Prerequisite**

**Operating mode (→ 94) ≠ Disabled or HART master**

**Description**

Select calibration state of the analog input or output.

**Selection**

- User calibration
- Factory calibration

**Factory setting**

Factory calibration

**Additional information**

Read access	Operator
Write access	Maintenance

**Active calibration****Navigation**

Expert → Input/output → Analog I/O → Act. calibration (13981)

**Prerequisite**

**Operating mode (→ 94) ≠ Disabled or HART master**

**Description**

Indicates the calibration status of the Analog I/O module.

**Additional information****Meaning of the options**

- **User calibration**  
The calibration entered by the user is active.
- **Factory calibration**  
The calibration stored permanently in the device is active.

Read access	Operator
Write access	-

**Used for SIL/WHG****Navigation**

Expert → Input/output → Analog I/O → Used for SIL/WHG (13980)

**Prerequisite**

- **Operating mode (→ 94) = 4..20mA output or HART slave +4..20mA output**
- The device has a SIL approval.

**Description**

Determines whether the discrete I/O module is in SIL/WHG mode.

**Selection**

- Enabled
- Disabled

**Factory setting**

Disabled

**Additional information**

Read access	Operator
Write access	Maintenance

---

**Expected SIL/WHG chain**

---

**Navigation** Expert → Input/output → Analog I/O → SIL/WHG chain (13952)**Prerequisite**


- **Operating mode (→ 94) = 4..20mA output or HART slave +4..20mA output**
- The device has a SIL approval.

**Additional information**

Read access	Operator
Write access	-

### 3.2.4 "Digital Xx-x" submenu

- i** In the operating menu, each digital input or output is designated by the respective slot of the terminal compartment and two terminals within this slot. **A1-2**, for example, denotes terminals 1 and 2 of slot **A**. The same is valid for slots **B**, **C** and **D** if they contain a Digital IO module.
- In this document, **Xx-x** designates any of these submenus. The structure of all these submenus is the same.

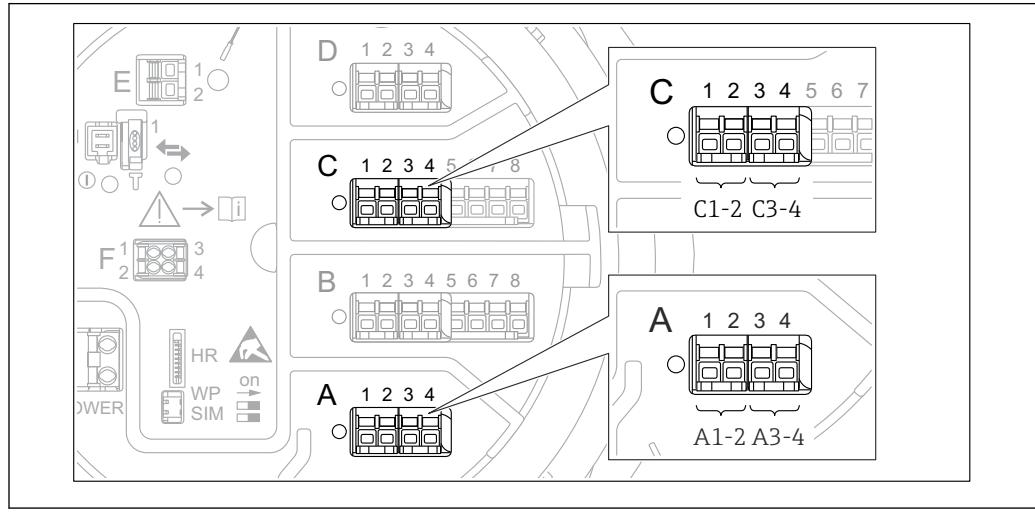

8 Designation of the digital inputs or outputs (examples)

Navigation

Expert → Input/output → Digital Xx-x → Operating mode  
(13911)

<b>► Digital Xx-x</b>	
Operating mode	→ 107
Digital input source	→ 107
Input value	→ 108
Contact type	→ 108
Output simulation	→ 109
Output value	→ 110
Readback value	→ 110
Error on event	→ 110
Damping factor	→ 111
Used for SIL/WHG	→ 111

**Operating mode****Navigation**

Expert → Input/output → Digital Xx-x → Operating mode (13911)

**Description**


Defines the operating mode of the discrete I/O module.

**Selection**

- Disabled
- Output passive
- Input passive
- Input active

**Factory setting**

Disabled

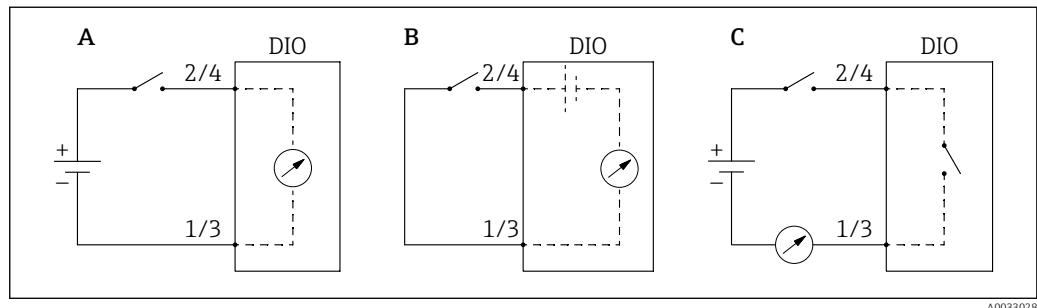**Additional information**

9 Operating modes of the Digital I/O module

- A Input passive  
B Input active  
C Output passive

Read access	Operator
Write access	Maintenance

**Digital input source****Navigation**

Expert → Input/output → Digital Xx-x → Digital source (13907)

**Prerequisite**

Operating mode (→ 107) = Output passive

**Description**

Defines which device state is indicated by the digital output.

**Selection**

- None
- Alarm x any
- Alarm x High
- Alarm x HighHigh
- Alarm x High or HighHigh
- Alarm x Low
- Alarm x LowLow
- Alarm x Low or LowLow
- Digital Xx-x
- Primary Modbus x
- Secondary Modbus x

**Factory setting**

None

**Additional information****Meaning of the options**

- **Alarm x any, Alarm x High, Alarm x HighHigh, Alarm x High or HighHigh, Alarm x Low, Alarm x LowLow, Alarm x Low or LowLow**

The digital output indicates if the selected alarm is currently active. The alarms themselves are defined in the **Alarm 1 to 4** submenus.

- **Digital Xx-x<sup>4)</sup>**

The digital signal present at the digital input **Xx-x** is passed through to the digital output.

- **Modbus A1-4 Discrete x**

**Modbus B1-4 Discrete x**

**Modbus C1-4 Discrete x**

**Modbus D1-4 Discrete x**

The digital value written by the Modbus Master device to the **Modbus discrete x** parameter<sup>5)</sup> is passed to the digital output. For details refer to Special Documentation SD02066G.

Read access	Operator
Write access	Maintenance

**Input value****Navigation**

④ ⑤ Expert → Input/output → Digital Xx-x → Input value (13901)

**Prerequisite**

**Operating mode (→ ④ 107) = "Input passive" option or "Input active" option**

**Description**

Shows the digital input value.

**Additional information**

Read access	Operator
Write access	-

**Contact type****Navigation**

④ ⑤ Expert → Input/output → Digital Xx-x → Contact type (13912)

**Prerequisite**

**Operating mode (→ ④ 107) ≠ Disabled**

**Description**

Determines the switching behavior of the input or output.

**Selection**

- Normally open
- Normally closed

**Factory setting**

Normally open

**Additional information**

Read access	Operator
Write access	Maintenance

4) Only present if "Operating mode (→ ④ 107)" = "Input passive" or "Input active" for the respective Digital I/O module.

5) Expert → Communication → Modbus Xx-x → Modbus discrete x

**Output simulation****Navigation**

Expert → Input/output → Digital Xx-x → Output sim (13909)

**Prerequisite**

Operating mode (→ 107) = Output passive

**Description**

Sets the output to a specific simulated value.

**Selection**

- Disable
- Simulating active
- Simulating inactive
- Fault 1
- Fault 2


**Factory setting**

Disable

**Additional information**

Read access	Operator
Write access	Maintenance

The digital output consists of two relays connected in series:

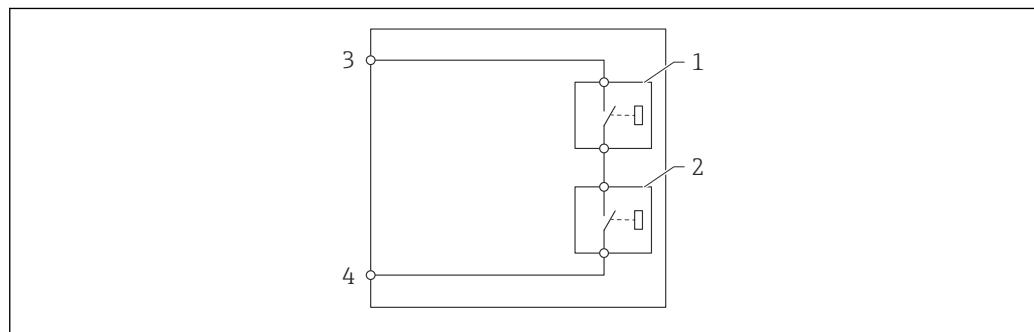

A0028602

10 The two relays of a digital output

1/2 The relays

3/4 The terminals of the digital output

The switching state of these relays is defined by the **Output simulation** parameter as follows:

Output simulation	State of relay 1	State of relay 2	Expected result on the terminals of the I/O module
Simulating active	Closed	Closed	Closed
Simulating inactive	Open	Open	Open
Fault 1	Closed	Open	Open
Fault 2	Open	Closed	Open

The **Fault 1** and **Fault 2** options can be used to check the correct switching behavior of the two relays.

---

## Output value

---

**Navigation**

Expert → Input/output → Digital Xx-x → Output value (13902)

**Prerequisite**

Operating mode (→ [107](#)) = Output passive

**Description**

Shows the digital output value.

**Additional information**

Read access	Operator
Write access	-

---

## Readback value

---

**Navigation**

Expert → Input/output → Digital Xx-x → Readback value (13903)

**Prerequisite**

Operating mode (→ [107](#)) = Output passive

**Description**

Shows the value read back from the output.

**Additional information**

Read access	Operator
Write access	-

---

## Error on event

---

**Navigation**

Expert → Input/output → Digital Xx-x → Error on event (13916)

**Prerequisite**

Operating mode (→ [107](#)) = Output passive

**Description**

Defines to which type of events (error or warning) the output responds. Choice: only output related or all.

**Selection**

- Output related error
- Any error
- Any error or warning

**Factory setting**

Output related error

**Additional information**

Read access	Operator
Write access	Maintenance

---

**Damping factor**

**Navigation** Expert → Input/output → Digital Xx-x → Damping factor (13904)

**Prerequisite** **Operating mode (→ 107) ≠ Disabled**

**Description** Defines the damping constant.

**User entry** 1 to 10 s

**Factory setting** 5 s

**Additional information**

Read access	Operator
Write access	Maintenance

---

**Used for SIL/WHG**

**Navigation** Expert → Input/output → Digital Xx-x → Used for SIL/WHG (13910)

**Prerequisite**  
■ **Operating mode (→ 107) = Output passive**  
■ The device has a SIL certificate.

**Description** Determines whether the discrete I/O module is in SIL/WHG mode.

**Selection**  
■ Enabled  
■ Disabled


**Factory setting** Disabled

**Additional information**

Read access	Operator
Write access	Maintenance

### 3.3 "Communication" submenu

This menu contains a submenu for each digital communication interface of the device. The communication interfaces are designated by "X1-4" where "X" specifies the slot in the terminal compartment and "1-4" the terminals within this slot.

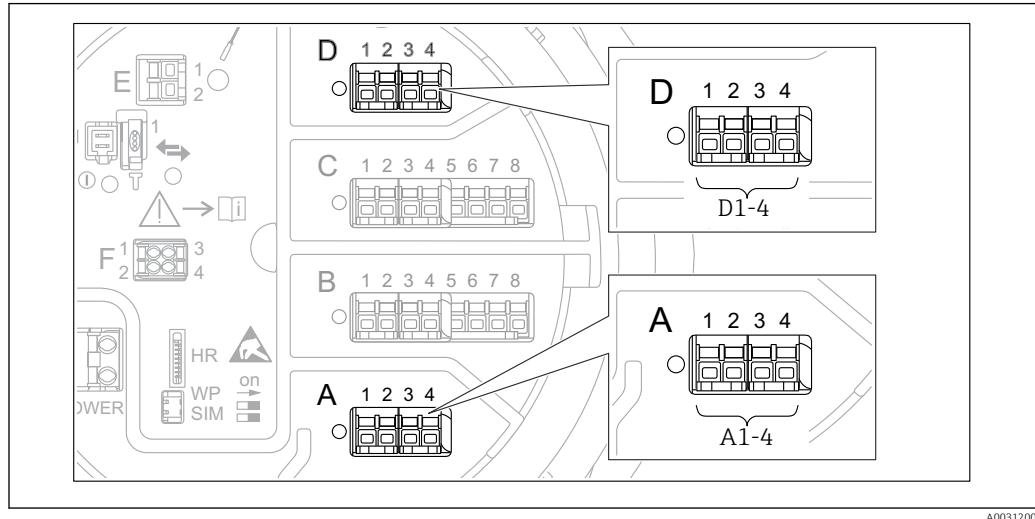

■ 11 Designation of the "Modbus" or "V1" modules (examples); depending on the device version these modules may also be in slot B or C.

*Navigation*




■ ■ Expert → Communication

### 3.3.1 "Modbus Xx-x", "V1 Xx-x" or "WM550 Xx-x" submenu

This submenu is only present for devices with MODBUS, V1 and/or WM550 communication interface. There is one submenu of this type for each communication interface.

#### Navigation

Expert → Communication → Modbus Xx-x / V1 Xx-x / WM550 Xx-x

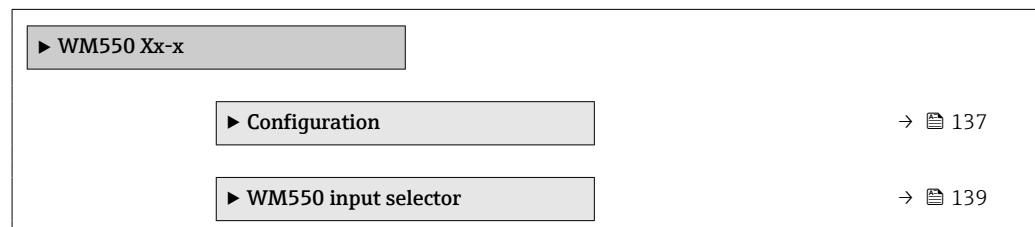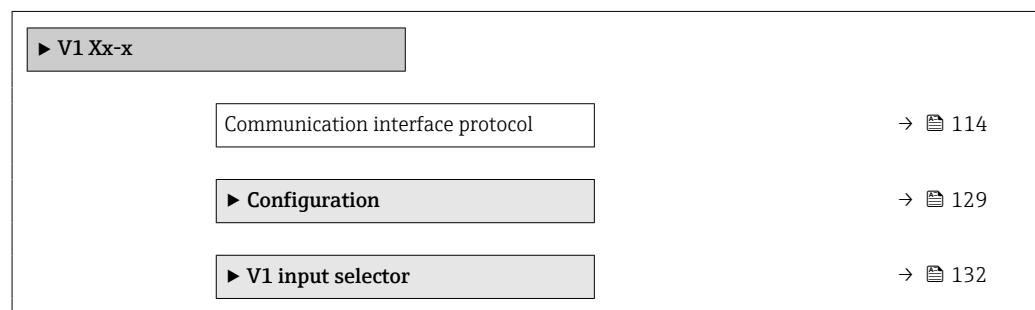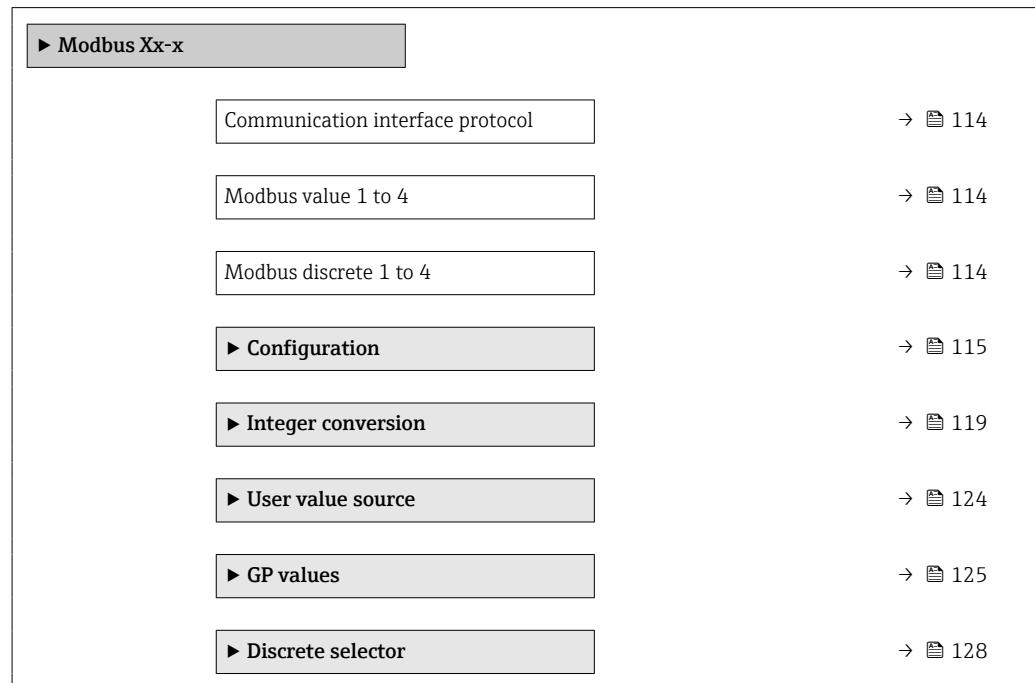

## Communication interface protocol

### Navigation

  Expert → Communication → Modbus X1-4 / V1 X1-4 / WM550 X1-4 → Commu I/F protoc (13201)

### Description

Shows the type of communication protocol.

### Additional information

Read access	Operator
Write access	-

## Modbus value 1 to 4

### Navigation

  Expert → Communication → Modbus Xx-x → Modbus value 1 to 4 (13206–1 to 4)

### Prerequisite

**Communication interface protocol (→  114) = MODBUS**

### Description

Shows the respective floating point value written by the host system.

### Additional information

Read access	Operator
Write access	-

 The Modbus interface provides four floating point values which can be written to by the Host system. These values can be linked to specific functions (e.g. providing the air temperature value).

## Modbus discrete 1 to 4

### Navigation

  Expert → Communication → Modbus Xx-x → Modbus discr. 1 to 4 (13240–1 to 4)

### Prerequisite

**Communication interface protocol (→  114) = MODBUS**

### Description

Shows the integer value written by the host-system.

### Additional information

Read access	Operator
Write access	-

 The Modbus interface provides four discrete (integer) registers which can be written to by the Host system. These values can be linked to specific functions (e.g. controlling a discrete output).

In the device these values are converted into the following discrete state values:

- Unknown (integer value 0)
- Inactive (integer value 1)
- Active (integer value 2)
- Invalid (integer value >= 3)

**"Configuration" submenu (Modbus)**

 Only visible for devices with a Modbus I/O module.

*Navigation*

Expert → Communication → Modbus Xx-x → Configuration

► Configuration	
Baudrate	→ <a href="#">115</a>
Parity	→ <a href="#">116</a>
Modbus address	→ <a href="#">116</a>
Float swap mode	→ <a href="#">116</a>
Invalid data	→ <a href="#">117</a>
Word type	→ <a href="#">117</a>
CRC seed	→ <a href="#">117</a>
Old TSM mode	→ <a href="#">118</a>
Bus termination	→ <a href="#">118</a>

**Baudrate****Navigation**

Expert → Communication → Modbus X1-4 → Configuration → Baudrate (13203)

**Prerequisite**

**Communication interface protocol (→ [114](#)) = MODBUS**

**Description**

Defines the baud rate of the communication.

**Selection**

- 600 BAUD
- 1200 BAUD
- 2400 BAUD
- 4800 BAUD
- 9600 BAUD \*
- 19200 BAUD \*

**Factory setting**

9600 BAUD

**Additional information**

Read access	Operator
Write access	Maintenance

\* Visibility depends on order options or device settings

---

**Parity** 

**Navigation**   Expert → Communication → Modbus X1-4 → Configuration → Parity (13204)

**Prerequisite** **Communication interface protocol (→  114) = MODBUS**

**Description** Defines the parity of the Modbus communication.

- Selection**
- Odd
  - Even
  - None / 1 stop bit
  - None / 2 stop bits

**Factory setting** None / 1 stop bit

**Additional information**

Read access	Operator
Write access	Maintenance

---

**Modbus address** 

**Navigation**   Expert → Communication → Modbus X1-4 → Configuration → Modbus address (13205)

**Prerequisite** **Communication interface protocol (→  114) = MODBUS**

**Description** Defines the Modbus address of the device.

**User entry** 1 to 247

**Factory setting** 1

**Additional information**

Read access	Operator
Write access	Maintenance

---

**Float swap mode** 

**Navigation**   Expert → Communication → Modbus X1-4 → Configuration → Float swap mode (13232)

**Prerequisite** **Communication interface protocol (→  114) = MODBUS**

**Description** Sets the format of how the floating point value is transferred on Modbus.

- Selection**
- Normal 3-2-1-0
  - Swap 0-1-2-3
  - WW Swap 1-0-3-2
  - WW Swap 2-3-0-1

**Factory setting** Swap 0-1-2-3

**Additional information**

Read access	Operator
Write access	Maintenance

## Invalid data



**Navigation** Expert → Communication → Modbus Xx-x → Configuration → Invalid data (13243)

**Prerequisite** **Communication interface protocol (→ 114) = MODBUS**

**Description** Sets what byte is sent in a message that contains invalid data.

**Selection**

- 0x00
- 0xFF

**Factory setting** 0x00

**Additional information**

Read access	Operator
Write access	Maintenance

## Word type



**Navigation** Expert → Communication → Modbus Xx-x → Configuration → Word type (13208)

**Prerequisite** **Communication interface protocol (→ 114) = MODBUS**

**Description** Selects if the integer value has the range 0 to +65535 or -32768 to +32767.

**Selection**

- Unsigned
- Signed

**Factory setting** Unsigned

**Additional information**

Read access	Operator
Write access	Maintenance

## CRC seed



**Navigation** Expert → Communication → Modbus Xx-x → Configuration → CRC seed (13248)

**Prerequisite** **Communication interface protocol (→ 114) = MODBUS**

**Description** CRC seed value selection used for all communication CRC calculations.

<b>Selection</b>	<ul style="list-style-type: none"> <li>■ 0x0000</li> <li>■ 0xFFFF</li> </ul>				
<b>Factory setting</b>	0xFFFF				
<b>Additional information</b>	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 2px;">Read access</td> <td style="padding: 2px;">Operator</td> </tr> <tr> <td style="padding: 2px;">Write access</td> <td style="padding: 2px;">Maintenance</td> </tr> </table>	Read access	Operator	Write access	Maintenance
Read access	Operator				
Write access	Maintenance				

## Old TSM mode



<b>Navigation</b>	Expert → Communication → Modbus Xx-x → Configuration → Old TSM mode (13213)				
<b>Prerequisite</b>	<b>Communication interface protocol (→  114) = MODBUS</b>				
<b>Description</b>	Selects the type of value available at the NRF590 SW vers.1 compatible modbus map (Address 3000-3195) addresses.				
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Float values</li> <li>■ Integer values</li> </ul>				
<b>Factory setting</b>	Float values				
<b>Additional information</b>	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 2px;">Read access</td> <td style="padding: 2px;">Operator</td> </tr> <tr> <td style="padding: 2px;">Write access</td> <td style="padding: 2px;">Maintenance</td> </tr> </table>	Read access	Operator	Write access	Maintenance
Read access	Operator				
Write access	Maintenance				

## Bus termination



<b>Navigation</b>	Expert → Communication → Modbus X1-4 → Configuration → Bus termination (13249)				
<b>Prerequisite</b>	<b>Communication interface protocol (→  114) = MODBUS</b>				
<b>Description</b>	Activates or deactivates the bus termination at the device. Should only be activated on the last device in a loop.				
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Off</li> <li>■ On</li> </ul>				
<b>Factory setting</b>	Off				
<b>Additional information</b>	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 2px;">Read access</td> <td style="padding: 2px;">Operator</td> </tr> <tr> <td style="padding: 2px;">Write access</td> <td style="padding: 2px;">Maintenance</td> </tr> </table>	Read access	Operator	Write access	Maintenance
Read access	Operator				
Write access	Maintenance				

**"Integer conversion" submenu**

 Only visible for devices with a Modbus I/O module.

*Navigation*

 Expert → Communication → Modbus Xx-x → Integer convers

► Integer conversion	
Level 0%	→  119
Level 100%	→  120
Temperature 0%	→  120
Temperature 100%	→  120
Pressure 0%	→  121
Pressure 100%	→  121
Density 0%	→  121
Density 100%	→  122
User 0%	→  122
User 100%	→  122
Percent 0%	→  123
Percent 100%	→  123

**Level 0%****Navigation**

 Expert → Communication → Modbus Xx-x → Integer convers → Level 0% (13214)

**Description**

Defines the level that represents 0% on the integer value scale.

**User entry**

Signed floating-point number

**Factory setting**

0.00 mm

**Additional information**

Read access	Operator
Write access	Maintenance

---

**Level 100%**

**Navigation** Expert → Communication → Modbus Xx-x → Integer convers → Level 100% (13250)

**Description** Defines the level that represents 100% on the integer value scale.

**User entry** Signed floating-point number

**Factory setting** 30.0 mm

**Additional information**

Read access	Operator
Write access	Maintenance

---

**Temperature 0%**

**Navigation** Expert → Communication → Modbus Xx-x → Integer convers → Temperature 0% (13215)

**Description** Defines the temperature that represents 0% on the integer value scale.

**User entry** Signed floating-point number

**Factory setting** 233.15 °C

**Additional information**

Read access	Operator
Write access	Maintenance

---

**Temperature 100%**

**Navigation** Expert → Communication → Modbus Xx-x → Integer convers → Temperature 100% (13216)

**Description** Defines the temperature that represents 100% on the integer value scale.

**User entry** Signed floating-point number

**Factory setting** 373.15 °C

**Additional information**

Read access	Operator
Write access	Maintenance

---

**Pressure 0%**

**Navigation** Expert → Communication → Modbus Xx-x → Integer convers → Pressure 0% (13217)

**Description** Defines the pressure that represents 0% on the integer value scale.

**User entry** Signed floating-point number

**Factory setting** 0 bar

**Additional information**

Read access	Operator
Write access	Maintenance

---

**Pressure 100%**

**Navigation** Expert → Communication → Modbus Xx-x → Integer convers → Pressure 100% (13251)

**Description** Defines the pressure that represents 100% on the integer value scale.

**User entry** Signed floating-point number

**Factory setting** 25 000 bar

**Additional information**

Read access	Operator
Write access	Maintenance

---

**Density 0%**

**Navigation** Expert → Communication → Modbus Xx-x → Integer convers → Density 0% (13252)

**Description** Defines the density that represents 0% on the integer value scale.

**User entry** Signed floating-point number

**Factory setting** 0 kg/m<sup>3</sup>

**Additional information**

Read access	Operator
Write access	Maintenance

---

**Density 100%****Navigation**

Diagram: Expert → Communication → Modbus Xx-x → Integer convers → Density 100% (13218)

**Description**

Defines the density that represents 100% on the integer value scale.

**User entry**

Signed floating-point number

**Factory setting**

1 000 kg/m<sup>3</sup>

**Additional information**

Read access	Operator
Write access	Maintenance

---

**User 0%****Navigation**

Diagram: Expert → Communication → Modbus Xx-x → Integer convers → User 0% (13221)

**Description**

Defines the value of the user selected variable that represents 0% on the integer value scale.

**User entry**

Signed floating-point number

**Factory setting**

0

**Additional information**

Read access	Operator
Write access	Maintenance

---

**User 100%****Navigation**

Diagram: Expert → Communication → Modbus Xx-x → Integer convers → User 100% (13222)

**Description**

Defines the value of the user selected variable that represents 100% on the integer value scale.

**User entry**

Signed floating-point number

**Factory setting**

0

**Additional information**

Read access	Operator
Write access	Maintenance

---

**Percent 0%****Navigation**

Expert → Communication → Modbus Xx-x → Integer convers → Percent 0% (13202)

**Description**

Defines the percentage of the measured value that represents 0% on the integer value scale.

**User entry**

-200 to +400 %

**Factory setting**

0.00 %

**Additional information**

Read access	Operator
Write access	Maintenance

---

**Percent 100%****Navigation**

Expert → Communication → Modbus Xx-x → Integer convers → Percent 100% (13234)

**Description**

Defines the percentage of the measured value that represents 100% on the integer value scale.

**User entry**

-200 to +400 %

**Factory setting**

100 %

**Additional information**

Read access	Operator
Write access	Maintenance

**"User value source" submenu**

 Only visible for devices with a Modbus I/O module.

**Navigation**

 Expert → Communication → Modbus Xx-x → UserVal source  
→ UserVal 1 source (13209)

**User value 1 to 8 source****Navigation**

 Expert → Communication → Modbus Xx-x → UserVal source → UserVal 1 to 8 source  
(13209-1 to 8)

**Description**

Selects which parameter shall be transmitted as User value x.

**Selection**

- None
- Tank ullage
- Distance
- Upper interface level
- Lower interface level
- Bottom level
- Average profile density<sup>6)</sup>
- Vapor density
- Manual density
- P1 position
- P3 position
- GP 1...4 value
- AIO B1-3 value
- AIO C1-3 value
- AIP B4-8 value
- AIP C4-8 value
- HART device 1...15 PV
- HART device 1...15 PV mA
- HART device 1...15 PV %
- HART device 1...15 SV
- HART device 1...15 TV
- HART device 1...15 QV

**Factory setting**

None

**Additional information**

Read access	Operator
Write access	Maintenance

6) Visibility depends on order options or device settings

**"GP values" submenu***Navigation*

  Expert → Communication → Modbus Xx-x → GP values → GP 1 value 0% (13223)

 GP values	
GP 1 value 0%	→  125
GP 1 value 100%	→  125
GP 2 value 0%	→  126
GP 2 value 100%	→  126
GP 3 value 0%	→  126
GP 3 value 100%	→  127
GP 4 value 0%	→  127
GP 4 value 100%	→  127

**GP 1 value 0%****Navigation**

  Expert → Communication → Modbus Xx-x → GP values → GP 1 value 0% (13223)

**Description**

Defines the GP1 value that represents 0% on the integer value scale.

**User entry**

Signed floating-point number

**Factory setting**

0 Unitless

**Additional information**

Read access	Operator
Write access	Maintenance

**GP 1 value 100%****Navigation**

  Expert → Communication → Modbus Xx-x → GP values → GP 1 value 100% (13224)

**Description**

Defines the GP1 value that represents 100% on the integer value scale.

**User entry**

Signed floating-point number

**Factory setting**

0 Unitless

**Additional information**

Read access	Operator
Write access	Maintenance

**GP 2 value 0%****Navigation**

Diagram: Expert → Communication → Modbus Xx-x → GP values → GP 2 value 0% (13257)

**Description**

Defines the GP2 value that represents 0% on the integer value scale.

**User entry**

Signed floating-point number

**Factory setting**

0 None

**Additional information**

Read access	Operator
Write access	Maintenance

**GP 2 value 100%****Navigation**

Diagram: Expert → Communication → Modbus Xx-x → GP values → GP 2 value 100% (13258)

**Description**

Defines the GP2 value that represents 100% on the integer value scale.

**User entry**

Signed floating-point number

**Factory setting**

0 None

**Additional information**

Read access	Operator
Write access	Maintenance

**GP 3 value 0%****Navigation**

Diagram: Expert → Communication → Modbus Xx-x → GP values → GP 3 value 0% (13259)

**Description**

Defines the GP3 value that represents 0% on the integer value scale.

**User entry**

Signed floating-point number

**Factory setting**

0 Unitless

**Additional information**

Read access	Operator
Write access	Maintenance

---

**GP 3 value 100%**

**Navigation** Expert → Communication → Modbus Xx-x → GP values → GP 3 value 100% (13226)

**Description** Defines the GP3 value that represents 100% on the integer value scale.

**User entry** Signed floating-point number

**Factory setting** 0 Unitless

**Additional information**

Read access	Operator
Write access	Maintenance

---

**GP 4 value 0%**

**Navigation** Expert → Communication → Modbus Xx-x → GP values → GP 4 value 0% (13225)

**Description** Defines the GP4 value that represents 0% on the integer value scale.

**User entry** Signed floating-point number

**Factory setting** 0 Unitless

**Additional information**

Read access	Operator
Write access	Maintenance

---

**GP 4 value 100%**

**Navigation** Expert → Communication → Modbus Xx-x → GP values → GP 4 value 100% (13227)

**Description** Defines the GP4 value that represents 100% on the integer value scale.

**User entry** Signed floating-point number

**Factory setting** 0 Unitless

**Additional information**

Read access	Operator
Write access	Maintenance

**"Discrete selector" submenu***Navigation* Expert → Communication → Modbus Xx-x → Discreteselect**Discrete 1 to 4 selector****Navigation** Expert → Communication → WM550 X1-4 → Discreteselect → Discrete 1 to 4select (13260-1 to 4)**Description**

Determines the input source which is transferred as Alarm bit [n] value in the corresponding WM550 tasks.

**Selection**

- None
- **Balance flag** optionVisibility depends on order options or device settings
- Alarm 1...4 any
- Alarm 1...4 HighHigh
- Alarm 1...4 High or HighHigh
- Alarm 1...4 High
- Alarm 1...4 Low
- Alarm 1...4 Low or LowLow
- Alarm 1...4 LowLow
- Digital Xx-x

**Factory setting**

None

**Additional information**

Read access	Operator
Write access	Maintenance

**"Configuration" submenu (V1)**

 Only visible for devices with a V1 I/O module.

*Navigation*

 Expert → Communication → V1 Xx-x → Configuration

 Configuration	
Communication interface protocol variant	→  129
V1 addressV1/MDP	→  129
V1 addressBBB/MIC+232	→  130
Level mapping	→  130
Line impedance	→  131
Compatibility mode	→  131

**Communication interface protocol variant****Navigation**

 Expert → Communication → V1 Xx-x → Configuration → Protocol variant (13269)

**Description**

Determines which variant of the V1 protocol is used.

**User interface**

- None
- V1\*

**Factory setting**

None

**Additional information**

Read access	Operator
Write access	Maintenance

**V1 address****Navigation**

 Expert → Communication → V1 Xx-x → Configuration → V1 address (13235)

**Prerequisite**

**Communication interface protocol variant** (→  129) = V1

**Description**

Identifier of the device for the V1 communication.

**User entry**

0 to 99

\* Visibility depends on order options or device settings

**Factory setting** 1

**Additional information**

Read access	Operator
Write access	Maintenance

## V1 address



**Navigation** Expert → Communication → V1 Xx-x → Configuration → V1 address (13236)

**Prerequisite**

**Communication interface protocol variant** (→ [129](#))

**Description**

Identifier of the previous device for V1 communication.

**User entry**

0 to 255

**Factory setting**

1

**Additional information**

Read access	Operator
Write access	Maintenance

## Level mapping



**Navigation** Expert → Communication → V1 Xx-x → Configuration → Level mapping (13268)

**Prerequisite**

**Communication interface protocol** (→ [114](#)) = V1

**Description**

Determines the transmittable range of levels.

**Selection**

- +ve
- +ve & -ve

**Factory setting**

+ve

**Additional information**

Read access	Operator
Write access	Maintenance

In V1, the level is always represented by a number in the range from 0 to 999 999. This number corresponds to a level as follows:

*"Level mapping" = "+ve"*

Number	Corresponding level
0	0.0 mm
999 999	99 999.9 mm

*"Level mapping" = "+ve & -ve"*

Number	Corresponding level
0	0.0 mm
500 000	50 000.0 mm
500 001	-0.1 mm
999 999	-49 999.9 mm

## Line impedance



<b>Navigation</b>	Diagram Expert → Communication → V1 Xx-x → Configuration → Line impedance (13266)
<b>Prerequisite</b>	<b>Communication interface protocol (→  114) = V1</b>
<b>Description</b>	Adjusts the impedance of the communication line.
<b>User entry</b>	0 to 15
<b>Factory setting</b>	15

### Additional information

Read access	Operator
Write access	Maintenance

The line impedance affects the voltage difference between a logical 0 and a logical 1 on the message of the device to the bus. The default setting is suitable for most applications.

## Compatibility mode



<b>Navigation</b>	Diagram Expert → Communication → V1 Xx-x → Configuration → Comp. mode (13281)
<b>Description</b>	Defines the compatibility mode.
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Nxx5xx</li> <li>■ Nxx8x</li> </ul>
<b>Factory setting</b>	Nxx8x
<b>Additional information</b>	<p>In <b>NMS5x</b> mode: Only values which have also existed on NMS5x Gauge status are output on the bus.</p> <p>In <b>NMS8x</b> mode: All Gauge status are available at this parameter.</p>

Read access	Operator
Write access	Maintenance

**"V1 input selector" submenu (V1)**

 Only visible for devices with a V1 I/O module.

**Navigation**

Expert → Communication → V1 Xx-x → V1 input select.

<b>► V1 input selector</b>	
User value 1 to 8 source	→ <a href="#">132</a>
Alarm 1 input source	→ <a href="#">133</a>
Alarm 2 input source	→ <a href="#">133</a>
Alarm 3 input source	→ <a href="#">134</a>
Alarm 4 input source	→ <a href="#">134</a>
SP 1 value selector	→ <a href="#">135</a>
SP 2 value selector	→ <a href="#">135</a>
SP 3 value selector	→ <a href="#">136</a>
SP 4 value selector	→ <a href="#">136</a>
Value percent selector	→ <a href="#">137</a>

**User value 1 to 8 source****Navigation**

Expert → Communication → V1 Xx-x → V1 input select. → UserVal 1 to 8 source (13209–1 to 8)

**Description**

Selects which parameter shall be transmitted as User value x.

**Selection**

- None
- Tank ullage
- Distance
- Upper interface level
- Lower interface level
- Bottom level
- Average profile density<sup>7)</sup>
- Vapor density
- Manual density
- P1 position
- P3 position
- GP 1...4 value

7) Visibility depends on order options or device settings

- AIO B1-3 value
- AIO C1-3 value
- AIP B4-8 value
- AIP C4-8 value
- HART device 1...15 PV
- HART device 1...15 PV mA
- HART device 1...15 PV %
- HART device 1...15 SV
- HART device 1...15 TV
- HART device 1...15 QV

**Factory setting** None

**Additional information**

Read access	Operator
Write access	Maintenance

**Alarm 1 input source**



**Navigation** Expert → Communication → V1 Xx-x → V1 input select. → Alarm1 input src (13270)

**Description** Determines which discrete value will be transmitted as V1 alarm 1 status.

**Selection**

- None
- Alarm 1-4 any
- Alarm 1-4 HighHigh
- Alarm 1-4 High or HighHigh
- Alarm 1-4 High
- Alarm 1-4 Low
- Alarm 1-4 Low or LowLow
- Alarm 1-4 LowLow

**Factory setting** None

**Additional information**

Read access	Operator
Write access	Maintenance

**Alarm 2 input source**



**Navigation** Expert → Communication → V1 Xx-x → V1 input select. → Alarm2 input src (13271)

**Description** Determines which discrete value will be transmitted as V1 alarm 2 status.

**Selection**

- None
- Alarm 1-4 any
- Alarm 1-4 HighHigh
- Alarm 1-4 High or HighHigh
- Alarm 1-4 High

- Alarm 1-4 Low
- Alarm 1-4 Low or LowLow
- Alarm 1-4 LowLow

**Factory setting** None

**Additional information**

Read access	Operator
Write access	Maintenance

---

### Alarm 3 input source



**Navigation** Expert → Communication → V1 Xx-x → V1 input select. → Alarm3 in-source (13283)

**Description** Determines which discrete value will be transmitted as V1 alarm 3 status in Z0 and Z1 message.

- Selection**
- None
  - Alarm 1-4 any
  - Alarm 1-4 HighHigh
  - Alarm 1-4 High or HighHigh
  - Alarm 1-4 High
  - Alarm 1-4 Low
  - Alarm 1-4 Low or LowLow
  - Alarm 1-4 LowLow

**Factory setting** None

**Additional information**

Read access	Operator
Write access	Maintenance

---

### Alarm 4 input source



**Navigation** Expert → Communication → V1 Xx-x → V1 input select. → Alarm4 in-source (13284)

**Description** Determines which discrete value will be transmitted as V1 alarm 4 status in Z0 and Z1 message.

- Selection**
- None
  - Alarm 1-4 any
  - Alarm 1-4 HighHigh
  - Alarm 1-4 High or HighHigh
  - Alarm 1-4 High
  - Alarm 1-4 Low
  - Alarm 1-4 Low or LowLow
  - Alarm 1-4 LowLow

**Factory setting** None

**Additional information**

<b>Read access</b>	Operator
<b>Write access</b>	Maintenance

**SP 1 value selector****Navigation**

Expert → Communication → V1 → V1 input select. → SP1 value select (13274)

**Description**

Selects which discrete value will be transmitted as V1 External Status bit 1 in Z0/Z1 message.

**Selection**

- None
- Digital A1-2 \*
- Digital A3-4 \*
- Digital B1-2 \*
- Digital B3-4 \*
- Digital C1-2 \*
- Digital C3-4 \*
- Digital D1-2 \*
- Digital D3-4 \*

**Factory setting**

None

**Additional information**

<b>Read access</b>	Operator
<b>Write access</b>	Maintenance

**SP 2 value selector****Navigation**

Expert → Communication → V1 → V1 input select. → SP2 value select (13275)

**Description**

Selects which discrete value will be transmitted as V1 external status bit 2 in Z0/Z1 message.

**Selection**

- None
- Digital A1-2 \*
- Digital A3-4 \*
- Digital B1-2 \*
- Digital B3-4 \*
- Digital C1-2 \*
- Digital C3-4 \*
- Digital D1-2 \*
- Digital D3-4 \*

**Factory setting**

None

**Additional information**

<b>Read access</b>	Operator
<b>Write access</b>	Maintenance

\* Visibility depends on order options or device settings

**SP 3 value selector****Navigation**

Expert → Communication → V1 → V1 input select. → SP3 value select (13276)

**Description**

Selects which discrete value will be transmitted as V1 external status bit 3 in Z0/Z1 message.

**Selection**

- None
- Digital A1-2 \*
- Digital A3-4 \*
- Digital B1-2 \*
- Digital B3-4 \*
- Digital C1-2 \*
- Digital C3-4 \*
- Digital D1-2 \*
- Digital D3-4 \*

**Factory setting**

None

**Additional information**

Read access	Operator
Write access	Maintenance

**SP 4 value selector****Navigation**

Expert → Communication → V1 → V1 input select. → SP4 value select (13277)

**Description**

Selects which discrete value will be transmitted as V1 external status bit 4 in Z0/Z1 message.

**Selection**

- None
- Digital A1-2 \*
- Digital A3-4 \*
- Digital B1-2 \*
- Digital B3-4 \*
- Digital C1-2 \*
- Digital C3-4 \*
- Digital D1-2 \*
- Digital D3-4 \*

**Factory setting**

None

**Additional information**

Read access	Operator
Write access	Maintenance

\* Visibility depends on order options or device settings

**Value percent selector****Navigation**

Expert → Communication → V1 → V1 input select. → Value % select (13282)

**Description**

Selects which value shall be transmitted as a 0..100% value in the V1 Z0/Z1 message.

**Selection**

- None
- Tank level %
- Tank ullage %
- AIO B1-3 value % <sup>\*</sup>
- AIO C1-3 value % <sup>\*</sup>

**Factory setting**

None

**Additional information**

Read access	Operator
Write access	Maintenance

**"Configuration" submenu (WM550)**

This submenu is only present for devices with a **WM550** option communication interface.

**Navigation**

Expert → Communication → WM550 Xx-x → Configuration

▶ Configuration	
Baudrate	→  137
WM550 address	→  138
Software ID	→  138
Compatibility mode	→  138

**Baudrate****Navigation**

Expert → Communication → WM550 Xx-x → Configuration → Baudrate (13203)

**Prerequisite**

**Communication interface protocol** (→ 114) = "WM550" option

**Description**

Defines the baud rate of the WM550 communication.

\* Visibility depends on order options or device settings

<b>Selection</b>	<ul style="list-style-type: none"> <li>■ 600 BAUD</li> <li>■ 1200 BAUD</li> <li>■ 2400 BAUD</li> <li>■ 4800 BAUD</li> </ul>				
<b>Factory setting</b>	2400 BAUD				
<b>Additional information</b>	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 2px;">Read access</td> <td style="padding: 2px;">Operator</td> </tr> <tr> <td style="padding: 2px;">Write access</td> <td style="padding: 2px;">Maintenance</td> </tr> </table>	Read access	Operator	Write access	Maintenance
Read access	Operator				
Write access	Maintenance				

---

<b>WM550 address</b>		
<b>Navigation</b>	  Expert → Communication → WM550 Xx-x → Configuration → WM550 address (13286)	
<b>Description</b>	Describes the WM550 address of the device.	
<b>User entry</b>	0 to 63	
<b>Factory setting</b>	1	

---

<b>Software ID</b>		
<b>Navigation</b>	  Expert → Communication → WM550 Xx-x → Configuration → Software ID (13287)	
<b>Prerequisite</b>	<b>Communication interface protocol (→  114) = "WM550" option</b>	
<b>Description</b>	Defines content for WM550 Task 32. Detailed information on content for WM550 Task 32, Special Documentation SD02567G.	
<b>User entry</b>	0 to 9999	
<b>Factory setting</b>	2 000	

---

<b>Compatibility mode</b>		
<b>Navigation</b>	  Expert → Communication → WM550 Xx-x → Configuration → Comp. mode (13281)	
<b>Description</b>	Defines the compatibility mode.	
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Nxx5xx</li> <li>■ Nxx8x</li> </ul>	
<b>Factory setting</b>	Nxx8x	

**Additional information**

In **NMS5x** mode: Only values which have also existed on NMS5x Gauge status are output on the bus.

In **NMS8x** mode: All Gauge status are available at this parameter.


<b>Read access</b>	Operator
<b>Write access</b>	Maintenance

**"WM550 input selector" submenu (WM550)**

 This submenu is only present for devices with a **WM550** option communication interface.

*Navigation*

Expert → Communication → WM550 Xx-x → WM550 inp select

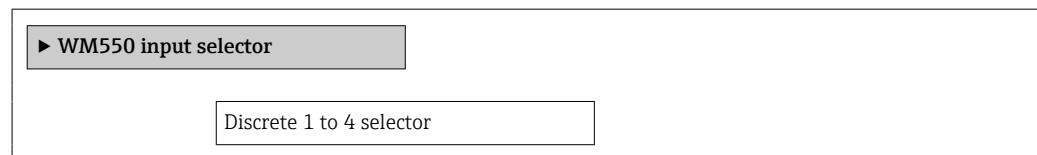**Discrete 1 to 4 selector****Navigation**

Expert → Communication → WM550 Xx-x → WM550 inp select → Discrete 1 to 4select (13260-1 to 4)

**Description**

Determines the input source which is transferred as Alarm bit [n] value in the corresponding WM550 tasks.

**Selection**

- None
- **Balance flag** optionVisibility depends on order options or device settings
- Alarm 1...4 any
- Alarm 1...4 HighHigh
- Alarm 1...4 High or HighHigh
- Alarm 1...4 High
- Alarm 1...4 Low
- Alarm 1...4 Low or LowLow
- Alarm 1...4 LowLow
- Digital Xx-x

**Factory setting**

None


**Additional information**

<b>Read access</b>	Operator
<b>Write access</b>	Maintenance

### 3.3.2 "HART output" submenu

*Navigation*

☰ ☰ Expert → Communication → HART output

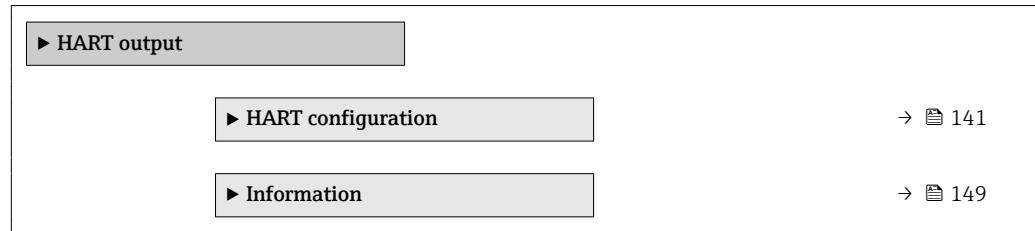

**"HART configuration" submenu***Navigation*

Expert → Communication → HART output → HART config.

► HART configuration	
System polling address	→  141
No. of preambles	→  142
PV source	→  142
Assign PV	→  142
0 % value	→  143
100 % value	→  144
PV mA selector	→  144
Primary variable (PV)	→  144
Percent of range	→  145
Assign SV	→  145
Secondary variable (SV)	→  146
Assign TV	→  146
Tertiary variable (TV)	→  147
Assign QV	→  147
Quaternary variable (QV)	→  148

**System polling address****Navigation**

Expert → Communication → HART output → HART config. → Polling address (0219)

**Description**

Device address for HART communication.

**User entry**

0 to 63

**Factory setting**

15

**Additional information**

Read access	Operator
Write access	Maintenance

**No. of preambles****Navigation**

Expert → Communication → HART output → HART config. → No. of preambles (0217)

**Description**

Defines the number of preambles in the HART telegram.

**User entry**

5 to 20

**Factory setting**

5

**Additional information**

Read access	Operator
Write access	Maintenance

**PV source****Navigation**

Expert → Communication → HART output → HART config. → PV source (11634)

**Description**

Decides, if the PV configuration is according to an analog output (HART slave) or customized (in case of HART tunneling only).

**Selection**

- AIO B1-3 \*
- AIO C1-3 \*
- Custom

**Factory setting**

Custom

**Additional information**

Read access	Maintenance
Write access	Maintenance

**Assign PV****Navigation**

Expert → Communication → HART output → HART config. → Assign PV (0234)

**Prerequisite**

PV source (→ [142](#)) = Custom

**Description**

Assign a measured variable to the primary dynamic variable (PV).

Additional information:

The assigned measured variable is also used by the current output.

\* Visibility depends on order options or device settings

**Selection**

- None
- Tank level
- Tank ullage
- Measured level
- Distance
- Displacer position
- Water level
- Upper interface level
- Lower interface level
- Bottom level
- Tank reference height
- Liquid temperature
- Vapor temperature
- Air temperature
- Observed density value
- Average profile density
- Upper density
- Middle density
- Lower density
- P1 (bottom)
- P2 (middle)
- P3 (top)
- GP 1 value
- GP 2 value
- GP 3 value
- GP 4 value

**Factory setting**

Tank level

**Additional information**

Read access	Operator
Write access	Maintenance

 The **Measured level** option doesn't contain a unit. If a unit is needed, select the **Tank level** option.

**0 % value****Navigation**
 Expert → Communication → HART output → HART config. → 0 % value (11632)
**Prerequisite****PV source = Custom****Description**

0% value of the primary variable (PV).

**User entry**

Signed floating-point number

**Factory setting**

0 mm

**Additional information**

Read access	Operator
Write access	Maintenance

**100 % value****Navigation**

Expert → Communication → HART output → HART config. → 100 % value (11633)

**Prerequisite**

**PV source = Custom**

**Description**

100% value of the primary variable (PV).

**User entry**

Signed floating-point number

**Factory setting**

0 mm

**Additional information**

Read access	Operator
Write access	Maintenance

**PV mA selector****Navigation**

Expert → Communication → HART output → HART config. → PV mA selector (11631)

**Prerequisite**

**PV source = Custom**

**Description**

Assigns a current to the primary HART variable (PV).

**Selection**

- None
- AIO B1-3 value mA \*
- AIO C1-3 value mA \*

**Factory setting**

None

**Additional information**

Read access	Operator
Write access	Maintenance

**Primary variable (PV)****Navigation**

Expert → Communication → HART output → HART config. → Primary var (PV) (0201)

**Description**

Shows the current measured value of the primary dynamic variable (PV)

**Additional information**

Read access	Operator
Write access	-

\* Visibility depends on order options or device settings

---

**Percent of range**

---

<b>Navigation</b>	 Expert → Communication → HART output → HART config. → Percent of range (0274)				
<b>Description</b>	Shows the value of the primary variable (PV) as a percentage of the defined 0% to 100% range.				
<b>Additional information</b>	<table border="1"> <tr> <td>Read access</td> <td>Operator</td> </tr> <tr> <td>Write access</td> <td>-</td> </tr> </table>	Read access	Operator	Write access	-
Read access	Operator				
Write access	-				

---

**Assign SV**

---



<b>Navigation</b>	 Expert → Communication → HART output → HART config. → Assign SV (0235)				
<b>Description</b>	Assign a measured variable to the second dynamic variable (SV).				
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ None</li> <li>▪ Tank level</li> <li>▪ Tank ullage</li> <li>▪ Measured level</li> <li>▪ Distance</li> <li>▪ Displacer position</li> <li>▪ Water level</li> <li>▪ Upper interface level</li> <li>▪ Lower interface level</li> <li>▪ Bottom level</li> <li>▪ Tank reference height</li> <li>▪ Liquid temperature</li> <li>▪ Vapor temperature</li> <li>▪ Air temperature</li> <li>▪ Observed density value</li> <li>▪ Average profile density</li> <li>▪ Upper density</li> <li>▪ Middle density</li> <li>▪ Lower density</li> <li>▪ P1 (bottom)</li> <li>▪ P2 (middle)</li> <li>▪ P3 (top)</li> <li>▪ GP 1 value</li> <li>▪ GP 2 value</li> <li>▪ GP 3 value</li> <li>▪ GP 4 value</li> </ul>				
<b>Factory setting</b>	Liquid temperature				
<b>Additional information</b>	<table border="1"> <tr> <td>Read access</td> <td>Operator</td> </tr> <tr> <td>Write access</td> <td>Maintenance</td> </tr> </table>	Read access	Operator	Write access	Maintenance
Read access	Operator				
Write access	Maintenance				



The **Measured level** option doesn't contain a unit. If a unit is needed, select the **Tank level** option.

## Secondary variable (SV)

**Navigation** Expert → Communication → HART output → HART config. → Second.var(SV) (0226)

**Prerequisite** **Assign SV (→ 145) ≠ None**

**Description** Shows the current measured value of the secondary dynamic variable (SV)

**Additional information**

Read access	Operator
Write access	-

## Assign TV



**Navigation** Expert → Communication → HART output → HART config. → Assign TV (0236)

**Description** Assign a measured variable to the tertiary dynamic variable (TV).

**Selection**

- None
- Tank level
- Tank ullage
- Measured level
- Distance
- Displacer position
- Water level
- Upper interface level
- Lower interface level
- Bottom level
- Tank reference height
- Liquid temperature
- Vapor temperature
- Air temperature
- Observed density value
- Average profile density
- Upper density
- Middle density
- Lower density
- P1 (bottom)
- P2 (middle)
- P3 (top)
- GP 1 value
- GP 2 value
- GP 3 value
- GP 4 value

**Factory setting**

Water level

**Additional information**

Read access	Operator
Write access	Maintenance

The **Measured level** option doesn't contain a unit. If a unit is needed, select the **Tank level** option.

**Tertiary variable (TV)**

**Navigation**  Expert → Communication → HART output → HART config. → Tertiary var(TV) (0228)

**Prerequisite** **Assign TV (→  146) ≠ None**

**Description** Shows the current measured value of the tertiary (third) dynamic variable (TV)

**Additional information**

Read access	Operator
Write access	-

**Assign QV**

**Navigation**  Expert → Communication → HART output → HART config. → Assign QV (0237)

**Description** Assign a measured variable to the quaternary dynamic variable (QV).

**Selection**

- None
- Tank level
- Tank ullage
- Measured level
- Distance
- Displacer position
- Water level
- Upper interface level
- Lower interface level
- Bottom level
- Tank reference height
- Liquid temperature
- Vapor temperature
- Air temperature
- Observed density value
- Average profile density
- Upper density
- Middle density
- Lower density
- P1 (bottom)
- P2 (middle)
- P3 (top)
- GP 1 value
- GP 2 value
- GP 3 value
- GP 4 value

**Factory setting** Observed density value

**Additional information**

Read access	Operator
Write access	Maintenance

 The **Measured level** option doesn't contain a unit. If a unit is needed, select the **Tank level** option.

---

**Quaternary variable (QV)**

---

**Navigation**

  Expert → Communication → HART output → HART config. → Quaterna.var(QV) (0203)

**Prerequisite**

 Assign QV (→ [147](#)) ≠ None

**Description**

Shows the current measured value of the quaternary (fourth) dynamic variable (QV)

**Additional information**

Read access	Operator
Write access	-

**"Information" submenu***Navigation*
 Expert → Communication → HART output → Information

<b>► Information</b>	
HART short tag	→  149
Device tag	→  150
Device revision	→  150
Device ID	→  150
Device type	→  151
Manufacturer ID	→  151
HART revision	→  151
HART descriptor	→  152
HART message	→  152
Hardware revision	→  152
Software revision	→  153
HART date code	→  153

**HART short tag****Navigation**
 Expert → Communication → HART output → Information → HART short tag (0220)
**Description**

Defines the short tag for the measuring point.

Maximum length: 8 characters

Allowed characters: A-Z, 0-9, certain special characters

**User entry**

Character string comprising numbers, letters and special characters (8)

**Factory setting**

NRF8x

**Additional information**

<b>Read access</b>	Operator
<b>Write access</b>	Maintenance

---

**Device tag**

**Navigation** Expert → Communication → HART output → Information → Device tag (0215)

**Description** Enter a unique name for the measuring point to identify the device quickly within the plant.

**User entry** Character string comprising numbers, letters and special characters (32)

**Factory setting** NRF8x

**Additional information**

Read access	Operator
Write access	Maintenance

---

**Device revision**

**Navigation** Expert → Communication → HART output → Information → Device revision (0204)

**Description** Shows the device revision with which the device is registered with the HART Communication Foundation

**User interface** 0 to 255

**Factory setting** 7

**Additional information**

Read access	Operator
Write access	-

---

**Device ID**

**Navigation** Expert → Communication → HART output → Information → Device ID (0221)

**Description** Shows the device ID for identifying the device in a HART network

**User interface** Positive integer

**Factory setting** 123 456

**Additional information**

Read access	Operator
Write access	-

---

**Device type**

---

**Navigation**  Expert → Communication → HART output → Information → Device type (0209)

**Description** Shows the device type with which the measuring device is registered with the HART Communication Foundation

**User interface** 0 to 65 535

**Factory setting** 4 399

**Additional information**

Read access	Operator
Write access	-

---

**Manufacturer ID**

---

**Navigation**  Expert → Communication → HART output → Information → Manufacturer ID (0259)

**Description** Shows the device's manufacturer ID registered with the HART Communication Foundation.

**User interface** 0 to 65 535

**Factory setting** 17

**Additional information**

Read access	Operator
Write access	-

---

**HART revision**

---

**Navigation**  Expert → Communication → HART output → Information → HART revision (0205)

**Description** HART revision used by the device.

**User interface** 5 to 7

**Factory setting** 7

**Additional information**

Read access	Operator
Write access	-

---

**HART descriptor**

<b>Navigation</b>	Expert → Communication → HART output → Information → HART descriptor (0212)				
<b>Description</b>	Enter description for the measuring point				
<b>User entry</b>	Character string comprising numbers, letters and special characters (16)				
<b>Factory setting</b>	NRF8x				
<b>Additional information</b>	<table border="1"><tr><td>Read access</td><td>Operator</td></tr><tr><td>Write access</td><td>Maintenance</td></tr></table>	Read access	Operator	Write access	Maintenance
Read access	Operator				
Write access	Maintenance				

---

**HART message**

<b>Navigation</b>	Expert → Communication → HART output → Information → HART message (0216)				
<b>Description</b>	Use this function to define a HART message which is sent via the HART protocol when requested by the master. Maximum length: 32 characters Allowed characters: A-Z, 0-9, certain special characters				
<b>User entry</b>	Character string comprising numbers, letters and special characters (32)				
<b>Factory setting</b>	NRF8x				
<b>Additional information</b>	<table border="1"><tr><td>Read access</td><td>Operator</td></tr><tr><td>Write access</td><td>Maintenance</td></tr></table>	Read access	Operator	Write access	Maintenance
Read access	Operator				
Write access	Maintenance				

---

**Hardware revision**

<b>Navigation</b>	Expert → Communication → HART output → Information → Hardware rev. (0206)				
<b>Description</b>	Hardware revision of the device.				
<b>User interface</b>	0 to 30				
<b>Factory setting</b>	1				
<b>Additional information</b>	<table border="1"><tr><td>Read access</td><td>Operator</td></tr><tr><td>Write access</td><td>-</td></tr></table>	Read access	Operator	Write access	-
Read access	Operator				
Write access	-				

---

**Software revision**

---

**Navigation**  Expert → Communication → HART output → Information → Software rev. (0224)

**Description** Software revision of the device.

**User interface** 0 to 255

**Factory setting** 7

**Additional information**

Read access	Operator
Write access	-

---

**HART date code**

---



**Navigation**  Expert → Communication → HART output → Information → HART date code (0202)

**Description** Enter date of the last configuration change. Use this format yyyy-mm-dd

**User entry** Character string comprising numbers, letters and special characters (10)

**Factory setting** 2009-07-20


**Additional information**

Read access	Operator
Write access	Maintenance

## 3.4 "Application" submenu

*Navigation*


☰ ☰ Expert → Application

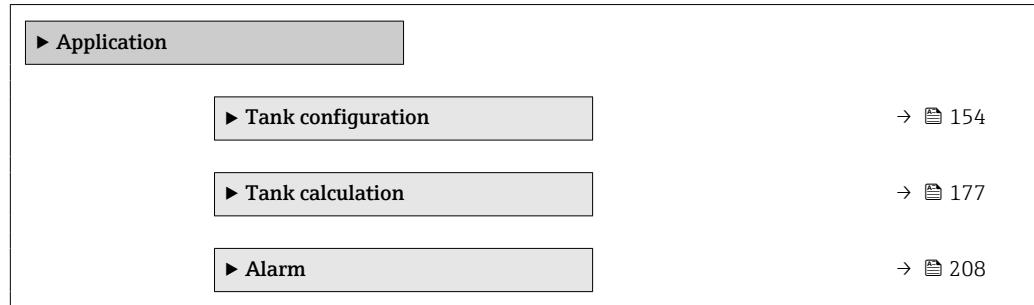

### 3.4.1 "Tank configuration" submenu

*Navigation*

☰ ☰ Expert → Application → Tank config

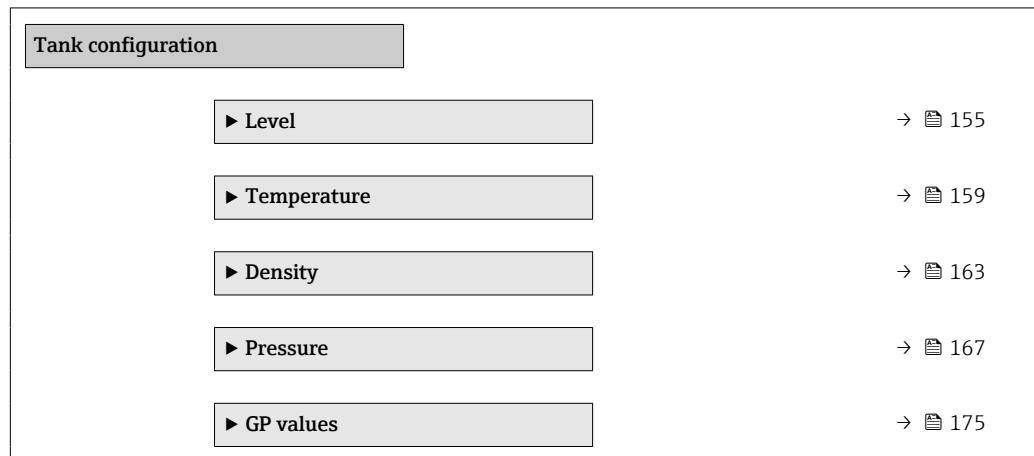

**"Level" submenu****Navigation**

Expert → Application → Tank config → Level

► Level	
Level source	→  155
Operation mode	→  156
Tank reference height	→  156
Tank level	→  156
Upper interface level	→  157
Lower interface level	→  157
Water level source	→  157
Water level	→  157
Manual water level	→  158

**Level source****Navigation**

Expert → Application → Tank config → Level → Level source (14601)

**Description**

Defines the source of the level value.

**Selection**

- No input value
- HART device 1 ... 15 level
- Level SR\*
- Level\*
- Displacer position\*
- AIO B1-3 value\*
- AIO C1-3 value\*
- AIP B4-8 value\*
- AIP C4-8 value\*

**Factory setting**

Dependent on the device version

**Additional information**

Read access	Operator
Write access	Maintenance

\* Visibility depends on order options or device settings

---

**Operation mode****Navigation**

Expert → Application → Tank config → Level → Operation mode (14656)

**Description**

Selection of normal or HTG mode for level measurement . In the HTG mode, the level is calculated using a pressure device.

**Selection**

- Normal
- HTG \*

**Factory setting**

Normal

**Additional information**

Read access	Operator
Write access	Maintenance

---

**Tank reference height****Navigation**

Expert → Application → Tank config → Level → Tank ref height (14603)

**Description**

Defines the distance from the dipping reference point to the zero position (tank bottom or datum plate).

**User entry**

0 to 10 000 000 mm

**Factory setting**

Dependent on the device version

**Additional information**

Read access	Operator
Write access	Maintenance

---

**Tank level****Navigation**

Expert → Application → Tank config → Level → Tank level (14655)

**Description**

Shows the distance from the zero position (tank bottom or datum plate) to the product surface.

**Additional information**

Read access	Operator
Write access	-

---

\* Visibility depends on order options or device settings

---

**Upper interface level**

---

**Navigation**
  Expert → Application → Tank config → Level → Upper I/F level (15003)
**Description**

Shows measured interface level from zero position (tank bottom or datum plate). Value is updated when device generates a valid Interface measurement.

**Additional information**

Read access	Maintenance
Write access	-

---

**Lower interface level**

---

**Navigation**
  Expert → Application → Tank config → Level → Lower I/F level (15004)
**Description**

Shows measured interface level from zero position (tank bottom or datum plate). Value is updated when device generates a valid interface measurement.

**Additional information**

Read access	Maintenance
Write access	-

---

**Water level source**

---

**Navigation**
  Expert → Application → Tank config → Level → Water level src (14971)
**Description**

Defines the source of the bottom water level.

**Selection**

- Manual value
- Bottom level
- HART device 1 ... 15 level
- AIO B1-3 value
- AIO C1-3 value
- AIP B4-8 value
- AIP C4-8 value

**Factory setting**

Manual value

**Additional information**

Read access	Operator
Write access	Maintenance

---

**Water level**

---

**Navigation**
  Expert → Application → Tank config → Level → Water level (14970)
**Description**

Shows the bottom water level.

**Additional information**

Read access	Operator
Write access	-

**Manual water level****Navigation**

Expert → Application → Tank config → Level → Man. water level (14959)

**Prerequisite****Water level source (→ 157) = Manual value****Description**

Defines the manual value of the bottom water level.

**User entry**

-2 000 to 5 000 mm

**Factory setting**

0 mm

**Additional information**

Read access	Operator
Write access	Maintenance

**"Temperature" submenu***Navigation*

Expert → Application → Tank config → Temperature

► Temperature	
Liquid temp source	→ 159
Manual liquid temperature	→ 160
Liquid temperature	→ 160
Air temperature source	→ 160
Manual air temperature	→ 161
Air temperature	→ 161
Vapor temp source	→ 161
Manual vapor temperature	→ 162
Vapor temperature	→ 162

**Liquid temp source****Navigation**

Expert → Application → Tank config → Temperature → Liq temp source (14972)

**Description**

Defines source from which the liquid temperature is obtained.

**Selection**

- Manual value
- HART device 1 ... 15 temperature
- AIO B1-3 value
- AIO C1-3 value
- AIP B4-8 value
- AIP C4-8 value

**Factory setting**

Manual value

**Additional information**

Read access	Operator
Write access	Maintenance

---

**Manual liquid temperature**

<b>Navigation</b>	Expert → Application → Tank config → Temperature → Man. liquid temp (15015)				
<b>Prerequisite</b>	Liquid temp source (→  159) = Manual value				
<b>Description</b>	Defines the manual value of the liquid temperature.				
<b>User entry</b>	-50 to 300 °C				
<b>Factory setting</b>	25 °C				
<b>Additional information</b>	<table border="1"><tr><td>Read access</td><td>Operator</td></tr><tr><td>Write access</td><td>Maintenance</td></tr></table>	Read access	Operator	Write access	Maintenance
Read access	Operator				
Write access	Maintenance				

---

**Liquid temperature**

<b>Navigation</b>	Expert → Application → Tank config → Temperature → Liquid temp. (14978)				
<b>Description</b>	Shows the average or spot temperature of the measured liquid.				
<b>Additional information</b>	<table border="1"><tr><td>Read access</td><td>Operator</td></tr><tr><td>Write access</td><td>-</td></tr></table>	Read access	Operator	Write access	-
Read access	Operator				
Write access	-				

---

**Air temperature source**

<b>Navigation</b>	Expert → Application → Tank config → Temperature → Air temp. source (14993)				
<b>Description</b>	Defines source from which the air temperature is obtained.				
<b>Selection</b>	<ul style="list-style-type: none"><li>■ Manual value</li><li>■ HART device 1 ... 15 temperature</li><li>■ AIO B1-3 value</li><li>■ AIO C1-3 value</li><li>■ AIP B4-8 value</li><li>■ AIP C4-8 value</li></ul>				
<b>Factory setting</b>	Manual value				
<b>Additional information</b>	<table border="1"><tr><td>Read access</td><td>Operator</td></tr><tr><td>Write access</td><td>Maintenance</td></tr></table>	Read access	Operator	Write access	Maintenance
Read access	Operator				
Write access	Maintenance				

---

**Manual air temperature**

---



<b>Navigation</b>	Expert → Application → Tank config → Temperature → Manual air temp. (14961)				
<b>Prerequisite</b>	Air temperature source (→  160) = Manual value				
<b>Description</b>	Defines the manual value of the air temperature.				
<b>User entry</b>	-50 to 300 °C				
<b>Factory setting</b>	25 °C				
<b>Additional information</b>	<table border="1"> <tr> <td>Read access</td> <td>Operator</td> </tr> <tr> <td>Write access</td> <td>Maintenance</td> </tr> </table>	Read access	Operator	Write access	Maintenance
Read access	Operator				
Write access	Maintenance				

---

**Air temperature**

---



<b>Navigation</b>	Expert → Application → Tank config → Temperature → Air temp. (14986)				
<b>Description</b>	Shows the air temperature.				
<b>Additional information</b>	<table border="1"> <tr> <td>Read access</td> <td>Operator</td> </tr> <tr> <td>Write access</td> <td>-</td> </tr> </table>	Read access	Operator	Write access	-
Read access	Operator				
Write access	-				

---

**Vapor temp source**

---



<b>Navigation</b>	Expert → Application → Tank config → Temperature → Vapor temp src (14973)				
<b>Description</b>	Defines the source from which the vapor temperature is obtained.				
<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Manual value</li> <li>■ HART device 1 ... 15 vapor temp</li> <li>■ AIO B1-3 value</li> <li>■ AIO C1-3 value</li> <li>■ AIP B4-8 value</li> <li>■ AIP C4-8 value</li> </ul>				
<b>Factory setting</b>	Manual value				
<b>Additional information</b>	<table border="1"> <tr> <td>Read access</td> <td>Operator</td> </tr> <tr> <td>Write access</td> <td>Maintenance</td> </tr> </table>	Read access	Operator	Write access	Maintenance
Read access	Operator				
Write access	Maintenance				

---

**Manual vapor temperature**

**Navigation** Expert → Application → Tank config → Temperature → Man. vapor temp. (14960)

**Prerequisite** Vapor temp source (→ 161) = Manual value

**Description** Defines the manual value of the vapor temperature.

**User entry** -50 to 300 °C

**Factory setting** 25 °C

**Additional information**

Read access	Operator
Write access	Maintenance

---

**Vapor temperature**

**Navigation** Expert → Application → Tank config → Temperature → Vapor temp. (14985)

**Description** Shows the measured vapor temperature.

**Additional information**

Read access	Operator
Write access	-

**"Density" submenu***Navigation*
 Expert → Application → Tank config → Density

► Density	
Observed density source	→  163
Observed density	→  164
Air density	→  164
Vapor density	→  164
Upper density input source	→  164
Manual upper density	→  165
Measured upper density	→  166
Measured middle density	→  166
Measured lower density	→  166
Water density	→  166

**Observed density source****Navigation**
 Expert → Application → Tank config → Density → Density source (13454)
**Description**

Determines how the density is obtained.

**Selection**

- HTG \*
- HTMS \*
- Average profile density \*
- Upper density
- Middle density
- Lower density

**Factory setting**

Dependent on the device version

**Additional information**

Read access	Operator
Write access	Maintenance

\* Visibility depends on order options or device settings

**Observed density****Navigation**  Expert → Application → Tank config → Density → Observed density (13452)**Description**

Shows the measured or calculated density.

**Additional information**

Read access	Operator
Write access	-

**Air density****Navigation**  Expert → Application → Tank config → Density → Air density (14980)**Description**

Defines the density of the air surrounding the tank.

**User entry**0.0 to 500.0 kg/m<sup>3</sup>**Factory setting**1.2 kg/m<sup>3</sup>**Additional information**

Read access	Operator
Write access	Maintenance

**Vapor density****Navigation**  Expert → Application → Tank config → Density → Vapor density (14981)**Description**

Defines the density of the gas phase in the tank.

**User entry**0.0 to 500.0 kg/m<sup>3</sup>**Factory setting**1.2 kg/m<sup>3</sup>**Additional information**

Read access	Operator
Write access	Maintenance

**Upper density input source****Navigation**  Expert → Application → Tank config → Density → UpDensity source (15006)**Description**

Defines the input source for the upper density value.

<b>Selection</b>	<ul style="list-style-type: none"> <li>■ Manual value</li> <li>■ HART device 1 density *</li> <li>■ HART device 2 density *</li> <li>■ HART device 3 density *</li> <li>■ HART device 4 density *</li> <li>■ HART device 5 density *</li> <li>■ HART device 6 density *</li> <li>■ HART device 7 density *</li> <li>■ HART device 8 density *</li> <li>■ HART device 9 density *</li> <li>■ HART device 10 density *</li> <li>■ HART device 11 density *</li> <li>■ HART device 12 density *</li> <li>■ HART device 13 density *</li> <li>■ HART device 14 density *</li> <li>■ HART device 15 density *</li> <li>■ Upper density *</li> <li>■ Middle density *</li> <li>■ Lower density *</li> <li>■ Average profile density *</li> <li>■ AIO B1-3 value *</li> <li>■ AIO C1-3 value *</li> <li>■ AIP B4-8 value *</li> <li>■ AIP C4-8 value *</li> </ul>				
<b>Factory setting</b>	Manual value				
<b>Additional information</b>	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 2px;">Read access</td><td style="padding: 2px;">Operator</td></tr> <tr> <td style="padding: 2px;">Write access</td><td style="padding: 2px;">Maintenance</td></tr> </table>	Read access	Operator	Write access	Maintenance
Read access	Operator				
Write access	Maintenance				

<b>Manual upper density</b>						
<b>Navigation</b>		  Expert → Application → Tank config → Density → Manual density (14998)				
<b>Prerequisite</b>		<b>Upper density input source (→  164) = Manual value</b>				
<b>Description</b>		Defines the manual upper density of the medium.				
<b>User entry</b>		0 to 3 000 kg/m <sup>3</sup>				
<b>Factory setting</b>		800 kg/m <sup>3</sup>				
<b>Additional information</b>	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 2px;">Read access</td><td style="padding: 2px;">Operator</td></tr> <tr> <td style="padding: 2px;">Write access</td><td style="padding: 2px;">Maintenance</td></tr> </table>		Read access	Operator	Write access	Maintenance
Read access	Operator					
Write access	Maintenance					

\* Visibility depends on order options or device settings

---

## Measured upper density

---

**Navigation** Expert → Application → Tank config → Density → Meas upper dens. (15001)**Description**

Shows the density of the upper phase.

**Additional information**

Read access	Operator
Write access	-

---

## Measured middle density

---

**Navigation** Expert → Application → Tank config → Density → Meas middle dens (14997)**Description**

Density of the middle phase.

**Additional information**

Read access	Operator
Write access	-

---

## Measured lower density

---

**Navigation** Expert → Application → Tank config → Density → Meas lower dens. (15002)**Description**

Density of the lower phase.

**Additional information**

Read access	Maintenance
Write access	-

---

## Water density

---

**Navigation** Expert → Application → Tank config → Density → Water density (13757)**Description**

Density of the water in the tank.

**User entry**

Signed floating-point number

**Factory setting**1 000 kg/m<sup>3</sup>**Additional information**

Read access	Operator
Write access	Maintenance

**"Pressure" submenu***Navigation*

Expert → Application → Tank config → Pressure

► Pressure	
P1 (bottom) source	→  168
P1 (bottom)	→  168
P1 (bottom) manual pressure	→  168
P1 position	→  169
P1 offset	→  169
P1 absolute / gauge	→  169
P2 (middle) source	→  170
P2 (middle)	→  170
P2 (middle) manual pressure	→  170
P2 offset	→  171
P1-2 distance	→  171
P2 absolute / gauge	→  171
P3 (top) source	→  172
P3 (top)	→  172
P3 (top) manual pressure	→  172
P3 position	→  173
P3 offset	→  173
P3 absolute / gauge	→  173
Ambient pressure	→  174

**P1 (bottom) source****Navigation**

Expert → Application → Tank config → Pressure → P1 (bot) source (14994)

**Description**

Defines the source of the bottom pressure (P1).

**Selection**

- Manual value
- HART device 1 ... 15 pressure
- AIO B1-3 value
- AIO C1-3 value
- AIP B4-8 value
- AIP C4-8 value

**Factory setting**

Manual value

**Additional information**

Read access	Operator
Write access	Maintenance

**P1 (bottom)****Navigation**

Expert → Application → Tank config → Pressure → P1 (bottom) (14983)

**Description**

Shows the pressure at the tank bottom.

**Additional information**

Read access	Operator
Write access	-

**P1 (bottom) manual pressure****Navigation**

Expert → Application → Tank config → Pressure → P1 (bot) manual (14951)

**Prerequisite****P1 (bottom) source (→ 168) = Manual value****Description**

Defines the manual value of the bottom pressure (P1).

**User entry**

-1.01325 to 25 bar

**Factory setting**

0 bar

**Additional information**

Read access	Operator
Write access	Maintenance

---

**P1 position****Navigation**

Expert → Application → Tank config → Pressure → P1 position (14952)

**Description**

Defines the position of the bottom pressure transmitter (P1), measured from zero position (tank bottom or datum plate).

**User entry**

-10 000 to 100 000 mm

**Factory setting**

5 000 mm

**Additional information**

Read access	Operator
Write access	Maintenance

---

**P1 offset****Navigation**

Expert → Application → Tank config → Pressure → P1 offset (14953)

**Description**

Offset for the bottom pressure (P1).

The offset is added to the measured pressure prior to any tank calculation.

**User entry**

-25 to 25 bar

**Factory setting**

0 bar

**Additional information**

Read access	Operator
Write access	Maintenance

---

**P1 absolute / gauge****Navigation**

Expert → Application → Tank config → Pressure → P1 absolut/gauge (14954)

**Description**

Defines whether the connected pressure transmitter measures an absolute or a gauge pressure.

**Selection**

- Absolute
- Gauge

**Factory setting**

Gauge

**Additional information**

Read access	Operator
Write access	Maintenance

---

**P2 (middle) source****Navigation**

Expert → Application → Tank config → Pressure → P2 (mid) source (14995)

**Description**

Defines the source of the middle pressure (P2).

**Selection**

- Manual value
- HART device 1 ... 15 pressure
- AIO B1-3 value
- AIO C1-3 value
- AIP B4-8 value
- AIP C4-8 value

**Factory setting**

Manual value

**Additional information**

Read access	Operator
Write access	Maintenance

---

**P2 (middle)****Navigation**

Expert → Application → Tank config → Pressure → P2 (middle) (14987)

**Description**

Shows the pressure (P2) at the middle transmitter.

**Additional information**

Read access	Operator
Write access	-

---

**P2 (middle) manual pressure****Navigation**

Expert → Application → Tank config → Pressure → P2 (mid) manual (14955)

**Prerequisite****P2 (middle) source (→ 170) = Manual value****Description**

Defines the manual value of the middle pressure (P2).

**User entry**

-1.01325 to 25 bar

**Factory setting**

0 bar

**Additional information**

Read access	Operator
Write access	Maintenance

---

**P2 offset****Navigation**

Expert → Application → Tank config → Pressure → P2 offset (14975)

**Description**

Defines the offset for the middle pressure (P2).

The offset is added to the measured pressure prior to any tank calculation.

**User entry**

-25 to 25 bar

**Factory setting**

0 bar

**Additional information**

Read access	Operator
Write access	Maintenance

---

**P1-2 distance****Navigation**

Expert → Application → Tank config → Pressure → P1-2 distance (14974)

**Description**

Defines the distance between the bottom and the middle pressure transmitter.

**User entry**

0 to 100 000 mm

**Factory setting**

2 000 mm

**Additional information**

Read access	Operator
Write access	Maintenance

---

**P2 absolute / gauge****Navigation**

Expert → Application → Tank config → Pressure → P2 absolut/gauge (14976)

**Description**

Defines whether the connected pressure transmitter measures an absolute or a gauge pressure.

**Selection**

- Absolute
- Gauge

**Factory setting**

Gauge

**Additional information**

Read access	Operator
Write access	Maintenance

## P3 (top) source

**Navigation**

Expert → Application → Tank config → Pressure → P3 (top) source (14996)

**Description**

Defines the source of the top pressure (P3).

**Selection**

- Manual value
- HART device 1 ... 15 pressure
- AIO B1-3 value
- AIO C1-3 value
- AIP B4-8 value
- AIP C4-8 value

**Factory setting**

Manual value

**Additional information**

Read access	Operator
Write access	Maintenance

## P3 (top)

**Navigation**

Expert → Application → Tank config → Pressure → P3 (top) (14988)

**Description**

Shows the pressure (P3) at the top transmitter.

**Additional information**

Read access	Operator
Write access	-

## P3 (top) manual pressure

**Navigation**

Expert → Application → Tank config → Pressure → P3 (top) manual (14977)

**Prerequisite**

P3 (top) source (→ [172](#)) = Manual value

**Description**

Defines the manual value of the top pressure (P3).

**User entry**

-1.01325 to 25 bar

**Factory setting**

0 bar

**Additional information**

Read access	Operator
Write access	Maintenance

**P3 position****Navigation**

Expert → Application → Tank config → Pressure → P3 position (14956)

**Description**

Defines the position of the top pressure transmitter (P3), measured from zero position (tank bottom or datum plate).

**User entry** 0 to 100 000 mm

**Factory setting** 20 000 mm

**Additional information**

Read access	Operator
Write access	Maintenance

**P3 offset****Navigation**

Expert → Application → Tank config → Pressure → P3 offset (14957)

**Description**

Offset for the top pressure (P3).

The offset is added to the measured pressure prior to any tank calculation.

**User entry** -25 to 25 bar

**Factory setting** 0 bar

**Additional information**

Read access	Operator
Write access	Maintenance

**P3 absolute / gauge****Navigation**

Expert → Application → Tank config → Pressure → P3 absolut/gauge (14958)

**Description**

Defines whether the connected pressure transmitter measures an absolute or a gauge pressure.

**Selection**

- Absolute
- Gauge

**Factory setting** Gauge

**Additional information**

Read access	Operator
Write access	Maintenance

**Ambient pressure**

Expert → Application → Tank config → Pressure → Ambient pressure (14962)

**Description** Defines the manual value of the ambient pressure.

**User entry** 0 to 2.5 bar

**Factory setting** 1 bar

**Additional information**

Read access	Operator
Write access	Maintenance

**"GP values" submenu***Navigation*

[Diagram] Expert → Application → Tank config → GP values

► GP values	
GP 1 to 4 source	→ [Diagram] 175
GP 1 to 4 name	→ [Diagram] 176
GP Value 1	→ [Diagram] 176
GP Value 2	→ [Diagram] 176
GP Value 3	→ [Diagram] 176
GP Value 4	→ [Diagram] 177

**GP 1 to 4 source****Navigation**

[Diagram] Expert → Application → Tank config → GP values → GP 1 to 4 source (14989-1 to 4)

**Description**

Source of the general purpose value 1 GP1.

**Selection**

- No input value
- Average profile density
- Net weight
- AIO B1-3 value
- AIO C1-3 value
- AIP B4-8 value
- AIP C4-8 value
- HART device 1...15 PV
- HART device 1...15 SV
- HART device 1...15 TV
- HART device 1...15 QV
- Modbus A1-4 Value 1...4
- Modbus B1-4 Value 1...4
- Modbus C1-4 Value 1...4
- Modbus D1-4 Value 1...4

**Factory setting**

No input value

**Additional information**

Read access	Operator
Write access	Maintenance

---

**GP 1 to 4 name**

**Navigation** Expert → Application → Tank config → GP values → GP 1 name (14963)

**Description** Defines the label associated with the respective GP value.

**User entry** Character string comprising numbers, letters and special characters (15)

**Factory setting** GP Value 1

**Additional information**

Read access	Operator
Write access	Maintenance

---

**GP Value 1**

**Navigation** Expert → Application → Tank config → GP values → GP Value 1 (14966)

**Description** Displays the value that will be used as general purpose value.

**Additional information**

Read access	Operator
Write access	-

---

**GP Value 2**

**Navigation** Expert → Application → Tank config → GP values → GP Value 2 (14967)

**Description** Displays the value that will be used as general purpose value.

**Additional information**

Read access	Operator
Write access	-

---

**GP Value 3**

**Navigation** Expert → Application → Tank config → GP values → GP Value 3 (14968)

**Description** Displays the value that will be used as general purpose value.

**Additional information**

Read access	Operator
Write access	-

**GP Value 4****Navigation**

Diagram Expert → Application → Tank config → GP values → GP Value 4 (14969)

**Description**

Displays the value that will be used as general purpose value.

**Additional information**

Read access	Operator
Write access	-

**3.4.2 "Tank calculation" submenu***Navigation*

Diagram Expert → Application → Tank calculation

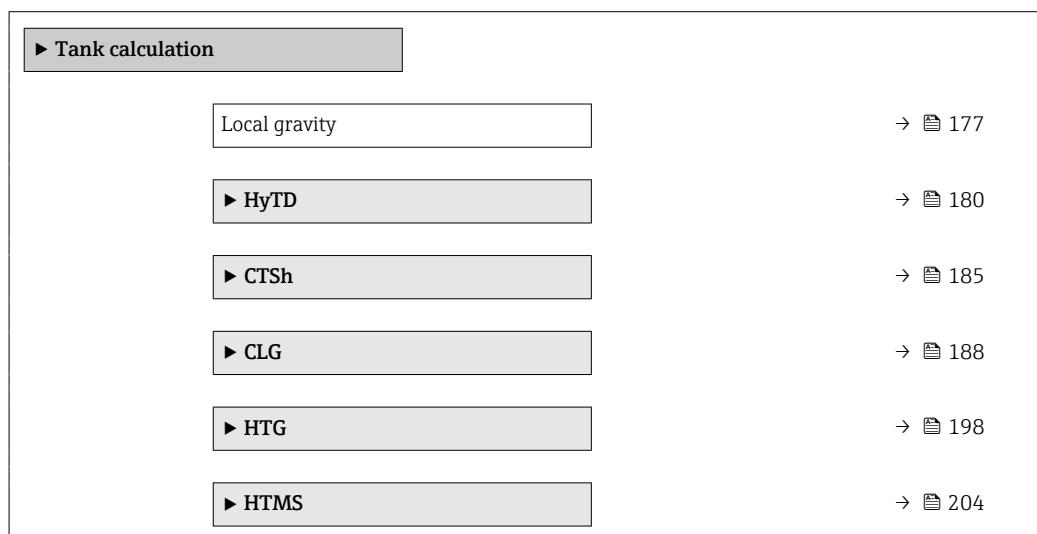
**Local gravity****Navigation**

Diagram Expert → Application → Tank calculation → Local gravity (14979)

**Description**

Shows the manually entered local gravity value.

**User entry**

9.0 to 10.0 m/s<sup>2</sup>


**Factory setting**

9.807 m/s<sup>2</sup>

## "HyTD" submenu

### Overview

Hydrostatic Tank Deformation can be used to compensate the vertical movement of the Gauge Reference Height (GRH) due to bulging of the tank shell caused by the hydrostatic pressure exerted by the liquid stored in the tank. The compensation is based on a linear approximation obtained from manual hand dips at several levels distributed over the full range of the tank.

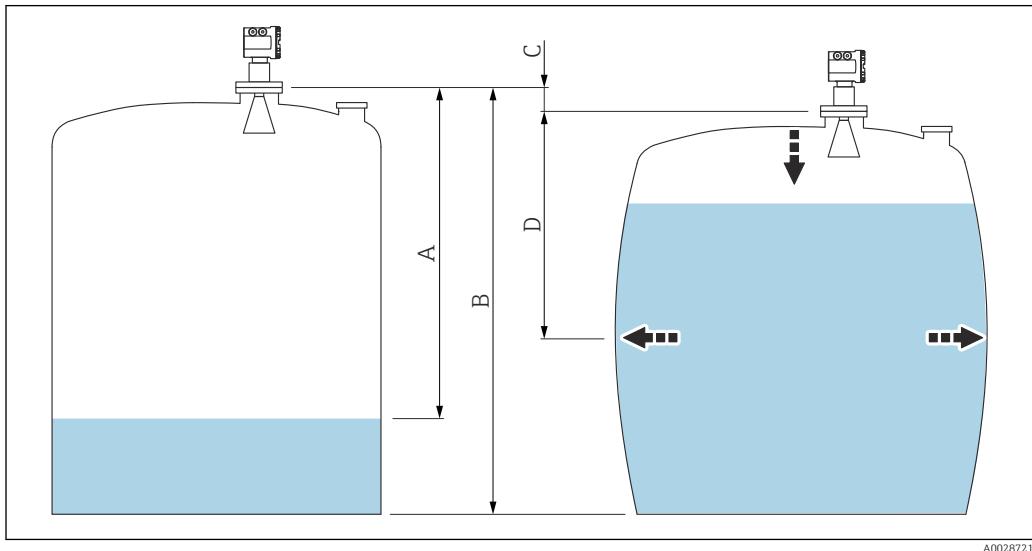

A0028721

■ 12 Correction of the hydrostatic tank deformation (HyTD)

- A "Distance" (level below  $L_0 \rightarrow$  "HyTD correction value" = 0)
- B Gauge Reference Height (GRH)
- C HyTD correction value
- D "Distance" (level above  $L_0 \rightarrow$  "HyTD correction value" > 0)

**i** This mode should not be used in conjunction with HTG as with HTG the level is not measured relative to the gauge reference height.

### *Linear approximation of the HyTD correction*

The real amount of deformation varies non-linearly with the level due to the construction of the tank. However, as the correction values are typically small compared to the measured level, a simple straight line method can be used with good results.

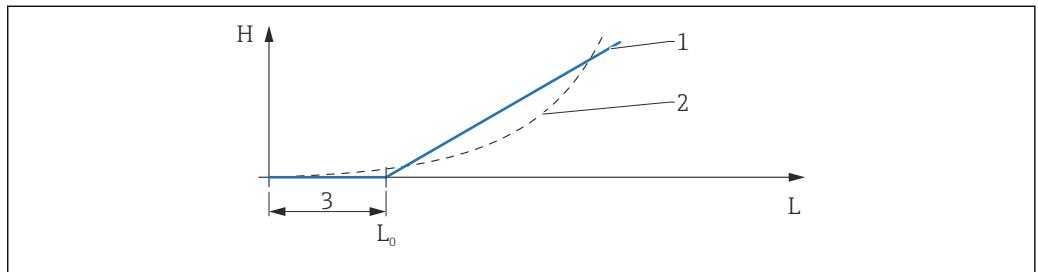


图 13 Calculation of the HyTD correction

- 1 Linear correction according to "Deformation factor" (→ 图 181)"
- 2 Real correction
- 3 Starting level (→ 图 180)
- L Measured level
- H HyTD correction value (→ 图 180)

### *Calculation of the HyTD correction*

$L \leq L_0$	$\Rightarrow$	$C_{\text{HyTD}} = 0$
$L > L_0$	$\Rightarrow$	$C_{\text{HyTD}} = - (L - L_0) \times D$

A0028715

<b>L</b>	Measured level
<b>L<sub>0</sub></b>	Starting level
<b>C<sub>HyTD</sub></b>	HyTD correction value
<b>D</b>	Deformation factor

*Description of parameters**Navigation*

Expert → Application → Tank calculation → HyTD

► HyTD	
HyTD correction value	→  180
HyTD mode	→  180
Starting level	→  180
Deformation factor	→  181

**HyTD correction value****Navigation**

Expert → Application → Tank calculation → HyTD → HyTD corr. value (13603)

**Description**

Shows the correction value from the Hydrostatic Tank Deformation.

**Additional information**

Read access	Operator
Write access	-

**HyTD mode****Navigation**

Expert → Application → Tank calculation → HyTD → HyTD mode (14652)

**Description**

Activates or deactivates the calculation of the Hydrostatic Tank Deformation.

**Selection**

- No
- Yes

**Factory setting**

No

**Additional information**

Read access	Operator
Write access	Maintenance

**Starting level****Navigation**

Expert → Application → Tank calculation → HyTD → Starting level (13601)

**Description**

Defines the starting level for the Hydrostatic Tank Deformation. Levels below this value are not corrected.

**User entry** 0 to 5 000 mm

**Factory setting** 500 mm

**Additional information**

Read access	Operator
Write access	Maintenance

---

## Deformation factor



**Navigation** Expert → Application → Tank calculation → HyTD → Deform factor (13602)

**Description** Defines the deformation factor for the HyTD (change of device position per change of level).

**User entry** -1.0 to 1.0 %

**Factory setting** 0.2 %

**Additional information**


Read access	Operator
Write access	Maintenance

### "CTSh" submenu

#### Overview

CTSh (correction for the thermal expansion of the tank shell) compensates for effects on the Gauge Reference Height (GRH) and on the expansion or contraction of the measuring wire due to temperature effects on the tank shell or stilling well. The temperature effects are separated into two parts, respectively affecting the 'dry' and 'wetted' part of the tank shell or stilling well. The correction function is based on thermal expansion coefficients of steel and insulation factors for both the 'dry' and 'wet' parts of the wire and the tank shell. The temperatures used for the correction can be selected from on manual or measured values.

- i** This correction is recommended for the following situations:
  - if the operating temperature deviates considerably from the temperature during calibration ( $\Delta T > 10 \text{ }^{\circ}\text{C}$  (18  $^{\circ}\text{F}$ ))
  - for extremely high tanks
  - for refrigerated, cryogenic or heated applications
- i** As the use of this correction will influence the innage level reading, it is recommended to ensure the manual hand dip and level verification procedures are being conducted correctly before enabling this correction method.
- i** This mode cannot be used in conjunction with HTG because the level is not measured relative to the gauge reference height with HTG.

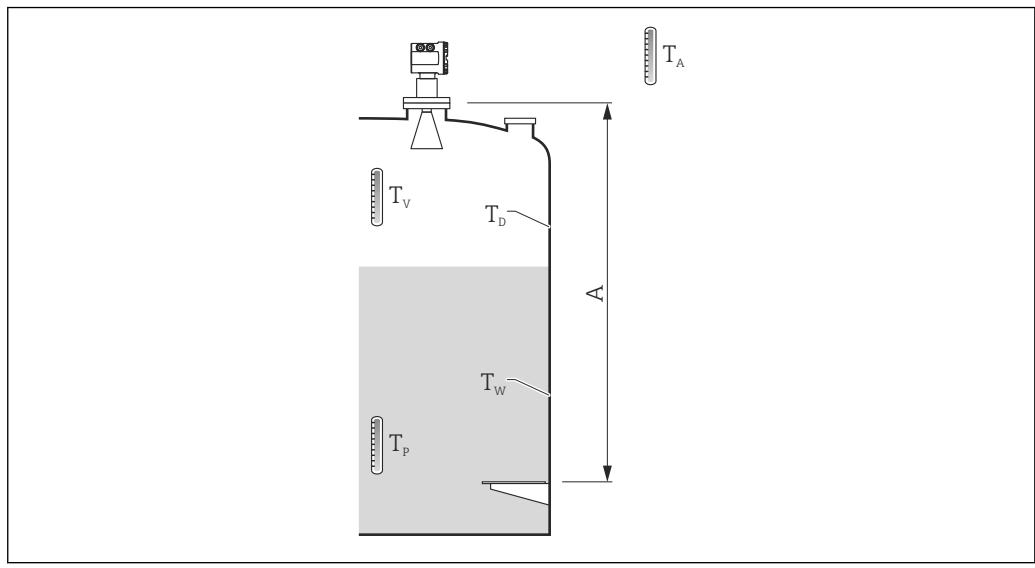*CTSh: Calculation of the wall temperature***Fig. 14 Parameters for the CTSh calculation**

A Gauge Reference Height (GRH)


$T_W$	Temperature of the wetted part of the tank shell
$T_D$	Temperature of the dry part of the tank shell
$T_P$	Product temperature
$T_V$	Vapor temperature (in the tank)
$T_A$	Ambient temperature (atmosphere surrounding the tank)

*CTSh: Calculation of the wall temperature*

Depending on the parameters **Covered tank** (→ [Fig. 186](#)) and **Stilling well** (→ [Fig. 186](#)), the temperatures  $T_W$  of the wetted and  $T_D$  of the dry part of the tank wall are calculated as follows:

Covered tank (→ <a href="#">Fig. 186</a> )	Stilling well (→ <a href="#">Fig. 186</a> )	$T_W$	$T_D$
Covered	Yes <sup>1)</sup>	$T_P$	$T_V$
	No	$(7/8) T_P + (1/8) T_A$	$(1/2) T_V + (1/2) T_A$
Open top	Yes	$T_P$	$T_A$
	No	$(7/8) T_P + (1/8) T_A$	$T_A$

1) This option is also valid for insulated tanks without a stilling well. This is due to the temperature inside and outside of the tank shell being the same due to the insulation of the tank.

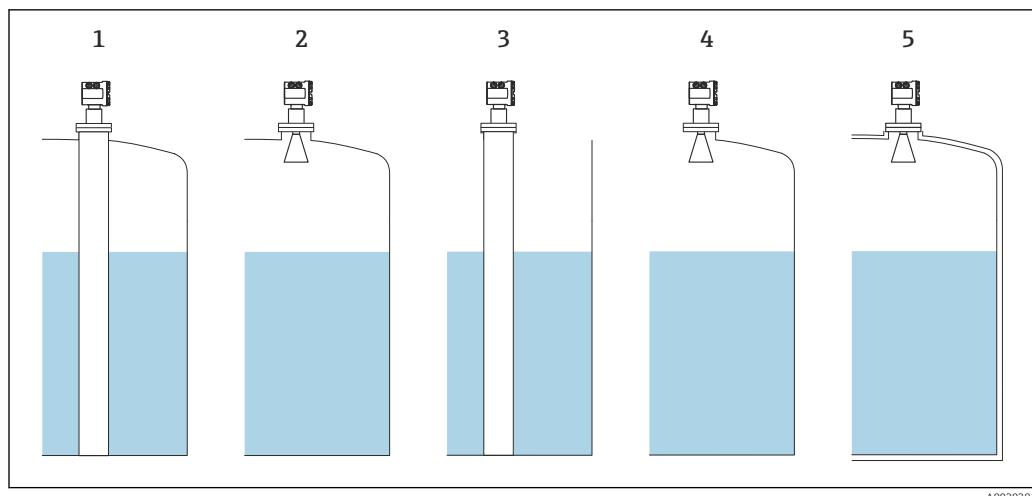

- 1 *Covered tank ( $\rightarrow$  186) = Covered; Stilling well ( $\rightarrow$  186) = Yes*
- 2 *Covered tank ( $\rightarrow$  186) = Covered; Stilling well ( $\rightarrow$  186) = No*
- 3 *Covered tank ( $\rightarrow$  186) = Open top; Stilling well ( $\rightarrow$  186) = Yes*
- 4 *Covered tank ( $\rightarrow$  186) = Open top; Stilling well ( $\rightarrow$  186) = No*
- 5 *Insulated tank: Covered tank ( $\rightarrow$  186) = Open top; Stilling well ( $\rightarrow$  186) = Yes*

*CTSh: Calculation of the correction*

$$C_{CTSh} = \alpha (H - L)(T_D - T_{cal}) + \alpha L (T_W - T_{cal})$$

A0028716

<b>H</b>	Gauge Reference Height
<b>L</b>	Measured level
<b>T<sub>D</sub></b>	Temperature of the dry part of the tank shell (calculated from T <sub>P</sub> , T <sub>V</sub> and T <sub>A</sub> )
<b>T<sub>W</sub></b>	Temperature of the wetted part of the tank shell (calculated from T <sub>P</sub> , T <sub>V</sub> and T <sub>A</sub> )
<b>T<sub>cal</sub></b>	Temperature at which the measurement has been calibrated
<b>α</b>	Linear expansion coefficient
<b>c<sub>CTSh</sub></b>	CTSh correction value

*Description of parameters**Navigation*

Expert → Application → Tank calculation → CTSh

► CTSh	
CTSh correction value	→  185
CTSh mode	→  186
Covered tank	→  186
Stilling well	→  186
Calibration temperature	→  187
Linear expansion coefficient	→  187
Wire expansion coefficient	→  187

**CTSh correction value***Navigation*

Expert → Application → Tank calculation → CTSh → CTSh corr value (13651)

*Description*

Shows the CTSh correction value.

*Additional information*

Read access	Operator
Write access	-

**CTSh mode****Navigation**

Expert → Application → Tank calculation → CTSh → CTSh mode (14651)

**Description**

Activates or deactivates the CTSh.

**Selection**

- No
- Yes
- With wire <sup>\*</sup>
- Only wire <sup>\*</sup>

**Factory setting**

No

**Additional information**

Read access	Operator
Write access	Maintenance

**Covered tank****Navigation**

Expert → Application → Tank calculation → CTSh → Covered tank (13654)

**Description**

Determines whether the tank is covered.

**Selection**

- Open top
- Covered

**Factory setting**

Open top

**Additional information**

Read access	Operator
Write access	Maintenance

The **Covered** option is only valid for fixed tank roofs. For a floating roof select **Open top**.

**Stilling well****Navigation**

Expert → Application → Tank calculation → CTSh → Stilling well (13653)

**Description**

Determines whether the device is mounted on a stilling well.

**Selection**

- No
- Yes

**Factory setting**

No

\* Visibility depends on order options or device settings

**Additional information**

<b>Read access</b>	Operator
<b>Write access</b>	Maintenance

**Calibration temperature****Navigation**

Diagram: Expert → Application → Tank calculation → CTSh → Calibration temp (13652)

**Description**

Specify temperature at which the measurement has been calibrated.

**User entry**

-50 to 250 °C

**Factory setting**

25 °C

**Additional information**

<b>Read access</b>	Operator
<b>Write access</b>	Maintenance

**Linear expansion coefficient****Navigation**

Diagram: Expert → Application → Tank calculation → CTSh → Linear exp coeff (13655)

**Description**

Defines the linear expansion coefficient of the tank shell material.

**User entry**

0 to 100 ppm

**Factory setting**

15 ppm

**Additional information**

<b>Read access</b>	Operator
<b>Write access</b>	Maintenance

**Wire expansion coefficient****Navigation**

Diagram: Expert → Application → Tank calculation → CTSh → Wire exp coeff (13656)

**Description**

Defines the expansion coefficient of the wire material of the drum. Value is programmed in factory.

**User entry**


0 to 100 ppm

**Factory setting**

15 ppm

**"CLG" submenu***Overview*

The gas phase in pressurized tanks has a direct impact on the distance determination for time-of-flight sensors. This feature corrects the influences of the vapor phase based on its pressure, temperature and composition.

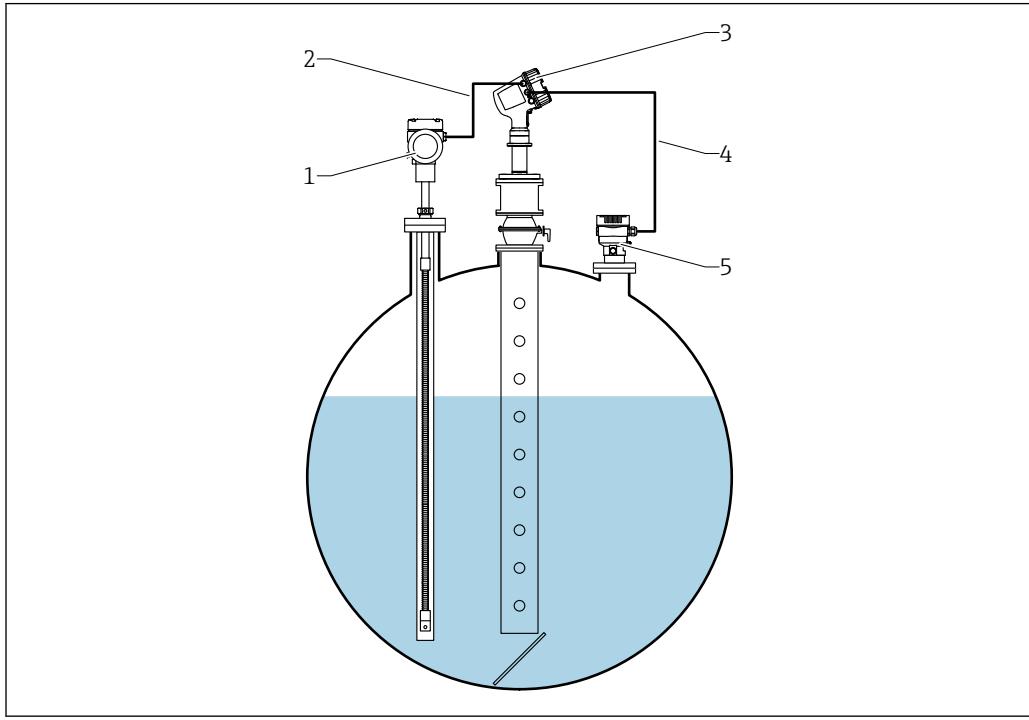

A0053921

- 1 Prothermo temperature measurement device, equipped with thermowell or protective pipe
- 2 HART connection
- 3 Radar level gauge Micropilot NMR84
- 4 HART connection
- 5 Digital pressure transmitter

*Description of parameters*

**i** Configuration of the gas phase correction for liquefied gases (CLG)

*Navigation*

☰ ☰ Expert → Application → Tank calculation → CLG

► CLG	
CLG mode	→ 189
CLG to tank level	→ 189
Gas 1 to 4	→ 190
Gas 1 to 4 refractive index	→ 190
Gas 1 to 4 ratio	→ 190

CLG correction value	→  191
CLG corrected level	→  191

**CLG mode**

**Navigation** Expert → Application → Tank calculation → CLG → CLG mode (17801)

**Description** Activates or deactivates CLG for a mixture of up to four gases.

- Selection**
- Off
  - Pure gas \*
  - Mix of two gases \*
  - Mix of three gases \*
  - Mix of four gases \*

**Factory setting** Off

**Additional information**

Read access	Operator
Write access	Maintenance

**CLG to tank level**

**Navigation** Expert → Application → Tank calculation → CLG → CLG to level (14660)

**Description** Activates or deactivates the tank level correction by CLG. Additional information: SIL- or WHG-Mode sets this parameter to "No".

- Selection**
- No
  - Yes

**Factory setting** No

**Additional information**

Read access	Operator
Write access	Maintenance

\* Visibility depends on order options or device settings

**Gas 1 to 4****Navigation**

Expert → Application → Tank calculation → CLG → Gas 1 to 4 (17802–1 to 4)

**Selection**

- Chloroethylene C<sub>2</sub>H<sub>3</sub>Cl
- Ethylene C<sub>2</sub>H<sub>4</sub>
- Ethane C<sub>2</sub>H<sub>6</sub>
- Propadiene C<sub>3</sub>H<sub>4</sub>
- Propylene C<sub>3</sub>H<sub>6</sub>
- Propane C<sub>3</sub>H<sub>8</sub>
- Isobutane C<sub>4</sub>H<sub>10</sub>
- Butane C<sub>4</sub>H<sub>10</sub>
- Butylene C<sub>4</sub>H<sub>8</sub>
- Isobutylene C<sub>4</sub>H<sub>8</sub>
- Pentane C<sub>5</sub>H<sub>12</sub>
- Methane CH<sub>4</sub>
- Hydrogen H<sub>2</sub>
- Nitrogen N<sub>2</sub>
- Ammonia NH<sub>3</sub>
- Air
- Custom

**Factory setting**

Air

**Additional information**

Read access	Operator
Write access	Maintenance

**Gas 1 to 4 refractive index****Navigation**

Expert → Application → Tank calculation → CLG → Gas 1 to 4 RI (17812–1 to 4)

**Description**

Gas refractive index at 0°C and 1bar with up to 6 decimal places.

**User interface**

1.0 to 2.0

**Factory setting**

1.000288

**Additional information**

Read access	Operator
Write access	Service

**Gas 1 to 4 ratio****Navigation**

Expert → Application → Tank calculation → CLG → Gas 1 to 4 ratio (17806–1 to 4)

**Description**

Defines the ratio of this gas in the mixture. Given as unitless integer value.

**User entry**

1 to 100

**Factory setting** 1

**Additional information**

Read access	Operator
Write access	Maintenance

---

**CLG correction value**

---

**Navigation**  Expert → Application → Tank calculation → CLG → CLG correction (17811)

**Description** Shows the CLG correction value.

**User interface** Signed floating-point number

**Factory setting** 0 mm

**Additional information**

Read access	Operator
Write access	-

---

**CLG corrected level**

---

**Navigation**  Expert → Application → Tank calculation → CLG → CLG corr. level (17810)

**Description** Shows the level with CLG correction only.

**User interface** Signed floating-point number

**Factory setting** 0 mm

**Additional information**

Read access	Operator
Write access	-

## "HTG" submenu

### *Overview*

Hydrostatic Tank Gauging (HTG) is a method to calculate the level and the density of the product inside a tank using pressure measurements only. The pressure is measured at different heights of the tank using one, two or three pressure sensors. With these data either the density or the level of the product (or both) can be calculated.

### *HTG modes*

Four HTG modes can be selected in the **HTG mode** parameter (→ 199). They determine which variables are measured and which are calculated. Depending on the selected mode a number of additional parameters are required for the calculation.

HTG mode (→ 199)	Measured variables	Required additional parameters	Calculated variables
P1 only	P1	<ul style="list-style-type: none"> <li>■ <math>\rho_p</math></li> <li>■ <math>g</math></li> <li>■ <math>H_{P1}</math></li> </ul>	$L_{HTG}$
P1 + P3	<ul style="list-style-type: none"> <li>■ P1</li> <li>■ P3</li> </ul>	<ul style="list-style-type: none"> <li>■ <math>\rho_p</math></li> <li>■ <math>\rho_v</math></li> <li>■ <math>\rho_a</math></li> <li>■ <math>g</math></li> <li>■ <math>H_{P1}</math></li> <li>■ <math>H_{P3}</math></li> </ul>	$L_{HTG}$ (more precise calculation for pressurized tanks)
P1 + P2	<ul style="list-style-type: none"> <li>■ P1</li> <li>■ P2</li> </ul>	<ul style="list-style-type: none"> <li>■ <math>\rho_a</math></li> <li>■ <math>g</math></li> <li>■ <math>H_{P1}</math></li> <li>■ <math>H_{P1-P2}</math></li> </ul>	<ul style="list-style-type: none"> <li>■ <math>\rho_p</math></li> <li>■ <math>L_{HTG}</math></li> </ul>
P1 + P2 + P3	<ul style="list-style-type: none"> <li>■ P1</li> <li>■ P2</li> <li>■ P3</li> </ul>	<ul style="list-style-type: none"> <li>■ <math>\rho_v</math></li> <li>■ <math>\rho_a</math></li> <li>■ <math>g</math></li> <li>■ <math>H_{P1}</math></li> <li>■ <math>H_{P1-P2}</math></li> <li>■ <math>H_{P3}</math></li> </ul>	<ul style="list-style-type: none"> <li>■ <math>\rho_p</math></li> <li>■ <math>L_{HTG}</math></li> </ul> (more precise calculation for pressurized tanks)

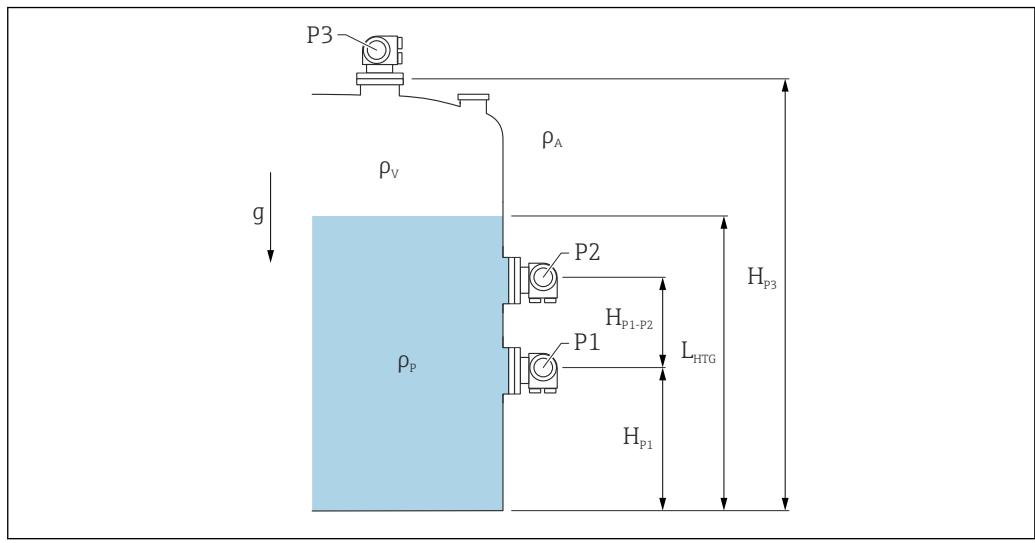
*HTG parameters*

图 15 HTG parameters

Parameter	Navigation path
P1 (Bottom pressure)	Setup → Advanced setup → Tank configuration → Pressure → P1 (bottom)
H <sub>P1</sub> (Position of P1 transmitter)	Setup → Advanced setup → Tank configuration → Pressure → P1 position
P2 (Middle pressure)	Setup → Advanced setup → Tank configuration → Pressure → P2 (middle)
H <sub>P1-P2</sub> (Distance between P1 and P2 transmitters)	Setup → Advanced setup → Tank configuration → Pressure → P1-2 distance
P3 (Top pressure)	Setup → Advanced setup → Tank configuration → Pressure → P3 (top)
H <sub>P3</sub> (Position of P3 transmitter)	Setup → Advanced setup → Tank configuration → Pressure → P3 position
ρ <sub>p</sub> (Density of the product <sup>1)</sup>	<ul style="list-style-type: none"> <li>▪ Read-only: Setup → Advanced setup → Calculation → HTG → Density value</li> <li>▪ Writable: Setup → Advanced setup → Calculation → HTG → Manual upper density</li> </ul>
ρ <sub>v</sub> (Vapor density)	Expert → Application → Tank configuration → Density → Vapor density
ρ <sub>A</sub> (Ambient air temperature)	Setup → Advanced setup → Tank configuration → Density → Air density
g (Local gravity)	Expert → Application → Tank Calculation → Local gravity
L <sub>HTG</sub> (Calculated level)	Setup → Advanced setup → Calculation → HTG → Tank level

1) Depending on the **HTG mode** parameter (→ 199) this is a writable or a read-only parameter.

### HTG evaluation: dependence on measured level

To calculate the level or density by HTG with the required accuracy, P1 and P2 have to be covered by a certain product level. To avoid a measurement with an insufficient accuracy, the calculation will stop before the level reaches the position of the pressure sensor.

Two parameters are defined for this purpose:

- **Minimum level**

This parameter defines the position below which no level is accepted. If the calculation leads to **Tank level < Minimum level**, the value of **Minimum level** will be displayed instead of the calculated value.


- **Safety distance**

This parameter defines the minimum amount of product which must be present above the pressure sensor P1 or P2 for the level or density calculation to take place.



- The device always uses the bigger of these two values as the switch-over point for the level calculation.
- If **HTG mode** (→ 199) is set to **P1 only** or **P1 + P3**, the density is not calculated and the **Manual upper density** parameter (→ 165) is used instead.


*Case 1:  $H_{P1} < \text{Minimum level} < H_{P2}$*

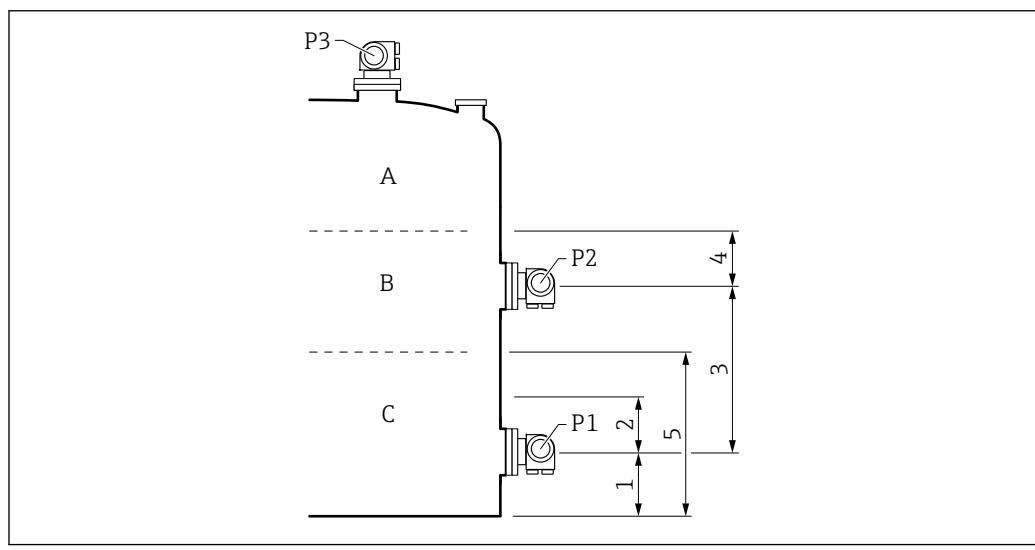

- 1  $P_1$  position (→ 169)
- 2 Safety distance (→ 200)
- 3  $P_1$ -2 distance (→ 171)
- 4 Safety distance (→ 200)
- 5 Minimum level (→ 200)

Level L is in area	Calculation method for $\rho_p$	Calculation method for L
A	calculated from pressure	calculated from pressure
B	$\rho_p$ held	calculated from pressure
C	$\rho_p$ held	L = <b>Minimum level</b>


*Case 2: Minimum level <  $H_{P1}$*

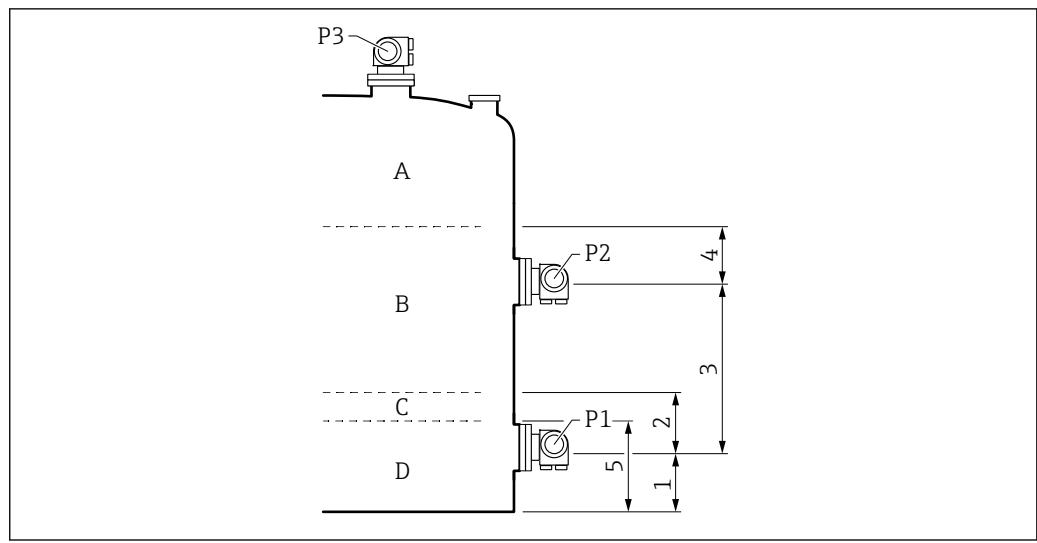

- 1  $P_1$  position ( $\rightarrow$  169)
- 2 Safety distance ( $\rightarrow$  200)
- 3  $P_1$ -2 distance ( $\rightarrow$  171)
- 4 Safety distance ( $\rightarrow$  200)
- 5 Minimum level ( $\rightarrow$  200)

Level L is in area	Calculation method for $p_p$	Calculation method for L
A	calculated from pressure	calculated from pressure
B	$p_p$ held	calculated from pressure
C/D	$p_p$ held	L = <b>Minimum level</b>

Case 3: Minimum level >  $H_{P2}$

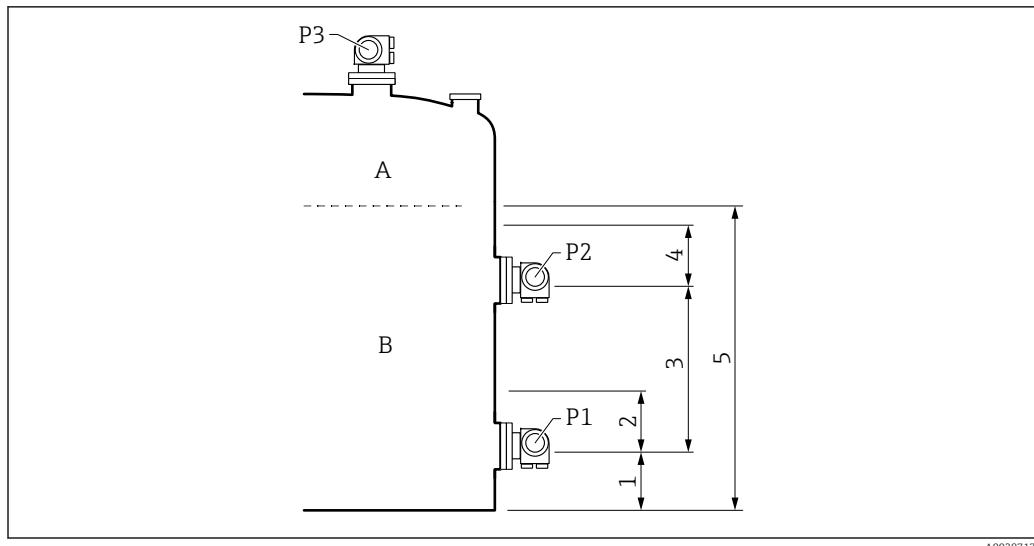

A0028717

- 1  $P_1$  position (→ 169)
- 2 Safety distance (→ 200)
- 3  $P_1$ -2 distance (→ 171)
- 4 Safety distance (→ 200)
- 5 Minimum level (→ 200)

Level L is in area	Calculation method for $\rho_p$	Calculation method for L
A	calculated from pressure	calculated from pressure
B	$\rho_p$ held	L = <b>Minimum level</b>


*HTG evaluation: dependence on measured pressure*

If the level of the product approaches the the P1 or P2 pressure sensor, the measured pressure becomes very small and the measurement might be too inaccurate for the Tank Gauging application. To solve this problem, a minimum pressure  $P_{min}$  is defined in the **Minimum pressure** parameter (→ 200). If the pressure measured by the sensor P1 or P2, respectively, the software stops calculating the density and either holds the last calculated value (for the density) or returns the HTMinLevel (for HTGLevel).

- If P2 is smaller than  $P_{min}$ , the software stops calculating the density and uses the last density value.
- If P1 is smaller than  $P_{min}$ , the software stops calculating the level and uses the value of **Minimum level** (→ 200), instead.

### Hysteresis

The level of the product in a tank is not constant but slightly varies, due for example to filling disturbances. If the level oscillates around the changeover level (**Minimum level**), the algorithm will constantly switch between calculating the value and holding the previous result. To avoid this effect a positional hysteresis is defined around the changeover point.

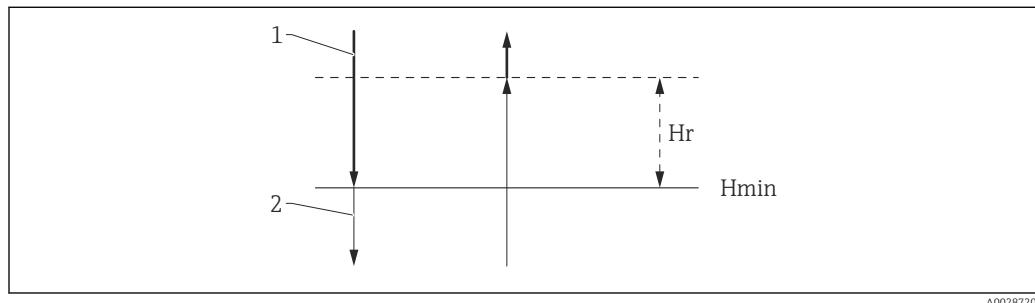

16 HTG hysteresis

- 1 Value calculated
- 2 Value held/manual
- $H_{min}$  Minimum level
- $H_r$  Hysteresis (→ 201)

### Description of parameters

#### Navigation

Expert → Application → Tank calculation → HTG

HTG	
Density value	→  198
Tank level	→  199
HTG mode	→  199
Manual density	→  199
Minimum level	→  200
Minimum pressure	→  200
Safety distance	→  200
Hysteresis	→  201

### Density value

#### Navigation

Expert → Application → Tank calculation → HTG → Density value (13706)

#### Description

Shows the density calculated by HTG.

**Additional information**

Read access	Operator
Write access	-

**Tank level****Navigation**
  Expert → Application → Tank calculation → HTG → Tank level (13707)
**Description**

Shows the level calculated by HTG.

**User interface**

Signed floating-point number

**Factory setting**

0 mm

**Additional information**

Read access	Operator
Write access	-

**HTG mode****Navigation**
  Expert → Application → Tank calculation → HTG → HTG mode (13701)
**Description**

Defines the HTG mode.

**Selection**

- P1 only
- P1 + P3
- P1 + P2
- P1 + P2 + P3

**Factory setting**

P1 only

**Additional information**

Read access	Operator
Write access	Maintenance

**Manual density****Navigation**
  Expert → Application → Tank calculation → HTG → Manual density (15009)
**Description**

Defines the manual density.

**User entry**

0 to 3 000 kg/m<sup>3</sup>

**Factory setting**

800 kg/m<sup>3</sup>

**Additional information**

Read access	Maintenance
Write access	Maintenance

---

**Minimum level**

**Navigation** Expert → Application → Tank calculation → HTG → Min. level (13702)

**Description** Defines the minimum level below which no HTG calculation will take place.

**User entry** 0 to 20 000 mm

**Factory setting** 7 000 mm

**Additional information**

Read access	Operator
Write access	Maintenance

---

**Minimum pressure**

**Navigation** Expert → Application → Tank calculation → HTG → Minimum pressure (13703)

**Description** Defines the minimum pressure below which no HTG calculation takes place.

**User entry** 0 to 100 bar

**Factory setting** 0.1 bar

**Additional information**

Read access	Operator
Write access	Maintenance

---

**Safety distance**

**Navigation** Expert → Application → Tank calculation → HTG → Safety distance (13705)

**Description** Defines the minimum level which must be present above the bottom and middle pressure sensor before their signal is used for the calculation.

**User entry** 0 to 10 000 mm

**Factory setting** 2 000 mm

**Additional information**

Read access	Operator
Write access	Maintenance

---

**Hysteresis****Navigation**

Expert → Application → Tank calculation → HTG → Hysteresis (13704)

**Description**

Defines the hysteresis for the HTG calculation. Prevents constant switching if the level is near the switch-over point.

**User entry**

0 to 2 000 mm

**Factory setting**

50 mm

**Additional information**

Read access	Operator
Write access	Maintenance

## "HTMS" submenu

### Overview

The Hybrid Tank Measurement System (HTMS) is a method to calculate the density of a product in a tank based on both a (top mounted) level and at least one (bottom mounted) pressure measurement. An additional pressure sensor can be installed at the top of the tank to provide information about the vapor pressure and to make the density calculation more accurate. The calculation method also takes into account a possible level of water at the bottom of the tank to make density calculations as accurate as possible.

### HTMS parameters

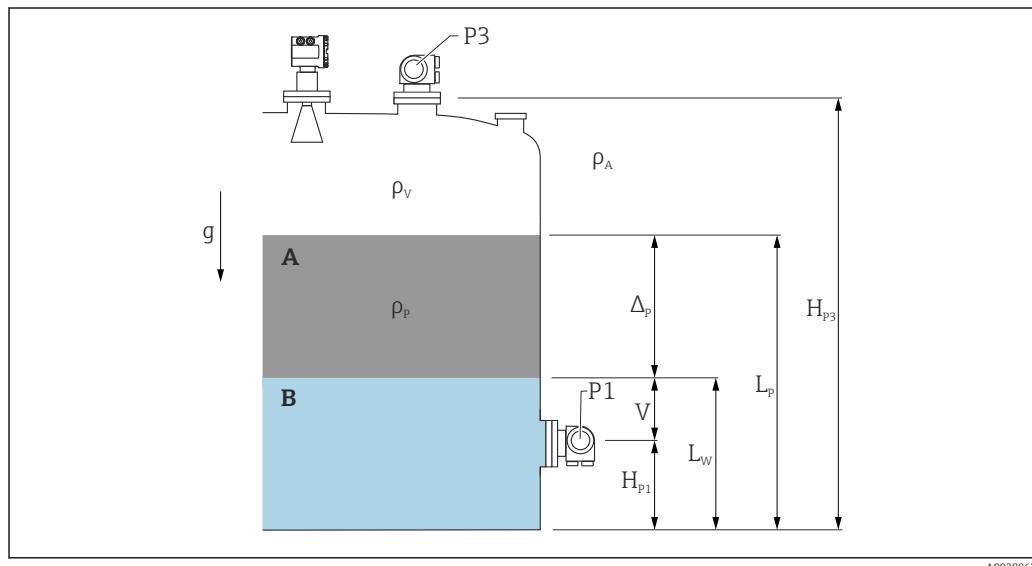


Fig. 17 HTMS parameters

A Product  
B Water

Parameter	Navigation path
P1 (Bottom pressure)	Setup → Advanced setup → Tank configuration → Pressure → P1 (bottom)
H <sub>P1</sub> (Position of P1 transmitter)	Setup → Advanced setup → Tank configuration → Pressure → P1 position
P3 (Top pressure)	Setup → Advanced setup → Tank configuration → Pressure → P3 (top)
H <sub>P3</sub> (Position of P3 transmitter)	Setup → Advanced setup → Tank configuration → Pressure → P3 position
ρ <sub>P</sub> (Density of the product <sup>1)</sup> )	<ul style="list-style-type: none"> <li>▪ Measured value: Setup → Advanced setup → Calculation → HTMS → Density value (13753)</li> <li>▪ User-defined value: Setup → Advanced setup → Calculation → HTMS → Manual upper density (14998)</li> </ul>
ρ <sub>V</sub> (Vapor density)	Expert → Application → Tank configuration → Density → Vapor density
ρ <sub>A</sub> (Ambient air temperature)	Setup → Advanced setup → Tank configuration → Density → Air density
g (Local gravity)	Expert → Application → Tank Calculation → Local gravity
L <sub>p</sub> (Level of the product)	Operation → Tank level (14655)
L <sub>W</sub> (Bottom water level)	Operation → Water level (14970)
V = L <sub>W</sub> - H <sub>P1</sub>	
Δ <sub>P</sub> = L <sub>p</sub> - L <sub>W</sub> = L <sub>p</sub> - V - H <sub>P1</sub>	

1) Depending on the situation this parameter is measured or a user-defined value is used.

### *HTMS modes*

Two HTMS modes can be selected in the **HTMS mode** parameter (→ 204). The mode determines whether one or two pressure values are used. Depending on the selected mode a number of additional parameters are required for the calculation of the product density.

 The **HTMS P1+P3** option must be used in pressurized tanks in order to compensate for the pressure of the vapor phase.

HTMS mode (→ 204)	Measured variables	Required additional parameters	Calculated variables
HTMS P1	■ $P_1$ ■ $L_p$	■ $g$ ■ $H_{P1}$ ■ $L_w$ (optional)	$\rho_p$
HTMS P1+P3	■ $P_1$ ■ $P_3$ ■ $L_p$	■ $\rho_v$ ■ $\rho_A$ ■ $g$ ■ $H_{P1}$ ■ $H_{P3}$ ■ $L_w$ (optional)	$\rho_p$ (more precise calculation for pressurized tanks)

### *Minimum level*

The density of the product can only be calculated if the product has a minimum thickness :

$$\Delta_p \geq \Delta_{p,\min}$$

A0028864

This is equivalent to the following condition for the product level:

$$L_p - V \geq \Delta_{p,\min} + H_{P1} = L_{\min}$$

A0028863


$L_{\min}$  is defined in the **Minimum level** parameter (→ 205). As can be seen from the formula it always must be bigger than  $H_{P1}$ .

If  $L_p - V$  falls below this limit, the density is calculated as follows:

- If a previous calculated value is available, this value will be kept as long as no new calculation is possible.
- If no value was previously calculated, the manual value (defined in the **Manual upper density** parameter (→ 165)) will be used.

### *Hysteresis*

The level of the product in a tank is not constant but slightly varies, due for example to filling disturbances. If the level oscillates around the changeover level (**Minimum level** (→ 205)), the algorithm will constantly switch between calculating the value and holding the previous result. To avoid this effect a positional hysteresis is defined around the changeover point.

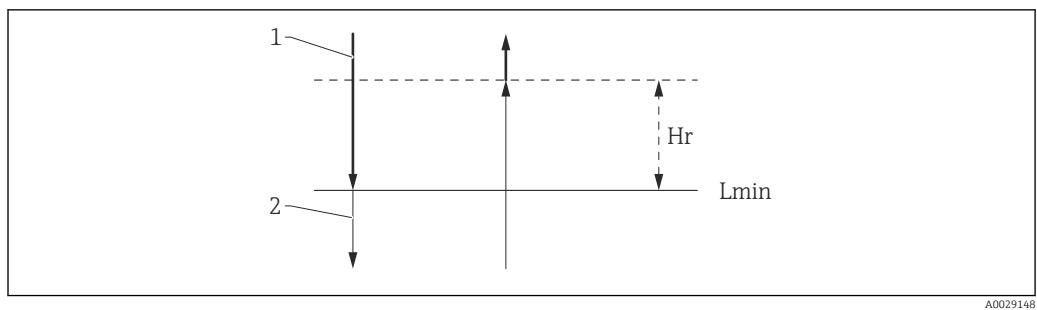**18 HTMS hysteresis**

1 Value calculated

2 Value held/manual

 $L_{min}$  Minimum level (→ 205) $H_r$  Hysteresis (→ 206)*Description of parameters**Navigation*

Expert → Application → Tank calculation → HTMS

► HTMS	
HTMS mode	→ 204
Manual density	→ 205
Density value	→ 205
Minimum level	→ 205
Minimum pressure	→ 206
Safety distance	→ 206
Hysteresis	→ 206
Water density	→ 207

**HTMS mode***Navigation*

Expert → Application → Tank calculation → HTMS → HTMS mode (13751)

**Description**

Defines the HTMS mode. Depending on the mode one or two pressure transmitters are used.

**Selection**

- HTMS P1
- HTMS P1+P3

**Factory setting**

HTMS P1

**Additional information**

<b>Read access</b>	Operator
<b>Write access</b>	Maintenance

Meaning of the options

- HTMS P1  
Only a bottom pressure transmitter (P1) is used.
- HTMS P1+P3  
A bottom (P1) and top (P3) pressure transmitter are used. This option should be selected for pressurized tanks.

**Manual density****Navigation**

Expert → Application → Tank calculation → HTMS → Manual density (15009)

**Description**

Defines the manual density.

**User entry**0 to 3 000 kg/m<sup>3</sup>**Factory setting**800 kg/m<sup>3</sup>**Additional information**

<b>Read access</b>	Maintenance
<b>Write access</b>	Maintenance

**Density value****Navigation**

Expert → Application → Tank calculation → HTMS → Density value (13753)

**Description**

Shows the calculated product density.

**Additional information**

<b>Read access</b>	Operator
<b>Write access</b>	-

**Minimum level****Navigation**

Expert → Application → Tank calculation → HTMS → Min. level (13752)

**Description**

Defines the minimum product level for a HTMS calculation.

If Lp - V falls below the limit defined in this parameter, the density retains its last value or the manual value is used instead.

**User entry**

0 to 20 000 mm

**Factory setting**

7 000 mm

**Additional information**

Read access	Operator
Write access	Maintenance

**Minimum pressure****Navigation**

Expert → Application → Tank calculation → HTMS → Minimum pressure (13754)

**Description**

Defines the minimum pressure for a HTMS calculation.

If the pressure P1 (or the difference P1 - P3) falls below the limit defined in this parameter, the density retains its last value or the manual value is used instead.

**User entry**

0 to 100 bar

**Factory setting**

0.1 bar

**Additional information**

Read access	Operator
Write access	Maintenance

**Safety distance****Navigation**

Expert → Application → Tank calculation → HTMS → Safety distance (13756)

**Description**

Defines the minimum level which must be present above the bottom pressure sensor before its signal is used for the calculation.

**User entry**

0 to 10 000 mm

**Factory setting**

2 000 mm

**Additional information**

Read access	Operator
Write access	Maintenance

**Hysteresis****Navigation**

Expert → Application → Tank calculation → HTMS → Hysteresis (13755)

**Description**

Defines the hysteresis for the HTMS calculation. Prevents constant switching if the level is near the switch-over point.

**User entry**

0 to 2 000 mm

**Factory setting**

50 mm

**Additional information**

Read access	Operator
Write access	Maintenance

---

**Water density****Navigation**

Expert → Application → Tank calculation → HTMS → Water density (13757)

**Description**

Density of the water in the tank.

**User entry**

Signed floating-point number

**Factory setting**1 000 kg/m<sup>3</sup>**Additional information**

Read access	Operator
Write access	Maintenance

### 3.4.3 "Alarm" submenu

*Navigation*

☰ ☰ Expert → Application → Alarm

#### "Alarm" submenu

*Navigation*

☰ ☰ Expert → Application → Alarm → Alarm

▶ Alarm	
Alarm mode	→ ☰ 209
Error value	→ ☰ 210
Alarm value source	→ ☰ 211
Alarm value	→ ☰ 212
HH alarm value	→ ☰ 212
H alarm value	→ ☰ 212
L alarm value	→ ☰ 213
LL alarm value	→ ☰ 213
HH alarm	→ ☰ 213
H alarm	→ ☰ 214
HH+H alarm	→ ☰ 214
L alarm	→ ☰ 214
LL alarm	→ ☰ 214
LL+L alarm	→ ☰ 215
Any error	→ ☰ 215
Clear alarm	→ ☰ 215
Alarm hysteresis	→ ☰ 216
Damping factor	→ ☰ 216

---

**Alarm mode****Navigation**

Expert → Application → Alarm → Alarm mode (13864)

**Description**

Defines the alarm mode of the selected alarm.

**Selection**

- Off
- On
- Latching

**Factory setting**


Off

**Additional information**

Read access	Operator
Write access	Maintenance

*Meaning of the options*

- **Off**  
No alarms are generated.
- **On**  
An alarm disappears if the alarm condition is no longer present (taking into consideration the hysteresis).
- **Latching**  
All alarms remain active until the user selects **Clear alarm** (→ 215) = Yes or the power is switched off and on.

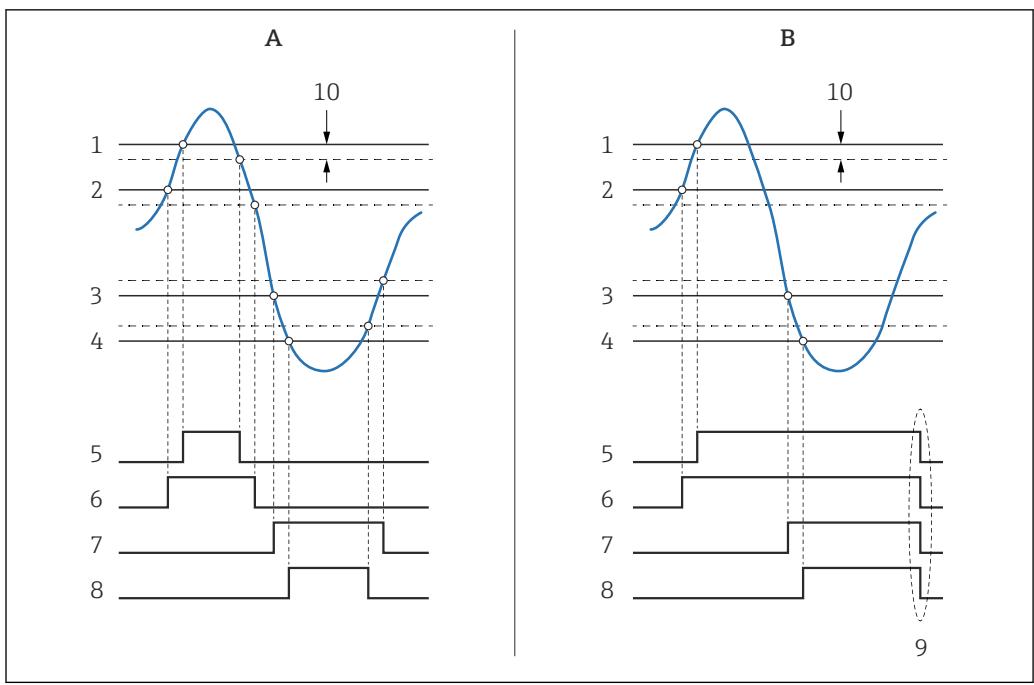

19 Principle of the limit evaluation

- A Alarm mode (→ 209) = On
- B Alarm mode (→ 209) = Latching
- 1 HH alarm value (→ 212)
- 2 H alarm value (→ 212)
- 3 L alarm value (→ 213)
- 4 LL alarm value (→ 213)
- 5 HH alarm (→ 213)
- 6 H alarm (→ 214)
- 7 L alarm (→ 214)
- 8 LL alarm (→ 214)
- 9 "Clear alarm (→ 215)" = "Yes" or power off-on
- 10 Hysteresis (→ 216)

## Error value



### Navigation

Expert → Application → Alarm → Alarm → Error value (13851)

### Prerequisite

Alarm mode (→ 209) ≠ Off

### Description

Defines the alarm to be issued if the input value is invalid.

### Selection

- No alarm
- HH+H alarm
- H alarm
- L alarm
- LL+L alarm
- All alarms

### Factory setting

All alarms

### Additional information

Read access	Operator
Write access	Maintenance

**Alarm value source**

**Navigation**      Expert → Application → Alarm → Alarm source (13866)

**Prerequisite**      **Alarm mode (→ 209) ≠ Off**

**Description**      Determines the process variable to be monitored.

- Selection**
- Tank level
  - Liquid temperature
  - Vapor temperature
  - Water level
  - P1 (bottom)
  - P2 (middle)
  - P3 (top)
  - Observed density value
  - Volume
  - Flow velocity
  - Volume flow
  - Vapor density
  - Middle density
  - Upper density
  - Correction
  - Tank level %
  - GP 1...4 value
  - Measured level
  - P3 position
  - Tank reference height
  - Local gravity
  - P1 position
  - Manual density
  - Tank ullage
  - Average profile density
  - Lower density
  - Upper interface level
  - Lower interface level
  - Bottom level
  - Displacer position
  - HART device 1...15 PV
  - HART device 1...15 SV
  - HART device 1...15 TV
  - HART device 1...15 QV
  - HART device 1...15 PV mA
  - HART device 1...15 PV %
  - Element temperature 1...24
  - AIO B1-3 value
  - AIO C1-3 value
  - AIP B4-8 value
  - AIP C4-8 value
  - None

**Factory setting**      None

**Additional information**

Read access	Operator
Write access	Maintenance

---

**Alarm value**

---

**Navigation**

Expert → Application → Alarm → Alarm value (13863)

**Prerequisite****Alarm mode (→ 209) ≠ Off****Description**

Shows the current value of the process variable being monitored.

**User interface**

Signed floating-point number

**Factory setting**

0 None

**Additional information**

Read access	Operator
Write access	-

---

**HH alarm value**

---

**Navigation**

Expert → Application → Alarm → HH alarm value (13855)

**Prerequisite****Alarm mode (→ 209) ≠ Off****Description**

Defines the high-high(HH) limit value.

**User entry**

Signed floating-point number

**Factory setting**

0 None

**Additional information**

Read access	Operator
Write access	Maintenance

---

**H alarm value**

---

**Navigation**

Expert → Application → Alarm → H alarm value (13854)

**Prerequisite****Alarm mode (→ 209) ≠ Off****Description**

Defines the high(H) limit value.

**User entry**

Signed floating-point number

**Factory setting**

0 None

**Additional information**

Read access	Operator
Write access	Maintenance

**L alarm value**

**Navigation** Expert → Application → Alarm → Alarm → L alarm value (13853)

**Prerequisite** **Alarm mode (→ 209) ≠ Off**

**Description** Defines the low limit value.

**User entry** Signed floating-point number

**Factory setting** 0 None

**Additional information**

Read access	Operator
Write access	Maintenance

**LL alarm value**

**Navigation** Expert → Application → Alarm → Alarm → LL alarm value (13852)

**Prerequisite** **Alarm mode (→ 209) ≠ Off**

**Description** Defines the low-low(LL) limit value.

**User entry** Signed floating-point number

**Factory setting** 0 None

**Additional information**

Read access	Operator
Write access	Maintenance

**HH alarm**

**Navigation** Expert → Application → Alarm → Alarm → HH alarm (13857)

**Prerequisite** **Alarm mode (→ 209) ≠ Off**

**Description** Shows whether an HH alarm is currently active.

**Additional information**

Read access	Operator
Write access	-

## H alarm

---

**Navigation**   Expert → Application → Alarm → Alarm → H alarm (13856)

**Prerequisite** **Alarm mode (→  209) ≠ Off**

**Description** Shows whether an H alarm is currently active.

**Additional information**

Read access	Operator
Write access	-

---

## HH+H alarm

---

**Navigation**   Expert → Application → Alarm → Alarm → HH+H alarm (13858)

**Prerequisite** **Alarm mode (→  209) ≠ Off**

**Description** Shows whether an HH or H alarm is currently active.

**Additional information**

Read access	Operator
Write access	-

---

## L alarm

---

**Navigation**   Expert → Application → Alarm → Alarm → L alarm (13859)

**Prerequisite** **Alarm mode (→  209) ≠ Off**

**Description** Shows whether an L alarm is currently active.

**Additional information**

Read access	Operator
Write access	-

---

## LL alarm

---

**Navigation**   Expert → Application → Alarm → Alarm → LL alarm (13868)

**Prerequisite** **Alarm mode (→  209) ≠ Off**

**Description** Shows whether an LL alarm is currently active.

**Additional information**

Read access	Operator
Write access	-

**LL+L alarm****Navigation**
  Expert → Application → Alarm → LL+L alarm (13869)
**Prerequisite****Alarm mode (→  209) ≠ Off****Description**

Shows whether an LL or L alarm is currently active.

**Additional information**

Read access	Operator
Write access	-

**Any error****Navigation**
  Expert → Application → Alarm → Any error (13867)
**Prerequisite****Alarm mode (→  209) ≠ Off****Description**

Show whether any alarm is currently active.

**User interface**

- Unknown
- Inactive
- Active
- Error

**Factory setting**

Unknown

**Additional information**

Read access	Operator
Write access	-

**Clear alarm****Navigation**
  Expert → Application → Alarm → Clear alarm (13861)
**Prerequisite****Alarm mode (→  209) = Latching****Description**

Deletes an alarm which is still active although the alarm condition is no longer present.

**Selection**

- No
- Yes

**Factory setting**

No

**Additional information**

Read access	Operator
Write access	Maintenance

**Alarm hysteresis****Navigation**

Diagram: Expert → Application → Alarm → Alarm → Alarm hysteresis (13862)

**Prerequisite**

**Alarm mode (→ 209) ≠ Off**

**Description**

Defines the hysteresis for the limit values. The hysteresis prevents constant changes of the alarm state if the level is near one of the limit values.

**User entry**

Signed floating-point number

**Factory setting**

0.001

**Additional information**

Read access	Maintenance
Write access	Maintenance

**Damping factor****Navigation**

Diagram: Expert → Application → Alarm → Alarm → Damping factor (13860)

**Description**

Defines the damping constant (in seconds).

**User entry**

0 to 999.9 s

**Factory setting**

0 s


**Additional information**

Read access	Operator
Write access	Maintenance

### 3.5 "Tank values" submenu

Navigation


Expert → Tank values

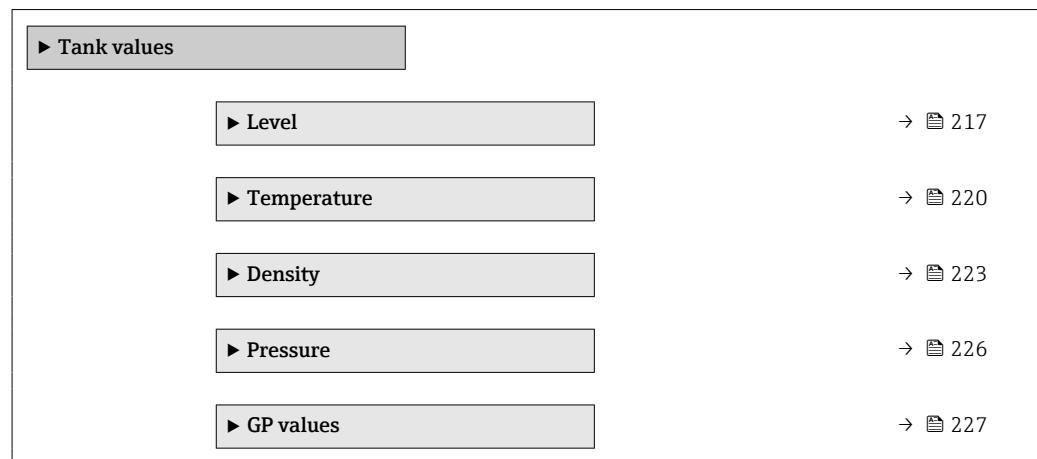

#### 3.5.1 "Level" submenu

Navigation

Expert → Tank values → Level

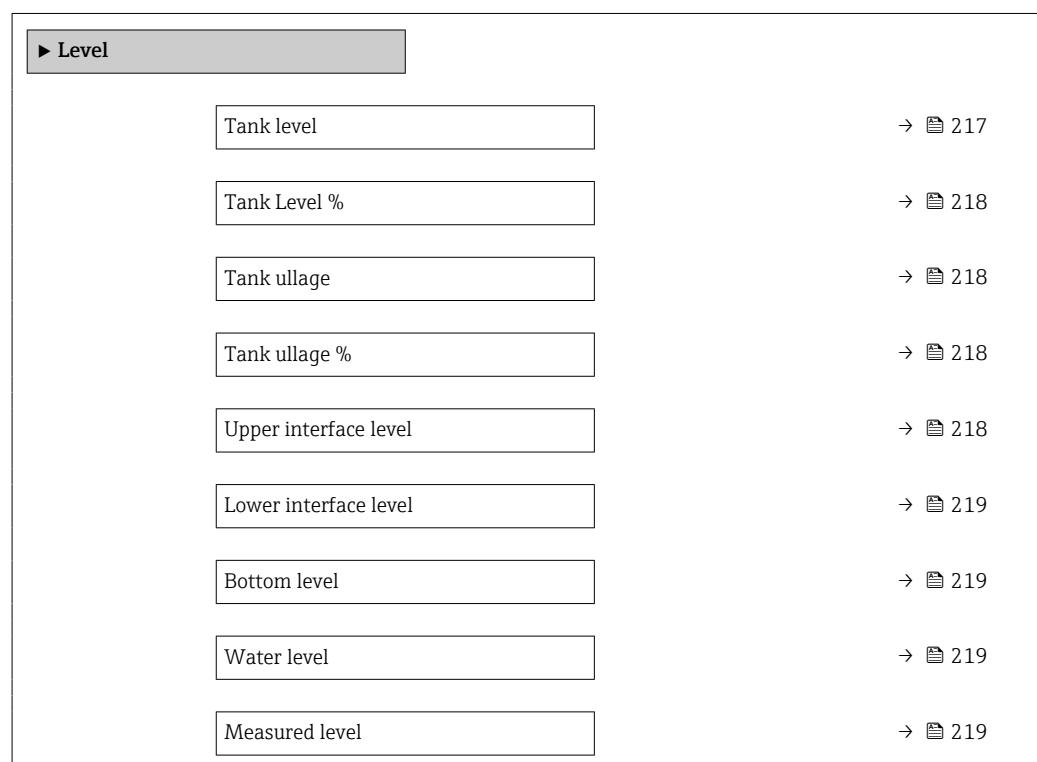


---

#### Tank level

---

Navigation

Expert → Tank values → Level → Tank level (14655)

Description

Shows the distance from the zero position (tank bottom or datum plate) to the product surface.

**Additional information**

Read access	Operator
Write access	-

**Tank Level %****Navigation**
 Expert → Tank values → Level → Tank Level % (14654)
**Description**

Shows the level as a percentage of the full measuring range.

**Additional information**

Read access	Operator
Write access	-

**Tank ullage****Navigation**
 Expert → Tank values → Level → Tank ullage (14657)
**Description**

Shows the remaining empty space in the tank.

**Additional information**

Read access	Operator
Write access	-

**Tank ullage %****Navigation**
 Expert → Tank values → Level → Tank ullage % (14658)
**Description**

Shows the remaining empty space in percentage related to parameter tank reference height.

**Additional information**

Read access	Operator
Write access	-

**Upper interface level****Navigation**
 Expert → Tank values → Level → Upper I/F level (15003)
**Description**

Shows measured interface level from zero position (tank bottom or datum plate). Value is updated when device generates a valid Interface measurement.

**Additional information**

Read access	Maintenance
Write access	-

---

**Lower interface level**

---

**Navigation** Expert → Tank values → Level → Lower I/F level (15004)**Description**

Shows measured interface level from zero position (tank bottom or datum plate). Value is updated when device generates a valid interface measurement.

**Additional information**

Read access	Maintenance
Write access	-

---

**Bottom level**

---

**Navigation** Expert → Tank values → Level → Bottom level (15018)**Description**

Shows the bottom level.

**Additional information**

Read access	Operator
Write access	-

---

**Water level**

---

**Navigation** Expert → Tank values → Level → Water level (14970)**Description**

Shows the bottom water level.

**Additional information**

Read access	Operator
Write access	-

---

**Measured level**

---

**Navigation** Expert → Tank values → Level → Measured level (14653)**Description**

Shows the measured level without any correction from the tank calculations.


**Additional information**

Read access	Operator
Write access	-

### 3.5.2 "Temperature" submenu

Navigation

Expert → Tank values → Temperature

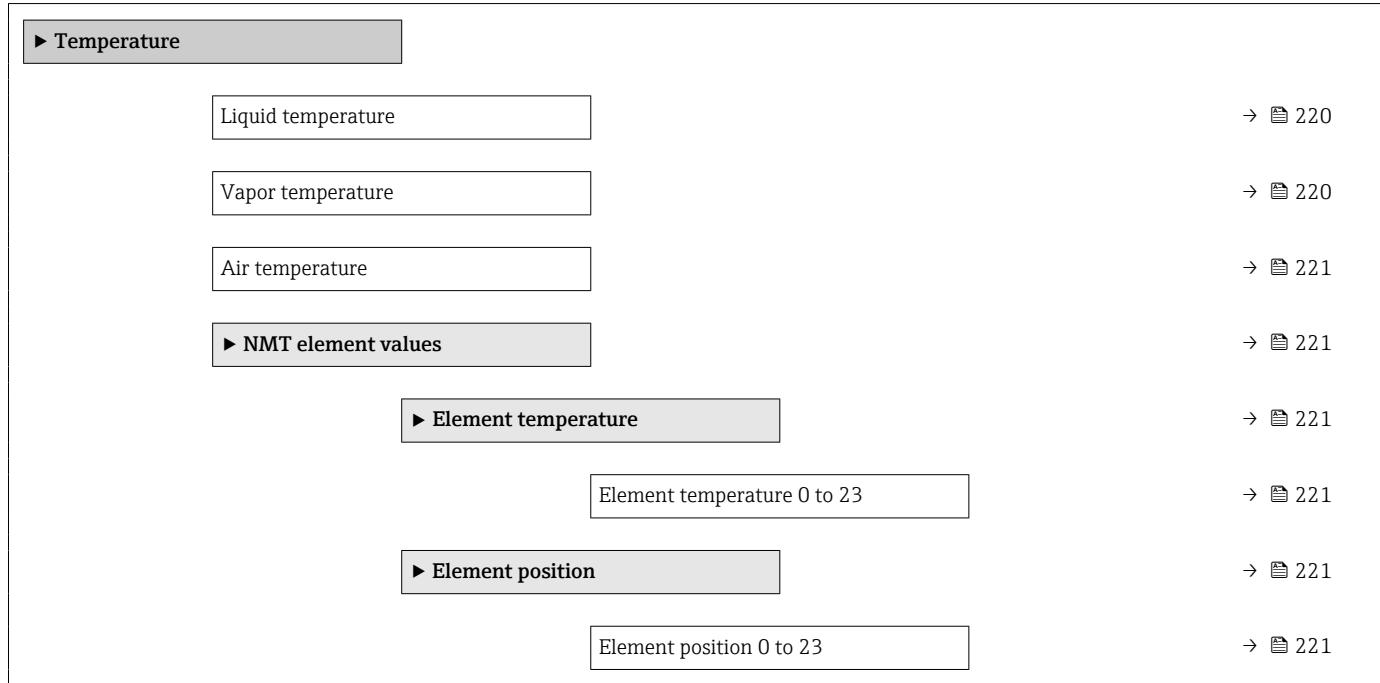


---

#### Liquid temperature

---

Navigation

Expert → Tank values → Temperature → Liquid temp. (14978)

Description

Shows the average or spot temperature of the measured liquid.

Additional information

Read access	Operator
Write access	-

---

#### Vapor temperature

---

Navigation

Expert → Tank values → Temperature → Vapor temp. (14985)

Description

Shows the measured vapor temperature.

Additional information

Read access	Operator
Write access	-

---

**Air temperature**

---

**Navigation**

█ █ Expert → Tank values → Temperature → Air temp. (14986)

**Description**

Shows the air temperature.

**Additional information**

Read access	Operator
Write access	-

**"NMT element values" submenu**

*Navigation* █ Expert → Tank values → Temperature → NMT elem. values

**"Element temperature" submenu**

*Navigation* █ Expert → Tank values → Temperature → NMT elem. values  
→ Element temp. → Element temp 0 to 23 (14984)

---

**Element temperature 1 to 24**

---

**Navigation**

█ Expert → Tank values → Temperature → NMT elem. values → Element temp.  
→ Element temp 1 to 24 (14984-1 to 24)

**Description**

Shows the temperature of an element in the NMT.

**Additional information**

Read access	Operator
Write access	-

**"Element position" submenu**

*Navigation* █ Expert → Tank values → Temperature → NMT elem. values  
→ Element position

---

**Element position 1 to 24**

---

**Navigation**

█ Expert → Tank values → Temperature → NMT elem. values → Element position  
→ Element pos. 1 to 24 (15014-1 to 24)

**Description**

Shows the position of the selected element in the NMT.

**Additional information**

Read access	Operator
Write access	-

### 3.5.3 "Density" submenu

*Navigation*

Expert → Tank values → Density

► Density	
Observed density	→ 223
Observed density temperature	→ 223
Vapor density	→ 224
Air density	→ 224
Measured upper density	→ 224
Measured middle density	→ 224
Measured lower density	→ 225

---

#### Observed density

---

**Navigation**

Expert → Tank values → Density → Observed density (13451)

**Description**

Calculated density of the product.

**Additional information**

Read access	Operator
Write access	-

 This value is calculated from different measured variables depending on the selected calculation method.

---

#### Observed density temperature

---

**Navigation**

Expert → Tank values → Density → Obs. dens. temp. (13453)

**Description**

Corresponding temperature of measured density. Can be used for reference density calculation.

**User interface**

Signed floating-point number

**Factory setting**

0 °C

**Vapor density****Navigation**

Expert → Tank values → Density → Vapor density (14981)

**Description**

Defines the density of the gas phase in the tank.

**User entry**0.0 to 500.0 kg/m<sup>3</sup>**Factory setting**1.2 kg/m<sup>3</sup>**Additional information**

Read access	Operator
Write access	Maintenance

**Air density****Navigation**

Expert → Tank values → Density → Air density (14980)

**Description**

Defines the density of the air surrounding the tank.

**User entry**0.0 to 500.0 kg/m<sup>3</sup>**Factory setting**1.2 kg/m<sup>3</sup>**Additional information**

Read access	Operator
Write access	Maintenance

**Measured upper density****Navigation**

Expert → Tank values → Density → Meas upper dens. (15001)

**Description**

Shows the density of the upper phase.

**Additional information**

Read access	Operator
Write access	-

**Measured middle density****Navigation**

Expert → Tank values → Density → Meas middle dens (14997)

**Description**

Density of the middle phase.

**Additional information**

Read access	Operator
Write access	-

---

**Measured lower density**

---

**Navigation** Expert → Tank values → Density → Meas lower dens. (15002)**Description**

Density of the lower phase.


**Additional information**

Read access	Maintenance
Write access	-

### 3.5.4 "Pressure" submenu

Navigation

Expert → Tank values → Pressure

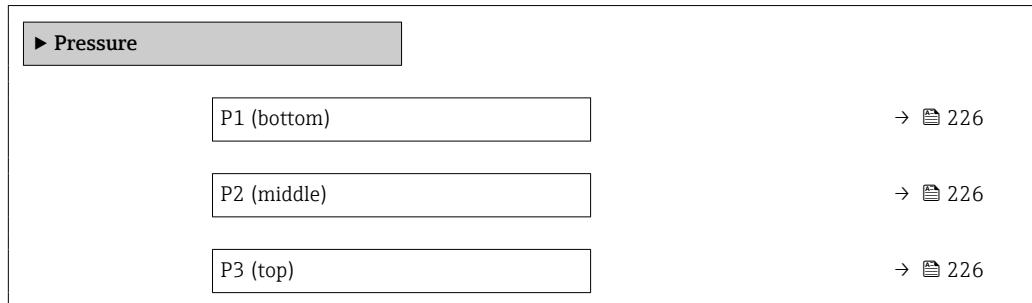

---

#### P1 (bottom)

---

Navigation

Expert → Tank values → Pressure → P1 (bottom) (14983)

Description

Shows the pressure at the tank bottom.

Additional information

Read access	Operator
Write access	-

---

#### P2 (middle)

---

Navigation

Expert → Tank values → Pressure → P2 (middle) (14987)

Description

Shows the pressure (P2) at the middle transmitter.

Additional information

Read access	Operator
Write access	-

---

#### P3 (top)

---

Navigation

Expert → Tank values → Pressure → P3 (top) (14988)

Description

Shows the pressure (P3) at the top transmitter.

Additional information

Read access	Operator
Write access	-

### 3.5.5 "GP values" submenu

*Navigation*

Expert → Tank values → GP values

► GP values	
GP 1 to 4 name	→ 227
GP Value 1	→ 227
GP Value 2	→ 227
GP Value 3	→ 228
GP Value 4	→ 228

---

#### GP 1 to 4 name



**Navigation**

Expert → Tank values → GP values → GP 1 name (14963)

**Description**

Defines the label associated with the respective GP value.

**User entry**

Character string comprising numbers, letters and special characters (15)

**Factory setting**

GP Value 1

**Additional information**

Read access	Operator
Write access	Maintenance

---

#### GP Value 1

**Navigation**

Expert → Tank values → GP values → GP Value 1 (14966)

**Description**

Displays the value that will be used as general purpose value.

**Additional information**

Read access	Operator
Write access	-

---

#### GP Value 2

**Navigation**

Expert → Tank values → GP values → GP Value 2 (14967)

**Description**

Displays the value that will be used as general purpose value.

**Additional information**

Read access	Operator
Write access	-

---

**GP Value 3**

---

**Navigation** Expert → Tank values → GP values → GP Value 3 (14968)**Description**

Displays the value that will be used as general purpose value.

**Additional information**

Read access	Operator
Write access	-

---

**GP Value 4**

---

**Navigation** Expert → Tank values → GP values → GP Value 4 (14969)**Description**

Displays the value that will be used as general purpose value.

**Additional information**

Read access	Operator
Write access	-

### 3.6 "Diagnostics" submenu

Navigation

Diagram Expert → Diagnostics

<b>► Diagnostics</b>	
Actual diagnostics	→ <a href="#">231</a>
Timestamp	→ <a href="#">231</a>
Previous diagnostics	→ <a href="#">232</a>
Timestamp	→ <a href="#">232</a>
Operating time from restart	→ <a href="#">232</a>
Operating time	→ <a href="#">233</a>
Date/time	→ <a href="#">233</a>
<b>► Diagnostic list</b>	→ <a href="#">234</a>
Diagnostics 1 to 5	→ <a href="#">234</a>
Timestamp 1 to 5	→ <a href="#">234</a>
<b>► Event logbook</b>	→ <a href="#">235</a>
Filter options	→ <a href="#">235</a>
<b>► Simulation</b>	→ <a href="#">237</a>
Device alarm simulation	→ <a href="#">237</a>
Diagnostic event simulation	→ <a href="#">237</a>
Current output 1 to 2 simulation	→ <a href="#">238</a>
Simulation value	→ <a href="#">238</a>
<b>► Device information</b>	→ <a href="#">239</a>
Device tag	→ <a href="#">239</a>
Serial number	→ <a href="#">240</a>
Firmware version	→ <a href="#">240</a>
Firmware CRC	→ <a href="#">240</a>

Weight and measures configuration	→ 240
CRC	
Device name	→ 241
Order code	→ 241
Extended order code 1 to 3	→ 241
ENP version	→ 241
Device type	→ 242
Module type	→ 242
Communication Slot	→ 242
<b>► Board info</b>	→ 244
Date/time	→ 233
System temperature	→ 244
W&M lock switch	→ 244
<b>► Data logging</b>	→ 246
Assign channel 1 to 4	→ 247
Logging interval	→ 248
Clear logging data	→ 249

<b>► LRC</b>	
<b>► LRC 1 to 2</b>	→ 251
LRC Mode	→ 251
Allowed difference	→ 251
Check fail threshold	→ 252
Reference level source	→ 252
Reference switch source	→ 253
Reference switch mode	→ 253

Reference level	→  253
Reference switch level	→  254
Reference point level	→  254
Reference switch state	→  254
Start reference measurement	→  255
Check level	→  255
Check status	→  255
Check timestamp	→  256

## Actual diagnostics

### Navigation

Expert → Diagnostics → Actual diagnos. (0691)

### Description

Displays the currently active diagnostic message.

If there is more than one pending diagnostic event, the message for the diagnostic event with the highest priority is displayed.

### Additional information

Read access	Operator
Write access	-

The display consists of:

- Symbol for event behavior
- Code for diagnostic behavior
- Operating time of occurrence
- Event text

If several messages are active at the same time, the messages with the highest priority is displayed.

Information on what is causing the message, and remedy measures, can be viewed via the symbol on the display.

## Timestamp

### Navigation

Expert → Diagnostics → Timestamp (0667)

### Description

Displays the timestamp for the currently active diagnostic message.

**Additional information**

Read access	Operator
Write access	-

**Previous diagnostics****Navigation**
 Expert → Diagnostics → Prev.diagnostics (0690)
**Description**

Displays the diagnostic message for the last diagnostic event that has ended.

**Additional information**

Read access	Operator
Write access	-

The display consists of:

- Symbol for event behavior
- Code for diagnostic behavior
- Operating time of occurrence
- Event text

 If several messages are active at the same time, the messages with the highest priority is displayed.

 Information on what is causing the message, and remedy measures, can be viewed via the  symbol on the display.

**Timestamp****Navigation**
 Expert → Diagnostics → Timestamp (0672)
**Description**

Displays the timestamp of the diagnostic message generated for the last diagnostic event that has ended.

**Additional information**

Read access	Operator
Write access	-

**Operating time from restart****Navigation**
 Expert → Diagnostics → Time fr. restart (0653)
**Description**

Indicates how long the device has been in operation since the last time the device was restarted.

**Additional information**

Read access	Operator
Write access	-

---

**Operating time**

---

**Navigation** Expert → Diagnostics → Operating time (0652)**Description**

Indicates how long the device has been in operation.

**Additional information**

Read access	Operator
Write access	-

---

**Date/time**

---

**Navigation** Expert → Diagnostics → Date/time (0790)**Description**

Displays the device internal real time clock.


**Additional information**

Read access	Operator
Write access	-

### 3.6.1 "Diagnostic list" submenu

Navigation

Diagram Expert → Diagnostics → Diagnostic list

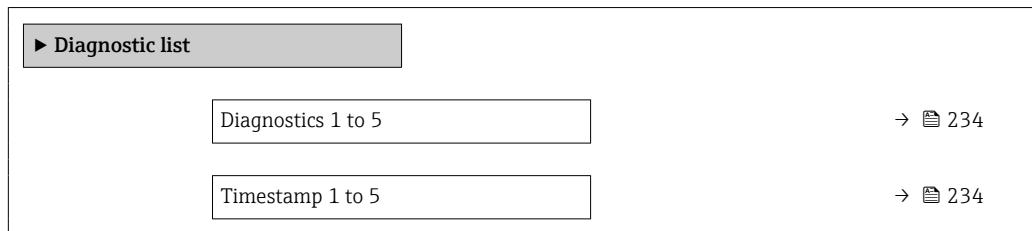

---

#### Diagnostics 1 to 5

---

Navigation

Diagram Expert → Diagnostics → Diagnostic list → Diagnostics 1 to 5 (0692–1 to 5)

Description

Displays the currently active diagnostic message with the highest priority.

Additional information

The display consists of:

- Symbol for event behavior
- Code for diagnostic behavior
- Operating time of occurrence
- Event text

---

#### Timestamp 1 to 5

---

Navigation

Diagram Expert → Diagnostics → Diagnostic list → Timestamp 1 to 5 (0683–1 to 5)

Description

Timestamp of the diagnostic message.

Additional information

Read access	Operator
Write access	-


### 3.6.2 "Event logbook" submenu

#### Structure of the submenu on the local display

*Navigation*



Expert → Diagnostics → Event logbook

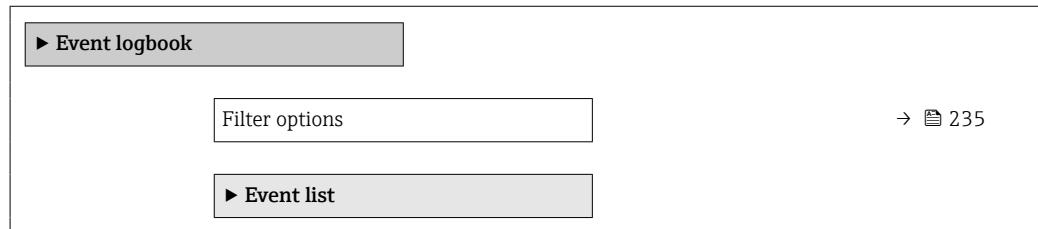

#### Description of parameters

*Navigation*



Expert → Diagnostics → Event logbook

#### Filter options



**Navigation**



Expert → Diagnostics → Event logbook → Filter options (0705)

**Description**

Define which category of event messages is shown in the Events list submenu.

**Selection**

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information (I)
- Not categorized

**Factory setting**

All

**Additional information**



- This parameter is only used for operation via the local display.
- The status signals are categorized according to NAMUR NE 107.

Read access	Operator
Write access	Maintenance

#### "Event list" submenu

The **Event list** submenu (→ 235) is only available when operating via the local display.

The **Event list** submenu doesn't contain any parameters but only the list of events of the category selected in the **Filter options** parameter. A maximum of 100 event messages is displayed in chronological order.

The following status symbols indicate, whether an event has appeared or disappeared at the time stated:

- : Event appeared
- : Event disappeared

 Remedy measures concerning the cause of the message can be called up via the  symbol on the display.

*Navigation*



Expert → Diagnostics → Event logbook → Event list

### 3.6.3 "Simulation" submenu

*Navigation*

Expert → Diagnostics → Simulation

▶ Simulation	
Device alarm simulation	→ 237
Diagnostic event simulation	→ 237
Current output 1 to 2 simulation	→ 238
Simulation value	→ 238

#### Device alarm simulation



**Navigation**

Expert → Diagnostics → Simulation → Dev. alarm sim. (0654)

**Description**

Switch the device alarm on and off.

**Selection**

- Off
- On

**Factory setting**

Off

**Additional information**

Read access	Operator
Write access	Maintenance

#### Diagnostic event simulation



**Navigation**

Expert → Diagnostics → Simulation → Diagnostic event (0737)

**Description**

Select a diagnostic event to simulate this event.

**Selection**

The diagnostic events of the device

**Factory setting**

Off

**Additional information**

Read access	Operator
Write access	Maintenance

To terminate the simulation, select **Off**.

---

**Current output N simulation** **Navigation**  Expert → Diagnostics → Simulation → Curr.outp N sim. (13985)**Prerequisite**

- The device has an Anlog I/O module.
- **Operating mode** (→  94) = 4..20mA output or HART slave +4..20mA output

**Description**

Switches the simulation of the current on or off.

**Selection**

- Off
- On

**Factory setting**

Off

**Additional information**

Read access	Operator
Write access	Maintenance

---

**Simulation value** **Navigation**  Expert → Diagnostics → Simulation → Simulation value (13976)**Prerequisite**

**Current output simulation** (→  238) = On

**Description**

Defines the current to be simulated.

**User entry**

3.4 to 23 mA

**Factory setting**

The current at the time the simulation was started.

**Additional information**

Read access	Operator
Write access	Maintenance

### 3.6.4 "Device information" submenu

*Navigation*

Expert → Diagnostics → Device info

▶ Device information	
Device tag	→ 239
Serial number	→ 240
Firmware version	→ 240
Firmware CRC	→ 240
Weight and measures configuration CRC	→ 240
Device name	→ 241
Order code	→ 241
Extended order code 1 to 3	→ 241
ENP version	→ 241
Device type	→ 242
Build version	→ 242
Module type	→ 242
Communication Slot	→ 242
Recovery state	→ 243
▶ Board info	

---

#### Device tag

---

**Navigation**

Expert → Diagnostics → Device info → Device tag (0011)

**Description**

Shows the device tag.

**User interface**

Character string comprising numbers, letters and special characters

**Factory setting**

- none -

**Additional information**

Read access	Operator
Write access	-

**Serial number****Navigation** Expert → Diagnostics → Device info → Serial number (0009)**Description**

The serial number is a unique alphanumerical code identifying the device.  
It is printed on the nameplate.

In combination with the Operations app it allows to access all device related documentation.

**Additional information**

Read access	Operator
Write access	-

**Firmware version****Navigation** Expert → Diagnostics → Device info → Firmware version (0010)**Description**

Displays the device firmware version installed.

**Additional information**

Read access	Operator
Write access	-

**Firmware CRC****Navigation** Expert → Diagnostics → Device info → Firmware CRC (8563)**Description**

Result of the cyclic redundancy check of the firmware.

**Additional information**

Read access	Operator
Write access	-

**Weight and measures configuration CRC****Navigation** Expert → Diagnostics → Device info → W&M config CRC (8564)**Description**

Result of the cyclic redundancy check of the weights and measure relevant parameters.

**Additional information**

<b>Read access</b>	Operator
<b>Write access</b>	-

**Device name****Navigation**
 Expert → Diagnostics → Device info → Device name (0013)
**Description**

Use this function to display the device name. It can also be found on the nameplate.

**Additional information**

<b>Read access</b>	Operator
<b>Write access</b>	-

**Order code****Navigation**
 Expert → Diagnostics → Device info → Order code (0008)
**Description**

Shows the device order code.

**Additional information**

<b>Read access</b>	Operator
<b>Write access</b>	Service

**Extended order code 1 to 3****Navigation**
 Expert → Diagnostics → Device info → Ext. order cd. 1 (0023)
**Description**

Display the three parts of the extended order code.

**User interface**

Character string comprising numbers, letters and special characters

**Additional information**

<b>Read access</b>	Operator
<b>Write access</b>	Service

The extended order code indicates the selected option of all ordering features and thus uniquely identifies the device.

**ENP version****Navigation**
 Expert → Diagnostics → Device info → ENP version (0012)
**Description**

Shows the version of the electronic nameplate (ENP).

**Additional information**

Read access	Operator
Write access	-

**Device type****Navigation** Expert → Diagnostics → Device info → Device type (8561)**Description**

Displays the device type.

**Additional information**

Read access	Operator
Write access	-

**Build version****Navigation** Expert → Diagnostics → Device info → Build version (0007)**Description**

Shows the device firmware build version installed.

**Additional information**

Read access	Operator
Write access	-

**Module type****Navigation** Expert → Diagnostics → Device info → Module type (8526)**Description**

Shows the type of installed IO module.

**Additional information**

Read access	Operator
Write access	-

**Communication Slot****Navigation** Expert → Diagnostics → Device info → Comm. Slot (13285)**Description**

Indicates which IOM slot contains the communication protocol interface board.

**Additional information**

Read access	Operator
Write access	-

---

**Recovery state**

---

**Navigation**  Expert → Diagnostics → Device info → Recovery state (8565)

**Description** Indicate the state of the backup data process.

**User interface**

- Inactive
- distributing
- restoring
- Distribution done
- Distribution failed
- Operating normally
- Restore done
- Restore failed

**Factory setting** Inactive

**"Board info" submenu****Navigation**
  Expert → Diagnostics → Device info → Board info

 <b>Board info</b>	
Date/time	→  244
System temperature	→  244
W&M lock switch	→  244

**Date/time****Navigation**
  Expert → Diagnostics → Device info → Board info → Date/time (0790)
**Description**

Displays the device internal real time clock.

**Additional information**

Read access	Operator
Write access	-

**System temperature****Navigation**
  Expert → Diagnostics → Device info → Board info → System temp. (8553)
**Description**

Shows the electronic temperature of the main board.

**User interface**

Signed floating-point number

**Factory setting**

0 °C

**Additional information**

Read access	Operator
Write access	-

**W&M lock switch****Navigation**
  Expert → Diagnostics → Device info → Board info → W&M lock switch (8558)
**Description**

Shows the position of the weights and measure (WP) switch.

**User interface**

- Enabled
- Disabled

**Factory setting** Enabled

**Additional information**


<b>Read access</b>	Operator
<b>Write access</b>	-

### 3.6.5 "Data logging" submenu

#### Structure of the submenu on the local display

Navigation


☰ ☰ Expert → Diagnostics → Data logging

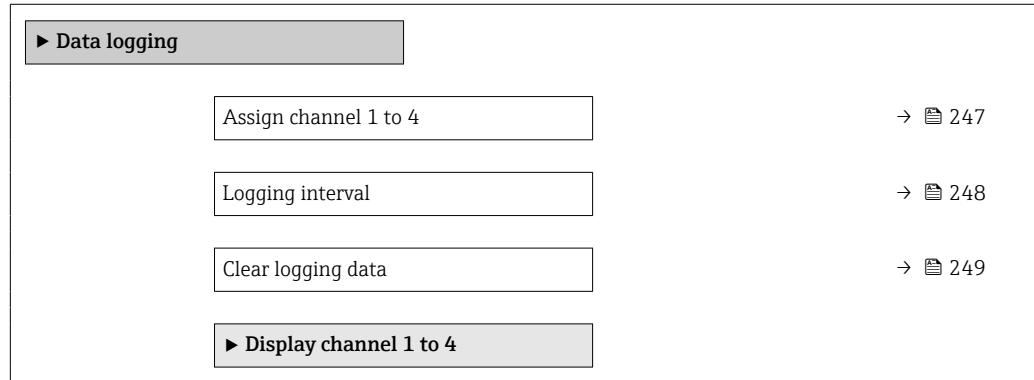

#### Structure of the submenu in an operating tool

Navigation

☰ ☰ Expert → Diagnostics → Data logging

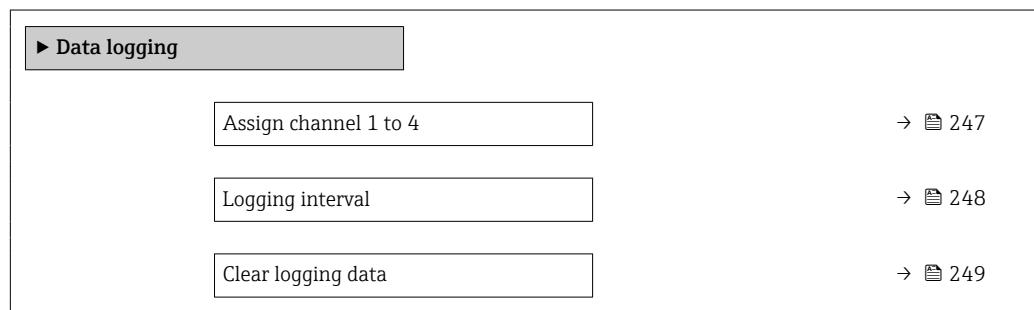

**Description of parameters***Navigation* Expert → Diagnostics → Data logging**Assign channel 1 to 4****Navigation** Expert → Diagnostics → Data logging → Assign chan. 1 (0851)**Description**

Assign a process variable to logging channel.

**Selection**

- Off
- Tank level
- Measured level
- Tank level %
- Distance
- Water level
- Upper interface level
- Lower interface level
- Displacer position \*
- Upper density
- Middle density
- Lower density
- Bottom level
- Average profile density \*
- Liquid temperature
- Vapor temperature
- Air temperature
- Tank ullage
- Tank ullage %
- Observed density value
- P1 (bottom)
- P2 (middle)
- P3 (top)
- GP 1 value
- GP 2 value
- GP 3 value
- GP 4 value
- AIO B1-3 value \*
- AIO B1-3 value mA \*
- AIO B1-3 value % \*
- AIO C1-3 value \*
- AIO C1-3 value mA \*
- AIO C1-3 value % \*
- AIP B4-8 value \*
- AIP C4-8 value \*
- Absolute echo amplitude \*
- Amplitude eval distance \*
- DiffPhase \*

**Factory setting**

Off

---

\* Visibility depends on order options or device settings

**Additional information**

A total of 1000 measured values can be logged. This means:

- 1000 data points if 1 logging channel is used
- 500 data points if 2 logging channels are used
- 333 data points if 3 logging channels are used
- 250 data points if 4 logging channels are used

If the maximum number of data points is reached, the oldest data points in the data log are cyclically overwritten in such a way that the last 1000, 500, 333 or 250 measured values are always in the log (ring memory principle).

 The logged data are deleted if a new option is selected in this parameter.

Read access	Operator
Write access	Maintenance

**Logging interval****Navigation**

 Expert → Diagnostics → Data logging → Logging interval (0856)

 Expert → Diagnostics → Data logging → Logging interval (0856)

**Description**

Define the logging interval  $t_{\log}$  for data logging. This value defines the time interval between the individual data points in the memory.

**User entry**

1.0 to 3 600.0 s

**Factory setting**

10.0 s

**Additional information**

This parameter defines the interval between the individual data points in the data log, and thus the maximum loggable process time  $T_{\log}$ :

- If 1 logging channel is used:  $T_{\log} = 1000 \cdot t_{\log}$
- If 2 logging channels are used:  $T_{\log} = 500 \cdot t_{\log}$
- If 3 logging channels are used:  $T_{\log} = 333 \cdot t_{\log}$
- If 4 logging channels are used:  $T_{\log} = 250 \cdot t_{\log}$

Once this time elapses, the oldest data points in the data log are cyclically overwritten such that a time of  $T_{\log}$  always remains in the memory (ring memory principle).

 The logged data are deleted if this parameter is changed.

*Example***When using 1 logging channel**

- $T_{\log} = 1000 \cdot 1 \text{ s} = 1000 \text{ s} \approx 16.5 \text{ min}$
- $T_{\log} = 1000 \cdot 10 \text{ s} = 1000 \text{ s} \approx 2.75 \text{ h}$
- $T_{\log} = 1000 \cdot 80 \text{ s} = 80000 \text{ s} \approx 22 \text{ h}$
- $T_{\log} = 1000 \cdot 3600 \text{ s} = 3600000 \text{ s} \approx 41 \text{ d}$

Read access	Operator
Write access	Maintenance

---

**Clear logging data****Navigation**

- Expert → Diagnostics → Data logging → Clear logging (0855)
- Expert → Diagnostics → Data logging → Clear logging (0855)

**Description**

Clear the entire logging data.

**Selection**

- Cancel
- Clear data

**Factory setting**

Cancel


**Additional information**

Read access	Operator
Write access	Maintenance

**"Display channel 1 to 4" submenu**

**i** The **Display channel 1 to 4** submenu is only available when operating via the local display. When operating via FieldCare, the diagram can be displayed in the "Event List / HistoROM" function.

The **Display channel 1 to 4** submenu displays the measured value trend of the respective logging channel.

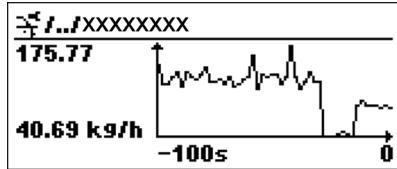

- x-axis: displays 125 to 500 measured values of a process variable (the number of values depending on the number of selected channels).
- y-axis: displays the approximate measured value span and constantly adapts this to the ongoing measurement.

**i** To quit the diagram and to return to the operating menu, press **⊕** and **⊖** simultaneously.

*Navigation*



Expert → Diagnostics → Data logging → Displ.channel 1 to 4

### 3.6.6 "LRC 1 to 2" submenu

 Additional information about the configuration of the level reference check (LRC) function: Operating instructions

*Navigation*

  Diagnostics → LRC → LRC 1 to 2

#### LRC Mode



**Navigation**

  Diagnostics → LRC → LRC 1 to 2 → LRC Mode (17901–1 to 2)

**Description**

Activates or deactivates one of the level reference check (LRC) modes.

**Selection**

- Off
- Compare with level device
- Compare with level switch
- Measure reference point \*

**Factory setting**

Off

**Additional information**

<b>Read access</b>	Operator
<b>Write access</b>	Maintenance

**Additional information**

The option of the Measure reference point is not available for NMS8x.

#### Allowed difference



**Navigation**

  Diagnostics → LRC → LRC 1 to 2 → Allowed diff. (17902–1 to 2)

**Description**

Defines the allowed difference between the tank level and the reference.

**User entry**

1 to 1 000 mm

**Factory setting**

10 mm

**Additional information**

<b>Read access</b>	Operator
<b>Write access</b>	Maintenance

\* Visibility depends on order options or device settings

---

**Check fail threshold****Navigation**

Diagnostics → LRC → LRC 1 to 2 → Fail threshold (17913–1 to 2)

**Description**

Defines how many minutes the comparison has to fail before the check is failed. Note:  
Only for mode "Compare with level device".

**User entry**

1 to 60

**Factory setting**

3

**Additional information**

Read access	Operator
Write access	Maintenance

---

**Reference level source****Navigation**

Diagnostics → LRC → LRC 1 to 2 → Reference source (17903–1 to 2)

**Description**

Defines the source for the reference level. Note: Only for mode "Compare with level device".

**Selection**

- No input value
- HART device 1 level \*
- HART device 2 level \*
- HART device 3 level \*
- HART device 4 level \*
- HART device 5 level \*
- HART device 6 level \*
- HART device 7 level \*
- HART device 8 level \*
- HART device 9 level \*
- HART device 10 level \*
- HART device 11 level \*
- HART device 12 level \*
- HART device 13 level \*
- HART device 14 level \*
- HART device 15 level \*

**Factory setting**

No input value

**Additional information**

Read access	Operator
Write access	Maintenance

---

\* Visibility depends on order options or device settings

---

**Reference switch source**

---

**Navigation** Diagnostics → LRC → LRC 1 to 2 → Reference source (17904–1 to 2)**Description** Defines the source for the reference switch. Note: Only for mode "Compare with level switch".

- Selection**
- None
  - Digital A1-2
  - Digital A3-4
  - Digital B1-2
  - Digital B3-4
  - Digital C1-2
  - Digital C3-4
  - Digital D1-2
  - Digital D3-4

**Factory setting** None
**Additional information**

Read access	Operator
Write access	Maintenance

---



---

**Reference switch mode**

---

**Navigation** Diagnostics → LRC → LRC 1 to 2 → Ref. switch mode (17914–1 to 2)**Description** Defines the switch direction for which the reference check is executed. Note: Only for mode "Compare with level switch".

- Selection**
- Active -> Inactive
  - Inactive -> Active

**Factory setting** Active -> Inactive
**Additional information**

Read access	Operator
Write access	Maintenance

---



---

**Reference level**

---

**Navigation** Diagnostics → LRC → LRC 1 to 2 → Reference level (17909–1 to 2)**Description** Shows the current reference level. Note: Only for mode "Compare with level device".**User interface** Signed floating-point number**Factory setting** 0 mm

**Additional information**

Read access	Operator
Write access	-

**Reference switch level****Navigation**

Diagnostics → LRC → LRC 1 to 2 → Reference level (17905–1 to 2)

**Description**

Defines the position of the reference switch as level. Note: Only for mode "Compare with level switch".

**User entry**

0 to 10 000.00 mm

**Factory setting**

0 mm

**Additional information**

Read access	Operator
Write access	Maintenance

**Reference point level****Navigation**

Diagnostics → LRC → LRC 1 to 2 → Ref. point level (17906–1 to 2)

**Description**

Defines the position of the reference point as level. Note: Only for mode "Measure reference point".

**User entry**

0 to 10 000.00 mm

**Factory setting**

0 mm

**Additional information**

Read access	Operator
Write access	Maintenance

**Reference switch state****Navigation**

Diagnostics → LRC → LRC 1 to 2 → Ref.switch state (17908–1 to 2)

**Description**

Shows the current state of the reference switch (e.g. "active"). Note: Only for mode "Compare with level switch".

**User interface**

- Unknown
- Inactive
- Active
- Error

**Factory setting**

Unknown

**Additional information**

<b>Read access</b>	Operator
<b>Write access</b>	-

**Start reference measurement****Navigation**

Diagnostics → LRC → LRC 1 to 2 → Start ref. meas. (17907–1 to 2)

**Description**

Starts the measurement of the reference point and executes the check. Note: Only for mode "Measure reference point".

**Selection**

- No
- Yes

**Factory setting**

No

**Additional information**

<b>Read access</b>	Operator
<b>Write access</b>	Maintenance

**Check level****Navigation**

Diagnostics → LRC → LRC 1 to 2 → Check level (17910–1 to 2)

**Description**

Shows the tank level at which the reference check has been executed.

**User interface**

Signed floating-point number

**Factory setting**

0 mm

**Additional information**

<b>Read access</b>	Operator
<b>Write access</b>	Development

**Check status****Navigation**

Diagnostics → LRC → LRC 1 to 2 → Check status (17911–1 to 2)

**Description**

Shows the status of the reference check execution (e.g. "passed").

**User interface**

- not executed
- Passed
- Failed
- Not possible

**Factory setting**

not executed

**Additional information**

Read access	Operator
Write access	Development

---

**Check timestamp**

---

**Navigation** Diagnostics → LRC → LRC 1 to 2 → Check timestamp (17912–1 to 2)**Description**

Shows the timestamp at which the reference check has been executed.

**User interface**

Character string comprising numbers, letters and special characters

**Factory setting****Additional information**

Read access	Operator
Write access	-

# Index

## Symbols

#blank# (Parameter) . . . . .	57
#blank# (Submenu) . . . . .	82

## 0 ... 9

0 % value (Parameter) . . . . .	88, 99, 143
100 % value (Parameter) . . . . .	88, 99, 144

## A

Access code (Parameter) . . . . .	72
Access status display (Parameter) . . . . .	26
Activate SW option (Parameter) . . . . .	49
Active calibration (Parameter) . . . . .	91, 104
Active diagnostics (Parameter) . . . . .	69
Actual diagnostics (Parameter) . . . . .	231
Administration (Submenu) . . . . .	48, 49
Air density (Parameter) . . . . .	164, 224
Air temperature (Parameter) . . . . .	161, 221
Air temperature source (Parameter) . . . . .	160
Alarm (Submenu) . . . . .	208
Alarm 1 input source (Parameter) . . . . .	133
Alarm 2 input source (Parameter) . . . . .	133
Alarm 3 input source (Parameter) . . . . .	134
Alarm 4 input source (Parameter) . . . . .	134
Alarm hysteresis (Parameter) . . . . .	216
Alarm mode (Parameter) . . . . .	209
Alarm value (Parameter) . . . . .	212
Alarm value source (Parameter) . . . . .	211
Allowed difference (Parameter) . . . . .	251
Ambient pressure (Parameter) . . . . .	174
Analog I/O (Submenu) . . . . .	93
Analog input 0% value (Parameter) . . . . .	101
Analog input 100% value (Parameter) . . . . .	102
Analog input source (Parameter) . . . . .	96
Analog IP (Submenu) . . . . .	84
Any error (Parameter) . . . . .	215
Application (Submenu) . . . . .	154
Assign channel 1 (Parameter) . . . . .	247
Assign PV (Parameter) . . . . .	142
Assign QV (Parameter) . . . . .	147
Assign SV (Parameter) . . . . .	145
Assign TV (Parameter) . . . . .	146

## B

Backlight (Parameter) . . . . .	34
Baudrate (Parameter) . . . . .	115, 137
Board info (Submenu) . . . . .	244
Bottom level (Parameter) . . . . .	219
Bottom point (Parameter) . . . . .	73, 79
Build version (Parameter) . . . . .	242
Bus termination (Parameter) . . . . .	118

## C

Calibration (Parameter) . . . . .	104
Calibration temperature (Parameter) . . . . .	187
Calibration type AIP (Parameter) . . . . .	91
Check fail threshold (Parameter) . . . . .	252

Check level (Parameter) . . . . .	255
Check status (Parameter) . . . . .	255
Check timestamp (Parameter) . . . . .	256
Clear alarm (Parameter) . . . . .	215
Clear logging data (Parameter) . . . . .	249
CLG (Submenu) . . . . .	188
CLG corrected level (Parameter) . . . . .	191
CLG correction value (Parameter) . . . . .	191
CLG mode (Parameter) . . . . .	189
CLG to tank level (Parameter) . . . . .	189
Communication (Submenu) . . . . .	112
Communication interface protocol (Parameter) . . . . .	114
Communication interface protocol variant (Parameter) . . . . .	129
Communication Slot (Parameter) . . . . .	242
Communication status (Parameter) . . . . .	56
Compatibility mode (Parameter) . . . . .	131, 138
Configuration (Submenu) . . . . .	115, 129, 137
Configure device? (Parameter) . . . . .	71, 78
Confirm access code (Parameter) . . . . .	51
Contact type (Parameter) . . . . .	108
Contrast display (Parameter) . . . . .	34
Covered tank (Parameter) . . . . .	186
CRC seed (Parameter) . . . . .	117
CTSh (Submenu) . . . . .	185
CTSh correction value (Parameter) . . . . .	185
CTSh mode (Parameter) . . . . .	186
Current (Parameter) . . . . .	83
Current output N simulation (Parameter) . . . . .	238
Current span (Parameter) . . . . .	95
Custody transfer (Parameter) . . . . .	66

## D

Damping factor (Parameter) . . . . .	91, 103, 111, 216
Data logging (Submenu) . . . . .	246, 247
Date / time (Submenu) . . . . .	42, 43
Date/time (Parameter) . . . . .	43, 46, 233, 244
Day (Parameter) . . . . .	44, 46
Decimal places 1 (Parameter) . . . . .	31
Decimal places density (Parameter) . . . . .	38
Decimal places length (Parameter) . . . . .	37
Decimal places pressure (Parameter) . . . . .	37
Decimal places temperature (Parameter) . . . . .	38
Define access code (Parameter) . . . . .	49, 50
Define access code (Wizard) . . . . .	50
Deformation factor (Parameter) . . . . .	181
Density (Parameter) . . . . .	62
Density (Submenu) . . . . .	163, 223
Density 0% (Parameter) . . . . .	121
Density 100% (Parameter) . . . . .	122
Density unit (Parameter) . . . . .	37
Density value (Parameter) . . . . .	198, 205
Device alarm simulation (Parameter) . . . . .	237
Device date (Parameter) . . . . .	65
Device description (Parameter) . . . . .	65
Device ID (Parameter) . . . . .	64, 150

Device information (Submenu) . . . . .	239	Bus termination (13249) . . . . .	118
Device message (Parameter) . . . . .	65	Calibration (13966) . . . . .	104
Device name (Parameter) . . . . .	55, 241	Calibration temperature (13652) . . . . .	187
Device reset (Parameter) . . . . .	50	Calibration type AIP (14018) . . . . .	91
Device revision (Parameter) . . . . .	150	Check fail threshold LRC 1 to 2 (17913–1 to 2) . . . . .	252
Device tag (Parameter) . . . . .	55, 150, 239	Check level LRC 1 to 2 (17910–1 to 2) . . . . .	255
Device type (Parameter) . . . . .	64, 151, 242	Check status LRC 1 to 2 (17911–1 to 2) . . . . .	255
Diagnostic code (Parameter) . . . . .	68	Check timestamp LRC 1 to 2 (17912–1 to 2) . . . . .	256
Diagnostic event simulation (Parameter) . . . . .	237	Clear alarm (13861) . . . . .	215
Diagnostic list (Submenu) . . . . .	234	Clear logging data (0855) . . . . .	249
Diagnostics (Submenu) . . . . .	68, 69, 229	CLG corrected level (17810) . . . . .	191
Diagnostics 1 to 5 (Parameter) . . . . .	234	CLG correction value (17811) . . . . .	191
Digital input source (Parameter) . . . . .	107	CLG mode (17801) . . . . .	189
Digital Xx-x (Submenu) . . . . .	106	CLG to tank level (14660) . . . . .	189
Direct access		Communication interface protocol (13201) . . . . .	114
#blank# (14705) . . . . .	57	Communication interface protocol variant (13269) . . . . .	129
#blank# (14706) . . . . .	57	Communication Slot (13285) . . . . .	242
#blank# (14716) . . . . .	57	Communication status (14710) . . . . .	56
0 % value (11632) . . . . .	143	Compatibility mode (13281) . . . . .	131, 138
0 % value (13954) . . . . .	99	Configure device? (14728) . . . . .	71, 78
0 % value (14001) . . . . .	88	Contact type Digital Xx-x (13912) . . . . .	108
100 % value (11633) . . . . .	144	Contrast display (0105) . . . . .	34
100 % value (13968) . . . . .	99	Covered tank (13654) . . . . .	186
100 % value (14013) . . . . .	88	CRC seed (13248) . . . . .	117
Access code (14714) . . . . .	72	CTSh correction value (13651) . . . . .	185
Access status display (0091) . . . . .	26	CTSh mode (14651) . . . . .	186
Activate SW option (0029) . . . . .	49	Current (14457) . . . . .	83
Active calibration (13981) . . . . .	104	Current output N simulation (13985) . . . . .	238
Active calibration (14012) . . . . .	91	Current span (13987) . . . . .	95
Active diagnostics (14754) . . . . .	69	Custody transfer (14748) . . . . .	66
Actual diagnostics (0691) . . . . .	231	Damping factor Digital Xx-x (13904) . . . . .	111
Air density (14980) . . . . .	164, 224	Damping factor (13860) . . . . .	216
Air temperature (14986) . . . . .	161, 221	Damping factor (13951) . . . . .	103
Air temperature source (14993) . . . . .	160	Damping factor (14004) . . . . .	91
Alarm 1 input source (13270) . . . . .	133	Date/time (0790) . . . . .	43, 46, 233, 244
Alarm 2 input source (13271) . . . . .	133	Day (0788) . . . . .	44, 46
Alarm 3 input source (13283) . . . . .	134	Decimal places 1 (0095) . . . . .	31
Alarm 4 input source (13284) . . . . .	134	Decimal places density (0609) . . . . .	38
Alarm hysteresis (13862) . . . . .	216	Decimal places length (0573) . . . . .	37
Alarm mode (13864) . . . . .	209	Decimal places pressure (0608) . . . . .	37
Alarm value (13863) . . . . .	212	Decimal places temperature (0614) . . . . .	38
Alarm value source (13866) . . . . .	211	Define access code (0093) . . . . .	49
Allowed difference LRC 1 to 2 (17902–1 to 2) . . . . .	251	Deformation factor (13602) . . . . .	181
Ambient pressure (14962) . . . . .	174	Density (14724) . . . . .	62
Analog input 0% value (13977) . . . . .	101	Density 0% (13252) . . . . .	121
Analog input 100% value (13965) . . . . .	102	Density 100% (13218) . . . . .	122
Analog input source (13974) . . . . .	96	Density unit (0555) . . . . .	37
Any error (13867) . . . . .	215	Density value (13706) . . . . .	198
Assign channel 1 (0851) . . . . .	247	Density value (13753) . . . . .	205
Assign PV (0234) . . . . .	142	Device alarm simulation (0654) . . . . .	237
Assign QV (0237) . . . . .	147	Device date (14707) . . . . .	65
Assign SV (0235) . . . . .	145	Device description (14704) . . . . .	65
Assign TV (0236) . . . . .	146		

Device ID (0221) . . . . .	150	GP Value 1 (14966) . . . . .	176, 227
Device ID (14702) . . . . .	64	GP Value 2 (14967) . . . . .	176, 227
Device message (14703) . . . . .	65	GP Value 3 (14968) . . . . .	176, 228
Device name (0013) . . . . .	241	GP Value 4 (14969) . . . . .	177, 228
Device name (14722) . . . . .	55	H alarm (13856) . . . . .	214
Device reset (0000) . . . . .	50	H alarm value (13854) . . . . .	212
Device revision (0204) . . . . .	150	Hardware revision (0206) . . . . .	152
Device tag (0011) . . . . .	239	HART bus (14711) . . . . .	64
Device tag (0215) . . . . .	150	HART date code (0202) . . . . .	153
Device tag (14713) . . . . .	55	HART descriptor (0212) . . . . .	152
Device type (0209) . . . . .	151	HART device PV % (14709) . . . . .	58
Device type (8561) . . . . .	242	HART device PV mA (14708) . . . . .	58
Device type (14701) . . . . .	64	HART message (0216) . . . . .	152
Diagnostic code (14739) . . . . .	68	HART revision (0205) . . . . .	151
Diagnostic event simulation (0737) . . . . .	237	HART short tag (0220) . . . . .	149
Diagnostics 1 to 5 (0692–1 to 5) . . . . .	234	Header (0097) . . . . .	32
Digital input source		Header text (0112) . . . . .	33
Digital Xx-x (13907) . . . . .	107	HH alarm (13857) . . . . .	213
Discrete 1 to 4 selector (13260–1 to 4) . . . . .	128, 139	HH alarm value (13855) . . . . .	212
Display damping (0094) . . . . .	34	HH+H alarm (13858) . . . . .	214
Display interval (0096) . . . . .	33	Hour (0789) . . . . .	44, 46
Distance unit (0551) . . . . .	36	HTG mode (13701) . . . . .	199
Element interval (14743) . . . . .	75	HTMS mode (13751) . . . . .	204
Element position (14738) . . . . .	77, 81	Hysteresis (13704) . . . . .	201
Element position 1 to 24 (15014–1 to 24) . . . . .	67, 221	Hysteresis (13755) . . . . .	206
Element temperature (14737) . . . . .	77, 81	HyTD correction value (13603) . . . . .	180
Element temperature 1 to 24 (14984–1 to 24) . . . . .	67, 221	HyTD mode (14652) . . . . .	180
ENP version (0012) . . . . .	241	Input value	
Enter access code (0003) . . . . .	26	Digital Xx-x (13901) . . . . .	108
Error event type (13953) . . . . .	102	Input value (13979) . . . . .	99
Error on event		Input value (14015) . . . . .	89
Digital Xx-x (13916) . . . . .	110	Input value % (13955) . . . . .	100
Error on event (13967) . . . . .	98	Input value in mA (13970) . . . . .	103
Error value (13851) . . . . .	210	Input value percent (13978) . . . . .	103
Error value (13972) . . . . .	98	Input value percent (14002) . . . . .	88
Expected SIL/WHG chain (13952) . . . . .	105	Invalid data (13243) . . . . .	117
Extended order code 1 (0023) . . . . .	241	Kind of interval (14744) . . . . .	74
Failure mode (13988) . . . . .	97	L alarm (13859) . . . . .	214
Feedback threshold (13956) . . . . .	101	L alarm value (13853) . . . . .	213
Filter options (0705) . . . . .	235	Language (0104) . . . . .	28
Firmware CRC (8563) . . . . .	240	Last diagnostic (14742) . . . . .	68
Firmware CRC (14758) . . . . .	66	Level 0% (13214) . . . . .	119
Firmware version (0010) . . . . .	240	Level 100% (13250) . . . . .	120
Fixed current (13989) . . . . .	96	Level mapping (13268) . . . . .	130
Float swap mode (13232) . . . . .	116	Level source (14601) . . . . .	155
Format display (0098) . . . . .	29	Level source (14749) . . . . .	63
Gain adjust (14736) . . . . .	74	Line impedance (13266) . . . . .	131
Gauge current (14027) . . . . .	92	Linear expansion coefficient (13655) . . . . .	187
GP 1 name (14963) . . . . .	176, 227	Liquid temp source (14972) . . . . .	159
GP 1 to 4 source (14989–1 to 4) . . . . .	175	Liquid temperature (14978) . . . . .	160, 220
GP 1 value 0% (13223) . . . . .	125	LL alarm (13868) . . . . .	214
GP 1 value 100% (13224) . . . . .	125	LL alarm value (13852) . . . . .	213
GP 2 value 0% (13257) . . . . .	126	LL+L alarm (13869) . . . . .	215
GP 2 value 100% (13258) . . . . .	126	Local gravity (14979) . . . . .	177
GP 3 value 0% (13259) . . . . .	126	Locking status (0004) . . . . .	25
GP 3 value 100% (13226) . . . . .	127	Logging interval (0856) . . . . .	248
GP 4 value 0% (13225) . . . . .	127	Lower interface level (15004) . . . . .	157, 219
GP 4 value 100% (13227) . . . . .	127	LRC Mode	
		LRC 1 to 2 (17901–1 to 2) . . . . .	251

Manual air temperature (14961) . . . . .	161	P1 absolute / gauge (14954) . . . . .	169
Manual density (15009) . . . . .	199, 205	P1 offset (14953) . . . . .	169
Manual liquid temperature (15015) . . . . .	160	P1 position (14952) . . . . .	169
Manual upper density (14998) . . . . .	165	P1-2 distance (14974) . . . . .	171
Manual value (14746) . . . . .	64	P2 (middle) (14987) . . . . .	170, 226
Manual vapor temperature (14960) . . . . .	162	P2 (middle) manual pressure (14955) . . . . .	170
Manual water level (14959) . . . . .	158	P2 (middle) source (14995) . . . . .	170
Manufacturer ID (0259) . . . . .	151	P2 absolute / gauge (14976) . . . . .	171
Maximum probe temperature (14011) . . . . .	90	P2 offset (14975) . . . . .	171
Measured level (14653) . . . . .	219	P3 (top) (14988) . . . . .	172, 226
Measured lower density (15002) . . . . .	166, 225	P3 (top) manual pressure (14977) . . . . .	172
Measured middle density (14997) . . . . .	166, 224	P3 (top) source (14996) . . . . .	172
Measured upper density (15001) . . . . .	166, 224	P3 absolute / gauge (14958) . . . . .	173
Minimum level (13702) . . . . .	200	P3 offset (14957) . . . . .	173
Minimum level (13752) . . . . .	205	P3 position (14956) . . . . .	173
Minimum pressure (13703) . . . . .	200	Parity (13204) . . . . .	116
Minimum pressure (13754) . . . . .	206	Percent 0% (13202) . . . . .	123
Minimum probe temperature (14010) . . . . .	89	Percent 100% (13234) . . . . .	123
Minute (0791) . . . . .	45, 47	Percent of range (0274) . . . . .	145
Modbus address (13205) . . . . .	116	Polling address (14712) . . . . .	55
Modbus discrete 1 to 4 (13240-1 to 4) . . . . .	114	Pressure (14723) . . . . .	61
Modbus value 1 to 4 (13206-1 to 4) . . . . .	114	Pressure 0% (13217) . . . . .	121
Module type (8526) . . . . .	242	Pressure 100% (13251) . . . . .	121
Month (0787) . . . . .	44, 46	Pressure unit (0564) . . . . .	36
No element in phase (14756) . . . . .	79	Previous diagnostics (0690) . . . . .	232
No. of preambles (0217) . . . . .	142	Previous diagnostics (14755) . . . . .	70
Number format (0099) . . . . .	32	Primary variable (PV) (0201) . . . . .	144
Number of devices (13051) . . . . .	53	Probe position (14009) . . . . .	90
Observed density (13451) . . . . .	223	Process value (13963) . . . . .	102
Observed density (13452) . . . . .	164	Process value (14003) . . . . .	87
Observed density source (13454) . . . . .	163	Process variable (13964) . . . . .	101
Observed density temperature (13453) . . . . .	223	Process variable (14016) . . . . .	87
Ohms offset (14026) . . . . .	86	PV mA selector (11631) . . . . .	144
Old TSM mode (13213) . . . . .	118	PV source (11634) . . . . .	142
Operating mode		Quaternary variable (QV) (0203) . . . . .	148
Digital Xx-x (13911) . . . . .	107	Readback value	
Operating mode (13958) . . . . .	94	Digital Xx-x (13903) . . . . .	110
Operating mode (14014) . . . . .	85	Readback value (13957) . . . . .	100
Operating mode (14453) . . . . .	83	Recovery state (8565) . . . . .	243
Operating mode (14745) . . . . .	55	Reference 0 (14740) . . . . .	68
Operating time (0652) . . . . .	233	Reference 17 (14741) . . . . .	69
Operating time from restart (0653) . . . . .	232	Reference level	
Operation mode (14656) . . . . .	156	LRC 1 to 2 (17909-1 to 2) . . . . .	253
Order code (0008) . . . . .	241	Reference level source	
Output at error (14733) . . . . .	74	LRC 1 to 2 (17903-1 to 2) . . . . .	252
Output density (14720) . . . . .	59	Reference point level	
Output level (14718) . . . . .	60	LRC 1 to 2 (17906-1 to 2) . . . . .	254
Output out of range (13971) . . . . .	98	Reference switch level	
Output pressure (14719) . . . . .	58	LRC 1 to 2 (17905-1 to 2) . . . . .	254
Output simulation		Reference switch mode	
Digital Xx-x (13909) . . . . .	109	LRC 1 to 2 (17914-1 to 2) . . . . .	253
Output temperature (14721) . . . . .	59	Reference switch source	
Output value		LRC 1 to 2 (17904-1 to 2) . . . . .	253
Digital Xx-x (13902) . . . . .	110	Reference switch state	
Output value (13969) . . . . .	100	LRC 1 to 2 (17908-1 to 2) . . . . .	254
Output vapor temperature (14726) . . . . .	59	RTD connection type (14022) . . . . .	87
P1 (bottom) (14983) . . . . .	168, 226	RTD type (14021) . . . . .	85
P1 (bottom) manual pressure (14951) . . . . .	168	Safety distance (13705) . . . . .	200
P1 (bottom) source (14994) . . . . .	168	Safety distance (13756) . . . . .	206

Secondary variable (SV) (0226) . . . . .	146
Select element (14734) . . . . .	76, 80
Separator (0101) . . . . .	32
Serial number (0009) . . . . .	240
Set date (0792) . . . . .	43
Simulation value (13976) . . . . .	238
Software ID (13287) . . . . .	138
Software option overview (0015) . . . . .	49
Software revision (0224) . . . . .	153
Software version (14747) . . . . .	65
SP 1 value selector (13274) . . . . .	135
SP 2 value selector (13275) . . . . .	135
SP 3 value selector (13276) . . . . .	136
SP 4 value selector (13277) . . . . .	136
Start reference measurement	
LRC 1 to 2 (17907–1 to 2) . . . . .	255
Starting level (13601) . . . . .	180
Status signal (14760) . . . . .	56
Stilling well (13653) . . . . .	186
System polling address (0219) . . . . .	141
System temperature (8553) . . . . .	244
Tank level (13707) . . . . .	199
Tank level (14655) . . . . .	156, 217
Tank Level % (14654) . . . . .	218
Tank level to NMT (14750) . . . . .	63
Tank reference height (14603) . . . . .	156
Tank ullage (14657) . . . . .	218
Tank ullage % (14658) . . . . .	218
Temperature (14725) . . . . .	62
Temperature 0% (13215) . . . . .	120
Temperature 100% (13216) . . . . .	120
Temperature element open (14732) . . . . .	73
Temperature element short (14731) . . . . .	73
Temperature offset after conversion (14025) . . . . .	89
Temperature unit (0557) . . . . .	36
Tertiary variable (TV) (0228) . . . . .	147
Test resistance (14752) . . . . .	70
Thermocouple type (14008) . . . . .	86
Timestamp (0667) . . . . .	231
Timestamp (0672) . . . . .	232
Timestamp 1 to 5 (0683–1 to 5) . . . . .	234
Total no. element (14730) . . . . .	72, 78
Units preset (0605) . . . . .	35
Update water level (14751) . . . . .	75, 80
Upper density input source (15006) . . . . .	164
Upper interface level (15003) . . . . .	157, 218
Used for SIL/WHG	
Digital Xx-x (13910) . . . . .	111
Used for SIL/WHG (13980) . . . . .	104
User 0% (13221) . . . . .	122
User 100% (13222) . . . . .	122
User role (0005) . . . . .	26
User value 1 to 8 source (13209–1 to 8) . . . . .	124, 132
V1 address (13235) . . . . .	129
V1 address (13236) . . . . .	130
Value 1 display (0107) . . . . .	30
Value percent selector (13282) . . . . .	137
Vapor density (14981) . . . . .	164, 224
Vapor temp source (14973) . . . . .	161
Vapor temperature (14727) . . . . .	62
Vapor temperature (14985) . . . . .	162, 220
W&M lock switch (8558) . . . . .	244
Water bottom level offset (14757) . . . . .	79
Water density (13757) . . . . .	166, 207
Water level (14717) . . . . .	63
Water level (14970) . . . . .	157, 219
Water level source (14971) . . . . .	157
WB frequency ratio (14753) . . . . .	70
Weight and measures configuration CRC (8564) . . . . .	240
Wire expansion coefficient (13656) . . . . .	187
WM550 address (13286) . . . . .	138
Word type (13208) . . . . .	117
Year (0782) . . . . .	43, 46
Zero adjust (14735) . . . . .	76
Zero adjust (14759) . . . . .	81
Discrete 1 to 4 selector (Parameter) . . . . .	128, 139
Discrete selector (Submenu) . . . . .	128
Display (Submenu) . . . . .	28
Display channel 1 to 4 (Submenu) . . . . .	250
Display damping (Parameter) . . . . .	34
Display interval (Parameter) . . . . .	33
Distance unit (Parameter) . . . . .	36
Document	
Function . . . . .	4
Document function . . . . .	4
<b>E</b>	
Element interval (Parameter) . . . . .	75
Element position (Parameter) . . . . .	77, 81
Element position (Submenu) . . . . .	67, 221
Element position 1 to 24 (Parameter) . . . . .	67, 221
Element setup (Submenu) . . . . .	76, 80
Element temperature (Parameter) . . . . .	77, 81
Element temperature (Submenu) . . . . .	67, 221
Element temperature 1 to 24 (Parameter) . . . . .	67, 221
Element values (Submenu) . . . . .	67
ENP version (Parameter) . . . . .	241
Enter access code (Parameter) . . . . .	26
Error event type (Parameter) . . . . .	102
Error on event (Parameter) . . . . .	98, 110
Error value (Parameter) . . . . .	98, 210
Event list (Submenu) . . . . .	235
Event logbook (Submenu) . . . . .	235
Expected SIL/WHG chain (Parameter) . . . . .	105
Expert (Menu) . . . . .	7, 25
Extended order code 1 (Parameter) . . . . .	241
<b>F</b>	
Failure mode (Parameter) . . . . .	97
Feedback threshold (Parameter) . . . . .	101
Filter options (Parameter) . . . . .	235
Firmware CRC (Parameter) . . . . .	66, 240
Firmware version (Parameter) . . . . .	240
Fixed current (Parameter) . . . . .	96
Float swap mode (Parameter) . . . . .	116
Forget device (Parameter) . . . . .	82
Forget device (Wizard) . . . . .	82
Format display (Parameter) . . . . .	29

**G**

Gain adjust (Parameter) . . . . .	74
Gas 1 to 4 (Parameter) . . . . .	190
Gas 1 to 4 ratio (Parameter) . . . . .	190
Gas 1 to 4 refractive index (Parameter) . . . . .	190
Gauge current (Parameter) . . . . .	92
GP 1 name (Parameter) . . . . .	176, 227
GP 1 to 4 source (Parameter) . . . . .	175
GP 1 value 0% (Parameter) . . . . .	125
GP 1 value 100% (Parameter) . . . . .	125
GP 2 value 0% (Parameter) . . . . .	126
GP 2 value 100% (Parameter) . . . . .	126
GP 3 value 0% (Parameter) . . . . .	126
GP 3 value 100% (Parameter) . . . . .	127
GP 4 value 0% (Parameter) . . . . .	127
GP 4 value 100% (Parameter) . . . . .	127
GP Value 1 (Parameter) . . . . .	176, 227
GP Value 2 (Parameter) . . . . .	176, 227
GP Value 3 (Parameter) . . . . .	176, 228
GP Value 4 (Parameter) . . . . .	177, 228
GP values (Submenu) . . . . .	125, 175, 227

**H**

H alarm (Parameter) . . . . .	214
H alarm value (Parameter) . . . . .	212
Hardware revision (Parameter) . . . . .	152
HART bus (Parameter) . . . . .	64
HART configuration (Submenu) . . . . .	141
HART date code (Parameter) . . . . .	153
HART descriptor (Parameter) . . . . .	152
HART device information (Submenu) . . . . .	61
HART device PV % (Parameter) . . . . .	58
HART device PV mA (Parameter) . . . . .	58
HART Device(s) (Submenu) . . . . .	54
HART devices (Submenu) . . . . .	53
HART message (Parameter) . . . . .	152
HART output (Submenu) . . . . .	140
HART revision (Parameter) . . . . .	151
HART short tag (Parameter) . . . . .	149
Header (Parameter) . . . . .	32
Header text (Parameter) . . . . .	33
HH alarm (Parameter) . . . . .	213
HH alarm value (Parameter) . . . . .	212
HH+H alarm (Parameter) . . . . .	214
Hour (Parameter) . . . . .	44, 46
HTG (Submenu) . . . . .	198
HTG mode (Parameter) . . . . .	199
HTMS (Submenu) . . . . .	204
HTMS mode (Parameter) . . . . .	204
Hysteresis (Parameter) . . . . .	201, 206
HyTD (Submenu) . . . . .	180
HyTD correction value (Parameter) . . . . .	180
HyTD mode (Parameter) . . . . .	180

**I**

Information (Submenu) . . . . .	149
Input value (Parameter) . . . . .	89, 99, 108
Input value % (Parameter) . . . . .	100
Input value in mA (Parameter) . . . . .	103

Input value percent (Parameter) . . . . .	88, 103
Input/output (Submenu) . . . . .	52
Integer conversion (Submenu) . . . . .	119
Invalid data (Parameter) . . . . .	117

**K**

Kind of interval (Parameter) . . . . .	74
--	----

**L**

L alarm (Parameter) . . . . .	214
L alarm value (Parameter) . . . . .	213
Language (Parameter) . . . . .	28
Last diagnostic (Parameter) . . . . .	68
Level (Submenu) . . . . .	155, 217
Level 0% (Parameter) . . . . .	119
Level 100% (Parameter) . . . . .	120
Level mapping (Parameter) . . . . .	130
Level source (Parameter) . . . . .	63, 155
Line impedance (Parameter) . . . . .	131
Linear expansion coefficient (Parameter) . . . . .	187
Liquid temp source (Parameter) . . . . .	159
Liquid temperature (Parameter) . . . . .	160, 220
LL alarm (Parameter) . . . . .	214
LL alarm value (Parameter) . . . . .	213
LL+L alarm (Parameter) . . . . .	215
Local gravity (Parameter) . . . . .	177
Locking status (Parameter) . . . . .	25
Logging interval (Parameter) . . . . .	248
Lower interface level (Parameter) . . . . .	157, 219
LRC 1 to 2 (Submenu) . . . . .	251
LRC Mode (Parameter) . . . . .	251

**M**

Manual air temperature (Parameter) . . . . .	161
Manual density (Parameter) . . . . .	199, 205
Manual liquid temperature (Parameter) . . . . .	160
Manual upper density (Parameter) . . . . .	165
Manual value (Parameter) . . . . .	64
Manual vapor temperature (Parameter) . . . . .	162
Manual water level (Parameter) . . . . .	158
Manufacturer ID (Parameter) . . . . .	151
Maximum probe temperature (Parameter) . . . . .	90
Measured level (Parameter) . . . . .	219
Measured lower density (Parameter) . . . . .	166, 225
Measured middle density (Parameter) . . . . .	166, 224
Measured upper density (Parameter) . . . . .	166, 224
Menu	

Expert . . . . .	7, 25
Minimum level (Parameter) . . . . .	200, 205
Minimum pressure (Parameter) . . . . .	200, 206
Minimum probe temperature (Parameter) . . . . .	89
Minute (Parameter) . . . . .	45, 47
Modbus address (Parameter) . . . . .	116
Modbus discrete 1 to 4 (Parameter) . . . . .	114
Modbus value 1 to 4 (Parameter) . . . . .	114
Module type (Parameter) . . . . .	242
Month (Parameter) . . . . .	44, 46

**N**

NMT device config (Submenu) . . . . .	71, 77
---------------------------------------	--------

NMT element values (Submenu) . . . . .	221
No element in phase (Parameter) . . . . .	79
No. of preambles (Parameter) . . . . .	142
Number format (Parameter) . . . . .	32
Number of devices (Parameter) . . . . .	53

**O**

Observed density (Parameter) . . . . .	164, 223
Observed density source (Parameter) . . . . .	163
Observed density temperature (Parameter) . . . . .	223
Ohms offset (Parameter) . . . . .	86
Old TSM mode (Parameter) . . . . .	118
Operating mode (Parameter) . . . . .	55, 83, 85, 94, 107
Operating time (Parameter) . . . . .	233
Operating time from restart (Parameter) . . . . .	232
Operation mode (Parameter) . . . . .	156
Order code (Parameter) . . . . .	241
Output at error (Parameter) . . . . .	74
Output density (Parameter) . . . . .	59
Output level (Parameter) . . . . .	60
Output out of range (Parameter) . . . . .	98
Output pressure (Parameter) . . . . .	58
Output simulation (Parameter) . . . . .	109
Output temperature (Parameter) . . . . .	59
Output value (Parameter) . . . . .	100, 110
Output vapor temperature (Parameter) . . . . .	59

**P**

P1 (bottom) (Parameter) . . . . .	168, 226
P1 (bottom) manual pressure (Parameter) . . . . .	168
P1 (bottom) source (Parameter) . . . . .	168
P1 absolute / gauge (Parameter) . . . . .	169
P1 offset (Parameter) . . . . .	169
P1 position (Parameter) . . . . .	169
P1-2 distance (Parameter) . . . . .	171
P2 (middle) (Parameter) . . . . .	170, 226
P2 (middle) manual pressure (Parameter) . . . . .	170
P2 (middle) source (Parameter) . . . . .	170
P2 absolute / gauge (Parameter) . . . . .	171
P2 offset (Parameter) . . . . .	171
P3 (top) (Parameter) . . . . .	172, 226
P3 (top) manual pressure (Parameter) . . . . .	172
P3 (top) source (Parameter) . . . . .	172
P3 absolute / gauge (Parameter) . . . . .	173
P3 offset (Parameter) . . . . .	173
P3 position (Parameter) . . . . .	173
Parity (Parameter) . . . . .	116
Percent 0% (Parameter) . . . . .	123
Percent 100% (Parameter) . . . . .	123
Percent of range (Parameter) . . . . .	145
Polling address (Parameter) . . . . .	55
Pressure (Parameter) . . . . .	61
Pressure (Submenu) . . . . .	167, 226
Pressure 0% (Parameter) . . . . .	121
Pressure 100% (Parameter) . . . . .	121
Pressure unit (Parameter) . . . . .	36
Previous diagnostics (Parameter) . . . . .	70, 232
Primary variable (PV) (Parameter) . . . . .	144
Probe position (Parameter) . . . . .	90

Process value (Parameter) . . . . .	87, 102
Process variable (Parameter) . . . . .	87, 101
PV mA selector (Parameter) . . . . .	144
PV source (Parameter) . . . . .	142

**Q**

Quaternary variable (QV) (Parameter) . . . . .	148
--	-----

**R**

Readback value (Parameter) . . . . .	100, 110
Recovery state (Parameter) . . . . .	243
Reference 0 (Parameter) . . . . .	68
Reference 17 (Parameter) . . . . .	69
Reference level (Parameter) . . . . .	253
Reference level source (Parameter) . . . . .	252
Reference point level (Parameter) . . . . .	254
Reference switch level (Parameter) . . . . .	254
Reference switch mode (Parameter) . . . . .	253
Reference switch source (Parameter) . . . . .	253
Reference switch state (Parameter) . . . . .	254
RTD connection type (Parameter) . . . . .	87
RTD type (Parameter) . . . . .	85

**S**

Safety distance (Parameter) . . . . .	200, 206
Safety Instructions (XA) . . . . .	6
Secondary variable (SV) (Parameter) . . . . .	146
Select element (Parameter) . . . . .	76, 80
Separator (Parameter) . . . . .	32
Serial number (Parameter) . . . . .	240
Set date (Parameter) . . . . .	43, 47
Set date (Wizard) . . . . .	46
Simulation (Submenu) . . . . .	237
Simulation value (Parameter) . . . . .	238
Software ID (Parameter) . . . . .	138
Software option overview (Parameter) . . . . .	49
Software revision (Parameter) . . . . .	153
Software version (Parameter) . . . . .	65
SP 1 value selector (Parameter) . . . . .	135
SP 2 value selector (Parameter) . . . . .	135
SP 3 value selector (Parameter) . . . . .	136
SP 4 value selector (Parameter) . . . . .	136
Start reference measurement (Parameter) . . . . .	255
Starting level (Parameter) . . . . .	180
Status signal (Parameter) . . . . .	56
Stilling well (Parameter) . . . . .	186
Submenu	

#blank# . . . . .	82
Administration . . . . .	48, 49
Alarm . . . . .	208
Analog I/O . . . . .	93
Analog IP . . . . .	84
Application . . . . .	154
Board info . . . . .	244
CLG . . . . .	188
Communication . . . . .	112
Configuration . . . . .	115, 129, 137
CTSh . . . . .	185
Data logging . . . . .	246, 247

Date / time . . . . .	42, 43	Temperature 0% (Parameter) . . . . .	120
Density . . . . .	163, 223	Temperature 100% (Parameter) . . . . .	120
Device information . . . . .	239	Temperature element open (Parameter) . . . . .	73
Diagnostic list . . . . .	234	Temperature element short (Parameter) . . . . .	73
Diagnostics . . . . .	68, 69, 229	Temperature offset after conversion (Parameter) . . . . .	89
Digital Xx-x . . . . .	106	Temperature unit (Parameter) . . . . .	36
Discrete selector . . . . .	128	Tertiary variable (TV) (Parameter) . . . . .	147
Display . . . . .	28	Test resistance (Parameter) . . . . .	70
Display channel 1 to 4 . . . . .	250	Thermocouple type (Parameter) . . . . .	86
Element position . . . . .	67, 221	Timestamp (Parameter) . . . . .	231, 232
Element setup . . . . .	76, 80	Timestamp 1 to 5 (Parameter) . . . . .	234
Element temperature . . . . .	67, 221	Total no. element (Parameter) . . . . .	72, 78
Element values . . . . .	67		
Event list . . . . .	235		
Event logbook . . . . .	235		
GP values . . . . .	125, 175, 227		
HART configuration . . . . .	141		
HART device information . . . . .	61		
HART Device(s) . . . . .	54		
HART devices . . . . .	53		
HART output . . . . .	140		
HTG . . . . .	198		
HTMS . . . . .	204		
HyTD . . . . .	180		
Information . . . . .	149		
Input/output . . . . .	52		
Integer conversion . . . . .	119		
Level . . . . .	155, 217		
LRC 1 to 2 . . . . .	251		
NMT device config . . . . .	71, 77		
NMT element values . . . . .	221		
Pressure . . . . .	167, 226		
Simulation . . . . .	237		
System . . . . .	27		
System units . . . . .	35		
Tank calculation . . . . .	177		
Tank configuration . . . . .	154		
Tank values . . . . .	217		
Temperature . . . . .	159, 220		
User value source . . . . .	124		
V1 input selector . . . . .	132		
WM550 input selector . . . . .	139		
System (Submenu) . . . . .	27		
System polling address (Parameter) . . . . .	141		
System temperature (Parameter) . . . . .	244		
System units (Submenu) . . . . .	35		
<b>T</b>			
Tank calculation (Submenu) . . . . .	177		
Tank configuration (Submenu) . . . . .	154		
Tank level (Parameter) . . . . .	156, 199, 217		
Tank Level % (Parameter) . . . . .	218		
Tank level to NMT (Parameter) . . . . .	63		
Tank reference height (Parameter) . . . . .	156		
Tank ullage (Parameter) . . . . .	218		
Tank ullage % (Parameter) . . . . .	218		
Tank values (Submenu) . . . . .	217		
Temperature (Parameter) . . . . .	62		
Temperature (Submenu) . . . . .	159, 220		
<b>U</b>			
Units preset (Parameter) . . . . .	35		
Update water level (Parameter) . . . . .	75, 80		
Upper density input source (Parameter) . . . . .	164		
Upper interface level (Parameter) . . . . .	157, 218		
Used for SIL/WHG (Parameter) . . . . .	104, 111		
User 0% (Parameter) . . . . .	122		
User 100% (Parameter) . . . . .	122		
User role (Parameter) . . . . .	26		
User value 1 to 8 source (Parameter) . . . . .	124, 132		
User value source (Submenu) . . . . .	124		
<b>V</b>			
V1 address (Parameter) . . . . .	129, 130		
V1 input selector (Submenu) . . . . .	132		
Value 1 display (Parameter) . . . . .	30		
Value percent selector (Parameter) . . . . .	137		
Vapor density (Parameter) . . . . .	164, 224		
Vapor temp source (Parameter) . . . . .	161		
Vapor temperature (Parameter) . . . . .	62, 162, 220		
<b>W</b>			
W&M lock switch (Parameter) . . . . .	244		
Water bottom level offset (Parameter) . . . . .	79		
Water density (Parameter) . . . . .	166, 207		
Water level (Parameter) . . . . .	63, 157, 219		
Water level source (Parameter) . . . . .	157		
WB frequency ratio (Parameter) . . . . .	70		
Weight and measures configuration CRC (Parameter)		240	
Wire expansion coefficient (Parameter) . . . . .	187		
<b>Wizard</b>			
Define access code . . . . .	50		
Forget device . . . . .	82		
Set date . . . . .	46		
WM550 address (Parameter) . . . . .	138		
WM550 input selector (Submenu) . . . . .	139		
Word type (Parameter) . . . . .	117		
<b>Y</b>			
Year (Parameter) . . . . .	43, 46		
<b>Z</b>			
Zero adjust (Parameter) . . . . .	76, 81		





71651805

[www.addresses.endress.com](http://www.addresses.endress.com)

---