

# Safety Instructions

## Proline Teqwave MW 500

NEPSI: Zone 2





# Proline Teqwave MW 500

## Table of contents

About this document .....	4
Associated documentation .....	4
Certificates and declarations .....	4
Manufacturer address .....	4
Extended order code .....	5
Safety instructions: General .....	8
Safety instructions: Installation .....	9
Temperature tables .....	9
Connection values: Signal circuits .....	11

**About this document**



The document number of these Safety Instructions (XA) must match the information on the nameplate.

**Associated documentation**

For an overview of the scope of the associated Technical Documentation, refer to the following:

- *Device Viewer* ([www.endress.com/deviceviewer](http://www.endress.com/deviceviewer)): Enter serial number from nameplate.
- *Endress+Hauser Operations app*: Enter serial number from nameplate or scan matrix code on nameplate.

To commission the device, please observe the Operating Instructions pertaining to the device:

Measuring device	Documentation code	
	HART	Modbus RS485
Teqwave MW	BA02322D	BA02323D

*Additional documentation*

Contents	Document type	Documentation code
Explosion Protection	Brochure	CP00021Z/11

Please note the documentation associated with the device.

**Certificates and declarations**

**NEPSI Declaration of Conformity**

Certificate number:

GYJ24.1080X

Affixing the certificate number certifies conformity with the following standards (depending on the device version):

- GB/T 3836.1-2021
- GB/T 3836.3-2021
- GB/T 3836.8-2021


**Manufacturer address**

Endress+Hauser Flowtec AG  
 Kägenstrasse 7  
 4153 Reinach BL  
 Switzerland

**Extended order code**

The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional information about the nameplate is provided in the associated Operating Instructions.

**Structure of the extended order code**



\* = Placeholder  
 At this position, an option (number or letter) selected from the specification is displayed instead of the placeholders.

*Device type*

The device and the device design is defined in the "Device type" section (Product root).

*Basic specifications*

The features that are absolutely essential for the device (mandatory features) are specified in the basic specifications. The number of positions depends on the number of features available. The selected option of a feature can consist of several positions.

*Optional specifications*

The optional specifications describe additional features for the device (optional features). The number of positions depends on the number of features available. The features have a 2-digit structure to aid identification (e.g. JA). The first digit (ID) stands for the feature group and consists of a number or a letter (e.g. J = Test, Certificate). The second digit constitutes the value that stands for the feature within the group (e.g. A = 3.1 material (wetted parts), inspection certificate).


More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

**Device type**

Position	Order code for	Option selected	Description
1	Instrument family	4	Total solids measurement via microwave transmission
2	Sensor	W	Sensor type
3	Transmitter	5	Transmitter type: 4-wire, remote version

Position	Order code for	Option selected	Description
4	Generation index	B	Platform generation
5, 6	Nominal diameter	Examples: 50, 80, 1H, 1F, 2H, 2F, 3H <sup>1) 2)</sup>	Nominal diameter of sensor

- 1) For the exact specification of the nominal diameter, see nameplate  
 2) For replacement transmitter only: XX

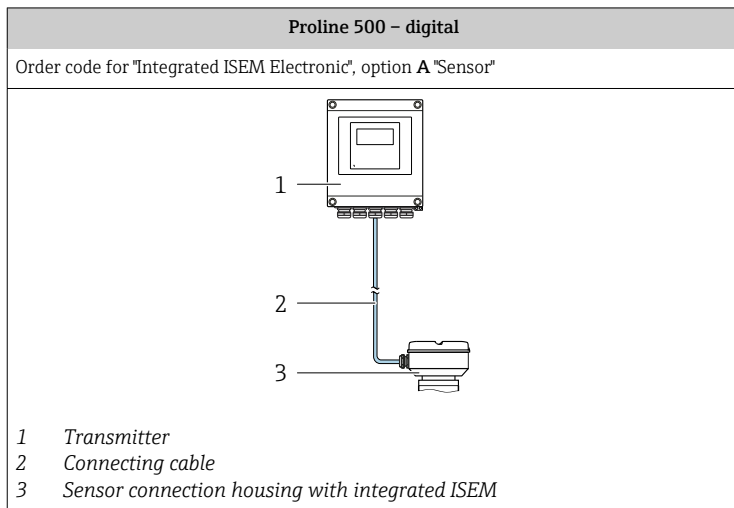

## Basic specifications

Position 1, 2 Order code for "Approval" Option selected	Position 10 Order code for "Integrated ISEM electronics" Option selected	Type of protection	
		Transmitter	Sensor
NL	A	Non-Ex <sup>1)</sup>	Ex ec IIC T1...T6 Gc
NS	A	Ex ec nC IIC T4...T5 Gc	Ex ec IIC T1...T6 Gc

- 1) The transmitter is located in the safe area (non-hazardous area).

Position	Order code for	Option selected	Description
4, 5	Output, input 1	BA	4-20mA HART
		MA	Modbus RS485
6 <sup>1)</sup>	Output, input 2	A	W/o
		B	4-20mA

Position	Order code for	Option selected	Description
		D	Configurable I/O initial setting off
		E	Pulse/frequency/switch output
		H	Relay
		I	4-20mA input
		J	Status input
7	Output, input 3	A	W/o
		B	4-20mA
		D	Configurable I/O initial setting off
		E	Pulse/frequency/switch output
		H	Relay
		I	4-20mA input
		J	Status input
8	Output, input 4	A	W/o
		B	4-20mA
		D	Configurable I/O initial setting off
		E	Pulse/frequency/switch output
		H	Relay
		I	4-20mA input
		J	Status input
9	Display; Operation	F	4-line, illuminated; touch control
		G	4-line, illuminated; touch control + WLAN
10	Integrated ISEM Electronic	A	Sensor
11	Transmitter Housing	A	Alu, coated
12	Sensor junction Housing	A	Alu, coated
15	Design	A	Wafer version
19, 20	Device Model	A2	2

1) For sensor only, "X" is described

### Optional specifications

ID	Order code for	Option selected	Description
Px	Enclosed accessories	P8	Wireless antenna, wide area (external WLAN antenna) <sup>1)</sup>

1) The external WLAN antenna is available with the order code for "Accessory Enclosed", option P8.

**Safety  
instructions:  
General**

- Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device:
  - Be suitably qualified for their role and the tasks they perform
  - Be trained in explosion protection
  - Be familiar with national regulations or guidelines (e.g. GB/T 3836.15-2017)
- Install the device according to the manufacturer's instructions and the following standards:
  - GB 50257-2014 "Code for construction and acceptance of electric device for explosive atmospheres and fire hazard electrical equipment installation engineering"
  - GB/T 3836.13-2021 "Explosive atmospheres – Part 13: Equipment repair, overhaul, reclamation and modification"
  - GB/T 3836.15-2017 "Explosive atmospheres – Part 15: Electrical installations design, selection and erection"
  - GB/T 3836.16-2022 "Explosive atmospheres – Part 16: Electrical installations inspection and maintenance"
  - GB/T 3836.18-2017 "Explosive atmospheres – Part 18: Intrinsically safe electrical systems"
- Do not operate the device outside the specified electrical, thermal and mechanical parameters.
- Only use the device in media to which the wetted materials have sufficient durability.
- Refer to the temperature tables for the relationship between the permitted ambient temperature for the sensor and/or transmitter, depending on the range of application, and the temperature classes.
- Alterations to the device can affect the explosion protection and must be carried out by staff authorized to perform such work by Endress+Hauser.
- Observe all the technical data of the device (see nameplate).
- Avoid electrostatic charge (e.g. caused by friction, cleaning, maintenance, strong currents in the medium):  
On the attached stainless steel nameplate and on painted metallic housings that are not integrated into the local potential equalization system.



**Safety  
instructions:  
Installation**

- Continuous service temperature of the connecting cable:  
–20 to +80 °C; but at least according to the operating temperature range of the application plus allowance for process conditions ( $T_{a, \min}$  and  $T_{a, \max} + 20 \text{ K}$ ).
- Only use certified cable glands suitable for the application. Observe selection criteria as per GB/T3836.15-2017.
- When the measuring device is connected, attention must be paid to the type of protection at the transmitter.
- In potentially explosive atmospheres:
  - Do not disconnect the electrical connection of the power supply circuit when energized.
  - Do not open the connection compartment cover when the device is energized.

**Ex ec type of protection**

- In potentially explosive atmospheres: Do not disconnect the electrical connection of the power supply circuit when energized.
- Seal unused entry glands with approved sealing plugs that correspond to the type of protection.
- Only use certified cable entries or sealing plugs.

**Optional external WLAN antenna**

- Connect the antenna bushing H337 to the transmitter housing and tighten by hand.
- Use only external antennas supplied by Endress+Hauser.
- Connect antenna or antenna cable with plug-in connector type N (MIL-STD-348) to antenna bushing H337.

**Potential equalization**

- Integrate the device into the potential equalization .
- If the ground connection has been established via the pipe as specified, it is also possible to integrate the sensor into the potential equalization system via the pipe.
- The antenna bushing H337 of the external antenna must be integrated into the potential equalization system. This is the case if the sensor is connected in accordance with the regulations via the coupling.

**Temperature  
tables**

**Minimum ambient temperature**

$$T_{a, \min} = -20 \text{ °C}$$

**Maximum ambient temperature**

$T_{a, \max} = +60 \text{ °C}$  depending on temperature class and maximum medium temperature. See the corresponding temperature tables.

*Transmitter: Non-hazardous area, Zone 2*

Transmitter housing material	$T_{a, \max}$ [°C]			
	Non-hazardous area	T6 [85 °C]	T5 [100 °C]	T4 [135 °C]
Aluminum	60	-	45	60
Polycarbonate	60	-	-	-

**Minimum medium temperature**

$$T_{m, \min} = 0 \text{ °C}$$

**Maximum medium temperature**

$T_{m, \max}$  varies depending on temperature class and maximum ambient temperature. See the corresponding temperature tables.

*Sensor*

DN	$T_{a, \max}$ [°C]	$T_{m, \max}$ [°C]					
		T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
30 to 50	40	55	80	80	80	80	80
	45	50	80	80	80	80	80
	60	-	80	80	80	80	80

**Connection values: Signal circuits**

The following tables contain specifications which are dependent on the transmitter type and its input and output assignment. Compare the following specifications with those on the nameplate of the transmitter.

**Terminal assignment**

*Transmitter: supply voltage, input/outputs*

*HART*

Supply voltage		Input/output 1		Input/output 2		Input/output 3		Input/output 4	
1 (+)	2 (-)	26 (+)	27 (-)	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
Device-specific terminal assignment: adhesive label in terminal cover.									

*Modbus RS485*

Supply voltage		Input/output 1		Input/output 2		Input/output 3		Input/output 4	
1 (+)	2 (-)	26 (B)	27 (A)	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
Device-specific terminal assignment: adhesive label in terminal cover.									

**Safety-related values**

*Order code for "Output; input 1"*

Option	Output/input type	Safety-related values for output/input 1	
		26 (+)	27 (-)
BA	Current output 4 to 20 mA HART	$U_N = 30 V_{DC}$ $U_M = 250 V_{AC}$	
MA	Modbus RS485	$U_N = 30 V_{DC}$ $U_M = 250 V_{AC}$	

*Order code for "Output; input 2", "Output; input 3" and "Output; input 4"*

Option	Output/input type	Safety-related values for output/input					
		2		3		4	
		24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
B	Current output 4 to 20 mA	$U_N = 30 V_{DC}$ $U_M = 250 V_{AC}$					
D	User-configurable input/output	$U_N = 30 V_{DC}$ $U_M = 250 V_{AC}$					

Option	Output/input type	Safety-related values for output/input					
		2		3		4	
		24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
<b>E</b>	Pulse/frequency/switch output	$U_N = 30 V_{DC}$ $U_M = 250 V_{AC}$					
<b>H</b>	Relay output	$U_N = 30 V_{DC}$ $I_N = 100 mA_{DC}/500 mA_{AC}$ $U_M = 250 V_{AC}$					
<b>I</b>	Current input 0/4 to 20 mA	$U_N = 30 V_{DC}$ $U_M = 250 V_{AC}$					
<b>J</b>	Status input	$U_N = 30 V_{DC}$ $U_M = 250 V_{AC}$					









71675478

[www.addresses.endress.com](http://www.addresses.endress.com)

---