

Description of Device Parameters

Proservo NMS83

Tank Gauging



Table of contents

1	About this document	4
1.1	Document function	4
1.2	Symbols	4
1.3	Documentation	6
2	Overview of the operating menu	7
3	The "Expert" menu	32
3.1	"System" submenu	34
3.2	"Sensor" submenu	59
3.3	"Input/output" submenu	108
3.4	"Communication" submenu	172
3.5	"Application" submenu	215
3.6	"Tank values" submenu	265
3.7	"Diagnostics" submenu	283
	Index	314

1 About this document

1.1 Document function

The document is part of the Operating Instructions and serves as a reference for parameters, providing a detailed explanation of each individual parameter of the operating menu.

1.2 Symbols

1.2.1 Safety symbols

DANGER

This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.

WARNING

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.

CAUTION

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.

NOTICE

This symbol contains information on procedures and other facts which do not result in personal injury.

1.2.2 Electrical symbols



Alternating current



Direct current and alternating current



Direct current



Ground connection

A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.

Protective earth (PE)

Ground terminals that must be connected to ground prior to establishing any other connections.

The ground terminals are located on the interior and exterior of the device:

- Interior ground terminal: protective earth is connected to the mains supply.
- Exterior ground terminal: device is connected to the plant grounding system.

1.2.3 Tool symbols



Phillips head screwdriver



Flat blade screwdriver



Torx screwdriver



Allen key



Open-ended wrench

1.2.4 Symbols for certain types of information and graphics

Permitted

Procedures, processes or actions that are permitted

Preferred

Procedures, processes or actions that are preferred

Forbidden

Procedures, processes or actions that are forbidden

Tip

Indicates additional information



Reference to documentation



Reference to graphic



Notice or individual step to be observed

1, 2, 3.

Series of steps



Result of a step



Visual inspection



Operation via operating tool



Write-protected parameter

1, 2, 3, ...

Item numbers

A, B, C, ...

Views

→ **Safety instructions**

Observe the safety instructions contained in the associated Operating Instructions

Temperature resistance of the connection cables

Specifies the minimum value of the temperature resistance of the connection cables

1.3 Documentation

The following documentation types are available in the Downloads area of the Endress +Hauser website (www.endress.com/downloads):

-  For an overview of the scope of the associated Technical Documentation, refer to the following:
- *Device Viewer* (www.endress.com/deviceviewer): Enter the serial number from the nameplate
 - *Endress+Hauser Operations app*: Enter serial number from nameplate or scan matrix code on nameplate.

1.3.1 Technical Information (TI)

Planning aid

The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.

1.3.2 Brief Operating Instructions (KA)

Guide that takes you quickly to the 1st measured value

The Brief Operating Instructions contain all the essential information from incoming acceptance to initial commissioning.

1.3.3 Operating Instructions (BA)

The Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.

It also contains a detailed explanation of each individual parameter in the operating menu (except the **Expert** menu). The description is aimed at those who work with the device over the entire life cycle and perform specific configurations.

1.3.4 Description of Device Parameters (GP)

The Description of Device Parameters provides a detailed explanation of each individual parameter in the 2nd part of the operating menu: the **Expert** menu. It contains all the device parameters and allows direct access to the parameters by entering a specific code. The description is aimed at those who work with the device over the entire life cycle and perform specific configurations.

1.3.5 Safety Instructions (XA)

Depending on the approval, the following Safety Instructions (XA) are supplied with the device. They are an integral part of the Operating Instructions.

-  The nameplate indicates the Safety Instructions (XA) that are relevant to the device.

1.3.6 Installation instructions (EA)

Installation Instruction are used to replace a faulty unit with a functioning unit of the same type.

2 Overview of the operating menu



- The following table lists all parameters the **Expert** menu (→ 7) may contain. The page number refers to where a description of the parameter can be found.
- Depending on the device version and parametrization some parameters will not be available in a given situation. For details on the conditions refer to the "Prerequisite" category in the description of the respective parameter.
- The representation essentially corresponds to the menu seen when using an operating tool (e.g. FieldCare). On the local display there may be minor differences in the menu structure. Details are mentioned in the description of the respective submenu.

Navigation

Expert

► Expert	
Locking status	→ 32
Access status display	→ 33
User role	→ 33
Enter access code	→ 33
► System	→ 34
► Display	→ 35
Language	→ 35
Format display	→ 36
Value 1 to 4 display	→ 37
Decimal places 1 to 4	→ 38
Separator	→ 39
Number format	→ 39
Header	→ 39
Header text	→ 40
Display interval	→ 40
Display damping	→ 41
Backlight	→ 41
Contrast display	→ 41

► System units	→ 42
Units preset	→ 42
Distance unit	→ 43
Pressure unit	→ 43
Temperature unit	→ 43
Density unit	→ 44
Decimal places length	→ 44
Decimal places pressure	→ 44
Decimal places temperature	→ 45
Decimal places density	→ 45
► Date / time	→ 49
Date/time	→ 50
Set date	→ 50
Year	→ 50
Month	→ 51
Day	→ 51
Hour	→ 51
Minute	→ 52
► Administration	→ 55
Define access code	→ 56
Activate SW option	→ 56
Software option overview	→ 56
Device reset	→ 57
► Sensor	→ 59
Gauge command (8000)	→ 59

Gauge status (8081)	→ 60
Distance (8103)	→ 60
► Information	→ 61
Gross weight (8080)	→ 61
Net weight (8007)	→ 61
Gauge status (8081)	→ 62
Active gauge command (8073)	→ 62
Balance flag (8006)	→ 62
Displacer status (8160)	→ 62
Motor status (8118)	→ 63
One-time command status (8201)	→ 63
Sensor temperature (8066)	→ 63
Detector temperature (8090)	→ 63
► Measured values	→ 64
Distance (8103)	→ 65
Displacer position (8130)	→ 65
Liquid level (8072)	→ 66
Upper interface level (8127)	→ 66
Upper interface level timestamp (8055)	→ 66
Lower interface level (8128)	→ 66
Lower interface level timestamp (8061)	→ 67
Bottom level (8129)	→ 67
Bottom level timestamp (8048)	→ 67
► Spot density	→ 68
Measured upper density (8164)	→ 68

Upper density timestamp (8067)	→ 68
Measured middle density (8165)	→ 68
Middle Density Timestamp (8011)	→ 69
Measured lower density (8166)	→ 69
Lower density timestamp (8122)	→ 69
► Profile density	→ 70
Profile point (8170)	→ 70
Profile average density (8175)	→ 70
Profile density timestamp (8114)	→ 70
► Sensor diag	→ 72
► Start self check	→ 72
Status self check (8192)	→ 72
► Self check	→ 72
► Sensor config	→ 74
Post gauge command (8163)	→ 74
► Displacer	→ 75
Displacer type (8071)	→ 75
Displacer diameter (8014)	→ 75
Displacer weight (8010)	→ 76
Displacer volume (8008)	→ 76
Displacer balance volume (8009)	→ 76
Displacer height (8195)	→ 77
Immersion depth (8070)	→ 77

▶ Wiredrum	→ 78
Drum circumference (8082)	→ 78
Wire weight (8040)	→ 78
▶ Safety settings	→ 79
High stop level (8135)	→ 79
Low stop level (8069)	→ 79
Slow hoist zone (8084)	→ 80
Overtension weight (8097)	→ 80
Undertension weight (8098)	→ 80
Output out of range (8218)	→ 81
Monitoring counter (8078)	
Last monitoring (8104)	
▶ Level settings	→ 82
Upper density (8113)	→ 82
Middle density (8041)	→ 82
Lower density (8042)	→ 83
Process condition (8001)	→ 83
Standby level (8194)	→ 83
Offset standby distance (8107)	→ 84
▶ Balance settings	→ 86
Level measurement mode (8056)	→ 86
Interface measurement mode (8064)	→ 87
Balancing waiting time (8205)	→ 87
Seek delay (8162)	→ 88
Weight tolerance (8213)	→ 88

▶ Spot density	→ ↗ 90
Upper density offset (8176)	→ ↗ 90
Middle density offset (8177)	→ ↗ 90
Lower density offset (8178)	→ ↗ 91
Submersion depth (8169)	→ ↗ 91
▶ Profile density	→ ↗ 92
Density measurement mode (8186)	→ ↗ 92
Manual profile level (8182)	→ ↗ 92
Profile density offset distance (8185)	→ ↗ 93
Profile density interval (8174)	→ ↗ 93
Profile density offset (8173)	→ ↗ 93
▶ Calibration	→ ↗ 94
▶ Move displacer	→ ↗ 95
Move distance	→ ↗ 95
Move displacer	→ ↗ 96
Motor status (8118)	→ ↗ 96
Move displacer	→ ↗ 96
Distance (8103)	→ ↗ 95
Motor status (8118)	→ ↗ 96
▶ Sensor calibration	→ ↗ 97
Sensor calibration	→ ↗ 97
Offset weight (8095)	→ ↗ 97
Span weight (8096)	→ ↗ 98
Zero calibration	→ ↗ 98
Zero calibration	→ ↗ 98

Calibration status (8031)	→ 98
Offset calibration	→ 99
Offset calibration	→ 99
Calibration status (8031)	→ 98
Span calibration	→ 99
Span calibration	→ 99
Calibration status (8031)	→ 98
Sensor calibration	→ 97
Calibration status (8031)	→ 98
► Reference calibration	→ 100
Reference calibration	→ 100
Reference position (8046)	→ 100
Progress	→ 100
Progress	→ 100
Calibration status (8031)	→ 101
Reference calibration	→ 100
Calibration status (8031)	→ 101
► Drum calibration	→ 102
Make sure to have	→ 102
Drum calibration	→ 102
Calibration time	→ 103
Set high weight (8116)	→ 103
Make drum table	→ 103
Calibration time	→ 103
Drum table point	→ 103

Calibration status (8031)	→ ↗ 104
Make low table	→ ↗ 104
Set low weight (8115)	→ ↗ 104
Make drum table	→ ↗ 103
Calibration time	→ ↗ 103
Drum table point	→ ↗ 103
Calibration status (8031)	→ ↗ 104
Drum calibration	→ ↗ 102
Calibration status (8031)	→ ↗ 104
► Calibration parameters	→ ↗ 105
Set high weight (8116)	→ ↗ 105
Set low weight (8115)	→ ↗ 105
Reference position (8046)	→ ↗ 106
Offset weight (8095)	→ ↗ 106
Span weight (8096)	→ ↗ 106
Calibration status (8031)	→ ↗ 107
► Input/output	→ ↗ 108
► HART devices	→ ↗ 109
Number of devices	→ ↗ 109
► HART Device(s)	→ ↗ 110
Device name	→ ↗ 111
Polling address	→ ↗ 111
Device tag	→ ↗ 111
Operating mode	→ ↗ 111
Communication status	→ ↗ 112

Status signal	→ 112
#blank#(HART PV - description dependent on device)	→ 113
#blank#(HART SV - description dependent on device)	→ 113
#blank#(HART TV - description dependent on device)	→ 113
#blank#(HART QV - description dependent on device)	→ 113
HART device PV mA	→ 114
HART device PV %	→ 114
Output pressure	→ 114
Output density	→ 115
Output temperature	→ 115
Output vapor temperature	→ 115
Output level	→ 116
▶ HART device information	→ 117
▶ Element values	→ 123
▶ Diagnostics	→ 124
▶ Diagnostics	→ 125
▶ NMT device config	→ 127
▶ NMT device config	→ 133
▶ Forget device	→ 138
Forget device	→ 138
▶ #blank#	→ 138
Operating mode	→ 139
Current	→ 139

► Analog IP	→ 140
Operating mode	→ 141
RTD type	→ 141
Ohms offset	→ 142
Thermocouple type	→ 142
RTD connection type	→ 143
Process value	→ 143
Process variable	→ 143
0 % value	→ 144
100 % value	→ 144
Input value percent	→ 144
Input value	→ 145
Temperature offset after conversion	→ 145
Minimum probe temperature	→ 145
Maximum probe temperature	→ 146
Probe position	→ 146
Calibration type AIP	→ 147
Active calibration	→ 147
Damping factor	→ 147
Gauge current	→ 148
► Analog I/O	→ 149
Operating mode	→ 150
Current span	→ 151
Fixed current	→ 152
Analog input source	→ 152

Failure mode	→ 153
Error value	→ 154
Output out of range	→ 154
Error on event	→ 154
Input value	→ 155
0 % value	→ 155
100 % value	→ 155
Input value %	→ 156
Output value	→ 156
Readback value	→ 156
Feedback threshold	→ 157
Process variable	→ 157
Analog input 0% value	→ 157
Analog input 100% value	→ 158
Error event type	→ 158
Process value	→ 158
Input value in mA	→ 159
Input value percent	→ 159
Damping factor	→ 159
Calibration	→ 160
Active calibration	→ 160
Used for SIL/WHG	→ 160
▶ Digital Xx-x	→ 162
Operating mode	→ 163
Digital input source	→ 163

Input value	→ 164
Contact type	→ 164
Output simulation	→ 165
Output value	→ 166
Readback value	→ 166
Error on event	→ 166
Damping factor	→ 167
Used for SIL/WHG	→ 167
► Digital input mapping	
Digital input source 1	→ 168
Digital input source 2	→ 168
Gauge command 0	→ 169
Gauge command 1	→ 170
Gauge command 2	→ 170
Gauge command 3	→ 171
► Communication	
► "Modbus Xx-x" / "V1 Xx-x" / WM550 submenu	
Communication interface protocol	→ 174
Modbus value 1 to 4	→ 174
Modbus discrete 1 to 4	→ 174
► Configuration	
Baudrate	→ 175
Parity	→ 176
Modbus address	→ 176

Float swap mode	→ 176
Invalid data	→ 177
Word type	→ 177
CRC seed	→ 178
Old TSM mode	→ 178
Bus termination	→ 178
Compatibility mode	→ 179
► Integer conversion	→ 180
Level 0%	→ 180
Level 100%	→ 181
Temperature 0%	→ 181
Temperature 100%	→ 181
Pressure 0%	→ 182
Pressure 100%	→ 182
Density 0%	→ 182
Density 100%	→ 183
User 0%	→ 183
User 100%	→ 183
Percent 0%	→ 184
Percent 100%	→ 184
► User value source	→ 185
User value 1 to 8 source	→ 185
► GP values	→ 186
GP 1 value 0%	→ 186
GP 1 value 100%	→ 186

GP 2 value 0%	→ 187
GP 2 value 100%	→ 187
GP 3 value 0%	→ 187
GP 3 value 100%	→ 188
GP 4 value 0%	→ 188
GP 4 value 100%	→ 188
► Discrete selector	→ 189
Discrete 1 to 8 selector	→ 189
► Configuration	→ 190
Communication interface protocol variant	→ 190
V1 address(V1 / MDP)	→ 190
V1 address(BBB / MIC+232)	→ 191
Level mapping	→ 191
Line impedance	→ 192
Compatibility mode	→ 192
► V1 input selector	→ 193
User value 1 to 8 source	→ 193
Alarm 1 input source	→ 194
Alarm 2 input source	→ 194
Alarm 3 input source	→ 195
Alarm 4 input source	→ 195
SP 1 value selector	→ 196
SP 2 value selector	→ 196
SP 3 value selector	→ 197

SP 4 value selector	→ 197
Value percent selector	→ 198
► Configuration	→ 198
Baudrate	→ 198
WM550 address	→ 199
Software ID	→ 199
Compatibility mode	→ 199
► WM550 input selector	→ 200
Discrete 1 to 4 selector (13260-1 to 4)	→ 200
► HART output	→ 201
► HART configuration	→ 202
System polling address	→ 202
No. of preambles	→ 203
PV source	→ 203
Assign PV	→ 203
0 % value	→ 204
100 % value	→ 205
PV mA selector	→ 205
Primary variable (PV)	→ 205
Percent of range	→ 206
Assign SV	→ 206
Secondary variable (SV)	→ 207
Assign TV	→ 207
Tertiary variable (TV)	→ 208

Assign QV	→ 208
Quaternary variable (QV)	→ 209
► Information	→ 210
HART short tag	→ 210
Device tag	→ 211
Device revision	→ 211
Device ID	→ 211
Device type	→ 212
Manufacturer ID	→ 212
HART revision	→ 212
HART descriptor	→ 213
HART message	→ 213
Hardware revision	→ 213
Software revision	→ 214
HART date code	→ 214
► Application	→ 215
► Tank configuration	→ 215
Process condition (8001)	→ 215
► Level	→ 217
Level source (14601)	→ 217
Empty (14602)	→ 218
Tank reference height (14603)	→ 218
Tank level (14655)	→ 218
Set level (14604)	→ 219
Upper interface level (15003)	→ 219

Lower interface level (15004)	→ 219
Water level source (14971)	→ 219
Water level (14970)	→ 220
Manual water level (14959)	→ 220
► Temperature	→ 221
Liquid temp source	→ 221
Manual liquid temperature	→ 222
Liquid temperature	→ 222
Air temperature source	→ 222
Manual air temperature	→ 223
Air temperature	→ 223
Vapor temp source	→ 223
Manual vapor temperature	→ 224
Vapor temperature	→ 224
► Density	→ 225
Observed density source (13454)	→ 225
Observed density (13452)	→ 226
Air density (14980)	→ 226
Vapor density (14981)	→ 226
Measured upper density (15001)	→ 226
Measured middle density (14997)	→ 227
Measured lower density (15002)	→ 227
Water density (13757)	→ 227
Profile point (8170)	→ 227

Profile average density (8175)	→ 228
Profile density timestamp (8114)	→ 228
► Pressure	→ 229
P1 (bottom) source	→ 230
P1 (bottom)	→ 230
P1 (bottom) manual pressure	→ 230
P1 position	→ 231
P1 offset	→ 231
P1 absolute / gauge	→ 231
P2 (middle) source	→ 232
P2 (middle)	→ 232
P2 (middle) manual pressure	→ 232
P2 offset	→ 233
P1-2 distance	→ 233
P2 absolute / gauge	→ 233
P3 (top) source	→ 234
P3 (top)	→ 234
P3 (top) manual pressure	→ 234
P3 position	→ 235
P3 offset	→ 235
P3 absolute / gauge	→ 235
Ambient pressure	→ 236
► GP values	→ 237
GP 1 to 4 source (14989-1 to 4)	→ 237
GP 1 to 4 name (14963-1 to 4)	→ 238

GP Value 1 (14966)	→ 238
GP Value 2 (14967)	→ 238
GP Value 3 (14968)	→ 238
GP Value 4 (14969)	→ 239
▶ Tank calculation	→ 239
Local gravity	→ 239
▶ HyTD	→ 242
HyTD correction value	→ 242
HyTD mode	→ 242
Starting level	→ 242
Deformation factor	→ 243
▶ CTSh	→ 247
CTSh correction value	→ 247
CTSh mode	→ 248
Covered tank	→ 248
Stilling well	→ 248
Calibration temperature	→ 249
Linear expansion coefficient	→ 249
▶ HTMS	→ 252
HTMS mode	→ 252
Manual density	→ 253
Density value	→ 253
Minimum level	→ 253
Minimum pressure	→ 254
Safety distance	→ 254

Hysteresis	→ 254
Water density	→ 255
► Alarm	→ 256
► Alarm	→ 256
Alarm mode	→ 257
Error value	→ 258
Alarm value source	→ 259
Alarm value	→ 260
HH alarm value	→ 260
H alarm value	→ 260
L alarm value	→ 261
LL alarm value	→ 261
HH alarm	→ 261
H alarm	→ 262
HH+H alarm	→ 262
L alarm	→ 262
LL alarm	→ 262
LL+L alarm	→ 263
Any error	→ 263
Clear alarm	→ 263
Alarm hysteresis	→ 264
Damping factor	→ 264
► Tank values	→ 265
Net weight (8007)	→ 265
Gauge status (8081)	→ 265

Balance flag (8006)	→ 266
Offset standby distance (8107)	→ 267
Standby level (8194)	→ 266
One-time command status (8201)	→ 268
► Level	→ 268
Tank level	→ 269
Tank Level %	→ 269
Tank ullage	→ 270
Tank ullage %	→ 270
Upper interface level	→ 270
Upper interface level timestamp (8055)	→ 270
Lower interface level	→ 271
Lower interface level timestamp (8061)	→ 271
Bottom level	→ 271
Bottom level timestamp (8048)	→ 271
Water level	→ 272
Measured level	→ 272
Distance (8103)	→ 272
Displacer position (15019)	→ 272
► Temperature	→ 273
Liquid temperature	→ 273
Vapor temperature	→ 273
Air temperature	→ 274
► NMT element values	→ 274

► Element temperature	→ 274
► Element position	→ 274
► Density	→ 276
Observed density	→ 276
Observed density temperature	→ 277
Vapor density	→ 277
Air density	→ 277
Measured upper density	→ 277
Upper density timestamp (8067)	→ 278
Measured middle density	→ 278
Middle Density Timestamp (8011)	→ 278
Measured lower density	→ 278
Lower density timestamp (8122)	→ 279
► Profile density	→ 279
Profile density @instance (8068-1 to 50)	→ 279
Profile density position @instance (8077-1 to 50)	→ 279
► Pressure	→ 280
P1 (bottom)	→ 280
P3 (top)	→ 280
► GP values	→ 281
GP 1 to 4 name (14963-1 to 4)	→ 281
GP Value 1 (14966)	→ 281
GP Value 2 (14967)	→ 281

GP Value 3 (14968)	→ 282
GP Value 4 (14969)	→ 282
► Diagnostics	→ 283
Actual diagnostics	→ 285
Timestamp	→ 286
Previous diagnostics	→ 286
Timestamp	→ 287
Operating time from restart	→ 287
Operating time	→ 287
Date/time	→ 287
► Diagnostic list	→ 288
Diagnostics 1 to 5 (0692–1 to 5)	→ 288
Timestamp 1 to 5 (0683–1 to 5)	→ 288
► Simulation	→ 290
Device alarm simulation	→ 290
Diagnostic event simulation	→ 290
Simulation distance on (8002)	→ 291
Simulation distance (8003)	→ 291
Current output 1 to 2 simulation	→ 291
Simulation value	→ 292
► Device information	→ 293
Device tag	→ 293
Serial number	→ 294
Firmware version	→ 294
Firmware CRC	→ 294

Weight and measures configuration CRC	→ 294
Device name	→ 295
Order code	→ 295
Extended order code 1 to 3 (0023-1 to 3)	→ 295
ENP version	→ 295
Device type	→ 296
Build version	→ 296
Module type	→ 296
Communication Slot	→ 296
Recovery state	→ 297
► Board info	→ 298
Date/time	→ 298
System temperature	→ 298
W&M lock switch	→ 298
► Data logging	→ 300
Assign channel 1 to 4 (0851-1 to 4)	→ 301
Logging interval	→ 302
Clear logging data	→ 303
► Device check	→ 305
► Commissioning check	→ 306
Commissioning check	→ 306

Result drum check (8155)	→ 306
Step X / 11 (8143)	→ 306
► Commissioning parameter	→ 307
Step X / 11 (8143)	→ 307
Result drum check (8155)	→ 307
Displacer weight tolerance (8161)	→ 307
Reference calibration incomplete (8157)	→ 308
► LRC	→ 309
► LRC 1 to 2	→ 309
LRC Mode	→ 309
Allowed difference	→ 309
Check fail threshold	→ 310
Reference level source	→ 310
Reference switch source	→ 311
Reference switch mode	→ 311
Reference level	→ 311
Reference switch level	→ 312
Reference switch state	→ 312
Check level	→ 312
Check status	→ 313
Check timestamp	→ 313

3 The "Expert" menu

Navigation  Expert

 Expert	
 Locking status	→  32
 Access status display	→  33
 User role	→  33
 Enter access code	→  33
 ► System	→  34
 ► Sensor	→  59
 ► Input/output	→  108
 ► Communication	→  172
 ► Application	→  215
 ► Tank values	→  265
 ► Diagnostics	→  283

Locking status

Navigation

  Expert → Locking status (0004)

Description

Indicates the type of locking.

"Hardware locked" (HW)

The device is locked by the "WP" switch on the main electronics module. To unlock, set the switch into the OFF position.

"WHG locked" (SW)

Unlock the device by entering the appropriate access code in "Enter access code".

"SIL locked" (SW)

Unlock the device by entering the appropriate access code in "Enter access code".

"Temporarily locked" (SW)

The device is temporarily locked by processes in the device (e.g. data upload/download, reset). The device will automatically be unlocked after completion of these processes.

Additional information

Read access	Operator
Write access	-

Access status display

Navigation  Expert → Access stat.disp (0091)**Prerequisite**

The device has a local display.

Description

Indicates access authorization to parameters via local display.

Additional information

Read access	Operator
Write access	-

 The access authorization can be changed via the **Enter access code** parameter (→  33).

 If an additional write protection is active, this restricts the current access authorization even further. The write protection status can be viewed via the **Locking status** parameter (→  32).

User role

Navigation Expert → User role (0005)**Description**

Shows the access authorization to the parameters via the operating tool

Additional information

Read access	Operator
Write access	-

Enter access code

Navigation  Expert → Ent. access code (0003)**Description**

Enter access code to disable write protection of parameters.


Additional information

Read access	Operator
Write access	Operator

3.1 "System" submenu

Navigation

☰ ☰ Expert → System

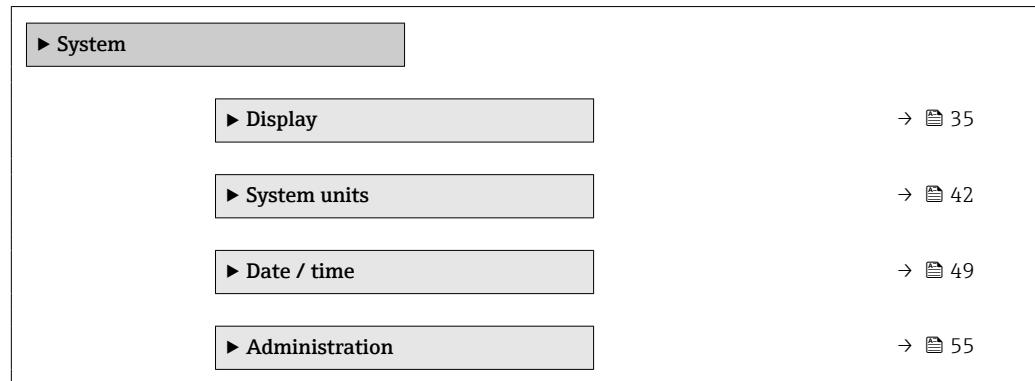

3.1.1 "Display" submenu

Navigation

Expert → System → Display

Setting	Page Number
Language	→ 35
Format display	→ 36
Value 1 to 4 display	→ 37
Decimal places 1 to 4	→ 38
Separator	→ 39
Number format	→ 39
Header	→ 39
Header text	→ 40
Display interval	→ 40
Display damping	→ 41
Backlight	→ 41
Contrast display	→ 41

Language

Navigation

Expert → System → Display → Language (0104)

Prerequisite

The device has a local display.

Description

Set display language.

Selection

- English
- Deutsch
- русский язык (Russian)
- 日本語 (Japanese)
- Español
- 中文 (Chinese)

Factory setting

English

Additional information

Read access	Operator
Write access	Operator

Format display**Navigation**

Expert → System → Display → Format display (0098)

Prerequisite

The device has a local display.

Description

Select how measured values are shown on the display.

Selection

- 1 value, max. size
- 1 bargraph + 1 value
- 2 values
- 1 value large + 2 values
- 4 values


Factory setting

2 values

Additional information


A0019963

■ 1 "Format display" = "1 value, max. size"

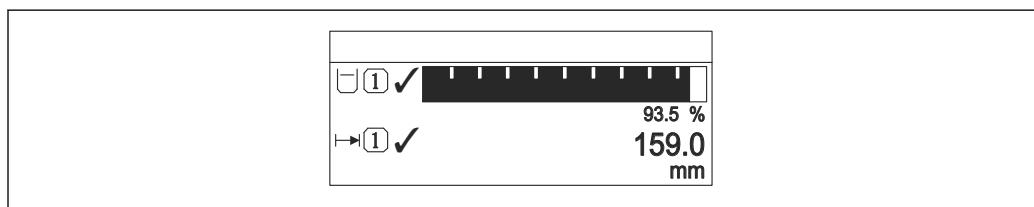


A0019964

■ 2 "Format display" = "1 bargraph + 1 value"

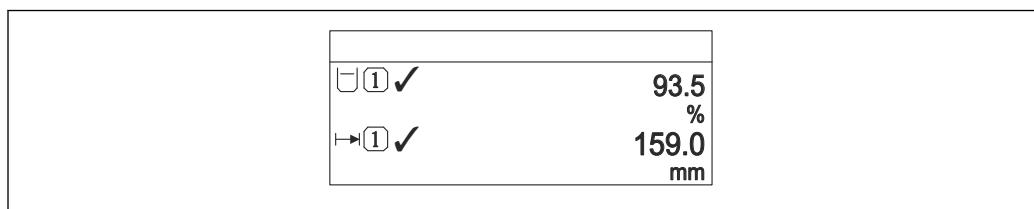


A0019965

■ 3 "Format display" = "2 values"

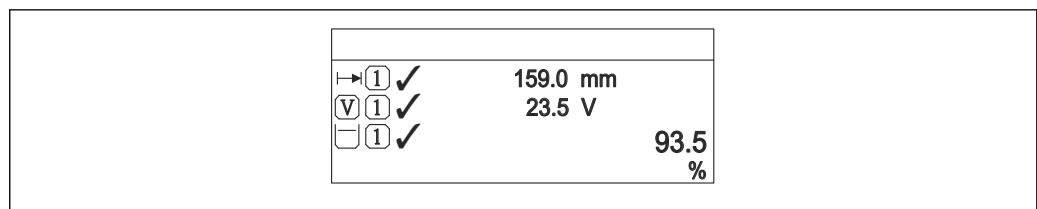

A0019966

4 "Format display" = "1 value large + 2 values"

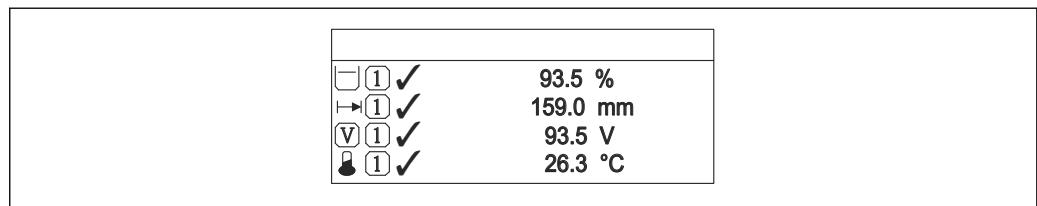

A0019968

5 "Format display" = "4 values"

Read access	Operator
Write access	Operator

- The **Value 1 to 4 display** (→ 37) parameters specify which measured values are shown on the display and in which order.
- If more measured values are specified than the current display mode permits, the values alternate on the device display. The display time until the next change is configured in the **Display interval** parameter (→ 40).

Value 1 to 4 display



Navigation

Expert → System → Display → Value 1 display (0107)

Prerequisite

The device has a local display.

Description

Select the measured value that is shown on the local display.

Selection

- None ¹⁾
- Tank level
- Measured level
- Level linearized
- Tank level %
- Water level ¹⁾
- Liquid temperature ¹⁾
- Vapor temperature ¹⁾
- Air temperature ¹⁾
- Tank ullage
- Tank ullage %
- Observed density value ¹⁾
- P1 (bottom) ¹⁾
- P2 (middle) ¹⁾
- P3 (top) ¹⁾

1) not available for the **Value 1 display** parameter

- GP 1 value¹⁾
- GP 2 value¹⁾
- GP 3 value¹⁾
- GP 4 value¹⁾
- Gauge command¹⁾
- Gauge status¹⁾
- AIO B1-3 value¹⁾
- AIO B1-3 value mA¹⁾
- AIO B1-3 value %¹⁾
- AIO C1-3 value¹⁾
- AIO C1-3 value mA¹⁾
- AIO C1-3 value %¹⁾
- AIP B4-8 value¹⁾
- AIP B4-8 value mA¹⁾
- AIP B4-8 value %¹⁾
- AIP C4-8 value¹⁾
- AIP C4-8 value mA¹⁾
- AIP C4-8 value %¹⁾

Factory setting Depending on device version

Additional information

Read access	Operator
Write access	Maintenance

Decimal places 1 to 4



Navigation

Expert → System → Display → Decimal places 1 (0095)

Prerequisite

The device has a local display.

Description

This selection does not affect the measurement and calculation accuracy of the device.

Selection

- X
- X.X
- X.XX
- X.XXX
- X.XXXX

Factory setting

x.x

Additional information

The setting does not affect the measuring or computational accuracy of the device.

Read access	Operator
Write access	Maintenance

Separator**Navigation**

Expert → System → Display → Separator (0101)

Prerequisite

The device has a local display.

Description

Select decimal separator for displaying numerical values.

Selection

- .
- ,

Factory setting

.

Additional information

Read access	Operator
Write access	Maintenance

Number format**Navigation**

Expert → System → Display → Number format (0099)

Prerequisite

The device has a local display.

Description

Choose number format for the display.

Selection

- Decimal
- ft-in-1/16"

Factory setting

Decimal

Additional information

Read access	Operator
Write access	Maintenance

The **ft-in-1/16"** option is only valid for distance values.

Header**Navigation**

Expert → System → Display → Header (0097)

Prerequisite

The device has a local display.

Description

Select header contents on local display.

Selection

- Device tag
- Free text

Factory setting

Device tag

Additional information

Read access	Operator
Write access	Maintenance

Meaning of the options**■ Device tag**

The header contents is defined in the **Device tag** parameter (→  211).

■ Free text

The header contents is defined in the **Header text** parameter (→  40).

Header text**Navigation**

  Expert → System → Display → Header text (0112)

Prerequisite

Header (→  39) = **Free text**

Description

Enter display header text.

User entry

Character string comprising numbers, letters and special characters (11)

Factory setting

TG-Platform

Additional information

Read access	Operator
Write access	Maintenance

Display interval**Navigation**

  Expert → System → Display → Display interval (0096)

Description

Set time measured values are shown on display if display alternates between values.

User entry

1 to 10 s

Factory setting

5 s

Additional information

 This parameter is only relevant if the number of selected measuring values exceeds the number of values the selected display format can display simultaneously.

Read access	Operator
Write access	Operator

Display damping**Navigation** Expert → System → Display → Display damping (0094)**Prerequisite** The device has a local display.**Description** Set display reaction time to fluctuations in the measured value.**User entry** 0.0 to 999.9 s**Factory setting** 0.0 s**Additional information**

Read access	Operator
Write access	Maintenance

Backlight**Navigation** Expert → System → Display → Backlight (0111)**Prerequisite** The device has a local display.**Description** Switch the local display backlight on and off.**Selection**

- Disable
- Enable

Factory setting Enable**Additional information**

Read access	Operator
Write access	Operator

Contrast display**Navigation** Expert → System → Display → Contrast display (0105)**Prerequisite** The device has a local display.**Description** Adjust local display contrast setting to ambient conditions (e.g. lighting or reading angle)**User entry** 20 to 80 %**Factory setting** 30 %**Additional information**

Read access	Operator
Write access	Operator

3.1.2 "System units" submenu

Navigation

Expert → System → System units

► System units	
Units preset	→ 42
Distance unit	→ 43
Pressure unit	→ 43
Temperature unit	→ 43
Density unit	→ 44
Decimal places length	→ 44
Decimal places pressure	→ 44
Decimal places temperature	→ 45
Decimal places density	→ 45

Units preset



Navigation

Expert → System → System units → Units preset (0605)

Description

Defines a set of units for length, pressure and temperature.

Selection

- mm, bar, °C
- m, bar, °C
- mm, PSI, °C
- ft, PSI, °F
- ft-in-16, PSI, °F
- ft-in-8, PSI, °F
- Customer value

Factory setting

mm, bar, °C

Additional information

Read access	Operator
Write access	Maintenance

If the **Customer value** option is selected, the units are defined in the following parameters. In any other case these are read-only parameters used to indicate the respective unit:

- Distance unit (→ 43)
- Pressure unit (→ 43)
- Temperature unit (→ 43)

Distance unit

Navigation Expert → System → System units → Distance unit (0551)

Description Select distance unit.

Selection	<i>SI units</i>	<i>US units</i>
	■ m	■ ft
	■ mm	■ in
	■ cm	■ ft-in-16 ■ ft-in-8

Factory setting mm

Additional information	Read access	Operator
	Write access	Maintenance (if Units preset (→ 42) = Customer value)

Pressure unit

Navigation Expert → System → System units → Pressure unit (0564)

Selection	<i>SI units</i>	<i>US units</i>	<i>Other units</i>
	■ bar	psi	■ inH2O
	■ Pa		■ inH2O (68°F)
	■ kPa		■ fth2O (68°F)
	■ MPa		■ mmH2O
	■ mbar a		■ mmHg

Factory setting bar

Additional information	Read access	Operator
	Write access	Maintenance (if Units preset (→ 42) = Customer value)

Temperature unit

Navigation Expert → System → System units → Temperature unit (0557)

Description Select temperature unit.

Selection	<i>SI units</i>	<i>US units</i>
	■ °C	■ °F
	■ K	■ °R

Factory setting °C

Additional information	Read access	Operator
	Write access	Maintenance (if Units preset (→ 42) = Customer value)

Density unit**Navigation**

Expert → System → System units → Density unit (0555)

Description

Select density unit.

Selection*SI units*

- g/cm³
- g/ml
- g/l
- kg/l
- kg/dm³
- kg/m³

US units

- lb/ft³
- lb/gal (us)
- lb/in³
- STon/yd³

Other units

- °API
- SGU

Factory setting

kg/m³

Additional information

Read access	Operator
Write access	Maintenance (if Units preset (→ 42) = Customer value)

Decimal places length**Navigation**

Expert → System → System units → Decimal length (0573)

Description

Number of decimal places for length values.

Selection

- X
- X.X
- X.XX
- X.XXX
- X.XXXX

Factory setting

X.X

Additional information

Read access	Operator
Write access	Maintenance

The setting does not affect the accuracy of the measurement or the calculations.

Decimal places pressure**Navigation**

Expert → System → System units → Decimal pressure (0608)

Description

Number of decimal places for pressure values.

Selection

- X
- X.X
- X.XX
- X.XXX
- X.XXXX

Factory setting

X.XXX

Additional information

Read access	Operator
Write access	Maintenance

 The setting does not affect the accuracy of the measurement or the calculations.

Decimal places temperature**Navigation**
  Expert → System → System units → Decimal temp. (0614)
Description

Number of decimal places for temperature values.

Selection

- X
- X.X
- X.XX
- X.XXX
- X.XXXX

Factory setting

X.X

Additional information

Read access	Operator
Write access	Maintenance

 The setting does not affect the accuracy of the measurement or the calculations.

Decimal places density**Navigation**
  Expert → System → System units → Decimal density (0609)
Description

Number of decimal places for density values.

Selection

- X
- X.X
- X.XX
- X.XXX
- X.XXXX

Factory setting

X.X

Additional information

Read access	Operator
Write access	Maintenance

 The setting does not affect the accuracy of the measurement or the calculations.

3.1.3 "Date / time" submenu

The Date / time submenu is used to set the real-time clock of the device.


Setting the real-time clock via the display and operating module

1. Navigate to Expert → System → Date / time → Set date.
↳ The current value of the real-time clock is displayed.
2. If the displayed value is correct: Press to terminate the wizard.
3. If the displayed value is not correct: Press to edit it.
↳ The current value of the **Year** parameter is displayed.
4. If the displayed value is correct: Press to go to the next value.
5. If the displayed value is incorrect: Press and enter the correct value. Confirm the new value by pressing .
6. Repeat the last two steps for the following parameters: **Month, Day, Hour, Minute**.
↳ The new value of the real-time clock is displayed.
7. Confirm the new value of the real-time clock by pressing .
8. Quit the wizard by pressing again.

Setting the real-time clock via an operating tool (e.g. FieldCare)

1. Navigate to: Expert → System → Date / time

2.

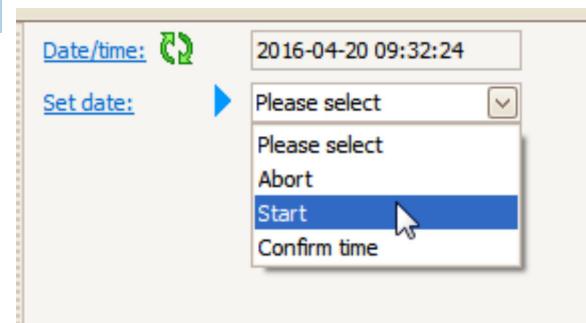


Go to the **Set date** parameter (→ 50) and select the **Start** option.

3.

This screenshot shows the 'Set date' parameters. It includes five input fields: 'Year' (2016), 'Month' (4), 'Day' (20), 'Hour' (9), and 'Minute' (34). Above these fields, there is a 'Set date:' label with a question mark icon and a blue arrow pointing to the right, indicating the next step.

Use the following parameters to set the date and time: **Year, Month, Day, Hour, Minutes**.

4.

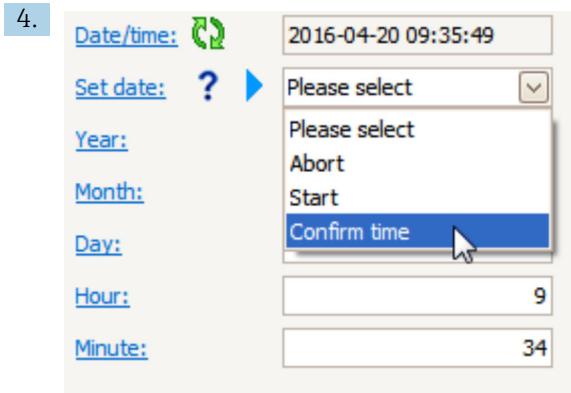


Go to the **Set date** parameter (→ 50) and select the **Confirm time** option.

↳ The real-time clock is set to the current date and time.

Structure of the submenu on the display and operating module

Navigation


Expert → System → Date / time

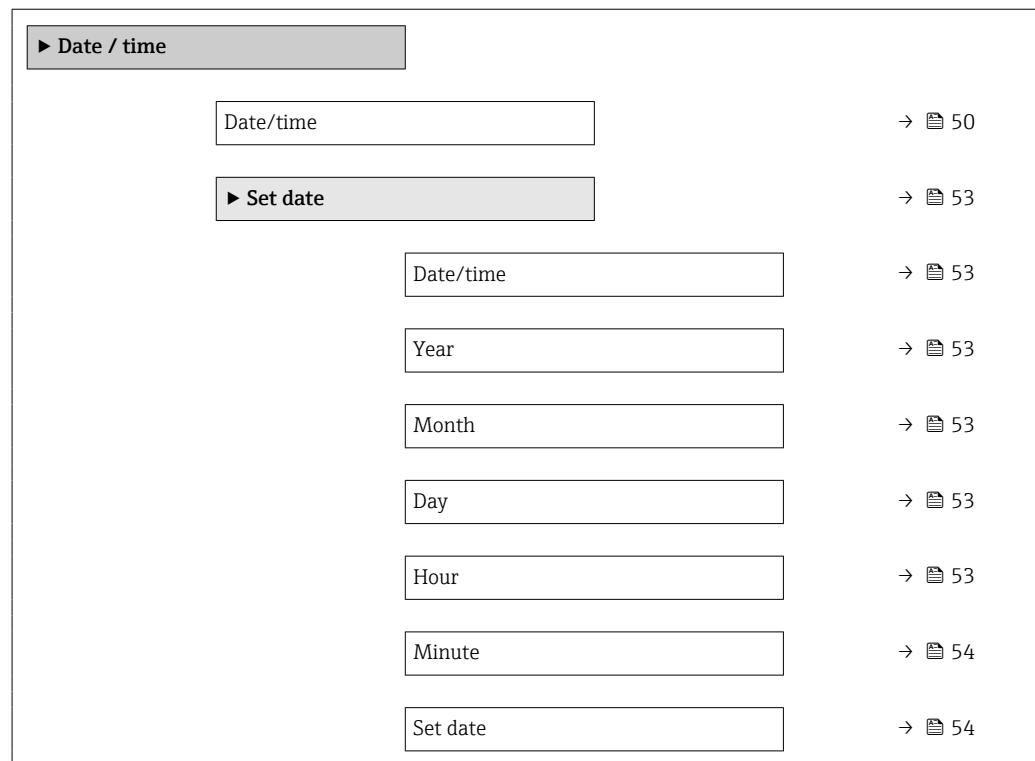

Structure of the submenu in an operating tool (e.g. FieldCare)

Navigation

Expert → System → Date / time

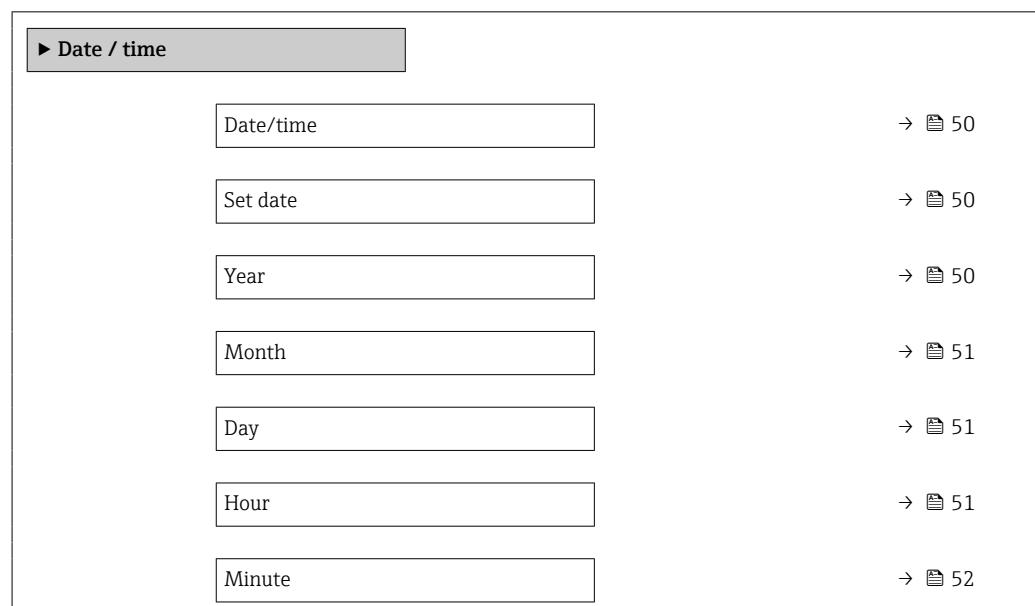

Description of parameters

Navigation

Expert → System → Date / time

Date/time

Navigation

Expert → System → Date / time → Date/time (0790)

Description

Displays the device internal real time clock.

Additional information

Read access	Operator
Write access	-

Set date



Navigation

Expert → System → Date / time → Set date (0792)

Description

Controls the setting of the real-time clock.

Selection

- Please select
- Abort
- Start
- Confirm time

Factory setting

Please select

Additional information

Read access	Operator
Write access	Maintenance

Meaning of the options

■ **Please select**

Prompts the user to select an action.

■ **Abort**

Discards the entered date and time.

■ **Start**

Starts the setting of the real time clock.

■ **Confirm time**

Sets the real-time clock to the entered date and time.

Year



Navigation

Expert → System → Date / time → Year (0782)

Prerequisite

Set date (→ 50) = Start

Description Enter the current year.

User entry 2016 to 2079

Factory setting 2016

Additional information

Read access	Operator
Write access	Maintenance

Month



Navigation ☰ Expert → System → Date / time → Month (0787)

Prerequisite Set date (→ ☰ 50) = Start

Description Enter the current month.

User entry 1 to 12

Factory setting 1

Additional information

Read access	Operator
Write access	Maintenance

Day



Navigation ☰ Expert → System → Date / time → Day (0788)

Prerequisite Set date (→ ☰ 50) = Start

Description Enter the current day.

User entry 1 to 31

Factory setting 1

Additional information

Read access	Operator
Write access	Maintenance

Hour



Navigation ☰ Expert → System → Date / time → Hour (0789)

Prerequisite Set date (→ ☰ 50) = Start

Description Enter the current hour.

User entry 0 to 23

Factory setting 0

Additional information

Read access	Operator
Write access	Maintenance

Minute



Navigation ☰ Expert → System → Date / time → Minute (0791)

Prerequisite Set date (→ ☰ 50) = Start

Description Enter the current minute.

User entry 0 to 59

Factory setting 0

Additional information

Read access	Operator
Write access	Maintenance

*"Set date" wizard**Navigation*

Expert → System → Date / time → Set date

Date/time**Navigation**

Expert → System → Date / time → Set date → Date/time (0790)

Description

→ 50

Year**Navigation**

Expert → System → Date / time → Set date → Year (0782)

Description

→ 50

Month**Navigation**

Expert → System → Date / time → Set date → Month (0787)

Description

→ 51

Day**Navigation**

Expert → System → Date / time → Set date → Day (0788)

Description

→ 51

Hour**Navigation**

Expert → System → Date / time → Set date → Hour (0789)

Description

→ 51

Minute

Navigation Expert → System → Date / time → Set date → Minute (0791)

Description → 52

Set date

Navigation Expert → System → Date / time → Set date → Set date

Description Confirm the displayed new value of the real-time clock by pressing .


3.1.4 "Administration" submenu

Structure of the submenu on the display and operating module

Navigation



Expert → System → Administration

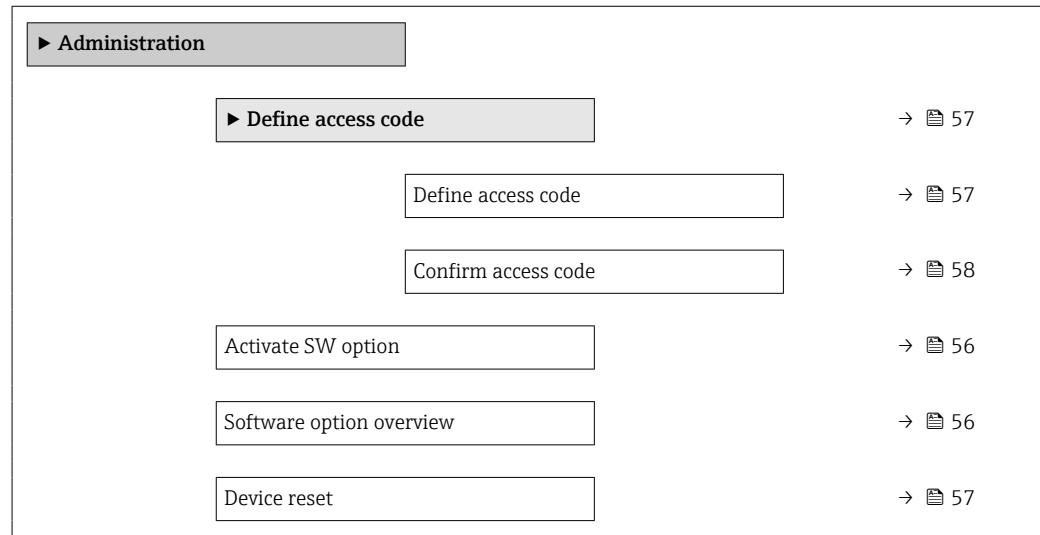


Structure of the submenu in an operating tool (e.g. FieldCare)

Navigation



Expert → System → Administration

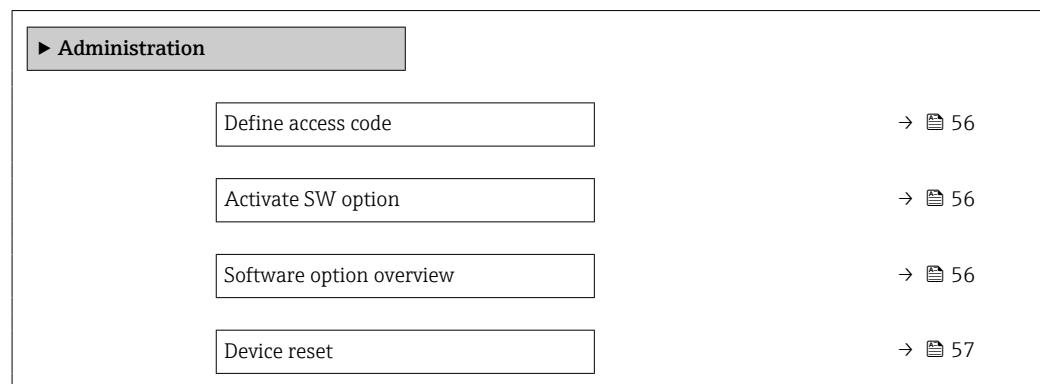

Description of parameters

Navigation

Expert → System → Administration

Define access code



Navigation

Expert → System → Administration → Def. access code (0093)

Description

Define release code for write access to parameters.

User entry

0 to 9 999

Factory setting

0

Additional information

Read access	Operator
Write access	Maintenance

- i** If the factory setting is not changed or 0 is defined as the access code, the parameters are not write-protected and the configuration data of the device can then always be modified. The user is logged on in the *Maintenance* role.
- i** The write protection affects all parameters marked with the symbol in this document.
- i** Once the access code has been defined, write-protected parameters can only be modified if the access code is entered in the **Enter access code** parameter (→ 33).

Activate SW option



Navigation

Expert → System → Administration → Activate SW opt. (0029)

Description

Enter the application package code or code of another re-ordered functionality to enable it

User entry

Positive integer

Factory setting

0

Additional information

Read access	Operator
Write access	Maintenance

Software option overview

Navigation

Expert → System → Administration → SW option overv. (0015)

Description

Shows all enabled software options

User interface

- Extended HistoROM
- SIL
- WHG
- CLG

Additional information

The option of the CLG is not available for NMS8x.

Read access	Operator
Write access	-

Device reset**Navigation**

Expert → System → Administration → Device reset (0000)

Description

Reset the device configuration - either entirely or in part - to a defined state

Selection

- Cancel
- To factory defaults
- Restart device

Factory setting

Cancel

Additional information**Meaning of the options**

- **Cancel**
No action
- **To factory defaults**
All parameters are reset to the order-code specific factory setting.
- **Restart device**
The restart resets every parameter which is stored in the volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.

Read access	Operator
Write access	Maintenance

"Define access code" wizard

Navigation

Expert → System → Administration → Def. access code

Define access code**Navigation**

Expert → System → Administration → Def. access code → Def. access code

Description

→ 56

Confirm access code

Navigation Expert → System → Administration → Def. access code → Confirm code

Description Confirm the entered access code.

User entry 0 to 9 999

Factory setting 0

Additional information

Read access	Operator
Write access	Maintenance

3.2 "Sensor" submenu

Navigation

Expert → Sensor

▶ Sensor	
Gauge command	→ 59
Gauge status	→ 60
Distance	→ 60
▶ Information	→ 61
▶ Measured values	→ 64
▶ Sensor diag	→ 72
▶ Sensor config	→ 74
▶ Calibration	→ 94

Gauge command



Navigation

Expert → Sensor → Gauge command (8000)

Description

Gauge operation command to choose the measurement mode of the device.

Selection

- Stop *
- Level
- Up *
- Bottom level *
- Upper I/F level *
- Lower I/F level *
- Upper density *
- Middle density *
- Lower density *
- Repeatability *
- Water dip
- Release overtension *
- Tank profile *
- Interface profile *
- Manual profile *
- Level standby *
- Offset standby *

Factory setting

Stop

* Visibility depends on order options or device settings

Additional information

Read access	Operator
Write access	Maintenance

Gauge status

Navigation Expert → Sensor → Gauge status (8081)**Description**

Indicates the current status of the device gauge command.

Additional information

Read access	Operator
Write access	-

Distance

Navigation  Expert → Sensor → Distance (8103)**Description**

Shows measured distance from reference position.

Additional information

Read access	Operator
Write access	-

3.2.1 "Information" submenu

The **Information** submenu (→ 61) comprises all display parameters which give information about the current state of the measurement.

Description of parameters

Navigation

Expert → Sensor → Information

▶ Information	
Gross weight	→ 61
Net weight	→ 61
Gauge status	→ 62
Active gauge command	→ 62
Balance flag	→ 62
Displacer status	→ 62
Motor status	→ 63
One-time command status	→ 63
Sensor temperature	→ 63
Detector temperature	→ 63

Gross weight

Navigation

Expert → Sensor → Information → Gross weight (8080)

Description

Shows non-compensated measured weight from detector.

Additional information

Read access	Operator
Write access	-

Net weight

Navigation

Expert → Sensor → Information → Net weight (8007)

Description

Shows the corrected weight data from the detector, as compensated by the drum table, This weight is used for measurement.

Additional information

Read access	Operator
Write access	-

Gauge status**Navigation**
 Expert → Sensor → Information → Gauge status (8081)
Description

Indicates the current status of the device gauge command.

Additional information

Read access	Operator
Write access	-

Active gauge command**Navigation**
 Expert → Sensor → Information → Active gauge cmd (8073)
Description

Indicates the currently executed Gauge Command.

Additional information

Read access	Operator
Write access	-

Balance flag**Navigation**
 Expert → Sensor → Information → Balance flag (8006)
Description

Indicates the validity of the Measurement. If balanced, corresponding Value (Liquid Level, Upper Interface, Lower Interface, Tank Bottom) is updated.

Additional information

Read access	Operator
Write access	-

Displacer status**Navigation**
 Expert → Sensor → Information → Displacer status (8160)
Description

Shows the current moving and balancing status of the displacer.

Additional information

Read access	Operator
Write access	-

Motor status

Navigation
 Expert → Sensor → Information → Motor status (8118)
Description

Shows the current moving Direction of the Motor.

Additional information

Read access	Operator
Write access	-

One-time command status

Navigation
 Expert → Sensor → Information → One-time Cmd (8201)
Description

Indicates the status of the last executed one-time gauge command.

Additional information

Read access	Operator
Write access	-

Additional information
 One-time command is available for all gauge commands, excepting Level, Stop, Up, and Interface.

Sensor temperature

Navigation
 Expert → Sensor → Information → Sensor temp. (8066)
Description

Shows the temperature of sensor module electronics.

Additional information

Read access	Operator
Write access	-

Detector temperature

Navigation
 Expert → Sensor → Information → Detector temp. (8090)
Description

Shows the temperature of the detector unit.

Additional information


Read access	Operator
Write access	-

3.2.2 "Measured values" submenu

Navigation

Expert → Sensor → Measured values

► Measured values	
Distance	→ 65
Displacer position	→ 65
Liquid level	→ 66
Upper interface level	→ 66
Upper interface level timestamp	→ 66
Lower interface level	→ 66
Lower interface level timestamp	→ 67
Bottom level	→ 67
Bottom level timestamp	→ 67
► Spot density	→ 68
► Profile density	→ 70

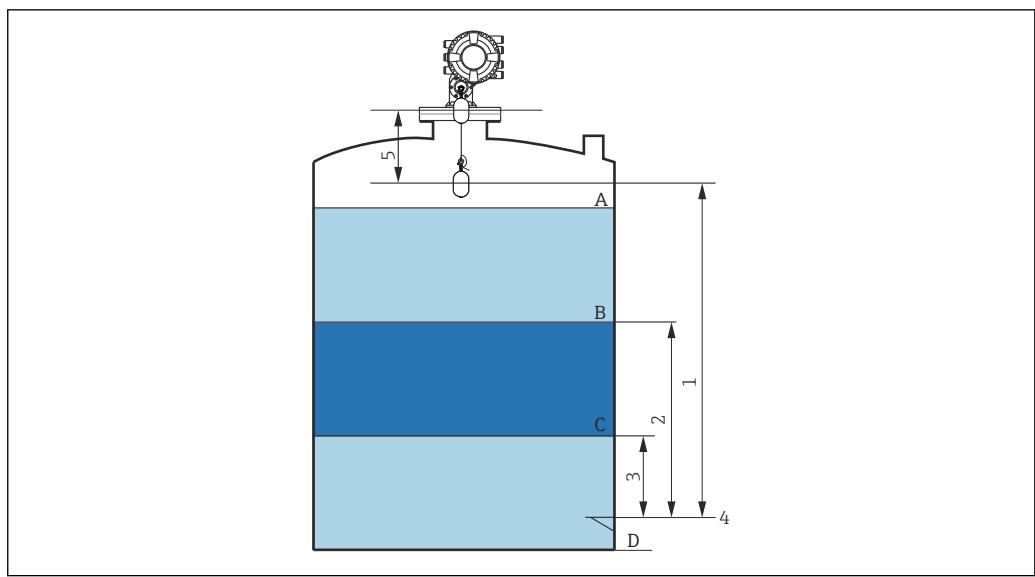

■ 6 Terms concerning NMS8x installation (e.g. NMS81)

- A Liquid level
- B Upper interface
- C Lower interface
- 1 Displacer pos
- 2 Upper I/F level
- 3 Lower I/F level
- 4 Datum plate
- 5 Distance

Distance

Navigation

■ ■ Expert → Sensor → Measured values → Distance (8103)

Description

Shows measured distance from reference position.

Additional information

Read access	Operator
Write access	-

Displacer position

Navigation

■ ■ Expert → Sensor → Measured values → Displacer pos (8130)

Description

Shows measured displacer position from zero position (tank bottom or datum plate). Value is always updated when displacer moves.

Additional information

Read access	Operator
Write access	-

Liquid level

Navigation Expert → Sensor → Measured values → Liquid level (8072)**Description**

Shows measured level from zero position (tank bottom or datum plate). Value is updated when device generates a valid level measurement.

Additional information

Read access	Operator
Write access	-

Upper interface level

Navigation Expert → Sensor → Measured values → Upper I/F level (8127)**Description**

Shows measured interface level from zero position (tank bottom or datum plate). Value is updated when device generates a valid Interface measurement.

Additional information

Read access	Operator
Write access	-

Upper interface level timestamp

Navigation Expert → Sensor → Measured values → Up I/F timestamp (8055)**Description**

Shows timestamp for the last measured upper interface level.

Additional information

Read access	Operator
Write access	-

Lower interface level

Navigation Expert → Sensor → Measured values → Lower I/F level (8128)**Description**

Shows measured interface level from zero position (tank bottom or datum plate). Value is updated when device generates a valid interface measurement.

Additional information

Read access	Operator
Write access	-

Lower interface level timestamp

Navigation Expert → Sensor → Measured values → LowI/F timestamp (8061)**Description**

Shows timestamp of the last measured lower interface level.

Additional information

Read access	Operator
Write access	-

Bottom level

Navigation Expert → Sensor → Measured values → Bottom level (8129)**Description**

Shows measured bottom level. Value is updated after a successfull tank bottom gauge command.

Additional information

Read access	Operator
Write access	-

Bottom level timestamp

Navigation Expert → Sensor → Measured values → BotLev timestamp (8048)**Description**

Shows the timestamp for measured bottom level.

Additional information

Read access	Operator
Write access	-

"Spot density" submenu**Navigation**
 Expert → Sensor → Measured values → Spot density

► Spot density	
Measured upper density	→  68
Upper density timestamp	→  68
Measured middle density	→  68
Middle Density Timestamp	→  69
Measured lower density	→  69
Lower density timestamp	→  69

Measured upper density**Navigation**
 Expert → Sensor → Measured values → Spot density → Meas upper dens. (8164)
Description

Shows the Measured Upper Density Value.

Additional information

Read access	Operator
Write access	-

Upper density timestamp**Navigation**
 Expert → Sensor → Measured values → Spot density → UpDens timestamp (8067)
Description

Shows timestamp of the last measured upper density.

Additional information

Read access	Operator
Write access	-

Measured middle density**Navigation**
 Expert → Sensor → Measured values → Spot density → Meas middle dens (8165)
Description

Shows the Measured Middle Density Value.

Additional information

Read access	Operator
Write access	-

Middle Density Timestamp**Navigation**
 Expert → Sensor → Measured values → Spot density → MidDensTimestamp (8011)
Description

Shows the timestamp of the last measured middle density.

Additional information

Read access	Operator
Write access	-

Measured lower density**Navigation**
 Expert → Sensor → Measured values → Spot density → Meas lower dens. (8166)
Description

Shows the Measured Lower Density Value.

Additional information

Read access	Operator
Write access	-

Lower density timestamp**Navigation**
 Expert → Sensor → Measured values → Spot density → LowerDensTimestamp (8122)
Description

Shows timestamp of last measured lower density.

Additional information

Read access	Operator
Write access	-

"Profile density" submenu**Navigation**
  Expert → Sensor → Measured values → Profile density

 Profile density	
Profile point	→  70
Profile average density	→  70
Profile density timestamp	→  70

Profile point**Navigation**
  Expert → Sensor → Measured values → Profile density → Profile point (8170)
Description

Shows actual number of Density Points measured so far in current operation, and the total Number of Points after Density Profile Operation is complete.

Additional information

Read access	Operator
Write access	-

Profile average density**Navigation**
  Expert → Sensor → Measured values → Profile density → Profile avg dens (8175)
Description

Shows the average density calculated after a profile density measurement is complete.

Additional information

Read access	Operator
Write access	-

Profile density timestamp**Navigation**
  Expert → Sensor → Measured values → Profile density → Profil dens time (8114)
Description

Shows the timestamp when the last average density profile was finished.

Additional information

Read access	Operator
Write access	-

*"Density table" submenu**Navigation*

Expert → Sensor → Measured values → Profile density → Density table

Density table

Navigation

Expert → Sensor → Measured values → Profile density → Density table


Description

Shows measured density table of profile density.

3.2.3 "Sensor diag" submenu

Navigation

Expert → Sensor → Sensor diag

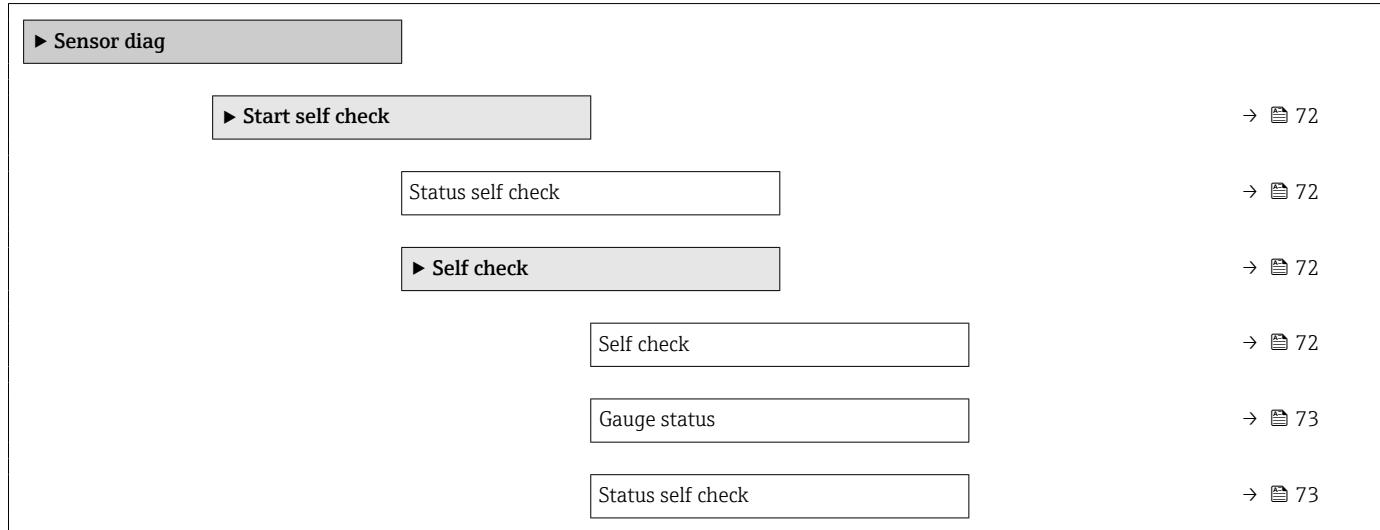

"Start self check" submenu

Navigation

Expert → Sensor → Sensor diag → Start self check

Status self check

Navigation

Expert → Sensor → Sensor diag → Start self check → Status (8192)

Description

Shows the status of the self check of the sensor module.

Additional information

Read access	Operator
Write access	-

"Self check" wizard

Navigation

Expert → Sensor → Sensor diag → Start self check → Self check

Self check

Navigation

Expert → Sensor → Sensor diag → Start self check → Self check → Self check

Additional information

Read access	Operator
Write access	-

Gauge status

Navigation  Expert → Sensor → Sensor diag → Start self check → Self check → Gauge status (8081)

Description Indicates the current status of the device gauge command.

Additional information

Read access	Operator
Write access	-

Status self check

Navigation  Expert → Sensor → Sensor diag → Start self check → Self check → Status (8192)

Description Shows the status of the self check of the sensor module.

Additional information

Read access	Operator
Write access	-

3.2.4 "Sensor config" submenu

Navigation

Expert → Sensor → Sensor config → Post gauge cmd (8163)

▶ Sensor config	
Post gauge command	→ 74
▶ Displacer	→ 75
▶ Wiredrum	→ 78
▶ Safety settings	→ 79
▶ Level settings	→ 82
▶ Balance settings	→ 86
▶ Spot density	→ 90
▶ Profile density	→ 92

Post gauge command



Navigation

Expert → Sensor → Sensor config → Post gauge cmd (8163)

Description

Defines the gauge command that will be executed after a one-time gauge command has finished.

Selection

- Stop
- Level
- Up
- Upper I/F level
- Lower I/F level
- None

Factory setting

Level

Additional information

Read access	Operator
Write access	Maintenance

"Displacer" submenu***Navigation***

Diagram Expert → Sensor → Sensor config → Displacer → Displacer type (8071)

► Displacer	
Displacer type	→ 75
Displacer diameter	→ 75
Displacer weight	→ 76
Displacer volume	→ 76
Displacer balance volume	→ 76
Displacer height	→ 77
Immersion depth	→ 77

Displacer type**Navigation**

Diagram Expert → Sensor → Sensor config → Displacer → Displacer type (8071)

Description

Chooses the type of displacer used.

Selection

- Custom diameter
- Diameter 30 mm
- Diameter 50 mm
- Diameter 70 mm
- Diameter 110 mm

Factory setting

Dependent on the device version

Additional information

Read access	Operator
Write access	Maintenance

Displacer diameter**Navigation**

Diagram Expert → Sensor → Sensor config → Displacer → Displacer diamet (8014)

Prerequisite

Displacer type (→ 75) = Custom diameter

Description

Sets the diameter of the cylindrical part of displacer.

User entry 0 to 999.9 mm

Factory setting See label on the device.

Additional information

Read access	Operator
Write access	Maintenance

Displacer weight



Navigation Expert → Sensor → Sensor config → Displacer → Displacer weight (8010)

Description Set the weight of the displacer in air. Indicated on the displacer in grams.

User entry 10 to 999.9 g

Factory setting See label on the device.

Additional information

Read access	Operator
Write access	Maintenance

Displacer volume



Navigation Expert → Sensor → Sensor config → Displacer → Displacer volume (8008)

Description Displacer volume indicated on displacer in mililiter.

User entry 10 to 999.9 ml

Factory setting See label on the device.

Additional information

Read access	Operator
Write access	Maintenance

Displacer balance volume



Navigation Expert → Sensor → Sensor config → Displacer → Balance volume (8009)

Description Defines the balance volume of the displacer as the lower part of displacer immersed in liquid. Units in milliliters. Indicated on displacer.

User entry 10 to 999.9 ml

Factory setting See label on the device.

Additional information

Read access	Operator
Write access	Maintenance

Displacer height**Navigation**

Expert → Sensor → Sensor config → Displacer → Displacer height (8195)

Description

Sets the displacer height in mm. Used for density measurement as minimum distance between last profile point and liquid level.

User entry

10 to 300 mm

Factory setting

Dependent on the device version

Additional information

Read access	Operator
Write access	Maintenance

Immersion depth**Navigation**

Expert → Sensor → Sensor config → Displacer → Immersion depth (8070)

Description

Defines distance (mm) from displacer bottom to balancing line defined by balanced volume. Value is needed for correct bottom level measurement.

User entry


0 to 99.9 mm

Factory setting

Dependent on the device version

Additional information

Read access	Operator
Write access	Maintenance

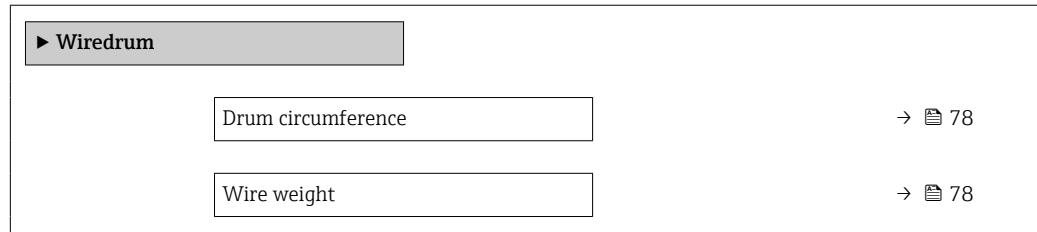"Wiredrum" submenu*Navigation* Expert → Sensor → Sensor config → Wiredrum**Drum circumference****Navigation** Expert → Sensor → Sensor config → Wiredrum → Drum circumfer (8082)**Description**

Sets the circumference of the wire drum. Indicated in Label.

User entry

100 to 999.9 mm

Factory setting

See label on the device.

Additional information

Read access	Operator
Write access	Maintenance

Wire weight**Navigation** Expert → Sensor → Sensor config → Wiredrum → Wire weight (8040)**Description**

Defines the weight of the measuring wire in g/10m. Indicated on Label.

User entry

0 to 999.9 g

Factory setting

See label on the device.

Additional information

Read access	Operator
Write access	Maintenance

"Safety settings" submenu*Navigation*

[Diagram] Expert → Sensor → Sensor config → Safety settings

► Safety settings	
High stop level	→ [Diagram] 79
Low stop level	→ [Diagram] 79
Slow hoist zone	→ [Diagram] 80
Overtension weight	→ [Diagram] 80
Undertension weight	→ [Diagram] 80
Output out of range	→ [Diagram] 81

High stop level**Navigation**

[Diagram] Expert → Sensor → Sensor config → Safety settings → High stop level (8135)

Description

Position of the displacer high stop as measured from defined zero position (tank bottom or datum plate).

User entry

-999 999.9 to 999 999.9 mm

Factory setting

20 000 mm

Additional information

Read access	Operator
Write access	Maintenance

Low stop level**Navigation**

[Diagram] Expert → Sensor → Sensor config → Safety settings → Low stop level (8069)

Description

Position of the displacer low stop as measured from defined zero position (tank bottom or datum plate).

User entry

-999 999.9 to 999 999.9 mm

Factory setting

0 mm

Additional information

Read access	Operator
Write access	Maintenance

Slow hoist zone

Navigation	Expert → Sensor → Sensor config → Safety settings → Slow hoist zone (8084)				
Description	Defines the interval in millimeters, measured down from the Reference Position, in which the Displacer reduces moving speed.				
User entry	10 to 999 999.9 mm				
Factory setting	70 mm				
Additional information	<table border="1"><tr><td>Read access</td><td>Operator</td></tr><tr><td>Write access</td><td>Maintenance</td></tr></table>	Read access	Operator	Write access	Maintenance
Read access	Operator				
Write access	Maintenance				

Overtension weight

Navigation	Expert → Sensor → Sensor config → Safety settings → Overtension wgt (8097)				
Description	Sets the minimum Weight in grams when Overtension Alarm will be set.				
User entry	100 to 999.9 g				
Factory setting	350 g				
Additional information	<table border="1"><tr><td>Read access</td><td>Operator</td></tr><tr><td>Write access</td><td>Maintenance</td></tr></table>	Read access	Operator	Write access	Maintenance
Read access	Operator				
Write access	Maintenance				

Undertension weight

Navigation	Expert → Sensor → Sensor config → Safety settings → Undertension wgt (8098)				
Description	Defines the undertension error weight. Untertension error will be issued if displacer weight is below this value longer than 7 seconds.				
User entry	0 to 300 g				
Factory setting	10 g				
Additional information	<table border="1"><tr><td>Read access</td><td>Operator</td></tr><tr><td>Write access</td><td>Maintenance</td></tr></table>	Read access	Operator	Write access	Maintenance
Read access	Operator				
Write access	Maintenance				

Output out of range

Navigation Expert → Sensor → Sensor config → Safety settings → Output out range (8218)

Description Selection of behavior between Alarm or Last valid value when displacer reached HighStopLevel, LowStopLevel or ReferencePosition.

Selection

- Last valid value
- Alarm
- None

Factory setting Last valid value

Additional information

Read access	Operator
Write access	Maintenance

"Level settings" submenu**Navigation**

Expert → Sensor → Sensor config → Level settings → Upper density (8113)

▶ Level settings	
Upper density	→ 82
Middle density	→ 82
Lower density	→ 83
Process condition	→ 83
Standby level	→ 83
Offset standby distance	→ 84

Upper density**Navigation**

Expert → Sensor → Sensor config → Level settings → Upper density (8113)

Description

Sets the density of the upper phase of the liquid.

User entry

50 to 2 000 kg/m³

Factory setting

800 kg/m³

Additional information

Read access	Operator
Write access	Maintenance

Middle density**Navigation**

Expert → Sensor → Sensor config → Level settings → Middle density (8041)

Description

Sets Density of Middle Phase in the Tank if three Phases are available. Otherwise used for the Lower Phase in the Tank if two Phases are available.

User entry

50 to 2 000 kg/m³

Factory setting

1 000 kg/m³

Additional information

Read access	Operator
Write access	Maintenance

Lower density**Navigation** Expert → Sensor → Sensor config → Level settings → Lower density (8042)**Description** Sets the density of the lower Phase in the tank if three phases are available.**User entry** 50 to 2 000 kg/m³**Factory setting** 1 200 kg/m³**Additional information**

Read access	Operator
Write access	Maintenance

Process condition**Navigation** Expert → Sensor → Sensor config → Level settings → Process cond. (8001)**Description** Select the liquid condition of the tank.**Selection**


- Universal
- Calm surface
- Turbulent surface

Factory setting Universal**Additional information** For W&M, setting to option **Calm surface** is recommended.

Read access	Operator
Write access	Maintenance

Standby level**Navigation** Expert → Sensor → Sensor config → Level settings → Standby level (8194)**Description** Defines the position in the tank where the displacer waits for the liquid level to rise during standby level gauge command.**User entry** -999 999.9 to 999 999.9 mm**Factory setting** 0 mm**Additional information**

Read access	Operator
Write access	Maintenance

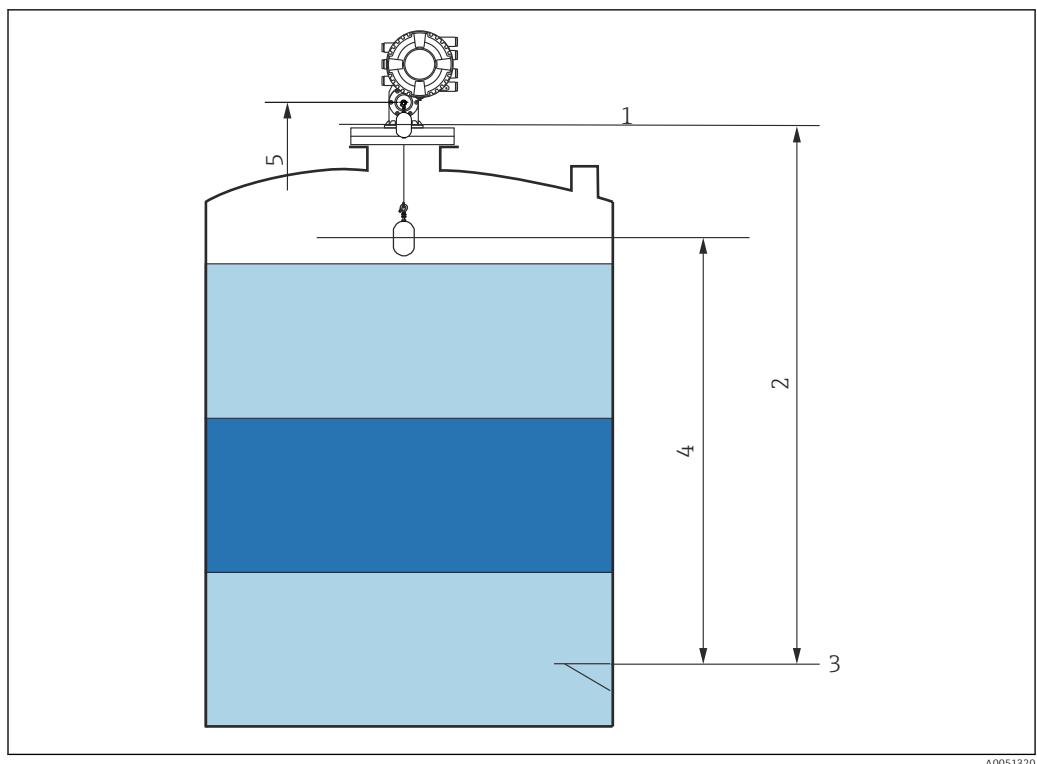

7 Displacer waiting for the liquid level to rise during standby level gauge command

- 1 Gauge reference height
- 2 Empty
- 3 Datum plate
- 4 Standby level (→ 83)
- 5 Reference position

Offset standby distance

Navigation

Expert → Sensor → Sensor config → Level settings → Offset distance (8107)

Description


Defines the distance from the current position where the displacer waits for the liquid level to rise during offset standby gauge command.

User entry

0 to 999 999.9 mm

Factory setting

500 mm

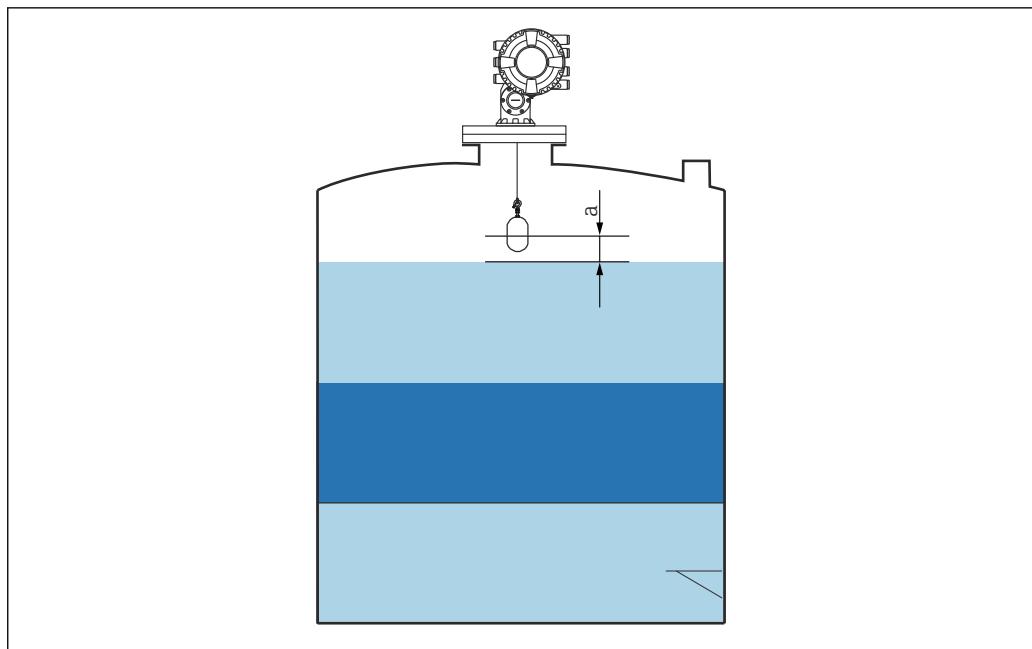Additional information

A0051273

Fig 8 *a: Offset standby distance*

"Balance settings" submenu*Navigation* Expert → Sensor → Sensor config → Balance settings

► Balance settings	
Level measurement mode	→  86
Interface measurement mode	→  87
Balancing waiting time	→  87
Seek delay	→  88
Weight tolerance	→  88



The parameter "Process condition" does a pre-set of the major balancing parameters. For the most applications its enough to set the correct "Process condition" parameter which affects the balancing parameter settings automatically.

Level measurement mode**Navigation** Expert → Sensor → Sensor config → Balance settings → Level meas mode (8056)**Description**

Chooses the measurement mode used for level measurement.

Selection


- Normal measure mode
- Compensation mode
- Non hysteresis mode

Factory setting

Non hysteresis mode

Additional information

Read access	Operator
Write access	Maintenance

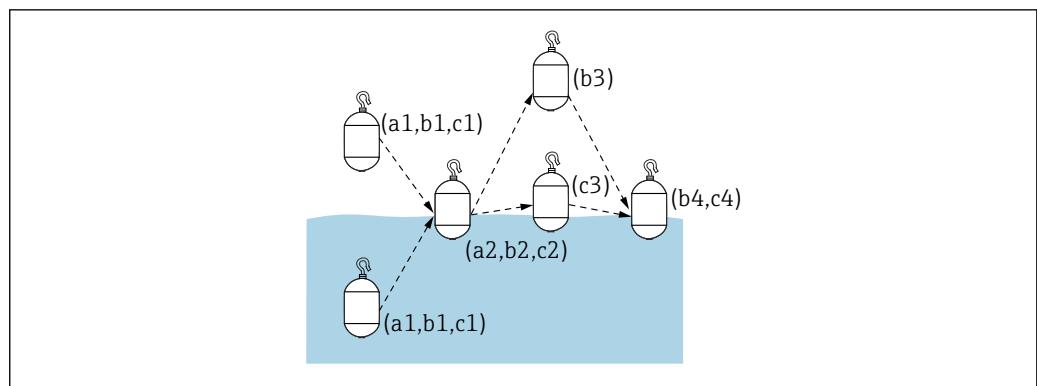

A0038582

9 NMS8x level mode

- a1 Displacer is in liquid or air unbalanced*
- a2 Displacer on liquid balanced*
- b1 Displacer is in liquid or air unbalanced*
- b2 Displacer on liquid balanced*
- b3 Displacer is moved out of the liquid, the weight in vapour is measured and used for the new weight calculation*
- b4 Displacer on liquid balanced*
- c1 Displacer is in liquid or air unbalanced*
- c2 Displacer on liquid balanced*
- c3 Displacer is lifted up*
- c4 Displacer on liquid balanced*

Interface measurement mode



Navigation

Expert → Sensor → Sensor config → Balance settings → Interface mode (8064)

Description

Chooses the measurement mode used for interface level measurements.

Selection

- Non hysteresis mode
- Normal measure mode

Factory setting

Non hysteresis mode

Additional information

Read access	Operator
Write access	Maintenance

Balancing waiting time



Navigation

Expert → Sensor → Sensor config → Balance settings → Bal waiting time (8205)

Description

Set the waiting time in seconds, after which the balance flag is turned on if level measurement is balanced (motor has stopped).

User entry


0 to 255 s

Factory setting

4 s

Additional information

Read access	Operator
Write access	Maintenance

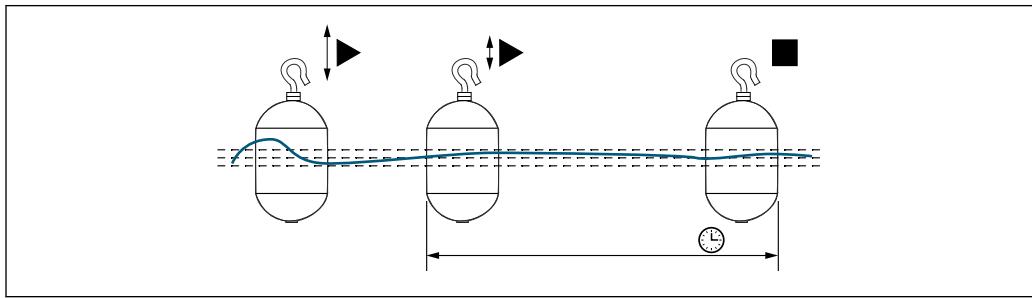**Fig 10 Balancing waiting time****Seek delay****Navigation**

Expert → Sensor → Sensor config → Balance settings → Seek delay (8162)

Description

When displacer is balanced, this parameter sets the Delay Time (seconds) before displacer starts to track Level again.

User entry

1 to 255 s

Factory setting

2 s

Additional information

Read access	Operator
Write access	Maintenance

Weight tolerance**Navigation**

Expert → Sensor → Sensor config → Balance settings → Weight tolerance (8213)

Description

Defines balance weight tolerance in grams, in which the displacer is in balance status.

User entry


0.1 to 100 g

Factory setting

1.6 g

Additional information

Read access	Operator
Write access	Maintenance

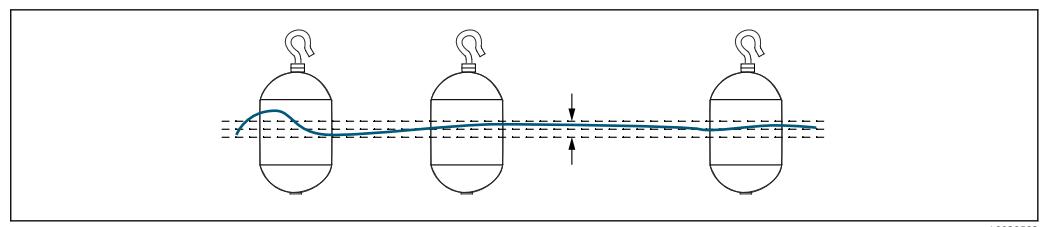

A0038583

■ 11 Weight tolerance

"Spot density" submenu*Navigation*

Expert → Sensor → Sensor config → Spot density

► Spot density	
Upper density offset	→ 90
Middle density offset	→ 90
Lower density offset	→ 91
Submersion depth	→ 91

Upper density offset**Navigation**

Expert → Sensor → Sensor config → Spot density → Up dens. offset (8176)

Description

Defines an offset value which is added to the measured upper density value.

User entry-999.99 to 999.99 kg/m³**Factory setting**0 kg/m³**Additional information**

Read access	Operator
Write access	Maintenance

Middle density offset**Navigation**

Expert → Sensor → Sensor config → Spot density → Mid dens. offset (8177)

Description

Defines an Offset Value which is added to the measured Middle Density Value.

User entry-999.99 to 999.99 kg/m³**Factory setting**0 kg/m³**Additional information**

Read access	Operator
Write access	Maintenance

Lower density offset

Navigation Expert → Sensor → Sensor config → Spot density → Low dens. offset (8178)

Description Defines an offset value which is added to the measured lower density value.

User entry -999.99 to 999.99 kg/m³

Factory setting 0 kg/m³

Additional information

Read access	Operator
Write access	Maintenance

Submersion depth

Navigation Expert → Sensor → Sensor config → Spot density → Submersion depth (8169)

Description Sets the displacer submersion depth (mm) for spot density operations.

User entry 50 to 99 999.9 mm

Factory setting 150 mm

Additional information

Read access	Operator
Write access	Maintenance

"Profile density" submenu**Navigation**
 Expert → Sensor → Sensor config → Profile density

► Profile density	
Density measurement mode	→  92
Manual profile level	→  92
Profile density offset distance	→  93
Profile density interval	→  93
Profile density offset	→  93

Density measurement mode**Navigation**
 Expert → Sensor → Sensor config → Profile density → Density mode (8186)
Description

In normal measure mode, measures at specified positions. In compensation mode measures using next integer value of drum turns to improve accuracy.

Selection

- Normal measure mode
- Compensation mode

Factory setting

Normal measure mode

Additional information

Read access	Operator
Write access	Maintenance

 In normal mode, measures spot densities at requested positions. In compensation mode the Proservo measures the spot densities at multiples of the wiredrum circumference (e.g. every ~ 150 mm (5.91 in))

Manual profile level**Navigation**
 Expert → Sensor → Sensor config → Profile density → Man profile lvl (8182)
Description

Sets the level position in the tank where the manual profile density operation starts.

User entry

-999 999.9 to 999 999.9 mm

Factory setting

1 000 mm

Additional information

Read access	Operator
Write access	Maintenance

Profile density offset distance**Navigation**

Expert → Sensor → Sensor config → Profile density → Dens offset dist (8185)

Description

Profile density offset distance [mm] is the distance between start point and first measurement point.

User entry

0 to 999 999.9 mm

Factory setting

500 mm

Additional information

Read access	Operator
Write access	Maintenance

Profile density interval**Navigation**

Expert → Sensor → Sensor config → Profile density → Density interval (8174)

Description

Sets the interval between two measurement points in profile density operation.

User entry

1 to 100 000 mm

Factory setting

1 000 mm

Additional information

Read access	Operator
Write access	Maintenance

Profile density offset**Navigation**

Expert → Sensor → Sensor config → Profile density → Prof dens offset (8173)

Description

Defines an offset value which is added to the measured profile density value.

User entry

-999.99 to 999.99 kg/m³

Factory setting

0 kg/m³

Additional information

Read access	Operator
Write access	Maintenance

3.2.5 "Calibration" submenu

Navigation

☰ ☰ Expert → Sensor → Calibration

▶ Calibration	
▶ Move displacer	→ ☰ 95
▶ Sensor calibration	→ ☰ 97
▶ Reference calibration	→ ☰ 100
▶ Drum calibration	→ ☰ 102
▶ Calibration parameters	→ ☰ 105

"Move displacer" wizard**Navigation**
  Expert → Sensor → Calibration → Move displacer

► Move displacer	
Move distance	→  95
Net Distance	→  95
Move displacer	→  96
Motor status	→  96
Move displacer	→  96

Move distance**Navigation**
  Expert → Sensor → Calibration → Move displacer → Move distance
Description

Up or down movement of displacer in mm.

User entry

0 to 999 999.9 mm

Factory setting

0 mm

Additional information

Read access	Operator
Write access	Maintenance

Distance**Navigation**
  Expert → Sensor → Calibration → Move displacer → Distance (8103)
Description

Shows measured distance from reference position.

Additional information

Read access	Operator
Write access	-

Move displacer**Navigation**

Expert → Sensor → Calibration → Move displacer → Move displacer

Selection

- Stop
- Move down
- Move up

Factory setting

Stop

Additional information

Read access	Operator
Write access	Maintenance

Motor status**Navigation**

Expert → Sensor → Calibration → Move displacer → Motor status (8118)

Description

Shows the current moving Direction of the Motor.

Additional information

Read access	Operator
Write access	-

Move displacer**Navigation**

Expert → Sensor → Calibration → Move displacer → Move displacer

Selection

- No
- Yes

Factory setting

No

Additional information

Read access	Operator
Write access	Maintenance

"Sensor calibration" wizard**Navigation**
 Expert → Sensor → Calibration → Sensor cal.

► Sensor calibration	
Sensor calibration	→  97
Offset weight	→  97
Span weight	→  98
Zero calibration	→  98
Calibration status	→  98
Offset calibration	→  99
Span calibration	→  99

Sensor calibration**Navigation**
 Expert → Sensor → Calibration → Sensor cal. → Sensor cal.
Description

This sequence calibrates the sensor of the servo.

Additional information

Read access	Operator
Write access	Maintenance

Offset weight**Navigation**
 Expert → Sensor → Calibration → Sensor cal. → Offset wgt. (8095)
Description

Sets the weight that is used for the lower point sensor calibration. Changing the value will delete the calibration data.

User entry

0 to 150 g

Factory setting

Dependent on the device version

Additional information

Read access	Operator
Write access	Maintenance

i The recommended offset weight value to improve measurement accuracy varies depending on the liquid density of applications. Use the weight close to the value determined by the following formula.

$$\text{(Recommended offset weight [g])} = \text{(Displacer weight [g])} - \text{((Application density [g/cm}^3\text{])} \times \text{(Displacer Volume [ml])})$$

Span weight**Navigation**

Expert → Sensor → Calibration → Sensor cal. → Span wgt. (8096)

Description

Sets the weight that is used for the middle point sensor calibration. Changing the value will delete the calibration data.

User entry

10 to 999.9 g

Factory setting

Dependent on the device version

Additional information

Read access	Operator
Write access	Maintenance

Zero calibration**Navigation**

Expert → Sensor → Calibration → Sensor cal. → Zero calibration

Description

In this step the sensor calibration zero weight will be done.

Additional information

Read access	Operator
Write access	Maintenance

Calibration status**Navigation**

Expert → Sensor → Calibration → Sensor cal. → Status (8031)

Description

Gives feedback on the latest status of the calibration process.

Additional information

Read access	Operator
Write access	-

Offset calibration**Navigation**

Expert → Sensor → Calibration → Sensor cal. → Offset cal.

Description

In this step the sensor calibration with offset weight will be done.

Additional information

Read access	Operator
Write access	Maintenance

Span calibration**Navigation**

Expert → Sensor → Calibration → Sensor cal. → Span calibration

Description

In this step the sensor calibration with span weight will be done.

Additional information

Read access	Operator
Write access	Maintenance

"Reference calibration" wizard**Navigation**
  Expert → Sensor → Calibration → Reference cal.

► Reference calibration	
Reference calibration	→  100
Reference position	→  100
Progress	→  100
Calibration status	→  101

Reference calibration**Navigation**
  Expert → Sensor → Calibration → Reference cal. → Reference cal.
Description

This sequence will move the displacer to the mechanical stop and set the reference position.

Additional information

Read access	Operator
Write access	Maintenance

Reference position**Navigation**
  Expert → Sensor → Calibration → Reference cal. → Ref. position (8046)
Description

Defines in mm, during reference calibration, the distance between mechanical stop inside the drum housing and the middle of the wire ring.

User entry

0 to 9 999.9 mm

Factory setting

Dependent on the device version

Additional information

Read access	Operator
Write access	Maintenance

Progress**Navigation**
  Expert → Sensor → Calibration → Reference cal. → Progress
Description

Gives feedback on the latest status of the reference calibration process.

Additional information

Read access	Operator
Write access	Maintenance

Calibration status

Navigation Expert → Sensor → Calibration → Reference cal. → Status (8031)**Description**

Gives feedback on the latest status of the calibration process.

Additional information

Read access	Operator
Write access	-

"Drum calibration" wizard**Navigation**
 Expert → Sensor → Calibration → Drum cal.

► Drum calibration	
Make sure to have	→  102
Drum calibration	→  102
Calibration time	→  103
Set high weight	→  103
Make drum table	→  103
Drum table point	→  103
Calibration status	→  104
Make low table	→  104
Set low weight	→  104

Make sure to have**Navigation**
 Expert → Sensor → Calibration → Drum cal. → Make sure
Additional information

Read access	Operator
Write access	-

Drum calibration**Navigation**
 Expert → Sensor → Calibration → Drum cal. → Drum cal.
Description

This sequence will perform a drum calibration.

Additional information

Read access	Operator
Write access	Maintenance

Calibration time

Navigation   Expert → Sensor → Calibration → Drum cal. → Time**Description** Time until drum calibration is finished.**Additional information**

Read access	Operator
Write access	-

Set high weight

**Navigation**   Expert → Sensor → Calibration → Drum cal. → Set high weight (8116)**Description** High weight that is used for a drum calibration (normally it is the displacer weight).**User entry** 10 to 999.9 g**Factory setting** Dependent on the device version**Additional information**

Read access	Operator
Write access	Maintenance

Make drum table

**Navigation**   Expert → Sensor → Calibration → Drum cal. → Make drum table**Description** This will perform a drum calibration.**Additional information**

Read access	Operator
Write access	Maintenance

Drum table point

Navigation   Expert → Sensor → Calibration → Drum cal. → Drum table point**Description** Shows the currently measured point of the drum calibration. Maximum number of measured points is 50.**Additional information**

Read access	Operator
Write access	-

Calibration status

Navigation   Expert → Sensor → Calibration → Drum cal. → Status (8031)

Description Gives feedback on the latest status of the calibration process.

Additional information

Read access	Operator
Write access	-

Make low table



Navigation   Expert → Sensor → Calibration → Drum cal. → Make low table

Description For additional accuracy it is possible to perform a second drum calibration with low weight. Choose "Yes" or "No" to start/stop calibration.

Selection

- No
- Yes

Factory setting No

Additional information

Read access	Operator
Write access	Maintenance

Set low weight



Navigation   Expert → Sensor → Calibration → Drum cal. → Set low weight (8115)

Description Set weight for additional drum calibration sequence.

User entry 10 to 999.9 g

Factory setting Dependent on the device version

Additional information

Read access	Operator
Write access	Maintenance

"Calibration parameters" submenu*Navigation*
  Expert → Sensor → Calibration → Calib parameters

► Calibration parameters	
Set high weight	→  105
Set low weight	→  105
Reference position	→  106
Offset weight	→  106
Span weight	→  106
Calibration status	→  107

Set high weight**Navigation**
  Expert → Sensor → Calibration → Calib parameters → Set high weight (8116)
Description

High weight that is used for a drum calibration (normally it is the displacer weight).

User entry

10 to 999.9 g

Factory setting

Dependent on the device version

Additional information

Read access	Operator
Write access	Maintenance

Set low weight**Navigation**
  Expert → Sensor → Calibration → Calib parameters → Set low weight (8115)
Description

Set weight for additional drum calibration sequence.

User entry

10 to 999.9 g

Factory setting

Dependent on the device version

Additional information

Read access	Operator
Write access	Maintenance

Reference position**Navigation**

Expert → Sensor → Calibration → Calib parameters → Ref. position (8046)

Description

Defines in mm, during reference calibration, the distance between mechanical stop inside the drum housing and the middle of the wire ring.

User entry

0 to 9 999.9 mm

Factory setting

Dependent on the device version

Additional information

Read access	Operator
Write access	Maintenance

Offset weight**Navigation**

Expert → Sensor → Calibration → Calib parameters → Offset wgt. (8095)

Description

Sets the weight that is used for the lower point sensor calibration. Changing the value will delete the calibration data.

User entry

0 to 150 g

Factory setting

Dependent on the device version

Additional information

Read access	Operator
Write access	Maintenance



The recommended offset weight value to improve measurement accuracy varies depending on the liquid density of applications. Use the weight close to the value determined by the following formula.

$$\text{(Recommended offset weight [g])} = (\text{Displacer weight [g]}) - ((\text{Application density [g/cm}^3\text{]}) \times (\text{Displacer Volume [ml]}))$$

Span weight**Navigation**

Expert → Sensor → Calibration → Calib parameters → Span wgt. (8096)

Description

Sets the weight that is used for the middle point sensor calibration. Changing the value will delete the calibration data.

User entry

10 to 999.9 g

Factory setting

Dependent on the device version

Additional information

Read access	Operator
Write access	Maintenance

Calibration status

Navigation Expert → Sensor → Calibration → Calib parameters → Status (8031)**Description**

Gives feedback on the latest status of the calibration process.

Additional information

Read access	Operator
Write access	-

3.3 "Input/output" submenu

Navigation

☰ ☰ Expert → Input/output

▶ Input/output	
▶ HART devices	→ ☰ 109
▶ Analog IP	→ ☰ 140
▶ Analog I/O	→ ☰ 149
▶ Digital Xx-x	→ ☰ 162
▶ Digital input mapping	→ ☰ 168

3.3.1 "HART devices" submenu

Navigation

Expert → Input/output → HART devices

▶ HART devices	
Number of devices	→ 109
▶ HART Device(s)	→ 110
▶ Forget device	→ 138
▶ #blank#	→ 138

Number of devices

Navigation

Expert → Input/output → HART devices → Number devices (13051)

Description

Shows the number of devices on the HART bus.

Additional information

Read access	Operator
Write access	-

"HART Device(s)" submenu

 There is a **HART Device(s)** submenu for each HART slave device found on the HART loop.

Navigation Expert → Input/output → HART devices → HART Device(s)

 HART Device(s)	
Device name	→  111
Polling address	→  111
Device tag	→  111
Operating mode	→  111
Communication status	→  112
Status signal	→  112
#blank# (PV - designation dependent on device)	→  113
#blank#(SV - designation dependent on device)	→  113
#blank#(TV - designation dependent on device)	→  113
#blank#(QV - designation dependent on device)	→  113
HART device PV mA	→  114
HART device PV %	→  114
Output pressure	→  114
Output density	→  115
Output temperature	→  115
Output vapor temperature	→  115
Output level	→  116
 HART device information	→  117
 Element values	→  123

▶ Diagnostics	→ 124
▶ Diagnostics	→ 125
▶ NMT device config	→ 127

Device name

Navigation  Expert → Input/output → HART devices → HART Device(s) → Device name (14722)

Description Shows the name of the transmitter.

Additional information

Read access	Operator
Write access	-

Polling address

Navigation  Expert → Input/output → HART devices → HART Device(s) → Polling address (14712)

Description Shows the polling address of the transmitter.

Additional information

Read access	Operator
Write access	-

Device tag

Navigation  Expert → Input/output → HART devices → HART Device(s) → Device tag (14713)

Description Shows the device tag of the transmitter.

Additional information

Read access	Operator
Write access	-

Operating mode



Navigation  Expert → Input/output → HART devices → HART Device(s) → Operating mode (14745)

Prerequisite Not available if the HART device is a Prothermo NMT.

Description	Selection of the operation mode PV only or PV,SV,TV,QV. Devines which values are polled from the connected HART Device.				
Selection	<ul style="list-style-type: none"> ■ PV only ■ PV,SV,TV & QV ■ Level²⁾ ■ Measured level²⁾ 				
Factory setting	PV,SV,TV & QV				
Additional information	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 2px;">Read access</td> <td style="padding: 2px;">Operator</td> </tr> <tr> <td style="padding: 2px;">Write access</td> <td style="padding: 2px;">Maintenance</td> </tr> </table>	Read access	Operator	Write access	Maintenance
Read access	Operator				
Write access	Maintenance				

Communication status

Navigation	 Expert → Input/output → HART devices → HART Device(s) → Comm. status (14710)				
Description	Shows the operating status of the transmitter.				
User interface	<ul style="list-style-type: none"> ■ Operating normally ■ Device offline 				
Additional information	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 2px;">Read access</td> <td style="padding: 2px;">Operator</td> </tr> <tr> <td style="padding: 2px;">Write access</td> <td style="padding: 2px;">-</td> </tr> </table>	Read access	Operator	Write access	-
Read access	Operator				
Write access	-				

Status signal

Navigation	 Expert → Input/output → HART devices → HART Device(s) → Status signal (14760)
Description	Indicates the current device status in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107.
User interface	<ul style="list-style-type: none"> ■ OK ■ Failure (F) ■ Function check (C) ■ Out of specification (S) ■ Maintenance required (M) ■ --- ■ No effect (N) ■ ---
Factory setting	---

2) only visible if the connected device is a Micropilot

#blank# (HART PV - designation dependent on device)

Navigation  Expert → Input/output → HART devices → HART Device(s) → #blank# (14716)

Description Shows the first HART variable (PV).

Additional information

Read access	Operator
Write access	-

#blank# (HART SV - designation dependent on device)

Navigation  Expert → Input/output → HART devices → HART Device(s) → #blank# (14705)

Prerequisite For HART devices other than NMT: **Operating mode** (→  111) = PV,SV,TV & QV

Description Shows the second HART variable (SV).

Additional information

Read access	Operator
Write access	-

#blank# (HART TV - designation dependent on device)

Navigation  Expert → Input/output → HART devices → HART Device(s) → #blank# (14706)

Prerequisite For HART devices other than NMT: **Operating mode** (→  111) = PV,SV,TV & QV

Description Shows the third HART variable (TV).

Additional information

Read access	Operator
Write access	-

#blank# (HART QV - designation dependent on device)

Navigation  Expert → Input/output → HART devices → HART Device(s) → #blank# (14716)

Prerequisite For HART devices other than NMT: **Operating mode** (→  111) = PV,SV,TV & QV

Description Shows the fourth HART variable (QV).

Additional information

Read access	Operator
Write access	-

HART device PV mA

Navigation	  Expert → Input/output → HART devices → HART Device(s) → HARTDEV PV mA (14708)				
Prerequisite	Not available for Micropilot S FMR5xx and Prothermo 53x.				
Description	Shows the first HART variable (PV) in mA.				
Additional information	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 2px;">Read access</td> <td style="padding: 2px;">Operator</td> </tr> <tr> <td style="padding: 2px;">Write access</td> <td style="padding: 2px;">-</td> </tr> </table>	Read access	Operator	Write access	-
Read access	Operator				
Write access	-				

HART device PV %

Navigation	  Expert → Input/output → HART devices → HART Device(s) → HARTDEV PV % (14709)				
Prerequisite	Not available for Micropilot S FMR5xx and Prothermo 53x.				
Description	Shows the first HART variable (PV) in percentage.				
Additional information	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 2px;">Read access</td> <td style="padding: 2px;">Operator</td> </tr> <tr> <td style="padding: 2px;">Write access</td> <td style="padding: 2px;">-</td> </tr> </table>	Read access	Operator	Write access	-
Read access	Operator				
Write access	-				

Output pressure

Navigation	  Expert → Input/output → HART devices → HART Device(s) → Output pressure (14719)				
Prerequisite	Not available for Micropilot S FMR5xx, Prothermo NMT53x and Prothermo NMT8x. In these cases the measured variables are allocated automatically.				
Description	Defines which HART variable is the pressure.				
Selection	<ul style="list-style-type: none"> ■ No value ■ Primary variable (PV) ■ Secondary variable (SV) ■ Tertiary variable (TV) ■ Quaternary variable (QV) 				
Factory setting	No value				
Additional information	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 2px;">Read access</td> <td style="padding: 2px;">Operator</td> </tr> <tr> <td style="padding: 2px;">Write access</td> <td style="padding: 2px;">Maintenance</td> </tr> </table>	Read access	Operator	Write access	Maintenance
Read access	Operator				
Write access	Maintenance				

Output density

**Navigation**

Diagram: Expert → Input/output → HART devices → HART Device(s) → Output density (14720)

Prerequisite

Not available for Micropilot S FMR5xx, Prothermo NMT53x and Prothermo NMT8x. In these cases the measured variables are allocated automatically.

Description

Defines which HART variable is the density.

Selection

- No value
- Primary variable (PV)
- Secondary variable (SV)
- Tertiary variable (TV)
- Quaternary variable (QV)

Factory setting

No value

Additional information

Read access	Operator
Write access	Maintenance

Output temperature

**Navigation**

Diagram: Expert → Input/output → HART devices → HART Device(s) → Output temp. (14721)

Prerequisite

Not available for Micropilot S FMR5xx, Prothermo NMT53x and Prothermo NMT8x. In these cases the measured variables are allocated automatically.

Description

Defines which HART variable is the temperature.

Selection

- No value
- Primary variable (PV)
- Secondary variable (SV)
- Tertiary variable (TV)
- Quaternary variable (QV)

Factory setting

No value

Additional information

Read access	Operator
Write access	Maintenance

Output vapor temperature

**Navigation**

Diagram: Expert → Input/output → HART devices → HART Device(s) → Output vapor tmp (14726)

Prerequisite

Not available for Micropilot S FMR5xx, Prothermo NMT53x and Prothermo NMT8x. In these cases the measured variables are allocated automatically.

Description Defines which HART variable is the vapor temperature.

Selection

- No value
- Primary variable (PV)
- Secondary variable (SV)
- Tertiary variable (TV)
- Quaternary variable (QV)

Factory setting No value

Additional information

Read access	Operator
Write access	Maintenance

Output level



Navigation Expert → Input/output → HART devices → HART Device(s) → Output level (14718)

Prerequisite

Not available for Micropilot S FMR5xx, Prothermo NMT53x and Prothermo NMT8x. In these cases the measured variables are allocated automatically.

Description Defines which HART variable is the level.

Selection

- No value
- Primary variable (PV)
- Secondary variable (SV)
- Tertiary variable (TV)
- Quaternary variable (QV)

Factory setting No value

Additional information

Read access	Operator
Write access	Maintenance

*"HART device information" submenu**Navigation*

Diagram Expert → Input/output → HART devices → HART Device(s)
→ HART device info

► HART device information	
Pressure	→ 117
Density	→ 118
Temperature	→ 118
Vapor temperature	→ 118
Water level	→ 119
Level source	→ 119
Tank level to NMT	→ 119
Manual value	→ 120
HART bus	→ 120
Device type	→ 120
Device ID	→ 120
Device date	→ 121
Device description	→ 121
Device message	→ 121
Software version	→ 121
Firmware CRC	→ 122
Custody transfer	→ 122

Pressure**Navigation**

Diagram Expert → Input/output → HART devices → HART Device(s) → HART device info
→ Pressure (14723)

Prerequisite

Output pressure (→ [114](#)) ≠ No value

Description Shows the pressure value measured by the connected HART device.

Additional information

Read access	Operator
Write access	-

Density

Navigation Expert → Input/output → HART devices → HART Device(s) → HART device info
→ Density (14724)

Prerequisite

Output density (→ 115) ≠ No value

Description

Shows the density value measured by the connected HART device.

Additional information

Read access	Operator
Write access	-

Temperature

Navigation Expert → Input/output → HART devices → HART Device(s) → HART device info
→ Temperature (14725)

Prerequisite

Output temperature (→ 115) ≠ No value

Description

Shows the temperature measured by the connected HART device.

Additional information

Read access	Operator
Write access	-

Vapor temperature

Navigation Expert → Input/output → HART devices → HART Device(s) → HART device info
→ Vapor temp. (14727)

Prerequisite

Output vapor temperature (→ 115) ≠ No value

Description

Shows the temperature value of the vapor phase measured by the connected HART device.

Additional information

Read access	Operator
Write access	-

Water level

Navigation   Expert → Input/output → HART devices → HART Device(s) → HART device info
→ Water level (14717)

Prerequisite **Output level (→  116) ≠ No value**

Description Shows the water level value measured by the connected HART device.

Additional information

Read access	Operator
Write access	-

Level source



Navigation   Expert → Input/output → HART devices → HART Device(s) → HART device info
→ Level source (14749)

Prerequisite Prothermo NMT53x

Description Shows which source should be used for level reference sent to NMT to determine liquid/vapour temperature. Tank level or manual level.

Selection

- Manual value
- Tank level

Factory setting Tank level

Additional information

Read access	Maintenance
Write access	Maintenance

Tank level to NMT

Navigation   Expert → Input/output → HART devices → HART Device(s) → HART device info
→ Tank lvl to NMT (14750)

Prerequisite Prothermo NMT53x with level measurement

Description Shows the level transferred to NMT.

Additional information

Read access	Maintenance
Write access	-

Manual value

Navigation Expert → Input/output → HART devices → HART Device(s) → HART device info
→ Manual value (14746)

Prerequisite Prothermo NMT53x with level measurement

Description Shows the manual set level.

User entry Signed floating-point number

Factory setting 0 mm

Additional information

Read access	Maintenance
Write access	Maintenance

HART bus

Navigation Expert → Input/output → HART devices → HART Device(s) → HART device info
→ HART bus (14711)

Description Information about the used IO-Slot.

Additional information

Read access	Operator
Write access	-

Device type

Navigation Expert → Input/output → HART devices → HART Device(s) → HART device info
→ Device type (14701)

Description Shows the device type with which the measuring device is registered with the HART Communication Foundation.

Additional information

Read access	Operator
Write access	-

Device ID

Navigation Expert → Input/output → HART devices → HART Device(s) → HART device info
→ Device ID (14702)

Description Shows the device ID of the connected HART device.

Additional information

Read access	Operator
Write access	-

Device date**Navigation**

Expert → Input/output → HART devices → HART Device(s) → HART device info
→ Device date (14707)

Description

Shows the date of the connected HART device. (e.g.: the last configuration change).

Additional information

Read access	Operator
Write access	-

Device description**Navigation**

Expert → Input/output → HART devices → HART Device(s) → HART device info
→ Device descrip. (14704)

Description

Shows a user defined HART descriptor of the connected device.

Additional information

Read access	Operator
Write access	-

Device message**Navigation**

Expert → Input/output → HART devices → HART Device(s) → HART device info
→ Device message (14703)

Description

Shows a user defined HART message of the connected device.

Additional information

Read access	Operator
Write access	-

Software version**Navigation**

Expert → Input/output → HART devices → HART Device(s) → HART device info
→ Software version (14747)

Prerequisite

Prothermo NMT53x

Description

Shows the software version of the NMT device.

Additional information

Read access	Maintenance
Write access	-

Firmware CRC**Navigation**

  Expert → Input/output → HART devices → HART Device(s) → HART device info
→ Firmware CRC (14758)

User interface

Positive integer

Factory setting

0

Additional information

Read access	Maintenance
Write access	-

Custody transfer**Navigation**

  Expert → Input/output → HART devices → HART Device(s) → HART device info
→ Custody transfer (14748)

Prerequisite

Prothermo NMT53x with temperature measurement

Description

Shows information about hardware lock of NMT device. Off -> NMT parameter can be changed. On -> NMT parameter can not be changed.

Additional information

Read access	Maintenance
Write access	-

"Element values" submenu

This submenu is only available for Prothermo NMT53x.

Navigation

Expert → Input/output → HART devices → HART Device(s)
→ Element values

*"Element temperature" submenu**Navigation*

Expert → Input/output → HART devices → HART Device(s)
→ Element values → Element temp.

Element temperature 1 to 24

Navigation

Expert → Input/output → HART devices → HART Device(s) → Element values
→ Element temp. → Element temp. 1 to 24 (14984–1 to 24)

Description

Shows the temperature of an element in the NMT.

Additional information

Read access	Operator
Write access	-

*"Element position" submenu**Navigation*

Expert → Input/output → HART devices → HART Device(s)
→ Element values → Element position

Element position 1 to 24

Navigation

Expert → Input/output → HART devices → HART Device(s) → Element values
→ Element position → Element pos. 1 to 24 (15014–1 to 24)

Description

Shows the position of the selected element in the NMT.

Additional information

Read access	Operator
Write access	-

"Diagnostics" submenu

 This submenu is only available for Prothermo NMT53x.

Navigation

Expert → Input/output → HART devices → HART Device(s)
→ Diagnostics

▶ Diagnostics	
Diagnostic code	→  124
Last diagnostic	→  124
Reference 0	→  124
Reference 17	→  125

Diagnostic code**Navigation**

Expert → Input/output → HART devices → HART Device(s) → Diagnostics → Diag. code (14739)

Description

Shows the current diagnostic code of NMT. Check NMT manual for details.

Additional information

Read access	Operator
Write access	-

Last diagnostic**Navigation**

Expert → Input/output → HART devices → HART Device(s) → Diagnostics → Last Diagnostic (14742)

Description

Shows the previous diagnostic code of NMT. Check NMT manual for details.

Additional information

Read access	Operator
Write access	-

Reference 0**Navigation**

Expert → Input/output → HART devices → HART Device(s) → Diagnostics
→ Reference 0 (14740)

Prerequisite

Prothermo NMT53x with temperature measurement.

Description Shows the temperature of internal reference element 0.

Additional information

Read access	Operator
Write access	-

Reference 17

Navigation  Expert → Input/output → HART devices → HART Device(s) → Diagnostics
→ Reference 17 (14741)

Prerequisite Prothermo NMT53x with temperature measurement.

Description Shows the temperature of internal reference element 17.

Additional information

Read access	Operator
Write access	-

"Diagnostics" submenu

 This submenu is only available for Prothermo NMT8x.

Navigation  Expert → Input/output → HART devices → HART Device(s)
→ Diagnostics

 Diagnostics	
Active diagnostics	→  125
Previous diagnostics	→  126
Test resistance	→  126
WB frequency ratio	→  126

Active diagnostics

Navigation  Expert → Input/output → HART devices → HART Device(s) → Diagnostics → Active diagnos. (14754)

User interface Character string comprising numbers, letters and special characters

Factory setting

Additional information

Read access	Operator
Write access	-

Previous diagnostics**Navigation**

 Expert → Input/output → HART devices → HART Device(s) → Diagnostics
→ Prev.diagnostics (14755)

User interface

Character string comprising numbers, letters and special characters

Factory setting**Additional information**

Read access	Operator
Write access	-

Test resistance**Navigation**

 Expert → Input/output → HART devices → HART Device(s) → Diagnostics → Test resistance (14752)

User interface

Signed floating-point number

Factory setting

0 Ohm

Additional information

Read access	Operator
Write access	-

WB frequency ratio**Navigation**

 Expert → Input/output → HART devices → HART Device(s) → Diagnostics → WB freq. ratio (14753)

User interface

Signed floating-point number

Factory setting

0

Additional information

Read access	Operator
Write access	-

"NMT device config" submenu

 This submenu is only present if the connected HART device is a Prothermo NMT5xx.

Navigation

 Expert → Input/output → HART devices → HART Device(s) → NMT dev. config

► NMT device config	
Configure device?	→  127
Access code	→  128
Total no. element	→  128
Bottom point	→  129
Temperature element short	→  129
Temperature element open	→  129
Output at error	→  130
Gain adjust	→  130
Kind of interval	→  130
Element interval	→  131
Update water level	→  131
► Element setup	
Select element	→  132
Zero adjust	→  132
Element temperature	→  133
Element position	→  133

Configure device?**Navigation**

 Expert → Input/output → HART devices → HART Device(s) → NMT dev. config
→ Config. device? (14728)

Description

Enable NMT device configuration.

Selection	<ul style="list-style-type: none"> ■ No ■ Yes 				
Factory setting	No				
Additional information	Meaning of the options <ul style="list-style-type: none"> ■ No Not configurable ■ Yes Configurable 				
	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 2px;">Read access</td> <td style="padding: 2px;">Operator</td> </tr> <tr> <td style="padding: 2px;">Write access</td> <td style="padding: 2px;">Maintenance</td> </tr> </table>	Read access	Operator	Write access	Maintenance
Read access	Operator				
Write access	Maintenance				

Access code					
Navigation	 Expert → Input/output → HART devices → HART Device(s) → NMT dev. config → Access code (14714)				
Prerequisite	Configure device? (→  127) = Yes				
Description	Shows the access code to configure the NMT device. Code is read from NMT device at start up.				
User entry	0 to 65 535				
Factory setting	0				
Additional information	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 2px;">Read access</td> <td style="padding: 2px;">Operator</td> </tr> <tr> <td style="padding: 2px;">Write access</td> <td style="padding: 2px;">Maintenance</td> </tr> </table>	Read access	Operator	Write access	Maintenance
Read access	Operator				
Write access	Maintenance				

Total no. element					
Navigation	 Expert → Input/output → HART devices → HART Device(s) → NMT dev. config → Total elements (14730)				
Description	Shows the total amount of configurable temperature elements.				
Additional information	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 2px;">Read access</td> <td style="padding: 2px;">Operator</td> </tr> <tr> <td style="padding: 2px;">Write access</td> <td style="padding: 2px;">-</td> </tr> </table>	Read access	Operator	Write access	-
Read access	Operator				
Write access	-				

Bottom point

Navigation Expert → Input/output → HART devices → HART Device(s) → NMT dev. config
→ Bottom point (14729)

Description Shows the bottom clearance from the end of temperature probe or WB probe.

User entry Signed floating-point number

Factory setting 0 mm

Additional information

Read access	Operator
Write access	Maintenance

Temperature element short

Navigation Expert → Input/output → HART devices → HART Device(s) → NMT dev. config
→ Temp elem. short (14731)

Description Sets the displayed temperature if element is broken (shorten).

User entry Signed floating-point number

Factory setting 0 °C

Additional information

Read access	Operator
Write access	Maintenance

Temperature element open

Navigation Expert → Input/output → HART devices → HART Device(s) → NMT dev. config
→ Temp. elem. open (14732)

Description Sets the displayed temperature if element is not connected (open).

User entry Signed floating-point number

Factory setting 0 °C

Additional information

Read access	Operator
Write access	Maintenance

Output at error**Navigation**

Expert → Input/output → HART devices → HART Device(s) → NMT dev. config
→ Output at error (14733)

Description

Off -> Defective element will not be used in average calculation. On -> Defective element generate error at output value.

Selection

- Off
- On

Factory setting

Off

Additional information

Read access	Operator
Write access	Maintenance

Gain adjust**Navigation**

Expert → Input/output → HART devices → HART Device(s) → NMT dev. config
→ Gain adjust (14736)

Description

Adjustment of all shown temperature elements. Also reference elements 0 and 17. e.g. 0.8 -> 80% 1.0 -> 100% of factory calibration 1.2 -> 120%.

User entry

Signed floating-point number

Factory setting

0

Additional information

Read access	Operator
Write access	Maintenance

Kind of interval**Navigation**

Expert → Input/output → HART devices → HART Device(s) → NMT dev. config
→ Kind of interval (14744)

Description

Determines how the element positions are defined.

Selection

- Even
- Not even

Factory setting

Even

Additional information**Meaning of the options**

- **Even**
First position bottom point + element interval for every next element.
- **Not even**
Position of elements can be set manually.

Read access	Operator
Write access	Maintenance

Element interval**Navigation**

Diagram: Expert → Input/output → HART devices → HART Device(s) → NMT dev. config
→ Element interval (14743)

Prerequisite

Kind of interval (→ 130) = Even

Description

Shows the distance between the temperature elements used if kind of interval parameter is set to even.

User entry

Signed floating-point number

Factory setting

0 mm

Additional information

Read access	Operator
Write access	Maintenance

Update water level**Navigation**

Diagram: Expert → Input/output → HART devices → HART Device(s) → NMT dev. config
→ Water level upd. (14751)

Description

Select if water level value is transferred to NMT or not.

Selection

- Enabled
- Disabled

Factory setting

Disabled

Additional information

- Enabled: Water level value is transferred
- Disabled: Water level value is **not** transferred

The NMT delivers the average liquid temperature value in a tank by picking up the value of all temperature elements which are covered by liquid and calculating the average value. To select the submerged temperature elements, the NMT receives level information from a tank gauging device. If the water bottom temperature shall be excluded from the measurement, the water level value is used to exclude the temperature elements which are submerged in water.

Read access	Operator
Write access	Maintenance

*"Element setup" submenu***Navigation**

Expert → Input/output → HART devices → HART Device(s)
→ NMT dev. config → Element setup

Select element**Navigation**

Expert → Input/output → HART devices → HART Device(s) → NMT dev. config
→ Element setup → Select element (14734)

Description

Chooses the temperature element to be configured manually.

User entry

1 to 24

Factory setting

1

Additional information

Read access	Operator
Write access	Maintenance

Zero adjust**Navigation**

Expert → Input/output → HART devices → HART Device(s) → NMT dev. config
→ Element setup → Zero adjust (14735)

Description

Adjusts the offset of the selected temperature element.

User interface

Signed floating-point number

Factory setting

0 None

Additional information

Read access	Operator
Write access	Service

Element temperature

Navigation Expert → Input/output → HART devices → HART Device(s) → NMT dev. config → Element setup → Element temp. (14737)

Description Shows the temperature of the element.

Additional information

Read access	Operator
Write access	-

Element position



Navigation Expert → Input/output → HART devices → HART Device(s) → NMT dev. config → Element setup → Element position (14738)

Description Shows the position of the temperature element.

User interface Signed floating-point number

Factory setting 0 mm

Additional information

Read access	Operator
Write access	Service

"NMT device config" submenu

This submenu is only present if the connected HART device is a Prothermo NMT8x.

Navigation Expert → Input/output → HART devices → HART Device(s) → NMT dev. config

► NMT device config	
Configure device?	→ 134
Total no. element	→ 134
Bottom point	→ 135
No element in phase	→ 135
Water bottom level offset	→ 135

Update water level	→ 136
▶ Element setup	→ 136
Select element	→ 136
Zero adjust	→ 137
Element temperature	→ 137
Element position	→ 137

Configure device?**Navigation**

Expert → Input/output → HART devices → HART Device(s) → NMT dev. config
→ Config. device? (14728)

Description

Enable NMT device configuration.

Selection

- No
- Yes

Factory setting

No

Additional information**Meaning of the options**

- **No**
Not configurable
- **Yes**
Configurable

Read access	Operator
Write access	Maintenance

Total no. element**Navigation**

Expert → Input/output → HART devices → HART Device(s) → NMT dev. config
→ Total elements (14730)

Description

Shows the total amount of configurable temperature elements.

Additional information

Read access	Operator
Write access	-

Bottom point

Navigation Expert → Input/output → HART devices → HART Device(s) → NMT dev. config → Bottom point (14729)

Description Shows the bottom clearance from the end of temperature probe or WB probe.

User entry Signed floating-point number

Factory setting 0 mm

Additional information

Read access	Operator
Write access	Maintenance

No element in phase

Navigation Expert → Input/output → HART devices → HART Device(s) → NMT dev. config → No elm. in phase (14756)

Selection

- Alarm
- Warning
- Logbook entry only

Factory setting Alarm

Additional information

Read access	Operator
Write access	Operator

Water bottom level offset

Navigation Expert → Input/output → HART devices → HART Device(s) → NMT dev. config → WB level offset (14757)

User entry Signed floating-point number

Factory setting 0 mm

Additional information

Read access	Operator
Write access	Operator

Update water level**Navigation**

Expert → Input/output → HART devices → HART Device(s) → NMT dev. config
→ Water level upd. (14751)

Description

Select if water level value is transferred to NMT or not.

Selection

- Enabled
- Disabled

Factory setting

Disabled

Additional information

- Enabled: Water level value is transferred
- Disabled: Water level value is **not** transferred

The NMT delivers the average liquid temperature value in a tank by picking up the value of all temperature elements which are covered by liquid and calculating the average value. To select the submerged temperature elements, the NMT receives level information from a tank gauging device. If the water bottom temperature shall be excluded from the measurement, the water level value is used to exclude the temperature elements which are submerged in water.

Read access	Operator
Write access	Maintenance

*"Element setup" submenu***Navigation**

Expert → Input/output → HART devices → HART Device(s)
→ NMT dev. config → Element setup

► **Element setup**

Select element	→ 136
Zero adjust	→ 137
Element temperature	→ 137
Element position	→ 137

Select element**Navigation**

Expert → Input/output → HART devices → HART Device(s) → NMT dev. config
→ Element setup → Select element (14734)

Description

Chooses the temperature element to be configured manually.

User entry 1 to 24

Factory setting 1

Additional information

Read access	Operator
Write access	Maintenance

Zero adjust



Navigation Expert → Input/output → HART devices → HART Device(s) → NMT dev. config
→ Element setup → Zero adjust (14759)

User interface Signed floating-point number

Factory setting 0 °C

Additional information

Read access	Operator
Write access	Maintenance

Element temperature



Navigation Expert → Input/output → HART devices → HART Device(s) → NMT dev. config
→ Element setup → Element temp. (14737)

Description Shows the temperature of the element.

Additional information

Read access	Operator
Write access	-

Element position



Navigation Expert → Input/output → HART devices → HART Device(s) → NMT dev. config
→ Element setup → Element position (14738)

Description Shows the position of the temperature element.

User interface Signed floating-point number

Factory setting 0 mm

Additional information

Read access	Operator
Write access	Service

"Forget device" wizard

 This submenu is only available if there is at least one unlocked device at the bus.

Navigation

 Expert → Input/output → HART devices → Forget device
Forget device**Navigation**
 Expert → Input/output → HART devices → Forget device → Forget device
Description

With this function an offline device can be deleted from the device list.

Selection

- HART Device 1 *
- HART Device 2 *
- HART Device 3 *
- HART Device 4 *
- HART Device 5 *
- HART Device 6 *
- HART Device 7 *
- HART Device 8 *
- HART Device 9 *
- HART Device 10 *
- HART Device 11 *
- HART Device 12 *
- HART Device 13 *
- HART Device 14 *
- HART Device 15 *
- None

Factory setting


None

Additional information

Read access	Operator
Write access	Maintenance

HART Bus interface

Navigation

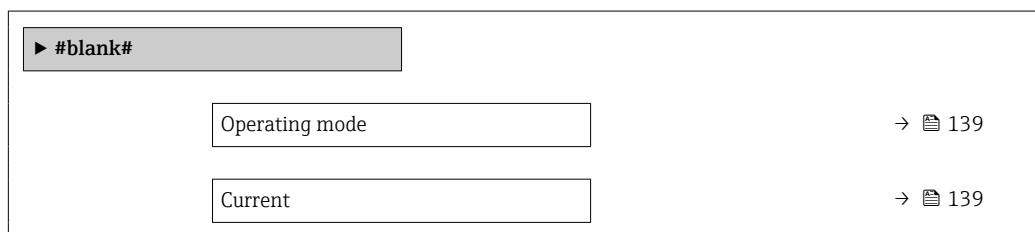 Expert → Input/output → HART devices → #blank#


* Visibility depends on order options or device settings

Operating mode

Navigation  Expert → Input/output → HART devices → #blank# → Operating mode (14453)

Description Shows the operation mode of this HART bus.

User interface

- None
- Disable
- HART master
- HART slave +4..20mA output
- HART tunnel

Factory setting None

Additional information	Read access	Operator
	Write access	-

Current

Navigation  Expert → Input/output → HART devices → #blank# → Current (14457)

Description Shows the actual current on this HART bus.


User interface 0 to 100 000 mA

Factory setting 0 mA

Additional information	Read access	Operator
	Write access	-

3.3.2 "Analog IP" submenu

i There is an **Analog IP** submenu (→ 140) for each Analog I/O module of the device. This submenu refers to terminals 4 to 8 of this module (the analog input). They are primarily used to connect an RTD. For terminals 1 to 3 (analog input or output) refer to → 149.

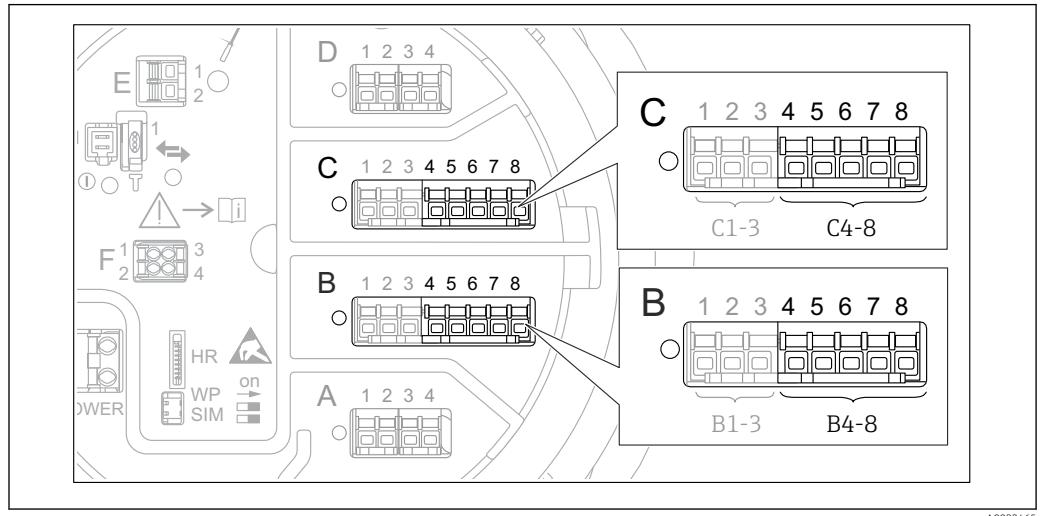

A0032465

12 Terminals for the "Analog IP" submenu (→ 140) ("B4-8" or "C4-8", respectively)

Navigation

Expert → Input/output → Analog IP

▶ Analog IP	
Operating mode	→ 141
RTD type	→ 141
Ohms offset	→ 142
Thermocouple type	→ 142
RTD connection type	→ 143
Process value	→ 143
Process variable	→ 143
0 % value	→ 144
100 % value	→ 144
Input value percent	→ 144
Input value	→ 145
Temperature offset after conversion	→ 145

Minimum probe temperature	→ 145
Maximum probe temperature	→ 146
Probe position	→ 146
Calibration type AIP	→ 147
Active calibration	→ 147
Damping factor	→ 147
Gauge current	→ 148

Operating mode

**Navigation**

Expert → Input/output → Analog IP → Operating mode (14014)

Description

Defines the operating mode of the analog input.

Selection

- Disabled
- RTD temperature input
- Gauge power supply

Factory setting

Disabled

Additional information

Read access	Operator
Write access	Maintenance

RTD type

**Navigation**

Expert → Input/output → Analog IP → RTD type (14021)

Prerequisite**Operating mode (→ 141) = RTD temperature input****Description**

Defines the type of the connected RTD.

Selection

- Cu50 (w=1.428, GOST)
- Cu53 (w=1.426, GOST)
- Cu90; 0°C (w=1.4274, GOST)
- Cu100; 25°C (w=1.4274, GOST)
- Cu100; 0°C(w=1.4274, GOST)
- Pt46 (w=1.391, GOST)
- Pt50 (w=1.391, GOST)
- Pt100(385) (a=0.00385, IEC751)
- Pt100(389) (a=0.00389, Canadian)
- Pt100(391) (a=0.003916, JIS1604)

- Pt100 (w=1.391, GOST)
- Pt500(385) (a=0.00385, IEC751)
- Pt1000(385) (a=0.00385, IEC751)
- Ni100(617) (a=0.00617, DIN43760)
- Ni120(672) (a=0.00672, DIN43760)
- Ni1000(617) (a=0.00617, DIN43760)

Factory setting Pt100(385) (a=0.00385, IEC751)

Additional information

Read access	Operator
Write access	Maintenance

Ohms offset



Navigation Expert → Input/output → Analog IP → Ohms offset (14026)

Prerequisite

Operating mode (→ 141) = RTD temperature input

Description

Defines a offset for the resistance.

This value is added to the measured resistance before the calculation of the temperature.

User entry

-10.0 to 10.0 Ohm

Factory setting

0 Ohm

Additional information

The value entered in this parameter is added to the measured resistance before the calculation of the temperature.

Read access	Operator
Write access	Maintenance

Thermocouple type



Navigation Expert → Input/output → Analog IP → Thermocouple typ (14008)

Description

Defines the type of the connected thermocouple.

Selection

- N type
- B type
- C type
- D type
- J type
- K type
- L type
- L GOST type
- R type
- S type
- T type
- U type

Factory setting N type

RTD connection type



Navigation Expert → Input/output → Analog IP → RTD connect type (14022)

Prerequisite **Operating mode (→ 141) = RTD temperature input**

Description Defines the connection type of the RTD.

Selection

- 4 wire RTD connection
- 2 wire RTD connection
- 3 wire RTD connection

Factory setting 4 wire RTD connection

Additional information

Read access	Operator
Write access	Maintenance

Process value

Navigation Expert → Input/output → Analog IP → Process value (14003)

Prerequisite **Operating mode (→ 141) ≠ Disabled**

Description Shows the measured value received via the analog input.

Additional information

Read access	Operator
Write access	-

Process variable



Navigation Expert → Input/output → Analog IP → Process variable (14016)

Prerequisite **Operating mode (→ 141) ≠ RTD temperature input**

Description Determines type of measured value.

Selection

- Level linearized
- Temperature
- Pressure
- Density

Factory setting Level linearized

Additional information

Read access	Operator
Write access	Maintenance

0 % value**Navigation**

Expert → Input/output → Analog IP → 0 % value (14001)

Prerequisite

Operating mode (→ 141) = 4..20mA input

Description

Defines the value represented by a current of 4mA.

User entry

Signed floating-point number

Factory setting

0 mm

Additional information

Read access	Operator
Write access	Maintenance

100 % value**Navigation**

Expert → Input/output → Analog IP → 100 % value (14013)

Prerequisite

Operating mode (→ 141) = 4..20mA input

Description

Defines the value represented by a current of 20mA.

User entry

Signed floating-point number

Factory setting

0 mm

Additional information

Read access	Operator
Write access	Maintenance

Input value percent**Navigation**

Expert → Input/output → Analog IP → Input value [%] (14002)

Prerequisite

Operating mode (→ 141) = 4..20mA input

Description

Shows the input value in percent.

0% corresponds to 4 mA.

100% corresponds to 20 mA.

Additional information

- 0% corresponds to 4 mA
- 100% corresponds to 20 mA

Read access	Operator
Write access	-

Input value**Navigation**

Expert → Input/output → Analog IP → Input value (14015)

Prerequisite

Operating mode (→ 141) ≠ Disabled

Description

Shows the value received via the analog input.

Additional information

Read access	Operator
Write access	-

Temperature offset after conversion**Navigation**

Expert → Input/output → Analog IP → Temp. offset (14025)

Prerequisite

Operating mode (→ 141) = RTD temperature input

Description

Defines an offset for the measured temperature.
The offset is applied after the resistance of the RTD has been converted to a temperature.

User entry

-20 to 20 °C

Factory setting

0 °C

Additional information

The offset defined in this parameter is applied after the resistance of the RTD has been converted to a temperature.

Read access	Operator
Write access	Maintenance

Minimum probe temperature**Navigation**

Expert → Input/output → Analog IP → Min. probe temp (14010)

Prerequisite

Operating mode (→ 141) = RTD temperature input

Description

Minimum approved temperature of the connected probe.
If the temperature falls below this value, the W&M status will be "invalid".

User entry -213 to 927 °C

Factory setting -100 °C

Additional information

Read access	Operator
Write access	Maintenance

Maximum probe temperature



Navigation Expert → Input/output → Analog IP → Max. probe temp (14011)

Prerequisite **Operating mode (→ 141) = RTD temperature input**

Description Maximum approved temperature of the connected probe.
If the temperature rises above this value, the W&M status will be "invalid".

User entry -213 to 927 °C

Factory setting 250 °C

Additional information

Read access	Operator
Write access	Maintenance

Probe position



Navigation Expert → Input/output → Analog IP → Probe position (14009)

Prerequisite **Operating mode (→ 141) = RTD temperature input**

Description Position of the temperature probe, measured from zero position (tank bottom or datum plate). This parameter, in conjunction with the measured level, determines whether the temperature probe is still covered by the product. If this is no longer the case, the status of the temperature value will be "invalid".

User entry -5 000 to 30 000 mm

Factory setting 5 000 mm

Additional information

Read access	Operator
Write access	Maintenance

Calibration type AIP

**Navigation**

Expert → Input/output → Analog IP → Cal type AIP (14018)

Prerequisite

Operating mode (→ 141) ≠ Disabled

Description

Select calibration state of the analog input or output.

Selection

- User calibration
- Factory calibration

Factory setting

Factory calibration

Additional information**Meaning of the options****Not calibrated**

This is a display option only. It can not be selected. It is shown if the analog input is not in a calibrated state.

User calibration

Activates a user calibration. The user calibration itself is defined in the **User calibration wizard**.

Factory calibration

Activates the factory calibration which is permanently stored in the device.

Read access	Operator
Write access	Maintenance

Active calibration

**Navigation**

Expert → Input/output → Analog IP → Act. calibration (14012)

Prerequisite

Operating mode (→ 141) ≠ Disabled

Description

Shows calibration state of the analog input.

Additional information

Read access	Operator
Write access	-

Damping factor

**Navigation**

Expert → Input/output → Analog IP → Damping factor (14004)

Prerequisite

Operating mode (→ 141) ≠ Disabled

Description

Defines the damping constant (in seconds).

User entry

0 to 999.9 s

Factory setting 0 s

Additional information

Read access	Operator
Write access	Maintenance

Gauge current

Navigation   Expert → Input/output → Analog IP → Gauge current (14027)

Prerequisite **Operating mode (→  141) = Gauge power supply**


Description Shows the current on the power supply line for the connected device.

Additional information

Read access	Operator
Write access	-

3.3.3 "Analog I/O" submenu

i There is a **Analog I/O** submenu (→ 149) for each Analog I/O module of the device.
This submenu refers to terminals 1 to 3 of this module (an analog input or output).
For terminals 4 to 8 (always an analog input) refer to → 140.

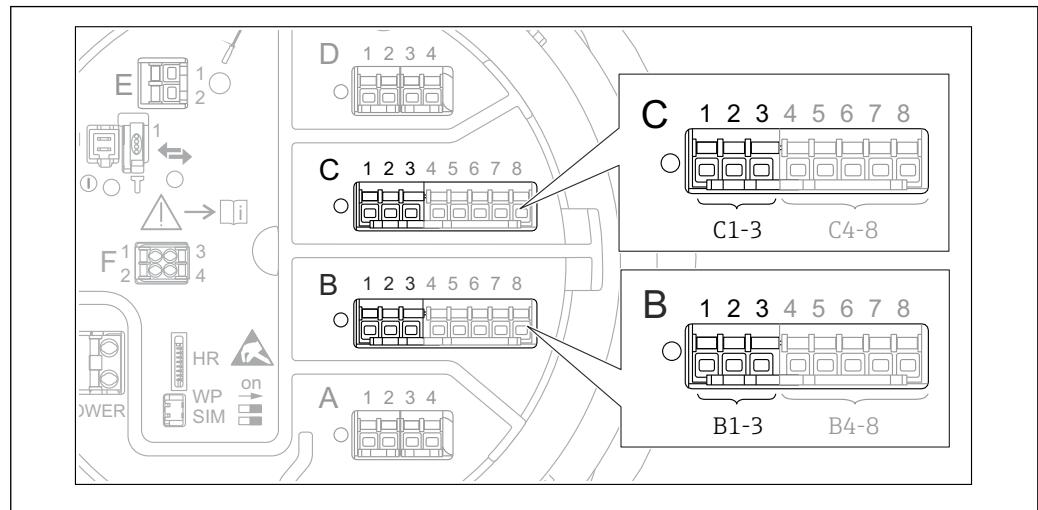

13 Terminals for the "Analog I/O" submenu (→ 149) ("B1-3" or "C1-3", respectively)

Navigation

Expert → Input/output → Analog I/O

► Analog I/O	
Operating mode	→ 150
Current span	→ 151
Fixed current	→ 152
Analog input source	→ 152
Failure mode	→ 153
Error value	→ 154
Output out of range	→ 154
Error on event	→ 154
Input value	→ 155
0 % value	→ 155
100 % value	→ 155
Input value %	→ 156

Output value	→ 156
Readback value	→ 156
Feedback threshold	→ 157
Process variable	→ 157
Analog input 0% value	→ 157
Analog input 100% value	→ 158
Error event type	→ 158
Process value	→ 158
Input value in mA	→ 159
Input value percent	→ 159
Damping factor	→ 159
Calibration	→ 160
Active calibration	→ 160
Used for SIL/WHG	→ 160

Operating mode**Navigation**

Expert → Input/output → Analog I/O → Operating mode (13958)

Description

Defines the operating mode of the analog I/O module.

Selection

- Disabled
- 4..20mA input
- HART master+4..20mA input
- HART master
- 4..20mA output
- HART slave +4..20mA output

Factory setting

Disabled

Additional information

Read access	Operator
Write access	Maintenance

Meaning of the options

Operating mode (→ 150)	Direction of signal	Type of signal
Disabled	-	-
4..20mA input	Input from 1 external device	Analog (4...20mA)
HART master+4..20mA input	Input from 1 external device	■ Analog (4...20mA) ■ HART
HART master	Input from up to 6 external devices	HART
4..20mA output	Output to higher-level unit	Analog (4...20mA)
HART slave +4..20mA output	Output to higher-level unit	■ Analog (4...20mA) ■ HART

Depending on the terminals used, the Analog I/O module is used in the passive or active mode.

Mode	Terminals of the I/O module		
	1	2	3
Passive (power supply from external source)	-	+	not used
Active (power supplied by the device itself)	not used	-	+



In the active mode the following conditions must be met:

- Maximum current consumption of the connected HART devices: 24 mA (i.e. 4 mA per device if 6 devices are connected).
- Output voltage of the Ex-d module: 17.0 V@4 mA to 10.5 V@22 mA
- Output voltage of the Ex-ia module: 18.5 V@4 mA to 12.5 V@22 mA

Current span**Navigation**

Expert → Input/output → Analog I/O → Current span (13987)

Prerequisite

Operating mode parameter (→ 150) ≠ **Disabled** option or **HART master** option

Description

Defines the current range for the measured value transmission.

Selection

- 4...20 mA NE (3.8...20.5 mA)
- 4...20 mA US (3.9...20.8 mA)
- 4...20 mA (4...20.5 mA)
- Fixed value ^{*}

Factory setting

4...20 mA NE (3.8...20.5 mA)

Additional information

Read access	Operator
Write access	Maintenance

* Visibility depends on order options or device settings

Meaning of the options

Option	Current range for process variable	Minimum value	Lower alarm signal level	Upper alarm signal level	Maximum value
4...20 mA (4...20.5 mA)	4 to 20.5 mA	3.5 mA	< 3.6 mA	> 21.95 mA	22.6 mA
4...20 mA NE (3.8...20.5 mA)	3.8 to 20.5 mA	3.5 mA	< 3.6 mA	> 21.95 mA	22.6 mA
4...20 mA US (3.9...20.8 mA)	3.9 to 20.8 mA	3.5 mA	< 3.6 mA	> 21.95 mA	22.0 mA
Fixed current	Constant current, defined in the Fixed current parameter (→ 152).				

 In the case of an error, the output current assumes the value defined in the **Failure mode** parameter (→ 153).

Fixed current**Navigation**

 Expert → Input/output → Analog I/O → Fixed current (13989)

Prerequisite

Current span (→ 151) = **Fixed current**

Description

Defines the fixed output current.

User entry

4 to 22.5 mA

Factory setting

4 mA

Additional information

Read access	Operator
Write access	Maintenance

Analog input source**Navigation**

 Expert → Input/output → Analog I/O → Analog source (13974)

Prerequisite

- **Operating mode** (→ 150) = 4..20mA output or HART slave +4..20mA output
- **Current span** (→ 151) ≠ **Fixed current**

Description

Defines the process variable transmitted via the AIO.

Selection

- None
- Tank level
- Tank level %
- Tank ullage
- Tank ullage %
- Measured level
- Distance
- Displacer position
- Water level

- Upper interface level
- Lower interface level
- Bottom level
- Tank reference height
- Liquid temperature
- Vapor temperature
- Air temperature
- Observed density value
- Average profile density ³⁾
- Upper density
- Middle density
- Lower density
- P1 (bottom)
- P2 (middle)
- P3 (top)
- GP 1 ... 4 value
- AIO B1-3 value ³⁾
- AIO B1-3 value mA ³⁾
- AIO C1-3 value ³⁾
- AIO C1-3 value mA ³⁾
- AIP B4-8 value ³⁾
- AIP C4-8 value ³⁾
- Element temperature 1 ... 24 ³⁾
- HART device 1...15 PV ³⁾
- HART device 1 ... 15 PV mA ³⁾
- HART device 1 ... 15 PV % ³⁾
- HART device 1 ... 15 SV ³⁾
- HART device 1 ... 15 TV ³⁾
- HART device 1 ... 15 QV ³⁾

Factory setting Tank level

Additional information

Read access	Operator
Write access	Maintenance

Failure mode



Navigation

Diagram: Expert → Input/output → Analog I/O → Failure mode (13988)

Prerequisite

Operating mode (→ [Diagram 150](#)) = 4..20mA output or HART slave +4..20mA output

Description

Defines the output behavior in case of an error.

Selection

- Min.
- Max.
- Last valid value
- Actual value
- Defined value

Factory setting

Max.

3) Visibility depends on order options or device settings

Additional information

Read access	Operator
Write access	Maintenance

Error value**Navigation**

Expert → Input/output → Analog I/O → Error value (13972)

Prerequisite

Failure mode (→ 153) = Defined value

Description

Defines the output value in case of an error.

User entry

3.4 to 22.6 mA

Factory setting

22 mA

Additional information

Read access	Operator
Write access	Maintenance

Output out of range**Navigation**

Expert → Input/output → Analog I/O → Output out range (13971)

Prerequisite

Operating mode (→ 150) = 4..20mA output or HART slave +4..20mA output

Description

Behavior of current output if the value is out of allowed range.

Selection

- Last valid value
- Alarm
- None

Factory setting

Alarm

Additional information

Read access	Operator
Write access	Maintenance

Error on event**Navigation**

Expert → Input/output → Analog I/O → Error on event (13967)

Prerequisite

Operating mode (→ 150) = 4..20mA output or HART slave +4..20mA output

Description

Defines to which type of event (alarm or warning) the output responds.

Selection	<ul style="list-style-type: none"> ■ Output related error ■ Any error ■ Any error or warning 				
Factory setting	Output related error				
Additional information	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 2px;">Read access</td> <td style="padding: 2px;">Operator</td> </tr> <tr> <td style="padding: 2px;">Write access</td> <td style="padding: 2px;">Maintenance</td> </tr> </table>	Read access	Operator	Write access	Maintenance
Read access	Operator				
Write access	Maintenance				

Input value

Navigation	Expert → Input/output → Analog I/O → Input value (13979)				
Prerequisite	<ul style="list-style-type: none"> ■ Operating mode (→ 150) = 4..20mA output or HART slave +4..20mA output ■ Current span (→ 151) ≠ Fixed current 				
Description	Shows the input value of the analog I/O module.				
Additional information	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 2px;">Read access</td> <td style="padding: 2px;">Operator</td> </tr> <tr> <td style="padding: 2px;">Write access</td> <td style="padding: 2px;">-</td> </tr> </table>	Read access	Operator	Write access	-
Read access	Operator				
Write access	-				

0 % value



Navigation	Expert → Input/output → Analog I/O → 0 % value (13954)				
Prerequisite	<ul style="list-style-type: none"> ■ Operating mode (→ 150) = 4..20mA output or HART slave +4..20mA output ■ Current span (→ 151) ≠ Fixed current 				
Description	Value corresponding to an output current of 0% (4mA).				
User entry	Signed floating-point number				
Factory setting	0 Unitless				
Additional information	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 2px;">Read access</td> <td style="padding: 2px;">Operator</td> </tr> <tr> <td style="padding: 2px;">Write access</td> <td style="padding: 2px;">Maintenance</td> </tr> </table>	Read access	Operator	Write access	Maintenance
Read access	Operator				
Write access	Maintenance				

100 % value



Navigation	Expert → Input/output → Analog I/O → 100 % value (13968)
Prerequisite	<ul style="list-style-type: none"> ■ Operating mode (→ 150) = 4..20mA output or HART slave +4..20mA output ■ Current span (→ 151) ≠ Fixed current

Description Value corresponding to an output current of 100% (20mA).

User entry Signed floating-point number

Factory setting 0 Unitless

Additional information

Read access	Operator
Write access	Maintenance

Input value %

Navigation Expert → Input/output → Analog I/O → Input value % (13955)

Prerequisite

- **Operating mode** (→ 150) = 4..20mA output or HART slave +4..20mA output
- **Current span** (→ 151) ≠ Fixed current

Description Shows the output value as a percentage of the complete 4...20mA range.

Additional information

Read access	Operator
Write access	-

Output value

Navigation Expert → Input/output → Analog I/O → Output value (13969)

Operating mode (→ 150) = 4..20mA output or HART slave +4..20mA output

Description Shows the output value in mA.

Additional information

Read access	Operator
Write access	-

Readback value

Navigation Expert → Input/output → Analog I/O → Readback value (13957)

Operating mode (→ 150) = 4..20mA output or HART slave +4..20mA output

Description Shows the measured (feedback) current at the output.

User interface 0 to 65 535 µA

Factory setting 0 µA

Additional information

Read access	Operator
Write access	-

Feedback threshold**Navigation**

Diagram: Expert → Input/output → Analog I/O → Feedback thresh. (13956)

Prerequisite

Operating mode (→ Diagram 150) = 4..20mA output or HART slave +4..20mA output

Description

Shows the feedback threshold.

Additional information

Read access	Operator
Write access	-

Process variable**Navigation**

Diagram: Expert → Input/output → Analog I/O → Process variable (13964)

Prerequisite

Operating mode (→ Diagram 150) = 4..20mA input or HART master+4..20mA input

Description

Defines the type of measuring variable.

Selection

- Level linearized
- Temperature
- Pressure
- Density

Factory setting

Level linearized

Additional information

Read access	Operator
Write access	Maintenance

Analog input 0% value**Navigation**

Diagram: Expert → Input/output → Analog I/O → AI 0% value (13977)

Prerequisite

Operating mode (→ Diagram 150) = 4..20mA input or HART master+4..20mA input

Description

Value corresponding to an input current of 0% (4mA).

User entry

Signed floating-point number

Factory setting

0 mm

Additional information

Read access	Operator
Write access	Maintenance

Analog input 100% value**Navigation**

Diagram: Expert → Input/output → Analog I/O → AI 100% value (13965)

Prerequisite

Operating mode (→ 150) = 4..20mA input or HART master+4..20mA input

Description

Value corresponding to an input current of 100% (20mA).

User entry

Signed floating-point number

Factory setting

0 mm

Additional information

Read access	Operator
Write access	Maintenance

Error event type**Navigation**

Diagram: Expert → Input/output → Analog I/O → Error event type (13953)

Prerequisite

Operating mode (→ 150) ≠ Disabled or HART master

Description

Defines the type of event message (alarm/warning) in case of an error or output out of range in the analog I/O module.

Selection

- None
- Warning
- Alarm

Factory setting

Warning

Additional information

Read access	Operator
Write access	Maintenance

Process value**Navigation**

Diagram: Expert → Input/output → Analog I/O → Process value (13963)

Prerequisite

Operating mode (→ 150) = 4..20mA input or HART master+4..20mA input

Description

Shows the input value scaled to customer units.

Additional information

Read access	Operator
Write access	-

Input value in mA**Navigation**

Diagram: Expert → Input/output → Analog I/O → Input val. in mA (13970)

Prerequisite

Operating mode (→ 150) = 4..20mA input or HART master+4..20mA input

Description

Shows the input value in mA.

Additional information

Read access	Operator
Write access	-

Input value percent**Navigation**

Diagram: Expert → Input/output → Analog I/O → Input value [%] (13978)

Prerequisite

Operating mode (→ 150) = 4..20mA input or HART master+4..20mA input

Description

Shows the input value as a percentage of the complete 4...20mA current range.

Additional information

Read access	Operator
Write access	-

Damping factor**Navigation**

Diagram: Expert → Input/output → Analog I/O → Damping factor (13951)

Prerequisite

Operating mode (→ 150) ≠ Disabled or HART master

Description

Defines the damping constant (in seconds).

User entry

0 to 999.9 s

Factory setting

0 s

Additional information

Read access	Operator
Write access	Maintenance

Calibration**Navigation**

Expert → Input/output → Analog I/O → Calibration (13966)

Prerequisite

Operating mode (→ 150) ≠ Disabled or HART master

Description

Select calibration state of the analog input or output.

Selection

- User calibration
- Factory calibration

Factory setting

Factory calibration

Additional information

Read access	Operator
Write access	Maintenance

Active calibration**Navigation**

Expert → Input/output → Analog I/O → Act. calibration (13981)

Prerequisite

Operating mode (→ 150) ≠ Disabled or HART master

Description

Indicates the calibration status of the Analog I/O module.

Additional information**Meaning of the options**

- **User calibration**
The calibration entered by the user is active.
- **Factory calibration**
The calibration stored permanently in the device is active.

Read access	Operator
Write access	-

Used for SIL/WHG**Navigation**

Expert → Input/output → Analog I/O → Used for SIL/WHG (13980)

Prerequisite

- **Operating mode (→ 150) = 4..20mA output or HART slave +4..20mA output**
- The device has a SIL approval.

Description

Determines whether the discrete I/O module is in SIL/WHG mode.

Selection

- Enabled
- Disabled

Factory setting

Disabled

Additional information

Read access	Operator
Write access	Maintenance

Expected SIL/WHG chain

Navigation Expert → Input/output → Analog I/O → SIL/WHG chain (13952)**Prerequisite**


- **Operating mode (→  150) = 4..20mA output or HART slave +4..20mA output**
- The device has a SIL approval.

Additional information

Read access	Operator
Write access	-

3.3.4 "Digital Xx-x" submenu

- i** In the operating menu, each digital input or output is designated by the respective slot of the terminal compartment and two terminals within this slot. **A1-2**, for example, denotes terminals 1 and 2 of slot **A**. The same is valid for slots **B**, **C** and **D** if they contain a Digital IO module.
- In this document, **Xx-x** designates any of these submenus. The structure of all these submenus is the same.

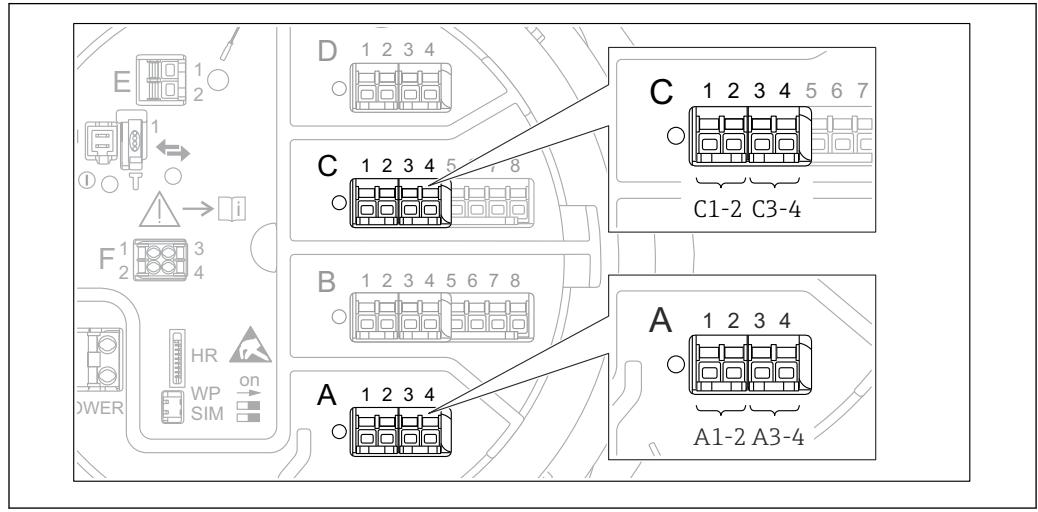

14 Designation of the digital inputs or outputs (examples)

Navigation

Expert → Input/output → Digital Xx-x → Operating mode
(13911)

► Digital Xx-x	
Operating mode	→ 163
Digital input source	→ 163
Input value	→ 164
Contact type	→ 164
Output simulation	→ 165
Output value	→ 166
Readback value	→ 166
Error on event	→ 166
Damping factor	→ 167
Used for SIL/WHG	→ 167

Operating mode**Navigation**

Expert → Input/output → Digital Xx-x → Operating mode (13911)

Description


Defines the operating mode of the discrete I/O module.

Selection

- Disabled
- Output passive
- Input passive
- Input active

Factory setting

Disabled

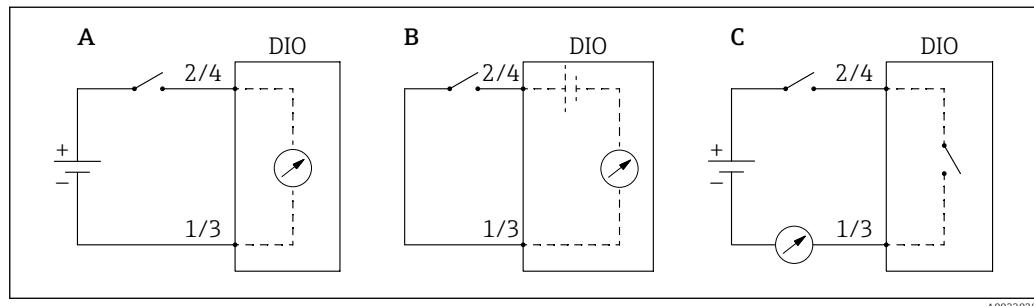Additional information

15 Operating modes of the Digital I/O module

- A Input passive
B Input active
C Output passive

Read access	Operator
Write access	Maintenance

Digital input source**Navigation**

Expert → Input/output → Digital Xx-x → Digital source (13907)

Prerequisite

Operating mode (→ 163) = Output passive

Description

Defines which device state is indicated by the digital output.

Selection

- None
- Balance flag
- Alarm x any
- Alarm x High
- Alarm x HighHigh
- Alarm x High or HighHigh
- Alarm x Low
- Alarm x LowLow
- Alarm x Low or LowLow
- Digital Xx-x
- Primary Modbus x
- Secondary Modbus x

Factory setting None

Additional information

Meaning of the options

- **Alarm x any, Alarm x High, Alarm x HighHigh, Alarm x High or HighHigh, Alarm x Low, Alarm x LowLow, Alarm x Low or LowLow**

The digital output indicates if the selected alarm is currently active. The alarms themselves are defined in the **Alarm 1 to 4** submenus.

- **Digital Xx-x⁴⁾**

The digital signal present at the digital input **Xx-x** is passed through to the digital output.

- **Modbus A1-4 Discrete x**

Modbus B1-4 Discrete x

Modbus C1-4 Discrete x

Modbus D1-4 Discrete x

The digital value written by the Modbus Master device to the **Modbus discrete x** parameter⁵⁾ is passed to the digital output. For details refer to Special Documentation SD02066G.

Read access	Operator
Write access	Maintenance

Input value

Navigation

Expert → Input/output → Digital Xx-x → Input value (13901)

Prerequisite

Operating mode (→  163) = "Input passive" option or "Input active" option

Description

Shows the digital input value.

Additional information

Read access	Operator
Write access	-

Contact type



Navigation

Expert → Input/output → Digital Xx-x → Contact type (13912)

Prerequisite

Operating mode (→  163) ≠ Disabled

Description

Determines the switching behavior of the input or output.

Selection

- Normally open
- Normally closed

Factory setting

Normally open

4) Only present if "Operating mode (→  163)" = "Input passive" or "Input active" for the respective Digital I/O module.

5) Expert → Communication → Modbus Xx-x → Modbus discrete x

Additional information

Read access	Operator
Write access	Maintenance

Output simulation**Navigation**

Diagram: Expert → Input/output → Digital Xx-x → Output sim (13909)

Prerequisite

Operating mode (→ 163) = **Output passive**

Description

Sets the output to a specific simulated value.

Selection

- Disable
- Simulating active
- Simulating inactive
- Fault 1
- Fault 2


Factory setting

Disable

Additional information

Read access	Operator
Write access	Maintenance

The digital output consists of two relays connected in series:

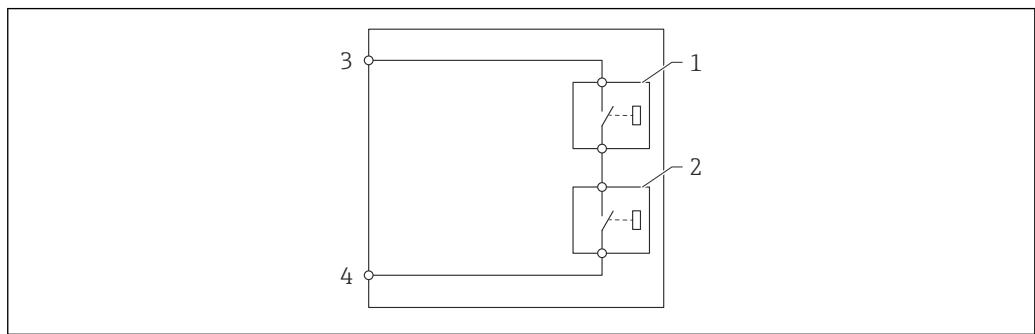

16 The two relays of a digital output

1/2 The relays

3/4 The terminals of the digital output

The switching state of these relays is defined by the **Output simulation** parameter as follows:

Output simulation	State of relay 1	State of relay 2	Expected result on the terminals of the I/O module
Simulating active	Closed	Closed	Closed
Simulating inactive	Open	Open	Open

Output simulation	State of relay 1	State of relay 2	Expected result on the terminals of the I/O module
Fault 1	Closed	Open	Open
Fault 2	Open	Closed	Open

 The **Fault 1** and **Fault 2** options can be used to check the correct switching behavior of the two relays.

Output value

Navigation  Expert → Input/output → Digital Xx-x → Output value (13902)

Prerequisite **Operating mode (→  163) = Output passive**

Description Shows the digital output value.

Additional information

Read access	Operator
Write access	-

Readback value

Navigation  Expert → Input/output → Digital Xx-x → Readback value (13903)

Prerequisite **Operating mode (→  163) = Output passive**

Description Shows the value read back from the output.

Additional information

Read access	Operator
Write access	-

Error on event



Navigation  Expert → Input/output → Digital Xx-x → Error on event (13916)

Prerequisite **Operating mode (→  163) = Output passive**

Description Defines to which type of events (error or warning) the output responds. Choice: only output related or all.

Selection

- Output related error
- Any error
- Any error or warning

Factory setting

Output related error

Additional information

Read access	Operator
Write access	Maintenance

Damping factor

Navigation Expert → Input/output → Digital Xx-x → Damping factor (13904)

Prerequisite **Operating mode (→ 163) ≠ Disabled**

Description Defines the damping constant.

User entry 1 to 10 s

Factory setting 5 s

Additional information

Read access	Operator
Write access	Maintenance

Used for SIL/WHG

Navigation Expert → Input/output → Digital Xx-x → Used for SIL/WHG (13910)

Prerequisite

- **Operating mode (→ 163) = Output passive**
- The device has a SIL certificate.

Description Determines whether the discrete I/O module is in SIL/WHG mode.

Selection

- Enabled
- Disabled

Factory setting Disabled

Additional information

Read access	Operator
Write access	Maintenance

3.3.5 "Digital input mapping" submenu

Navigation

Expert → Input/output → DI mapping

▶ Digital input mapping	
Digital input source 1	→ 168
Digital input source 2	→ 168
Gauge command 0	→ 169
Gauge command 1	→ 170
Gauge command 2	→ 170
Gauge command 3	→ 171

Digital input source 1



Navigation

Expert → Input/output → DI mapping → Digital source 1 (8147)

Description

Selects the source of digital input #1 (for gauge command).

Selection

- None
- Digital A1-2 *
- Digital A3-4 *
- Digital B1-2 *
- Digital B3-4 *
- Digital C1-2 *
- Digital C3-4 *
- Digital D1-2 *
- Digital D3-4 *

Factory setting

None

Additional information

Read access	Operator
Write access	Maintenance

Digital input source 2



Navigation

Expert → Input/output → DI mapping → Digital source 2 (8148)

Description

Selects the source of digital input #2 (for gauge command).

* Visibility depends on order options or device settings

Selection	<ul style="list-style-type: none"> ■ None ■ Digital A1-2 * ■ Digital A3-4 * ■ Digital B1-2 * ■ Digital B3-4 * ■ Digital C1-2 * ■ Digital C3-4 * ■ Digital D1-2 * ■ Digital D3-4 * 				
Factory setting	None				
Additional information	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 2px;">Read access</td> <td style="padding: 2px;">Operator</td> </tr> <tr> <td style="padding: 2px;">Write access</td> <td style="padding: 2px;">Maintenance</td> </tr> </table>	Read access	Operator	Write access	Maintenance
Read access	Operator				
Write access	Maintenance				

Gauge command 0

Navigation	Diagram: Expert → Input/output → DI mapping → Gauge command 0 (8149)
Prerequisite	Digital input source 1 (→ 168) ≠ None
Description	Gauge command assigned to digital input combination 0 (DI2=0, DI1=0).
Selection	<ul style="list-style-type: none"> ■ Stop * ■ Level * ■ Up * ■ Bottom level * ■ Upper I/F level * ■ Lower I/F level * ■ Upper density * ■ Middle density * ■ Lower density * ■ Repeatability * ■ Water dip * ■ Release overtension * ■ Tank profile * ■ Interface profile * ■ Manual profile * ■ Level standby * ■ Offset standby *
Factory setting	Level

Additional information	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 2px;">Read access</td><td style="padding: 2px;">Operator</td></tr> <tr> <td style="padding: 2px;">Write access</td><td style="padding: 2px;">Maintenance</td></tr> </table>	Read access	Operator	Write access	Maintenance
Read access	Operator				
Write access	Maintenance				

* Visibility depends on order options or device settings

Gauge command 1**Navigation**

Expert → Input/output → DI mapping → Gauge command 1 (8150)

Prerequisite

Digital input source 1 (→ 168) ≠ None

Description

Gauge command assigned to digital input combination 1 (DI2=0, DI1=1).

Selection

- Stop *
- Level
- Up *
- Bottom level *
- Upper I/F level *
- Lower I/F level *
- Upper density *
- Middle density *
- Lower density *
- Repeatability *
- Water dip
- Release overtension *
- Tank profile
- Interface profile *
- Manual profile *
- Level standby *
- Offset standby *

Factory setting

Up

Additional information

Read access	Operator
Write access	Maintenance

Gauge command 2**Navigation**

Expert → Input/output → DI mapping → Gauge command 2 (8151)

Prerequisite

- **Digital input source 1** (→ 168) ≠ None
- **Digital input source 2** (→ 168) ≠ None

Description

Gauge command assigned to digital Input combination 2 (DI2=1, DI1=0).

Selection

- Stop *
- Level
- Up *
- Bottom level *
- Upper I/F level *
- Lower I/F level *
- Upper density *
- Middle density *
- Lower density *
- Repeatability *

* Visibility depends on order options or device settings

- Water dip *
- Release overtension *
- Tank profile *
- Interface profile *
- Manual profile *
- Level standby *
- Offset standby *

Factory setting Stop

Additional information

Read access	Operator
Write access	Maintenance

Gauge command 3



Navigation Expert → Input/output → DI mapping → Gauge command 3 (8152)

Prerequisite

- Digital input source 1 (→ 168) ≠ None
- Digital input source 2 (→ 168) ≠ None

Description Gauge command assigned to digital input combination 3 (DI2=1, DI1=1).

- Selection**
- Stop *
 - Level *
 - Up *
 - Bottom level *
 - Upper I/F level *
 - Lower I/F level *
 - Upper density *
 - Middle density *
 - Lower density *
 - Repeatability *
 - Water dip *
 - Release overtension *
 - Tank profile *
 - Interface profile *
 - Manual profile *
 - Level standby *
 - Offset standby *

Factory setting Upper I/F level


Additional information

Read access	Operator
Write access	Maintenance

* Visibility depends on order options or device settings

3.4 "Communication" submenu

This menu contains a submenu for each digital communication interface of the device. The communication interfaces are designated by "X1-4" where "X" specifies the slot in the terminal compartment and "1-4" the terminals within this slot.

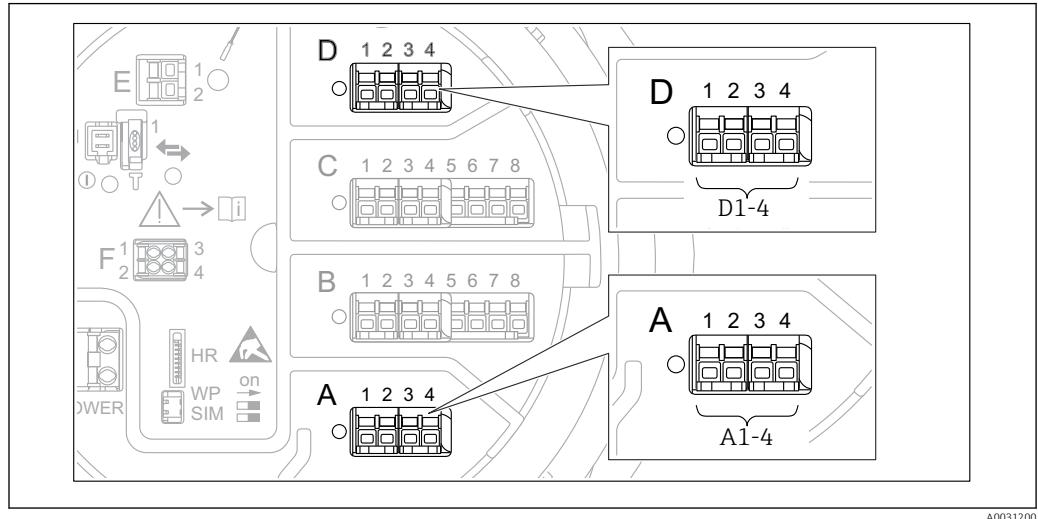

A0031200

■ 17 Designation of the "Modbus" or "V1" modules (examples); depending on the device version these modules may also be in slot B or C.

Navigation

■ ■ Expert → Communication

3.4.1 "Modbus Xx-x", "V1 Xx-x" or "WM550 Xx-x" submenu

This submenu is only present for devices with MODBUS, V1 and/or WM550 communication interface. There is one submenu of this type for each communication interface.

Navigation

Expert → Communication → Modbus Xx-x / V1 Xx-x / WM550 Xx-x

► Modbus Xx-x	
Communication interface protocol	→ 174
Modbus value 1 to 4	→ 174
Modbus discrete 1 to 4	→ 174
► Configuration	→ 175
► Integer conversion	→ 180
► User value source	→ 185
► GP values	→ 186
► Discrete selector	→ 189

► V1 Xx-x	
Communication interface protocol	→ 174
► Configuration	→ 190
► V1 input selector	→ 193

► WM550 Xx-x	
► Configuration	→ 198
► WM550 input selector	→ 200

Communication interface protocol

Navigation

  Expert → Communication → Modbus X1-4 / V1 X1-4 / WM550 X1-4 → Commu I/F protoc (13201)

Description

Shows the type of communication protocol.

Additional information

Read access	Operator
Write access	-

Modbus value 1 to 4

Navigation

  Expert → Communication → Modbus Xx-x → Modbus value 1 to 4 (13206-1 to 4)

Prerequisite

Communication interface protocol (→  174) = MODBUS

Description

Shows the respective floating point value written by the host system.

Additional information

Read access	Operator
Write access	-

 The Modbus interface provides four floating point values which can be written to by the Host system. These values can be linked to specific functions (e.g. providing the air temperature value).

Modbus discrete 1 to 4

Navigation

  Expert → Communication → Modbus Xx-x → Modbus discr. 1 to 4 (13240-1 to 4)

Prerequisite

Communication interface protocol (→  174) = MODBUS

Description

Shows the integer value written by the host-system.

Additional information

Read access	Operator
Write access	-

 The Modbus interface provides four discrete (integer) registers which can be written to by the Host system. These values can be linked to specific functions (e.g. controlling a discrete output).

In the device these values are converted into the following discrete state values:

- Unknown (integer value 0)
- Inactive (integer value 1)
- Active (integer value 2)
- Invalid (integer value >= 3)

"Configuration" submenu (Modbus)

Only visible for devices with a Modbus I/O module.

Navigation

[Diagram] Expert → Communication → Modbus Xx-x → Configuration

► Configuration	
Baudrate	→ [Diagram] 175
Parity	→ [Diagram] 176
Modbus address	→ [Diagram] 176
Float swap mode	→ [Diagram] 176
Invalid data	→ [Diagram] 177
Word type	→ [Diagram] 177
CRC seed	→ [Diagram] 178
Old TSM mode	→ [Diagram] 178
Bus termination	→ [Diagram] 178
Compatibility mode	→ [Diagram] 179

Baudrate**Navigation**

[Diagram] Expert → Communication → Modbus X1-4 → Configuration → Baudrate (13203)

Prerequisite**Communication interface protocol (→ [Diagram] 174) = MODBUS****Description**

Defines the baud rate of the communication.

Selection

- 600 BAUD
- 1200 BAUD
- 2400 BAUD
- 4800 BAUD
- 9600 BAUD *
- 19200 BAUD *

Factory setting

9600 BAUD

* Visibility depends on order options or device settings

Additional information

Read access	Operator
Write access	Maintenance

Parity**Navigation**

Diagram: Expert → Communication → Modbus X1-4 → Configuration → Parity (13204)

Prerequisite

Communication interface protocol (→ [174](#)) = MODBUS

Description

Defines the parity of the Modbus communication.

Selection

- Odd
- Even
- None / 1 stop bit
- None / 2 stop bits

Factory setting

None / 1 stop bit

Additional information

Read access	Operator
Write access	Maintenance

Modbus address**Navigation**

Diagram: Expert → Communication → Modbus X1-4 → Configuration → Modbus address (13205)

Prerequisite

Communication interface protocol (→ [174](#)) = MODBUS

Description

Defines the Modbus address of the device.

User entry

1 to 247

Factory setting

1

Additional information

Read access	Operator
Write access	Maintenance

Float swap mode**Navigation**

Diagram: Expert → Communication → Modbus X1-4 → Configuration → Float swap mode (13232)

Prerequisite

Communication interface protocol (→ [174](#)) = MODBUS

Description Sets the format of how the floating point value is transferred on Modbus.

Selection

- Normal 3-2-1-0
- Swap 0-1-2-3
- WW Swap 1-0-3-2
- WW Swap 2-3-0-1

Factory setting Swap 0-1-2-3

Additional information

Read access	Operator
Write access	Maintenance

Invalid data



Navigation Expert → Communication → Modbus Xx-x → Configuration → Invalid data (13243)

Prerequisite **Communication interface protocol (→ 174) = MODBUS**

Description Sets what byte is sent in a message that contains invalid data.

Selection

- 0x00
- 0xFF

Factory setting 0x00

Additional information

Read access	Operator
Write access	Maintenance

Word type



Navigation Expert → Communication → Modbus Xx-x → Configuration → Word type (13208)

Prerequisite **Communication interface protocol (→ 174) = MODBUS**

Description Selects if the integer value has the range 0 to +65535 or -32768 to +32767.

Selection

- Unsigned
- Signed

Factory setting Unsigned

Additional information

Read access	Operator
Write access	Maintenance

CRC seed**Navigation**

Expert → Communication → Modbus Xx-x → Configuration → CRC seed (13248)

Prerequisite

Communication interface protocol (→ [174](#)) = MODBUS

Description

CRC seed value selection used for all communication CRC calculations.

Selection

- 0x0000
- 0xFFFF

Factory setting

0xFFFF

Additional information

Read access	Operator
Write access	Maintenance

Old TSM mode**Navigation**

Expert → Communication → Modbus Xx-x → Configuration → Old TSM mode (13213)

Prerequisite

Communication interface protocol (→ [174](#)) = MODBUS

Description

Selects the type of value available at the NRF590 SW vers.1 compatible modbus map (Address 3000-3195) addresses.

Selection

- Float values
- Integer values

Factory setting

Float values

Additional information

Read access	Operator
Write access	Maintenance

Bus termination**Navigation**

Expert → Communication → Modbus X1-4 → Configuration → Bus termination (13249)

Prerequisite

Communication interface protocol (→ [174](#)) = MODBUS

Description

Activates or deactivates the bus termination at the device. Should only be activated on the last device in a loop.

Selection

- Off
- On

Factory setting Off

Additional information

Read access	Operator
Write access	Maintenance

Compatibility mode



Navigation Expert → Communication → Modbus Xx-x → Configuration → Comp. mode (13281)

Description Defines the compatibility mode.

Selection

- Nxx5xx
- Nxx8x

Factory setting Nxx8x

Additional information In **NMS5x** mode: Only values which have also existed on NMS5x Gauge status are output on the bus.

In **NMS8x** mode: All Gauge status are available at this parameter.

Read access	Operator
Write access	Maintenance

"Integer conversion" submenu

 Only visible for devices with a Modbus I/O module.

Navigation

  Expert → Communication → Modbus Xx-x → Integer convers

 Integer conversion	
Level 0%	→  180
Level 100%	→  181
Temperature 0%	→  181
Temperature 100%	→  181
Pressure 0%	→  182
Pressure 100%	→  182
Density 0%	→  182
Density 100%	→  183
User 0%	→  183
User 100%	→  183
Percent 0%	→  184
Percent 100%	→  184

Level 0%**Navigation**

  Expert → Communication → Modbus Xx-x → Integer convers → Level 0% (13214)

Description

Defines the level that represents 0% on the integer value scale.

User entry

Signed floating-point number

Factory setting

0.00 mm

Additional information

Read access	Operator
Write access	Maintenance

Level 100%

Navigation Expert → Communication → Modbus Xx-x → Integer convers → Level 100% (13250)

Description Defines the level that represents 100% on the integer value scale.

User entry Signed floating-point number

Factory setting 30.0 mm

Additional information

Read access	Operator
Write access	Maintenance

Temperature 0%

Navigation Expert → Communication → Modbus Xx-x → Integer convers → Temperature 0% (13215)

Description Defines the temperature that represents 0% on the integer value scale.

User entry Signed floating-point number

Factory setting 233.15 °C

Additional information

Read access	Operator
Write access	Maintenance

Temperature 100%

Navigation Expert → Communication → Modbus Xx-x → Integer convers → Temperature 100% (13216)

Description Defines the temperature that represents 100% on the integer value scale.

User entry Signed floating-point number

Factory setting 373.15 °C

Additional information

Read access	Operator
Write access	Maintenance

Pressure 0%**Navigation**

Diagram: Expert → Communication → Modbus Xx-x → Integer convers → Pressure 0% (13217)

Description

Defines the pressure that represents 0% on the integer value scale.

User entry

Signed floating-point number

Factory setting

0 bar

Additional information

Read access	Operator
Write access	Maintenance

Pressure 100%**Navigation**

Diagram: Expert → Communication → Modbus Xx-x → Integer convers → Pressure 100% (13251)

Description

Defines the pressure that represents 100% on the integer value scale.

User entry

Signed floating-point number

Factory setting

25 000 bar

Additional information

Read access	Operator
Write access	Maintenance

Density 0%**Navigation**

Diagram: Expert → Communication → Modbus Xx-x → Integer convers → Density 0% (13252)

Description

Defines the density that represents 0% on the integer value scale.

User entry

Signed floating-point number

Factory setting

0 kg/m³

Additional information

Read access	Operator
Write access	Maintenance

Density 100%

Navigation  Expert → Communication → Modbus Xx-x → Integer convers → Density 100% (13218)

Description Defines the density that represents 100% on the integer value scale.

User entry Signed floating-point number

Factory setting 1 000 kg/m³

Additional information

Read access	Operator
Write access	Maintenance

User 0%

Navigation  Expert → Communication → Modbus Xx-x → Integer convers → User 0% (13221)

Description Defines the value of the user selected variable that represents 0% on the integer value scale.

User entry Signed floating-point number

Factory setting 0

Additional information

Read access	Operator
Write access	Maintenance

User 100%

Navigation  Expert → Communication → Modbus Xx-x → Integer convers → User 100% (13222)

Description Defines the value of the user selected variable that represents 100% on the integer value scale.

User entry Signed floating-point number

Factory setting 0

Additional information

Read access	Operator
Write access	Maintenance

Percent 0%**Navigation**

Expert → Communication → Modbus Xx-x → Integer convers → Percent 0% (13202)

Description

Defines the percentage of the measured value that represents 0% on the integer value scale.

User entry

-200 to +400 %

Factory setting

0.00 %

Additional information

Read access	Operator
Write access	Maintenance

Percent 100%**Navigation**

Expert → Communication → Modbus Xx-x → Integer convers → Percent 100% (13234)

Description

Defines the percentage of the measured value that represents 100% on the integer value scale.

User entry

-200 to +400 %

Factory setting

100 %

Additional information

Read access	Operator
Write access	Maintenance

"User value source" submenu

Only visible for devices with a Modbus I/O module.

Navigation

Expert → Communication → Modbus Xx-x → UserVal source
→ UserVal 1 source (13209)

**User value 1 to 8 source****Navigation**

Expert → Communication → Modbus Xx-x → UserVal source → UserVal 1 to 8 source
(13209-1 to 8)

Description

Selects which parameter shall be transmitted as User value x.

Selection

- None
- Tank ullage
- Distance
- Upper interface level
- Lower interface level
- Bottom level
- Average profile density⁶⁾
- Vapor density
- Manual density
- P1 position
- P3 position
- GP 1...4 value
- AIO B1-3 value
- AIO C1-3 value
- AIP B4-8 value
- AIP C4-8 value
- HART device 1...15 PV
- HART device 1...15 PV mA
- HART device 1...15 PV %
- HART device 1...15 SV
- HART device 1...15 TV
- HART device 1...15 QV

Factory setting

None

Additional information

Read access	Operator
Write access	Maintenance

6) Visibility depends on order options or device settings

"GP values" submenu**Navigation**

Expert → Communication → Modbus Xx-x → GP values → GP 1 value 0% (13223)

► GP values	
GP 1 value 0%	→ 186
GP 1 value 100%	→ 186
GP 2 value 0%	→ 187
GP 2 value 100%	→ 187
GP 3 value 0%	→ 187
GP 3 value 100%	→ 188
GP 4 value 0%	→ 188
GP 4 value 100%	→ 188

GP 1 value 0%**Navigation**

Expert → Communication → Modbus Xx-x → GP values → GP 1 value 0% (13223)

Description

Defines the GP1 value that represents 0% on the integer value scale.

User entry

Signed floating-point number

Factory setting

0 Unitless

Additional information

Read access	Operator
Write access	Maintenance

GP 1 value 100%**Navigation**

Expert → Communication → Modbus Xx-x → GP values → GP 1 value 100% (13224)

Description

Defines the GP1 value that represents 100% on the integer value scale.

User entry

Signed floating-point number

Factory setting

0 Unitless

Additional information

Read access	Operator
Write access	Maintenance

GP 2 value 0%**Navigation**

Expert → Communication → Modbus Xx-x → GP values → GP 2 value 0% (13257)

Description

Defines the GP2 value that represents 0% on the integer value scale.

User entry

Signed floating-point number

Factory setting

0 None

Additional information

Read access	Operator
Write access	Maintenance

GP 2 value 100%**Navigation**

Expert → Communication → Modbus Xx-x → GP values → GP 2 value 100% (13258)

Description

Defines the GP2 value that represents 100% on the integer value scale.

User entry

Signed floating-point number

Factory setting

0 None

Additional information

Read access	Operator
Write access	Maintenance

GP 3 value 0%**Navigation**

Expert → Communication → Modbus Xx-x → GP values → GP 3 value 0% (13259)

Description

Defines the GP3 value that represents 0% on the integer value scale.

User entry

Signed floating-point number

Factory setting

0 Unitless

Additional information

Read access	Operator
Write access	Maintenance

GP 3 value 100%

Navigation Expert → Communication → Modbus Xx-x → GP values → GP 3 value 100% (13226)

Description Defines the GP3 value that represents 100% on the integer value scale.

User entry Signed floating-point number

Factory setting 0 Unitless

Additional information

Read access	Operator
Write access	Maintenance

GP 4 value 0%

Navigation Expert → Communication → Modbus Xx-x → GP values → GP 4 value 0% (13225)

Description Defines the GP4 value that represents 0% on the integer value scale.

User entry Signed floating-point number

Factory setting 0 Unitless

Additional information

Read access	Operator
Write access	Maintenance

GP 4 value 100%

Navigation Expert → Communication → Modbus Xx-x → GP values → GP 4 value 100% (13227)

Description Defines the GP4 value that represents 100% on the integer value scale.

User entry Signed floating-point number

Factory setting 0 Unitless

Additional information

Read access	Operator
Write access	Maintenance

"Discrete selector" submenu*Navigation* Expert → Communication → Modbus Xx-x → Discreteselect**Discrete 1 to 4 selector****Navigation** Expert → Communication → WM550 X1-4 → Discreteselect → Discrete 1 to 4select (13260-1 to 4)**Description**

Determines the input source which is transferred as Alarm bit [n] value in the corresponding WM550 tasks.

Selection

- None
- **Balance flag** optionVisibility depends on order options or device settings
- Alarm 1...4 any
- Alarm 1...4 HighHigh
- Alarm 1...4 High or HighHigh
- Alarm 1...4 High
- Alarm 1...4 Low
- Alarm 1...4 Low or LowLow
- Alarm 1...4 LowLow
- Digital Xx-x

Factory setting

None

Additional information

Read access	Operator
Write access	Maintenance

"Configuration" submenu (V1)

 Only visible for devices with a V1 I/O module.

Navigation

Expert → Communication → V1 Xx-x → Configuration

▶ Configuration	
Communication interface protocol variant	→  190
V1 addressV1/MDP	→  190
V1 addressBBB/MIC+232	→  191
Level mapping	→  191
Line impedance	→  192
Compatibility mode	→  192

Communication interface protocol variant**Navigation**

Expert → Communication → V1 Xx-x → Configuration → Protocol variant (13269)

Description

Determines which variant of the V1 protocol is used.

User interface

- None
- V1^{*}

Factory setting

None

Additional information

Read access	Operator
Write access	Maintenance

V1 address**Navigation**

Expert → Communication → V1 Xx-x → Configuration → V1 address (13235)

Prerequisite

Communication interface protocol variant (→  190) = V1

Description

Identifier of the device for the V1 communication.

User entry

0 to 99

* Visibility depends on order options or device settings

Factory setting 1

Additional information

Read access	Operator
Write access	Maintenance

V1 address



Navigation Expert → Communication → V1 Xx-x → Configuration → V1 address (13236)

Prerequisite **Communication interface protocol variant** (→ 190)

Description Identifier of the previous device for V1 communication.

User entry 0 to 255

Factory setting 1

Additional information

Read access	Operator
Write access	Maintenance

Level mapping



Navigation Expert → Communication → V1 Xx-x → Configuration → Level mapping (13268)

Prerequisite **Communication interface protocol** (→ 174) = V1

Description Determines the transmittable range of levels.

Selection

- +ve
- +ve & -ve

Factory setting +ve

Additional information

Read access	Operator
Write access	Maintenance

In V1, the level is always represented by a number in the range from 0 to 999 999. This number corresponds to a level as follows:

"Level mapping" = "+ve"

Number	Corresponding level
0	0.0 mm
999 999	99 999.9 mm

"Level mapping" = "+ve & -ve"

Number	Corresponding level
0	0.0 mm
500 000	50 000.0 mm
500 001	-0.1 mm
999 999	-49 999.9 mm

Line impedance



Navigation

Expert → Communication → V1 Xx-x → Configuration → Line impedance (13266)

Prerequisite

Communication interface protocol (→ [174](#)) = V1

Description

Adjusts the impedance of the communication line.

User entry

0 to 15

Factory setting

15

Additional information

Read access	Operator
Write access	Maintenance

i The line impedance affects the voltage difference between a logical 0 and a logical 1 on the message of the device to the bus. The default setting is suitable for most applications.

Compatibility mode



Navigation

Expert → Communication → V1 Xx-x → Configuration → Comp. mode (13281)

Description

Defines the compatibility mode.

Selection

- Nxx5xx
- Nxx8x

Factory setting

Nxx8x

Additional information

In **NMS5x** mode: Only values which have also existed on NMS5x Gauge status are output on the bus.

In **NMS8x** mode: All Gauge status are available at this parameter.

Read access	Operator
Write access	Maintenance

"V1 input selector" submenu (V1)

 Only visible for devices with a V1 I/O module.

Navigation

 Expert → Communication → V1 Xx-x → V1 input select.

► V1 input selector

User value 1 to 8 source

→  193

Alarm 1 input source

→  194

Alarm 2 input source

→  194

Alarm 3 input source

→  195

Alarm 4 input source

→  195

SP 1 value selector

→  196

SP 2 value selector

→  196

SP 3 value selector

→  197

SP 4 value selector

→  197

Value percent selector

→  198**User value 1 to 8 source****Navigation**

 Expert → Communication → V1 Xx-x → V1 input select. → UserVal 1 to 8 source (13209-1 to 8)

Description

Selects which parameter shall be transmitted as User value x.

Selection

- None
- Tank ullage
- Distance
- Upper interface level
- Lower interface level
- Bottom level
- Average profile density⁷⁾
- Vapor density
- Manual density
- P1 position
- P3 position
- GP 1...4 value

7) Visibility depends on order options or device settings

- AIO B1-3 value
- AIO C1-3 value
- AIP B4-8 value
- AIP C4-8 value
- HART device 1...15 PV
- HART device 1...15 PV mA
- HART device 1...15 PV %
- HART device 1...15 SV
- HART device 1...15 TV
- HART device 1...15 QV

Factory setting None

Additional information

Read access	Operator
Write access	Maintenance

Alarm 1 input source



Navigation Expert → Communication → V1 Xx-x → V1 input select. → Alarm1 input src (13270)

Description Determines which discrete value will be transmitted as V1 alarm 1 status.

Selection

- None
- Alarm 1-4 any
- Alarm 1-4 HighHigh
- Alarm 1-4 High or HighHigh
- Alarm 1-4 High
- Alarm 1-4 Low
- Alarm 1-4 Low or LowLow
- Alarm 1-4 LowLow

Factory setting None

Additional information

Read access	Operator
Write access	Maintenance

Alarm 2 input source



Navigation Expert → Communication → V1 Xx-x → V1 input select. → Alarm2 input src (13271)

Description Determines which discrete value will be transmitted as V1 alarm 2 status.

Selection

- None
- Alarm 1-4 any
- Alarm 1-4 HighHigh
- Alarm 1-4 High or HighHigh
- Alarm 1-4 High

- Alarm 1-4 Low
- Alarm 1-4 Low or LowLow
- Alarm 1-4 LowLow

Factory setting None

Additional information

Read access	Operator
Write access	Maintenance

Alarm 3 input source



Navigation Expert → Communication → V1 Xx-x → V1 input select. → Alarm3 in-source (13283)

Description Determines which discrete value will be transmitted as V1 alarm 3 status in Z0 and Z1 message.

- Selection**
- None
 - Alarm 1-4 any
 - Alarm 1-4 HighHigh
 - Alarm 1-4 High or HighHigh
 - Alarm 1-4 High
 - Alarm 1-4 Low
 - Alarm 1-4 Low or LowLow
 - Alarm 1-4 LowLow

Factory setting None

Additional information

Read access	Operator
Write access	Maintenance

Alarm 4 input source



Navigation Expert → Communication → V1 Xx-x → V1 input select. → Alarm4 in-source (13284)

Description Determines which discrete value will be transmitted as V1 alarm 4 status in Z0 and Z1 message.

- Selection**
- None
 - Alarm 1-4 any
 - Alarm 1-4 HighHigh
 - Alarm 1-4 High or HighHigh
 - Alarm 1-4 High
 - Alarm 1-4 Low
 - Alarm 1-4 Low or LowLow
 - Alarm 1-4 LowLow

Factory setting None

Additional information

Read access	Operator
Write access	Maintenance

SP 1 value selector**Navigation**

Expert → Communication → V1 → V1 input select. → SP1 value select (13274)

Description

Selects which discrete value will be transmitted as V1 External Status bit 1 in Z0/Z1 message.

Selection

- None
- Digital A1-2 *
- Digital A3-4 *
- Digital B1-2 *
- Digital B3-4 *
- Digital C1-2 *
- Digital C3-4 *
- Digital D1-2 *
- Digital D3-4 *

Factory setting

None

Additional information

Read access	Operator
Write access	Maintenance

SP 2 value selector**Navigation**

Expert → Communication → V1 → V1 input select. → SP2 value select (13275)

Description

Selects which discrete value will be transmitted as V1 external status bit 2 in Z0/Z1 message.

Selection

- None
- Digital A1-2 *
- Digital A3-4 *
- Digital B1-2 *
- Digital B3-4 *
- Digital C1-2 *
- Digital C3-4 *
- Digital D1-2 *
- Digital D3-4 *

Factory setting

None

Additional information

Read access	Operator
Write access	Maintenance

* Visibility depends on order options or device settings

SP 3 value selector**Navigation**

Expert → Communication → V1 → V1 input select. → SP3 value select (13276)

Description

Selects which discrete value will be transmitted as V1 external status bit 3 in Z0/Z1 message.

Selection

- None
- Digital A1-2 *
- Digital A3-4 *
- Digital B1-2 *
- Digital B3-4 *
- Digital C1-2 *
- Digital C3-4 *
- Digital D1-2 *
- Digital D3-4 *

Factory setting

None

Additional information

Read access	Operator
Write access	Maintenance

SP 4 value selector**Navigation**

Expert → Communication → V1 → V1 input select. → SP4 value select (13277)

Description

Selects which discrete value will be transmitted as V1 external status bit 4 in Z0/Z1 message.

Selection

- None
- Digital A1-2 *
- Digital A3-4 *
- Digital B1-2 *
- Digital B3-4 *
- Digital C1-2 *
- Digital C3-4 *
- Digital D1-2 *
- Digital D3-4 *

Factory setting

None

Additional information

Read access	Operator
Write access	Maintenance

* Visibility depends on order options or device settings

Value percent selector**Navigation**

Expert → Communication → V1 → V1 input select. → Value % select (13282)

Description

Selects which value shall be transmitted as a 0..100% value in the V1 Z0/Z1 message.

Selection

- None
- Tank level %
- Tank ullage %
- AIO B1-3 value % ^{*}
- AIO C1-3 value % ^{*}

Factory setting

None

Additional information


Read access	Operator
Write access	Maintenance

"Configuration" submenu (WM550)

This submenu is only present for devices with a **WM550** option communication interface.

Navigation

Expert → Communication → WM550 Xx-x → Configuration

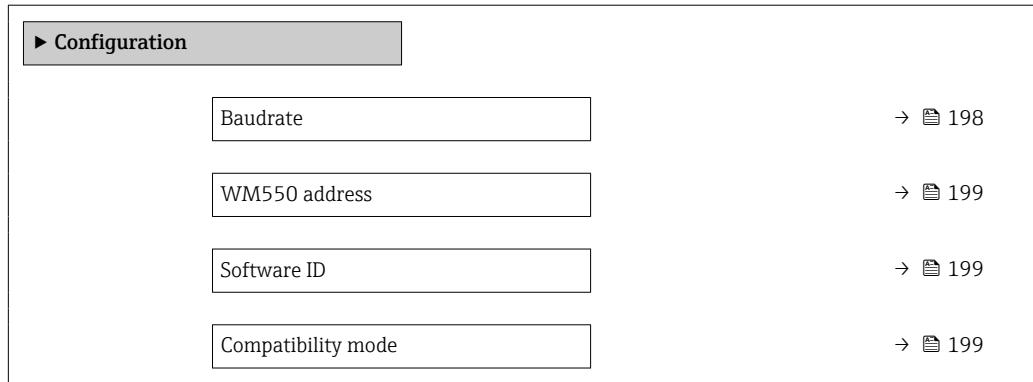**Baudrate****Navigation**

Expert → Communication → WM550 Xx-x → Configuration → Baudrate (13203)

Prerequisite

Communication interface protocol (→ [174](#)) = "WM550" option

Description

Defines the baud rate of the WM550 communication.

* Visibility depends on order options or device settings

Selection	<ul style="list-style-type: none"> ■ 600 BAUD ■ 1200 BAUD ■ 2400 BAUD ■ 4800 BAUD 				
Factory setting	2400 BAUD				
Additional information	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 2px;">Read access</td> <td style="padding: 2px;">Operator</td> </tr> <tr> <td style="padding: 2px;">Write access</td> <td style="padding: 2px;">Maintenance</td> </tr> </table>	Read access	Operator	Write access	Maintenance
Read access	Operator				
Write access	Maintenance				

WM550 address

Navigation	Expert → Communication → WM550 Xx-x → Configuration → WM550 address (13286)
Description	Describes the WM550 address of the device.
User entry	0 to 63
Factory setting	1

Software ID

Navigation	Expert → Communication → WM550 Xx-x → Configuration → Software ID (13287)
Prerequisite	Communication interface protocol (→ 174) = "WM550" option
Description	Defines content for WM550 Task 32. Detailed information on content for WM550 Task 32, Special Documentation SD02567G.
User entry	0 to 9 999
Factory setting	2 000

Compatibility mode

Navigation	Expert → Communication → WM550 Xx-x → Configuration → Comp. mode (13281)
Description	Defines the compatibility mode.
Selection	<ul style="list-style-type: none"> ■ Nxx5xx ■ Nxx8x
Factory setting	Nxx8x

Additional information

In **NMS5x** mode: Only values which have also existed on NMS5x Gauge status are output on the bus.

In **NMS8x** mode: All Gauge status are available at this parameter.


Read access	Operator
Write access	Maintenance

"WM550 input selector" submenu (WM550)

 This submenu is only present for devices with a **WM550** option communication interface.

Navigation

Expert → Communication → WM550 Xx-x → WM550 inp select

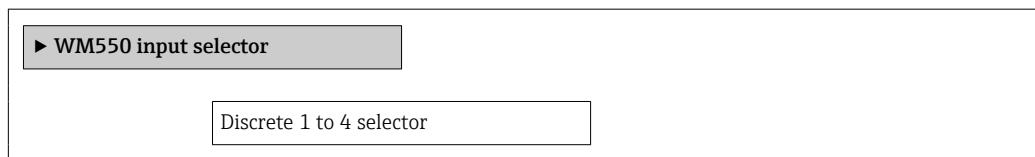**Discrete 1 to 4 selector****Navigation**

Expert → Communication → WM550 Xx-x → WM550 inp select → Discrete 1 to 4select (13260–1 to 4)

Description

Determines the input source which is transferred as Alarm bit [n] value in the corresponding WM550 tasks.

Selection

- None
- **Balance flag** optionVisibility depends on order options or device settings
- Alarm 1...4 any
- Alarm 1...4 HighHigh
- Alarm 1...4 High or HighHigh
- Alarm 1...4 High
- Alarm 1...4 Low
- Alarm 1...4 Low or LowLow
- Alarm 1...4 LowLow
- Digital Xx-x

Factory setting

None


Additional information

Read access	Operator
Write access	Maintenance

3.4.2 "HART output" submenu

Navigation

Expert → Communication → HART output

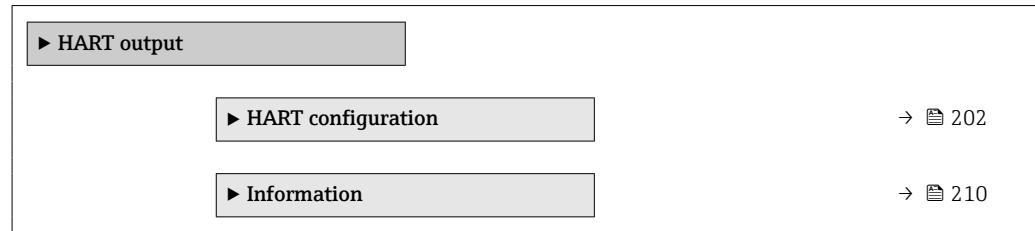

"HART configuration" submenu*Navigation*
 Expert → Communication → HART output → HART config.

► HART configuration	
System polling address	→  202
No. of preambles	→  203
PV source	→  203
Assign PV	→  203
0 % value	→  204
100 % value	→  205
PV mA selector	→  205
Primary variable (PV)	→  205
Percent of range	→  206
Assign SV	→  206
Secondary variable (SV)	→  207
Assign TV	→  207
Tertiary variable (TV)	→  208
Assign QV	→  208
Quaternary variable (QV)	→  209

System polling address**Navigation**
 Expert → Communication → HART output → HART config. → Polling address (0219)
Description

Device address for HART communication.

User entry

0 to 63

Factory setting

15

Additional information

Read access	Operator
Write access	Maintenance

No. of preambles**Navigation**

Expert → Communication → HART output → HART config. → No. of preambles (0217)

Description

Defines the number of preambles in the HART telegram.

User entry

5 to 20

Factory setting

5

Additional information

Read access	Operator
Write access	Maintenance

PV source**Navigation**

Expert → Communication → HART output → HART config. → PV source (11634)

Description

Decides, if the PV configuration is according to an analog output (HART slave) or customized (in case of HART tunneling only).

Selection

- AIO B1-3 *
- AIO C1-3 *
- Custom

Factory setting

Custom

Additional information

Read access	Maintenance
Write access	Maintenance

Assign PV**Navigation**

Expert → Communication → HART output → HART config. → Assign PV (0234)

Prerequisite

PV source (→ 203) = Custom

Description

Assign a measured variable to the primary dynamic variable (PV).

Additional information:

The assigned measured variable is also used by the current output.

* Visibility depends on order options or device settings

Selection

- None
- Tank level
- Tank ullage
- Measured level
- Distance
- Displacer position
- Water level
- Upper interface level
- Lower interface level
- Bottom level
- Tank reference height
- Liquid temperature
- Vapor temperature
- Air temperature
- Observed density value
- Average profile density
- Upper density
- Middle density
- Lower density
- P1 (bottom)
- P2 (middle)
- P3 (top)
- GP 1 value
- GP 2 value
- GP 3 value
- GP 4 value

Factory setting

Tank level

Additional information

Read access	Operator
Write access	Maintenance



The **Measured level** option doesn't contain a unit. If a unit is needed, select the **Tank level** option.

0 % value**Navigation**

Expert → Communication → HART output → HART config. → 0 % value (11632)

Prerequisite**PV source = Custom****Description**

0% value of the primary variable (PV).

User entry

Signed floating-point number

Factory setting

0 mm

Additional information

Read access	Operator
Write access	Maintenance

100 % value 

Navigation  Expert → Communication → HART output → HART config. → 100 % value (11633)

Prerequisite PV source = Custom

Description 100% value of the primary variable (PV).

User entry Signed floating-point number

Factory setting 0 mm

Additional information

Read access	Operator
Write access	Maintenance

PV mA selector 

Navigation  Expert → Communication → HART output → HART config. → PV mA selector (11631)

Prerequisite PV source = Custom

Description Assigns a current to the primary HART variable (PV).

Selection

- None
- AIO B1-3 value mA *
- AIO C1-3 value mA *

Factory setting None

Additional information

Read access	Operator
Write access	Maintenance

Primary variable (PV)

Navigation  Expert → Communication → HART output → HART config. → Primary var (PV) (0201)

Description Shows the current measured value of the primary dynamic variable (PV)

Additional information

Read access	Operator
Write access	-

* Visibility depends on order options or device settings

Percent of range**Navigation**

  Expert → Communication → HART output → HART config. → Percent of range (0274)

Description

Shows the value of the primary variable (PV) as a percentage of the defined 0% to 100% range.

Additional information

Read access	Operator
Write access	-

Assign SV**Navigation**

  Expert → Communication → HART output → HART config. → Assign SV (0235)

Description

Assign a measured variable to the second dynamic variable (SV).

Selection

- None
- Tank level
- Tank ullage
- Measured level
- Distance
- Displacer position
- Water level
- Upper interface level
- Lower interface level
- Bottom level
- Tank reference height
- Liquid temperature
- Vapor temperature
- Air temperature
- Observed density value
- Average profile density
- Upper density
- Middle density
- Lower density
- P1 (bottom)
- P2 (middle)
- P3 (top)
- GP 1 value
- GP 2 value
- GP 3 value
- GP 4 value

Factory setting

Liquid temperature

Additional information

Read access	Operator
Write access	Maintenance



The **Measured level** option doesn't contain a unit. If a unit is needed, select the **Tank level** option.

Secondary variable (SV)

Navigation Expert → Communication → HART output → HART config. → Second.var(SV) (0226)

Prerequisite **Assign SV** (→ 206) ≠ None

Description Shows the current measured value of the secondary dynamic variable (SV)

Additional information

Read access	Operator
Write access	-

Assign TV

Navigation Expert → Communication → HART output → HART config. → Assign TV (0236)

Description Assign a measured variable to the tertiary dynamic variable (TV).

Selection

- None
- Tank level
- Tank ullage
- Measured level
- Distance
- Displacer position
- Water level
- Upper interface level
- Lower interface level
- Bottom level
- Tank reference height
- Liquid temperature
- Vapor temperature
- Air temperature
- Observed density value
- Average profile density
- Upper density
- Middle density
- Lower density
- P1 (bottom)
- P2 (middle)
- P3 (top)
- GP 1 value
- GP 2 value
- GP 3 value
- GP 4 value

Factory setting Water level

Additional information

Read access	Operator
Write access	Maintenance



The **Measured level** option doesn't contain a unit. If a unit is needed, select the **Tank level** option.

Tertiary variable (TV)

Navigation

Expert → Communication → HART output → HART config. → Tertiary var(TV) (0228)

Prerequisite

Assign TV (→ 207) ≠ None

Description

Shows the current measured value of the tertiary (third) dynamic variable (TV)

Additional information

Read access	Operator
Write access	-

Assign QV**Navigation**

Expert → Communication → HART output → HART config. → Assign QV (0237)

Description

Assign a measured variable to the quaternary dynamic variable (QV).

Selection

- None
- Tank level
- Tank ullage
- Measured level
- Distance
- Displacer position
- Water level
- Upper interface level
- Lower interface level
- Bottom level
- Tank reference height
- Liquid temperature
- Vapor temperature
- Air temperature
- Observed density value
- Average profile density
- Upper density
- Middle density
- Lower density
- P1 (bottom)
- P2 (middle)
- P3 (top)
- GP 1 value
- GP 2 value
- GP 3 value
- GP 4 value

Factory setting

Observed density value

Additional information

Read access	Operator
Write access	Maintenance

 The **Measured level** option doesn't contain a unit. If a unit is needed, select the **Tank level** option.

Quaternary variable (QV)

Navigation

  Expert → Communication → HART output → HART config. → Quaterna.var(QV) (0203)

Prerequisite

Assign QV (→  208) ≠ None

Description

Shows the current measured value of the quaternary (fourth) dynamic variable (QV)

Additional information

Read access	Operator
Write access	-

"Information" submenu**Navigation**
 Expert → Communication → HART output → Information

► Information	
HART short tag	→  210
Device tag	→  211
Device revision	→  211
Device ID	→  211
Device type	→  212
Manufacturer ID	→  212
HART revision	→  212
HART descriptor	→  213
HART message	→  213
Hardware revision	→  213
Software revision	→  214
HART date code	→  214

HART short tag**Navigation**
 Expert → Communication → HART output → Information → HART short tag (0220)
Description

Defines the short tag for the measuring point.

Maximum length: 8 characters

Allowed characters: A-Z, 0-9, certain special characters

User entry

Character string comprising numbers, letters and special characters (8)

Factory setting

NMS8x

Additional information

Read access	Operator
Write access	Maintenance

Device tag

Navigation Expert → Communication → HART output → Information → Device tag (0215)

Description Enter a unique name for the measuring point to identify the device quickly within the plant.

User entry Character string comprising numbers, letters and special characters (32)

Factory setting NMS8x

Additional information

Read access	Operator
Write access	Maintenance

Device revision

Navigation Expert → Communication → HART output → Information → Device revision (0204)

Description Shows the device revision with which the device is registered with the HART Communication Foundation

User interface 0 to 255

Factory setting 7

Additional information

Read access	Operator
Write access	-

Device ID

Navigation Expert → Communication → HART output → Information → Device ID (0221)

Description Shows the device ID for identifying the device in a HART network

User interface Positive integer

Factory setting 123 456

Additional information

Read access	Operator
Write access	-

Device type

Navigation   Expert → Communication → HART output → Information → Device type (0209)

Description Shows the device type with which the measuring device is registered with the HART Communication Foundation

User interface 0 to 65 535

Factory setting 4 397

Additional information

Read access	Operator
Write access	-

Manufacturer ID

Navigation   Expert → Communication → HART output → Information → Manufacturer ID (0259)

Description Shows the device's manufacturer ID registered with the HART Communication Foundation.

User interface 0 to 65 535

Factory setting 17

Additional information

Read access	Operator
Write access	-

HART revision

Navigation   Expert → Communication → HART output → Information → HART revision (0205)

Description HART revision used by the device.

User interface 5 to 7

Factory setting 7

Additional information

Read access	Operator
Write access	-

HART descriptor

Navigation Expert → Communication → HART output → Information → HART descriptor (0212)

Description Enter description for the measuring point

User entry Character string comprising numbers, letters and special characters (16)

Factory setting NMS8x

Additional information

Read access	Operator
Write access	Maintenance

HART message

Navigation Expert → Communication → HART output → Information → HART message (0216)

Description Use this function to define a HART message which is sent via the HART protocol when requested by the master.

Maximum length: 32 characters

Allowed characters: A-Z, 0-9, certain special characters

User entry Character string comprising numbers, letters and special characters (32)

Factory setting NMS8x

Additional information

Read access	Operator
Write access	Maintenance

Hardware revision

Navigation Expert → Communication → HART output → Information → Hardware rev. (0206)

Description Hardware revision of the device.

User interface 0 to 30

Factory setting 1

Additional information

Read access	Operator
Write access	-

Software revision

Navigation  Expert → Communication → HART output → Information → Software rev. (0224)

Description Software revision of the device.

User interface 0 to 255

Factory setting 7

Additional information

Read access	Operator
Write access	-

HART date code



Navigation  Expert → Communication → HART output → Information → HART date code (0202)

Description Enter date of the last configuration change. Use this format yyyy-mm-dd

User entry Character string comprising numbers, letters and special characters (10)

Factory setting 2009-07-20


Additional information

Read access	Operator
Write access	Maintenance

3.5 "Application" submenu

Navigation


Expert → Application

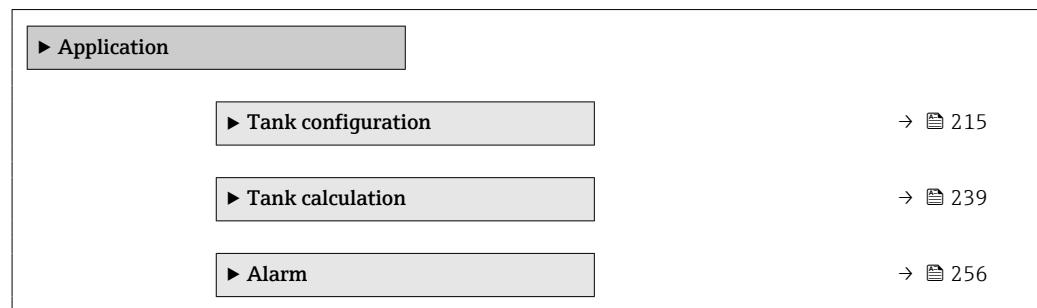

3.5.1 "Tank configuration" submenu

Navigation

Expert → Application → Tank config

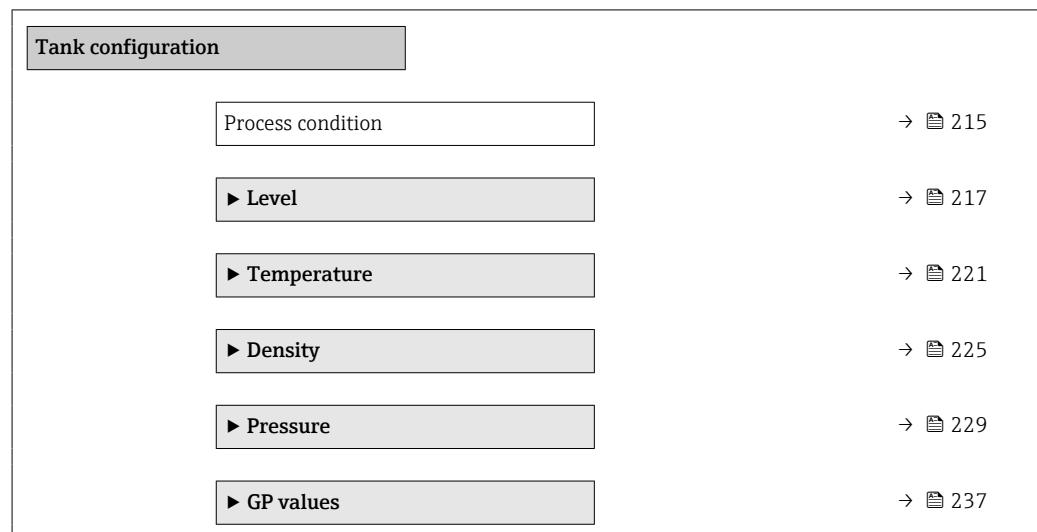

Process condition



Navigation

Expert → Application → Tank config → Process cond. (8001)

Description

Select the liquid condition of the tank.

Selection

- Universal
- Calm surface
- Turbulent surface

Factory setting

Universal

Additional information

For W&M, setting to option **Calm surface** is recommended.

Read access	Operator
Write access	Maintenance

"Level" submenu*Navigation*
 Expert → Application → Tank config → Level

► Level	
Level source	→  217
Empty	→  218
Tank reference height	→  218
Tank level	→  218
Set level	→  219
Upper interface level	→  219
Lower interface level	→  219
Water level source	→  219
Water level	→  220
Manual water level	→  220

Level source**Navigation**
 Expert → Application → Tank config → Level → Level source (14601)
Description

Defines the source of the level value.

Selection

- No input value
- HART device 1 ... 15 level
- Level SR *
- Level *
- Displacer position *
- AIO B1-3 value *
- AIO C1-3 value *
- AIP B4-8 value *
- AIP C4-8 value *

Factory setting

Dependent on the device version

Additional information

Read access	Operator
Write access	Maintenance

* Visibility depends on order options or device settings

Empty 

Navigation  Expert → Application → Tank config → Level → Empty (14602)

Description Distance from reference point to zero position (tank bottom or datum plate).

User entry 0 to 10 000 000 mm

Factory setting Dependent on the device version

Additional information

Read access	Operator
Write access	Maintenance

 The reference point is the reference line of the calibration window.

Tank reference height 

Navigation  Expert → Application → Tank config → Level → Tank ref height (14603)

Description Defines the distance from the dipping reference point to the zero position (tank bottom or datum plate).

User entry 0 to 10 000 000 mm

Factory setting Dependent on the device version

Additional information

Read access	Operator
Write access	Maintenance

Tank level

Navigation  Expert → Application → Tank config → Level → Tank level (14655)

Description Shows the distance from the zero position (tank bottom or datum plate) to the product surface.

Additional information

Read access	Operator
Write access	-

Set level**Navigation**

Expert → Application → Tank config → Level → Set level (14604)

Description

If the level measured by the device does not match the actual level obtained by a manual dip, enter the correct level into this parameter.

User entry

0 to 10 000 000 mm

Factory setting

0 mm

Additional information

Read access	Operator
Write access	Maintenance

The device adjusts the **Empty** parameter (→ 218) according to the entered value, such that the measured level will match the actual level.

Upper interface level**Navigation**

Expert → Application → Tank config → Level → Upper I/F level (15003)

Description

Shows measured interface level from zero position (tank bottom or datum plate). Value is updated when device generates a valid Interface measurement.

Additional information

Read access	Maintenance
Write access	-

Lower interface level**Navigation**

Expert → Application → Tank config → Level → Lower I/F level (15004)

Description

Shows measured interface level from zero position (tank bottom or datum plate). Value is updated when device generates a valid interface measurement.

Additional information

Read access	Maintenance
Write access	-

Water level source**Navigation**

Expert → Application → Tank config → Level → Water level src (14971)

Description

Defines the source of the bottom water level.

Selection

- Manual value
- Bottom level
- HART device 1 ... 15 level
- AIO B1-3 value
- AIO C1-3 value
- AIP B4-8 value
- AIP C4-8 value

Factory setting

Manual value

Additional information

Read access	Operator
Write access	Maintenance

Water level**Navigation**
  Expert → Application → Tank config → Level → Water level (14970)
Description

Shows the bottom water level.

Additional information

Read access	Operator
Write access	-

Manual water level**Navigation**
  Expert → Application → Tank config → Level → Man. water level (14959)
Prerequisite**Water level source (→  219) = Manual value****Description**

Defines the manual value of the bottom water level.

User entry

-2 000 to 5 000 mm

Factory setting

0 mm

Additional information

Read access	Operator
Write access	Maintenance

"Temperature" submenu*Navigation*

Expert → Application → Tank config → Temperature

► Temperature	
Liquid temp source	→ 221
Manual liquid temperature	→ 222
Liquid temperature	→ 222
Air temperature source	→ 222
Manual air temperature	→ 223
Air temperature	→ 223
Vapor temp source	→ 223
Manual vapor temperature	→ 224
Vapor temperature	→ 224

Liquid temp source**Navigation**

Expert → Application → Tank config → Temperature → Liq temp source (14972)

Description

Defines source from which the liquid temperature is obtained.

Selection

- Manual value
- HART device 1 ... 15 temperature
- AIO B1-3 value
- AIO C1-3 value
- AIP B4-8 value
- AIP C4-8 value

Factory setting

Manual value

Additional information

Read access	Operator
Write access	Maintenance

Manual liquid temperature

Navigation	Expert → Application → Tank config → Temperature → Man. liquid temp (15015)				
Prerequisite	Liquid temp source (→ 221) = Manual value				
Description	Defines the manual value of the liquid temperature.				
User entry	-50 to 300 °C				
Factory setting	25 °C				
Additional information	<table border="1"><tr><td>Read access</td><td>Operator</td></tr><tr><td>Write access</td><td>Maintenance</td></tr></table>	Read access	Operator	Write access	Maintenance
Read access	Operator				
Write access	Maintenance				

Liquid temperature

Navigation	Expert → Application → Tank config → Temperature → Liquid temp. (14978)				
Description	Shows the average or spot temperature of the measured liquid.				
Additional information	<table border="1"><tr><td>Read access</td><td>Operator</td></tr><tr><td>Write access</td><td>-</td></tr></table>	Read access	Operator	Write access	-
Read access	Operator				
Write access	-				

Air temperature source

Navigation	Expert → Application → Tank config → Temperature → Air temp. source (14993)				
Description	Defines source from which the air temperature is obtained.				
Selection	<ul style="list-style-type: none">■ Manual value■ HART device 1 ... 15 temperature■ AIO B1-3 value■ AIO C1-3 value■ AIP B4-8 value■ AIP C4-8 value				
Factory setting	Manual value				
Additional information	<table border="1"><tr><td>Read access</td><td>Operator</td></tr><tr><td>Write access</td><td>Maintenance</td></tr></table>	Read access	Operator	Write access	Maintenance
Read access	Operator				
Write access	Maintenance				

Manual air temperature



Navigation	Expert → Application → Tank config → Temperature → Manual air temp. (14961)				
Prerequisite	Air temperature source (→ 222) = Manual value				
Description	Defines the manual value of the air temperature.				
User entry	-50 to 300 °C				
Factory setting	25 °C				
Additional information	<table border="1"> <tr> <td>Read access</td> <td>Operator</td> </tr> <tr> <td>Write access</td> <td>Maintenance</td> </tr> </table>	Read access	Operator	Write access	Maintenance
Read access	Operator				
Write access	Maintenance				

Air temperature

Navigation	Expert → Application → Tank config → Temperature → Air temp. (14986)				
Description	Shows the air temperature.				
Additional information	<table border="1"> <tr> <td>Read access</td> <td>Operator</td> </tr> <tr> <td>Write access</td> <td>-</td> </tr> </table>	Read access	Operator	Write access	-
Read access	Operator				
Write access	-				

Vapor temp source



Navigation	Expert → Application → Tank config → Temperature → Vapor temp src (14973)				
Description	Defines the source from which the vapor temperature is obtained.				
Selection	<ul style="list-style-type: none"> ■ Manual value ■ HART device 1 ... 15 vapor temp ■ AIO B1-3 value ■ AIO C1-3 value ■ AIP B4-8 value ■ AIP C4-8 value 				
Factory setting	Manual value				
Additional information	<table border="1"> <tr> <td>Read access</td> <td>Operator</td> </tr> <tr> <td>Write access</td> <td>Maintenance</td> </tr> </table>	Read access	Operator	Write access	Maintenance
Read access	Operator				
Write access	Maintenance				

Manual vapor temperature

Navigation Expert → Application → Tank config → Temperature → Man. vapor temp. (14960)

Prerequisite Vapor temp source (→ 223) = Manual value

Description Defines the manual value of the vapor temperature.

User entry -50 to 300 °C

Factory setting 25 °C

Additional information

Read access	Operator
Write access	Maintenance

Vapor temperature

Navigation Expert → Application → Tank config → Temperature → Vapor temp. (14985)

Description Shows the measured vapor temperature.

Additional information

Read access	Operator
Write access	-

"Density" submenu*Navigation*
 Expert → Application → Tank config → Density

► Density	
Observed density source	→  225
Observed density	→  226
Air density	→  226
Vapor density	→  226
Measured upper density	→  226
Measured middle density	→  227
Measured lower density	→  227
Water density	→  227
Profile point	→  227
Profile average density	→  228
Profile density timestamp	→  228

Observed density source**Navigation**
 Expert → Application → Tank config → Density → Density source (13454)
Description

Determines how the density is obtained.

Selection

- HTG *
- HTMS *
- Average profile density *
- Upper density
- Middle density
- Lower density

Factory setting

Dependent on the device version

Additional information

Read access	Operator
Write access	Maintenance

* Visibility depends on order options or device settings

Observed density

Navigation

Expert → Application → Tank config → Density → Observed density (13452)

Description

Shows the measured or calculated density.

Additional information

Read access	Operator
Write access	-

Air density

**Navigation**

Expert → Application → Tank config → Density → Air density (14980)

Description

Defines the density of the air surrounding the tank.

User entry0.0 to 500.0 kg/m³**Factory setting**1.2 kg/m³**Additional information**

Read access	Operator
Write access	Maintenance

Vapor density

**Navigation**

Expert → Application → Tank config → Density → Vapor density (14981)

Description

Defines the density of the gas phase in the tank.

User entry0.0 to 500.0 kg/m³**Factory setting**1.2 kg/m³**Additional information**

Read access	Operator
Write access	Maintenance

Measured upper density

Navigation

Expert → Application → Tank config → Density → Meas upper dens. (15001)

Description

Shows the density of the upper phase.

Additional information

Read access	Operator
Write access	-

Measured middle density**Navigation**
 Expert → Application → Tank config → Density → Meas middle dens (14997)
Description

Density of the middle phase.

Additional information

Read access	Operator
Write access	-

Measured lower density**Navigation**
 Expert → Application → Tank config → Density → Meas lower dens. (15002)
Description

Density of the lower phase.

Additional information

Read access	Maintenance
Write access	-

Water density**Navigation**
 Expert → Application → Tank config → Density → Water density (13757)
Description

Density of the water in the tank.

User entry

Signed floating-point number

Factory setting1 000 kg/m³**Additional information**

Read access	Operator
Write access	Maintenance

Profile point**Navigation**
 Expert → Application → Tank config → Density → Profile point (8170)
Description

Shows actual number of Density Points measured so far in current operation, and the total Number of Points after Density Profile Operation is complete.

Additional information

Read access	Operator
Write access	-

Profile average density

Navigation Expert → Application → Tank config → Density → Profile avg dens (8175)**Description**

Shows the average density calculated after a profile density measurement is complete.

Additional information

Read access	Operator
Write access	-

Profile density timestamp

Navigation Expert → Application → Tank config → Density → Profil dens time (8114)**Description**

Shows the timestamp when the last average density profile was finished.

Additional information

Read access	Operator
Write access	-

"Pressure" submenu*Navigation*

Expert → Application → Tank config → Pressure

► Pressure	
P1 (bottom) source	→ 230
P1 (bottom)	→ 230
P1 (bottom) manual pressure	→ 230
P1 position	→ 231
P1 offset	→ 231
P1 absolute / gauge	→ 231
P2 (middle) source	→ 232
P2 (middle)	→ 232
P2 (middle) manual pressure	→ 232
P2 offset	→ 233
P1-2 distance	→ 233
P2 absolute / gauge	→ 233
P3 (top) source	→ 234
P3 (top)	→ 234
P3 (top) manual pressure	→ 234
P3 position	→ 235
P3 offset	→ 235
P3 absolute / gauge	→ 235
Ambient pressure	→ 236

P1 (bottom) source**Navigation**

Expert → Application → Tank config → Pressure → P1 (bot) source (14994)

Description

Defines the source of the bottom pressure (P1).

Selection

- Manual value
- HART device 1 ... 15 pressure
- AIO B1-3 value
- AIO C1-3 value
- AIP B4-8 value
- AIP C4-8 value

Factory setting

Manual value

Additional information

Read access	Operator
Write access	Maintenance

P1 (bottom)**Navigation**

Expert → Application → Tank config → Pressure → P1 (bottom) (14983)

Description

Shows the pressure at the tank bottom.

Additional information

Read access	Operator
Write access	-

P1 (bottom) manual pressure**Navigation**

Expert → Application → Tank config → Pressure → P1 (bot) manual (14951)

Prerequisite**P1 (bottom) source (→ 230) = Manual value****Description**

Defines the manual value of the bottom pressure (P1).

User entry

-1.01325 to 25 bar

Factory setting

0 bar

Additional information

Read access	Operator
Write access	Maintenance

P1 position**Navigation**

Expert → Application → Tank config → Pressure → P1 position (14952)

Description

Defines the position of the bottom pressure transmitter (P1), measured from zero position (tank bottom or datum plate).

User entry

-10 000 to 100 000 mm

Factory setting

5 000 mm

Additional information

Read access	Operator
Write access	Maintenance

P1 offset**Navigation**

Expert → Application → Tank config → Pressure → P1 offset (14953)

Description

Offset for the bottom pressure (P1).

The offset is added to the measured pressure prior to any tank calculation.

User entry

-25 to 25 bar

Factory setting

0 bar

Additional information

Read access	Operator
Write access	Maintenance

P1 absolute / gauge**Navigation**

Expert → Application → Tank config → Pressure → P1 absolut/gauge (14954)

Description

Defines whether the connected pressure transmitter measures an absolute or a gauge pressure.

Selection

- Absolute
- Gauge

Factory setting

Gauge

Additional information

Read access	Operator
Write access	Maintenance

P2 (middle) source**Navigation**

Expert → Application → Tank config → Pressure → P2 (mid) source (14995)

Description

Defines the source of the middle pressure (P2).

Selection

- Manual value
- HART device 1 ... 15 pressure
- AIO B1-3 value
- AIO C1-3 value
- AIP B4-8 value
- AIP C4-8 value

Factory setting

Manual value

Additional information

Read access	Operator
Write access	Maintenance

P2 (middle)**Navigation**

Expert → Application → Tank config → Pressure → P2 (middle) (14987)

Description

Shows the pressure (P2) at the middle transmitter.

Additional information

Read access	Operator
Write access	-

P2 (middle) manual pressure**Navigation**

Expert → Application → Tank config → Pressure → P2 (mid) manual (14955)

Prerequisite**P2 (middle) source (→ 232) = Manual value****Description**

Defines the manual value of the middle pressure (P2).

User entry

-1.01325 to 25 bar

Factory setting

0 bar

Additional information

Read access	Operator
Write access	Maintenance

P2 offset**Navigation**

Expert → Application → Tank config → Pressure → P2 offset (14975)

Description

Defines the offset for the middle pressure (P2).

The offset is added to the measured pressure prior to any tank calculation.

User entry

-25 to 25 bar

Factory setting

0 bar

Additional information

Read access	Operator
Write access	Maintenance

P1-2 distance**Navigation**

Expert → Application → Tank config → Pressure → P1-2 distance (14974)

Description

Defines the distance between the bottom and the middle pressure transmitter.

User entry

0 to 100 000 mm

Factory setting

2 000 mm

Additional information

Read access	Operator
Write access	Maintenance

P2 absolute / gauge**Navigation**

Expert → Application → Tank config → Pressure → P2 absolut/gauge (14976)

Description

Defines whether the connected pressure transmitter measures an absolute or a gauge pressure.

Selection

- Absolute
- Gauge

Factory setting

Gauge

Additional information

Read access	Operator
Write access	Maintenance

P3 (top) source



Navigation

Expert → Application → Tank config → Pressure → P3 (top) source (14996)

Description

Defines the source of the top pressure (P3).

Selection

- Manual value
- HART device 1 ... 15 pressure
- AIO B1-3 value
- AIO C1-3 value
- AIP B4-8 value
- AIP C4-8 value

Factory setting

Manual value

Additional information

Read access	Operator
Write access	Maintenance

P3 (top)

Navigation

Expert → Application → Tank config → Pressure → P3 (top) (14988)

Description

Shows the pressure (P3) at the top transmitter.

Additional information

Read access	Operator
Write access	-

P3 (top) manual pressure



Navigation

Expert → Application → Tank config → Pressure → P3 (top) manual (14977)

Prerequisite

P3 (top) source (→ [234](#)) = Manual value

Description

Defines the manual value of the top pressure (P3).

User entry

-1.01325 to 25 bar

Factory setting

0 bar

Additional information

Read access	Operator
Write access	Maintenance

P3 position**Navigation**

Expert → Application → Tank config → Pressure → P3 position (14956)

Description

Defines the position of the top pressure transmitter (P3), measured from zero position (tank bottom or datum plate).

User entry 0 to 100 000 mm

Factory setting 20 000 mm

Additional information

Read access	Operator
Write access	Maintenance

P3 offset**Navigation**

Expert → Application → Tank config → Pressure → P3 offset (14957)

Description

Offset for the top pressure (P3).

The offset is added to the measured pressure prior to any tank calculation.

User entry -25 to 25 bar

Factory setting 0 bar

Additional information

Read access	Operator
Write access	Maintenance

P3 absolute / gauge**Navigation**

Expert → Application → Tank config → Pressure → P3 absolut/gauge (14958)

Description

Defines whether the connected pressure transmitter measures an absolute or a gauge pressure.

Selection

- Absolute
- Gauge

Factory setting Gauge

Additional information

Read access	Operator
Write access	Maintenance

Ambient pressure

Navigation Expert → Application → Tank config → Pressure → Ambient pressure (14962)

Description Defines the manual value of the ambient pressure.

User entry 0 to 2.5 bar

Factory setting 1 bar

Additional information

Read access	Operator
Write access	Maintenance

"GP values" submenu*Navigation*
  Expert → Application → Tank config → GP values

► GP values	
GP 1 to 4 source	→  237
GP 1 to 4 name	→  238
GP Value 1	→  238
GP Value 2	→  238
GP Value 3	→  238
GP Value 4	→  239

GP 1 to 4 source**Navigation**
  Expert → Application → Tank config → GP values → GP 1 to 4 source (14989-1 to 4)
Description

Source of the general purpose value 1 GP1.

Selection

- No input value
- SM S distance
- Average profile density
- Net weight
- AIO B1-3 value
- AIO C1-3 value
- AIP B4-8 value
- AIP C4-8 value
- HART device 1...15 PV
- HART device 1...15 SV
- HART device 1...15 TV
- HART device 1...15 QV
- Modbus A1-4 Value 1...4
- Modbus B1-4 Value 1...4
- Modbus C1-4 Value 1...4
- Modbus D1-4 Value 1...4

Factory setting

No input value

Additional information

Read access	Operator
Write access	Maintenance

GP 1 to 4 name

Navigation Expert → Application → Tank config → GP values → GP 1 name (14963)

Description Defines the label associated with the respective GP value.

User entry Character string comprising numbers, letters and special characters (15)

Factory setting GP Value 1

Additional information

Read access	Operator
Write access	Maintenance

GP Value 1

Navigation Expert → Application → Tank config → GP values → GP Value 1 (14966)

Description Displays the value that will be used as general purpose value.

Additional information

Read access	Operator
Write access	-

GP Value 2

Navigation Expert → Application → Tank config → GP values → GP Value 2 (14967)

Description Displays the value that will be used as general purpose value.

Additional information

Read access	Operator
Write access	-

GP Value 3

Navigation Expert → Application → Tank config → GP values → GP Value 3 (14968)

Description Displays the value that will be used as general purpose value.

Additional information

Read access	Operator
Write access	-

GP Value 4

Navigation

Expert → Application → Tank config → GP values → GP Value 4 (14969)

Description

Displays the value that will be used as general purpose value.


Additional information

Read access	Operator
Write access	-

3.5.2 "Tank calculation" submenu

Navigation

Expert → Application → Tank calculation

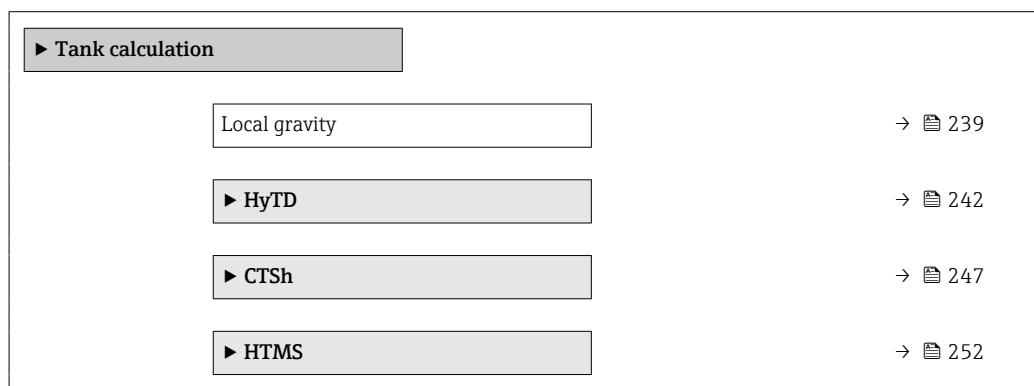

Local gravity**Navigation**

Expert → Application → Tank calculation → Local gravity (14979)

Description


Shows the manually entered local gravity value.

User entry9.0 to 10.0 m/s²**Factory setting**9.807 m/s²

"HyTD" submenu

Overview

Hydrostatic Tank Deformation can be used to compensate the vertical movement of the Gauge Reference Height (GRH) due to bulging of the tank shell caused by the hydrostatic pressure exerted by the liquid stored in the tank. The compensation is based on a linear approximation obtained from manual hand dips at several levels distributed over the full range of the tank.

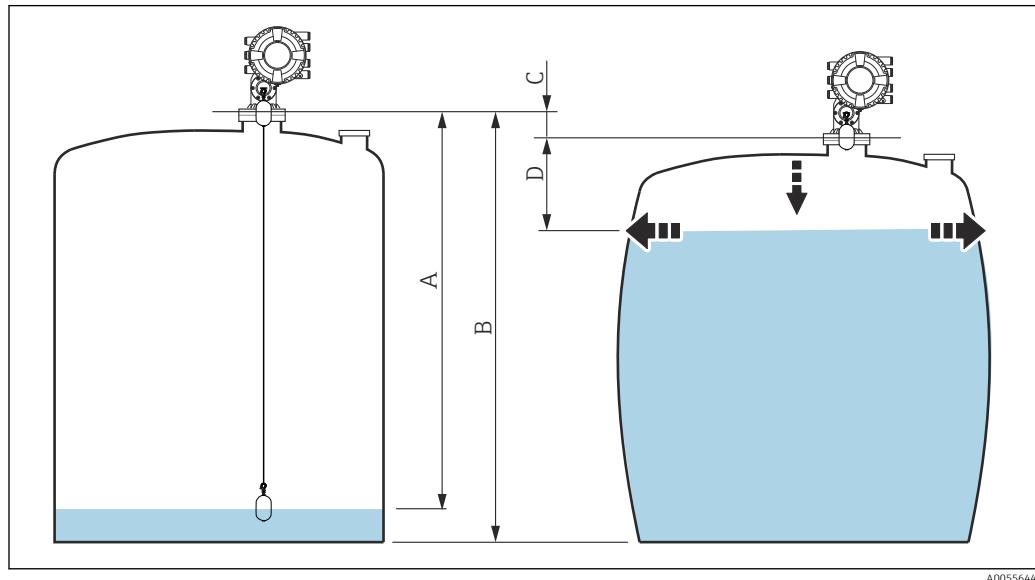

■ 18 Correction of the hydrostatic tank deformation (HyTD)

- A "Distance" (level below L_0 → "HyTD correction value" = 0)
- B Gauge Reference Height (GRH)
- C HyTD correction value
- D "Distance" (level above L_0 → "HyTD correction value" > 0)

Linear approximation of the HyTD correction

The real amount of deformation varies non-linearly with the level due to the construction of the tank. However, as the correction values are typically small compared to the measured level, a simple straight line method can be used with good results.

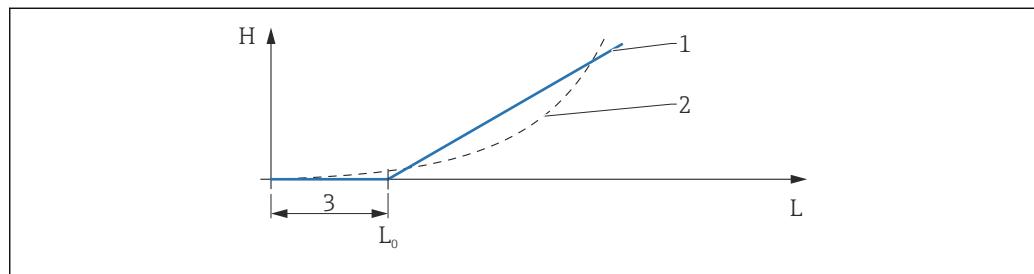


图 19 Calculation of the HyTD correction

- 1 Linear correction according to "Deformation factor" (→ 图 243)"
- 2 Real correction
- 3 Starting level (→ 图 242)
- L Measured level
- H HyTD correction value (→ 图 242)

Calculation of the HyTD correction

$L \leq L_0$	$\Rightarrow C_{\text{HyTD}} = 0$
$L > L_0$	$\Rightarrow C_{\text{HyTD}} = - (L - L_0) \times D$

A0028715

L	Measured level
L₀	Starting level
C_{HyTD}	HyTD correction value
D	Deformation factor

*Description of parameters**Navigation*

Expert → Application → Tank calculation → HyTD

HyTD	
HyTD correction value	→ 242
HyTD mode	→ 242
Starting level	→ 242
Deformation factor	→ 243

HyTD correction value**Navigation**

Expert → Application → Tank calculation → HyTD → HyTD corr. value (13603)

Description

Shows the correction value from the Hydrostatic Tank Deformation.

Additional information

Read access	Operator
Write access	-

HyTD mode**Navigation**

Expert → Application → Tank calculation → HyTD → HyTD mode (14652)

Description

Activates or deactivates the calculation of the Hydrostatic Tank Deformation.

Selection

- No
- Yes

Factory setting

No

Additional information

Read access	Operator
Write access	Maintenance

Starting level**Navigation**

Expert → Application → Tank calculation → HyTD → Starting level (13601)

Description

Defines the starting level for the Hydrostatic Tank Deformation. Levels below this value are not corrected.

User entry 0 to 5 000 mm

Factory setting 500 mm

Additional information

Read access	Operator
Write access	Maintenance

Deformation factor



Navigation Expert → Application → Tank calculation → HyTD → Deform factor (13602)

Description Defines the deformation factor for the HyTD (change of device position per change of level).

User entry -1.0 to 1.0 %

Factory setting 0.2 %

Additional information


Read access	Operator
Write access	Maintenance

"CTSh" submenu

Overview

CTSh (correction for the thermal expansion of the tank shell) compensates for effects on the Gauge Reference Height (GRH) and on the expansion or contraction of the measuring wire due to temperature effects on the tank shell or stilling well. The temperature effects are separated into two parts, respectively affecting the 'dry' and 'wetted' part of the tank shell or stilling well. The correction function is based on thermal expansion coefficients of steel and insulation factors for both the 'dry' and 'wet' parts of the wire and the tank shell. The temperatures used for the correction can be selected from on manual or measured values.

- i** This correction is recommended for the following situations:
 - if the operating temperature deviates considerably from the temperature during calibration ($\Delta T > 10 \text{ }^{\circ}\text{C}$ (18 $^{\circ}\text{F}$))
 - for extremely high tanks
 - for refrigerated, cryogenic or heated applications
- i** As the use of this correction will influence the innage level reading, it is recommended to ensure the manual hand dip and level verification procedures are being conducted correctly before enabling this correction method.
- i** This mode cannot be used in conjunction with HTG because the level is not measured relative to the gauge reference height with HTG.

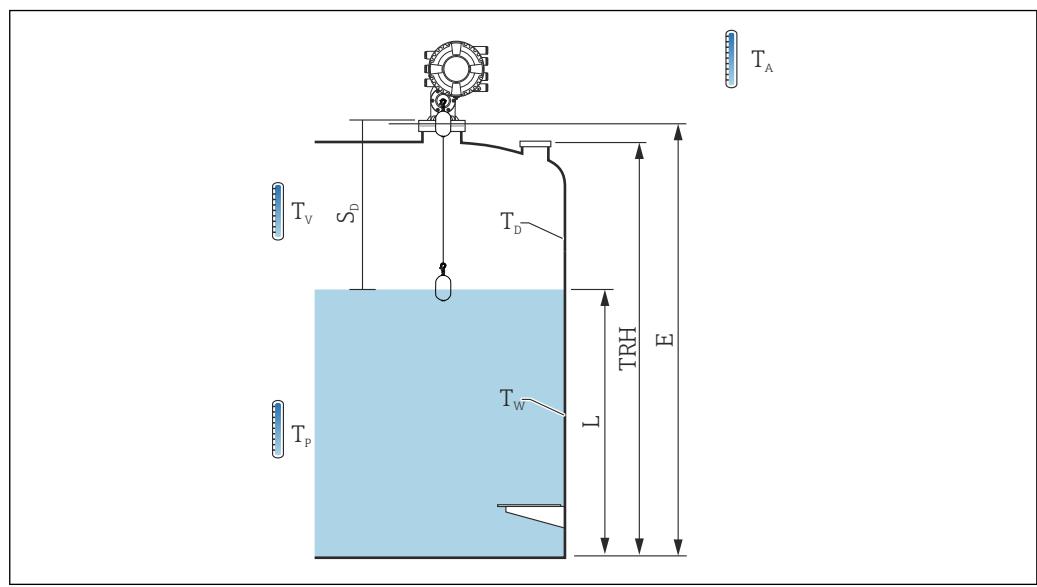CTSh: Calculation of the wall temperature**20 Parameters for the CTSh calculation**


T_w	Temperature of the wetted part of the tank shell
T_d	Temperature of the dry part of the tank shell
T_p	Product temperature
T_v	Vapor temperature (in the tank)
T_a	Ambient temperature (atmosphere surrounding the tank)
S_d	Measured distance (Empty to Level)
TRH	Tank reference height
E	Empty
L	Level

CTSh: Calculation of the wall temperature

Depending on the parameters **Covered tank** (→ 248) and **Stilling well** (→ 248), the temperatures T_w of the wetted and T_d of the dry part of the tank wall are calculated as follows:

Covered tank (→ 248)	Stilling well (→ 248)	T_w	T_d
Covered	Yes ¹⁾	T_p	T_v
	No	$(7/8) T_p + (1/8) T_a$	$(1/2) T_v + (1/2) T_a$
Open top	Yes	T_p	T_a
	No	$(7/8) T_p + (1/8) T_a$	T_a

1) This option is also valid for insulated tanks without a stilling well. This is due to the temperature inside and outside of the tank shell being the same due to the insulation of the tank.

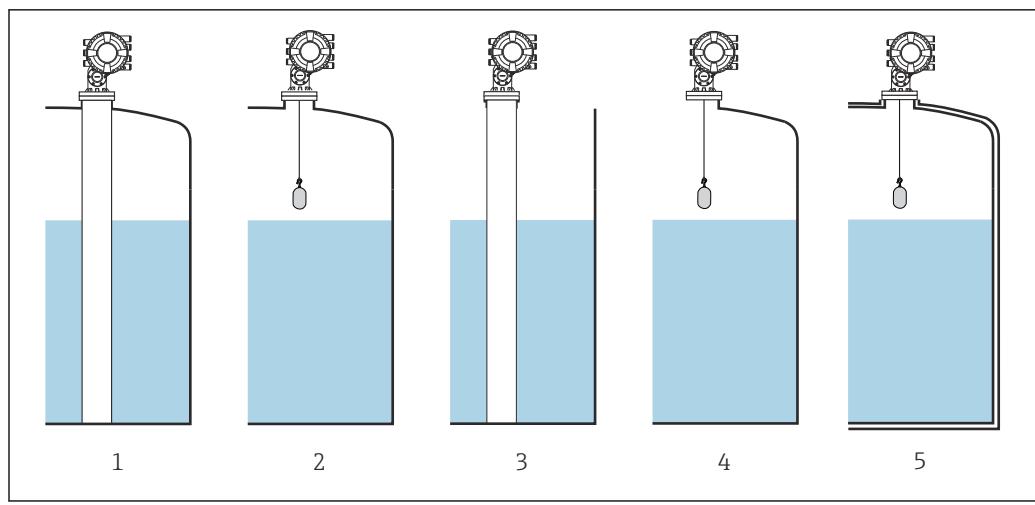

A0030509

- 1 *Covered tank (\rightarrow 248) = Covered; Stilling well (\rightarrow 248) = Yes*
- 2 *Covered tank (\rightarrow 248) = Covered; Stilling well (\rightarrow 248) = No*
- 3 *Covered tank (\rightarrow 248) = Open top; Stilling well (\rightarrow 248) = Yes*
- 4 *Covered tank (\rightarrow 248) = Open top; Stilling well (\rightarrow 248) = No*
- 5 *Insulated tank: Covered tank (\rightarrow 248) = Open top; Stilling well (\rightarrow 248) = Yes*

CTSh: Calculation of the correction

$$C_{CTSh} = \alpha_{tank} (TRH - L)(T_D - T_{cal}) + \alpha_{tank} L (T_W - T_{cal}) - \alpha_{wire} S_D (T_v - T_{cal})$$

A0030497

TRH	Tank reference height
L	Level
T_D	Temperature of the dry part of the tank shell (calculated from T _P , T _V and T _A)
T_W	Temperature of the wetted part of the tank shell (calculated from T _P , T _V and T _A)
T_{cal}	Temperature at which the measurement has been calibrated
α_{tank}	Linear expansion coefficient of tank
α_{wire}	Linear expansion coefficient of wire
C_{CTSh}	CTSh correction value

*Description of parameters**Navigation*

Expert → Application → Tank calculation → CTSh

► CTSh	
CTSh correction value	→ 247
CTSh mode	→ 248
Covered tank	→ 248
Stilling well	→ 248
Calibration temperature	→ 249
Linear expansion coefficient	→ 249
Wire expansion coefficient	→ 249

CTSh correction value*Navigation*

Expert → Application → Tank calculation → CTSh → CTSh corr value (13651)

Description

Shows the CTSh correction value.

Additional information

Read access	Operator
Write access	-

CTSh mode**Navigation**

Expert → Application → Tank calculation → CTSh → CTSh mode (14651)

Description

Activates or deactivates the CTSh.

Selection

- No
- Yes
- With wire ^{*}
- Only wire ^{*}

Factory setting

No

Additional information

Read access	Operator
Write access	Maintenance

Covered tank**Navigation**

Expert → Application → Tank calculation → CTSh → Covered tank (13654)

Description

Determines whether the tank is covered.

Selection

- Open top
- Covered

Factory setting

Open top

Additional information

Read access	Operator
Write access	Maintenance

The **Covered** option is only valid for fixed tank roofs. For a floating roof select **Open top**.

Stilling well**Navigation**

Expert → Application → Tank calculation → CTSh → Stilling well (13653)

Description

Determines whether the device is mounted on a stilling well.

Selection

- No
- Yes

Factory setting

No

* Visibility depends on order options or device settings

Additional information

Read access	Operator
Write access	Maintenance

Calibration temperature**Navigation**

Expert → Application → Tank calculation → CTSh → Calibration temp (13652)

Description

Specify temperature at which the measurement has been calibrated.

User entry

-50 to 250 °C

Factory setting

25 °C

Additional information

Read access	Operator
Write access	Maintenance

Linear expansion coefficient**Navigation**

Expert → Application → Tank calculation → CTSh → Linear exp coeff (13655)

Description

Defines the linear expansion coefficient of the tank shell material.

User entry

0 to 100 ppm

Factory setting

15 ppm

Additional information

Read access	Operator
Write access	Maintenance

Wire expansion coefficient**Navigation**

Expert → Application → Tank calculation → CTSh → Wire exp coeff (13656)

Description

Defines the expansion coefficient of the wire material of the drum. Value is programmed in factory.

User entry

0 to 100 ppm

Factory setting


15 ppm

"HTMS" submenu

Overview

The Hybrid Tank Measurement System (HTMS) is a method to calculate the density of a product in a tank based on both a (top mounted) level and at least one (bottom mounted) pressure measurement. An additional pressure sensor can be installed at the top of the tank to provide information about the vapor pressure and to make the density calculation more accurate. The calculation method also takes into account a possible level of water at the bottom of the tank to make density calculations as accurate as possible.

HTMS parameters

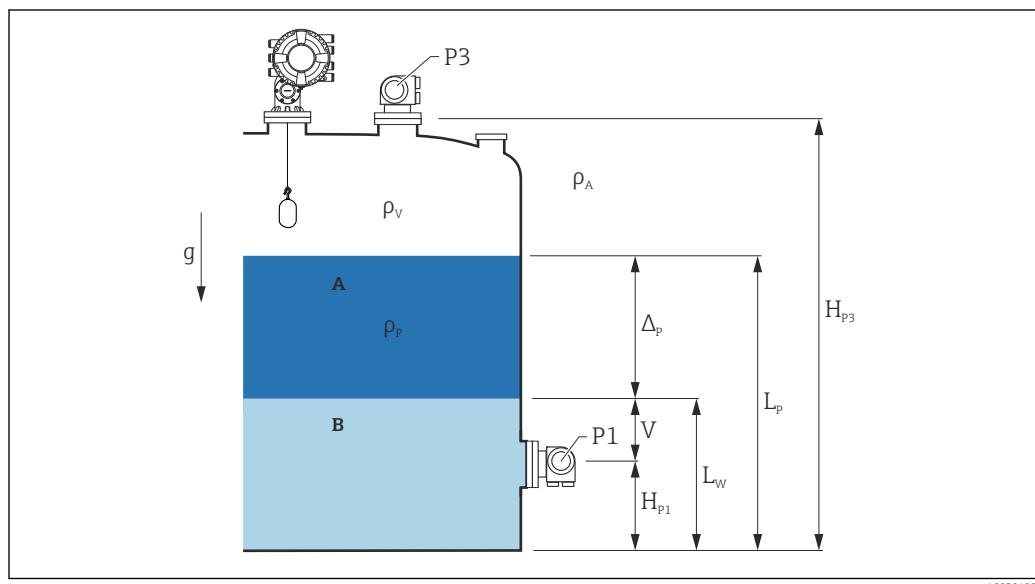

21 HTMS parameters

A Product

B Water

Parameter	Navigation path
P1 (Bottom pressure)	Setup → Advanced setup → Tank configuration → Pressure → P1 (bottom)
H _{P1} (Position of P1 transmitter)	Setup → Advanced setup → Tank configuration → Pressure → P1 position
P3 (Top pressure)	Setup → Advanced setup → Tank configuration → Pressure → P3 (top)
H _{P3} (Position of P3 transmitter)	Setup → Advanced setup → Tank configuration → Pressure → P3 position
ρ _P (Density of the product ¹⁾	<ul style="list-style-type: none"> Measured value: Setup → Advanced setup → Calculation → HTMS → Density value (13753) User-defined value: Setup → Advanced setup → Calculation → HTMS → Manual upper density (14998)
ρ _v (Vapor density)	Expert → Application → Tank configuration → Density → Vapor density
ρ _A (Ambient air temperature)	Setup → Advanced setup → Tank configuration → Density → Air density
g (Local gravity)	Expert → Application → Tank Calculation → Local gravity
L _p (Level of the product)	Operation → Tank level (14655)
L _w (Bottom water level)	Operation → Water level (14970)
V = L _w - H _{P1}	
Δ _p = L _p - L _w = L _p - V - H _{P1}	

1) Depending on the situation this parameter is measured or a user-defined value is used.

HTMS modes

Two HTMS modes can be selected in the **HTMS mode** parameter (→ 252). The mode determines whether one or two pressure values are used. Depending on the selected mode a number of additional parameters are required for the calculation of the product density.

 The **HTMS P1+P3** option must be used in pressurized tanks in order to compensate for the pressure of the vapor phase.

HTMS mode (→ 252)	Measured variables	Required additional parameters	Calculated variables
HTMS P1	■ P_1 ■ L_p	■ g ■ H_{P1} ■ L_w (optional)	ρ_p
HTMS P1+P3	■ P_1 ■ P_3 ■ L_p	■ ρ_v ■ ρ_A ■ g ■ H_{P1} ■ H_{P3} ■ L_w (optional)	ρ_p (more precise calculation for pressurized tanks)

Minimum level

The density of the product can only be calculated if the product has a minimum thickness :

$$\Delta_p \geq \Delta_{p,\min}$$

A0028864

This is equivalent to the following condition for the product level:

$$L_p - V \geq \Delta_{p,\min} + H_{P1} = L_{\min}$$

A0028863


L_{\min} is defined in the **Minimum level** parameter (→ 253). As can be seen from the formula it always must be bigger than H_{P1} .

If $L_p - V$ falls below this limit, the density is calculated as follows:

- If a previous calculated value is available, this value will be kept as long as no new calculation is possible.
- If no value was previously calculated, the manual value (defined in the **Manual upper density** parameter) will be used.

Hysteresis

The level of the product in a tank is not constant but slightly varies, due for example to filling disturbances. If the level oscillates around the changeover level (**Minimum level** (→ 253)), the algorithm will constantly switch between calculating the value and holding the previous result. To avoid this effect a positional hysteresis is defined around the changeover point.

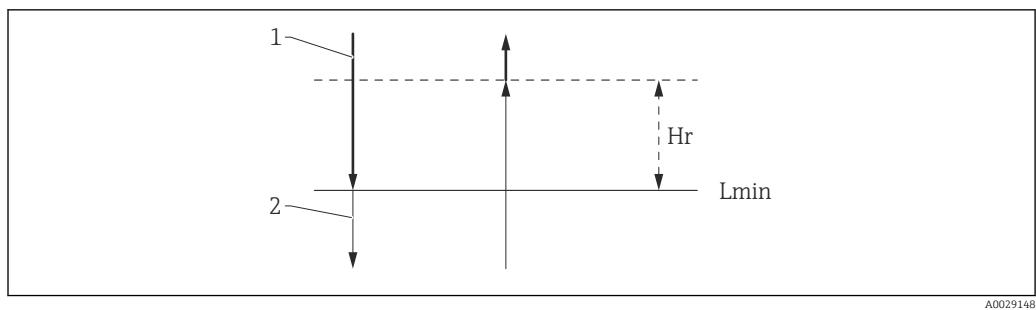**22 HTMS hysteresis**

1 Value calculated

2 Value held/manual

 L_{min} Minimum level (→ 253) H_r Hysteresis (→ 254)*Description of parameters**Navigation*

Expert → Application → Tank calculation → HTMS

► HTMS	
HTMS mode	→ 252
Manual density	→ 253
Density value	→ 253
Minimum level	→ 253
Minimum pressure	→ 254
Safety distance	→ 254
Hysteresis	→ 254
Water density	→ 255

HTMS mode*Navigation*

Expert → Application → Tank calculation → HTMS → HTMS mode (13751)

Description

Defines the HTMS mode. Depending on the mode one or two pressure transmitters are used.

Selection

- HTMS P1
- HTMS P1+P3

Factory setting

HTMS P1

Additional information

Read access	Operator
Write access	Maintenance

Meaning of the options

- HTMS P1
Only a bottom pressure transmitter (P1) is used.
- HTMS P1+P3
A bottom (P1) and top (P3) pressure transmitter are used. This option should be selected for pressurized tanks.

Manual density**Navigation**

Expert → Application → Tank calculation → HTMS → Manual density (15009)

Description

Defines the manual density.

User entry0 to 3 000 kg/m³**Factory setting**800 kg/m³**Additional information**

Read access	Maintenance
Write access	Maintenance

Density value**Navigation**

Expert → Application → Tank calculation → HTMS → Density value (13753)

Description

Shows the calculated product density.

Additional information

Read access	Operator
Write access	-

Minimum level**Navigation**

Expert → Application → Tank calculation → HTMS → Min. level (13752)

Description

Defines the minimum product level for a HTMS calculation.

If Lp - V falls below the limit defined in this parameter, the density retains its last value or the manual value is used instead.

User entry

0 to 20 000 mm

Factory setting

7 000 mm

Additional information

Read access	Operator
Write access	Maintenance

Minimum pressure**Navigation**

Expert → Application → Tank calculation → HTMS → Minimum pressure (13754)

Description

Defines the minimum pressure for a HTMS calculation.

If the pressure P1 (or the difference P1 - P3) falls below the limit defined in this parameter, the density retains its last value or the manual value is used instead.

User entry

0 to 100 bar

Factory setting

0.1 bar

Additional information

Read access	Operator
Write access	Maintenance

Safety distance**Navigation**

Expert → Application → Tank calculation → HTMS → Safety distance (13756)

Description

Defines the minimum level which must be present above the bottom pressure sensor before its signal is used for the calculation.

User entry

0 to 10 000 mm

Factory setting

2 000 mm

Additional information

Read access	Operator
Write access	Maintenance

Hysteresis**Navigation**

Expert → Application → Tank calculation → HTMS → Hysteresis (13755)

Description

Defines the hysteresis for the HTMS calculation. Prevents constant switching if the level is near the switch-over point.

User entry

0 to 2 000 mm

Factory setting

50 mm

Additional information

Read access	Operator
Write access	Maintenance

Water density**Navigation**

Expert → Application → Tank calculation → HTMS → Water density (13757)

Description

Density of the water in the tank.

User entry

Signed floating-point number

Factory setting1 000 kg/m³**Additional information**

Read access	Operator
Write access	Maintenance

3.5.3 "Alarm" submenu

Navigation

☰ ☰ Expert → Application → Alarm

"Alarm" submenu

Navigation

☰ ☰ Expert → Application → Alarm → Alarm

▶ Alarm	
Alarm mode	→ ☰ 257
Error value	→ ☰ 258
Alarm value source	→ ☰ 259
Alarm value	→ ☰ 260
HH alarm value	→ ☰ 260
H alarm value	→ ☰ 260
L alarm value	→ ☰ 261
LL alarm value	→ ☰ 261
HH alarm	→ ☰ 261
H alarm	→ ☰ 262
HH+H alarm	→ ☰ 262
L alarm	→ ☰ 262
LL alarm	→ ☰ 262
LL+L alarm	→ ☰ 263
Any error	→ ☰ 263
Clear alarm	→ ☰ 263
Alarm hysteresis	→ ☰ 264
Damping factor	→ ☰ 264

Alarm mode**Navigation**

Expert → Application → Alarm → Alarm mode (13864)

Description

Defines the alarm mode of the selected alarm.

Selection

- Off
- On
- Latching

Factory setting


Off

Additional information

Read access	Operator
Write access	Maintenance

Meaning of the options

- **Off**
No alarms are generated.
- **On**
An alarm disappears if the alarm condition is no longer present (taking into consideration the hysteresis).
- **Latching**
All alarms remain active until the user selects **Clear alarm** (→ 263) = Yes or the power is switched off and on.

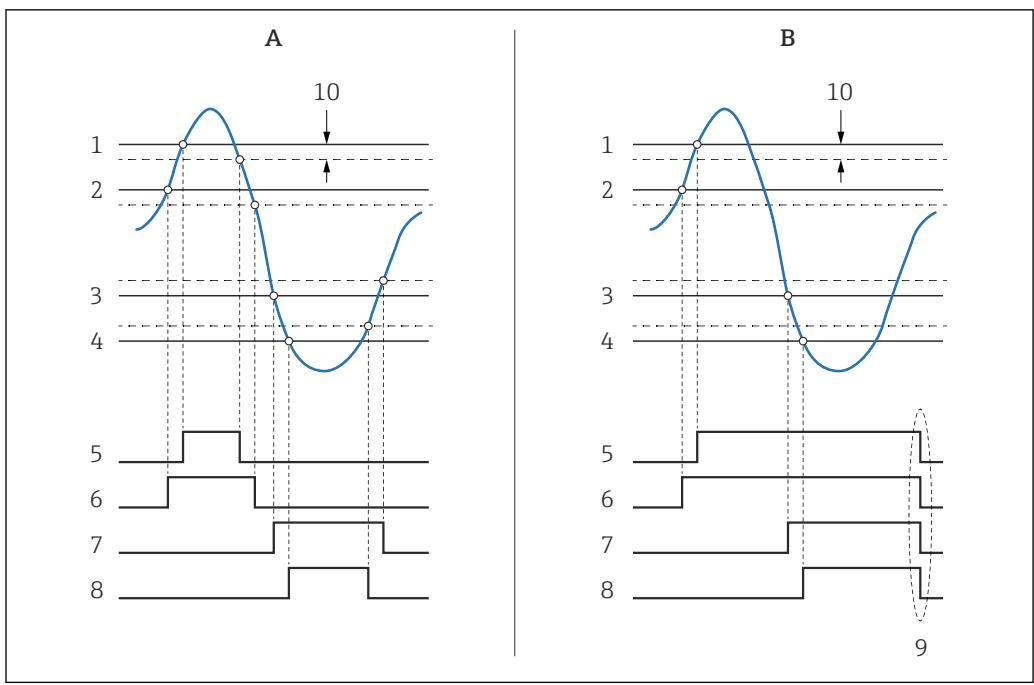

A0029539

23 Principle of the limit evaluation

- A Alarm mode (\rightarrow 257) = On
- B Alarm mode (\rightarrow 257) = Latching
- 1 HH alarm value (\rightarrow 260)
- 2 H alarm value (\rightarrow 260)
- 3 L alarm value (\rightarrow 261)
- 4 LL alarm value (\rightarrow 261)
- 5 HH alarm (\rightarrow 261)
- 6 H alarm (\rightarrow 262)
- 7 L alarm (\rightarrow 262)
- 8 LL alarm (\rightarrow 262)
- 9 "Clear alarm (\rightarrow 263)" = "Yes" or power off-on
- 10 Hysteresis (\rightarrow 264)

Error value**Navigation**Expert \rightarrow Application \rightarrow Alarm \rightarrow Alarm \rightarrow Error value (13851)**Prerequisite****Alarm mode (\rightarrow 257) ≠ Off****Description**

Defines the alarm to be issued if the input value is invalid.

Selection

- No alarm
- HH+H alarm
- H alarm
- L alarm
- LL+L alarm
- All alarms

Factory setting

All alarms

Additional information

Read access	Operator
Write access	Maintenance

Alarm value source

Navigation Expert → Application → Alarm → Alarm source (13866)

Prerequisite **Alarm mode (→ 257) ≠ Off**

Description Determines the process variable to be monitored.

- Selection**
- Tank level
 - Liquid temperature
 - Vapor temperature
 - Water level
 - P1 (bottom)
 - P2 (middle)
 - P3 (top)
 - Observed density value
 - Volume
 - Flow velocity
 - Volume flow
 - Vapor density
 - Middle density
 - Upper density
 - Correction
 - Tank level %
 - GP 1...4 value
 - Measured level
 - P3 position
 - Tank reference height
 - Local gravity
 - P1 position
 - Manual density
 - Tank ullage
 - Average profile density
 - Lower density
 - Upper interface level
 - Lower interface level
 - Bottom level
 - Displacer position
 - HART device 1...15 PV
 - HART device 1...15 SV
 - HART device 1...15 TV
 - HART device 1...15 QV
 - HART device 1...15 PV mA
 - HART device 1...15 PV %
 - Element temperature 1...24
 - AIO B1-3 value
 - AIO C1-3 value
 - AIP B4-8 value
 - AIP C4-8 value
 - None

Factory setting None

Additional information

Read access	Operator
Write access	Maintenance

Alarm value

Navigation

Diagram: Expert → Application → Alarm → Alarm value (13863)

Prerequisite

Alarm mode (→ [257](#)) ≠ Off

Description

Shows the current value of the process variable being monitored.

User interface

Signed floating-point number

Factory setting

0 None

Additional information

Read access	Operator
Write access	-

HH alarm value

**Navigation**

Diagram: Expert → Application → Alarm → HH alarm value (13855)

Prerequisite

Alarm mode (→ [257](#)) ≠ Off

Description

Defines the high-high(HH) limit value.

User entry

Signed floating-point number

Factory setting

0 None

Additional information

Read access	Operator
Write access	Maintenance

H alarm value

**Navigation**

Diagram: Expert → Application → Alarm → H alarm value (13854)

Prerequisite

Alarm mode (→ [257](#)) ≠ Off

Description

Defines the high(H) limit value.

User entry

Signed floating-point number

Factory setting

0 None

Additional information

Read access	Operator
Write access	Maintenance

L alarm value

Navigation Expert → Application → Alarm → Alarm → L alarm value (13853)

Prerequisite **Alarm mode (→ 257) ≠ Off**

Description Defines the low limit value.

User entry Signed floating-point number

Factory setting 0 None

Additional information

Read access	Operator
Write access	Maintenance

LL alarm value

Navigation Expert → Application → Alarm → Alarm → LL alarm value (13852)

Prerequisite **Alarm mode (→ 257) ≠ Off**

Description Defines the low-low(LL) limit value.

User entry Signed floating-point number

Factory setting 0 None

Additional information

Read access	Operator
Write access	Maintenance

HH alarm

Navigation Expert → Application → Alarm → Alarm → HH alarm (13857)

Prerequisite **Alarm mode (→ 257) ≠ Off**

Description Shows whether an HH alarm is currently active.

Additional information

Read access	Operator
Write access	-

H alarm

Navigation   Expert → Application → Alarm → Alarm → H alarm (13856)

Prerequisite **Alarm mode (→  257) ≠ Off**

Description Shows whether an H alarm is currently active.

Additional information

Read access	Operator
Write access	-

HH+H alarm

Navigation   Expert → Application → Alarm → Alarm → HH+H alarm (13858)

Prerequisite **Alarm mode (→  257) ≠ Off**

Description Shows whether an HH or H alarm is currently active.

Additional information

Read access	Operator
Write access	-

L alarm

Navigation   Expert → Application → Alarm → Alarm → L alarm (13859)

Prerequisite **Alarm mode (→  257) ≠ Off**

Description Shows whether an L alarm is currently active.

Additional information

Read access	Operator
Write access	-

LL alarm

Navigation   Expert → Application → Alarm → Alarm → LL alarm (13868)

Prerequisite **Alarm mode (→  257) ≠ Off**

Description Shows whether an LL alarm is currently active.

Additional information

Read access	Operator
Write access	-

LL+L alarm**Navigation**
  Expert → Application → Alarm → LL+L alarm (13869)
Prerequisite**Alarm mode (→  257) ≠ Off****Description**

Shows whether an LL or L alarm is currently active.

Additional information

Read access	Operator
Write access	-

Any error**Navigation**
  Expert → Application → Alarm → Any error (13867)
Prerequisite**Alarm mode (→  257) ≠ Off****Description**

Show whether any alarm is currently active.

User interface

- Unknown
- Inactive
- Active
- Error

Factory setting

Unknown

Additional information

Read access	Operator
Write access	-

Clear alarm**Navigation**
  Expert → Application → Alarm → Clear alarm (13861)
Prerequisite**Alarm mode (→  257) = Latching****Description**

Deletes an alarm which is still active although the alarm condition is no longer present.

Selection

- No
- Yes

Factory setting

No

Additional information

Read access	Operator
Write access	Maintenance

Alarm hysteresis**Navigation**

Diagram: Expert → Application → Alarm → Alarm → Alarm hysteresis (13862)

Prerequisite

Alarm mode (→ 257) ≠ Off

Description

Defines the hysteresis for the limit values. The hysteresis prevents constant changes of the alarm state if the level is near one of the limit values.

User entry

Signed floating-point number

Factory setting

0.001

Additional information

Read access	Maintenance
Write access	Maintenance

Damping factor**Navigation**

Diagram: Expert → Application → Alarm → Alarm → Damping factor (13860)

Description

Defines the damping constant (in seconds).

User entry

0 to 999.9 s

Factory setting

0 s

Additional information

Read access	Operator
Write access	Maintenance

3.6 "Tank values" submenu

Navigation

◀ ▶ Expert → Tank values

▶ Tank values	
Net weight	→ 265
Gauge status	→ 265
Balance flag	→ 266
Standby level	→ 266
Offset standby distance	→ 267
One-time command status	→ 268
▶ Level	→ 268
▶ Temperature	→ 273
▶ Density	→ 276
▶ Pressure	→ 280
▶ GP values	→ 281

Net weight

Navigation

◀ ▶ Expert → Tank values → Net weight (8007)

Description

Shows the corrected weight data from the detector, as compensated by the drum table. This weight is used for measurement.

Additional information

Read access	Operator
Write access	-

Gauge status

Navigation

◀ ▶ Expert → Tank values → Gauge status (8081)

Description

Indicates the current status of the device gauge command.

Additional information

Read access	Operator
Write access	-

Balance flag**Navigation**
 Expert → Tank values → Balance flag (8006)
Description

Indicates the validity of the Measurement. If balanced, corresponding Value (Liquid Level, Upper Interface, Lower Interface, Tank Bottom) is updated.

Additional information

Read access	Operator
Write access	-

Standby level**Navigation**
 Expert → Tank values → Standby level (8194)
Description

Defines the position in the tank where the displacer waits for the liquid level to rise during standby level gauge command.

User entry


-999 999.9 to 999 999.9 mm

Factory setting

0 mm

Additional information

Read access	Operator
Write access	Maintenance

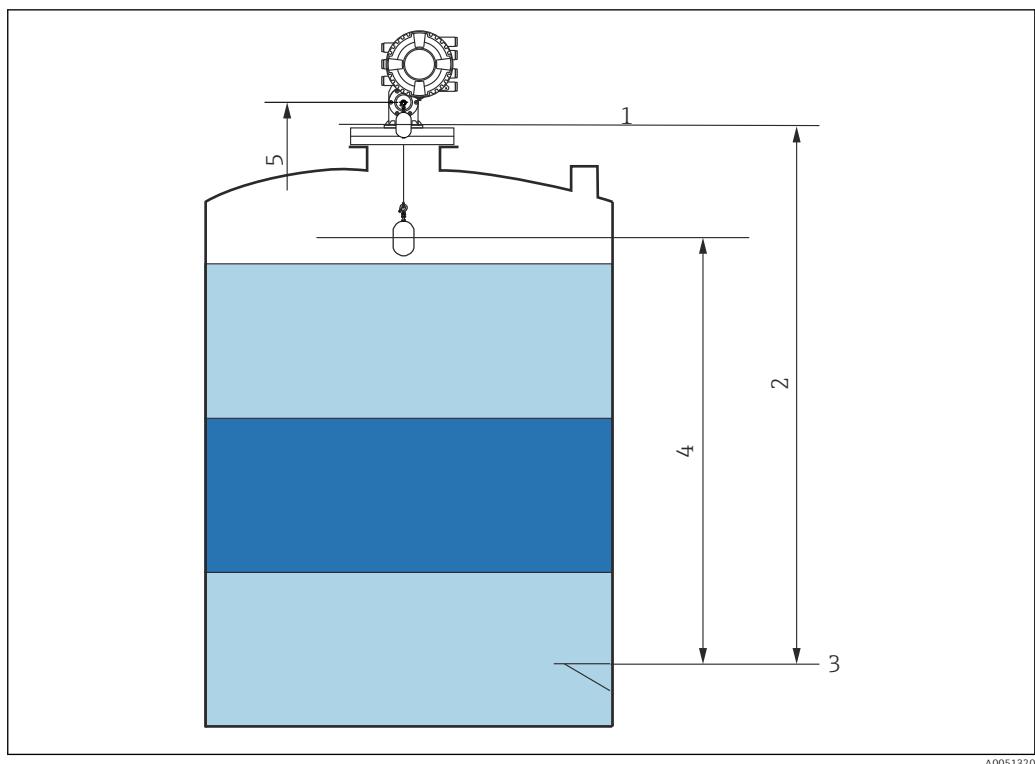

24 Displacer waiting for the liquid level to rise during standby level gauge command

- 1 Gauge reference height
- 2 Empty
- 3 Datum plate
- 4 Standby level
- 5 Reference position

Offset standby distance

Navigation

Expert → Tank values → Offset distance (8107)

Description


Defines the distance from the current position where the displacer waits for the liquid level to rise during offset standby gauge command.

User entry

0 to 999 999.9 mm

Factory setting

500 mm

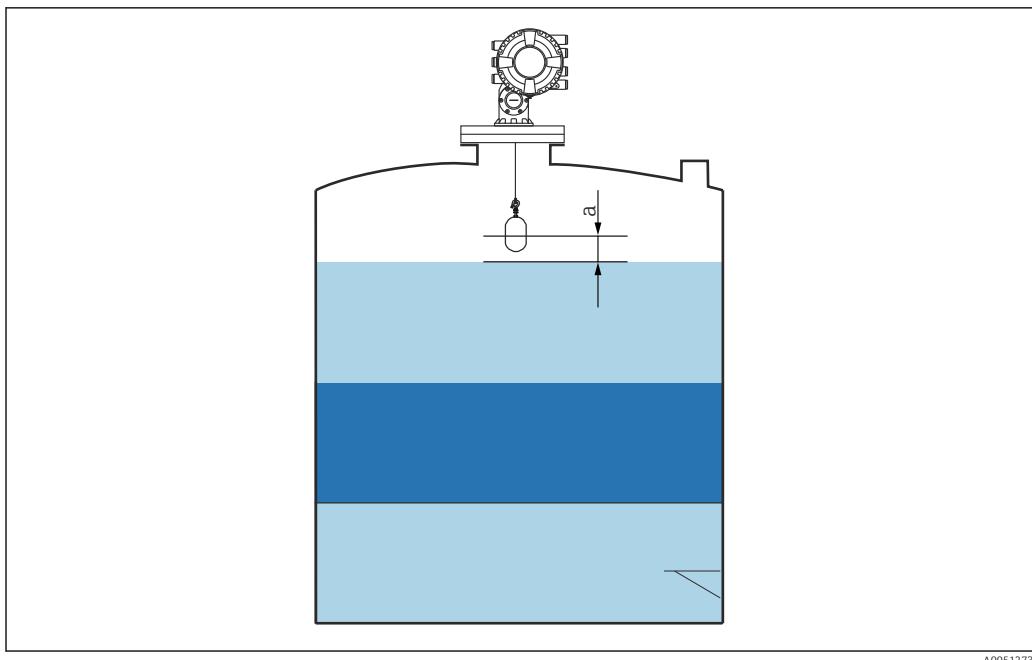Additional information

25 a: Offset standby distance

One-time command status**Navigation**

Expert → Tank values → One-time Cmd (8201)

Description

Indicates the status of the last executed one-time gauge command.

Additional information

Read access	Operator
Write access	-

Additional information

i One-time command is available for all gauge commands, excepting Level, Stop, Up, and Interface.

3.6.1 "Level" submenu**Navigation**

Expert → Tank values → Level

► Level	
Tank level	→ 269
Tank Level %	→ 269
Tank ullage	→ 270
Tank ullage %	→ 270

Upper interface level	→ 270
Upper interface level timestamp	→ 270
Lower interface level	→ 271
Lower interface level timestamp	→ 271
Bottom level	→ 271
Bottom level timestamp	→ 271
Water level	→ 272
Measured level	→ 272
Distance	→ 272
Displacer position	→ 272

Tank level

Navigation

Expert → Tank values → Level → Tank level (14655)

Description

Shows the distance from the zero position (tank bottom or datum plate) to the product surface.

Additional information

Read access	Operator
Write access	-

Tank Level %

Navigation

Expert → Tank values → Level → Tank Level % (14654)

Description

Shows the level as a percentage of the full measuring range.

Additional information

Read access	Operator
Write access	-

Tank ullage

Navigation

Expert → Tank values → Level → Tank ullage (14657)

Description

Shows the remaining empty space in the tank.

Additional information

Read access	Operator
Write access	-

Tank ullage %

Navigation

Expert → Tank values → Level → Tank ullage % (14658)

Description

Shows the remaining empty space in percentage related to parameter tank reference height.

Additional information

Read access	Operator
Write access	-

Upper interface level

Navigation

Expert → Tank values → Level → Upper I/F level (15003)

Description

Shows measured interface level from zero position (tank bottom or datum plate). Value is updated when device generates a valid Interface measurement.

Additional information

Read access	Maintenance
Write access	-

Upper interface level timestamp

Navigation

Expert → Tank values → Level → Up I/F timestamp (8055)

Description

Shows timestamp for the last measured upper interface level.

Additional information

Read access	Operator
Write access	-

Lower interface level

Navigation Expert → Tank values → Level → Lower I/F level (15004)**Description**

Shows measured interface level from zero position (tank bottom or datum plate). Value is updated when device generates a valid interface measurement.

Additional information

Read access	Maintenance
Write access	-

Lower interface level timestamp

Navigation Expert → Tank values → Level → LowI/F timestamp (8061)**Description**

Shows timestamp of the last measured lower interface level.

Additional information

Read access	Operator
Write access	-

Bottom level

Navigation Expert → Tank values → Level → Bottom level (15018)**Description**

Shows the bottom level.

Additional information

Read access	Operator
Write access	-

Bottom level timestamp

Navigation Expert → Tank values → Level → BotLev timestamp (8048)**Description**

Shows the timestamp for measured bottom level.

Additional information

Read access	Operator
Write access	-

Water level

Navigation Expert → Tank values → Level → Water level (14970)**Description**

Shows the bottom water level.

Additional information

Read access	Operator
Write access	-

Measured level

Navigation Expert → Tank values → Level → Measured level (14653)**Description**

Shows the measured level without any correction from the tank calculations.

Additional information

Read access	Operator
Write access	-

Distance

Navigation Expert → Tank values → Level → Distance (8103)**Description**

Shows measured distance from reference position.

Additional information

Read access	Operator
Write access	-

Displacer position

Navigation Expert → Tank values → Level → Displacer pos (15019)**Description**

Shows the displacer position.


Additional information

Read access	Operator
Write access	-

3.6.2 "Temperature" submenu

Navigation

Expert → Tank values → Temperature

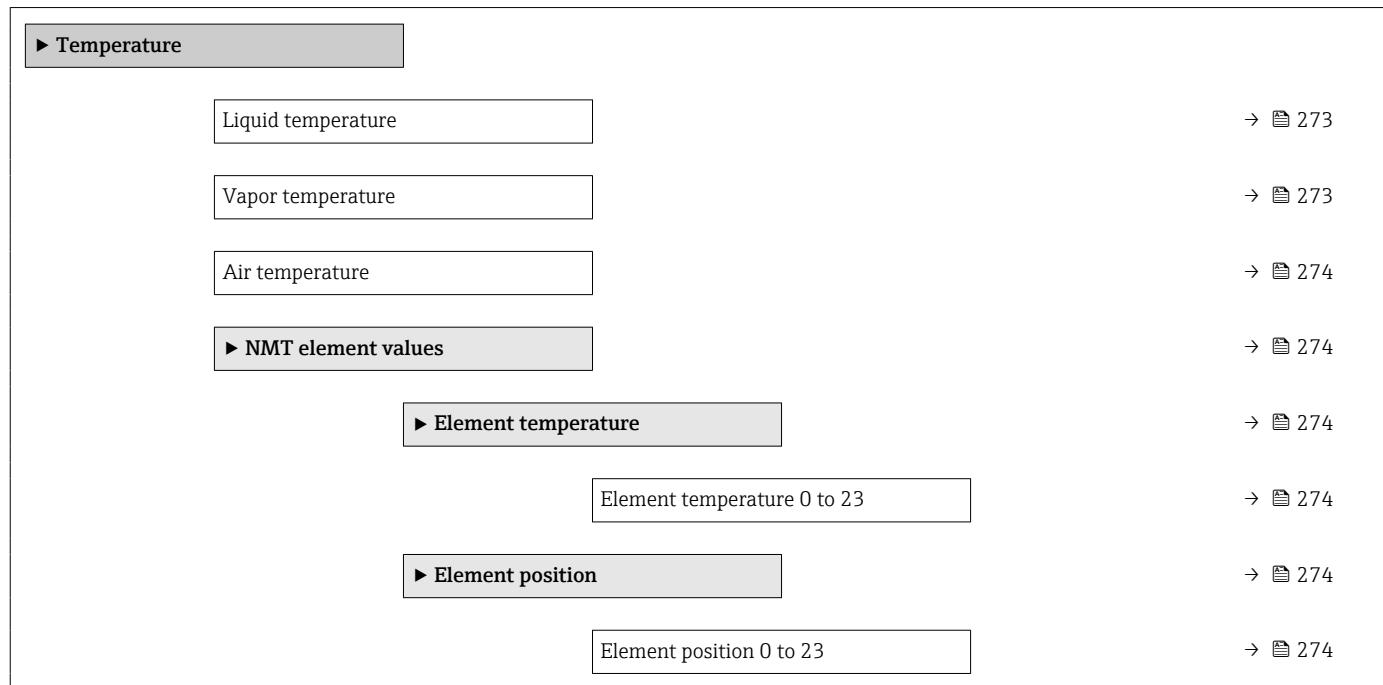

Liquid temperature

Navigation

Expert → Tank values → Temperature → Liquid temp. (14978)

Description

Shows the average or spot temperature of the measured liquid.

Additional information

Read access	Operator
Write access	-

Vapor temperature

Navigation

Expert → Tank values → Temperature → Vapor temp. (14985)

Description

Shows the measured vapor temperature.

Additional information

Read access	Operator
Write access	-

Air temperature

Navigation Expert → Tank values → Temperature → Air temp. (14986)**Description**

Shows the air temperature.

Additional information

Read access	Operator
Write access	-

"NMT element values" submenu*Navigation*  Expert → Tank values → Temperature → NMT elem. values**"Element temperature" submenu***Navigation*  Expert → Tank values → Temperature → NMT elem. values
→ Element temp. → Element temp 0 to 23 (14984)

Element temperature 1 to 24

Navigation Expert → Tank values → Temperature → NMT elem. values → Element temp.
→ Element temp 1 to 24 (14984–1 to 24)**Description**

Shows the temperature of an element in the NMT.

Additional information

Read access	Operator
Write access	-

"Element position" submenu*Navigation*  Expert → Tank values → Temperature → NMT elem. values
→ Element position

Element position 1 to 24

Navigation Expert → Tank values → Temperature → NMT elem. values → Element position
→ Element pos. 1 to 24 (15014–1 to 24)**Description**

Shows the position of the selected element in the NMT.

Additional information

Read access	Operator
Write access	-

3.6.3 "Density" submenu

Navigation

Expert → Tank values → Density

► Density	
Observed density	→ 276
Observed density temperature	→ 277
Vapor density	→ 277
Air density	→ 277
Measured upper density	→ 277
Upper density timestamp	→ 278
Measured middle density	→ 278
Middle Density Timestamp	→ 278
Measured lower density	→ 278
Lower density timestamp	→ 279
► Profile density	
Profile density 0 to 49	→ 279
Profile density position 0 to 49	→ 279

Observed density

Navigation

Expert → Tank values → Density → Observed density (13451)

Description

Calculated density of the product.

Additional information

Read access	Operator
Write access	-

 This value is calculated from different measured variables depending on the selected calculation method.

Observed density temperature

Navigation
 Expert → Tank values → Density → Obs. dens. temp. (13453)
Description

Corresponding temperature of measured density. Can be used for reference density calculation.

User interface

Signed floating-point number

Factory setting

0 °C

Vapor density

**Navigation**
 Expert → Tank values → Density → Vapor density (14981)
Description

Defines the density of the gas phase in the tank.

User entry

0.0 to 500.0 kg/m³

Factory setting

1.2 kg/m³

Additional information

Read access	Operator
Write access	Maintenance

Air density

**Navigation**
 Expert → Tank values → Density → Air density (14980)
Description

Defines the density of the air surrounding the tank.

User entry

0.0 to 500.0 kg/m³

Factory setting

1.2 kg/m³

Additional information

Read access	Operator
Write access	Maintenance

Measured upper density

Navigation
 Expert → Tank values → Density → Meas upper dens. (15001)
Description

Shows the density of the upper phase.

Additional information

Read access	Operator
Write access	-

Upper density timestamp**Navigation**
 Expert → Tank values → Density → UpDens timestamp (8067)
Description

Shows timestamp of the last measured upper density.

Additional information

Read access	Operator
Write access	-

Measured middle density**Navigation**
 Expert → Tank values → Density → Meas middle dens (14997)
Description

Density of the middle phase.

Additional information

Read access	Operator
Write access	-

Middle Density Timestamp**Navigation**
 Expert → Tank values → Density → MidDensTimestamp (8011)
Description

Shows the timestamp of the last measured middle density.

Additional information

Read access	Operator
Write access	-

Measured lower density**Navigation**
 Expert → Tank values → Density → Meas lower dens. (15002)
Description

Density of the lower phase.

Additional information

Read access	Maintenance
Write access	-

Lower density timestamp

Navigation  Expert → Tank values → Density → LowerDensTimestp (8122)

Description Shows timestamp of last measured lower density.

Additional information

Read access	Operator
Write access	-

"Profile density" submenu

Navigation  Expert → Tank values → Density → Profile density

Profile density 0 to 49

Navigation  Expert → Tank values → Density → Profile density → Profile dens 0 to 49 (8068)

Description Shows the density measurement at the corresponding profile density position.

Additional information

Read access	Operator
Write access	-

Profile density position 0 to 49

Navigation  Expert → Tank values → Density → Profile density → Profile pos 0 to 49 (8077)

Description Shows the position where the corresponding density was measured.


Additional information

Read access	Operator
Write access	-

3.6.4 "Pressure" submenu

Navigation

Expert → Tank values → Pressure

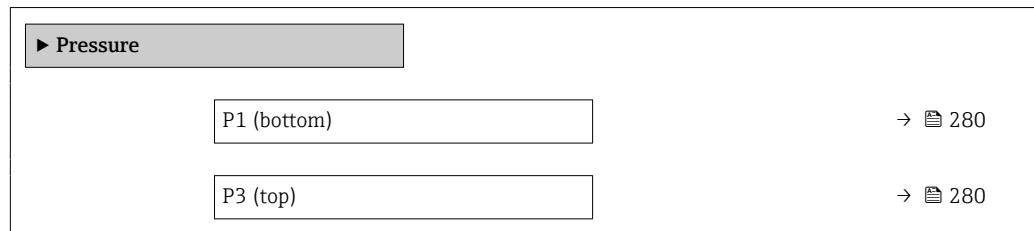

P1 (bottom)

Navigation

Expert → Tank values → Pressure → P1 (bottom) (14983)

Description

Shows the pressure at the tank bottom.

Additional information

Read access	Operator
Write access	-

P3 (top)

Navigation

Expert → Tank values → Pressure → P3 (top) (14988)

Description

Shows the pressure (P3) at the top transmitter.

Additional information

Read access	Operator
Write access	-

3.6.5 "GP values" submenu

Navigation

Expert → Tank values → GP values

► GP values	
GP 1 to 4 name	→ 281
GP Value 1	→ 281
GP Value 2	→ 281
GP Value 3	→ 282
GP Value 4	→ 282

GP 1 to 4 name



Navigation

Expert → Tank values → GP values → GP 1 name (14963)

Description

Defines the label associated with the respective GP value.

User entry

Character string comprising numbers, letters and special characters (15)

Factory setting

GP Value 1

Additional information

Read access	Operator
Write access	Maintenance

GP Value 1

Navigation

Expert → Tank values → GP values → GP Value 1 (14966)

Description

Displays the value that will be used as general purpose value.

Additional information

Read access	Operator
Write access	-

GP Value 2

Navigation

Expert → Tank values → GP values → GP Value 2 (14967)

Description

Displays the value that will be used as general purpose value.

Additional information

Read access	Operator
Write access	-

GP Value 3

Navigation Expert → Tank values → GP values → GP Value 3 (14968)**Description**

Displays the value that will be used as general purpose value.

Additional information

Read access	Operator
Write access	-

GP Value 4

Navigation Expert → Tank values → GP values → GP Value 4 (14969)**Description**

Displays the value that will be used as general purpose value.

Additional information

Read access	Operator
Write access	-

3.7 "Diagnostics" submenu

Navigation

Diagram Expert → Diagnostics

► Diagnostics	
Actual diagnostics	→ 285
Timestamp	→ 286
Previous diagnostics	→ 286
Timestamp	→ 287
Operating time from restart	→ 287
Operating time	→ 287
Date/time	→ 287
► Diagnostic list	→ 288
Diagnostics 1 to 5	→ 288
Timestamp 1 to 5	→ 288
► Event logbook	→ 289
► Simulation	→ 290
Device alarm simulation	→ 290
Diagnostic event simulation	→ 290
Simulation distance on	→ 291
Simulation distance	→ 291
Current output 1 to 2 simulation	→ 291
Simulation value	→ 292
► Device information	→ 293
Device tag	→ 293
Serial number	→ 294
Firmware version	→ 294

Firmware CRC	→ 294
Weight and measures configuration CRC	→ 294
Device name	→ 295
Order code	→ 295
Extended order code 1 to 3	→ 295
ENP version	→ 295
Device type	→ 296
Module type	→ 296
Communication Slot	→ 296
► Board info	→ 298
Date/time	→ 287
System temperature	→ 298
W&M lock switch	→ 298
► Data logging	→ 300
Assign channel 1 to 4	→ 301
Logging interval	→ 302
Clear logging data	→ 303
► Device check	→ 305
► Commissioning check	→ 306
Commissioning check	→ 306
Result drum check	→ 306
Step X / 11	→ 306
► Commissioning parameter	→ 307
Step X / 11	→ 307

Result drum check	→ 307
Displacer weight tolerance	→ 307
Reference calibration incomplete	→ 308

► LRC	
► LRC 1 to 2	→ 309
LRC Mode	→ 309
Allowed difference	→ 309
Check fail threshold	→ 310
Reference level source	→ 310
Reference switch source	→ 311
Reference switch mode	→ 311
Reference level	→ 311
Reference switch level	→ 312
Reference point level	
Reference switch state	→ 312
Start reference measurement	
Check level	→ 312
Check status	→ 313
Check timestamp	→ 313

Actual diagnostics

Navigation

Expert → Diagnostics → Actual diagnos. (0691)

Description

Displays the currently active diagnostic message.

If there is more than one pending diagnostic event, the message for the diagnostic event with the highest priority is displayed.

Additional information

Read access	Operator
Write access	-

The display consists of:

- Symbol for event behavior
- Code for diagnostic behavior
- Operating time of occurrence
- Event text

 If several messages are active at the same time, the messages with the highest priority is displayed.

 Information on what is causing the message, and remedy measures, can be viewed via the  symbol on the display.

Timestamp**Navigation**

 Expert → Diagnostics → Timestamp (0667)

Description

Displays the timestamp for the currently active diagnostic message.

Additional information

Read access	Operator
Write access	-

Previous diagnostics**Navigation**

  Expert → Diagnostics → Prev.diagnostics (0690)

Description

Displays the diagnostic message for the last diagnostic event that has ended.

Additional information

Read access	Operator
Write access	-

The display consists of:

- Symbol for event behavior
- Code for diagnostic behavior
- Operating time of occurrence
- Event text

 If several messages are active at the same time, the messages with the highest priority is displayed.

 Information on what is causing the message, and remedy measures, can be viewed via the  symbol on the display.

Timestamp

Navigation Expert → Diagnostics → Timestamp (0672)**Description**

Displays the timestamp of the diagnostic message generated for the last diagnostic event that has ended.

Additional information

Read access	Operator
Write access	-

Operating time from restart

Navigation Expert → Diagnostics → Time fr. restart (0653)**Description**

Indicates how long the device has been in operation since the last time the device was restarted.

Additional information

Read access	Operator
Write access	-

Operating time

Navigation Expert → Diagnostics → Operating time (0652)**Description**

Indicates how long the device has been in operation.

Additional information

Read access	Operator
Write access	-

Date/time

Navigation Expert → Diagnostics → Date/time (0790)**Description**

Displays the device internal real time clock.


Additional information

Read access	Operator
Write access	-

3.7.1 "Diagnostic list" submenu

Navigation

Diagram Expert → Diagnostics → Diagnostic list

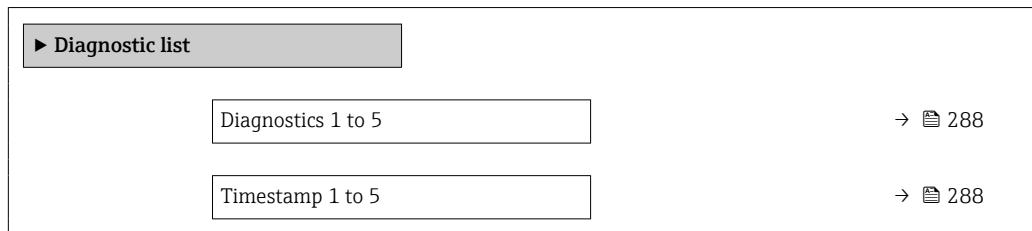

Diagnostics 1 to 5

Navigation

Diagram Expert → Diagnostics → Diagnostic list → Diagnostics 1 to 5 (0692–1 to 5)

Description

Displays the currently active diagnostic message with the highest priority.

Additional information

The display consists of:

- Symbol for event behavior
- Code for diagnostic behavior
- Operating time of occurrence
- Event text

Timestamp 1 to 5

Navigation

Diagram Expert → Diagnostics → Diagnostic list → Timestamp 1 to 5 (0683–1 to 5)

Description

Timestamp of the diagnostic message.

Additional information

Read access	Operator
Write access	-

3.7.2 "Event logbook" submenu

Structure of the submenu on the local display

Navigation



Expert → Diagnostics → Event logbook

► Event logbook

Description of parameters

Navigation



Expert → Diagnostics → Event logbook

3.7.3 "Simulation" submenu

Navigation

Expert → Diagnostics → Simulation

▶ Simulation	
Device alarm simulation	→ 290
Diagnostic event simulation	→ 290
Simulation distance on	→ 291
Simulation distance	→ 291
Current output 1 to 2 simulation	→ 291
Simulation value	→ 292

Device alarm simulation



Navigation

Expert → Diagnostics → Simulation → Dev. alarm sim. (0654)

Description

Switch the device alarm on and off.

Selection

- Off
- On

Factory setting

Off

Additional information

Read access	Operator
Write access	Maintenance

Diagnostic event simulation



Navigation

Expert → Diagnostics → Simulation → Diagnostic event (0737)

Description

Select a diagnostic event to simulate this event.

Selection

The diagnostic events of the device

Factory setting

Off

Additional information

Read access	Operator
Write access	Maintenance

 To terminate the simulation, select **Off**.

Simulation distance on**Navigation**

  Expert → Diagnostics → Simulation → Sim distance on (8002)

Description

Switches the distance simulation on or off.

Selection

- Off
- On

Factory setting

Off

Additional information

Read access	Operator
Write access	Maintenance

Simulation distance**Navigation**

  Expert → Diagnostics → Simulation → Sim distance (8003)

Prerequisite

Simulation distance on (→ [291](#)) = On

Description

Defines the distance value to be simulated.

User entry

Signed floating-point number

Factory setting

0 mm

Additional information

Read access	Operator
Write access	Maintenance

Current output N simulation**Navigation**

  Expert → Diagnostics → Simulation → Curr.outp N sim. (13985)

Prerequisite

- The device has an Anlog I/O module.
- **Operating mode** (→ [150](#)) = 4..20mA output or HART slave +4..20mA output

Description

Switches the simulation of the current on or off.

Selection	<ul style="list-style-type: none">■ Off■ On				
Factory setting	Off				
Additional information	<table border="1"><tr><td>Read access</td><td>Operator</td></tr><tr><td>Write access</td><td>Maintenance</td></tr></table>	Read access	Operator	Write access	Maintenance
Read access	Operator				
Write access	Maintenance				

Simulation value					
Navigation	  Expert → Diagnostics → Simulation → Simulation value (13976)				
Prerequisite	Current output simulation (→  291) = On				
Description	Defines the current to be simulated.				
User entry	3.4 to 23 mA				
Factory setting	The current at the time the simulation was started.				
Additional information	<table border="1"><tr><td>Read access</td><td>Operator</td></tr><tr><td>Write access</td><td>Maintenance</td></tr></table>	Read access	Operator	Write access	Maintenance
Read access	Operator				
Write access	Maintenance				

3.7.4 "Device information" submenu

Navigation

Expert → Diagnostics → Device info

► Device information	
Device tag	→ 293
Serial number	→ 294
Firmware version	→ 294
Firmware CRC	→ 294
Weight and measures configuration CRC	→ 294
Device name	→ 295
Order code	→ 295
Extended order code 1 to 3	→ 295
ENP version	→ 295
Device type	→ 296
Build version	→ 296
Module type	→ 296
Communication Slot	→ 296
Recovery state	→ 297
► Board info	

Device tag

Navigation

Expert → Diagnostics → Device info → Device tag (0011)

Description

Shows the device tag.

User interface

Character string comprising numbers, letters and special characters

Factory setting

- none -

Additional information

Read access	Operator
Write access	-

Serial number**Navigation**
 Expert → Diagnostics → Device info → Serial number (0009)
Description

The serial number is a unique alphanumerical code identifying the device.
It is printed on the nameplate.

In combination with the Operations app it allows to access all device related documentation.

Additional information

Read access	Operator
Write access	-

Firmware version**Navigation**
 Expert → Diagnostics → Device info → Firmware version (0010)
Description

Displays the device firmware version installed.

Additional information

Read access	Operator
Write access	-

Firmware CRC**Navigation**
 Expert → Diagnostics → Device info → Firmware CRC (8563)
Description

Result of the cyclic redundancy check of the firmware.

Additional information

Read access	Operator
Write access	-

Weight and measures configuration CRC**Navigation**
 Expert → Diagnostics → Device info → W&M config CRC (8564)
Description

Result of the cyclic redundancy check of the weights and measure relevant parameters.

Additional information

Read access	Operator
Write access	-

Device name**Navigation**
 Expert → Diagnostics → Device info → Device name (0013)
Description

Use this function to display the device name. It can also be found on the nameplate.

Additional information

Read access	Operator
Write access	-

Order code**Navigation**
 Expert → Diagnostics → Device info → Order code (0008)
Description

Shows the device order code.

Additional information

Read access	Operator
Write access	Service

Extended order code 1 to 3**Navigation**
 Expert → Diagnostics → Device info → Ext. order cd. 1 (0023)
Description

Display the three parts of the extended order code.

User interface

Character string comprising numbers, letters and special characters

Additional information

Read access	Operator
Write access	Service

The extended order code indicates the selected option of all ordering features and thus uniquely identifies the device.

ENP version**Navigation**
 Expert → Diagnostics → Device info → ENP version (0012)
Description

Shows the version of the electronic nameplate (ENP).

Additional information

Read access	Operator
Write access	-

Device type**Navigation**
 Expert → Diagnostics → Device info → Device type (8561)
Description

Displays the device type.

Additional information

Read access	Operator
Write access	-

Build version**Navigation**
 Expert → Diagnostics → Device info → Build version (0007)
Description

Shows the device firmware build version installed.

Additional information

Read access	Operator
Write access	-

Module type**Navigation**
 Expert → Diagnostics → Device info → Module type (8526)
Description

Shows the type of installed IO module.

Additional information

Read access	Operator
Write access	-

Communication Slot**Navigation**
 Expert → Diagnostics → Device info → Comm. Slot (13285)
Description

Indicates which IOM slot contains the communication protocol interface board.

Additional information

Read access	Operator
Write access	-

Recovery state

Navigation  Expert → Diagnostics → Device info → Recovery state (8565)

Description Indicate the state of the backup data process.

User interface

- Inactive
- distributing
- restoring
- Distribution done
- Distribution failed
- Operating normally
- Restore done
- Restore failed

Factory setting Inactive

"Board info" submenu**Navigation**
  Expert → Diagnostics → Device info → Board info

 Board info	
Date/time	→  298
System temperature	→  298
W&M lock switch	→  298

Date/time**Navigation**
  Expert → Diagnostics → Device info → Board info → Date/time (0790)
Description

Displays the device internal real time clock.

Additional information

Read access	Operator
Write access	-

System temperature**Navigation**
  Expert → Diagnostics → Device info → Board info → System temp. (8553)
Description

Shows the electronic temperature of the main board.

User interface

Signed floating-point number

Factory setting

0 °C

Additional information

Read access	Operator
Write access	-

W&M lock switch**Navigation**
  Expert → Diagnostics → Device info → Board info → W&M lock switch (8558)
Description

Shows the position of the weights and measure (WP) switch.

User interface

- Enabled
- Disabled

Factory setting Enabled

Additional information


Read access	Operator
Write access	-

3.7.5 "Data logging" submenu

Structure of the submenu on the local display

Navigation


☰ ☰ Expert → Diagnostics → Data logging

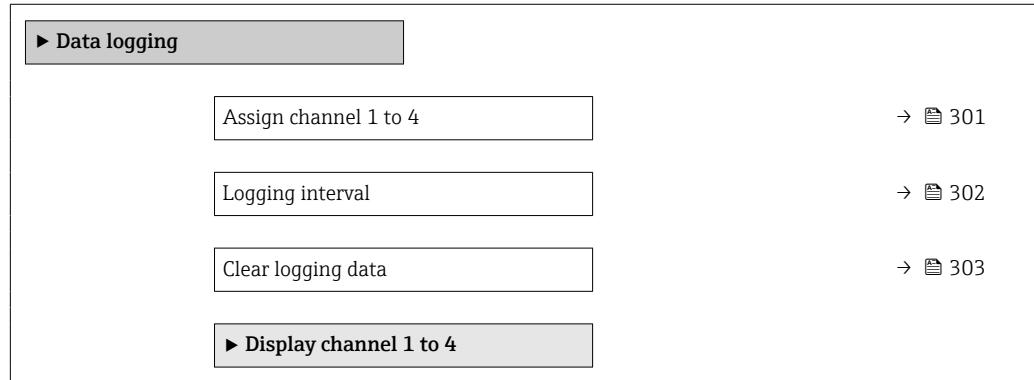

Structure of the submenu in an operating tool

Navigation

☰ ☰ Expert → Diagnostics → Data logging

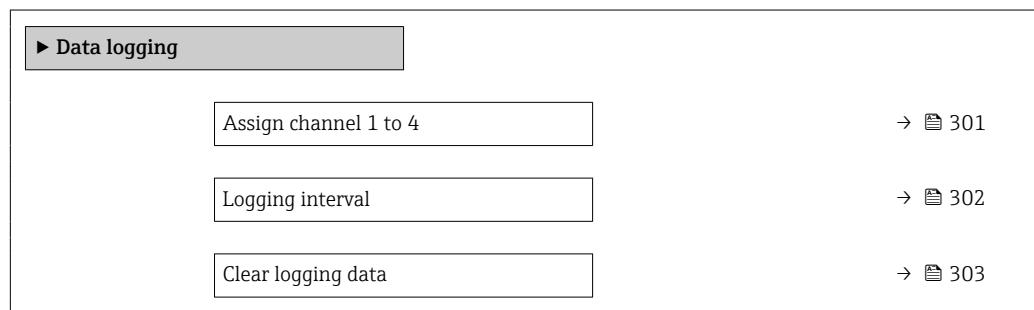

Description of parameters

Navigation

Diagram Expert → Diagnostics → Data logging

Assign channel 1 to 4



Navigation

Diagram Expert → Diagnostics → Data logging → Assign chan. 1 (0851)

Description

Assign a process variable to logging channel.

Selection

- Off
- Tank level
- Measured level
- Tank level %
- Distance
- Water level
- Upper interface level
- Lower interface level
- Displacer position *
- Upper density
- Middle density
- Lower density
- Bottom level
- Average profile density *
- Liquid temperature
- Vapor temperature
- Air temperature
- Tank ullage
- Tank ullage %
- Observed density value
- P1 (bottom)
- P2 (middle)
- P3 (top)
- GP 1 value
- GP 2 value
- GP 3 value
- GP 4 value
- AIO B1-3 value *
- AIO B1-3 value mA *
- AIO B1-3 value % *
- AIO C1-3 value *
- AIO C1-3 value mA *
- AIO C1-3 value % *
- AIP B4-8 value *
- AIP C4-8 value *
- Absolute echo amplitude *
- Amplitude eval distance *
- DiffPhase *

Factory setting

Off

* Visibility depends on order options or device settings

Additional information

A total of 1000 measured values can be logged. This means:

- 1000 data points if 1 logging channel is used
- 500 data points if 2 logging channels are used
- 333 data points if 3 logging channels are used
- 250 data points if 4 logging channels are used

If the maximum number of data points is reached, the oldest data points in the data log are cyclically overwritten in such a way that the last 1000, 500, 333 or 250 measured values are always in the log (ring memory principle).

 The logged data are deleted if a new option is selected in this parameter.

Read access	Operator
Write access	Maintenance

Logging interval**Navigation**

 Expert → Diagnostics → Data logging → Logging interval (0856)

 Expert → Diagnostics → Data logging → Logging interval (0856)

Description

Define the logging interval t_{log} for data logging. This value defines the time interval between the individual data points in the memory.

User entry

1.0 to 3 600.0 s

Factory setting

10.0 s

Additional information

This parameter defines the interval between the individual data points in the data log, and thus the maximum loggable process time T_{log} :

- If 1 logging channel is used: $T_{log} = 1000 \cdot t_{log}$
- If 2 logging channels are used: $T_{log} = 500 \cdot t_{log}$
- If 3 logging channels are used: $T_{log} = 333 \cdot t_{log}$
- If 4 logging channels are used: $T_{log} = 250 \cdot t_{log}$

Once this time elapses, the oldest data points in the data log are cyclically overwritten such that a time of T_{log} always remains in the memory (ring memory principle).

 The logged data are deleted if this parameter is changed.

*Example***When using 1 logging channel**

- $T_{log} = 1000 \cdot 1 \text{ s} = 1000 \text{ s} \approx 16.5 \text{ min}$
- $T_{log} = 1000 \cdot 10 \text{ s} = 1000 \text{ s} \approx 2.75 \text{ h}$
- $T_{log} = 1000 \cdot 80 \text{ s} = 80000 \text{ s} \approx 22 \text{ h}$
- $T_{log} = 1000 \cdot 3600 \text{ s} = 3600000 \text{ s} \approx 41 \text{ d}$

Read access	Operator
Write access	Maintenance

Clear logging data

- Navigation**
- Expert → Diagnostics → Data logging → Clear logging (0855)
 - Expert → Diagnostics → Data logging → Clear logging (0855)

Description Clear the entire logging data.

Selection

- Cancel
- Clear data

Factory setting Cancel


Additional information

Read access	Operator
Write access	Maintenance

"Display channel 1 to 4" submenu

i The **Display channel 1 to 4** submenu is only available when operating via the local display. When operating via FieldCare, the diagram can be displayed in the "Event List / HistoROM" function.

The **Display channel 1 to 4** submenu displays the measured value trend of the respective logging channel.

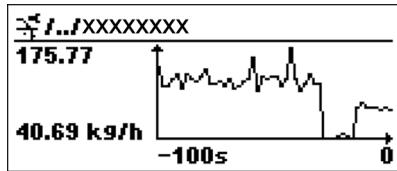

- x-axis: displays 125 to 500 measured values of a process variable (the number of values depending on the number of selected channels).
- y-axis: displays the approximate measured value span and constantly adapts this to the ongoing measurement.

i To quit the diagram and to return to the operating menu, press **⊕** and **⊖** simultaneously.

Navigation




Expert → Diagnostics → Data logging → Displ.channel 1 to 4

3.7.6 "Device check" submenu

Navigation

Expert → Diagnostics → Device check

► Device check

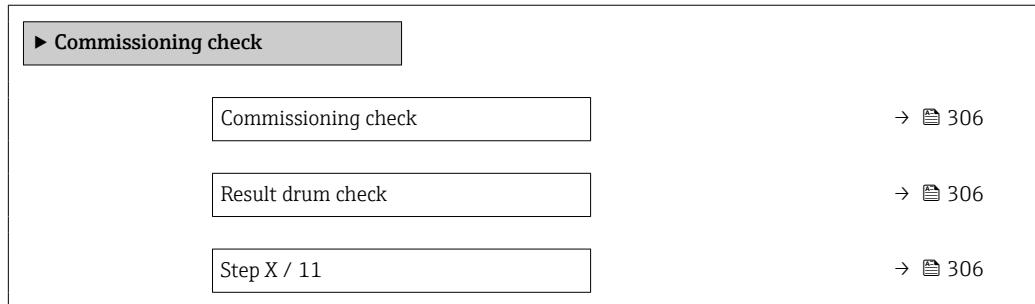"Commissioning check" wizard**Navigation**
  Expert → Diagnostics → Device check → Commission check
**Commissioning check****Navigation**
  Expert → Diagnostics → Device check → Commission check → Commission check
Description

This sequence supports checking of the hardware on sensor side and correct installation of the sensor.

Additional information

Read access	Operator
Write access	Maintenance

Result drum check**Navigation**
  Expert → Diagnostics → Device check → Commission check → Result drum chk (8155)
Description

Gives feedback on the latest status of the commissioning check.

Additional information

Read access	Operator
Write access	-

Step X / 11**Navigation**
  Expert → Diagnostics → Device check → Commission check → Step X / 11 (8143)
Description

Indicates which step of the commissioning check is currently running.

Additional information

Read access	Operator
Write access	-

"Commissioning parameter" submenu

Navigation

Expert → Diagnostics → Device check → Commission para.

► Commissioning parameter	
Step X / 11	→ 307
Result drum check	→ 307
Displacer weight tolerance	→ 307
Reference calibration incomplete	→ 308

Step X / 11

Navigation

Expert → Diagnostics → Device check → Commission para. → Step X / 11 (8143)

Description

Indicates which step of the commissioning check is currently running.

Additional information

Read access	Operator
Write access	-

Result drum check

Navigation

Expert → Diagnostics → Device check → Commission para. → Result drum chk (8155)

Description

Gives feedback on the latest status of the commissioning check.

Additional information

Read access	Operator
Write access	-

Displacer weight tolerance



Navigation

Expert → Diagnostics → Device check → Commission para. → DispWeightToler (8161)

Description

Sets the tolerance of the displacer weight verification during commissioning check.

User interface

0 to 99.9 g

Factory setting

5 g

Additional information

Read access	Operator
Write access	Service

Reference calibration incomplete

Navigation Expert → Diagnostics → Device check → Commission para. → Ref cal. incompl (8157)**User interface**

0 to 1

Factory setting

0

Additional information

Read access	Operator
Write access	-

3.7.7 "LRC 1 to 2" submenu

 Additional information about the configuration of the level reference check (LRC) function: Operating instructions

Navigation

  Diagnostics → LRC → LRC 1 to 2

LRC Mode



Navigation

  Diagnostics → LRC → LRC 1 to 2 → LRC Mode (17901–1 to 2)

Description

Activates or deactivates one of the level reference check (LRC) modes.

Selection

- Off
- Compare with level device
- Compare with level switch
- Measure reference point *

Factory setting

Off

Additional information

 Read access	Operator
 Write access	Maintenance

Additional information

The option of the Measure reference point is not available for NMS8x.

Allowed difference



Navigation

  Diagnostics → LRC → LRC 1 to 2 → Allowed diff. (17902–1 to 2)

Description

Defines the allowed difference between the tank level and the reference.

User entry

1 to 1 000 mm

Factory setting

10 mm

Additional information

 Read access	Operator
 Write access	Maintenance

* Visibility depends on order options or device settings

Check fail threshold**Navigation**

Diagnostics → LRC → LRC 1 to 2 → Fail threshold (17913–1 to 2)

Description

Defines how many minutes the comparison has to fail before the check is failed. Note:
Only for mode "Compare with level device".

User entry

1 to 60

Factory setting

3

Additional information

Read access	Operator
Write access	Maintenance

Reference level source**Navigation**

Diagnostics → LRC → LRC 1 to 2 → Reference source (17903–1 to 2)

Description

Defines the source for the reference level. Note: Only for mode "Compare with level device".

Selection

- No input value
- HART device 1 level *
- HART device 2 level *
- HART device 3 level *
- HART device 4 level *
- HART device 5 level *
- HART device 6 level *
- HART device 7 level *
- HART device 8 level *
- HART device 9 level *
- HART device 10 level *
- HART device 11 level *
- HART device 12 level *
- HART device 13 level *
- HART device 14 level *
- HART device 15 level *

Factory setting

No input value

Additional information

Read access	Operator
Write access	Maintenance

* Visibility depends on order options or device settings

Reference switch source

**Navigation** Diagnostics → LRC → LRC 1 to 2 → Reference source (17904–1 to 2)**Description** Defines the source for the reference switch. Note: Only for mode "Compare with level switch".

- Selection**
- None
 - Digital A1-2
 - Digital A3-4
 - Digital B1-2
 - Digital B3-4
 - Digital C1-2
 - Digital C3-4
 - Digital D1-2
 - Digital D3-4

Factory setting None
Additional information

Read access	Operator
Write access	Maintenance

Reference switch mode

**Navigation** Diagnostics → LRC → LRC 1 to 2 → Ref. switch mode (17914–1 to 2)**Description** Defines the switch direction for which the reference check is executed. Note: Only for mode "Compare with level switch".

- Selection**
- Active -> Inactive
 - Inactive -> Active

Factory setting Active -> Inactive
Additional information

Read access	Operator
Write access	Maintenance

Reference level

Navigation Diagnostics → LRC → LRC 1 to 2 → Reference level (17909–1 to 2)**Description** Shows the current reference level. Note: Only for mode "Compare with level device".**User interface** Signed floating-point number**Factory setting** 0 mm

Additional information

Read access	Operator
Write access	-

Reference switch level**Navigation**

Diagnostics → LRC → LRC 1 to 2 → Reference level (17905–1 to 2)

Description

Defines the position of the reference switch as level. Note: Only for mode "Compare with level switch".

User entry

0 to 10 000.00 mm

Factory setting

0 mm

Additional information

Read access	Operator
Write access	Maintenance

Reference switch state**Navigation**

Diagnostics → LRC → LRC 1 to 2 → Ref.switch state (17908–1 to 2)

Description

Shows the current state of the reference switch (e.g. "active"). Note: Only for mode "Compare with level switch".

User interface

- Unknown
- Inactive
- Active
- Error

Factory setting

Unknown

Additional information

Read access	Operator
Write access	-

Check level**Navigation**

Diagnostics → LRC → LRC 1 to 2 → Check level (17910–1 to 2)

Description

Shows the tank level at which the reference check has been executed.

User interface

Signed floating-point number

Factory setting

0 mm

Additional information

Read access	Operator
Write access	Development

Check status**Navigation**
 Diagnostics → LRC → LRC 1 to 2 → Check status (17911-1 to 2)
Description

Shows the status of the reference check execution (e.g. "passed").

User interface

- not executed
- Passed
- Failed
- Not possible

Factory setting

not executed

Additional information

Read access	Operator
Write access	Development

Check timestamp**Navigation**
 Diagnostics → LRC → LRC 1 to 2 → Check timestamp (17912-1 to 2)
Description

Shows the timestamp at which the reference check has been executed.

User interface

Character string comprising numbers, letters and special characters

Factory setting**Additional information**

Read access	Operator
Write access	-

Index

Symbols

#blank# (Parameter)	113
#blank# (Submenu)	138

0 ... 9

0 % value (Parameter)	144, 155, 204
100 % value (Parameter)	144, 155, 205

A

Access code (Parameter)	128
Access status display (Parameter)	33
Activate SW option (Parameter)	56
Active calibration (Parameter)	147, 160
Active diagnostics (Parameter)	125
Active gauge command (Parameter)	62
Actual diagnostics (Parameter)	285
Administration (Submenu)	55, 56
Air density (Parameter)	226, 277
Air temperature (Parameter)	223, 274
Air temperature source (Parameter)	222
Alarm (Submenu)	256
Alarm 1 input source (Parameter)	194
Alarm 2 input source (Parameter)	194
Alarm 3 input source (Parameter)	195
Alarm 4 input source (Parameter)	195
Alarm hysteresis (Parameter)	264
Alarm mode (Parameter)	257
Alarm value (Parameter)	260
Alarm value source (Parameter)	259
Allowed difference (Parameter)	309
Ambient pressure (Parameter)	236
Analog I/O (Submenu)	149
Analog input 0% value (Parameter)	157
Analog input 100% value (Parameter)	158
Analog input source (Parameter)	152
Analog IP (Submenu)	140
Any error (Parameter)	263
Application (Submenu)	215
Assign channel 1 (Parameter)	301
Assign PV (Parameter)	203
Assign QV (Parameter)	208
Assign SV (Parameter)	206
Assign TV (Parameter)	207

B

Backlight (Parameter)	41
Balance flag (Parameter)	62, 266
Balance settings (Submenu)	86
Balancing waiting time (Parameter)	87
Baudrate (Parameter)	175, 198
Board info (Submenu)	298
Bottom level (Parameter)	67, 271
Bottom level timestamp (Parameter)	67, 271
Bottom point (Parameter)	129, 135
Build version (Parameter)	296
Bus termination (Parameter)	178

C

Calibration (Parameter)	160
Calibration (Submenu)	94
Calibration parameters (Submenu)	105
Calibration status (Parameter)	98, 101, 104, 107
Calibration temperature (Parameter)	249
Calibration time (Parameter)	103
Calibration type AIP (Parameter)	147
Check fail threshold (Parameter)	310
Check level (Parameter)	312
Check status (Parameter)	313
Check timestamp (Parameter)	313
Clear alarm (Parameter)	263
Clear logging data (Parameter)	303
Commissioning check (Parameter)	306
Commissioning check (Wizard)	306
Commissioning parameter (Submenu)	307
Communication (Submenu)	172
Communication interface protocol (Parameter)	174
Communication interface protocol variant (Parameter)	190
Communication Slot (Parameter)	296
Communication status (Parameter)	112
Compatibility mode (Parameter)	179, 192, 199
Configuration (Submenu)	175, 190, 198
Configure device? (Parameter)	127, 134
Confirm access code (Parameter)	58
Contact type (Parameter)	164
Contrast display (Parameter)	41
Covered tank (Parameter)	248
CRC seed (Parameter)	178
CTSh (Submenu)	247
CTSh correction value (Parameter)	247
CTSh mode (Parameter)	248
Current (Parameter)	139
Current output N simulation (Parameter)	291
Current span (Parameter)	151
Custody transfer (Parameter)	122

D

Damping factor (Parameter)	147, 159, 167, 264
Data logging (Submenu)	300, 301
Date / time (Submenu)	49, 50
Date/time (Parameter)	50, 53, 287, 298
Day (Parameter)	51, 53
Decimal places 1 (Parameter)	38
Decimal places density (Parameter)	45
Decimal places length (Parameter)	44
Decimal places pressure (Parameter)	44
Decimal places temperature (Parameter)	45
Define access code (Parameter)	56, 57
Define access code (Wizard)	57
Deformation factor (Parameter)	243
Density (Parameter)	118
Density (Submenu)	225, 276
Density 0% (Parameter)	182

Density 100% (Parameter)	183	Ambient pressure (14962)	236
Density measurement mode (Parameter)	92	Analog input 0% value (13977)	157
Density table (Submenu)	71	Analog input 100% value (13965)	158
Density unit (Parameter)	44	Analog input source (13974)	152
Density value (Parameter)	253	Any error (13867)	263
Detector temperature (Parameter)	63	Assign channel 1 (0851)	301
Device alarm simulation (Parameter)	290	Assign PV (0234)	203
Device check (Submenu)	305	Assign QV (0237)	208
Device date (Parameter)	121	Assign SV (0235)	206
Device description (Parameter)	121	Assign TV (0236)	207
Device ID (Parameter)	120, 211	Backlight (0111)	41
Device information (Submenu)	293	Balance flag (8006)	62, 266
Device message (Parameter)	121	Balancing waiting time (8205)	87
Device name (Parameter)	111, 295	Baudrate (13203)	175, 198
Device reset (Parameter)	57	Bottom level (8129)	67
Device revision (Parameter)	211	Bottom level (15018)	271
Device tag (Parameter)	111, 211, 293	Bottom level timestamp (8048)	67, 271
Device type (Parameter)	120, 212, 296	Bottom point (14729)	129, 135
Diagnostic code (Parameter)	124	Build version (0007)	296
Diagnostic event simulation (Parameter)	290	Bus termination (13249)	178
Diagnostic list (Submenu)	288	Calibration (13966)	160
Diagnostics (Submenu)	124, 125, 283	Calibration status (8031)	98, 101, 104, 107
Diagnostics 1 to 5 (Parameter)	288	Calibration temperature (13652)	249
Digital input mapping (Submenu)	168	Calibration type AIP (14018)	147
Digital input source (Parameter)	163	Check fail threshold LRC 1 to 2 (17913-1 to 2)	310
Digital input source 1 (Parameter)	168	Check level LRC 1 to 2 (17910-1 to 2)	312
Digital input source 2 (Parameter)	168	Check status LRC 1 to 2 (17911-1 to 2)	313
Digital Xx-x (Submenu)	162	Check timestamp LRC 1 to 2 (17912-1 to 2)	313
Direct access		Clear alarm (13861)	263
#blank# (14705)	113	Clear logging data (0855)	303
#blank# (14706)	113	Communication interface protocol (13201)	174
#blank# (14716)	113	Communication interface protocol variant (13269)	190
0 % value (11632)	204	Communication Slot (13285)	296
0 % value (13954)	155	Communication status (14710)	112
0 % value (14001)	144	Compatibility mode (13281)	179, 192, 199
100 % value (11633)	205	Configure device? (14728)	127, 134
100 % value (13968)	155	Contact type Digital Xx-x (13912)	164
100 % value (14013)	144	Contrast display (0105)	41
Access code (14714)	128	Covered tank (13654)	248
Access status display (0091)	33	CRC seed (13248)	178
Activate SW option (0029)	56	CTSh correction value (13651)	247
Active calibration (13981)	160	CTSh mode (14651)	248
Active calibration (14012)	147	Current (14457)	139
Active diagnostics (14754)	125	Current output N simulation (13985)	291
Active gauge command (8073)	62	Current span (13987)	151
Actual diagnostics (0691)	285	Custody transfer (14748)	122
Air density (14980)	226, 277	Damping factor Digital Xx-x (13904)	167
Air temperature (14986)	223, 274	Damping factor (13860)	264
Air temperature source (14993)	222	Damping factor (13951)	159
Alarm 1 input source (13270)	194	Damping factor (14004)	147
Alarm 2 input source (13271)	194	Date/time (0790)	50, 53, 287, 298
Alarm 3 input source (13283)	195	Day (0788)	51, 53
Alarm 4 input source (13284)	195		
Alarm hysteresis (13862)	264		
Alarm mode (13864)	257		
Alarm value (13863)	260		
Alarm value source (13866)	259		
Allowed difference LRC 1 to 2 (17902-1 to 2)	309		

Decimal places 1 (0095)	38	Empty (14602)	218
Decimal places density (0609)	45	ENP version (0012)	295
Decimal places length (0573)	44	Enter access code (0003)	33
Decimal places pressure (0608)	44	Error event type (13953)	158
Decimal places temperature (0614)	45	Error on event	
Define access code (0093)	56	Digital Xx-x (13916)	166
Deformation factor (13602)	243	Error on event (13967)	154
Density (14724)	118	Error value (13851)	258
Density 0% (13252)	182	Error value (13972)	154
Density 100% (13218)	183	Expected SIL/WHG chain (13952)	161
Density measurement mode (8186)	92	Extended order code 1 (0023)	295
Density unit (0555)	44	Failure mode (13988)	153
Density value (13753)	253	Feedback threshold (13956)	157
Detector temperature (8090)	63	Firmware CRC (8563)	294
Device alarm simulation (0654)	290	Firmware CRC (14758)	122
Device date (14707)	121	Firmware version (0010)	294
Device description (14704)	121	Fixed current (13989)	152
Device ID (0221)	211	Float swap mode (13232)	176
Device ID (14702)	120	Format display (0098)	36
Device message (14703)	121	Gain adjust (14736)	130
Device name (0013)	295	Gauge command (8000)	59
Device name (14722)	111	Gauge command 0 (8149)	169
Device reset (0000)	57	Gauge command 1 (8150)	170
Device revision (0204)	211	Gauge command 2 (8151)	170
Device tag (0011)	293	Gauge command 3 (8152)	171
Device tag (0215)	211	Gauge current (14027)	148
Device tag (14713)	111	Gauge status (8081)	60, 62, 73, 265
Device type (0209)	212	GP 1 name (14963)	238, 281
Device type (8561)	296	GP 1 to 4 source (14989-1 to 4)	237
Device type (14701)	120	GP 1 value 0% (13223)	186
Diagnostic code (14739)	124	GP 1 value 100% (13224)	186
Diagnostic event simulation (0737)	290	GP 2 value 0% (13257)	187
Diagnostics 1 to 5 (0692-1 to 5)	288	GP 2 value 100% (13258)	187
Digital input source		GP 3 value 0% (13259)	187
Digital Xx-x (13907)	163	GP 3 value 100% (13226)	188
Digital input source 1 (8147)	168	GP 4 value 0% (13225)	188
Digital input source 2 (8148)	168	GP 4 value 100% (13227)	188
Discrete 1 to 4 selector (13260-1 to 4)	189, 200	GP Value 1 (14966)	238, 281
Displacer balance volume (8009)	76	GP Value 2 (14967)	238, 281
Displacer diameter (8014)	75	GP Value 3 (14968)	238, 282
Displacer height (8195)	77	GP Value 4 (14969)	239, 282
Displacer position (8130)	65	Gross weight (8080)	61
Displacer position (15019)	272	H alarm (13856)	262
Displacer status (8160)	62	H alarm value (13854)	260
Displacer type (8071)	75	Hardware revision (0206)	213
Displacer volume (8008)	76	HART bus (14711)	120
Displacer weight (8010)	76	HART date code (0202)	214
Displacer weight tolerance (8161)	307	HART descriptor (0212)	213
Display damping (0094)	41	HART device PV % (14709)	114
Display interval (0096)	40	HART device PV mA (14708)	114
Distance (8103)	60, 65, 95, 272	HART message (0216)	213
Distance unit (0551)	43	HART revision (0205)	212
Drum circumference (8082)	78	HART short tag (0220)	210
Element interval (14743)	131	Header (0097)	39
Element position (14738)	133, 137	Header text (0112)	40
Element position 1 to 24 (15014-1 to 24)	123, 274	HH alarm (13857)	261
Element temperature (14737)	133, 137	HH alarm value (13855)	260
Element temperature 1 to 24 (14984-1 to 24)		HH+H alarm (13858)	262
.	123, 274	High stop level (8135)	79

Hour (0789)	51, 53	Measured middle density (8165)	68
HTMS mode (13751)	252	Measured middle density (14997)	227, 278
Hysteresis (13755)	254	Measured upper density (8164)	68
HyTD correction value (13603)	242	Measured upper density (15001)	226, 277
HyTD mode (14652)	242	Middle density (8041)	82
Immersion depth (8070)	77	Middle density offset (8177)	90
Input value		Middle Density Timestamp (8011)	69, 278
Digital Xx-x (13901)	164	Minimum level (13752)	253
Input value (13979)	155	Minimum pressure (13754)	254
Input value (14015)	145	Minimum probe temperature (14010)	145
Input value % (13955)	156	Minute (0791)	52, 54
Input value in mA (13970)	159	Modbus address (13205)	176
Input value percent (13978)	159	Modbus discrete 1 to 4 (13240–1 to 4)	174
Input value percent (14002)	144	Modbus value 1 to 4 (13206–1 to 4)	174
Interface measurement mode (8064)	87	Module type (8526)	296
Invalid data (13243)	177	Month (0787)	51, 53
Kind of interval (14744)	130	Motor status (8118)	63, 96
L alarm (13859)	262	Net weight (8007)	61, 265
L alarm value (13853)	261	No element in phase (14756)	135
Language (0104)	35	No. of preambles (0217)	203
Last diagnostic (14742)	124	Number format (0099)	39
Level 0% (13214)	180	Number of devices (13051)	109
Level 100% (13250)	181	Observed density (13451)	276
Level mapping (13268)	191	Observed density (13452)	226
Level measurement mode (8056)	86	Observed density source (13454)	225
Level source (14601)	217	Observed density temperature (13453)	277
Level source (14749)	119	Offset standby distance (8107)	84, 267
Line impedance (13266)	192	Offset weight (8095)	97, 106
Linear expansion coefficient (13655)	249	Ohms offset (14026)	142
Liquid level (8072)	66	Old TSM mode (13213)	178
Liquid temp source (14972)	221	One-time command status (8201)	63, 268
Liquid temperature (14978)	222, 273	Operating mode	
LL alarm (13868)	262	Digital Xx-x (13911)	163
LL alarm value (13852)	261	Operating mode (13958)	150
LL+L alarm (13869)	263	Operating mode (14014)	141
Local gravity (14979)	239	Operating mode (14453)	139
Locking status (0004)	32	Operating mode (14745)	111
Logging interval (0856)	302	Operating time (0652)	287
Low stop level (8069)	79	Operating time from restart (0653)	287
Lower density (8042)	83	Order code (0008)	295
Lower density offset (8178)	91	Output at error (14733)	130
Lower density timestamp (8122)	69, 279	Output density (14720)	115
Lower interface level (8128)	66	Output level (14718)	116
Lower interface level (15004)	219, 271	Output out of range (8218)	81
Lower interface level timestamp (8061)	67, 271	Output out of range (13971)	154
LRC Mode		Output pressure (14719)	114
LRC 1 to 2 (17901–1 to 2)	309	Output simulation	
Manual air temperature (14961)	223	Digital Xx-x (13909)	165
Manual density (15009)	253	Output temperature (14721)	115
Manual liquid temperature (15015)	222	Output value	
Manual profile level (8182)	92	Digital Xx-x (13902)	166
Manual value (14746)	120	Output value (13969)	156
Manual vapor temperature (14960)	224	Output vapor temperature (14726)	115
Manual water level (14959)	220	Overtension weight (8097)	80
Manufacturer ID (0259)	212	P1 (bottom) (14983)	230, 280
Maximum probe temperature (14011)	146	P1 (bottom) manual pressure (14951)	230
Measured level (14653)	272	P1 (bottom) source (14994)	230
Measured lower density (8166)	69	P1 absolute / gauge (14954)	231
Measured lower density (15002)	227, 278	P1 offset (14953)	231

P1 position (14952)	231	Reference switch source LRC 1 to 2 (17904–1 to 2)	311
P1-2 distance (14974)	233	Reference switch state LRC 1 to 2 (17908–1 to 2)	312
P2 (middle) (14987)	232	Result drum check (8155)	306, 307
P2 (middle) manual pressure (14955)	232	RTD connection type (14022)	143
P2 (middle) source (14995)	232	RTD type (14021)	141
P2 absolute / gauge (14976)	233	Safety distance (13756)	254
P2 offset (14975)	233	Secondary variable (SV) (0226)	207
P3 (top) (14988)	234, 280	Seek delay (8162)	88
P3 (top) manual pressure (14977)	234	Select element (14734)	132, 136
P3 (top) source (14996)	234	Sensor temperature (8066)	63
P3 absolute / gauge (14958)	235	Separator (0101)	39
P3 offset (14957)	235	Serial number (0009)	294
P3 position (14956)	235	Set date (0792)	50
Parity (13204)	176	Set high weight (8116)	103, 105
Percent 0% (13202)	184	Set level (14604)	219
Percent 100% (13234)	184	Set low weight (8115)	104, 105
Percent of range (0274)	206	Simulation distance (8003)	291
Polling address (14712)	111	Simulation distance on (8002)	291
Post gauge command (8163)	74	Simulation value (13976)	292
Pressure (14723)	117	Slow hoist zone (8084)	80
Pressure 0% (13217)	182	Software ID (13287)	199
Pressure 100% (13251)	182	Software option overview (0015)	56
Pressure unit (0564)	43	Software revision (0224)	214
Previous diagnostics (0690)	286	Software version (14747)	121
Previous diagnostics (14755)	126	SP 1 value selector (13274)	196
Primary variable (PV) (0201)	205	SP 2 value selector (13275)	196
Probe position (14009)	146	SP 3 value selector (13276)	197
Process condition (8001)	83, 215	SP 4 value selector (13277)	197
Process value (13963)	158	Span weight (8096)	98, 106
Process value (14003)	143	Standby level (8194)	83, 266
Process variable (13964)	157	Starting level (13601)	242
Process variable (14016)	143	Status self check (8192)	72, 73
Profile average density (8175)	70, 228	Status signal (14760)	112
Profile density 0 to 49 (8068)	279	Step X / 11 (8143)	306, 307
Profile density interval (8174)	93	Stilling well (13653)	248
Profile density offset (8173)	93	Submersion depth (8169)	91
Profile density offset distance (8185)	93	System polling address (0219)	202
Profile density position 0 to 49 (8077)	279	System temperature (8553)	298
Profile density timestamp (8114)	70, 228	Tank level (14655)	218, 269
Profile point (8170)	70, 227	Tank Level % (14654)	269
PV mA selector (11631)	205	Tank level to NMT (14750)	119
PV source (11634)	203	Tank reference height (14603)	218
Quaternary variable (QV) (0203)	209	Tank ullage (14657)	270
Readback value Digital Xx-x (13903)	166	Tank ullage % (14658)	270
Readback value (13957)	156	Temperature (14725)	118
Recovery state (8565)	297	Temperature 0% (13215)	181
Reference 0 (14740)	124	Temperature 100% (13216)	181
Reference 17 (14741)	125	Temperature element open (14732)	129
Reference calibration incomplete (8157)	308	Temperature element short (14731)	129
Reference level LRC 1 to 2 (17909–1 to 2)	311	Temperature offset after conversion (14025)	145
Reference level source LRC 1 to 2 (17903–1 to 2)	310	Temperature unit (0557)	43
Reference position (8046)	100, 106	Tertiary variable (TV) (0228)	208
Reference switch level LRC 1 to 2 (17905–1 to 2)	312	Test resistance (14752)	126
Reference switch mode LRC 1 to 2 (17914–1 to 2)	311	Thermocouple type (14008)	142
		Timestamp (0667)	286
		Timestamp (0672)	287
		Timestamp 1 to 5 (0683–1 to 5)	288

Total no. element (14730)	128, 134
Undertension weight (8098)	80
Units preset (0605)	42
Update water level (14751)	131, 136
Upper density (8113)	82
Upper density offset (8176)	90
Upper density timestamp (8067)	68, 278
Upper interface level (8127)	66
Upper interface level (15003)	219, 270
Upper interface level timestamp (8055)	66, 270
Used for SIL/WHG	
Digital Xx-x (13910)	167
Used for SIL/WHG (13980)	160
User 0% (13221)	183
User 100% (13222)	183
User role (0005)	33
User value 1 to 8 source (13209–1 to 8)	185, 193
V1 address (13235)	190
V1 address (13236)	191
Value 1 display (0107)	37
Value percent selector (13282)	198
Vapor density (14981)	226, 277
Vapor temp source (14973)	223
Vapor temperature (14727)	118
Vapor temperature (14985)	224, 273
W&M lock switch (8558)	298
Water bottom level offset (14757)	135
Water density (13757)	227, 255
Water level (14717)	119
Water level (14970)	220, 272
Water level source (14971)	219
WB frequency ratio (14753)	126
Weight and measures configuration CRC (8564)	294
Weight tolerance (8213)	88
Wire expansion coefficient (13656)	249
Wire weight (8040)	78
WM550 address (13286)	199
Word type (13208)	177
Year (0782)	50, 53
Zero adjust (14735)	132
Zero adjust (14759)	137
Discrete 1 to 4 selector (Parameter)	189, 200
Discrete selector (Submenu)	189
Displacer (Submenu)	75
Displacer balance volume (Parameter)	76
Displacer diameter (Parameter)	75
Displacer height (Parameter)	77
Displacer position (Parameter)	65, 272
Displacer status (Parameter)	62
Displacer type (Parameter)	75
Displacer volume (Parameter)	76
Displacer weight (Parameter)	76
Displacer weight tolerance (Parameter)	307
Display (Submenu)	35
Display channel 1 to 4 (Submenu)	304
Display damping (Parameter)	41
Display interval (Parameter)	40
Distance (Parameter)	60, 65, 95, 272
Distance unit (Parameter)	43
Document	
Function	4
Document function	4
Drum calibration (Parameter)	102
Drum calibration (Wizard)	102
Drum circumference (Parameter)	78
Drum table point (Parameter)	103
E	
Element interval (Parameter)	131
Element position (Parameter)	133, 137
Element position (Submenu)	123, 274
Element position 1 to 24 (Parameter)	123, 274
Element setup (Submenu)	132, 136
Element temperature (Parameter)	133, 137
Element temperature (Submenu)	123, 274
Element temperature 1 to 24 (Parameter)	123, 274
Element values (Submenu)	123
Empty (Parameter)	218
ENP version (Parameter)	295
Enter access code (Parameter)	33
Error event type (Parameter)	158
Error on event (Parameter)	154, 166
Error value (Parameter)	154, 258
Event logbook (Submenu)	289
Expected SIL/WHG chain (Parameter)	161
Expert (Menu)	7, 32
Extended order code 1 (Parameter)	295
F	
Failure mode (Parameter)	153
Feedback threshold (Parameter)	157
Firmware CRC (Parameter)	122, 294
Firmware version (Parameter)	294
Fixed current (Parameter)	152
Float swap mode (Parameter)	176
Forget device (Parameter)	138
Forget device (Wizard)	138
Format display (Parameter)	36
G	
Gain adjust (Parameter)	130
Gauge command (Parameter)	59
Gauge command 0 (Parameter)	169
Gauge command 1 (Parameter)	170
Gauge command 2 (Parameter)	170
Gauge command 3 (Parameter)	171
Gauge current (Parameter)	148
Gauge status (Parameter)	60, 62, 73, 265
GP 1 name (Parameter)	238, 281
GP 1 to 4 source (Parameter)	237
GP 1 value 0% (Parameter)	186
GP 1 value 100% (Parameter)	186
GP 2 value 0% (Parameter)	187
GP 2 value 100% (Parameter)	187
GP 3 value 0% (Parameter)	187
GP 3 value 100% (Parameter)	188
GP 4 value 0% (Parameter)	188
GP 4 value 100% (Parameter)	188

GP Value 1 (Parameter) 238, 281
GP Value 2 (Parameter) 238, 281
GP Value 3 (Parameter) 238, 282
GP Value 4 (Parameter) 239, 282
GP values (Submenu) 186, 237, 281
Gross weight (Parameter) 61

H

H alarm (Parameter) 262
H alarm value (Parameter) 260
Hardware revision (Parameter) 213
HART bus (Parameter) 120
HART configuration (Submenu) 202
HART date code (Parameter) 214
HART descriptor (Parameter) 213
HART device information (Submenu) 117
HART device PV % (Parameter) 114
HART device PV mA (Parameter) 114
HART Device(s) (Submenu) 110
HART devices (Submenu) 109
HART message (Parameter) 213
HART output (Submenu) 201
HART revision (Parameter) 212
HART short tag (Parameter) 210
Header (Parameter) 39
Header text (Parameter) 40
HH alarm (Parameter) 261
HH alarm value (Parameter) 260
HH+H alarm (Parameter) 262
High stop level (Parameter) 79
Hour (Parameter) 51, 53
HTMS (Submenu) 252
HTMS mode (Parameter) 252
Hysteresis (Parameter) 254
HyTD (Submenu) 242
HyTD correction value (Parameter) 242
HyTD mode (Parameter) 242

I

Immersion depth (Parameter) 77
Information (Submenu) 61, 210
Input value (Parameter) 145, 155, 164
Input value % (Parameter) 156
Input value in mA (Parameter) 159
Input value percent (Parameter) 144, 159
Input/output (Submenu) 108
Integer conversion (Submenu) 180
Interface measurement mode (Parameter) 87
Invalid data (Parameter) 177

K

Kind of interval (Parameter) 130

L

L alarm (Parameter) 262
L alarm value (Parameter) 261
Language (Parameter) 35
Last diagnostic (Parameter) 124
Level (Submenu) 217, 268
Level 0% (Parameter) 180

Level 100% (Parameter) 181
Level mapping (Parameter) 191
Level measurement mode (Parameter) 86
Level settings (Submenu) 82
Level source (Parameter) 119, 217
Line impedance (Parameter) 192
Linear expansion coefficient (Parameter) 249
Liquid level (Parameter) 66
Liquid temp source (Parameter) 221
Liquid temperature (Parameter) 222, 273
LL alarm (Parameter) 262
LL alarm value (Parameter) 261
LL+L alarm (Parameter) 263
Local gravity (Parameter) 239
Locking status (Parameter) 32
Logging interval (Parameter) 302
Low stop level (Parameter) 79
Lower density (Parameter) 83
Lower density offset (Parameter) 91
Lower density timestamp (Parameter) 69, 279
Lower interface level (Parameter) 66, 219, 271
Lower interface level timestamp (Parameter) 67, 271
LRC 1 to 2 (Submenu) 309
LRC Mode (Parameter) 309

M

Make drum table (Parameter) 103
Make low table (Parameter) 104
Make sure to have (Parameter) 102
Manual air temperature (Parameter) 223
Manual density (Parameter) 253
Manual liquid temperature (Parameter) 222
Manual profile level (Parameter) 92
Manual value (Parameter) 120
Manual vapor temperature (Parameter) 224
Manual water level (Parameter) 220
Manufacturer ID (Parameter) 212
Maximum probe temperature (Parameter) 146
Measured level (Parameter) 272
Measured lower density (Parameter) 69, 227, 278
Measured middle density (Parameter) 68, 227, 278
Measured upper density (Parameter) 68, 226, 277
Measured values (Submenu) 64
Menu
 Expert 7, 32
 Middle density (Parameter) 82
 Middle density offset (Parameter) 90
 Middle Density Timestamp (Parameter) 69, 278
 Minimum level (Parameter) 253
 Minimum pressure (Parameter) 254
 Minimum probe temperature (Parameter) 145
 Minute (Parameter) 52, 54
 Modbus address (Parameter) 176
 Modbus discrete 1 to 4 (Parameter) 174
 Modbus value 1 to 4 (Parameter) 174
 Module type (Parameter) 296
 Month (Parameter) 51, 53
 Motor status (Parameter) 63, 96
 Move displacer (Parameter) 96

Move displacer (Wizard)	95	Percent of range (Parameter)	206
Move distance (Parameter)	95	Polling address (Parameter)	111
N			
Net weight (Parameter)	61, 265	Post gauge command (Parameter)	74
NMT device config (Submenu)	127, 133	Pressure (Parameter)	117
NMT element values (Submenu)	274	Pressure (Submenu)	229, 280
No element in phase (Parameter)	135	Pressure 0% (Parameter)	182
No. of preambles (Parameter)	203	Pressure 100% (Parameter)	182
Number format (Parameter)	39	Pressure unit (Parameter)	43
Number of devices (Parameter)	109	Previous diagnostics (Parameter)	126, 286
O			
Observed density (Parameter)	226, 276	Primary variable (PV) (Parameter)	205
Observed density source (Parameter)	225	Probe position (Parameter)	146
Observed density temperature (Parameter)	277	Process condition (Parameter)	83, 215
Offset calibration (Parameter)	99	Process value (Parameter)	143, 158
Offset standby distance (Parameter)	84, 267	Process variable (Parameter)	143, 157
Offset weight (Parameter)	97, 106	Profile average density (Parameter)	70, 228
Ohms offset (Parameter)	142	Profile density (Submenu)	70, 92, 279
Old TSM mode (Parameter)	178	Profile density 0 to 49 (Parameter)	279
One-time command status (Parameter)	63, 268	Profile density interval (Parameter)	93
Operating mode (Parameter)	111, 139, 141, 150, 163	Profile density offset (Parameter)	93
Operating time (Parameter)	287	Profile density offset distance (Parameter)	93
Operating time from restart (Parameter)	287	Profile density position 0 to 49 (Parameter)	279
Order code (Parameter)	295	Profile density timestamp (Parameter)	70, 228
Output at error (Parameter)	130	Profile point (Parameter)	70, 227
Output density (Parameter)	115	Progress (Parameter)	100
Output level (Parameter)	116	PV mA selector (Parameter)	205
Output out of range (Parameter)	81, 154	PV source (Parameter)	203
Output pressure (Parameter)	114		
Output simulation (Parameter)	165	Q	
Output temperature (Parameter)	115	Quaternary variable (QV) (Parameter)	209
Output value (Parameter)	156, 166		
Output vapor temperature (Parameter)	115	R	
Overtension weight (Parameter)	80	Readback value (Parameter)	156, 166
P			
P1 (bottom) (Parameter)	230, 280	Recovery state (Parameter)	297
P1 (bottom) manual pressure (Parameter)	230	Reference 0 (Parameter)	124
P1 (bottom) source (Parameter)	230	Reference 17 (Parameter)	125
P1 absolute / gauge (Parameter)	231	Reference calibration (Parameter)	100
P1 offset (Parameter)	231	Reference calibration (Wizard)	100
P1 position (Parameter)	231	Reference calibration incomplete (Parameter)	308
P1-2 distance (Parameter)	233	Reference level (Parameter)	311
P2 (middle) (Parameter)	232	Reference level source (Parameter)	310
P2 (middle) manual pressure (Parameter)	232	Reference position (Parameter)	100, 106
P2 (middle) source (Parameter)	232	Reference switch level (Parameter)	312
P2 absolute / gauge (Parameter)	233	Reference switch mode (Parameter)	311
P2 offset (Parameter)	233	Reference switch source (Parameter)	311
P3 (top) (Parameter)	234, 280	Reference switch state (Parameter)	312
P3 (top) manual pressure (Parameter)	234	Result drum check (Parameter)	306, 307
P3 (top) source (Parameter)	234	RTD connection type (Parameter)	143
P3 absolute / gauge (Parameter)	235	RTD type (Parameter)	141
P3 offset (Parameter)	235		
P3 position (Parameter)	235	S	
Parity (Parameter)	176	Safety distance (Parameter)	254
Percent 0% (Parameter)	184	Safety Instructions (XA)	6
Percent 100% (Parameter)	184	Safety settings (Submenu)	79

Sensor calibration (Parameter)	97	Digital Xx-x	162
Sensor calibration (Wizard)	97	Discrete selector	189
Sensor config (Submenu)	74	Displacer	75
Sensor diag (Submenu)	72	Display	35
Sensor temperature (Parameter)	63	Display channel 1 to 4	304
Separator (Parameter)	39	Element position	123, 274
Serial number (Parameter)	294	Element setup	132, 136
Set date (Parameter)	50, 54	Element temperature	123, 274
Set date (Wizard)	53	Element values	123
Set high weight (Parameter)	103, 105	Event logbook	289
Set level (Parameter)	219	GP values	186, 237, 281
Set low weight (Parameter)	104, 105	HART configuration	202
Simulation (Submenu)	290	HART device information	117
Simulation distance (Parameter)	291	HART Device(s)	110
Simulation distance on (Parameter)	291	HART devices	109
Simulation value (Parameter)	292	HART output	201
Slow hoist zone (Parameter)	80	HTMS	252
Software ID (Parameter)	199	HyTD	242
Software option overview (Parameter)	56	Information	61, 210
Software revision (Parameter)	214	Input/output	108
Software version (Parameter)	121	Integer conversion	180
SP 1 value selector (Parameter)	196	Level	217, 268
SP 2 value selector (Parameter)	196	Level settings	82
SP 3 value selector (Parameter)	197	LRC 1 to 2	309
SP 4 value selector (Parameter)	197	Measured values	64
Span calibration (Parameter)	99	NMT device config	127, 133
Span weight (Parameter)	98, 106	NMT element values	274
Spot density (Submenu)	68, 90	Pressure	229, 280
Standby level (Parameter)	83, 266	Profile density	70, 92, 279
Start self check (Submenu)	72	Safety settings	79
Starting level (Parameter)	242	Sensor	59
Status self check (Parameter)	72, 73	Sensor config	74
Status signal (Parameter)	112	Sensor diag	72
Step X / 11 (Parameter)	306, 307	Simulation	290
Stilling well (Parameter)	248	Spot density	68, 90
Submenu		Start self check	72
#blank#	138	System	34
Administration	55, 56	System units	42
Alarm	256	Tank calculation	239
Analog I/O	149	Tank configuration	215
Analog IP	140	Tank values	265
Application	215	Temperature	221, 273
Balance settings	86	User value source	185
Board info	298	V1 input selector	193
Calibration	94	Wiredrum	78
Calibration parameters	105	WM550 input selector	200
Commissioning parameter	307	Submersion depth (Parameter)	91
Communication	172	System (Submenu)	34
Configuration	175, 190, 198	System polling address (Parameter)	202
CTSh	247	System temperature (Parameter)	298
Data logging	300, 301	System units (Submenu)	42
Date / time	49, 50		
Density	225, 276	T	
Density table	71	Tank calculation (Submenu)	239
Device check	305	Tank configuration (Submenu)	215
Device information	293	Tank level (Parameter)	218, 269
Diagnostic list	288	Tank Level % (Parameter)	269
Diagnostics	124, 125, 283	Tank level to NMT (Parameter)	119
Digital input mapping	168	Tank reference height (Parameter)	218

Tank ullage (Parameter)	270	Drum calibration	102
Tank ullage % (Parameter)	270	Forget device	138
Tank values (Submenu)	265	Move displacer	95
Temperature (Parameter)	118	Reference calibration	100
Temperature (Submenu)	221, 273	Self check	72
Temperature 0% (Parameter)	181	Sensor calibration	97
Temperature 100% (Parameter)	181	Set date	53
Temperature element open (Parameter)	129	WM550 address (Parameter)	199
Temperature element short (Parameter)	129	WM550 input selector (Submenu)	200
Temperature offset after conversion (Parameter)	145	Word type (Parameter)	177
Temperature unit (Parameter)	43		
Tertiary variable (TV) (Parameter)	208		
Test resistance (Parameter)	126		
Thermocouple type (Parameter)	142		
Timestamp (Parameter)	286, 287		
Timestamp 1 to 5 (Parameter)	288		
Total no. element (Parameter)	128, 134		
U			
Undertension weight (Parameter)	80		
Units preset (Parameter)	42		
Update water level (Parameter)	131, 136		
Upper density (Parameter)	82		
Upper density offset (Parameter)	90		
Upper density timestamp (Parameter)	68, 278		
Upper interface level (Parameter)	66, 219, 270		
Upper interface level timestamp (Parameter)	66, 270		
Used for SIL/WHG (Parameter)	160, 167		
User 0% (Parameter)	183		
User 100% (Parameter)	183		
User role (Parameter)	33		
User value 1 to 8 source (Parameter)	185, 193		
User value source (Submenu)	185		
V			
V1 address (Parameter)	190, 191		
V1 input selector (Submenu)	193		
Value 1 display (Parameter)	37		
Value percent selector (Parameter)	198		
Vapor density (Parameter)	226, 277		
Vapor temp source (Parameter)	223		
Vapor temperature (Parameter)	118, 224, 273		
W			
W&M lock switch (Parameter)	298		
Water bottom level offset (Parameter)	135		
Water density (Parameter)	227, 255		
Water level (Parameter)	119, 220, 272		
Water level source (Parameter)	219		
WB frequency ratio (Parameter)	126		
Weight and measures configuration CRC (Parameter)			
.	294		
Weight tolerance (Parameter)	88		
Wire expansion coefficient (Parameter)	249		
Wire weight (Parameter)	78		
Wiredrum (Submenu)	78		
Wizard			
Commissioning check	306		
Define access code	57		



71689194

www.addresses.endress.com
