



Gammapilot M page 1/2

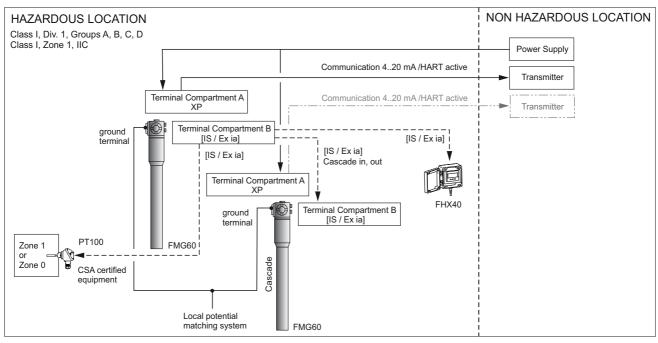

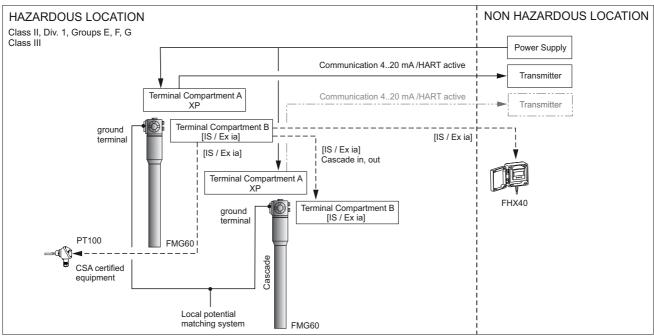

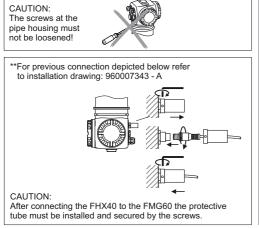

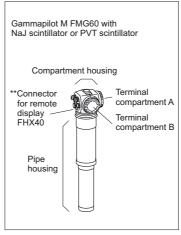

WARNING: Avoid electrostatic charging of plastic surfaces or coatings

AVERTISSMENT : Eviter le chargement électrostatique de surfaces ou revêtements

XA01099F-D/00/EN/02.17 71383579

CSA/27.04.17

CSA Control Drawing 960007343 D


Gammapilot M FMG60
4...20 mA /HART (non IS)

Encress
People for



page 2/2 Gammapilot M

## **TERMINAL COMPARTMENT B**

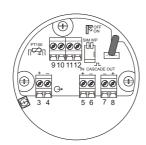

Intrinsically safe circuits Entity Parameters		Group A, B (IIC)	Group C, D (IIA, IIB)	
Signal output + -	not connected			
PT100	Uo/Voc = 8.4 V Io/Isc = 8.3 mA Po = 17.5 mW Ri = 1012 Ω	Co/Ca = 5.2 μF Lo/La = 400 mH	Co/Ca = 43 μF Lo/La = 400 mH	
Cascade out	Uo/Voc = 8.4 V Io/Isc = 19.2 mA Po = 40.3 mW Ri = 439 Ω	Co/Ca = 5.1 μF Lo/La = 69 mH	Co/Ca = 42 μF Lo/La = 199 mH	
_ +	Only for connection to Gammapilot FMG60 signal circuit "Cascade in"			
Cascade in	Ui/Vmax = 8.4 V li/Imax = 19.2 mA Pi = 40.3 mW Ci = 0 Li = 67 µH			
+ -	· ·	l o Gammapilot FMG60 signal circuit		
Connection for FHX40	Uo/Voc = 4.7 V Io/Isc = 37.7 mA Po = 44.3 mW	For connection to the CSA certified intrinsically safe Endress+Hauser display FHX40 with associated cable.		
		Observe Installati 960411-2006.	on Drawing	
	This circuit may also be connected to the CSA certified Endress+Hauser Service Interface Commubox FXA193 with associated connection cable for ToF instruments.  Observe Installation Drawing FES 0071.			

## INTRINSICALLY SAFE (Entity) Class I, Div. 1, Group A, B, C, D or Zone 1, IIC

- CSA certified apparatus must be installed acc. to manufacturer instructions. Install per Canadian Electrical Code (CEC).
- WARNING: Substitution of components may impair intrinsic safety. AVERTISSMENT: La substitution de composants peut compromettre la sécurité intrinsèque!
- Control room equipment must not use or generate over 250 V. Wiring: Use cables not subject to short circuiting, e.g. shielded pairs with shield grounded.

Use wires suitable for 20 K above surrounding ambient.


The maximum permissible values of voltage and current as well as the maximum permissible external capacitance and inductance are shown in the

For entity installation use CSA certified intrinsic safety barrier or other associated equipment that satisfy the following conditions: Uo/Voc ≤ Ui/Vmax; Io/Isc ≤ Ii/Imax;

 $Co/Ca \geq Ci + Ccable; \ Lo/La \geq Li + Lcable$ 

- Install barrier/associated equipment in accordance to the manufacturer
- Where two or more IS circuits leave the enclosure through a common conduit entry, these circuits must be separated from each other by grounded shields.
- [ia] defines "Associated Equipment". 10. Do not operate a temperature sensor with "ib" circuit in Zone 0!
- 11. Do not operate a temperature sensor with "ic" circuit in Zone 0 or Zone 1!

# **TERMINAL COMPARTMENT A**

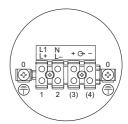

Supply circuit				
	Terminal	Supply voltage		
AC type	L1 N	90253 VAC, 50/60 Hz		
DC type	L+ L-	1835 VDC		
Signal circuit				
Type:	$\rightarrow$	420 mA/HART (active)		
FMG60-**D1****	+ -	The detector ensures galvanic isolation up to a maximum of 250 VAC between the signal circuit and any other circuit.		

## EXPLOSION PROOF Class I, Div. 1, Group A, B, C, D or Zone 1, IIC

- Install per Canadian Electrical Code (CEC).
- Control room equipment must not use or generate over 250 V. Do not open the terminal compartment A if the supply voltage is switched on and a combustible atmosphere is present.

  If a combustible atmosphere is present, wait 3 minutes after switching off the
- supply voltage, before opening the cover.
  Use supply wires suitable for 20 K above surrounding ambient.
- Sealing plugs of the terminal compartment A must not be exchanged with those
- of the terminal compartment B. In Division 1: Seal not required
- In Zone 1: Seal required within 2"!

# Class II, Div. 1, Group E, F, G, Class III

- Install per Canadian Electrical Code (CEC).
- Use a dust tight seal at the conduit entry in Class II an III locations.

  Do not open the terminal compartment A if the supply voltage is switched on and a combustible atmosphere is present. If a combustible atmosphere is present, wait 3 minutes after switching off the supply voltage, before opening the cover.
- Use supply wires suitable for 20 K above surrounding ambient.

Gammapilot M FMG60 with NaJ scintillator or PVT scintillator	Permissible ambient temperature	Temperature class
Detector without water cooling or detector with water cooling out of operation:		Т6
Detector with NaJ crystal scintillator     Detector with PVT plastic scintillator	-40 °C ≤ Ta ≤ +60 °C -40 °C ≤ Ta ≤ +60 °C	
Detector with water cooling in operation: At the pipe housing (inside the water cooling): Detector with NaJ crystal scintillator	-40 °C ≤ Ta ≤ +60 °C -40 °C < Ta < +60 °C	Т6
Detector with PVT plastic scintillator     At the compartment housing:	-40 °C ≤ Ta ≤ +75 °C	



