



**CAUTION:**  
The screws at the pipe housing must not be loosened!

\*\*For previous connection depicted below refer to installation drawing: 960007342 - A

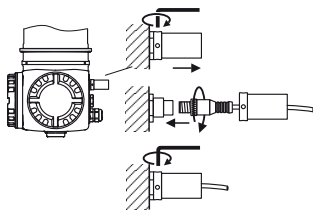

**CAUTION:**  
After connecting the FHX40 to the FMG60 the protective tube must be installed and secured by the screws.


Gammapilot M FMG60 with NaJ scintillator or PVT scintillator

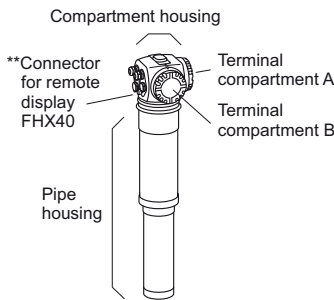

**WARNING:**  
Avoid electrostatic charging of plastic surfaces or coatings


**AVERTISSEMENT :**  
Eviter le chargement électrostatique de surfaces ou revêtements

**TERMINAL COMPARTMENT B**

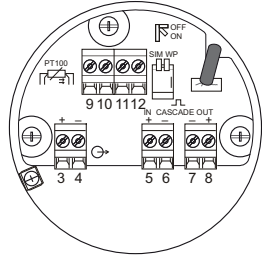

Intrinsically safe circuits Entity Parameters		Group A, B (IIC)	Group C, D (IIA, IIB)
Signal output 	not connected		
PT100 	Uo/Voc = 8.4 V Io/Isc = 8.3 mA Po = 17.5 mW Ri = 1012 Ω	Co/Ca = 5.2 μF Lo/La = 400 mH	Co/Ca = 43 μF Lo/La = 400 mH
Cascade out 	Uo/Voc = 8.4 V Io/Isc = 19.2 mA Po = 40.3 mW Ri = 439 Ω Only for connection to Gammapilot FMG60 signal circuit "Cascade in"	Co/Ca = 5.1 μF Lo/La = 69 mH	Co/Ca = 42 μF Lo/La = 199 mH
Cascade in 	Ui/Vmax = 8.4 V Ii/Imax = 19.2 mA Pi = 40.3 mW Ci = 0 Li = 67 μH Only for connection to Gammapilot FMG60 signal circuit "Cascade out"		
Connection for FHX40 	Uo/Voc = 4.7 V Io/Isc = 37.7 mA Po = 44.3 mW  This circuit may also be connected to the CSA certified Endress+Hauser Service Interface Commubox FXA193 with associated connection cable for ToF instruments. Observe Installation Drawing FES 0071.	For connection to the CSA certified intrinsically safe Endress+Hauser display FHX40 with associated cable. Observe Installation Drawing 960411-2006.	

**TERMINAL COMPARTMENT A**

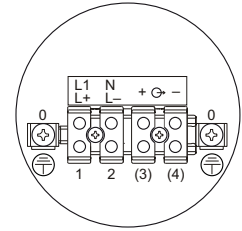

Supply circuit		
	Terminal	Supply voltage
AC type	L1 N	90...253 VAC, 50/60 Hz
DC type	L+ L-	18...35 VDC
Signal circuit		
Type: FMG60.**D2** FMG60.**D3**		Rated voltage: ≤ 32 VDC Rated current: 11 mA  The detector ensures galvanic isolation up to a maximum of 250 VAC between the signal circuit and any other circuit.

**EXPLOSION PROOF Class I, Div. 1, Group A, B, C, D or Zone 1, IIC**

1. Install per Canadian Electrical Code (CEC).
2. Control room equipment must not use or generate over 250 V.
3. Do not open the terminal compartment A if the supply voltage is switched on and a combustible atmosphere is present. If a combustible atmosphere is present, wait 3 minutes after switching off the supply voltage, before opening the cover.
4. Use supply wires suitable for 20 K above surrounding ambient.
5. Sealing plugs of the terminal compartment A must not be exchanged with those of the terminal compartment B.
6. In Division 1: Seal not required.
7. In Zone 1: Seal required within 2"

**Class II, Div. 1, Group E, F, G, Class III**

1. Install per Canadian Electrical Code (CEC).
2. Use a dust tight seal at the conduit entry in Class II an III locations.
3. Do not open the terminal compartment A if the supply voltage is switched on and a combustible atmosphere is present. If a combustible atmosphere is present, wait 3 minutes after switching off the supply voltage, before opening the cover.
4. Use supply wires suitable for 20 K above surrounding ambient.

**INTRINSICALLY SAFE (Entity) Class I, Div. 1, Group A, B, C, D or Zone 1, IIC**

1. CSA certified apparatus must be installed acc. to manufacturer instructions.
2. Install per Canadian Electrical Code (CEC).
3. WARNING: Substitution of components may impair intrinsic safety. Avertissement : La substitution de composants peut compromettre la sécurité intrinsèque!
4. Control room equipment must not use or generate over 250 V.
5. Wiring: Use cables not subject to short circuiting. Use wires suitable for 20 K above surrounding ambient.
6. The maximum permissible values of voltage and current as well as the maximum permissible external capacitance and inductance are shown in the table above. For entity installation use CSA certified intrinsic safety barrier or other associated equipment that satisfy the following conditions:  
Uo/Voc ≤ Ui/Vmax; Io/Isc ≤ Ii/Imax;  
Co/Ca ≥ Ci + Ccable; Lo/La ≥ Li + Lcable
7. Install barrier/associated equipment in accordance to the manufacturer instructions.
8. Where two or more IS circuits leave the enclosure through a common conduit entry, these circuits must be separated from each other by grounded shields.
9. [ia] defines "Associated Equipment".
10. Do not operate a temperature sensor with "ib" circuit in Zone 0!
11. Do not operate a temperature sensor with "ic" circuit in Zone 0 or Zone 1!

	Permissible ambient temperature	Temperature class
Detector without water cooling or detector with water cooling out of operation: • Detector with NaJ crystal scintillator • Detector with plastic scintillator	-40 °C...+60 °C -40 °C...+60 °C	T6
Detector with water cooling in operation: At the pipe housing (inside the water cooling): • Detector with NaJ crystal scintillator • Detector with plastic scintillator At the compartment housing:	-40 °C...+60 °C -40 °C...+60 °C -40 °C...+75 °C	T6



71383583