

Safety Instructions

Deltabar PMD55B

Ex ia IIIC Da X and Ex ia IIIC Db X

Ex ia IIIC Db X



Deltabar PMD55B

Table of contents

About this document	4
Associated documentation	4
Supplementary documentation	4
Manufacturer's certificates	4
Manufacturer address	4
Extended order code	4
Safety instructions: General	6
Safety instructions: Special conditions	7
Safety instructions: Installation	7
Temperature tables	9
Connection data	9

About this document

This document has been translated into several languages. Legally determined is solely the English source text.

Associated documentation

This document is an integral part of the following Operating Instructions:

BA02013P/00, TI01510P/00

Supplementary documentation

Explosion-protection brochure: CP00021Z/11

The Explosion-protection brochure is available:

- In the download area of the Endress+Hauser website:
www.endress.com -> Downloads -> Media Type:
 Documentation -> Documentation Type: Brochures and catalogs ->
 Text Search: CP00021Z
- On the CD for devices with CD-based documentation

Manufacturer's certificates**Certificate of Conformity TP TC 012/2011**

Inspection authority:

LLC NANIO CCVE (ООО «НАНИО ЦСВЭ»)

Certificate number:

EAЭС RU C-DE.AA87.B.00963/22

Affixing the certificate number certifies conformity with the following standards (depending on the device version):

- GOST 31610.0-2014 (IEC 60079-0:2011)
- GOST 31610.11-2014 (IEC 60079-11:2011)

Manufacturer address

Endress+Hauser SE+Co. KG

Hauptstraße 1

79689 Maulburg, Germany

Address of the manufacturing plant: See nameplate.

Extended order code

The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional information about the nameplate is provided in the associated Operating Instructions.

Position 6 (Housing, Material)		
Selected option		Description
PMD55B	B	Single compartment; Alu, coated

Position 7 (Electrical Connection)		
Selected option		Description
PMD55B	B	Gland M20, brass nickel plated, IP66/68 NEMA Type 4X/6P
	C	Gland M20, 316L, IP66/68 NEMA Type 4X/6P
	F	Thread M20, IP66/68 NEMA Type 4X/6P
	G	Thread G1/2, IP66/68 NEMA Type 4X/6P
	H	Thread NPT1/2, IP66/68 NEMA Type 4X/6P

Optional specifications

No options specific to hazardous locations are available.

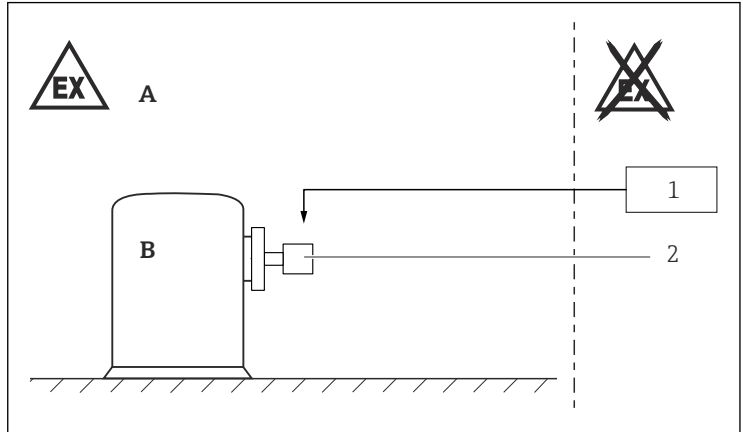
Safety instructions: **General**

- Devices suitable for zone separation (marked Ga/Gb or Da/Db) are always suitable for installation in the less critical zone (Gb or Db). Due to space limitations the corresponding marking maybe not indicated on the nameplate.
- Comply with the installation and safety instructions in the Operating Instructions.
- Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device:
 - Be suitably qualified for their role and the tasks they perform
 - Be trained in explosion protection
 - Be familiar with national regulations
- Install the device according to the manufacturer's instructions and national regulations.
- Do not operate the device outside the specified electrical, thermal and mechanical parameters.
- Only use the device in media to which the wetted materials have sufficient durability.
- Avoid electrostatic charging:
 - Of plastic surfaces (e.g. housing, sensor element, special varnishing, attached additional plates, ..)
 - Of isolated capacities (e.g. isolated metallic plates)
- Modifications to the device can affect the explosion protection and must be carried out by staff authorized to perform such work by Endress+Hauser.

Safety instructions:
Special conditions

- To avoid electrostatic charging: Do not rub surfaces with a dry cloth.
- In the event of additional or alternative special varnishing on the housing or other metal parts or for adhesive plates:
 - Observe the danger of electrostatic charging and discharge.
 - Do not install in the vicinity of processes (≤ 0.5 m) generating strong electrostatic charges.
- Avoid sparks caused by impact and friction.

Safety instructions:
Installation



A0041997

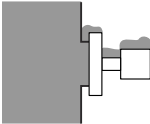
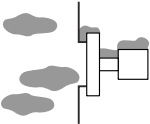
- A Zone 21, Electronic
 B Zone 20 or Zone 21, Process
 1 Associated intrinsically safe power supply units
 2 PMD55B

- After aligning (rotating) the housing, retighten the fixing screw.
- Continuous service temperature of the connecting cable: $\geq T_a + 20$ K.
- Perform the following to achieve the degree of protection IP66/67:
 - Screw the cover tight.
 - Mount the cable entry correctly.
- Seal unused entry glands with suitable sealing plugs that correspond to the type of protection.
- Supplied cable glands and metallic sealing plugs comply with the requirements of type of protection marked on the nameplate.
- The plastic sealing plug is used only as transport protection.

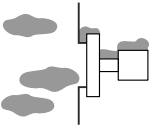
- Observe the pertinent guidelines when interconnecting intrinsically safe circuits.
- Observe the maximum process conditions according to the manufacturer's Operating Instructions.
- Install the device to exclude any mechanical damage or friction during the application. Pay particular attention to flow conditions and tank fittings.

Permitted ambient conditions

Ex ia IIIC Da X and Ex ia IIIC Db X

Process Zone 20	Housing Zone 21
Continuous dust submersion	 <p>Dust accumulation or temporary explosive dust atmosphere</p>
Continuous explosive dust atmosphere and deposits	 <p>Dust accumulation or temporary explosive dust atmosphere</p>

Ex ia IIIC Db X

Process Zone 21	Housing Zone 21
Continuous dust deposits or temporary explosive dust atmosphere	 <p>Dust accumulation or temporary explosive dust atmosphere</p>

Intrinsic safety

- The device is only suitable for connection to certified, intrinsically safe equipment with explosion protection Ex ia / Ex ib.
- The intrinsically safe input power circuit of the device is isolated from ground. The dielectric strength is at least 500 V_{rms}.

Potential equalization

Integrate the device into the local potential equalization.

Temperature tables



- The specified surface temperature takes into account all direct heat influences from process heat and self-heating at the housing.
- The specified ambient and process temperature ranges exclusively refer to the explosion protection and must not be exceeded. Operationally permitted ambient temperature ranges can be restricted depending on the version: See Operating Instructions.
- Do not exceed the max. ambient temperature at the housing.
- The process temperatures refer to the temperature at the separation membrane.

For detailed information see Technical Information.



Ingress protection of housing: IP66/67

Ex ia IIIC T₂₀₀ 100°C Da X and Ex ia IIIC T₂₀₀ 100°C Db X

Ex ia IIIC T_L 100°C Db X

Maximum surface temperature	Process temperature range	Ambient temperature range
T100°C	-40 °C ≤ T _p ≤ +80 °C	-40 °C ≤ T _a ≤ +60 °C
	-40 °C ≤ T _p ≤ +100 °C	-40 °C ≤ T _a ≤ +55 °C

Specific conditions of use:

- The surface temperature is
 - for equipment protection level (EPL) Da: T₂₀₀ 100 °C (with 200 mm dust deposit)
 - and equipment protection level (EPL) Db: T_L 100 °C (with dust accumulation T_L)
- The surface temperature is for equipment protection level (EPL) Db: T_L 100 °C (with dust accumulation T_L)



T_L marking:

The assigned surface temperature without dust layer is the same.

Connection data

Power supply
U _I ≤ 30 V _{DC} I _I ≤ 300 mA P _I ≤ 1 W C _I ≤ 10 nF L _I = 0

Cable entry: Connection compartment


Cable gland: *Basic specification, Position 7 = B*

Thread	Clamping range	Material	Sealing insert	O-ring
M20x1,5	ø 8 to 10.5 mm ¹⁾ ø 6.5 to 13 mm ²⁾	Ms, nickel-plated	Silicone	EPDM (ø 17x2)

- 1) Standard
2) Separate clamping inserts available

Cable gland: *Basic specification, Position 7 = C*

Thread	Clamping range	Material	Sealing insert	O-ring
M20x1,5	ø 7 to 12 mm	1.4404	NBR	EPDM (ø 17x2)

- 
 - The tightening torque refers to cable glands installed by the manufacturer:
 - Recommended: 3.5 Nm
 - Maximum: 10 Nm
 - This value may be different depending on the type of cable. However, the maximum value must not be exceeded.
 - Only suitable for fixed installation. The operator must pay attention to a suitable strain relief of the cable.
 - To maintain the ingress protection of the housing: Install the housing cover, cable glands and blind plugs correctly.



71538525

www.addresses.endress.com
