

# Safety Instructions

## Gammapilot FMG50

4-20 mA HART

II 2 G Ex db IIC T6...T1 Gb





# Gammapilot FMG50

4-20 mA HART

## Table of contents

Associated documentation .....	4
Supplementary documentation .....	4
Manufacturer's certificates .....	4
Manufacturer address .....	4
Other standards .....	4
Extended order code .....	5
Safety instructions: General .....	7
Safety instructions: Special conditions .....	7
Safety instructions: Installation .....	8
Safety instructions: Ex d joints .....	9
Temperature tables .....	9
Connection data .....	9

<b>Associated documentation</b>	<p>This document is an integral part of the following Operating Instructions: BA01966F/00</p>
<b>Supplementary documentation</b>	<p>Explosion-protection brochure: CP00021Z/11 The Explosion-protection brochure is available:</p> <ul style="list-style-type: none"><li>▪ In the download area of the Endress+Hauser website: <a href="http://www.endress.com">www.endress.com</a> -&gt; Downloads -&gt; Brochures and Catalogs -&gt; Text Search: CP00021Z</li><li>▪ On the CD for devices with CD-based documentation</li></ul>
<b>Manufacturer's certificates</b>	<p><b>UK Declaration of Conformity</b></p> <p>Declaration Number: UK_00044</p> <p>The UK Declaration of Conformity is available: In the download area of the Endress+Hauser website: <a href="http://www.endress.com">www.endress.com</a> -&gt; Downloads -&gt; Declaration -&gt; Type: UKCA Declaration -&gt; Product Code: ...</p> <p><b>UKCA type-examination certificate</b></p> <p>Certificate number: CML 21UKEX1434X</p> <p>List of applied standards: See UK Declaration of Conformity.</p>
<b>Manufacturer address</b>	<p>Endress+Hauser SE+Co. KG Hauptstraße 1 79689 Maulburg, Germany Address of the manufacturing plant: See nameplate.</p>
<b>Other standards</b>	<p>Among other things, the following standards shall be observed in their current version for proper installation:</p> <ul style="list-style-type: none"><li>▪ IEC/EN 60079-14: "Explosive atmospheres - Part 14: Electrical installations design, selection and erection"</li><li>▪ EN 1127-1: "Explosive atmospheres - Explosion prevention and protection - Part 1: Basic concepts and methodology"</li></ul>

## Extended order code

The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional information about the nameplate is provided in the associated Operating Instructions.

### Structure of the extended order code

FMG50	-	*****	+	A*B*C*D*E*F*G*..
<i>(Device type)</i>		<i>(Basic specifications)</i>		<i>(Optional specifications)</i>

\* = Placeholder

At this position, an option (number or letter) selected from the specification is displayed instead of the placeholders.

#### *Basic specifications*

The features that are absolutely essential for the device (mandatory features) are specified in the basic specifications. The number of positions depends on the number of features available. The selected option of a feature can consist of several positions.

#### *Optional specifications*

The optional specifications describe additional features for the device (optional features). The number of positions depends on the number of features available. The features have a 2-digit structure to aid identification (e.g. JA). The first digit (ID) stands for the feature group and consists of a number or a letter (e.g. J = Test, Certificate). The second digit constitutes the value that stands for the feature within the group (e.g. A = 3.1 material (wetted parts), inspection certificate).

More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

### Extended order code: Gammapilot



The following specifications reproduce an extract from the product structure and are used to assign:

- This documentation to the device (using the extended order code on the nameplate).
- The device options cited in the document.

#### *Device type*

FMG50

*Basic specifications*

Position 1, 2 (Approval)		
Selected option	Description	
FMG50	UQ	UK Ex II 2 G Ex db IIC T6...T1 Gb

Position 7 (Electrical Connection)		
Selected option	Description	
FMG50	F	Thread M20
	H	Thread NPT1/2

Position 8 (Application)		
Selected option	Description	
FMG50	A	Ambient temperature -40...60°C/ -40...140°F (PVT)
	B	Ambient temperature -20...80°C/ -4...176°F (PVT HT)
	C	Ambient temperature -40...80°C/ -40...176°F (NaI)

Position 9 (Sensor Length, Material)		
Selected option	Description	
FMG50	A, B, C	..... mm; NaI crystal
	G, H, I, J, K, L, M, N	..... mm; PVT

*Optional specifications*

No options specific to hazardous locations are available.


**Safety  
instructions:  
General**

- Comply with the installation and safety instructions in the Operating Instructions.
- Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device:
  - Be suitably qualified for their role and the tasks they perform
  - Be trained in explosion protection
  - Be familiar with national regulations
- Install the device according to the manufacturer's instructions and national regulations.
- Avoid electrostatic charging:
  - Of plastic surfaces (e.g. enclosure, sensor element, special varnishing, attached additional plates, ..)
  - Of isolated capacities (e.g. isolated metallic plates)

**Safety  
instructions:  
Special conditions**

- In the event of additional or alternative special varnishing on the enclosure or other metal parts:
- Observe the danger of electrostatic charging and discharge.
  - Do not rub surfaces with a dry cloth.
  - Do not install in the vicinity of processes generating strong electrostatic charges.


## Safety instructions: Installation

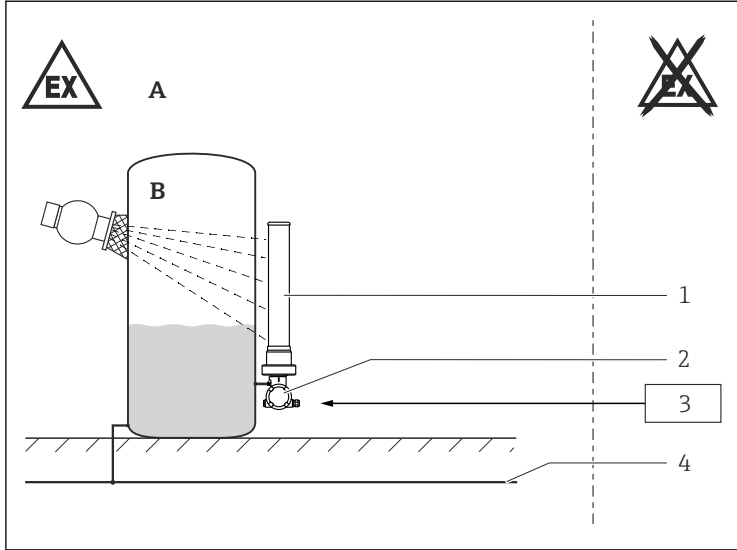

A0041167

- A Zone 1, Zone 2
- B Zone 0, Zone 1, Zone 2
- 1 Detector pipe
- 2 Enclosure
- 3 Power supply
- 4 Local potential equalization

- After aligning (rotating) the enclosure, retighten the fixing screw.
- The safety screws at the pipe enclosure must not be loosened:

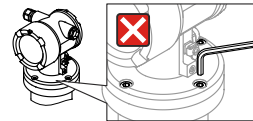

A0041226

- In potentially explosive atmospheres: Do not open the connection compartment cover and the electronics compartment cover when energized.
- Before operation:
  - Screw in the cover all the way.
  - Tighten the securing clamp on the cover.
- Connect the device:
  - Using suitable cable and wire entries of protection type "Flameproof Enclosure (Ex db)".
  - Using piping systems of protection type "Flameproof Enclosure (Ex db)".



- When connecting through a conduit entry approved for this purpose, mount the associated sealing unit directly at the enclosure.
- Continuous service temperature of the connecting cable:  $\geq T_a + 20 \text{ K}$ .
- Seal unused entry glands with approved sealing plugs that correspond to the type of protection. The plastic transport sealing plug does not meet this requirement and must therefore be replaced during installation.
- Only use certified cable entries or sealing plugs. The metal sealing plugs supplied meet this requirement.
- Only use genuine spare parts from Endress+Hauser which are specified for the device.

### Potential equalization

Integrate the device into the local potential equalization.

### Safety instructions: Ex d joints

- If required or if in doubt: ask manufacturer for specifications.
- Flameproof joints are not intended to be repaired.

### Temperature tables

*Basic specification, Position 8 = A*

Temperature class	Ambient temperature $T_a$ (ambient)
T6...T1	$-40 \text{ °C} \leq T_a \leq +60 \text{ °C}$

*Basic specification, Position 8 = B*

Temperature class	Ambient temperature $T_a$ (ambient)
T6	$-20 \text{ °C} \leq T_a \leq +70 \text{ °C}$
T5...T1	$-20 \text{ °C} \leq T_a \leq +75 \text{ °C}$

*Basic specification, Position 8 = C*

Temperature class	Ambient temperature $T_a$ (ambient)
T6	$-40 \text{ °C} \leq T_a \leq +70 \text{ °C}$
T5...T1	$-40 \text{ °C} \leq T_a \leq +75 \text{ °C}$

### Connection data

Power supply
$U \leq 35 \text{ V}_{\text{DC}}$ $P \leq 1 \text{ W}$







71537558

[www.addresses.endress.com](http://www.addresses.endress.com)

---