Safety Instructions RN22, RN42

ATEX, IECEx: II(1)G [Ex ia Ga] IIC

II(1)D [Ex ia Da] IIIC II3G Ex ec IIC Gc







RN22, RN42 XA02086K

RN22, RN42

Table of contents

Associated documentation	4
Supplementary documentation	4
Manufacturer's certificates	4
Certificate holder	4
Safety instructions: Intrinsic safety	5
Safety instructions: Installation in Zone 2 (EPL Gc)	6
Safety instructions: Specific conditions of use	6

XA02086K RN22, RN42

Associated documentation

All documentation is available on the Internet:

www.endress.com/Deviceviewer

(enter the serial number from the nameplate).



If not yet available, a translation into EU languages can be ordered

To commission the device, please observe the Operating Instructions pertaining to the device:

www.endress.com/code>, e.g. RN22

Supplementary documentation

Explosion protection brochure: CP00021Z

The explosion protection brochure is available on the Internet:

www.endress.com/Downloads

Manufacturer's certificates

IECEx certificate

Certificate number: IECEx EPS 19.0100X, IECEx EPS 21.0016U

Affixing the certificate number certifies conformity with the following standards (depending on the device version)

IEC 60079-0: 2017IEC 60079-11: 2011IEC 60079-7: 2015

ATEX certificate

Certificate number: EPS 19ATEX1231 X

EU Declaration of Conformity

Declaration number: EC 00919, EC 00926 or EC 00901, EC 00927

The EU Declaration of Conformity is available on the Internet:

www.endress.com/Downloads

UKCA certificate

Certificate number: CML 21UKEX2998X

UKCA Declaration of Conformity

Declaration number: UK_00404, UK_00405 or UK_00414, UK_00415

Certificate holder


Endress+Hauser Wetzer GmbH + Co. KG

Obere Wank 1

87484 Nesselwang, Germany

RN22, RN42 XA02086K

Safety instructions: Intrinsic safety

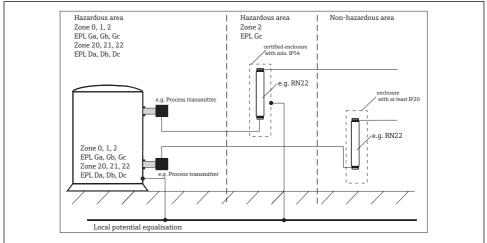

A0046146

- Comply with the installation and safety instructions in the Operating Instructions.
- Install the device according to the manufacturer's instructions and any other valid standards and regulations (e.g. EN/IEC 60079-14).
- The unit is an associated electrical apparatus and can only be installed outside the hazardous area.
- The unit must be installed in such way that a minimum ingress protection of IP 20 is achieved.
- When installing the unit care must be taken that there must be a spacing of at least 50 mm(zone radius) to the intrinsically safe terminals
- Screw tight the unused terminals for keeping the required distances between intrinsically safe circuits/terminals.

XA02086K RN22, RN42

Safety instructions: Installation in Zone 2 (EPL Gc)

These instructions concern the required enclosure, accessories and supply cables in final application.

- Comply with the installation and safety instructions in the Operating Instructions.
- Install the device according to the manufacturer's instructions and any other valid standards and regulations (e.g. EN/IEC 60079-14).
- Seal the cable entries tight with certified cable glands which have at least type of protection Ex ec suitable for Group IIC (degree of protection IP54).

Safety instructions: Specific conditions of use

- If several devices are installed side by side, it is important to ensure that the maximum side wall temperature of the individual device of 80 °C (176 °F) is not exceeded. If this cannot be guaranteed, mount the devices at a distance from one another or ensure sufficient cooling.
- When install the unit in EPL Gc a certified enclosure shall be used providing a degree of protection of at least IP54 and compliance with the enclosure requirements to IEC/EN 60079-0.
- In an explosive atmosphere, do not open the certified enclosure when voltage is supplied (ensure that at least IP 54 is maintained during operation).
- For full certification as an electrical equipment for use in EPL Gc the tests according to IEC 60079-0:2017 section 5.2 and 5.3 have to be carried out. Based on the test results a temperature class shall be assigned.

Category	Type of protection (ATEX)
II(1)G	[Ex ia Ga] IIC
II(1)D	[Ex ia Da] IIIC

Type of protection (IECEx)
[Ex ia Ga] IIC
[Ex ia Da] IIIC
Ex ec IIC Gc

RN22, RN42 XA02086K

Ambient temperature: -40 to +60 °C

Туре	Electrical data					
RN22, RN42	Supply RN22: terminals 1.1 (+), 1.2 (-)		U = 24V DC (-20%/- Um = 250 V	U = 24V DC (-20%/+25%) Um = 250 V		
	Supply RN42: terminals 1.1 (L/+), 1.2 (N/-)		U = 24 to 230 V AC Um = 250 V	U = 24 to 230 V AC/DC (-20 %/+10 %) 50/60Hz Um = 250 V		
	Output circuit: terminal 3.1 (+), 3.2 (-) terminal 2.1 (+), 2.2 (-)		U = 30V DC I = 0/4 - 20 mA Um = 30 V	I = 0/4 - 20 mA		
	Input circuit: Connection 2-wire (active) RN22: terminal 4.1 (+), 4.2 (-) terminal 6.1 (+), 6.2 (-) RN42: terminal 4.1 (+), 4.2 (-)		1 3 3 3	Io ≤ 87. 6 mA		
	Maximum connection values Single values:	Ex ia IIC Ex ia IIB Ex ia IIA	Lo = 5.2 mH Lo = 20.8 mH Lo = 44.8 mH	Co = 88 nF Co = 683 nF Co = 2280 nF		
	Combined values Lo/Co:	Ex ia IIC	1.3 mH/0.05 μF; 1 r 0.5 mH/0.065 μF	nH/0.052 μF;		
		Ex ia IIB	26 mH/0.39 μF; 2 m 0.5 mH/0.64 μF; 0.2	nH/0.44 μF; 1 mH/0.53 μF; 2 mH/0.683 μF		
		Ex ia IIA	49 mH/1.3 μF; 20 m 0.5 mH/2.2 μF; 0.2	nH/1.6 μF; 1 mH/1.8 μF; mH/2.28 μF		
	Connection 4-wire (passive) RN22: terminal 4.2 (+), 5.1 (-) terminal 6.2 (+), 5.2 (-) RN42: terminal 4.2 (+), 4.3 (-)		, ,	Io ≤ 10 mA		
	Maximum connection values Combined values Lo/Co:	Ex ia IIC	100 mH/0.065 μF; 2 1 mH/0.081 μF; 0.5			
		Ex ia IIB	100 mH/0.48 μF; 2 1 mH/0.59 μF; 0.5 r			

XA02086K RN22, RN42

Туре	Electrical data			
	Ex ia IIA		100 mH/1.7 μF; 1 mH/1.9 μF; 0.5 mH/2.28 μF	
	Connection 4-wire (passive)			
	RN22:		Ui ≤ 30 V DC	
	terminal 4.2 (+), 5.1 (-)		Ii = not applicable when keeping Ui	
	terminal 6.2 (+), 5.2 (-)		Pi = not applicable when keeping Ui	
	RN42:		Ci = negligibly small	
	terminal 4.2 (+), 4.3 (-)		Li = negligibly small	







www.addresses.endress.com