

# Safety Instructions

## **iTEMP TMT84, iTEMP TMT85**

PROFIBUS®, FOUNDATION Fieldbus™

Ex ia IIC T4...T6 Ga



---

# iTEMP TMT84, iTEMP TMT85

PROFIBUS®, FOUNDATION Fieldbus™

## Table of contents

Associated documentation ..... 4

Supplementary documentation ..... 4

Certificates and declarations ..... 4

Manufacturer address ..... 4


Safety instructions ..... 5

Safety instructions: Installation ..... 5


Safety instructions: Specific conditions of use ..... 5

Temperature tables ..... 6

Electrical connection data ..... 6

<b>Associated documentation</b>	<p>To commission the device, please observe the Operating Instructions pertaining to the device: <a href="http://www.endress.com/&lt;product code&gt;">www.endress.com/&lt;product code&gt;</a>, e.g. TMT84</p>
<b>Supplementary documentation</b>	<p>Explosion protection brochure: CP00021Z The explosion protection brochure is available on the Internet: <a href="http://www.endress.com/Downloads">www.endress.com/Downloads</a></p>
<b>Certificates and declarations</b>	<p><b>NEPSI certificate</b> Certificate number: GYJ23.1145X Affixing the certificate number certifies conformity with the following standards (depending on the device version)</p> <ul style="list-style-type: none"><li>■ GB/T 3836.1-2021</li><li>■ GB/T 3836.4-2021</li></ul> <p> Please refer to NEPSI/CCC certificates for conditions of safe use.</p>
<b>Manufacturer address</b>	<p>Endress+Hauser Wetzler GmbH + Co. KG Obere Wank 1 87484 Nesselwang, Germany</p>

## Safety instructions

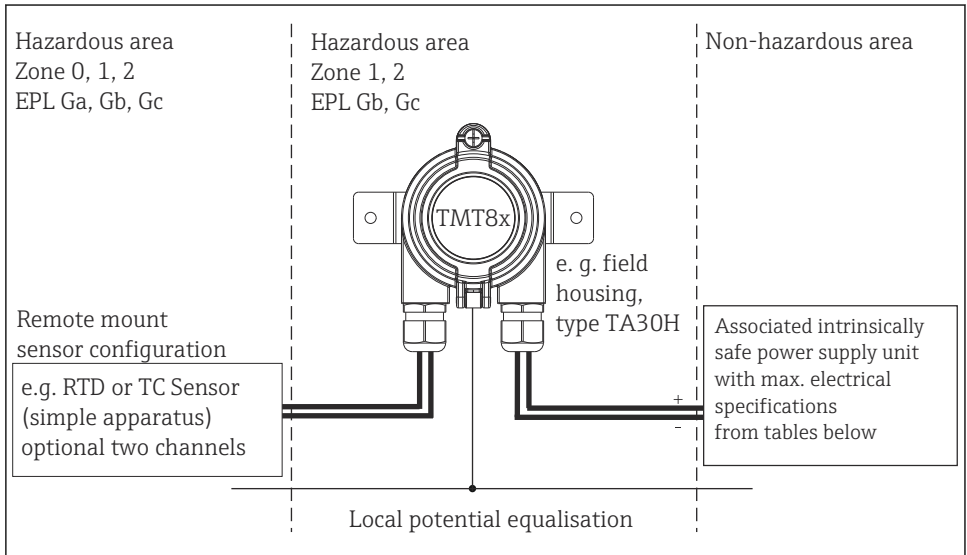

A0050182

### Safety instructions: Installation

- Comply with the installation and safety instructions in the Operating Instructions.
- Install the device according to the manufacturer's instructions and any other valid standards and regulations (e.g. EN/IEC 60079-14).
- The housing of the field transmitter must be connected to the potential matching line.
- The type of protection changes as follows when the device is connected to certified intrinsically safe circuits of Category ib: Ex ib IIC.  
When connecting an intrinsically safe ib circuit, do not operate the sensor at Zone 0 (EPL Ga).
- When connecting two independent sensors make sure that the potential equalisation cables are at the same potential.
- The circuits of assembled head transmitter are isolated from its enclosure in conformance with EN/IEC 60079-11 chapter 6.3.13.

### Safety instructions: Specific conditions of use

The temperature transmitter must be installed so, that even in the event of rare incidents, an ignition source due to impact or friction between the enclosure and iron/steel is excluded.

Temperature  
tables

Transmitter version with field housing, type TA30H, TA30A, TA30D		Temperature class / code	Ambient temperature range
Ex ia IIC	iTEMP TMT84, TMT85 without display TID10	T6	-40 to +55 °C
		T5	-40 to +70 °C
		T4	-40 to +85 °C
	iTEMP TMT84, TMT85 with display TID10	T6	-40 to +55 °C
		T5	-40 to +70 °C
		T4	-40 to +85 °C

Electrical  
connection data

Type	Electrical data	
iTEMP TMT84 PROFIBUS® PA-protocol	Supply voltage (terminal + and -)	FISCO: $U_1 \leq 17.5\text{ V}_{\text{DC}}$ $I_1 \leq 380\text{ mA}$ $C_1 \leq 5\text{ nF}$ $L_1 = 2.75\text{ }\mu\text{H}$
iTEMP TMT85 FOUNDATION Fieldbus™-protocol		or: $U_1 \leq 24\text{ V}_{\text{DC}}$ $I_1 \leq 250\text{ mA}$ $C_1 \leq 5\text{ nF}$ $L_1 = 2.75\text{ }\mu\text{H}$
	Applicable for connection to a Fieldbus system according to FISCO-model	
	Sensor circuit (terminal 3 to 7)	$U_o \leq 7.2\text{ V}_{\text{DC}}$ $I_o \leq 25.9\text{ mA}$ $P_o \leq 46.7\text{ mW}$ $C_1 \leq 5\text{ nF}$ $L_1 = \text{negligibly low}$
	Max. connection values Ex ia IIC Ex ia IIB Ex ia IIA	$L_o = 20\text{ mH}$ $L_o = 50\text{ mH}$ $L_o = 100\text{ mH}$ $C_o = 0.97\text{ }\mu\text{F}$ $C_o = 4.6\text{ }\mu\text{F}$ $C_o = 6\text{ }\mu\text{F}$

Type of protection (NEPSI)	Type
Ex ia IIC T4...T6 Ga	iTEMP TMT84, iTEMP TMT85

---



71627692

[www.addresses.endress.com](http://www.addresses.endress.com)

---