# Safety Instructions **Gammapilot FMG50**

ATEX, IECEx: Ex db ia IIC T6 Gb







# Gammapilot FMG50

# Table of contents

Associated documentation	4
Supplementary documentation	4
Certificates and declarations	4
Manufacturer address	5
Other standards	5
Extended order code	5
Safety instructions: General	8
Safety instructions: Special conditions	8
Safety instructions: Installation	9
Safety instructions: Ex d joints	.0
Temperature tables	.0
Connection data 1	. 1

XA01962F-B Gammapilot FMG50

# Associated documentation

All documentation is available on the Internet:

www.endress.com/Deviceviewer

(enter the serial number from the nameplate).



If not yet available, a translation into EU languages can be ordered

To commission the device, please observe the Operating Instructions pertaining to the device:

BA01966F

# Supplementary documentation

Explosion protection brochure: CP00021Z

The explosion protection brochure is available on the Internet: www.endress.com/Downloads

# Certificates and declarations

#### **EU Declaration of Conformity**

Declaration Number:

EC 00821

The EU Declaration of Conformity is available:

In the download area of the Endress+Hauser website:

www.endress.com -> Downloads -> Declaration ->

Type: EU Declaration -> Product Code: ...

## EU type-examination certificate

Certificate number:

EPS 18 ATEX 1 194 X

List of applied standards: See EU Declaration of Conformity.

#### **IEC Declaration of Conformity**

Certificate number:

IECEx EPS 18.0098X

Affixing the certificate number certifies conformity with the following standards (depending on the device version):

■ IEC 60079-0:2017

■ IEC 60079-1:2014

■ IEC 60079-11:2011

■ IEC TS 60079-47:2021

# Manufacturer address

Endress+Hauser SE+Co. KG Hauptstraße 1 79689 Maulburg, Germany

Address of the manufacturing plant: See nameplate.

#### Other standards

Among other things, the following standards shall be observed in their current version for proper installation:

- IEC/EN 60079-14: "Explosive atmospheres Part 14: Electrical installations design, selection and erection"
- EN 1127-1: "Explosive atmospheres Explosion prevention and protection - Part 1: Basic concepts and methodology"

# Extended order code

The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional information about the nameplate is provided in the associated Operating Instructions.

#### Structure of the extended order code

FMG50	-	*****	+	A*B*C*D*E*F*G*
(Device		(Basic		(Optional
type)		specifications)		specifications)

\* = Placeholder

At this position, an option (number or letter) selected from the specification is displayed instead of the placeholders.

#### Basic specifications

The features that are absolutely essential for the device (mandatory features) are specified in the basic specifications. The number of positions depends on the number of features available.

The calcuted entire of a feature can consist of covered positions.

The selected option of a feature can consist of several positions.

## Optional specifications

The optional specifications describe additional features for the device (optional features). The number of positions depends on the number of features available. The features have a 2-digit structure to aid identification (e.g. JA). The first digit (ID) stands for the feature group and consists of a number or a letter (e.g. J = Test, Certificate). The second digit constitutes the value that stands for the feature within the group (e.g. A = 3.1 material (wetted parts), inspection certificate).

XAO1962F-B Gammapilot FMG50

More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

#### Extended order code: Gammapilot



The following specifications reproduce an extract from the product structure and are used to assign:

- This documentation to the device (using the extended order code on the nameplate).
- The device options cited in the document.

Device type

FMG50

#### Basic specifications

Position 1, 2 (Approval)			
Selected option Description		Description	
FMG50 BP		ATEX II 2 G Ex db ia IIC T6T1 Gb <sup>1)</sup> IECEx Ex db ia IIC T6T1 Gb <sup>1)</sup>	

1) Protection type "Ex db" only available inside the detector pipe

Position 3, 4 (Output)			
Selected option Description		Description	
FMG50 BA 2-wire, 4-20 mA HART		2-wire, 4-20 mA HART	
DA 2-wire, PR		2-wire, PROFIBUS PA	
	FA	2-wire, PROFINET, 10Mbit/s (APL)	

Position 5 (Display, Operation)			
Selected option		Description	
FMG50	Α	W/o; via communication	
	С	Segment display w/o buttons	
	D	Segment display w/o buttons + Bluetooth	
	Е	Graphic display	
	F	Graphic display + Bluetooth	
	L	Prepared for display FHX50B + M12 connection	
	М	Prepared for display FHX50B + Gland M20	
	N	Prepared for display FHX50B + Thread NPT1/2	
	0	Prepared for display FHX50B + Thread M20	

Position 8 (Application)			
Selected option Description			
FMG50	Α	Ambient temperature -4060°C/ -40140°F (PVT)	
	В	Ambient temperature -2080°C/ -4176°F (PVT HT)	
C Ambient temperature -4080°C/ -40176°F (NaI)		Ambient temperature -4080°C/ -40176°F (NaI)	

# Optional specifications

ID Nx (Accessory Mounted)			
Selected option		Description	
FMG50 NA		Overvoltage protection	

ID Px, Rx (Accessory Enclosed)			
Selected option		Description	
FMG50 PA		Weather protection cover, 316L	

XA01962F-B Gammapilot FMG50

#### Safety instructions: General

• The device is intended to be used in explosive atmospheres as defined in the scope of IEC 60079-0 or equivalent national standards. If no potentially explosive atmospheres are present or if additional protective measures have been taken: The device may be operated according to the manufacturer's specifications.


- Comply with the installation and safety instructions in the Operating Instructions.
- Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device:
  - Be suitably qualified for their role and the tasks they perform
  - Be trained in explosion protection
  - Be familiar with national regulations
- Install the device according to the manufacturer's instructions and national regulations.
- Do not operate the device outside the specified electrical, thermal and mechanical parameters.
- Avoid electrostatic charging:
  - Of plastic surfaces (e.g. enclosure, sensor element, special varnishing, attached additional plates, ...)
  - Of isolated capacities (e.g. isolated metallic plates)
- Alterations to the device can affect the explosion protection and must be carried out by staff authorized to perform such work by Endress+Hauser.

## Safety instructions: Special conditions

- To avoid electrostatic charging: Do not rub surfaces with a dry cloth.
- In the event of additional or alternative special varnishing on the enclosure or other metal parts or for adhesive plates:
  - Observe the danger of electrostatic charging and discharge.
  - Do not install in the vicinity of processes generating strong electrostatic charges.


Optional specification, ID Px, Rx = PAConnect the weather protection cover to the local potential equalization.

#### Safety instructions: Installation

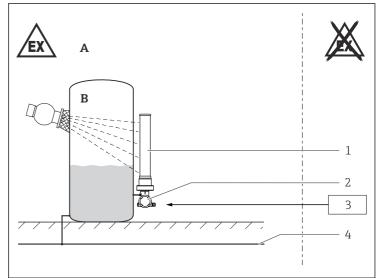

A0041167

- A Zone 1, Zone 2
- B Zone 0, Zone 1, Zone 2
- 1 Detector pipe (in Ex d)
- 2 Enclosure
- 3 Certified associated apparatus
- 4 Local potential equalization
- After aligning (rotating) the enclosure, retighten the fixing screw.
- The safety screws at the pipe enclosure must not be loosened:



A0041226

- $\, \bullet \,$  Continuous service temperature of the connecting cable:  $\geq T_a + 20$  K.
- Observe the pertinent guidelines when interconnecting intrinsically safe circuits.

Basic specification, Position 5 = N

Observe the requirements according to IEC/EN 60079-14 for conduit systems and the wiring- and installation instructions of the suitable Safety Instructions (XA). In addition, observe national regulations and standards for conduit systems.

XAO1962F-B Gammapilot FMG50

#### Intrinsic safety

- $\blacksquare$  The intrinsically safe input power circuit of the device is isolated from ground. The dielectric strength is at least 500  $V_{\rm rms}.$
- When the device is connected to certified intrinsically safe circuits of Category Ex ib for Equipment Groups IIC and IIB, the type of protection changes to Ex ib IIC and Ex ib IIB.
- Associated devices with galvanic isolation between the intrinsically safe and non-intrinsically safe circuits are preferred.

#### Potential equalization

Integrate the device into the local potential equalization.

#### Overvoltage protection

Optional specification, ID Nx = NA

The intrinsically safe input power circuit of the device is isolated from ground. The dielectric strength is at least 290  $V_{\rm rms}.\,$ 

## Safety instructions: Ex d joints

- If required or if in doubt: ask manufacturer for specifications.
- Flameproof joints are not intended to be repaired.

# Temperature tables

Basic specification, Position 3, 4 = BA

with Basic	Temperature class	Ambient temperature $T_a$ (ambient) with Basic specification	
specification, Position 8		Position 5 = A, L, M, N, O	Position 5 = C, D, E, F
= A	T6T1	$-40 ^{\circ}\text{C} \le T_{a} \le +60 ^{\circ}\text{C}$	$-40  ^{\circ}\text{C} \le T_{a} \le +60  ^{\circ}\text{C}$
= B	T6	$-20 ^{\circ}\text{C} \le T_a \le +70 ^{\circ}\text{C}$	$-20 ^{\circ}\text{C} \le T_a \le +60 ^{\circ}\text{C}$
	T5T1	$-20 ^{\circ}\text{C} \le \text{T}_{\text{a}} \le +75 ^{\circ}\text{C}$	$-20 ^{\circ}\text{C} \le T_a \le +65 ^{\circ}\text{C}$
= C	T6	-40 °C ≤ T <sub>a</sub> ≤ +70 °C	$-40 ^{\circ}\text{C} \le T_a \le +60 ^{\circ}\text{C}$
	T5T1	$-40 ^{\circ}\text{C} \le \text{T}_{\text{a}} \le +75 ^{\circ}\text{C}$	$-40 ^{\circ}\text{C} \le T_a \le +65 ^{\circ}\text{C}$

# Basic specification, Position 3, 4 = DA

with Basic	Temperature class	Ambient temperature $T_a$ ( with Basic specification	(ambient)
specification, Position 8		Position 5 = A, L, M, N, O	Position 5 = C, D, E, F
= A	T6T1	$-40 ^{\circ}\text{C} \le \text{T}_{\text{a}} \le +60 ^{\circ}\text{C}$	$-40 ^{\circ}\text{C} \le T_{a} \le +60 ^{\circ}\text{C}$
= B	Т6	$-20 ^{\circ}\text{C} \le T_a \le +60 ^{\circ}\text{C}$	$-20 ^{\circ}\text{C} \le T_a \le +60 ^{\circ}\text{C}$
	T5T1	$-20 ^{\circ}\text{C} \le \text{T}_{\text{a}} \le +65 ^{\circ}\text{C}$	$-20 ^{\circ}\text{C} \le T_a \le +65 ^{\circ}\text{C}$
= C	Т6	-40 °C ≤ T <sub>a</sub> ≤ +60 °C	$-40 ^{\circ}\text{C} \le T_a \le +60 ^{\circ}\text{C}$
	T5T1	-40 °C ≤ T <sub>a</sub> ≤ +65 °C	$-40 ^{\circ}\text{C} \le T_a \le +65 ^{\circ}\text{C}$

# Basic specification, Position 3, 4 = FA

with Basic specification,	Temperature class	Ambient temperature T <sub>a</sub> (ambient) with Basic specification	
Position 8		Position 5 = A, L, M, N, O	Position 5 = C, D, E, F
= A	T6T1	-40 °C ≤ T <sub>a</sub> ≤ +60 °C	$-40 ^{\circ}\text{C} \le T_{a} \le +60 ^{\circ}\text{C}$
= B	Т6	$-20 ^{\circ}\text{C} \le \text{T}_{\text{a}} \le +70 ^{\circ}\text{C}$	$-20  ^{\circ}\text{C} \le T_{a} \le +60  ^{\circ}\text{C}$
	T5T1	$-20 ^{\circ}\text{C} \le \text{T}_{\text{a}} \le +75 ^{\circ}\text{C}$	$-20 ^{\circ}\text{C} \le T_a \le +65 ^{\circ}\text{C}$
= C	T6	$-40 ^{\circ}\text{C} \le \text{T}_{\text{a}} \le +70 ^{\circ}\text{C}$	$-40 ^{\circ}\text{C} \le T_{a} \le +60 ^{\circ}\text{C}$
	T5T1	-40 °C ≤ T <sub>a</sub> ≤ +75 °C	$-40 ^{\circ}\text{C} \le T_a \le +65 ^{\circ}\text{C}$

## **Connection data**

# Basic specification, Position 3, 4 = BA

ower supply	
$v_{\rm I} \le 30 \ V_{\rm DC} \le 300 \ \rm mA$	
≤ 300 mA	
ı ≤ 1 W	
<sub>i</sub> ≤ 10 nF	
= 0	

# Basic specification, Position 3, 4 = DA


Power supply				
FISCO	Entity			
$\begin{split} & U_{I} \leq 17.5 \ V_{DC} \\ & I_{i} \leq 380 \ mA \\ & P_{i} \leq 5.32 \ W \\ & C_{i} \leq 5 \ nF \\ & L_{i} = 0 \end{split}$	$\begin{split} &U_{l} \leq 24 \ V_{DC} \\ &I_{i} \leq 300 \ mA \\ &P_{i} \leq 1.2 \ W \\ &C_{i} \leq 5 \ nF \\ &L_{i} = 0 \end{split}$			

XA01962F-B Gammapilot FMG50

# Basic specification, Position 3, 4 = FA

Power supply	
2-WISE	Entity
$\begin{aligned} &U_i \leq 17.5 \ V_{DC} \\ &I_i \leq 380 \ mA \\ &P_i \leq 5.32 \ W \\ &C_i \leq 5 \ nF \\ &L_i = 0 \end{aligned}$	$\begin{split} &U_i \leq 17.5 \ V_{DC} \\ &I_i \leq 300 \ mA \\ &P_i \leq 1.2 \ W \\ &C_i \leq 5 \ nF \\ &L_i = 0 \end{split}$

In connection with: *Basic specification, Position 5 = L, M, N, O* Installation according to the specifications of FHX50B.

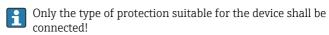







www.addresses.endress.com