

Operating Instructions

FieldPort SWA50

Intelligent WirelessHART adapter for HART measuring instruments



Revision history

| Product version | Operating Instructions | Changes | Comments |
|-----------------|------------------------|--|--|
| 1.00.XX | BA02046S/04/EN/01.20 | – | Initial version |
| 1.00.XX | BA02046S/04/EN/02.21 | Supply voltage Burst | Corrections |
| 1.00.XX | BA02046S/04/EN/03.21 | Alignment Range Note on status signal Notes and references "Diagnostics" section | Amendments and changes |
| 1.01.XX | BA02046S/04/EN/04.24 | Following sections: <ul style="list-style-type: none"> ■ Range ■ Operation options ■ Commissioning ■ Description of SmartBlue app for SWA50 ■ Description of DTM for SWA50 ■ Updating the firmware ■ Diagnostics ■ Menu overview | Additions and changes based on <ul style="list-style-type: none"> ■ New SWA50 firmware incl. MSD ■ Changeover of Field Xpert operation from MSD to DTM |

Table of contents

| | | | | | |
|----------|--|-----------|-----------|--|-----------|
| 1 | About this document | 5 | 5.7 | Post-mounting check | 28 |
| 1.1 | Purpose of this document | 5 | 6 | Electrical connection | 29 |
| 1.2 | Symbols | 5 | 6.1 | Supply voltage | 29 |
| 1.2.1 | Safety symbols | 5 | 6.2 | Cable specification | 29 |
| 1.2.2 | Symbols for certain types of information | 5 | 6.3 | Terminal assignment | 30 |
| 1.2.3 | Symbols in graphics | 6 | 6.4 | Stripping in the case of a cable gland for shielded cable | 30 |
| 1.2.4 | Electrical symbols | 6 | 6.5 | 2-wire HART field device with passive current output | 31 |
| 1.2.5 | SmartBlue app icons | 6 | 6.6 | 4-wire HART field device with passive current output | 31 |
| 1.3 | Terms and abbreviations | 6 | 6.7 | 4-wire HART field device with active current output | 31 |
| 1.4 | Valid versions | 7 | 6.8 | FieldPort SWA50 without HART field device (repeater) | 32 |
| 1.5 | Documentation | 7 | 6.9 | Post-connection check | 33 |
| 1.6 | Registered trademarks | 7 | 7 | Operation options | 34 |
| 2 | Basic safety instructions | 8 | 7.1 | Overview of operation options | 34 |
| 2.1 | Requirements for personnel | 8 | 7.2 | Operation via SmartBlue app | 34 |
| 2.2 | Designated use | 8 | 7.3 | Operation via Field Xpert | 34 |
| 2.3 | Workplace safety | 8 | 7.4 | Operation via FieldCare | 34 |
| 2.4 | Operational safety | 8 | 7.5 | Local operation via Field Xpert or FieldCare .. | 34 |
| 2.5 | Product safety | 8 | 8 | Commissioning | 36 |
| 2.6 | IT security | 9 | 8.1 | Overview of operation options | 36 |
| 2.7 | Device-specific IT security | 9 | 8.2 | Requirements | 36 |
| 2.7.1 | Access via Bluetooth® wireless technology | 9 | 8.2.1 | Requirements of the FieldPort SWA50 | 36 |
| 3 | Product description | 10 | 8.2.2 | Information required for commissioning | 36 |
| 3.1 | Function | 10 | 8.2.3 | Points to check before commissioning | 36 |
| 3.2 | System architecture of FieldPort SWA50 WirelessHART version | 11 | 8.2.4 | Initial password | 37 |
| 4 | Incoming acceptance and product identification | 12 | 8.3 | Putting the FieldPort SWA50 into operation .. | 37 |
| 4.1 | Incoming acceptance | 12 | 8.3.1 | Commissioning via SmartBlue app ... | 37 |
| 4.2 | Product identification | 12 | 8.3.2 | Commissioning via Field Xpert | 40 |
| 4.2.1 | Nameplate | 12 | 8.3.3 | Commissioning via FieldCare | 42 |
| 4.2.2 | Manufacturer's address | 12 | 9 | Operation | 43 |
| 4.3 | Storage and transport | 12 | 9.1 | Hardware locking | 43 |
| 5 | Mounting | 13 | 9.2 | LEDs | 43 |
| 5.1 | Mounting instructions | 13 | 10 | Description of SmartBlue app for SWA50 | 44 |
| 5.2 | Range | 13 | 10.1 | Menu overview (Navigation) | 44 |
| 5.3 | Mounting options | 14 | 10.2 | "Device information" page | 44 |
| 5.3.1 | "Direct mounting" version | 14 | 10.3 | "Diagnostics: WirelessHART" page | 47 |
| 5.3.2 | "Remote mounting" version | 15 | 10.4 | "Diagnostics: FieldPort SWA50" page | 47 |
| 5.4 | Mounting the "direct mounting" version | 15 | 10.5 | "Diagnostics: Field device" page | 48 |
| 5.5 | Mounting the "remote mounting" version | 21 | | | |
| 5.6 | Installing the FieldPort SWA50 with mounting bracket | 25 | | | |
| 5.6.1 | Mounting and alignment options | 25 | | | |
| 5.6.2 | Dimensions | 26 | | | |
| 5.6.3 | Installing the mounting bracket and FieldPort SWA50 | 27 | | | |

| | | | | | |
|-----------|---|-----------|-----------|--|-----------|
| 10.6 | "Application: FieldPort SWA50" page | 50 | 16.2 | Disposal | 86 |
| 10.6.1 | "Measured values" page (FieldPort SWA50) | 50 | 17 | Accessories | 87 |
| 10.6.2 | "HART info" page (FieldPort SWA50) | 50 | 18 | Technical data | 88 |
| 10.7 | "Application: Field device" page | 51 | 19 | Appendix | 89 |
| 10.7.1 | "Measured values" page (Field device) | 51 | 19.1 | Menu overview (SmartBlue app navigation) | 89 |
| 10.7.2 | "HART info" page (Field device) | 51 | 19.1.1 | FieldPort SWA50 with WirelessHART | 89 |
| 10.8 | "System: FieldPort SWA50" page | 52 | | | |
| 10.8.1 | "Device management" page (FieldPort SWA50) | 52 | | | |
| 10.8.2 | "Connectivity" page (FieldPort SWA50) | 52 | | | |
| 10.8.3 | "Burst period configuration" page (FieldPort SWA50) | 54 | | | |
| 10.8.4 | "Geolocation" page (FieldPort SWA50) | 55 | | | |
| 10.8.5 | "Information" page (FieldPort SWA50) | 55 | | | |
| 10.9 | "System: Field device" page | 56 | | | |
| 10.9.1 | "Device management" page (Field device) | 56 | | | |
| 10.9.2 | "Information" page (Field device) | 56 | | | |
| 11 | Description of DTM for SWA50 | 57 | | | |
| 11.1 | Identification | 57 | | | |
| 11.2 | Wireless Communication | 58 | | | |
| 11.3 | Wired Communication | 61 | | | |
| 11.4 | Device Variable Mapping | 62 | | | |
| 11.5 | Burst Mode | 64 | | | |
| 11.6 | Event Notification | 67 | | | |
| 12 | Diagnostics | 73 | | | |
| 12.1 | Calling up diagnostics | 73 | | | |
| 12.2 | Identification | 73 | | | |
| 12.3 | Wireless Communication | 74 | | | |
| 12.4 | Wired Communication | 75 | | | |
| 12.5 | Health Status | 75 | | | |
| 12.5.1 | NAMUR NE 107 | 76 | | | |
| 12.5.2 | ASM | 76 | | | |
| 12.5.3 | HART | 77 | | | |
| 13 | Other DTM functions | 78 | | | |
| 13.1 | Lock / Unlock | 78 | | | |
| 14 | Diagnostics and troubleshooting | 80 | | | |
| 14.1 | Diagnostics | 80 | | | |
| 14.2 | Troubleshooting | 81 | | | |
| 15 | Maintenance | 83 | | | |
| 15.1 | General maintenance | 83 | | | |
| 15.2 | Updating the firmware | 83 | | | |
| 16 | Repair | 86 | | | |
| 16.1 | General notes | 86 | | | |

1 About this document

1.1 Purpose of this document

These Operating Instructions contain all the information that is required in the various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.

1.2 Symbols

1.2.1 Safety symbols

DANGER

This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.

WARNING

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.

CAUTION

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.

NOTICE

This symbol contains information on procedures and other facts which do not result in personal injury.

1.2.2 Symbols for certain types of information

| Symbol | Meaning |
|---|--|
|  | Permitted Procedures, processes or actions that are permitted. |
|  | Preferred Procedures, processes or actions that are preferred. |
|  | Forbidden Procedures, processes or actions that are forbidden. |
|  | Tip Indicates additional information. |
|  | Reference to documentation |
|  | Reference to page |
|  | Reference to graphic |
|  | Notice or individual step to be observed |
|  | Series of steps |
|  | Result of a step |
|  | Help in the event of a problem |
|  | Visual inspection |

1.2.3 Symbols in graphics

| Symbol | Meaning | Symbol | Meaning |
|---|----------------|--|--------------------------------|
| 1, 2, 3,... | Item numbers |  | Series of steps |
| A, B, C, ... | Views | A-A, B-B, C-C, ... | Sections |
|  | Hazardous area |  | Safe area (non-hazardous area) |

1.2.4 Electrical symbols

| Symbol | Meaning |
|---|--|
|  | Direct current |
|  | Alternating current |
|  | Direct current and alternating current |
|  | Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system. |
|  | Potential equalization connection (PE: protective earth) Ground terminals that must be connected to ground prior to establishing any other connections. The ground terminals are located on the interior and exterior of the device: <ul style="list-style-type: none"> ▪ Interior ground terminal: potential equalization is connected to the supply network. ▪ Exterior ground terminal: device is connected to the plant grounding system. |

1.2.5 SmartBlue app icons

| Icon | Meaning |
|---|--------------------------|
|  | SmartBlue |
|  | Accessible field devices |
|  | Home |
|  | Menu |
|  | Settings |

1.3 Terms and abbreviations

| Term | Description |
|----------------------|--|
| DeviceCare | Universal configuration software for Endress+Hauser HART, PROFIBUS, FOUNDATION Fieldbus and Ethernet field devices |
| DTM | Device Type Manager |
| FieldCare | Scalable software tool for device configuration and integrated plant asset management solutions |
| Loop-powered adapter | Loop-powered adapter |

1.4 Valid versions

| Component | Version |
|-----------|----------|
| Software | V1.01.xx |
| Hardware | V1.00.xx |

1.5 Documentation

Current documentation such as Operating Instructions, certificates and approvals for the product are available at www.endress.com on the relevant product page:

1. Select the product using the filters and search field.
2. Open the product page.
3. Select **Downloads**.

Ex documentation

All explosion-protection data are provided in separate Ex documentation. The relevant Ex documentation is delivered with the Ex devices as standard.

 If there is additional documentation for the device version, the documentation code of this supplementary documentation is specified on the nameplate.

1.6 Registered trademarks

HART®

Registered trademark of the FieldComm Group, Austin, Texas, USA

Bluetooth®

The *Bluetooth*® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Endress+Hauser is under license. Other trademarks and trade names are those of their respective owners.

Apple®

Apple, the Apple logo, iPhone, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

Android®

Android, Google Play and the Google Play logo are trademarks of Google Inc.

2 Basic safety instructions

2.1 Requirements for personnel

The personnel for installation, commissioning, diagnostics and maintenance must meet the following requirements:

- ▶ Trained, qualified specialists: must have a relevant qualification for this specific role and task and have been trained by Endress+Hauser. Experts at the Endress+Hauser service organization.
- ▶ Personnel must be authorized by the plant owner/operator.
- ▶ Personnel must be familiar with regional and national regulations.
- ▶ Before starting work: personnel must read and understand the instructions in the manual and supplementary documentation as well as the certificates (depending on the application).
- ▶ Personnel must follow instructions and comply with general policies.

Operating personnel must meet the following requirements:

- ▶ Personnel are instructed and authorized according to the requirements of the task by the facility's owner-operator.
- ▶ Personnel follow the instructions in this manual.

2.2 Designated use

The FieldPort SWA50 is a loop-powered adapter that converts the HART signal of the connected HART field device into a reliable and encrypted WirelessHART signal. The FieldPort SWA50 can be retrofitted to all 2-wire or 4-wire HART field devices.

The Bluetooth signal may not be used to replace the wiring in the case of safety applications with a control function.

Incorrect use

Non-designated use can compromise safety. The manufacturer is not liable for damage caused by improper or non-designated use.

2.3 Workplace safety

When working on and with the device:

- ▶ Wear the required personal protective equipment as per national regulations.

2.4 Operational safety

Risk of injury!

- ▶ Operate the device only if it is in proper technical condition, free from errors and faults.
- ▶ The operator is responsible for interference-free operation of the device.

Modifications to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers:

- ▶ If modifications are nevertheless required, consult with Endress+Hauser.

2.5 Product safety

This device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate.

The device fulfills general safety requirements and legal requirements. It also complies with the EU/EC directives listed in the device-specific EU Declaration of Conformity. Endress+Hauser confirms this by affixing the CE mark to the device.

2.6 IT security

We only provide a warranty if the device is installed and used as described in the Operating Instructions. The device is equipped with security mechanisms to protect it against any inadvertent changes to the device settings.

IT security measures in line with operators' security standards and designed to provide additional protection for the device and device data transfer must be implemented by the operators themselves.



For detailed information, see the Security Manual SD02984S (www.endress.com/SWA50)

2.7 Device-specific IT security

2.7.1 Access via Bluetooth® wireless technology

Signal transmission via Bluetooth® wireless technology uses a cryptographic technique tested by Fraunhofer AISEC.

- Connection via Bluetooth® is not possible without specific Endress+Hauser devices or the *SmartBlue app*.
- Only one point-to-point connection between **one** FieldPort SWA50 device and **one** smartphone or tablet is established.
- The *Bluetooth®* wireless technology interface can be protected incrementally by means of hardware locking. →  43
- The hardware locking cannot be disabled or bypassed using operating tools.

3 Product description

3.1 Function

The FieldPort SWA50 converts the HART signal of the connected HART field device into a reliable and encrypted Bluetooth® or WirelessHart signal. The FieldPort SWA50 can be retrofitted to all 2-wire or 4-wire HART field devices.

The following operating tools are available for the FieldPort SWA50:

- The Endress+Hauser SmartBlue app for mobile devices
- An Endress+Hauser Field Xpert SMTxx tablet PC
- The Endress+Hauser FieldCare SFE500 field device configuration tool

Depending on the operating tool, the following functions are available:

- Configuration of the FieldPort SWA50
- Visualization of the measured values of the connected HART field device
- Visualization of the current status of the FieldPort SWA50 and the connected HART field device
- Configuration of the connected HART field device

HART field devices can be connected to the Netilion Cloud via the FieldPort SWA50 and a FieldEdge device.



Detailed information on Netilion Cloud: <https://netilion.endress.com>

The WirelessHART version of the FieldPort SWA50 can be integrated into a WirelessHART network via the Endress+Hauser FieldGate SWG50 or via any compatible WirelessHART gateway. More information is available from your Endress+Hauser sales organization: www.addresses.endress.com.


NOTICE

Safety applications with control functions via WirelessHART signal

Undesirable behavior of safety application

- ▶ Do not use a wireless signal such as WirelessHART in a safety application with a control function.

3.2 System architecture of FieldPort SWA50 WirelessHART version

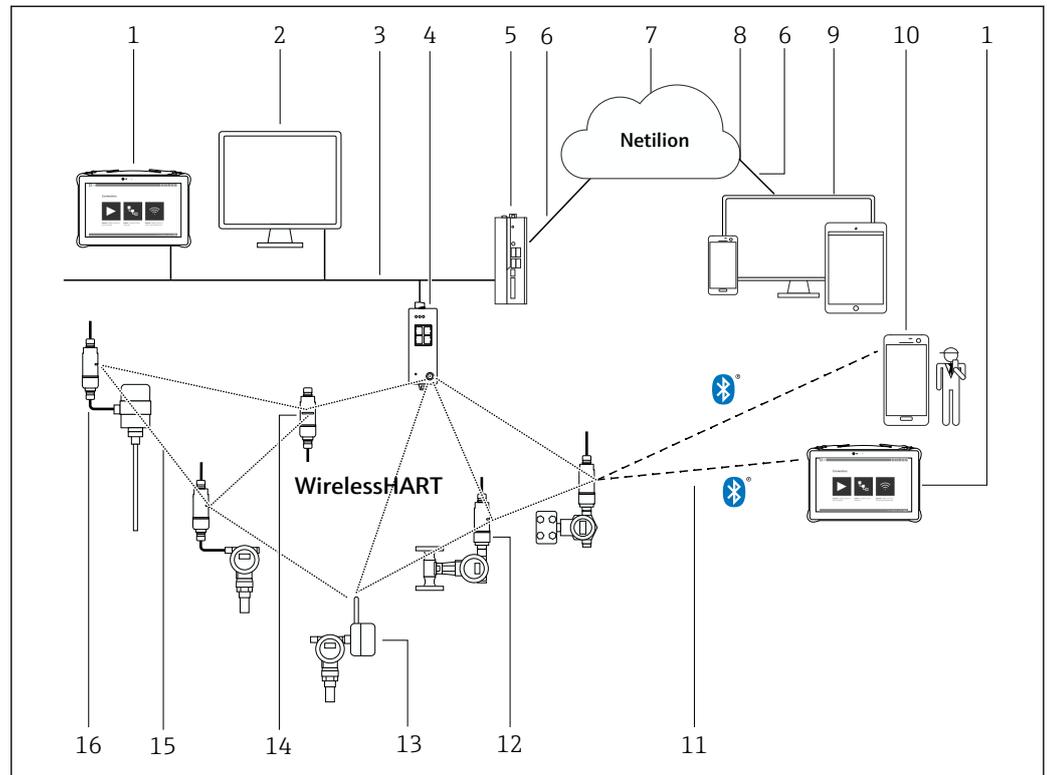

A0043239

1 System architecture of SWA50 WirelessHART version

- 1 Endress+Hauser Field Xpert such as SMTxx
- 2 Host application / FieldCare SFE500
- 3 Ethernet communication
- 4 WirelessHART gateway, e.g. FieldGate SWG50
- 5 FieldEdge SGC500
- 6 https Internet connection
- 7 Netilion cloud
- 8 Application Programming Interface (API)
- 9 Internet browser-based Netilion Service app or user application
- 10 Endress+HauserSmartBlue app
- 11 Encrypted wireless connection via Bluetooth®
- 12 HART field device with FieldPort SWA50, direct mounting
- 13 HART field device with WirelessHART adapter, e.g., SWA70
- 14 FieldPort SWA50 as repeater
- 15 Encrypted wireless connection via WirelessHART
- 16 HART field device with FieldPort SWA50, remote mounting

4 Incoming acceptance and product identification

4.1 Incoming acceptance

- Check the packaging for visible damage arising from transportation
- Open the packaging carefully
- Check the contents for visible damage
- Check that the delivery is complete and nothing is missing
- Retain all the accompanying documents

 The device may not be put into operation if the contents are found to be damaged beforehand. In this case, please contact your Endress+Hauser Sales Center: www.addresses.endress.com

Return the device to Endress+Hauser in the original packaging where possible.

Scope of delivery

- FieldPort SWA50
- Cable glands as per ordered version
- Optional: mounting bracket

Documentation included in delivery

- Brief Operating Instructions
- Depends on the version ordered: Safety Instructions

4.2 Product identification

4.2.1 Nameplate

The nameplate of the device is lasered onto the housing.

Additional information about the device is available as follows:

- Enter the serial number specified on the nameplate into the Device Viewer (www.endress.com → Product tools → Access device specific information → Device Viewer (from the serial number to device information and documentation) → Select option → Enter serial number): All information relating to the device is then displayed.
- Enter the serial number specified on the nameplate into the Endress+Hauser Operations App: All information relating to the device is then displayed.

4.2.2 Manufacturer's address

Endress+Hauser SE+Co. KG

Hauptstraße 1

79689 Maulburg

Germany

www.endress.com

4.3 Storage and transport

- The components are packed in such a way that they are fully protected against shock when in storage and during transportation.
- The permitted storage temperature is -40 to $+85$ °C (-40 to 185 °F).
- Store the components in the original packaging in a dry place.
- Where possible, only transport the components in the original packaging.

5 Mounting

5.1 Mounting instructions

- Pay attention to the alignment and range. → 13
- Observe a distance of at least 6 cm from walls and pipes. Pay attention to the expansion of the Fresnel zone.
- Avoid mounting in close proximity to high-voltage devices.
- For a better connection, mount the FieldPort SWA50 in sight of a WirelessHART network subscriber.
- Pay attention to the effect of vibrations at the mounting location.


i We recommend that you protect the FieldPort SWA50 against precipitation and direct sunlight. In order not to reduce signal quality, do not use a metal cover.

i For detailed information on the vibration resistance, see the Technical Information for the FieldPort SWA50 (TI01468S)

5.2 Range

i The range depends on the alignment of the FieldPort SWA50, the mounting location and the environmental conditions.

Since the antenna of the WirelessHART gateway is aligned vertically as a general rule, the ideal orientation for the FieldPort SWA50 is also vertical. If the antennas are aligned differently, this can greatly reduce the antenna range.

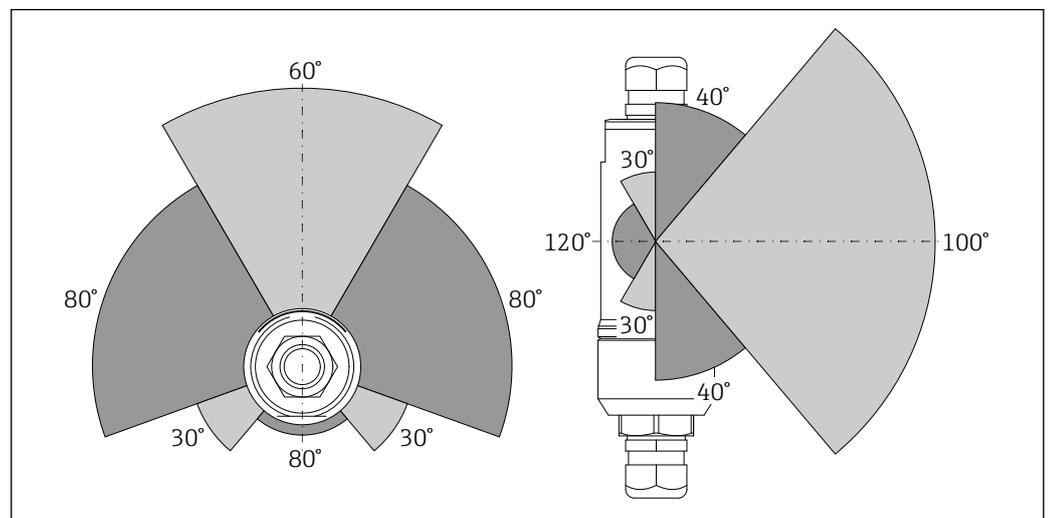

2 Different ranges depending on the position of the transmission window

Bluetooth


Up to 30 m (98 ft) without obstacles when FieldPort SWA50 is optimally aligned

WirelessHART

- Up to 175 m (574 ft) without obstacles, between FieldGate SWG50 with 6 dBi antenna and FieldPort SWA50, optimally aligned
- Up to 75 m (246 ft) without obstacles, between FieldGate SWG50 with 2 dBi antenna and FieldPort SWA50, optimally aligned
- Up to 50 m (146 ft) without obstacles, between WirelessHART adapter SWA70 and FieldPort SWA50, optimally aligned
- Up to 25 m (82 ft) without obstacles, between two FieldPort SWA50 adapters, optimally aligned

5.3 Mounting options

5.3.1 "Direct mounting" version

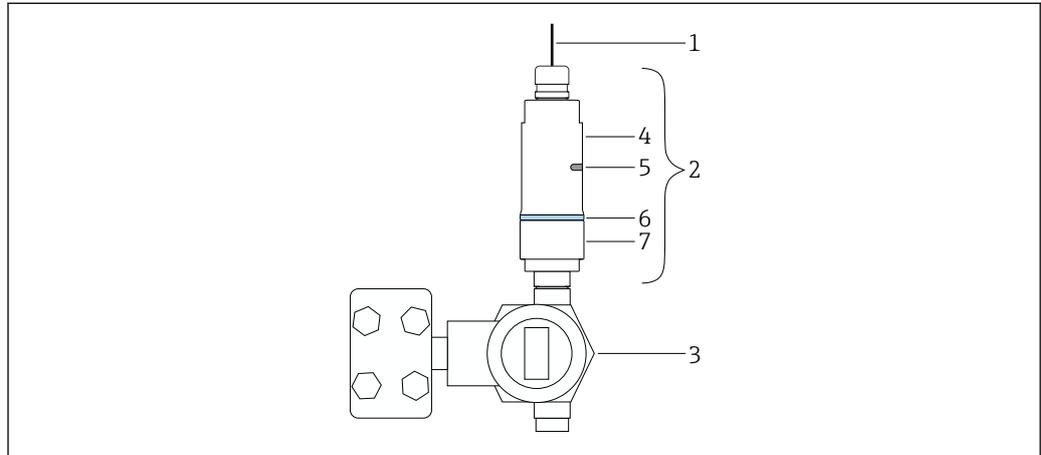


A0049241

 3 Example of direct mounting

- 1 Cable
- 2 FieldPort SWA50 "direct mounting" version
- 3 HART field device
- 4 Bottom housing section
- 5 Transmission window
- 6 Design ring
- 7 Top housing section

 Montage sequence for the "direct mounting" version: →  15

5.3.2 "Remote mounting" version

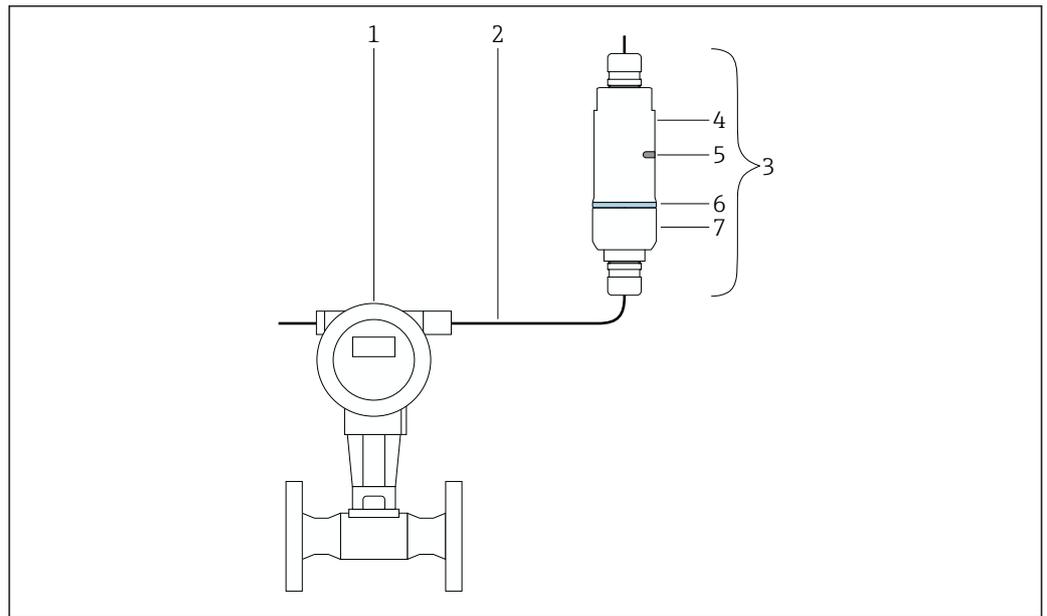

4 Example of remote mounting

- 1 HART field device
- 2 Cable
- 3 FieldPort SWA50 "remote mounting" version
- 4 Housing base
- 5 Transmission window
- 6 Design ring
- 7 Top housing section

i For remote mounting, we recommend the optional mounting bracket → 25. Alternatively, you can secure the remote version using pipe clips.

i Mounting sequence for the "remote mounting" version: → 21

5.4 Mounting the "direct mounting" version

NOTICE

Damaged seals.

IP degree of protection is no longer guaranteed.

- ▶ Do not damage seals.

NOTICE

Supply voltage is present during installation.

Possible damage to the device.





- ▶ Switch off supply voltage prior to installation.
- ▶ Make sure the device is de-energized.
- ▶ Secure it against being switched back on.

i Electrical connection: → 29


Tools required

- Wrench AF24
- Wrench AF36

Mounting the FieldPort SWA50

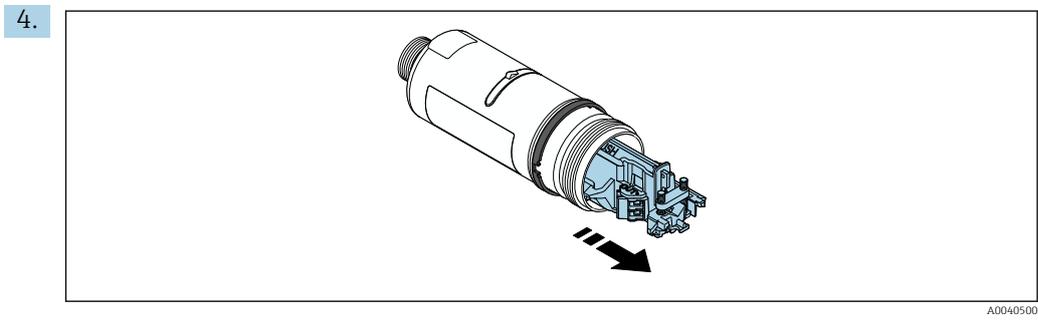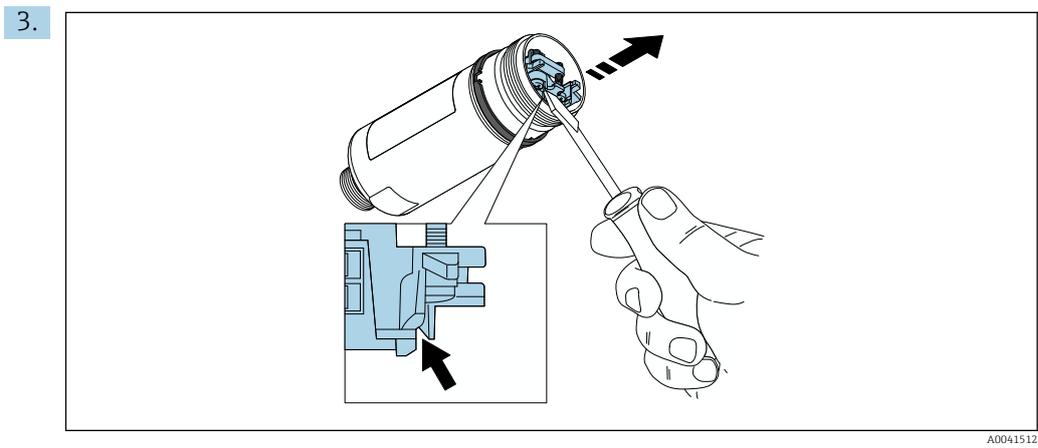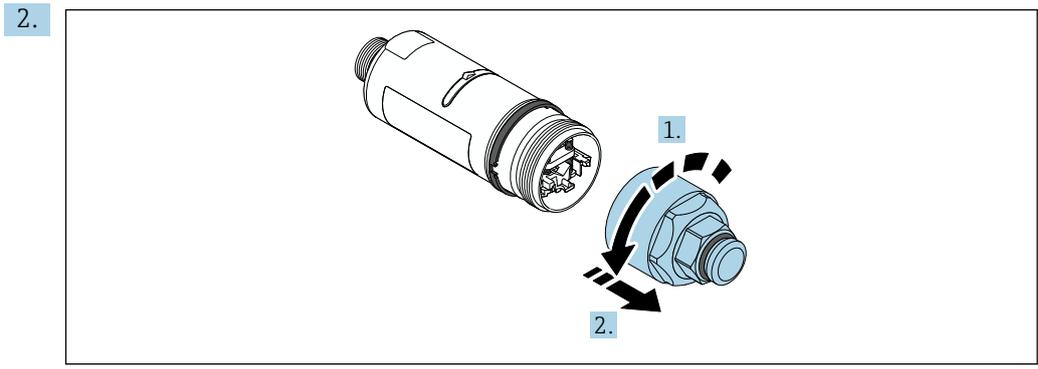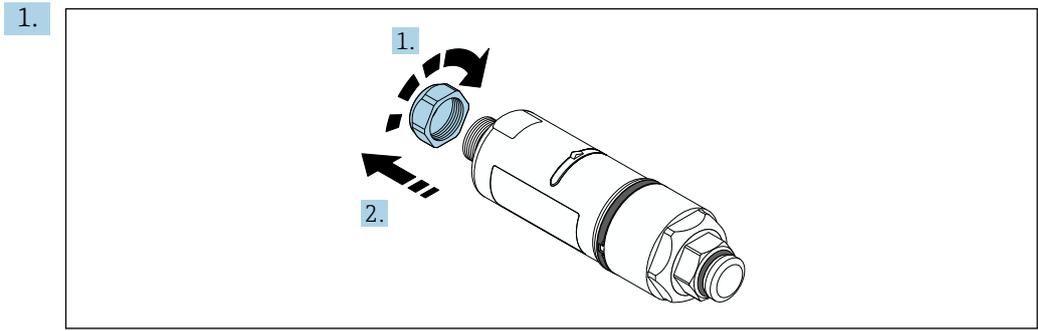


5.

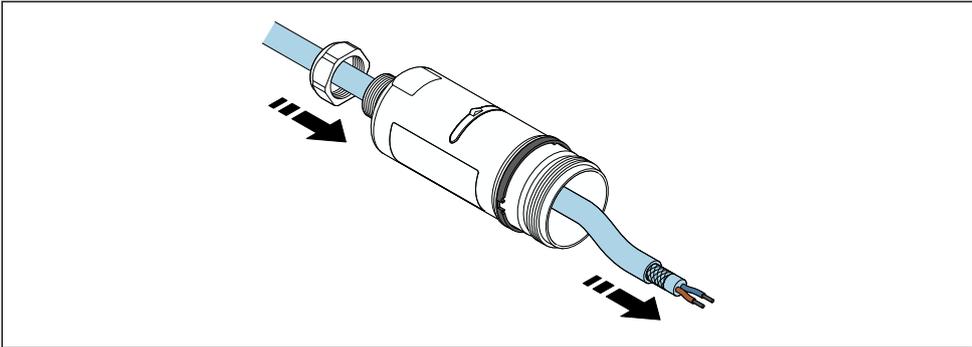


A0040502

6.

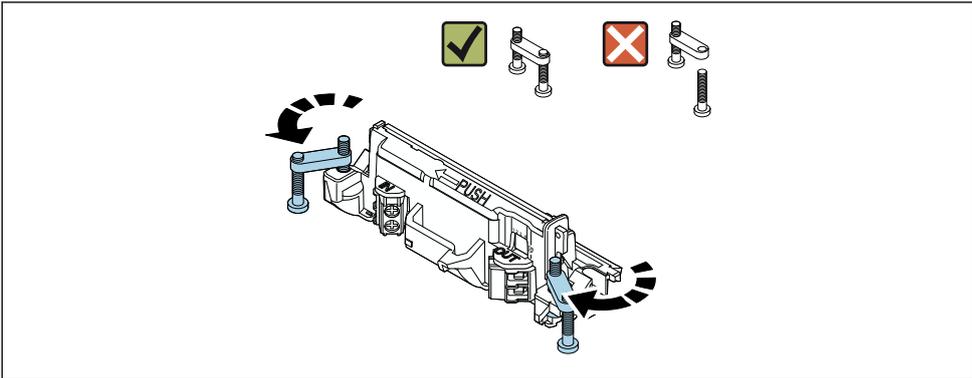


A0040501

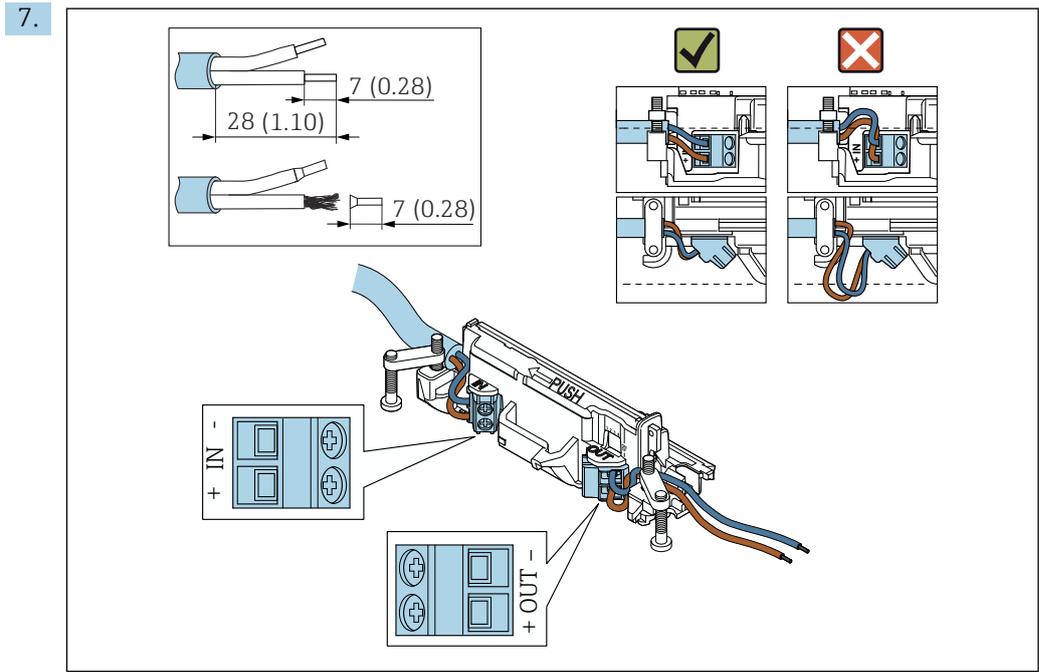


Ensure that the cores are of sufficient length to be connected in the field device. Do not shorten the cores to the required length until you are connecting them in the field device.

- i** If you use a cable gland for a shielded cable, pay attention to the information on stripping the wire → 30.
- i**
 - Electrical connection for 2-wire HART field devices with passive current output: → 31
 - Electrical connection for 4-wire HART field devices with passive current output: → 31
 - Electrical connection for 4-wire HART field devices with active current output: → 31
 - Electrical connection for FieldPort SWA50 without HART field device: → 32

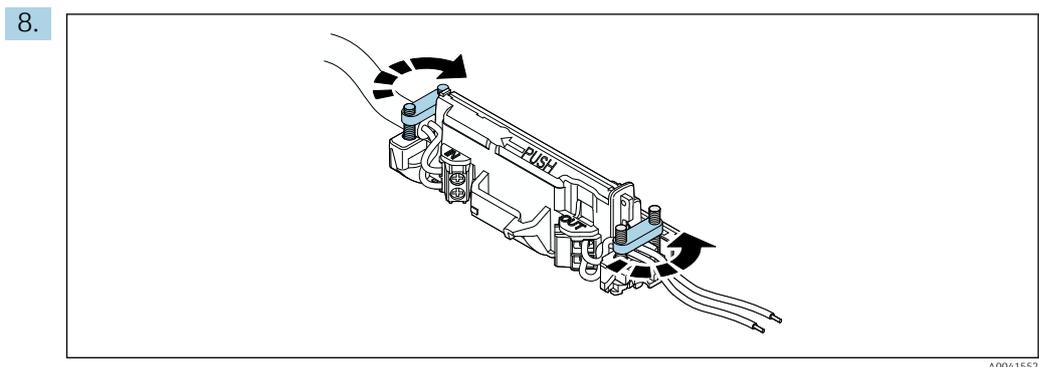


Tighten screws for strain relief. Torque: 0.4 Nm ± 0.04 Nm

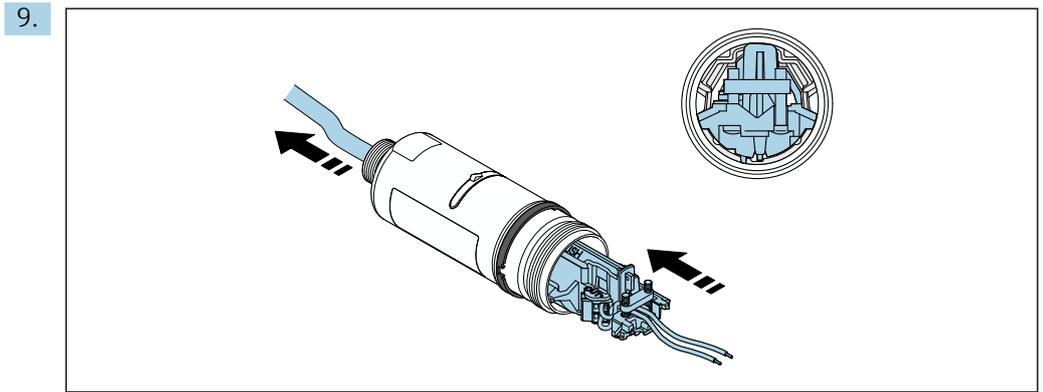


A0041553

Slide the electronic insert into the guide inside the housing.

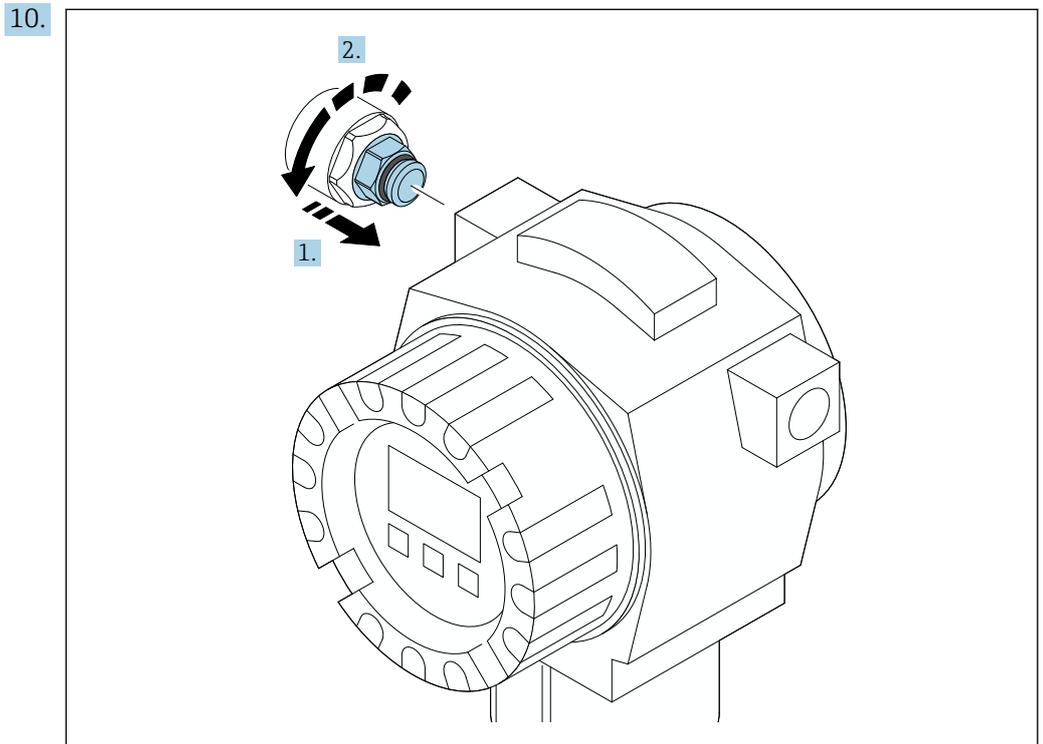


A0040506

For information regarding torque, see the field device documentation.

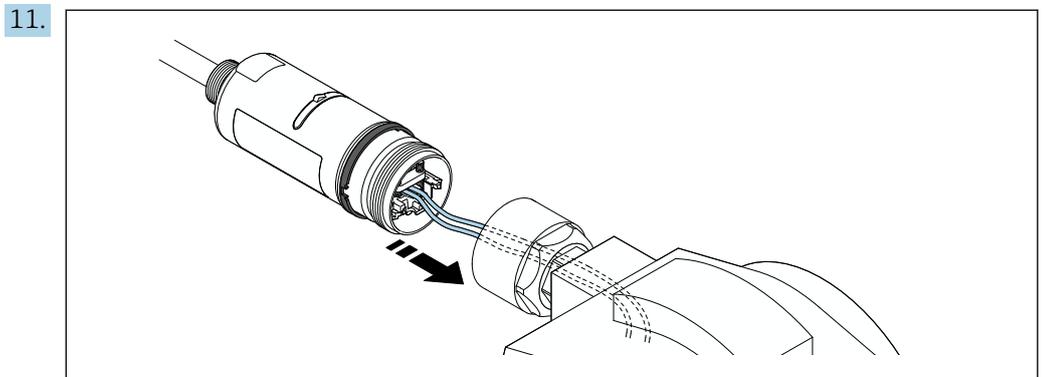


A0041554

Ensure that the cores are of sufficient length to be connected in the field device. Shorten the cores in the field device to the required length.

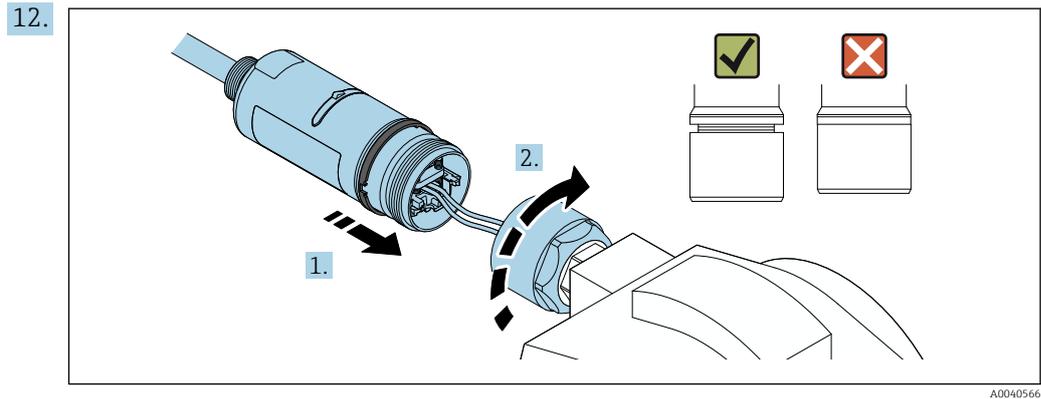


Do not tighten the top housing section yet, so that you are still able to rotate the bottom housing section.

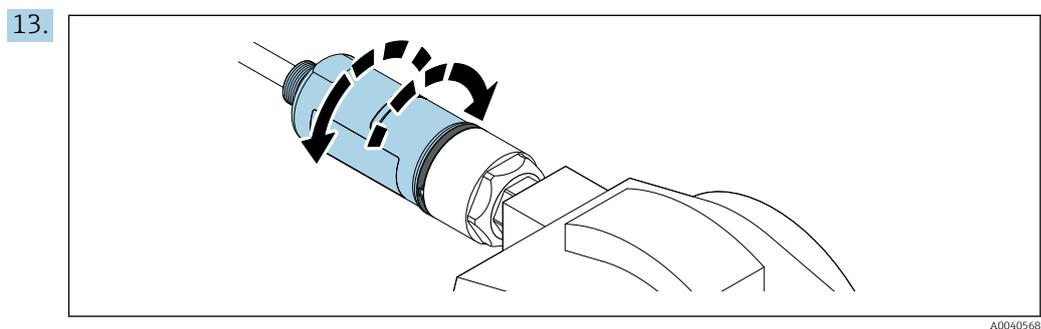


Align the bottom housing section with the transmission window according to the network architecture →  13.

 To avoid wire breaks, rotate the bottom housing section by a maximum of $\pm 180^\circ$.

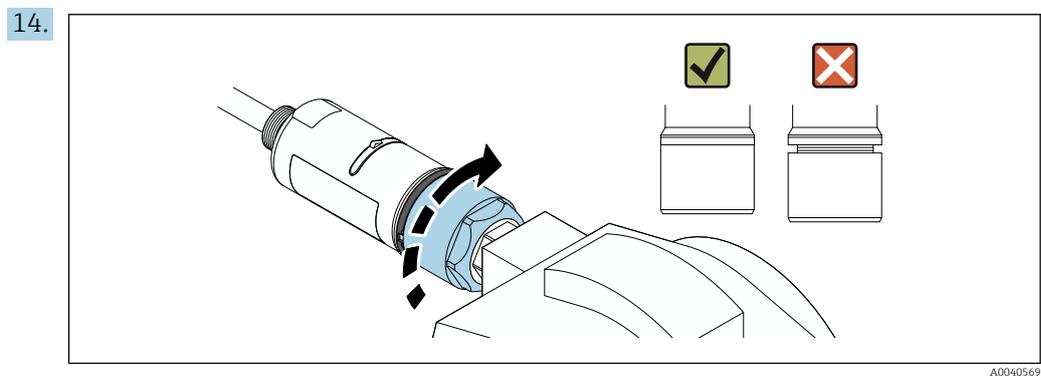

Tighten the top housing section so that the blue design ring can still be rotated afterwards. Torque: $5 \text{ Nm} \pm 0.05 \text{ Nm}$

15.

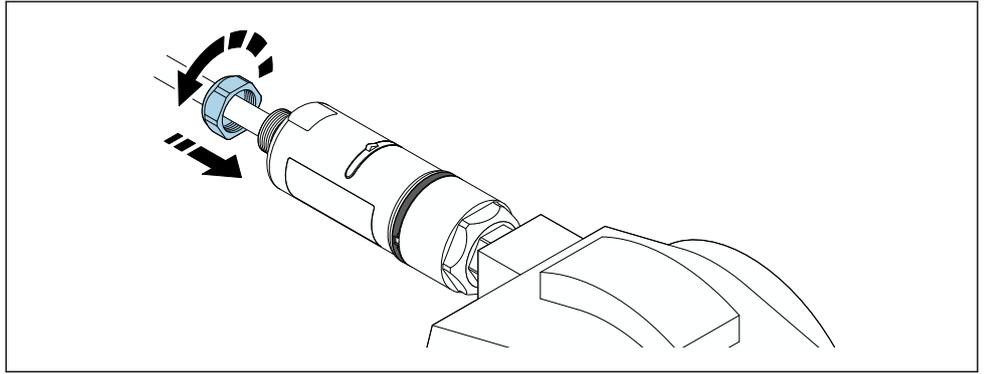

A0040567

16. Perform commissioning →  36.

5.5 Mounting the "remote mounting" version

NOTICE

Damaged seal.

IP degree of protection is no longer guaranteed.

- ▶ Do not damage seal.

NOTICE

Supply voltage is present during installation.

Possible damage to the device.

- ▶ Switch off supply voltage prior to installation.
- ▶ Make sure the device is de-energized.
- ▶ Secure it against being switched back on.

 For remote mounting, we recommend the optional mounting bracket. Alternatively, you can secure the remote version using pipe clips.


 Electrical connection: →  29

Tools required




- Wrench AF27
- Wrench AF36

Mounting the FieldPort SWA50


1.



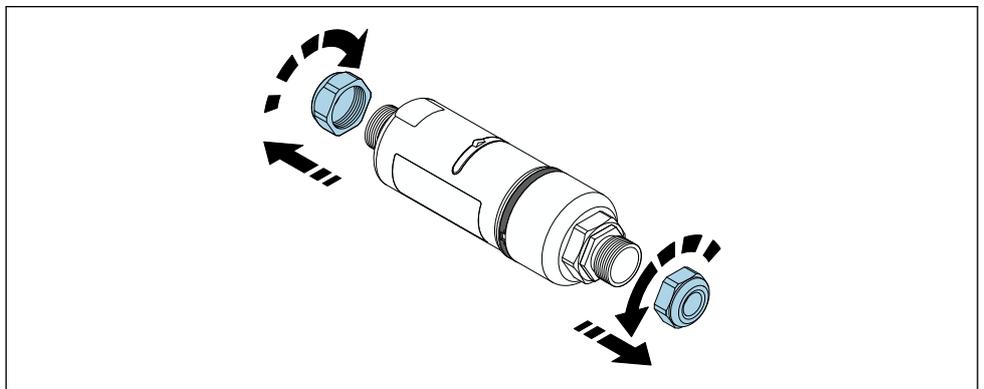


A0040498

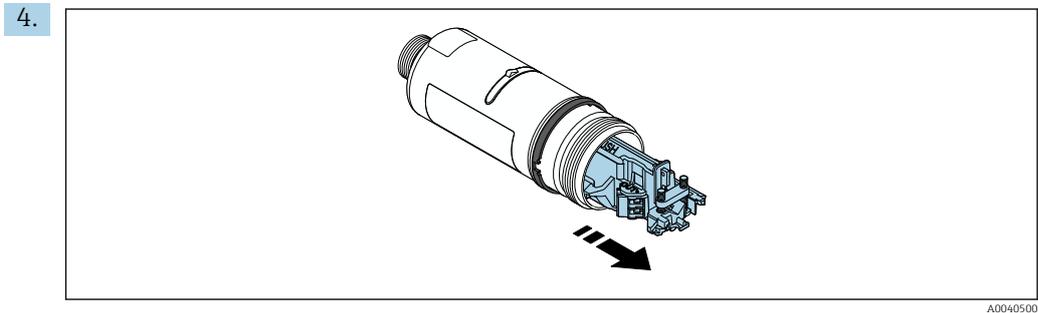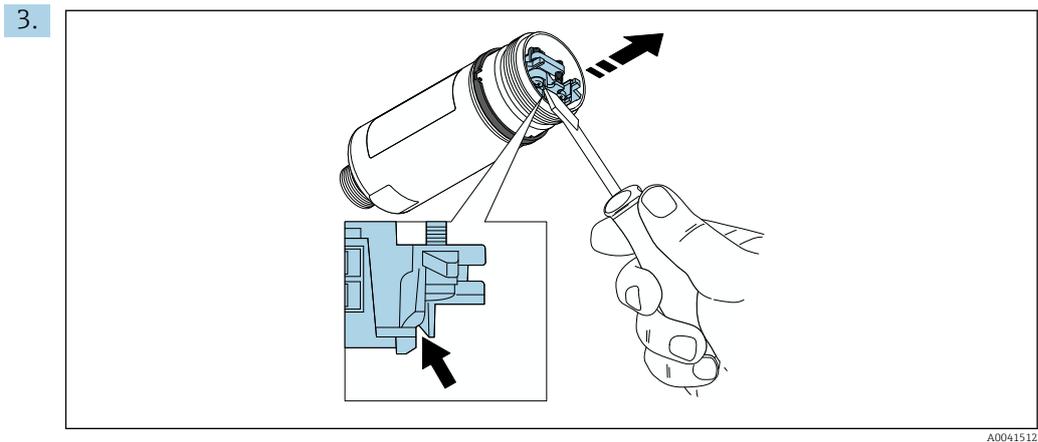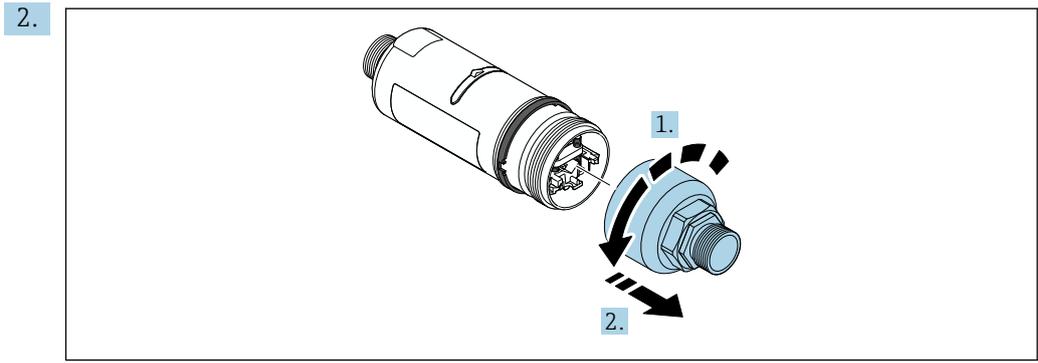


5. If you are mounting the FieldPort SWA50 using the optional mounting bracket, follow the instructions in the "Mounting the mounting bracket and FieldPort SWA50" section → [☰ 27](#).

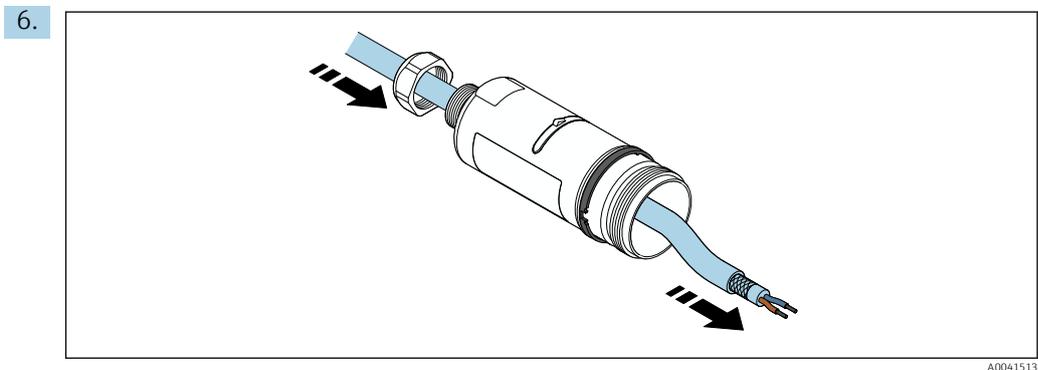

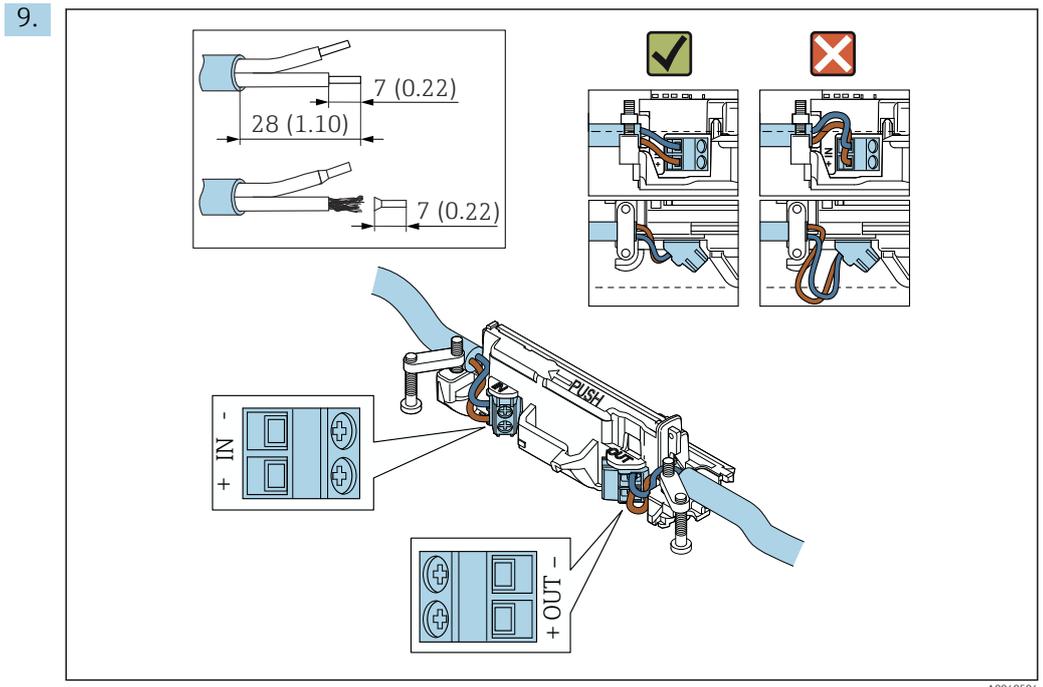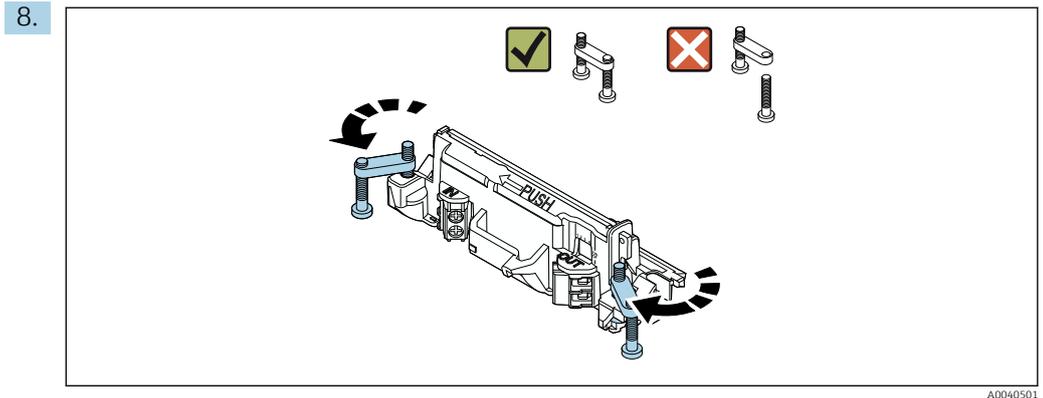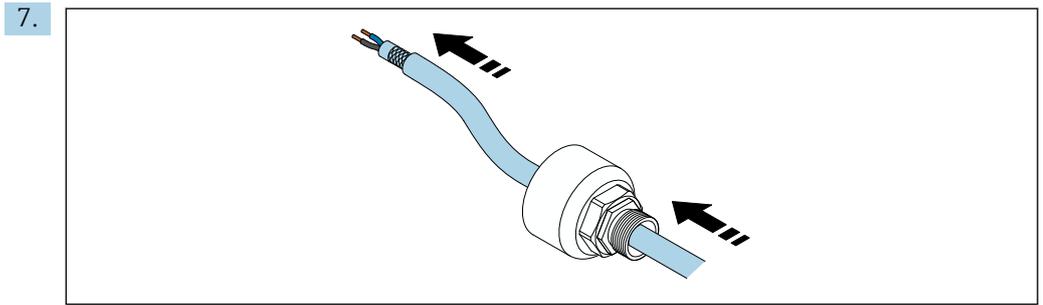

- i** If you use a cable gland for a shielded cable, pay attention to the information on stripping the wire → 30.
- i**
 - Electrical connection for 2-wire HART field devices with passive current output: → 31
 - Electrical connection for 4-wire HART field devices with passive current output: → 31
 - Electrical connection for 4-wire HART field devices with active current output: → 31
 - Electrical connection for FieldPort SWA50 without HART field device: → 32


10.

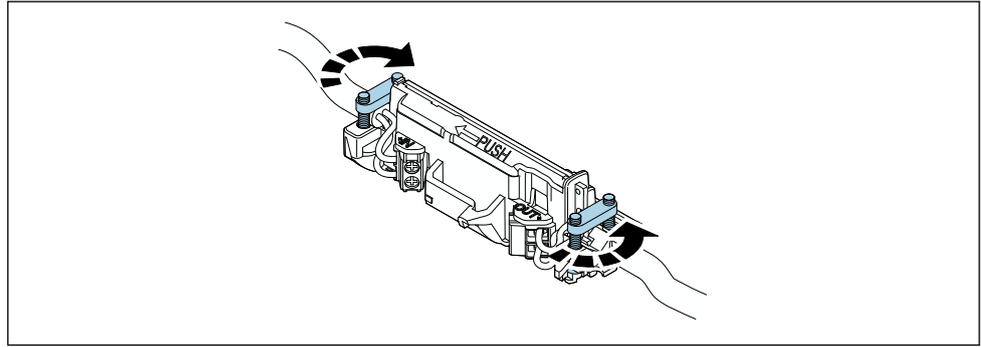

A0040507

Tighten screws for strain relief. Torque: $0.4 \text{ Nm} \pm 0.04 \text{ Nm}$


11.

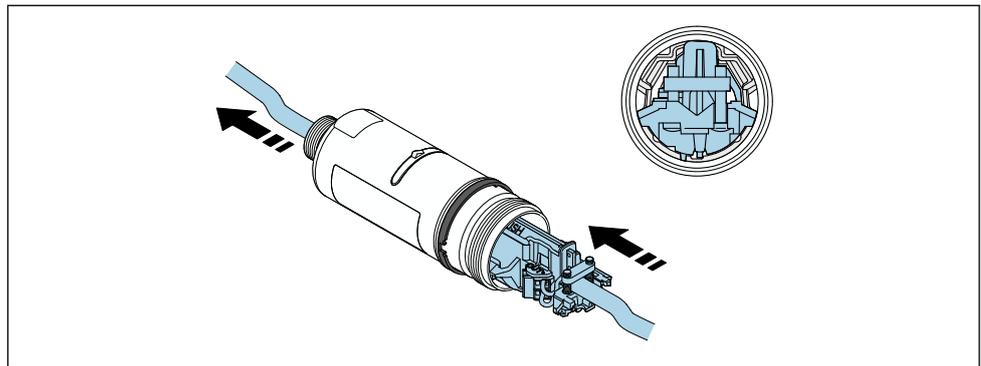

A0040508

Slide the electronic insert into the guide inside the housing.


12.

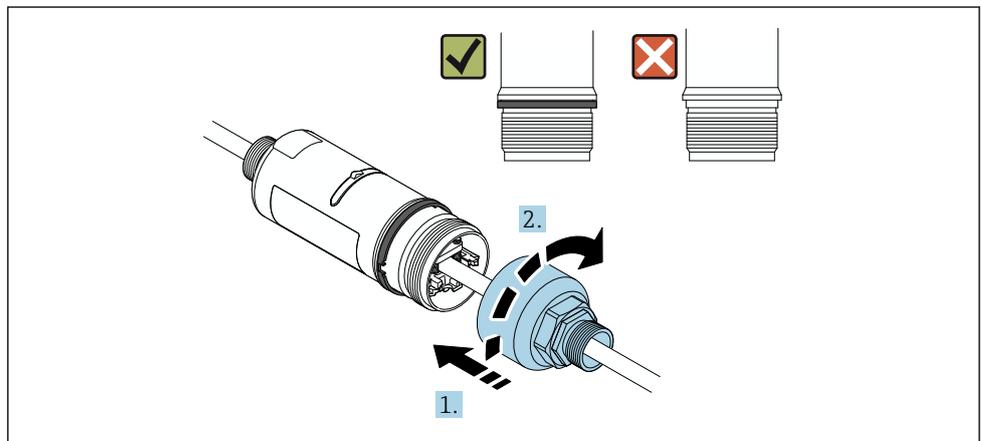

A0040509

Tighten the top housing section so that the blue design ring can still be rotated afterwards. Torque: $5 \text{ Nm} \pm 0.05 \text{ Nm}$

13.

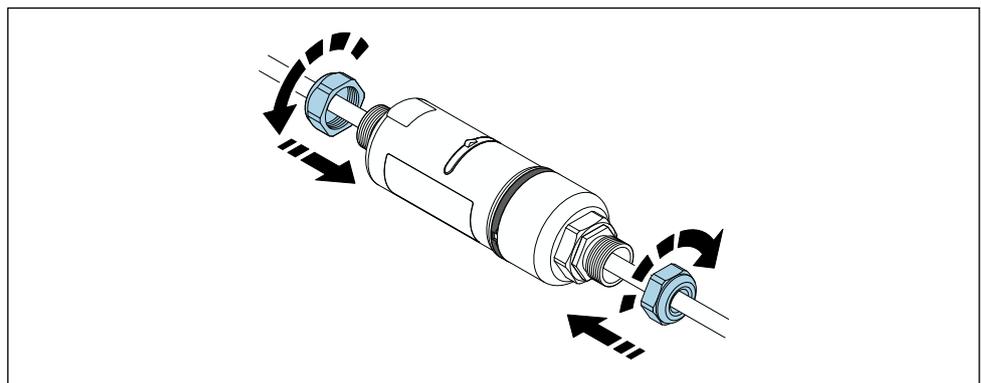

A0040510

14. Perform commissioning → 36.

5.6 Installing the FieldPort SWA50 with mounting bracket

5.6.1 Mounting and alignment options


The mounting bracket can be mounted as follows:

- On pipes with a maximum diameter of 65 mm
- On walls

The FieldPort can be aligned as follows using the support bracket:

- Via the various mounting positions on the mounting bracket
- By rotating the support bracket

 Pay attention to the alignment and range → 13.

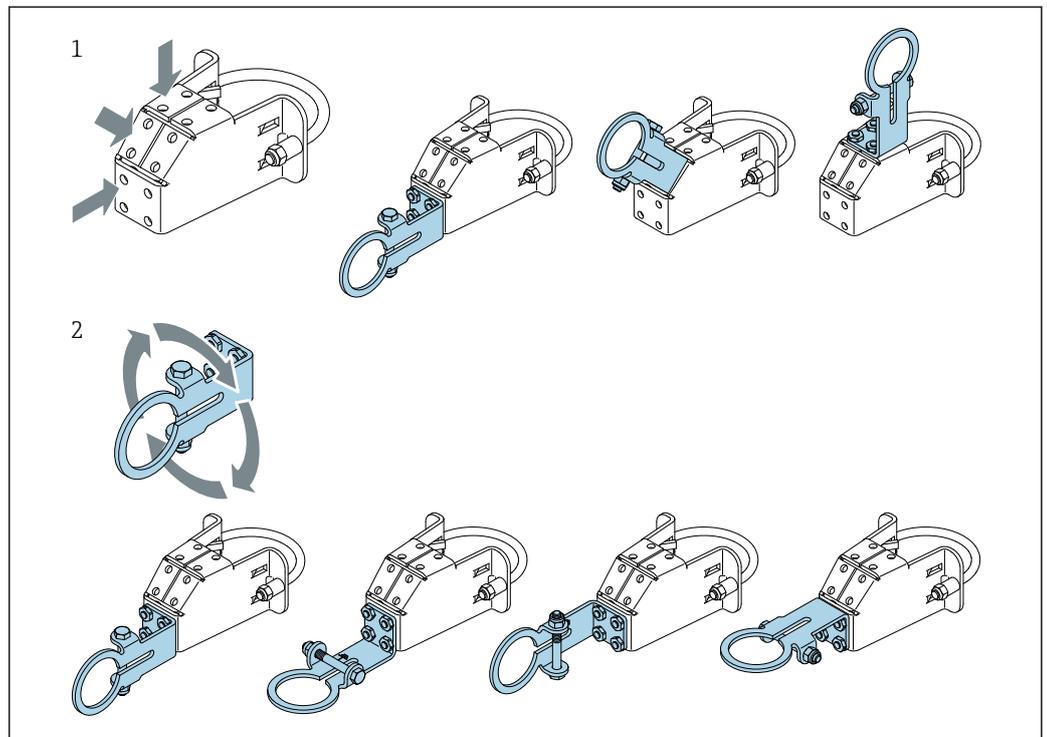


 5 Alignment options via support bracket

- 1 Various mounting positions on support bracket
- 2 By rotating the support bracket


A0043411

5.6.2 Dimensions

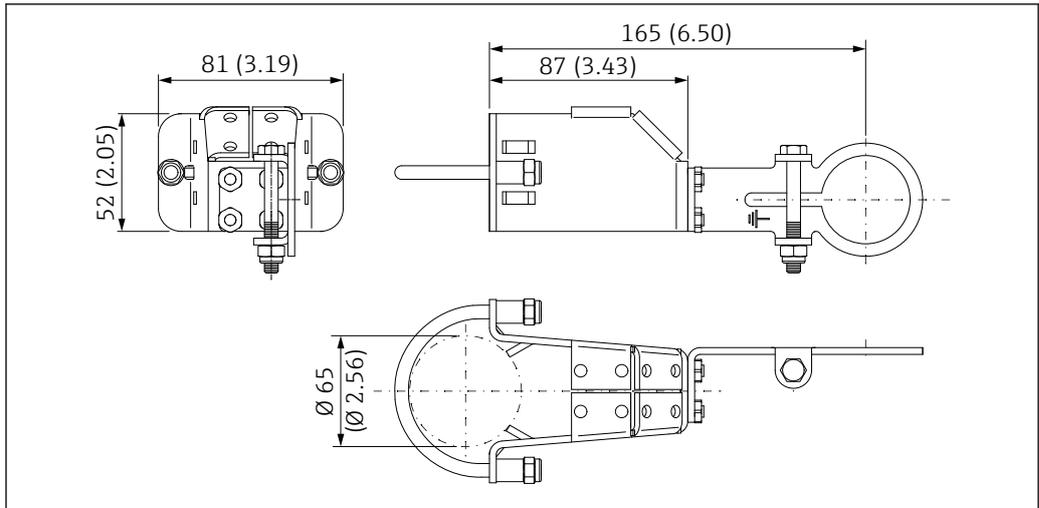

A0043313


6 Dimensions of mounting bracket – pipe mounting

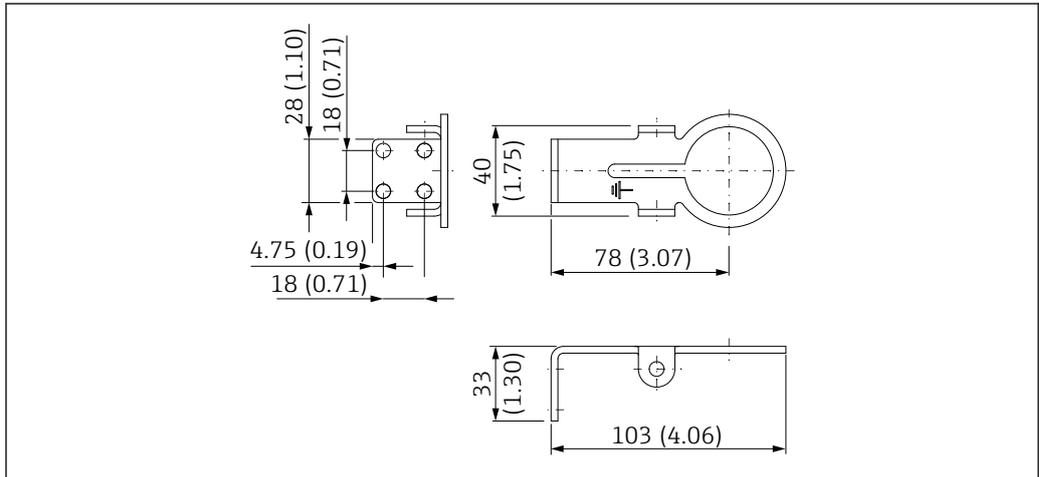

A0043410

7 Dimensions of retaining bracket – wall mounting

5.6.3 Installing the mounting bracket and FieldPort SWA50

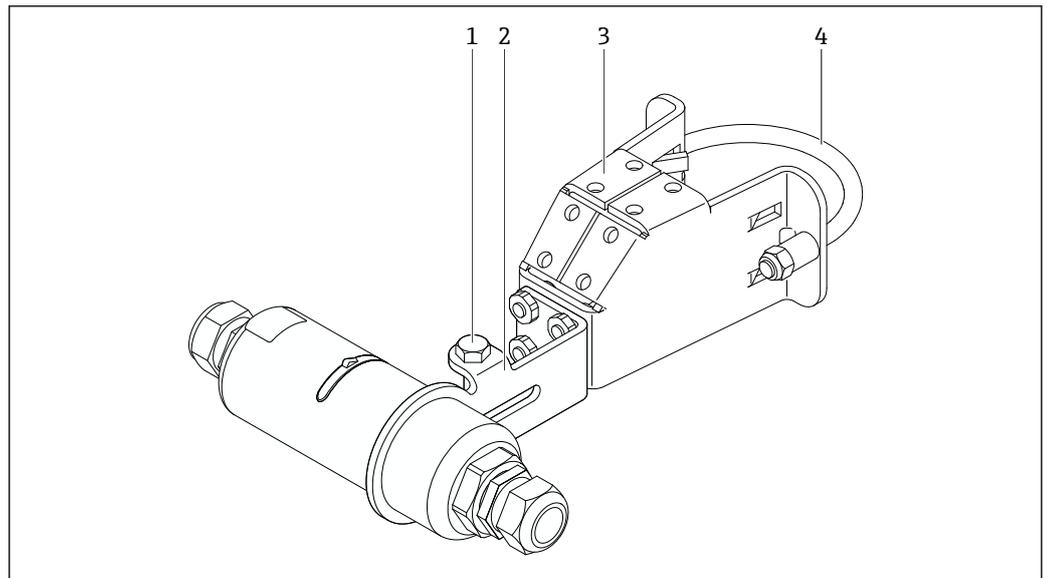

A0043312

 8 FieldPort SWA50 mounted via optional mounting bracket

- 1 Hexagonal-headed bolt for securing and grounding
- 2 Support bracket
- 3 Mounting bracket
- 4 Round bracket

 If you are mounting the FieldPort SWA50 using the mounting bracket, you must remove the design ring between the top housing section and the bottom housing section.

Tools required

- Wrench AF10
- Allen key size 4

Installing the mounting bracket on a pipe

- ▶ Secure the mounting bracket to the pipe at the desired location. Torque: minimum 5 Nm

 If you change the position of the support bracket on the mounting bracket, tighten the four hexagonal-headed bolts with a torque of 4 Nm to 5 Nm.

Installing the mounting bracket on a wall

- ▶ Secure the support bracket to the wall at the desired location. The screws must be suitable for the wall.

Mounting the FieldPort SWA50

 Pay attention to the "Mounting the "remote mounting" version" section →  21.

1. Unscrew the cable glands of the FieldPort SWA50.
2. Unscrew the top housing section.
3. Remove the electronic insert from the housing.
4. Remove the design ring from the bottom housing section.
5. Slide the bottom housing section into the eyelet of the support bracket.

6. Carry out electrical connection for the FieldPort SWA50.
7. Slide the electronic insert into the bottom housing section.
8. Loosely screw on the top housing section.
9. Align the bottom housing section with the transmission window of the FieldPort SWA50 according to the network architecture. The transmission window is located under the black plastic seal.
10. Tighten the top housing section. Torque: 5 Nm \pm 0.05 Nm
11. Connect the protective ground to the hexagonal-headed bolt.
12. Tighten the hexagonal-headed bolt so that the FieldPort SWA50 is secured in the mounting bracket.

5.7 Post-mounting check

| | |
|--|--------------------------|
| Is the device undamaged (visual inspection)? | <input type="checkbox"/> |
| Does the device comply with the required specifications? For example: <ul style="list-style-type: none"> ▪ Ambient temperature ▪ Humidity ▪ Explosion protection | <input type="checkbox"/> |
| Are the screws that provide strain relief for the electronic insert tightened with the correct torque? | <input type="checkbox"/> |
| Is the top housing section tightened with the correct torque? | <input type="checkbox"/> |
| Are all securing screws, such as those for the optional mounting bracket, firmly tightened? | <input type="checkbox"/> |
| Are the measuring point identification and labeling correct (visual inspection)? | <input type="checkbox"/> |
| Is the device aligned correctly with regard to the antenna range? →  13 | <input type="checkbox"/> |

6 Electrical connection

NOTICE

Short-circuit at OUT+ and OUT- terminals

Damage to device

- ▶ Depending on the application, connect either the field device, PLC, transmitter or resistor to the OUT+ and OUT- terminals.
- ▶ Never short-circuit the OUT+ and OUT- terminals.

6.1 Supply voltage

- Loop-powered 4 to 20 mA
- 24 V DC (min. 4 V DC, max. 30 V DC): min. 3.6 mA loop current required for start-up
- The supply voltage or the power unit must be tested to ensure it meets safety requirements and the requirements for SELV, PELV or Class 2

Voltage drop

- If internal HART communication resistor is deactivated
 - 3.2 V in operation
 - < 3.8 V at start-up
- If internal HART communication resistor is activated (270 Ohm)
 - < 4.2 V at 3.6 mA loop current
 - < 9.3 V at 22.5 mA loop current

 To select the supply voltage, pay attention to the voltage drop via the FieldPort SWA50. The remaining voltage must be high enough to enable the start-up and operation of the HART field device.

6.2 Cable specification

Use cables that are suitable for the anticipated minimum and maximum temperatures.


Observe grounding concept of the plant.

2 x 0.25 mm² to 2 x 1.5 mm²

You can use unshielded cable with or without ferrules and shielded cable with or without ferrules.

 If you select the "direct mounting" version and the "4-wire HART field device with active current output and PLC or transmitter" electrical connection version, you can use core cross-sections of 0.75 mm² at maximum. If larger core cross-sections are required, we recommend remote mounting.

6.3 Terminal assignment

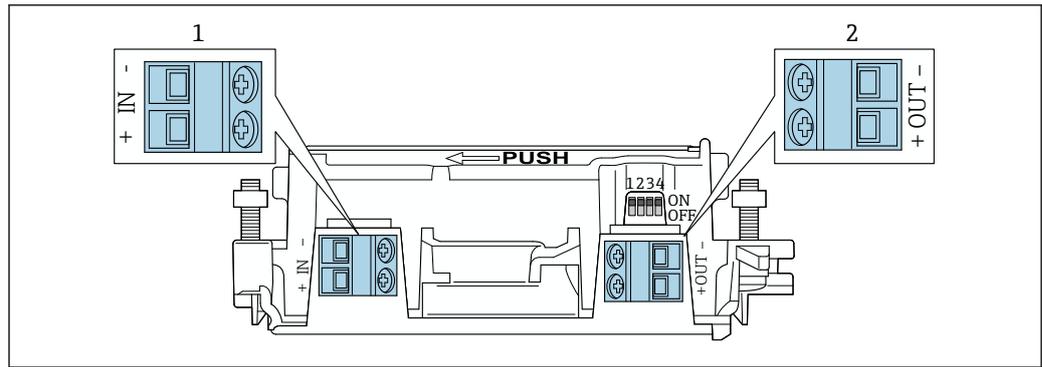

9 FieldPort SWA50 terminal assignment

- 1 Input terminal IN
- 2 Output terminal OUT

| Application | Input terminal IN | Output terminal OUT |
|--|---|--|
| 2-wire HART field device → 11, 31 | Cable from supply voltage, PLC with active current output or transmitter with active current output | Cable to 2-wire HART field device |
| 4-wire HART field device with passive current output → 12, 31 | Cable from supply voltage, PLC with active current output or transmitter with active current output | Cable to 4-wire HART field device |
| 4-wire HART field device with active current output → 31 | Cable from 4-wire field device with active 4 to 20 mA HART output | PLC or transmitter with passive current output (optional), alternatively wire bridge between terminals OUT+ and OUT- |
| FieldPort SWA50 without field device → 15, 33 | Cable from supply voltage for FieldPort SWA50 | Resistor between terminals OUT+ and OUT- |


6.4 Stripping in the case of a cable gland for shielded cable

If you are using shielded cables and wish to connect the cable shield to the FieldPort SWA50, you must use cable glands for shielded cable.

If you have ordered the "Brass M20 for shielded cable" option for the cable glands, you will receive the following cable glands:

- "Direct mounting" version: 1 cable gland for shielded cable
- "Remote mounting" version: 2 cable glands for shielded cable

When mounting a cable gland for shielded cable, we recommend the following dimensions for stripping. The dimensions for input terminal IN and output terminal OUT are different.

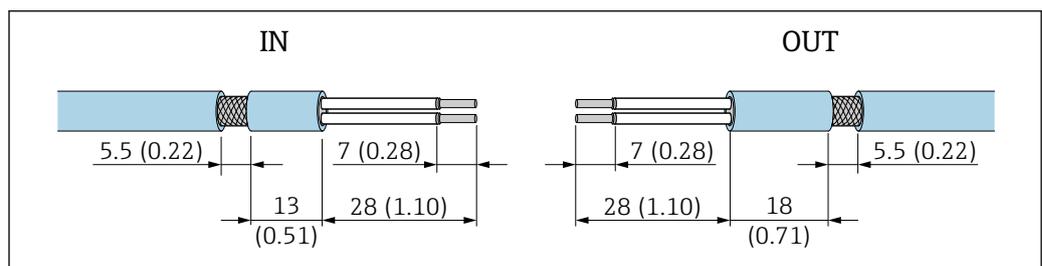


10 Recommended dimensions for stripping in the case of cable glands for shielded cable for input terminal IN and output terminal OUT

- Sealing area (jacket): ϕ 4 to 6.5 mm (0.16 to 0.25 in)
- Shielding: ϕ 2.5 to 6 mm (0.1 to 0.23 in)

6.5 2-wire HART field device with passive current output

i Some grounding concepts require shielded cables. If connecting the cable shield to the FieldPort SWA50, you must use a cable gland for shielded cable. See ordering information.

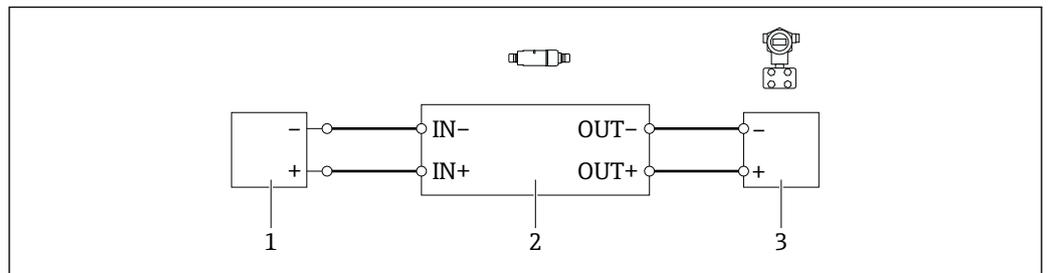


11 Electrical connection for 2-wire HART field devices with passive current output (optional grounding not shown)

- 1 Supply voltage (SELV, PELV or Class 2) or PLC with active current input or transmitter with active current input
- 2 Electronic insert SWA50
- 3 2-wire field device 4 to 20 mA-HART

6.6 4-wire HART field device with passive current output

i Some grounding concepts require shielded cables. If connecting the cable shield to the FieldPort SWA50, you must use a cable gland for shielded cable. See ordering information.

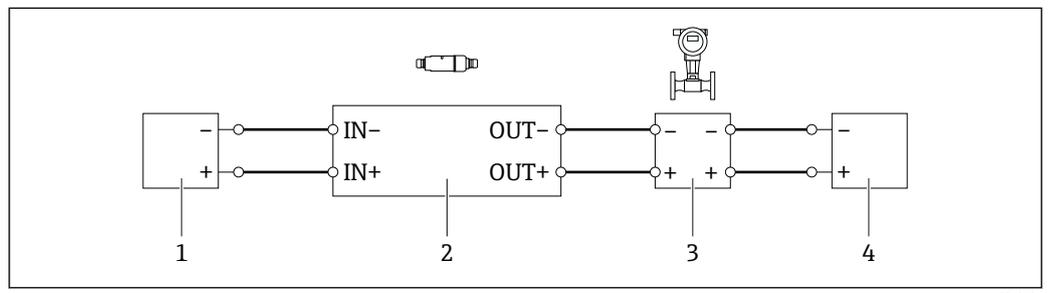


12 Electrical connection for 4-wire HART field devices with passive current output (optional grounding not shown)

- 1 Supply voltage (SELV, PELV or Class 2) or PLC with active current input or transmitter with active current input
- 2 Electronic insert SWA50
- 3 4-wire field device with passive 4 to 20 mA-HART output
- 4 Supply voltage for 4-wire field device

6.7 4-wire HART field device with active current output


i Some grounding concepts require shielded cables. If connecting the cable shield to the FieldPort SWA50, you must use a cable gland for shielded cable. See ordering information.

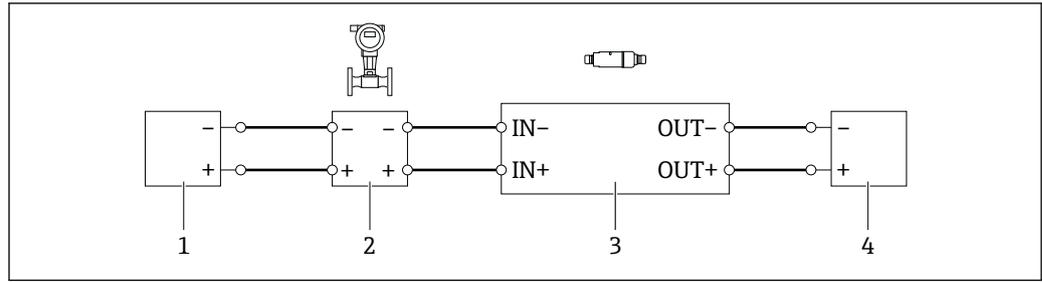

A0040492

13 Electrical connection for 4-wire HART field devices with active current output (optional grounding not shown) – PLC or transmitter at OUT terminals

- 1 Supply voltage (SELV, PELV or Class 2) for 4-wire HART field device
- 2 4-wire field device with active 4 to 20 mA HART output
- 3 Electronic insert SWA50
- 4 PLC or transmitter with passive current input

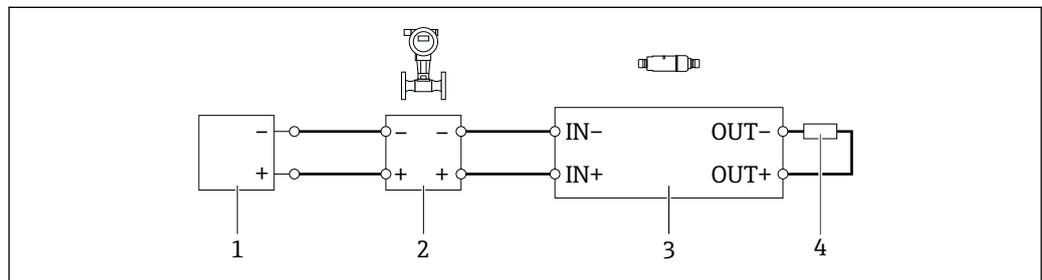

A0045101


14 Electrical connection for 4-wire HART field devices with active current output (optional grounding not shown) – resistor at OUT terminals

- 1 Supply voltage (SELV, PELV or Class 2) for 4-wire HART field device
- 2 4-wire field device with active 4 to 20 mA HART output
- 3 Electronic insert SWA50
- 4 Resistance 250 to 500 Ohm min. 250 mW between terminals OUT+ and OUT-

i If you select the "direct mounting" version and the "4-wire HART field device with active current output and PLC or transmitter" electrical connection version, you can use core cross-sections of 0.75 mm² maximum. The wires that you insert into the shorter top housing section must be connected to the IN terminals opposite, and the wires that you insert into the longer bottom housing section must be connected to the OUT terminals opposite. If larger core cross-sections are required, we recommend remote mounting.

6.8 FieldPort SWA50 without HART field device (repeater)

i Using this connection version, you can preconfigure the FieldPort SWA50 or use it as a repeater.

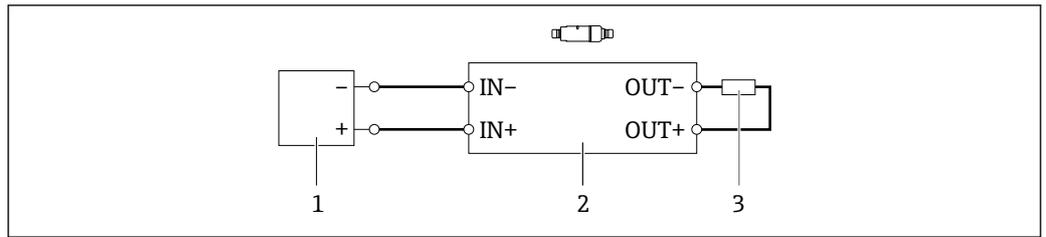

A0040493

15 FieldPort SWA50 without HART field device (optional grounding not shown)

- 1 Supply voltage FieldPort SWA50, 20 to 30 VDC (SELV, PELV or Class 2)
- 2 Electronic insert SWA50
- 3 Resistance 1.5 kOhm and min. 0.5 W between terminals OUT+ and OUT-

6.9 Post-connection check

| | |
|---|--------------------------|
| Are the device and cable undamaged (visual check)? | <input type="checkbox"/> |
| Do the cables comply with the requirements? | <input type="checkbox"/> |
| Is the terminal assignment correct? | <input type="checkbox"/> |
| Have the cables been connected in such a way that no wires, insulation and / or cable shields are jammed? | <input type="checkbox"/> |
| Is the supply voltage correct? | <input type="checkbox"/> |
| Is the FieldPort SWA50 grounded, if necessary? | <input type="checkbox"/> |

7 Operation options

7.1 Overview of operation options

You have the following operation options for the FieldPort SWA50:

- The Endress+Hauser SmartBlue app for mobile devices
- An Endress+Hauser Field Xpert SMTxx tablet PC
- The Endress+Hauser FieldCare SFE500 field device configuration tool

7.2 Operation via SmartBlue app

The SmartBlue app for mobile devices is available in the Google Play Store and in the Apple App Store.

An encrypted point-to-point connection is established between the FieldPort SWA50 and the mobile device. It is only possible to connect the FieldPort SWA50 and the connected HART field device via Bluetooth using the SmartBlue app. Configuration of the connected HART field device is not possible via the SmartBlue app.

7.3 Operation via Field Xpert

You have the following operation options with a Field Xpert SMTxx:

- Configuration via an encrypted point-to-point connection using Bluetooth
- Remote configuration via WirelessHART using a WirelessHART gateway, the DTM for the WirelessHART gateway and the DTM for the FieldPort SWA50
- Local configuration using a modem and the DTM for the FieldPort SWA50

If a DTM is available for the HART field device, it is also possible to configure it via the Field Xpert SMT. In the case of a Bluetooth connection, the HART commands are tunneled via the Bluetooth channel.

7.4 Operation via FieldCare


You have the following operation options with FieldCare SFE500:

- Remote configuration via WirelessHART using a WirelessHART gateway, the DTM for the WirelessHART gateway and the DTM for the FieldPort SWA50
- Local configuration using a modem and the DTM for the FieldPort SWA50

If a DTM is available for the HART field device, it is also possible to configure it via FieldCare.

7.5 Local operation via Field Xpert or FieldCare

Local operation via Field Xpert or FieldCare takes place via a modem such as Commubox FXA195.

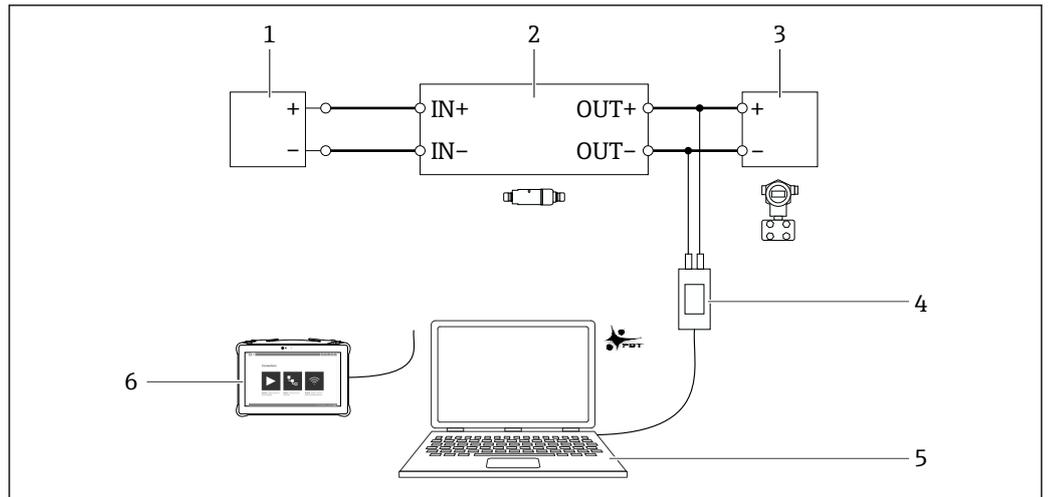

A0055103

16 Connection example of the modem for local operation via Field Xpert SMTxx or FieldCare SFE500

- 1 Supply voltage or PLC with active current input or transmitter with active current input
- 2 Electronic insert SWA50 (internal communication resistor enabled)
- 3 2-wire field device 4 to 20 mA HART
- 4 Endress+Hauser Commubox FXA195 USB/HART modem
- 5 PC with FieldCare SFE500
- 6 Field Xpert SMT tablet PC

8 Commissioning

8.1 Overview of operation options

You have the following options for commissioning the FieldPort SWA50:

- The Endress+Hauser SmartBlue app for mobile devices and →  37
- An Endress+Hauser Field Xpert SMTxx tablet PC →  40
- The Endress+Hauser FieldCare SFE500 field device configuration tool →  42

 Observe the requirements for commissioning: →  36

8.2 Requirements

8.2.1 Requirements of the FieldPort SWA50

- The FieldPort SWA50 is electrically connected.
- Post-mounting check has been carried out →  28.
- Post-connection check has been carried out →  33.
- DIP switch 1 for Bluetooth communication must be set to ON →  43.
(Factory setting for DIP switch 1: ON)

8.2.2 Information required for commissioning

You will need the following information for commissioning:

- HART device address of HART field device
- Device tag of HART field device in Bluetooth network
 - Long tag for HART-6 and HART-7 field devices
 - (Short) tag for HART-5 field devices
- Device tag of HART field device in WirelessHART network
 - Long tag for HART-6 and HART-7 field devices
 - HART message for HART-5 field devices

 Each device tag in the WirelessHART network must be unique.

8.2.3 Points to check before commissioning

HART master

In addition to the FieldPort SWA50, only one other HART master is permitted in the HART loop. This other HART master and the FieldPort SWA50 may not be of the same master type. You can configure the master type either via the "HART master type" parameter or "Master Type".

HART communication resistor

For HART communication, you require either the internal HART communication resistor of the FieldPort SWA50 or a HART communication resistor outside the FieldPort SWA50 in the 4 to 20 mA loop.

Requirements for "internal HART communication resistor":

The "Internal" option is set for the "Communication resistor" parameter.

Requirements for "HART communication resistor outside the FieldPort SWA50":

- The HART communication resistor of ≥ 250 Ohm is outside the FieldPort SWA50 in the 4 to 20 mA loop.
- The HART communication resistor must be wired in series between the "IN+" terminal of the FieldPort SWA50 and the supply voltage, such as the PLC or active barrier.
- The "External" option is set for the "Communication resistor" parameter.

8.2.4 Initial password

The initial password can be found on the nameplate.

8.3 Putting the FieldPort SWA50 into operation

8.3.1 Commissioning via SmartBlue app

Install the SmartBlue app

The SmartBlue app is available for download from the Google Play Store for mobile devices with Android and from the Apple App Store for devices with iOS.



Scan the QR code.

↳ The Google Play or App Store page is opened to download the SmartBlue app.

System requirements



Please see either the Google Play or App Store page for the system requirements of the SmartBlue app.

Starting the SmartBlue app and logging in

1. Switch on the supply voltage for the FieldPort SWA50.


2. Start the SmartBlue app on the smartphone or tablet.
 - ↳ An overview of accessible devices is displayed.



17 Reachable devices (live list)

- 1 Example of FieldPort SWA50 with Endress+Hauser HART field device, already connected to SmartBlue app
- 2 Example of FieldPort SWA50 with HART field device of another manufacturer, already connected to SmartBlue app
- 3 Example of FieldPort SWA50, not yet connected to SmartBlue app
- 4 Example of FieldPort SWA50 without HART field device, already connected to SmartBlue app

3. Select device from list.
 - ↳ The "Login to device" page is displayed.

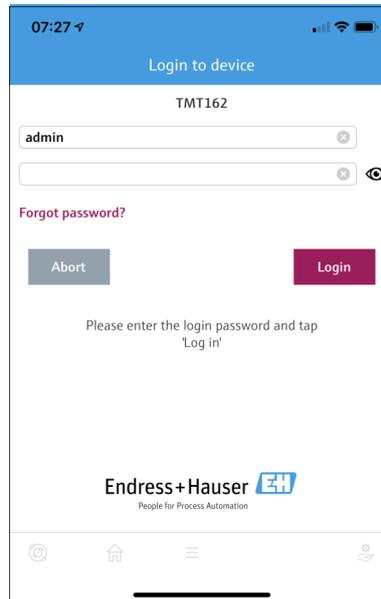

18 Login

- i** You can establish only **one** point-to-point connection between **one** FieldPort SWA50 and **one** smartphone or tablet.
- ▶ Log in. Enter **admin** as the user name and enter the initial password. The password can be found on the nameplate.
 - ↳ Once the connection has been established successfully, the "Device information" page is displayed for the selected device. → 44
- i** Change the password after logging in for the first time.

Checking and adjusting the HART configuration

Perform the following steps to ensure good communication between the FieldPort SWA50 and the connected HART field device.

- i**
 - The parameters listed in this section can be found on the "HART Configuration" page.
 - Navigation: Root menu > System > FieldPort SWA50 > Connectivity > HART configuration
1. Use the "HART address field device" parameter to check the HART address of the HART field device and configure the address if necessary. The same HART address must be used for the HART field device in the HART field device and in the FieldPort SWA50. If the FieldPort SWA50 is to be used as a repeater, enter an address greater than 63 in the "HART address field device" parameter.
 2. Use the "Communication resistor" parameter to check the setting for the HART communication resistor. If there is no HART communication resistor outside the FieldPort SWA50 in the 4 to 20 mA loop, you must enable the internal HART communication resistor.
 3. Use the "HART master type" parameter to check the setting for an additional HART master in the HART loop. In addition to the FieldPort SWA50, only one other HART master is permitted in the HART loop. This other HART master and the FieldPort SWA50 may not be of the same master type.

WirelessHART configuration

Perform the following steps to ensure good communication between the FieldPort SWA50 and the WirelessHART network.

- i
 - The parameters listed in this section can be found on the "WirelessHART Configuration" page.
 - Navigation: Root menu > System > FieldPort SWA50 > Connectivity > WirelessHART configuration
 - You can only edit the parameters if the "Do not attempt to join" option has been selected for the "Join mode" parameter.
1. Enter the ID number for the network via the "Network ID" parameter.
 2. Enter the network password via the "Join key" parameter.
 3. Connect to the network via the "Join mode" parameter. It can take up to 30 minutes to connect to the WirelessHART network.

Burst mode


Burst modes are configured at the factory for the FieldPort SWA50. Use the "Burst period configuration" page to configure the time periods for the burst modes or enable and disable individual burst modes.

8.3.2 Commissioning via Field Xpert

- 📖
 - For detailed information on operation with the Field Xpert SMT50, see BA02053S
 - For detailed information on operation with the Field Xpert SMT70, see BA01709S
 - For detailed information on operation with the Field Xpert SMT77, see BA01923S


Starting the Field Xpert and logging in

1. Switch on the supply voltage for the FieldPort SWA50.
2. Start the Field Xpert tablet PC. To do so, double-click Field Xpert on the start screen.
 - ↳ The following view is displayed:

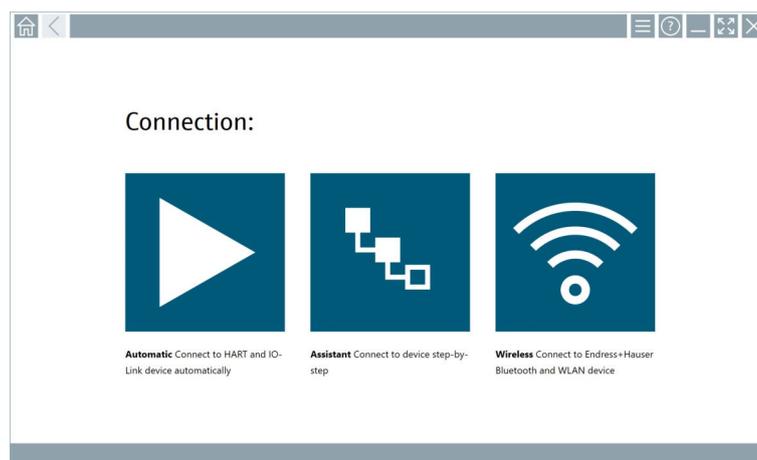

3. Tap the 📶 icon.
 - ↳ A list of all available WIFI and Bluetooth devices appears.


4. Check whether the  icon is enabled. If the icon is not enabled, tap the  icon.
 - ↳ A list of all available Bluetooth devices appears.

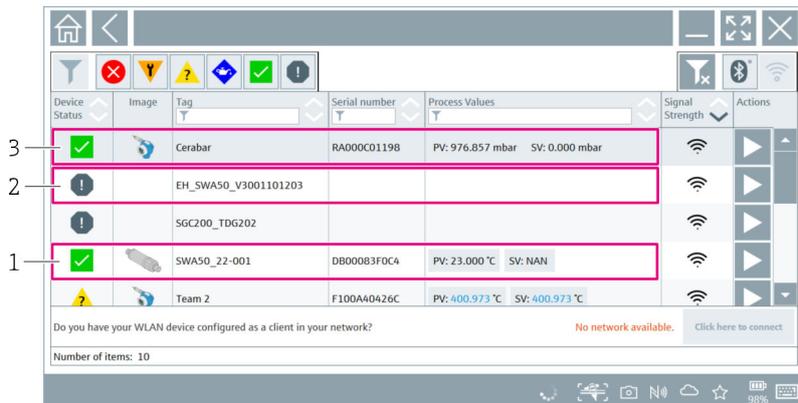


 19 Reachable devices (live list)

- 1 Example of FieldPort SWA50 without HART field device, already connected to Field Xpert
- 2 Example of FieldPort SWA50, not yet connected to Field Xpert
- 3 Example of FieldPort SWA50 with Endress+Hauser HART field device, already connected to Field Xpert

5. Tap the  icon next to the device that is to be configured.
 - ↳ The Login dialog box appears.

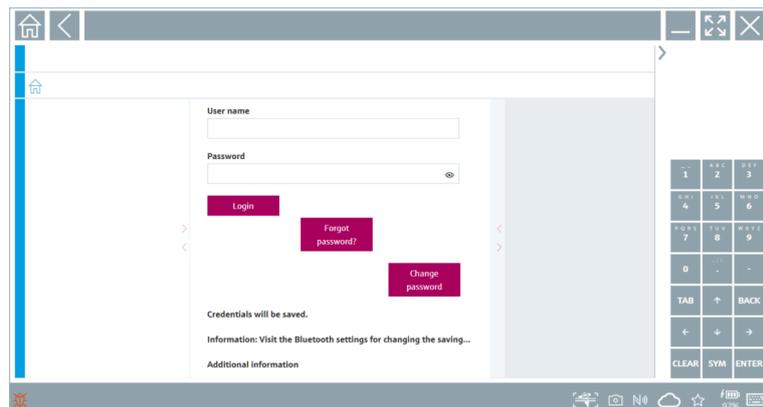

6. Log in. Enter **admin** as the user name and enter the initial password. The initial password can be found on the nameplate.
 - ↳ The "Online Parameterization" page of the SWA50 DTM is displayed.

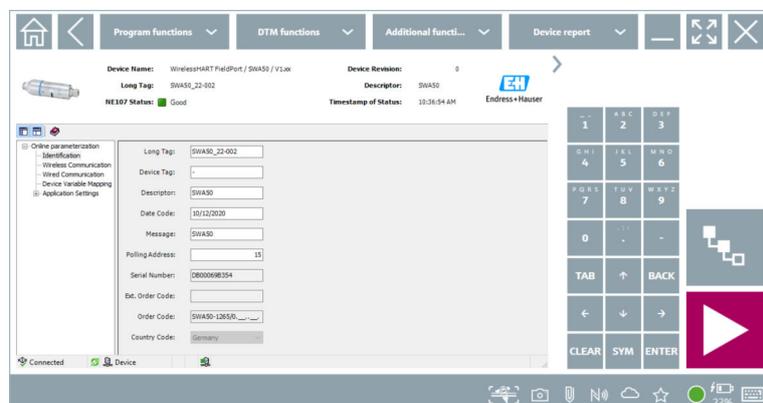

Use the  icon to open the DTM of the connected HART field device.

-  Change the password after logging in for the first time.

Checking and adjusting the HART configuration

Perform the following steps to ensure good communication between the FieldPort SWA50 and the connected HART field device.

-  The parameters listed in this section can be found on the "Wired Communication" page.
 - Navigation: Online Parametrization > Wired Communication
- 1. Use the "HART address field device" parameter to check the HART address of the HART field device and configure the address if necessary. The same HART address must be used for the HART field device in the HART field device and in the FieldPort SWA50.
- 2. Use the "Communication Resistor" parameter to check the setting for the HART communication resistor. If there is no HART communication resistor outside the FieldPort SWA50 in the 4 to 20 mA loop, you must enable the internal HART communication resistor.
- 3. Use the "Master Type" parameter to check the setting for an additional HART master in the HART loop. In addition to the FieldPort SWA50, only one other HART master is permitted in the HART loop. This other HART master and the FieldPort SWA50 may not be of the same master type.

WirelessHART configuration

Perform the following steps to ensure good communication between the FieldPort SWA50 and the WirelessHART network.

-  The parameters listed in this section can be found on the "Wireless Communication" page.
 - Navigation: Online Parametrization > Wireless Communication
- 1. Enter the ID number for the network via the "Network Identification" parameter.
- 2. Enter the network password via the "Join Key Part x of 4" parameter.
- 3. Connect to the network via the "Join Mode" parameter. It can take up to 30 minutes to connect to the WirelessHART network.

Burst Mode

Burst modes are configured at the factory for the FieldPort SWA50. You can configure the burst modes via the "Burst Mode" page.

8.3.3 Commissioning via FieldCare


1. Enable the "Prefer FDT1.2.1 scanning" option in FieldCare. Path: FieldCare > Extras > Options > "Scanning" tab > "section Scan Result"
2. Integrate the FieldPort SWA50 into a FieldCare project in accordance with the Operating Instructions for FieldCare.
3. Configure the FieldPort SWA50 →  57.

 For detailed information on operation with FieldCare, see BA00065S

9 Operation

9.1 Hardware locking

The DIP switches for hardware-locking are located on the electronic insert.

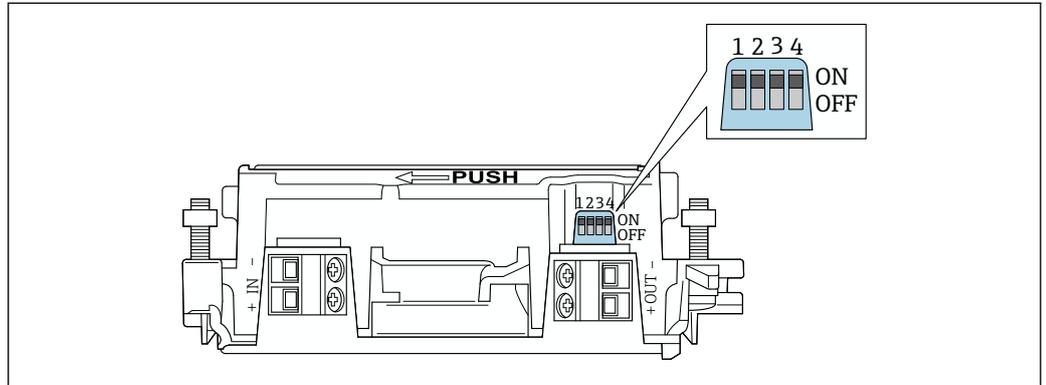

20 DIP switches for hardware-locking of functions

| DIP switch | Function | Description | Factory setting |
|------------|-----------------------------|---|-----------------|
| 1 | Bluetooth communication | <ul style="list-style-type: none"> ON: Communication via Bluetooth is possible, e.g. via SmartBlue App and Field Xpert. OFF: Communication via Bluetooth is not possible. | ON |
| 2 | Firmware update | <ul style="list-style-type: none"> ON: You can carry out firmware updates. OFF: You cannot carry out firmware updates. | ON |
| 3 | Configuration via Bluetooth | <ul style="list-style-type: none"> ON: Configuration via Bluetooth is possible, e.g. via SmartBlue App and Field Xpert. OFF: Configuration via Bluetooth is not possible. | ON |
| 4 | Reserve | – | – |

9.2 LEDs

2 LEDs

- Green: Flashes four times at start-up to indicate that the device is operational
- Orange: Flashes every 2 seconds to indicate that a squawk function has been enabled
 Activate the squawk function in the SmartBlue app using the "Identification" parameter
 → 43

The LEDs are located on the electronic insert and are not visible from the outside.

10 Description of SmartBlue app for SWA50

10.1 Menu overview (Navigation)

Menu overview (Navigation): →  89

10.2 "Device information" page

The following display options are possible for the "Device information" page:


- FieldPort SWA50 with HART field device from Endress+Hauser
- FieldPort SWA50 with HART field device from another manufacturer
- FieldPort SWA50 without connected or accessible HART field device

Information about the serial number shown

The actual serial number is displayed for Endress+Hauser field devices with HART 6 and HART 7. A unique serial number is calculated for field devices from other manufacturers and for Endress+Hauser field devices with HART 5. The calculated serial number does not correspond to the actual serial number of the field device.


Information on the status signal indicated in the top line

When the Endress+Hauser field device is connected, the status signal displayed in the top line is a combination of the status signal of the connected HART field device and the status signal of the FieldPort SWA50.

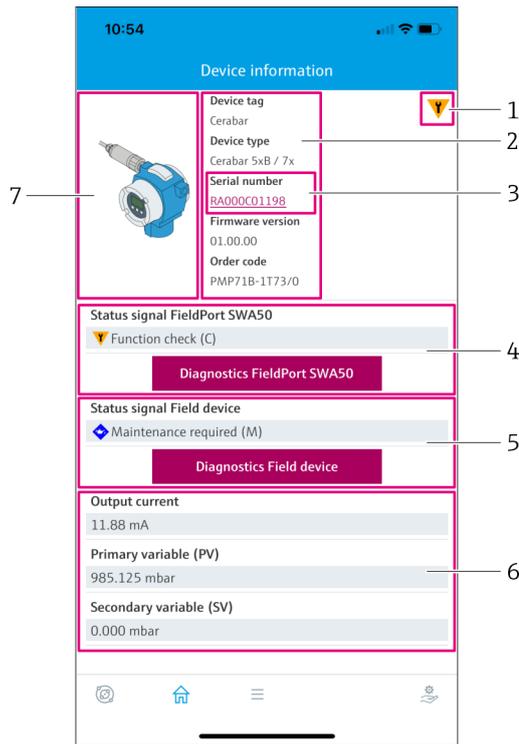


21 "Device information" view – Example of the SWA50 with Endress+Hauser HART field device

- 1 Combined status signal, consisting of the status for the SWA50 and the status of the connected HART field device
- 2 Information about the HART field device connected to the SWA50. Firmware version, order code and device type are only displayed for Endress+Hauser field devices with HART 6 and HART 7.
- 3 Serial number. In the case of HART field devices, this is a unique number generated by the SWA50 consisting of Device type, Manufacturer ID and Device ID.
- 4 Status signal of the SWA50. If the status is not OK, the button for the "Diagnostics FieldPort SWA50" page is shown.
- 5 Status signal of the connected HART field device. If the status is not OK, the button for the "Diagnostics Field device" page is shown.
- 6 Process values of HART field device
- 7 Product image of Endress+Hauser HART field device with SWA50

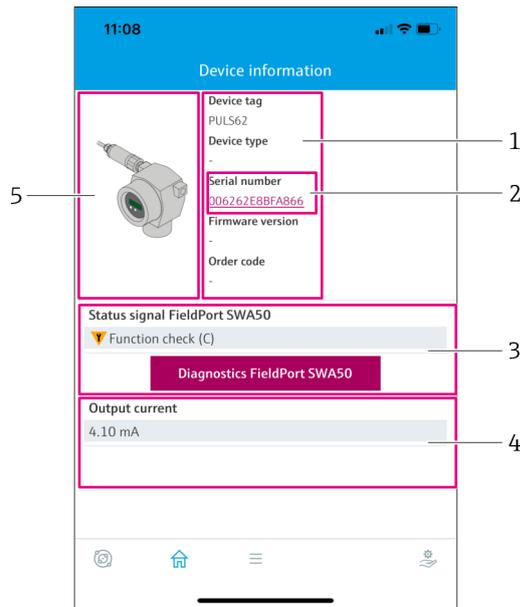

22 "Device information" view – example for SWA50 with HART field device from another manufacturer

- 1 Information about the HART field device connected to the SWA50. Firmware version, order code, device type and status are displayed only for Endress+Hauser field devices with HART 6 and HART 7.
- 2 Serial number. In the case of HART field devices from other manufacturers, this is a unique number generated by the SWA50 consisting of Device type, Manufacturer ID and Device ID.
- 3 Status signal of the SWA50. If the status is not OK, the button for the "Diagnostics FieldPort SWA50" page is shown.
- 4 Output current of HART field device
- 5 Product image of HART field device from another manufacturer with SWA50

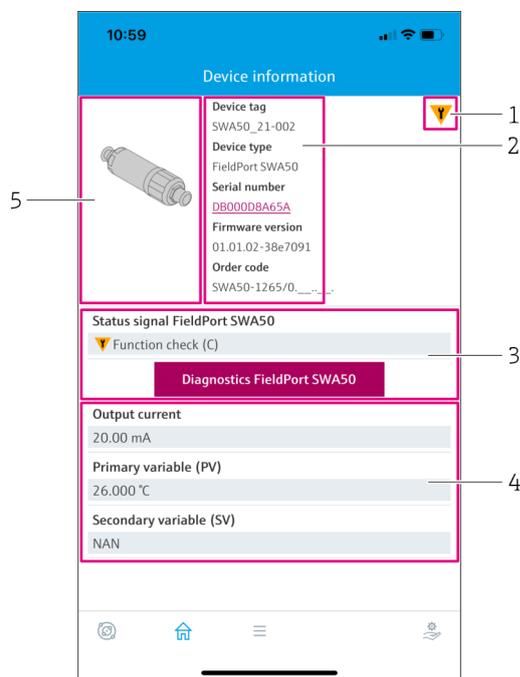

23 "Device information" view – example for SWA50 without connected or accessible HART field device

- 1 Status signal for SWA50
- 2 Information about the SWA50
- 3 Status signal of the SWA50. If the status is not OK, the button for the "Diagnostics FieldPort SWA50" page is shown.
- 4 Measured values of the SWA50. The output current 20 mA is always displayed in this case
- 5 Product image of SWA50, since HART field device is either not connected or not accessible

10.3 "Diagnostics: WirelessHART" page

Navigation: Root menu > Diagnostics > WirelessHART

This page displays FieldPort SWA50 information in conjunction with the WirelessHart network which may be relevant for diagnostics.

| Parameter | Description |
|-------------------------------------|---|
| Network ID | Shows the configured identification number of the SWA50 for the WirelessHART network. The setting is made via the "WirelessHART Configuration" page → 53. |
| Radio transmit power | Shows the selected strength of the SWA50 radio signal. The setting is made via the "WirelessHART Configuration" page → 53. Possible notifications <ul style="list-style-type: none"> ▪ 0 dBm ▪ 10 dBm |
| Join mode | Shows the selected mode the SWA50 uses to connect to the network. The setting is made via the "WirelessHART Configuration" page → 53. Possible notifications <ul style="list-style-type: none"> ▪ Do not attempt to join: Do not attempt to join ▪ Join now: Join now ▪ Attempt to join on powerup or restart: Join on powerup or restart |
| Join status | Displays the current status while attempting to join. Possible notifications <ul style="list-style-type: none"> ▪ Network packets heard: Network packets received ▪ ASN Acquired: ASN acquired ▪ Synchronized to slot time: Time synchronized with the network. ▪ Advertisement heard: Advertising packet for sending received. ▪ Join requested: Join requested ▪ Retrying join: Repeating attempt to join ▪ Join failed: Join failed ▪ Authenticated: Authenticated ▪ Network joined: Network connection established ▪ Negotiating network properties: Negotiating network parameters ▪ Normal operation commencing: Normal operation starts. Fully connected. |
| Additional information | Shows additional information about the WirelessHart connection Possible notifications <ul style="list-style-type: none"> ▪ Join failed: Join failed ▪ FieldPort does not have a join key: No join key was entered for the SWA50. ▪ FieldPort not connected to WHART network: SWA50 is not connected to the WirelessHART network ▪ Bandwith allocation pending: Bandwidth request to the gateway pending ▪ Bandwith allocation denied: Bandwidth request to the gateway denied ▪ Handheld configuration active: Handheld configuration active ▪ No alternative path: No other path |
| "WirelessHART configuration" button | The "WirelessHART configuration" page is opened → 53. |
| "Burst period configuration" button | The "Burst period configuration" page is opened. → 54 |

10.4 "Diagnostics: FieldPort SWA50" page

Navigation: Root menu > Diagnostics > FieldPort SWA50

This page displays information about the FieldPort SWA50 which may be relevant for diagnostics.

| Parameter | Description |
|---------------------------------------|---|
| Device tag | Shows the SWA50 device tag |
| Status signal FieldPort SWA50 | Shows the current NAMUR NE 107 status of the SWA50 Possible notifications <ul style="list-style-type: none"> ▪ OK ▪ Failure (F): Failure (F) ▪ Maintenance required (M): Maintenance required (M) ▪ Out of specification (S): Not within specification (S) ▪ Function check (C): Function check (C) ▪ Not categorized: Not categorized |
| Actual diagnostics | Shows the diagnostic number with the highest priority currently. → 📄 80 |
| Active diagnostics | Shows the associated diagnostic text for the diagnostic number displayed by the "Actual diagnostics" parameter |
| Additional device status | Shows other states of the SWA50 Possible notifications <ul style="list-style-type: none"> ▪ Lowpower mode: Low power mode is enabled. ▪ Additional status for field device: Additional status information available for the field device. See field device for this status information. ▪ SWA50: WirelessHART off: WirelessHART is disabled (Do not attempt to join). ▪ SWA50: do not scan for field device: No search takes place for a connected field device for the SWA50 ▪ HART device configuration locked: HART device configuration is locked for the SWA50. ▪ Connected field device changed: The configuration for the field device connected to the SWA50 was changed. ▪ Block transfer pending: The block transfer is pending. ▪ DIP switch 2 ON: FW update enabled: DIP switch 2 is set to the ON position. Firmware updates are possible. ▪ DIP switch 3 ON: Config via BT enabled: DIP switch 3 is set to the ON position. Configuration via Bluetooth is possible, e.g. via the SmartBlue app and Field Xpert. |
| "Connectivity" button | The "Connectivity" page is opened. → 📄 52 |
| "Diagnostics WirelessHART" button | The "Diagnostics" WirelessHART page is opened. → 📄 47 |
| Configuration counter | Shows the number of configuration changes for the SWA50 |
| Reboot | Shows the number of restarts of the SWA50 |
| Operating time from restart | Shows the uptime of the SWA50 since the last restart |
| Received Bluetooth signal strength | Shows the current Bluetooth radio signal strength in dB |
| Reduce Bluetooth radio transmit power | Indicates whether the Bluetooth output power of the SWA50 is reduced or not Possible notifications <ul style="list-style-type: none"> ▪ Yes ▪ No |
| "Identification" button | Enable squawk function for 1 minute. Response <ul style="list-style-type: none"> ▪ SWA50: The orange LED flashes at intervals of 2 seconds. ▪ Feldgerät: Falls das Feldgerät die Squawk-Funktion unterstützt, wird die Funktion am Feldgerät aktiviert. |

10.5 "Diagnostics: Field device" page

Navigation: Root menu > Diagnostics > Field device

This page displays information about the HART field device which may be relevant for diagnostics.



The diagnostic information is displayed only for Endress+Hauser HART field devices.

| Parameter | Description |
|----------------------------|--|
| Device tag | Shows the device tag of the HART field device |
| Device type | Shows the device type of the HART field device in HEX format, e.g. 0x1128 |
| Status signal field device | Shows the current NAMUR NE 107 status of the HART field device depending on the information available from the HART field device. The data base that makes up the device status varies depending on HART standard 5, 6 or 7 and the generation of the field device. Possible notifications <ul style="list-style-type: none"> ▪ OK ▪ Failure (F): Failure (F) ▪ Maintenance required (M): Maintenance required (M) ▪ Out of specification (S): Not within specification (S) ▪ Function check (C): Function check (C) |
| Actual diagnostics | Shows the internal service ID or the diagnostic number with the highest priority depending on the device type. The service ID is displayed in accordance with the LIT-18 specification. The "Actual diagnostics" parameter is called up via the device-specific HART command 231. |
| Device status | Shows currently pending information from the device status byte. Possible notifications <ul style="list-style-type: none"> ▪ Device malfunction (F): Device fault (F) ▪ Configuration changed (OK): Configuration changed (OK) ▪ More status available (OK): Additional status information available (OK) ▪ Loop current fixed (OK): Fixed value for loop current (OK) ▪ Loop current saturated (S): Loop current saturated (S) ▪ Non-primary variable out of limits (S): Non-primary variable (SV, TV, QV) outside limit values (S) ▪ Primary variable out of limits (S): Primary variable (PV) outside limit values (S) |
| Extended device status | Shows currently pending information from the extended device status byte. Possible notifications <ul style="list-style-type: none"> ▪ Maintenance required (M): Maintenance required (M) ▪ Device variable alert (OK): One of the device variables is in the alarm or warning state ▪ Critical power failure (F): Critical condition of supply voltage (F) ▪ Failure (F): Fault (F) ▪ Out of specification (S): Not within specification (S) ▪ Function check (C): Function check required (C) |
| Standard Status 0 | Shows additional device status information from the standard section of HART command 48 (byte 8). Requirement HART field devices with HART 7 or higher Possible notifications <ul style="list-style-type: none"> ▪ Device variable simulation active (C): Simulation of device variables active (C) ▪ Non-volatile memory defect (F): Flash memory faulty (F) ▪ Volatile memory defect (F): RAM faulty (F) ▪ Watchdog reset executed (F): Watchdog restart (F) ▪ Power supply conditions out of range (S): Supply voltage not within specification (S) ▪ Environmental conditions out of range (S): Ambient conditions not within specification (S) ▪ Electronic defect (F): Electronics module faulty (F) ▪ Device configuration locked (OK): Device configuration locked (OK) |

| Parameter | Description |
|-----------------------|--|
| Standard Status 1 | Shows additional device status information from the standard section of HART command 48 (byte 9). Requirement HART field devices with HART 7 or higher Possible notifications <ul style="list-style-type: none"> ▪ Status simulation active (OK): Device status simulation active (OK) ▪ Discrete variable simulation active (C): Measured value simulation active (C) ▪ Event notification overflow (OK): Overflow of event notifications (OK) ▪ Battery / power supply needs maintenance (M): Battery or power supply needs maintenance (M) |
| Configuration counter | Shows the number of configuration changes for the HART field device |

10.6 "Application: FieldPort SWA50" page

10.6.1 "Measured values" page (FieldPort SWA50)

Navigation: Root menu > Application > FieldPort SWA50 > Measured values

This page shows the measured values of the FieldPort SWA50.

| Parameter | Description |
|--------------------------|--|
| Primary variable (PV) | Shows the primary variable of the SWA50 Factory setting Temperature [°] |
| Secondary variable (SV) | Shows the secondary variable of the SWA50 Factory setting Signal strength of best neighbor in the WirelessHART network [dB] |
| Tertiary variable (TV) | Shows the tertiary variable of the SWA50 Factory setting Signal strength of second-best neighbor in the WirelessHART network [dB] |
| Quaternary variable (QV) | Shows the quaternary variable of the SWA50 Factory setting Field device loop current [mA] If no field device is connected to the SWA50, 20 mA is always displayed. |

10.6.2 "HART info" page (FieldPort SWA50)

Navigation: Root menu > Application > FieldPort SWA50 > HART info

This page shows the HART information of the FieldPort SWA50.

| Parameter | Description |
|------------------|--|
| Device type | Shows the device type of the SWA50 in HEX format (0x11F3) |
| Manufacturer ID | Shows the manufacturer ID of the SWA50 in HEX format, 0x11 for Endress+Hauser |
| HART revision | Shows the HART version of the SWA50, e.g. 7 |
| HART descriptor | Shows the description that was entered for the SWA50. |
| HART message | Shows the message that was entered for the SWA50. The message is transmitted via the HART protocol at the request of the master. |
| Device ID | Shows the device ID of the SWA50, e.g. 0x7A2F51 |
| No. of preambles | Shows the number of preambles entered. |

| Parameter | Description |
|-----------------|---|
| HART data code | Shows the date that was entered for the SWA50, e.g. 2020-03-31. The date provides information about a specific event, for example, such as the last configuration change. |
| Device revision | Shows the hardware revision of the SWA50 |

10.7 "Application: Field device" page

10.7.1 "Measured values" page (Field device)

Navigation: Root menu > Application > Field device > Measured values

This page shows the measured values of the HART field device that is connected to the FieldPort SWA50. If a HART field device is not connected or the HART field device cannot be reached, this page shows the measured values of the FieldPort SWA50.

 The measured values PV, SV, TV and QV are displayed for Endress+Hauser devices only.

| Parameter | Description |
|--------------------------|---|
| Output current | Shows the output current of the HART field device |
| Primary variable (PV) | Shows the primary variable of the Endress+Hauser HART field device |
| Secondary variable (SV) | Shows the secondary variable of the Endress+Hauser HART field device |
| Tertiary variable (TV) | Shows the tertiary variable of the Endress+Hauser HART field device |
| Quaternary variable (QV) | Shows the quaternary variable of the Endress+Hauser HART field device |

10.7.2 "HART info" page (Field device)

Navigation: Root menu > Application > Field device > HART info

This page shows the HART information of the HART field device that is connected to the FieldPort SWA50.

 The HART information is displayed for Endress+Hauser devices only.

| Parameter | Description |
|------------------|--|
| Device type | Shows the device type of the HART field device in HEX format, e.g. 0x1128 |
| Manufacturer ID | Shows the manufacturer ID of the HART field device in HEX format, e.g. 0x11 for Endress+Hauser |
| HART revision | Shows the HART version of the HART field device, e.g. 7 |
| HART descriptor | Shows the description that was entered for the field device. |
| HART message | Shows the message that was entered for the HART field device. The message is transmitted via the HART protocol at the request of the master. |
| Device ID | Shows the device ID of the HART field device, e.g. 0x7A2F51 |
| No. of preambles | Shows the number of preambles entered. |
| HART data code | Shows the date that was entered for the HART field devices, e.g. 2020-03-31. The date provides information about a specific event such as the last configuration change. |
| Device revision | Shows the hardware revision of the HART field device |

10.8 "System: FieldPort SWA50" page

10.8.1 "Device management" page (FieldPort SWA50)

Navigation: Root menu > System > FieldPort SWA50 > Device management

| Parameter | Description |
|------------|-----------------------------|
| Device tag | Enter device tag for SWA50. |

10.8.2 "Connectivity" page (FieldPort SWA50)

Navigation: Root menu > System > FieldPort SWA50 > Connectivity

"Bluetooth configuration" page

Navigation: Root menu > System > FieldPort SWA50 > Connectivity > Bluetooth configuration

Use this page to configure the Bluetooth connection and perform firmware updates for the FieldPort SWA50.

| Page | Description |
|-----------------------------|---|
| Reduce radio transmit power | Enable and disable a reduction in the transmission power of the SWA50. Options <ul style="list-style-type: none"> ▪ Yes: The transmission power of the SWA50 is reduced. ▪ No: The transmission power of the SWA50 is not reduced. Factory setting No |
| Change Bluetooth password | Change password. To change it, you must enter the user name, the current password and the new password. Factory setting <ul style="list-style-type: none"> ▪ User name: admin ▪ The password can be found on the nameplate. |
| Firmware update | →  83 |

"HART configuration" page

Navigation: Root menu > System > FieldPort SWA50 > Connectivity > HART configuration

Use this page to configure the HART parameters for the FieldPort SWA50. In addition, you can configure the HART address of the connected HART field device.

| Parameter | Description |
|---------------------------|--|
| HART address field device | Configure the HART address of the HART field device. User entry 0 to 255 Factory setting 0  If the SWA50 is to be used as a repeater, you must enter an address greater than 63. The status signals of the field device are suppressed in this mode. |
| HART master type | Select HART master type. Options <ul style="list-style-type: none"> ▪ Primary master ▪ Secondary master Factory setting Secondary master |

| Parameter | Description |
|------------------------|---|
| Communication resistor | Select installation site of HART communication resistor. Options <ul style="list-style-type: none"> ▪ External: Use an external communication resistor provided by the customer onsite between the IN+ terminal and the supply voltage. ▪ Internal: Use an internal communication resistor of the SWA50. Factory setting External |
| HART address SWA50 | Configure the HART address of the SWA50 for slave access to SWA50. User entry 0 to 63 Factory setting 15 |

"WirelessHART configuration" page

Navigation: Root menu > System > FieldPort SWA50 > Connectivity > WirelessHART configuration

Use this page to configure the WirelessHART connection.

| Parameter | Description |
|----------------------|---|
| Network ID | Requirement Join mode: Do not attempt to join Description Enter the identification number of the network to which the FieldPort connects. User entry 0 to 65535 Factory setting 1447 |
| Join key | Requirement Join mode: Do not attempt to join Description Enter the network password. User entry 32 hexadecimal numbers Factory setting 456E6472657373202B20486175736572 |
| Radio transmit power | Requirement Join mode: Do not attempt to join Description Enter strength of radio signal. User entry 0 or 10 dBm Factory setting 10 dBm Additional information National restriction to 0 dBm is possible, as in Japan for example |

| Parameter | Description |
|-------------|---|
| Join mode | Select the mode the FieldPort uses to connect to the network. Options <ul style="list-style-type: none"> ▪ Do not attempt to join: Do not attempt to join ▪ Join now: Join now ▪ Attempt to join on powerup or restart: Join on powerup or restart |
| Join status | Displays the current status while attempting to join. Possible notifications <ul style="list-style-type: none"> ▪ Network packets heard: Network packets received ▪ ASN Acquired: ASN acquired ▪ Synchronized to slot time: Time synchronized with the network. ▪ Advertisement heard: Advertising packet for sending received. ▪ Join requested: Join requested ▪ Retrying join: Repeating attempt to join ▪ Join failed: Join failed ▪ Authenticated: Authenticated ▪ Network joined: Network connection established ▪ Negotiating network properties: Negotiating network parameters ▪ Normal operation commencing: Normal operation starts. Fully connected. |

10.8.3 "Burst period configuration" page (FieldPort SWA50)

Navigation: Root menu > System > FieldPort SWA50 > Burst period configuration

Use this page to configure the time periods for the burst modes or enable and disable individual burst modes.

Burst modes for the FieldPort SWA50 – factory setting

| Burst Mode | Factory setting |
|------------|---|
| 1 | Every 5 minutes, the SWA50 transmits the process values of the field device according to HART command 3 |
| 2 | Every 5 minutes, the SWA50 transmits the diagnostic data of the field device according to HART command 48 |
| 3 | Not configured |
| 4 | Every 5 minutes, the SWA50 transmits its own process values in accordance with HART command 3 |
| 5 | Every 5 minutes, the SWA50 transmits its own diagnostic data according to HART command 48 |

| Parameter | Description |
|-----------------------------------|---|
| FieldPort SWA50 (Burst Mode 4, 5) | Select the time period for burst mode 4 and 5. Options <ul style="list-style-type: none"> ■ 1 min ■ 2 min ■ 5 min ■ Custom (via DTM): The time period set via the DTM is used. Factory setting 5 min |
| Field device (Burst Mode 1, 2) | Select the time period for burst mode 1 and 2 or disable burst mode. Options <ul style="list-style-type: none"> ■ Off: Disable burst mode. ■ 8 s ■ 16 s ■ 32 s ■ 1 min ■ 2 min ■ 5 min ■ Custom (via DTM): The time period set via the DTM is used. Factory setting 5 min |
| Other (Burst Mode 3) | Select the time period for burst mode 3 and or disable burst mode. Options <ul style="list-style-type: none"> ■ Off: Disable burst mode 3. ■ Custom (via DTM): The time period set via the DTM is used. Factory setting Off |

10.8.4 "Geolocation" page (FieldPort SWA50)

Navigation: Root menu > System > FieldPort SWA50 > Gelocation

Use this page to configure information on the position of the FieldPort SWA50.

| Parameter | Description |
|--|---|
| Location description | Enter a description of the location (32 characters maximum). |
| "Take over data from mobile device" button | If the mobile device has location information, you can adopt this information by tapping on the button for the SWA50. |
| Longitude | Enter longitude [°]. |
| Latitude | Enter latitude [°]. |
| Altitude | Enter height [m]. |

10.8.5 "Information" page (FieldPort SWA50)

Navigation: Root menu > System > FieldPort SWA50 > Information

This page displays information on the FieldPort SWA50.

| Parameter | Description |
|------------------------|--|
| Wireless communication | Shows the connection type, such as "Bluetooth" or "WirelessHART" |
| Device name | Shows the device name for the SWA50 |
| Manufacturer | Shows the manufacturer, "Endress+Hauser" in this case |
| Serial number | Shows the serial number of the SWA50 |
| Order code | Shows the order code |
| Extended order code 1 | Shows the extended order code 1 |
| Extended order code 2 | Shows the extended order code 2 |

| Parameter | Description |
|-----------------------|-----------------------------------|
| Extended order code 3 | Shows the extended order code 3 |
| Firmware version | Shows the active firmware version |
| Hardware version | Shows the active hardware version |

10.9 "System: Field device" page

Navigation: Root menu > System > Field device

 The "Field device" page is available for Endress+Hauser devices only.

10.9.1 "Device management" page (Field device)

Navigation: Root menu > System > Field device > Device management

| Parameter | Description |
|------------|---|
| Device tag | Shows the device tag of the HART field device |

10.9.2 "Information" page (Field device)

Navigation: Root menu > System > Field device > Information

This page shows information about the HART field device that is connected to the FieldPort SWA50.

 This information is displayed for Endress+Hauser field devices with HART 6 and higher.

| Parameter | Description |
|-----------------------|---|
| Device name | Shows the device name of the HART field device |
| Manufacturer | Shows the manufacturer of the HART field device |
| Serial number | Shows the serial number of the HART field device |
| Order code | Shows the order code of the HART field device |
| Extended order code 1 | Shows the first part of the extended order code of the HART field device |
| Extended order code 2 | Shows the second part of the extended order code of the HART field device |
| Extended order code 3 | Shows the third part of the extended order code of the HART field device |
| Firmware version | Shows the active firmware revision of the HART field device |

11 Description of DTM for SWA50

11.1 Identification

Use this page to configure the parameters necessary to identify the FieldPort SWA50.

The factory settings are displayed in the relevant fields.

Navigation

Online parameterization > Identification

The screenshot shows the 'Identification' configuration page for a SWA50 device. At the top, there is a header with device information: Device Name (WirelessHART FieldPort / SWA50 / V1.xx), Device Revision (0), Long Tag (SWA50_EABC9), Descriptor (SWA50), NE107 Status (Good), and Timestamp of Status (12:32:18). Below this is a navigation tree on the left with 'Identification' selected. The main area contains a form with the following fields and values: Long Tag (SWA50_EABC9), Device Tag (empty), Descriptor (SWA50), Date Code (23.06.2020), Message (SWA50), Polling Address (15), Serial Number (F8000EABC9), Ext. Order Code (SWA50-aabccddeeffg), Order Code (SWA50->8<-_-_-), and Country Code (Germany).

"Identification" parameter description page

| Parameter | Description |
|------------|---|
| Long Tag | <p>Requirement Devices from HART version 6.0</p> <p>Description Enter a tag for the SWA50. This parameter is used for unique identification of the SWA50 in the network and in the plant. The parameter is used to set the burst mode and the event notification.</p> <p>User entry Max. 32 characters from the ISO Latin 1 character set</p> <p>Factory setting SWA50_"Serial Number"</p> <p> The tag must be unique in the WirelessHART network.</p> |
| Device Tag | <p>Description Enter a tag for the SWA50.</p> <p>User entry Max. 8 characters from the packed ASCII character set</p> <p>Factory setting -</p> |
| Descriptor | <p>Description Enter the description for the SWA50, e.g. function or location.</p> <p>User entry Max. 16 characters from the packed ASCII character set</p> <p>Factory setting SWA50</p> |
| Date Code | <p>Description Enter the date of a specific event, such as the last change.</p> <p>User entry DD.MM.YYYY</p> |

| Parameter | Description |
|-----------------|--|
| Message | <p>Description Enter the message that can be used as desired.</p> <p>User entry Max. 32 characters from the packed ASCII character set</p> <p>Factory setting SWA50</p> |
| Polling Address | <p>Description Enter the HART address of the SWA50 on the wired interface.</p> <p>User entry 0 to 63</p> <p>Factory setting 15</p> <p>Additional information Since the "Long Tag" parameter and the MAC address are used to identify the SWA50 in the wireless network, you can assign the same device address to different SWA50 devices.</p> |
| Serial Number | <p>Description Shows the serial number of the SWA50.</p> |
| Ext. Order Code | <p>Description Shows the detailed order number of the SWA50.</p> |
| Order Code | <p>Description Shows the order code of the SWA50.</p> |
| Country Code | <p>Description Select the country where the SWA50 is operated.</p> <p>Factory setting Germany</p> <p>Additional information The selected country controls the signal strength in accordance with national restrictions and thus the possible settings for the "Radio Power" parameter.</p> |


 You can use the following characters for parameters for which you should enter characters from the packed ASCII character set: @ A B C D E F G H I J K L M N O P Q R S T U V W X Y Z [\] ^ _ SP ! " # \$ % & ' () * + , - . / 0 1 2 3 4 5 6 7 8 9 : ; < = > ?

11.2 Wireless Communication

Use this page to configure the parameters necessary to integrate the FieldPort SWA50 into a wireless network.

Navigation

Online parameterization > Wireless Communication

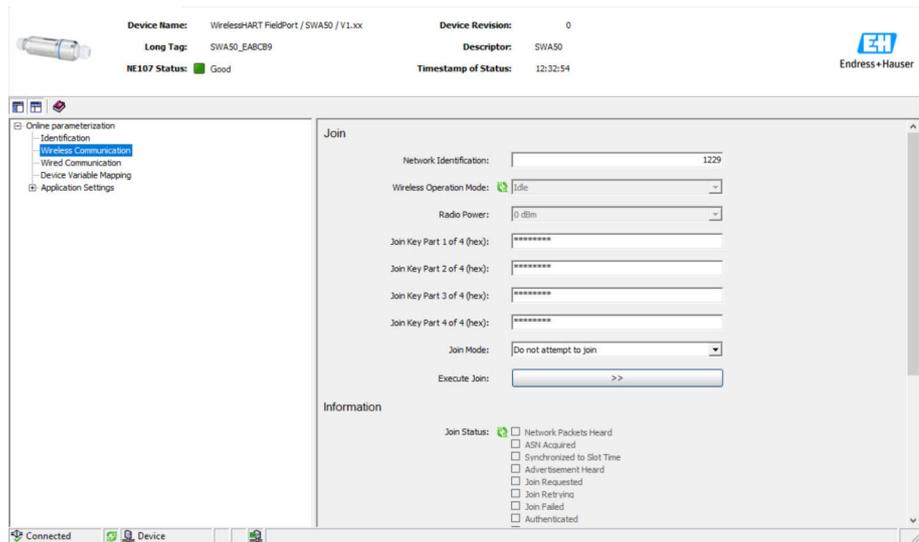

Configure wireless communication and establish connection

1. Configure parameters in the **Join** section.
2. Click on the >> button for the **Execute Join** parameter.
 - ↳ The settings are downloaded and stored in the SWA50.

 Use the "Join Status" parameter to follow the progress of the connection.

"Wireless Communication" parameter description page

| Parameter | Description |
|-------------------------|---|
| Network Identification | <p>Description Enter the identification number of the network to which the SWA50 should connect.</p> <p>User entry 0 to 65535</p> <p>Factory setting 1447</p> |
| Wireless Operation Mode | <p>Description Shows the status while the connection is being established or of the existing connection of the SWA50 to the network.</p> <p>Possible notifications</p> <ul style="list-style-type: none"> ▪ Idle: Waiting ▪ Active Search: Active search for neighbor ▪ Negotiating: Connection parameters are being negotiated with network manager ▪ Quarantined: Denied by network manager and temporary exclusion from network ▪ Operational: Connection established ▪ Suspended: Permanent exclusion ▪ Deep Sleep/Ultra-Low Power/Passive Search: SWA50 is inactive |
| Radio Power | <p>Description Select strength of radio signal.</p> <p>Options</p> <ul style="list-style-type: none"> ▪ 0 dBm ▪ 10 dBm <p>Factory setting 10 dBm</p> |

| Parameter | Description |
|--|--|
| Join Key Part 1 of 4 | <p>Description Enter join key part 1 of 4.</p> <p>User entry 8 hexadecimal numbers</p> <p>Factory setting 456E6472</p> |
| Join Key Part 2 of 4 | <p>Description Enter join key part 2 of 4.</p> <p>User entry 8 hexadecimal numbers</p> <p>Factory setting 65737320</p> |
| Join Key Part 3 of 4 | <p>Description Enter join key part 3 of 4.</p> <p>User entry 8 hexadecimal numbers</p> <p>Factory setting 2B204861</p> |
| Join Key Part 4 of 4 | <p>Description Enter join key part 4 of 4.</p> <p>User entry 8 hexadecimal numbers</p> <p>Factory setting 75736572</p> |
| Join Mode | <p>Description Select the event upon which the SWA50 connects to the network.</p> <p>Options</p> <ul style="list-style-type: none"> ▪ Do not attempt to join: Do not establish a connection. ▪ Join now: A connection is established once you click on the >> button for the "Execute Join" parameter. ▪ Attempt to join immediately on power-up or reset: Establish connection directly after a restart. <p>Factory setting Do not attempt to join</p> |
| Execute Join | <p>Description Click button to write the set parameters to the SWA50 and to use them.</p> <p>Additional information If the "Join now" option is selected for the "Join Mode" parameter, the SWA50 attempts to connect to the network.</p> |
| Join Status | <p>Description Displays the current status while attempting to join.</p> <p>Possible notifications</p> <ul style="list-style-type: none"> ▪ Network packets heard: Network packets received ▪ ASN Acquired: ASN acquired ▪ Synchronized to slot time: Time synchronized with the network ▪ Advertisement heard: Advertising packet for sending received. ▪ Join requested: Join requested ▪ Retrying join: Repeating attempt to join ▪ Join failed: Join failed ▪ Authenticated: Authenticated ▪ Network joined: Network connection established ▪ Negotiating network properties: Negotiating network parameters ▪ Normal operation commencing: Normal operation starts. Fully connected. |
| Total Number of Neighbours | <p>Description Shows the number of neighboring WirelessHart devices to which a connection has been established.</p> |
| Number of Advertising Packets Received | <p>Description Shows the number of advertising packets to join the network sent by neighboring devices or WirelessHART gateways and received by the SWA50.</p> |


| Parameter | Description |
|---|--|
| Number of Join Attempts | Description Shows the number of connection attempts that the SWA50 made until the connection was established. |
| Active Advertising Shed Time [hh:mm:ss] | Description Enter the time for an active join request. During this time, the SWA50 attempts to enable other SWA50 devices to connect to the network faster. To enable this parameter, click the >> button for the "Request Active Advertising" parameter. User entry HH:MM:SS Factory setting 00:40:00 |
| Request Active Advertising | Description Clicking the >> button enables the "Active Advertising Shed Time [hh:mm:ss]" parameter. |
| Number of Neighbours Advertising | Description Shows the number of neighbors transmitting advertising packets for sending. |

11.3 Wired Communication

Use this page to configure the parameters required for HART communication between the FieldPort SWA50 and the connected HART field device.

Navigation

Online parameterization > Wired Communication

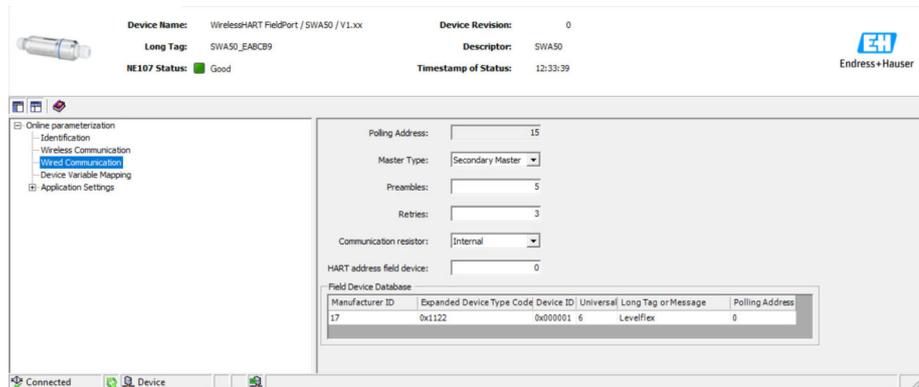

"Wired communication" parameter description page

| Parameter | Description |
|-----------------|---|
| Polling Address | Description Shows the HART address of the SWA50. Factory setting 15 |
| Master Type | Description Select the HART master type for the SWA50. Options <ul style="list-style-type: none"> ■ Primary master ■ Secondary master Factory setting Secondary master  In addition to the SWA50, only one other HART master is permitted in the HART loop. This other HART master and the SWA50 may not be of the same master type. |

| Parameter | Description |
|--------------------------|---|
| Preambles | <p>Description Enter the number of preambles.</p> <p>User entry 5 to 50</p> <p>Factory setting 5</p> |
| Retries | <p>Description Enter the number of attempts to establish communication between the SWA50 and the HART field device.</p> <p>User entry 2 to 5</p> <p>Factory setting 3</p> |
| Communication resistor | <p>Description Select the installation location of the HART communication resistor.</p> <p>Options</p> <ul style="list-style-type: none"> ▪ External: Use external and customer-supplied communication resistor. The communication resistor must be ≥ 250 Ohm and wired in series between the "IN +" terminal of the SWA50 and the supply voltage, such as the PLC or active barrier. ▪ Internal: Use an internal communication resistor of the SWA50. <p>Factory setting External</p> |
| HART Adress Field Device | <p>Description Enter the HART address of the HART field device.</p> <p>User entry 0 to 63</p> <p>Factory setting 0</p> |
| Field Device Database | <p>Description Shows the HART information of the HART field device that is connected to the SWA50.</p> |

11.4 Device Variable Mapping


The FieldPort SWA50 can output the value and status of different variables. Use this page to configure the four variables PV, SV, TV and QV that are displayed in the network.

Variables for selection

| Option | Description |
|------------------------------|---|
| Field Device Loop Current | Loop current of field device |
| RSL of Best Neighbour | Signal strength of neighbor with highest signal strength |
| RSL of Second Best Neighbour | Signal strength of neighbor with second-highest signal strength |
| Temperature | Current temperature measured by the SWA50 |

Navigation

Online parameterization > Device Variable Mapping

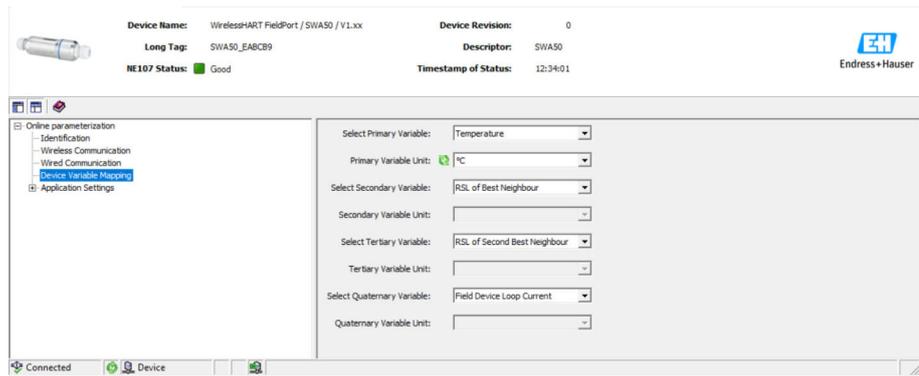

"Device Variable Mapping" parameter description page

| Parameter | Description |
|---------------------------|---|
| Select Primary Variable | <p>Description Select the primary variable.</p> <p>Options See the "Variables for selection" table.</p> <p>Factory setting Temperature</p> |
| Primary Variable Unit | <p>Description Select the unit for the primary variable.</p> <p>Options The options depend on the variable selected.</p> <p>Factory setting °C</p> |
| Select Secondary Variable | <p>Description Select the secondary variable.</p> <p>Options See the "Variables for selection" table.</p> <p>Factory setting RSL of Best Neighbour</p> |
| Secondary Variable Unit | <p>Description Select the unit for the secondary variable.</p> <p>Options The options depend on the variable selected.</p> <p>Factory setting dBm</p> |
| Select Tertiary Variable | <p>Description Select the tertiary variable.</p> <p>Options See the "Variables for selection" table.</p> <p>Factory setting RSL of Second Best Neighbour</p> |
| Tertiary Variable Unit | <p>Description Select the unit for the tertiary variable.</p> <p>Options The options depend on the variable selected.</p> <p>Factory setting dBm</p> |

| Parameter | Description |
|----------------------------|--|
| Select Quaternary Variable | <p>Description Select the quaternary variable.</p> <p>Options See the "Variables for selection" table.</p> <p>Factory setting Field Device Loop Current</p> |
| Quaternary Variable Unit | <p>Description Select the unit for the quaternary variable.</p> <p>Options The options depend on the variable selected.</p> <p>Factory setting mA</p> |

11.5 Burst Mode

General information

In burst mode, slave devices can periodically send information such as process values without a request from the master.

The FieldPort SWA50 is responsible for requesting this information from the connected HART field device and forwarding it to the WirelessHART gateway. In addition, the SWA50 can send its own process values, i.e. the device variables to the WirelessHART gateway.

In a typical configuration, the four device variables are transmitted from the connected HART field device to the WirelessHART gateway at regular intervals. You can use burst command numbers 3 and 48 for this purpose. We recommend that you set the same time period for both commands. The SWA50 wakes the HART field device, adopts the device variables and transmits them at the configured interval.

We recommend configuring a second burst mode for the SWA50 so that the SWA50 information is also available for host applications in the WirelessHART gateway.

You can configure the device variables on the "Device Variable Mapping" page →  62.

-  If FieldCare or another configuration tool communicates with the SWA50 via a modem such as the FXA 195, the sending of burst modes is interrupted.
- Some HART field devices are also able to send burst modes. In this case, we recommend enabling the burst mode in the SWA50 only. The burst settings of the SWA50 are **not** synchronized with the burst settings of the HART field device.

"Burst Mode" page and "Burst Mode 1" to "Burst Mode 5" pages

The "Burst Mode" page provides an overview of the burst modes that are configured. You can define up to 5 different burst modes via the "Burst Mode 1" to "Burst Mode 5" pages.

You can also configure a burst mode in offline mode. This burst mode becomes effective as soon as the SWA50 connects to the network.


Navigation

- Online parameterization > Application Settings > Burst Mode > Burst Mode 1
- Online parameterization > Application Settings > Burst Mode > Burst Mode 2
- Online parameterization > Application Settings > Burst Mode > Burst Mode ...

Burst modes for the FieldPort SWA50 – Factory setting

| Burst Mode | Factory setting |
|------------|---|
| 1 | Every 5 minutes, the SWA50 transmits the process values of the field device according to HART command 3 |
| 2 | Every 5 minutes, the SWA50 transmits the diagnostic data of the field device according to HART command 48 |

| Burst Mode | Factory setting |
|------------|---|
| 3 | Not configured |
| 4 | Every 5 minutes, the SWA50 transmits its own process values in accordance with HART command 3 |
| 5 | Every 5 minutes, the SWA50 transmits its own diagnostic data according to HART command 48 |

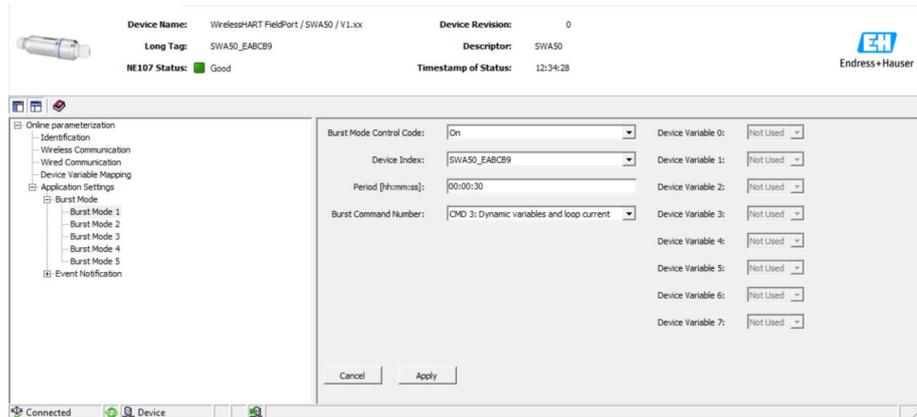

Configuring burst modes

1. Open the page for configuring a burst mode, e.g. **Burst Mode 1** page.
2. Select the **On** option for the **Burst Mode Control Code** parameter.
 - ↳ The gray input fields become white. Entries can be made.
3. Select either "SWA50" or the connected HART field device for the **Device Index** parameter.
4. In the **Period** parameter, enter the time period following which the SWA50 should send the device variables.
5. Select the number for the burst command in the **Burst Command Number** parameter.
6. Click the **Apply** button.
 - ↳ The settings are downloaded and stored in the SWA50.
7. Confirm prompt with **OK**.
 - ↳ Once the SWA50 is connected to the network, the burst mode takes immediate effect.
If the SWA50 is not connected to the network, a message is displayed. Select **OK** to confirm the message. The burst mode becomes effective as soon as the SWA50 connects to the network.

"Burst Mode X" parameter description page

| Parameter | Description |
|--|---|
| Burst Mode Control Code | <p>Description Enabling and disabling burst mode.</p> <p>Options</p> <ul style="list-style-type: none"> ■ Off: Burst mode disabled. The input fields are grayed out and write-protected. ■ On: Burst mode enabled. The input fields are white. Entries can be made. <p>Factory setting</p> <ul style="list-style-type: none"> ■ Burst mode 1, 2, 4 and 5: On ■ Burst mode 3: Off |
| Device Index | <p>Requirement Burst Mode Control Code: On</p> <p>Description Select the device for which the burst mode is effective.</p> <p>Options</p> <ul style="list-style-type: none"> ■ SWA50 ■ Connected field device <p>Factory setting SWA50</p> |
| Period [hh:mm:ss] | <p>Requirement Burst Mode Control Code: On</p> <p>Description Enter the time period after which the SWA50 sends the device variables to the WirelessHART gateway.</p> <p>User entry</p> <ul style="list-style-type: none"> ■ 00:00:08 ■ 00:00:16 ■ 00:00:32 ■ Any time possible from 00:01:00 <p>Factory setting 05:00:00</p> |
| Burst Command Number | <p>Requirement Burst Mode Control Code: On</p> <p>Description Select the burst command number. Description of burst command: See the following tables. For additional information, see HART specification.</p> <p>Selection/user entry</p> <ul style="list-style-type: none"> ■ Device Index "SWA50": Select 3, 9 or 48 from a drop-down list ■ Device Index "Connected field device": Enter 1, 2, 3, 9, 33 or 48 <p>Factory setting 1</p> <p>Additional information</p> <ul style="list-style-type: none"> ■ You can configure any command for the connected field device. Refer to the specific Operating Instructions for possible commands. ■ If in doubt, use command 3 and 48. |
| Device Variable Code 0 to Device Variable Code 7 | <p>Requirement</p> <ul style="list-style-type: none"> ■ Burst Mode Control Code: On ■ Burst Command Number: 9 or 33 <p>Description Select the device variables that are transmitted with the burst mode.</p> <p>Selection/user entry</p> <ul style="list-style-type: none"> ■ Device Index "SWA50" : Device variable code from drop-down list ■ Device Index "Connected field device": Enter device variable code. <p>Factory setting 250</p> <p>Additional information Refer to the documentation for the field device for the device variables of the connected field device.</p> |

Description of burst commands for the SWA50

| Burst command | Description |
|---------------|--|
| 3 | Transmits the value of the 4 to 20 mA signal and up to 4 predefined device variables and their unit in each case. Device variables: → 62. |
| 9 | The Device Variable Code 0 to Device Variable Code 7 fields are enabled. Transmits the value, unit and status of up to 8 device variables. |
| 48 | Transmits the additional device status. |

Description of burst commands for the field device connected to the SWA50

| Burst command | Description |
|---------------|--|
| 1 | Transmits the value and unit of the "Primary variable" (PV). |
| 2 | Transmits the value of the 4 to 20 mA signal and the corresponding value as a percentage, e.g. 4 mA and 0 % or 12 mA and 50 %. |
| 3 | Transmits the value of the 4 to 20 mA signal and up to 4 predefined device variables and their unit in each case. Device variables: PV, SV, TV and QV. |
| 9 | The Device Variable Code 0 to Device Variable Code 7 fields are enabled. Transmits the value, unit and status of up to 8 device variables. |
| 33 | The Device Variable Code 0 to Device Variable Code 3 fields are enabled. Transmits the value and unit of up to 4 device variables. |
| 48 | Transmits the additional device status. |

11.6 Event Notification

General information

The event notification is a special application similar to the burst mode (burst message). An event notification is sent as soon as there are changes in the device configuration or device status, irrespective of whether data are already being sent by burst modes. You can use the status in the device status byte, the extended device status byte and in command 48 for the event notification. You can define a certain number of bits that trigger an event notification.

Event notifications have a lower priority than burst modes (burst messages). The event notifications are given a time stamp when a notification is triggered for the first time. You can define up to 2 different event notifications.


"Event Notification Control Code" page and "Event Notification Control Code 1" and "Event Notification Control Code 2" pages

The "Event Notification Control Code" page provides an overview of which event notifications are configured. You can define two different event notifications via the "Event Notification Control Code 1" and "Event Notification Control Code 2" pages.

You can also configure event notifications in the offline mode. The event notifications take effect as soon as the FieldPort SWA50 connects to the network.


Navigation

- Online parameterization > Application Settings > Event Notification > Event Notification 1
- Online parameterization > Application Settings > Event Notification > Event Notification 2

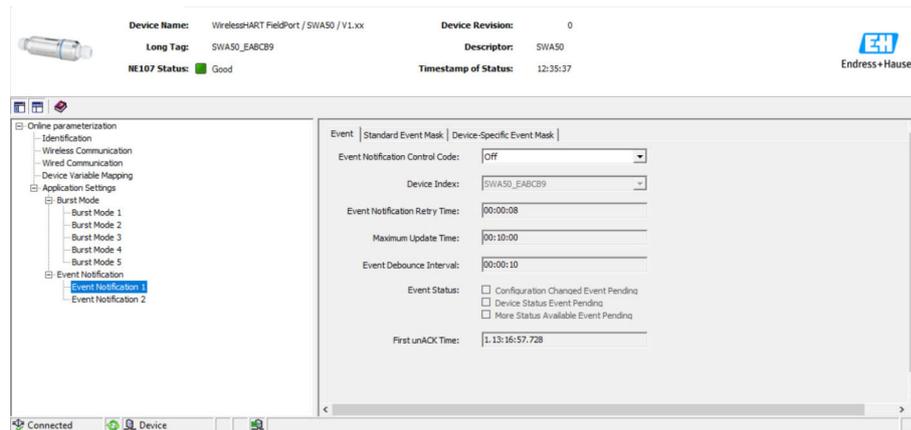


Configuring the event notification

1. Open the page for configuring an event notification, e.g. **Event Notification Control Code 1** page.
2. Select the **On** option in the "Event" tab for the **Event Notification Control Code** parameter.
 - ↳ The gray input fields become white. Entries can be made.
3. Select either "SWA50" or the connected HART field device for the **Device Index** parameter.
4. Configure the remaining parameters in the "Event" tab.
5. Activate the desired event notifications in the "Standard Event Mask" tab. To do so, select the check box in front of the particular event. Multiple notifications can be selected.

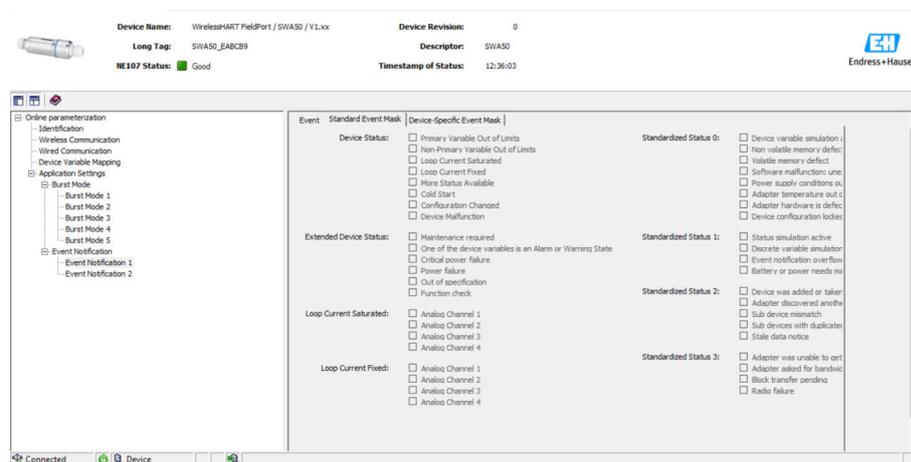

6. Activate the desired event notifications in the "Device-Specific Event Mask" tab. To do so, select the check box in front of the particular event. Multiple notifications can be selected. Observe the Operating Instructions for the selected device in the "Device Index" parameter.

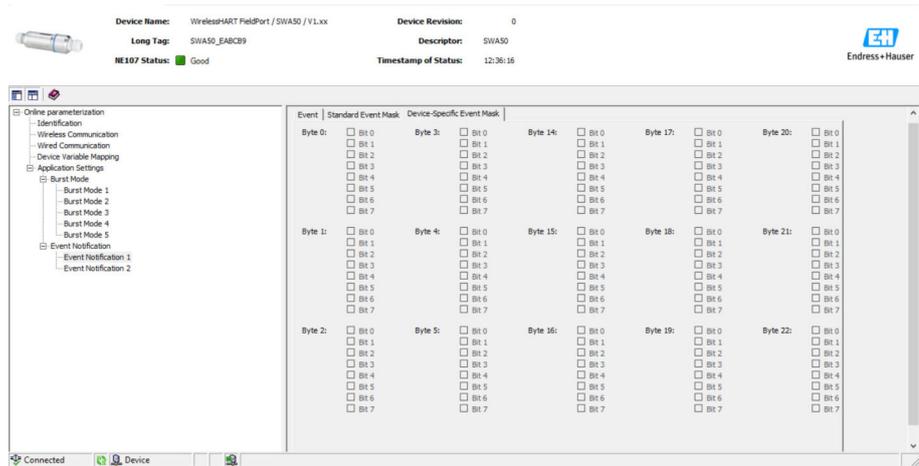

7. Click the **Apply** button.
 - ↳ The settings are downloaded and stored in the SWA50.
8. Click the **OK** button.
 - ↳ If the SWA50 is connected to the network, the event is monitored immediately. If the SWA50 is not connected to the network, a message is displayed. Confirm the message with **OK**. The event becomes effective as soon as the SWA50 connects to the network.

"Event Notification" parameter description, "Event" tab

| Parameter | Description |
|---------------------------------|--|
| Event Notification Control Code | <p>Description Enable and disable the event monitoring mode.</p> <p>Options</p> <ul style="list-style-type: none"> ■ Off: Event monitoring mode is disabled. The input fields are grayed out and write-protected. ■ On: Event monitoring mode enabled. Entries can be made. <p>Factory setting Off</p> <p>Additional information The event monitoring parameters are written to the SWA50 once you click the "Apply" button.</p> |
| Device Index | <p>Requirement Event Notification Control Code: On</p> <p>Description Select the device for which the event monitoring parameters are active.</p> <p>Options</p> <ul style="list-style-type: none"> ■ SWA50 ■ Connected field device <p>Factory setting SWA50</p> |

| Parameter | Description |
|-------------------------------|---|
| Event Notification Retry Time | <p>Requirement Event Notification Control Code: On</p> <p>Description Enter the time between two attempts to transmit the event notification. Transmission is repeated until the SWA50 gets confirmation of receipt.</p> <p>User entry</p> <ul style="list-style-type: none"> ■ 00:00:01 ■ 00:00:02 ■ 00:00:04 ■ 00:00:08 ■ 00:00:16 ■ 00:00:32 ■ Any time possible from 00:01:00 <p>Factory setting 00:30:00</p> |
| Maximum Update Time | <p>Requirement Event Notification Control Code: On</p> <p>Description Enter the maximum time that is used if no event change occurs. If an event has not occurred, the SWA50 sends an event notification after this time. If an event notification occurs during this time, the timer is restarted.</p> <p>User entry</p> <ul style="list-style-type: none"> ■ 00:00:01 ■ 00:00:02 ■ 00:00:04 ■ 00:00:08 ■ 00:00:16 ■ 00:00:32 ■ Any time possible from 00:01:00 <p>Factory setting 00:30:00</p> |
| Event Debounce Interval | <p>Requirement Event Notification Control Code: On</p> <p>Description Enter the time specifying how long an event must last before the event notification is sent.</p> |
| Event Status | <p>Requirement Event Notification Control Code: On</p> <p>Description Indicates whether and which event notifications have been sent and are not yet confirmed. If the check box is ticked, the event notification has been sent but not yet confirmed.</p> <p>Monitored events</p> <ul style="list-style-type: none"> ■ Configuration changed ■ Device status ■ Additional status information available <p>Factory setting All check boxes disabled</p> |
| First unACK Time | <p>Requirement Event Notification Control Code: On</p> <p>Description Indicates how long the event notification listed under the "Event Status" parameter is active.</p> <p>Factory setting 00:00:00</p> |

"Event Notification" parameter description, "Standard Event Mask" tab

| Parameter | Description |
|------------------------|--|
| Device Status | <p>Options</p> <ul style="list-style-type: none"> ▪ Primary variable out of limits: Primary variable (PV) outside limit values ▪ Non-primary variable out of limits: Non-primary variable (SV, TV, QV) outside limit values ▪ Loop current saturated: Loop current saturated ▪ Loop current fixed: Fixed value for loop current ▪ More status available: Additional status information available ▪ Cold start: Cold start ▪ Configuration changed: Configuration changed ▪ Device malfunction: Device fault |
| Extended Device Status | <p>Options</p> <ul style="list-style-type: none"> ▪ Maintenance required: Maintenance required ▪ One of the device variables is an Alarm or Warning State: One of the device variables is in the alarm or warning state ▪ Critical power failure: Critical condition of power supply ▪ Power failure: Fault ▪ Out of specification: Not within specification ▪ Function check: Function check required |
| Loop Current Saturated | See DTM. |
| Loop Current Fixed | See DTM. |
| Standardized Status 0 | See DTM. |
| Standardized Status 1 | <p>Options</p> <ul style="list-style-type: none"> ▪ Device variable simulation active: Simulation of device variables active ▪ Non volatile memory defect: Flash memory faulty ▪ Volatile memory defect: RAM defective ▪ Software malfunction: Software malfunction (watchdog restart) ▪ Power supply conditions out of specification: Supply not within specification ▪ Adapter temperature out of specification: Ambient conditions not within specification ▪ Adapter hardware is defect: Electronics defective ▪ Device configuration locked: Device configuration locked |
| Standardized Status 2 | See DTM. |
| Standardized Status 3 | See DTM. |

"Event-Notification" parameter description, "Device-Specific Event Mask" tab

-  Monitoring of device-specific events
 - HART field device: See the Operating Instructions of the connected HART field device
 - FieldPort SWA50: See the following table

Monitoring of standard events for FieldPort SWA50

-  For the troubleshooting measures, see the corresponding diagnostics number in the "Diagnostics" section →  80.

| Byte | Bit | Description | Diagnostic number |
|------|-----|---|-------------------|
| 0 | 0 | So far no attempt has been made to establish a connection. | 901 |
| | 1 | The adapter is not connected to any wireless network. | 506 |
| | 2 | No alternative path to a neighbor available. | 507 |
| | 3 | The adapter does not have a join key. | 505 |
| | 4 | The adapter was unable to establish a connection to the wireless network. | 503 |
| | 5 | WirelessHART started. | 904 |
| | 6 | Bluetooth connection active. | 900 |

| Byte | Bit | Description | Diagnostic number |
|------|--------|---|-------------------|
| | 7 | – | – |
| 1 | 0 | The adapter cannot communicate with the field device. | 504 |
| | 1 | Error HART modem (loop current) | 803 |
| | 2 to 4 | – | – |
| | 5 | The adapter is in the configuration mode. | 508 |
| | 6 | The adapter is looking for connected device. | 903 |
| | 7 | – | – |
| 2 | 0 | The adapter hardware is faulty. | 316 |
| | 1 | The adapter is performing a self-test. | 202 |
| | 2 | The adapter temperature is outside the permitted range. | 825 |
| | 3 | – | – |
| | 4 | The number of write cycles to the flash memory has exceeded a critical threshold. | 314 |
| | 5 | The number of write cycles to the flash memory has exceeded the maximum value. | 315 |
| | 6 to 7 | – | – |
| 3 | 0 to 5 | – | – |
| | 6 | Burst or event notification without field device | 500 |
| | 7 | – | – |
| 4 | 0 | Wired device has additional status information. | 502 |
| | 1 | Wired device not working correctly. | 501 |
| | 2 to 7 | – | – |
| 5 | 0 | Not used | – |
| | 1 | DIP switch 1: Bluetooth communication enabled | 509 |
| | 2 | DIP switch 2: Firmware update enabled | 510 |
| | 3 | DIP switch 3: Configuration via Bluetooth enabled | 511 |
| | 4 | DIP switch 4: Reserve enabled | 512 |
| | 5 | – | – |
| | 6 | Wireless module started. | 905 |
| | 7 | Energy saving mode (< 60° and < 4.0 mA) | 906 |

| Parameter | Beschreibung |
|----------------------------|--|
| Message | Zeigt die eingegebene Nachricht Die Nachricht kann beliebig verwendet werden. Die Nachricht wird auf Anforderung des Masters über das HART-Protokoll gesendet |
| Real Time Clock Time | Zeigt die Netzwerksystemzeit. |
| Real Time Clock Date | Zeigt das Netzwerksystemdatum. |
| Serial Number | Zeigt die Seriennummer des SWA50. |
| Device Revision | Zeigt die Geräte-Version des SWA50. |
| Software Revision | Zeigt die Software-Version des SWA50. |
| Hardware Revision | Zeigt die Hardware-Version des SWA50. |
| Universal Command Revision | Zeigt die HART-Protokollversion, die der SWA50 unterstützt. |
| Ext. Order Code | Zeigt die ausführliche Bestellnummer des SWA50. |
| Order Code | Zeigt die Bestellnummer des SWA50. |
| ENP Version | Zeigt die Version des elektronischen Typenschildes des SWA50. |

12.3 Wireless Communication

Diese Seite zeigt Informationen zum Betrieb des FieldPort SWA50. Die Informationen werden alle fünf Minuten aktualisiert.

Navigation

Diagnosis > Wireless Communication

The screenshot shows the diagnostic interface for the FieldPort SWA50. At the top, the device name is 'WirelessHART FieldPort / SWA50 / V1.xx', the revision is '0', and the status is 'Good'. The 'Wireless Communication' section is active, showing the following parameters:

- Network Identification: 1229
- MAC: 0000000000000000
- Nickname: 0
- Total Number of Neighbours: 0 (Good)

A table for 'Wireless Health Status' is also present, with columns for Index, Nickname, Mean RSL dBm, Packets Transmitted, Failed Transmits, and Packets Received.

Parameterbeschreibung Seite "Wireless Communication"

| Parameter | Beschreibung |
|------------------------|--|
| Network Identification | Zeigt die Identifikationsnummer des Netzwerks, mit dem sich der SWA50 verbindet. |
| MAC | Zeigt die MAC-Adresse des SWA50 . |
| Nickname | Zeigt den Kurznamen des SWA50 für den internen Gebrauch im Netzwerk. |


| Parameter | Beschreibung |
|----------------------------|---|
| Total Number of Neighbours | Zeigt die Anzahl der WirelessHART-Geräte, die in der Umgebung des SWA50 wurden und zu denen eine Verbindung besteht. |
| Wireless Health Status | <p>Zeigt wichtige Parameter zur Netzwerk-Kommunikation</p> <ul style="list-style-type: none"> ▪ Index: Kennung des Nachbar-Geräts ▪ Nickname: Kurzname des Nachbar-Geräts ▪ Mean RSL dBm: Mittlere Signalstärke des Nachbars, seit dem der SWA50 eine Verbindung zum Netzwerk aufgebaut hat ▪ Packets Transmitted: Anzahl der Pakete, die von dem SWA50 versendet wurden, seit dem eine Verbindung zum Netzwerk besteht ▪ Failed Transmits: Anzahl der Pakete, die von dem SWA50 versendet wurden und die ihren Bestimmungsort nach Wiederholungen nicht erreicht haben, seit dem eine Verbindung zum Netzwerk besteht ▪ Packets Received: Anzahl der Pakete, die der SWA50 erhalten hat, seit dem eine Verbindung zum Netzwerk besteht <p>Diese Parameter zeigen die Werte seit dem letzten erfolgreichen Verbindungsaufbau des SWA50 mit dem WirelessHART-Netzwerk. Wird die Verbindung unterbrochen, werden die Werte zurückgesetzt.</p> |

12.4 Wired Communication

Diese Seite zeigt Informationen zum HART-Feldgerät, das an dem FieldPort SWA50 angeschlossen ist.

Navigation

Diagnosis > Wired Communication

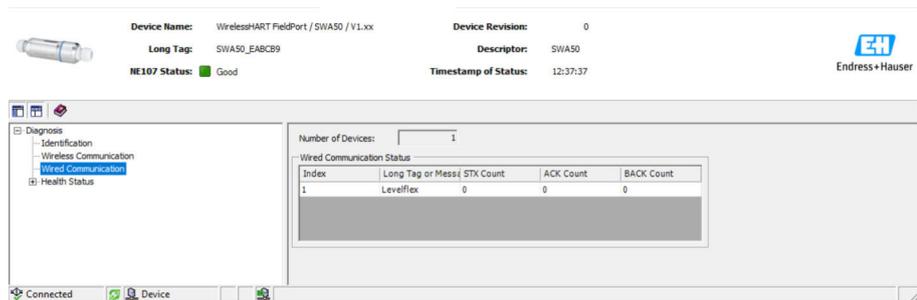

Parameterbeschreibung Seite "Wired Communication"

| Parameter | Beschreibung |
|----------------------------|---|
| Number of Devices | <p>Zeigt folgendes:</p> <ul style="list-style-type: none"> ▪ 0: Kein HART-Feldgerät ist am SWA50 angeschlossen. ▪ 1: Ein HART-Feldgerät ist am SWA50 angeschlossen. |
| Wired Communication Status | <p>Zeigt wichtige Parameter zur Netzwerk-Kommunikation</p> <ul style="list-style-type: none"> ▪ Index: Kennung des angeschlossenen HART-Feldgeräts ▪ Long Tag or Message: Long Tag des angeschlossenen HART-Feldgeräts ▪ STX Count: Anzahl der Rückmeldungen, die der SWA50 von dem angeschlossenen HART-Feldgerät erhalten hat ▪ ACK Count: Anzahl der Rückmeldungen von HART-Feldgeräten, die der SWA50 erhalten hat ▪ BACK Count: Anzahl Burst-Modi |

12.5 Health Status


Diese Seite zeigt Diagnoseinformationen für den FieldPort SWA50 gemäß folgenden Richtlinien und folgender Spezifikation:

- NAMUR-Richtlinie NE 107
- ASM-Richtlinien
- HART-Spezifikation

12.5.1 NAMUR NE 107

Navigation

Diagnosis > Health Status > NAMUR

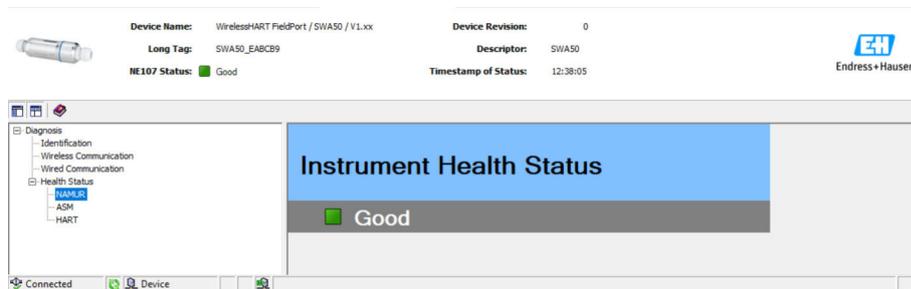


Mögliche Gerätestatus

| Gerätestatus | Übersetzung |
|--------------------------|-----------------------------|
| Good | Gut |
| Failure (F) | Ausfall |
| Maintenance required (M) | Wartungsbedarf |
| Out Of Specification (S) | Außerhalb der Spezifikation |
| Function Check (C) | Funktionskontrolle |

12.5.2 ASM

Navigation

Diagnosis > Health Status > ASM

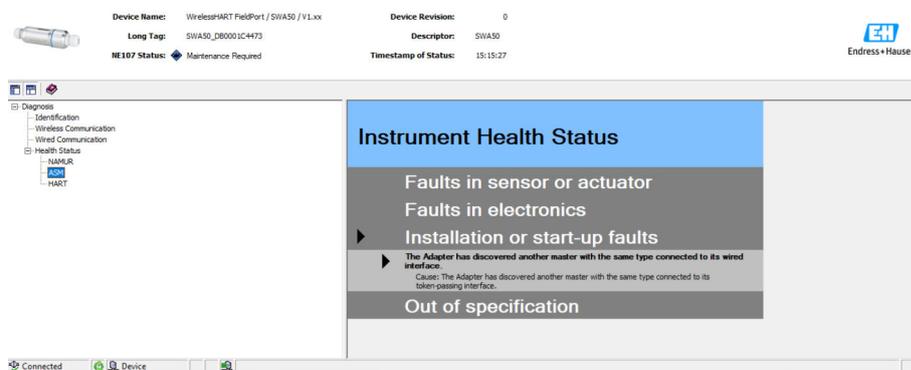


Mögliche Gerätestatus

| Gerätestatus | Übersetzung |
|---|---|
| Good | Gut |
| Faults in the sensor or actuator element | Fehler im Sensor oder in der Stelleinrichtung |
| Faults in the electronics | Fehler in der Elektronik |
| Installation faults, fault during start-up | Installationsfehler, Fehler während der Inbetriebnahme |
| Faults due to process influence, faults due to non-compliance with specified operating conditions | Prozessfehler, Fehler wegen Nichtbeachtung spezifischer Betriebsbedingungen |

12.5.3 HART

Navigation

Diagnose > Health Status > HART

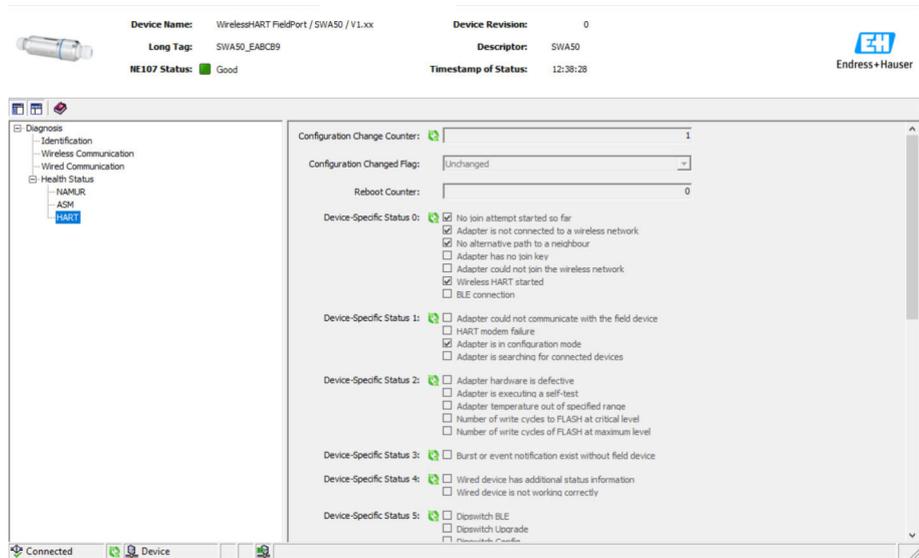

 Wenn ein Kontrollkästchen markiert ist, ist die Aussage zutreffend.

Mögliche Gerätestatus


| Parameter | Beschreibung |
|------------------------------|---|
| Configuration Change Counter | Zeigt die Anzahl der Konfigurationsänderungen |
| Configuration Changed Flag | Zeigt eine Änderung in der Konfiguration seit der letzten Kommunikation |
| Reboot Counter | Zeigt die Anzahl der Neustarts des SWA50 |
| Real Clock Time | Zeigt die Systemuhrzeit |

13 Other DTM functions

13.1 Lock / Unlock

Use this page to protect the FieldPort SWA50 against unauthorized access via the DTM. If locking is enabled and DIP switch 3 is set to "On", configuration via Bluetooth is still possible.

If the "The device is write-protected (Device configuration locked)" option is enabled in the "Standardized Status 0" section, DIP switch 3 is set to "Off" and configuration via Bluetooth is not possible.

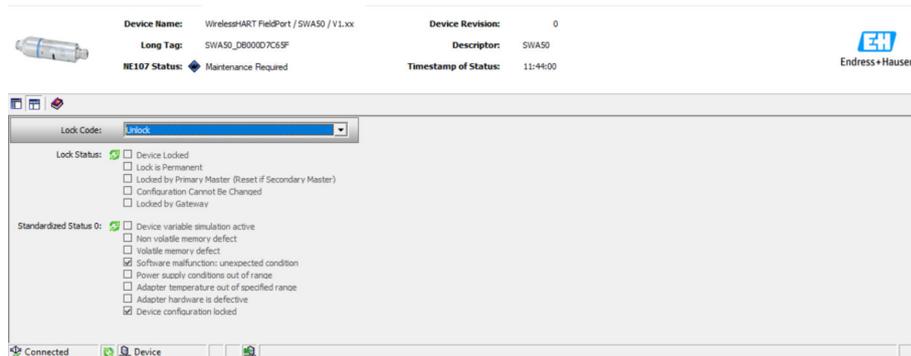

"Lock / Unlock" parameter description page

| Parameter | Description |
|-------------|---|
| Lock Code | <p>Select the type of locking for the DTM to the SWA50.</p> <p>Options</p> <ul style="list-style-type: none"> ■ Unlocked: The SWA50 is unprotected. All parameters can be changed. ■ Lock Temporary: The SWA50 is locked. A restart of the SWA50 or a power outage disables the lock. ■ Lock Permanent: The SWA50 is permanently locked. A restart of the SWA50 or a power outage do not disable the lock. The lock can be lifted via the "Lock Code" parameter. ■ Lock All: The SWA50 is permanently locked for all masters. <p>If you select another option for the "Lock Code" parameter, the new option takes immediate effect.</p> |
| Lock Status | <p>Shows the current access status of the DTM to the SWA50. If a check box is selected, the statement is true.</p> <p>Possible notifications</p> <ul style="list-style-type: none"> ■ Device Locked: SWA50 is locked ■ Lock is Permanent: Permanently locked ■ Locked by Primary Master (Reset if Secondary Master): The SWA50 was locked by the primary master. To unlock the device, the secondary master must restart. ■ Configuration cannot be changed: Configuration cannot be changed ■ Locked by Gateway: The SWA50 is locked by the gateway |

| Lock Code | Lock Status |
|----------------|--|
| Unlocked | - |
| Lock Temporary | Device Locked |
| Lock Permanent | Lock is Permanent |
| Lock All | Device Locked, Locked is permanent and Configuration can not be changed |
| - | Locked by Primary Master (Reset if Secondary Master) Locking was triggered by the primary master. |

| Lock Code | Lock Status |
|-----------|--|
| Lock All | Configuration cannot be changed |
| - | Locked by Gateway Locking was triggered by a gateway. |

14 Diagnostics and troubleshooting

14.1 Diagnostics

If a diagnostic event has occurred, the status signal appears in Netilion together with the corresponding symbol for the event level according to NAMUR NE 107.

- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)

| Diagnostic number | Short text | Corrective measure | Status signal |
|----------------------|---|---|---------------|
| Electronics | | | |
| 202 | Self-test active. | Wait until self-test is completed. | F |
| 314 | Critical number of write cycles to memory reached. | <ul style="list-style-type: none"> ■ Make sure that no cyclic configuration change is automatically sent to the FieldPort. ■ Change the FieldPort. | M |
| 315 | The hardware of the FieldPort is defective. | Change the FieldPort. | F |
| 316 | The hardware of the FieldPort is defective. | Change the FieldPort. | F |
| Configuration | | | |
| 500 | Incorrect entry in the burst/event table | – | M |
| 501 | HART field device not working correctly. | Check the HART field device. | F |
| 502 | Additional status information for HART field device | – | F |
| 503 | WirelessHART connection failed | <ul style="list-style-type: none"> ■ Ensure that a wireless device is within reach. ■ Enter the correct join key. ■ Enter the correct network ID. ■ Ensure that the network is WirelessHART-compatible. | F |
| 504 | FieldPort cannot communicate with the HART field device | <ul style="list-style-type: none"> ■ Connect the HART field device. ■ Check the HART field device and wiring. ■ Check the HART address of the HART field device. ■ Increase the Start-up time. | F |
| 505 | FieldPort does not have a join key. | Enter the join key. | C |
| 506 | FieldPort not connected to the WirelessHART network. | <ul style="list-style-type: none"> ■ Check the Join Key and network ID and connect FieldPort to the network. ■ If FieldPort was already connected, check the signal path. | C |
| 507 | No alternative WirelessHART signal path available. | See the "Diagnostic number 507" description below | – |
| 508 | FieldPort is in the configuration mode | – | – |
| 509 | DIP switch 1: Bluetooth communication enabled | – | – |
| 510 | DIP switch 2: Firmware update enabled | – | – |

| Diagnostic number | Short text | Corrective measure | Status signal |
|-------------------|--|---|---------------|
| 511 | DIP switch 3: Configuration via Bluetooth enabled | – | – |
| 512 | DIP switch 4: Reserve | – | – |
| Process | | | |
| 803 | Loop current | <ul style="list-style-type: none"> ▪ Check wiring. The loop current must be between 3.6 mA and 22.5 mA. ▪ Change HART field device. | F |
| 825 | Operating temperature | <ul style="list-style-type: none"> ▪ Check ambient temperature. ▪ Check process temperature. | S |
| 900 | Bluetooth connected to config. device | – | – |
| 901 | No connection attempt started yet via WirelessHART | Enter the Join Key and network ID and start the join attempt. | – |
| 903 | FieldPort is looking for connected device. | – | – |
| 904 | WirelessHART stack started | – | – |
| 905 | Wireless module started | – | – |
| 906 | Power save mode | – | – |

Diagnostic number 507

To secure communication to the WirelessHART gateway in a WirelessHART network, the gateway specifies that a subscriber may only communicate with one neighbor.

Proceed as follows if you suspect that multiple subscribers in the WirelessHART network have only one neighbor:

1. Check the signal paths of the network subscribers in the WirelessHART gateway.
2. If there are multiple network subscribers with only one neighbor, check the functionality of the subscribers and the signal paths between the subscribers.
3. If necessary, mount a repeater in a suitable position.

14.2 Troubleshooting

| Fault | Measure |
|---|--|
| No communication between HART field device and FieldPort. | Check the settings of the HART parameters in the FieldPort. <ul style="list-style-type: none"> ▪ SmartBlue app: Root menu > System > FieldPort SWA50 > Connectivity > HART Configuration →  52 ▪ Field Xpert and FieldCare: "Wired communication" page →  61 |
| No Bluetooth communication between FieldPort and the SmartBlue app. | Check whether Bluetooth communication is enabled →  43. |
| No Bluetooth communication between FieldPort and Field Xpert. | Check whether Bluetooth communication is enabled →  43. |

| Fault | Measure |
|--|--|
| No process values of HART field devices of other manufacturers in the SmartBlue app. | For third-party HART field devices, use the Field Xpert .  For device variables, see Technical Information TI01468S |
| The FieldPort does not connect to the WirelessHART network. | <ul style="list-style-type: none">▪ It can take several minutes to establish a connection.▪ Check network identification and network access key of the FieldPort and the WirelessHART gateway. The FieldPort and WirelessHART gateway must use the same network identification and network access key.▪ Check if the FieldPort is correctly installed. |

15 Maintenance

15.1 General maintenance

We recommend periodic visual inspections of the device.

15.2 Updating the firmware

You can run firmware updates for the FieldPort SWA50 via the SmartBlue app.

Requirements

- The smartphone battery is charged or the smartphone is connected to a power supply.
- The Bluetooth signal quality of the smartphone is sufficient.
- In the case of the FieldPort SWA50, DIP switch 2 must be set to ON →  43.
(Factory setting of DIP switch 2: ON)

NOTICE

Error during firmware update. The firmware update includes uploading the firmware package and installing the new firmware.

Incorrect firmware installation

- ▶ The supply voltage must be applied during the entire firmware update process.
- ▶ The loop current must be at least 10 mA during the entire firmware update process.
The firmware update includes uploading the firmware package and installing the new firmware.
- ▶ Wait until the firmware update has finished. The firmware update takes approx. 10 to 20 minutes. If the FieldPort SWA50 is actively connected to a WirelessHART network, the firmware download process takes longer.

 At least 10 mA must be generated by the connected HART field device during the firmware update. This can be achieved by simulating the current output at the HART field device, for example. You can check the current value in the SmartBlue app on the "Device information" page. →  44

If a HART field device is not connected to the FieldPort SWA50 or if the HART field device cannot be reached, it is presumed that the loop current is at least 10 mA. In this case, the SmartBlue app shows 20 mA for the loop current. →  32


1. Copy update packages to the SmartBlue app.
2. Open the **Firmware update** page. Navigation: Root menu > System > FieldPort SWA50 > Connectivity > Bluetooth configuration
3. Select update package from the list of available packages.



24 "Firmware update" page

1 Example of a package

4. Tap the **Start update** button to upload the firmware package to the FieldPort SWA50. If the update cannot be uploaded, the error message "Internal firmware update error" is displayed.
5. Wait until the firmware package is uploaded. Uploading of the firmware package takes approx. 5 to 10 minutes. The remaining time is displayed. If the FieldPort SWA50 is actively connected to a WirelessHart network, the upload takes longer.
 - ↳ Once the firmware package has been uploaded successfully, the following view is displayed:

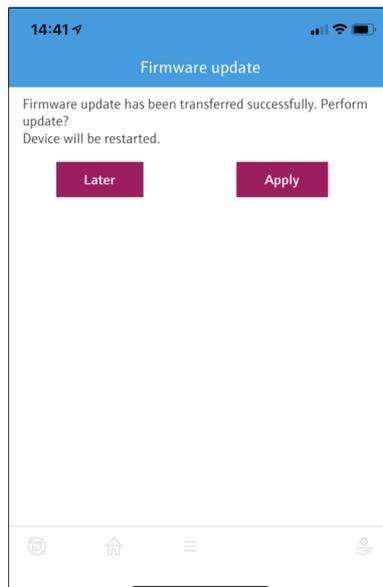

6. Make sure that a loop current of at least 10 mA is present during installation of the new firmware.

7. Tap either the **Apply** button or **Later** button.
 - ↳ **Apply** button: Installation of the new firmware on the FieldPort SWA50 is initiated immediately.
 - Later** button: Installation of the new firmware is initiated the next time the FieldPort SWA50 is restarted.
 8. Wait for installation of the new firmware. During installation of the new firmware, the FieldPort SWA50 or the connected field device disappears from the live list of the SmartBlue app. The device is not displayed in the live list until the firmware has been successfully installed. The installation takes approx. 6 minutes.
 9. Connect the FieldPort SWA50 to the SmartBlue app again.
 10. Use the "Firmware version" parameter to check whether the new firmware is installed. → 📄 55
-  If the firmware package is not fully uploaded or is not correctly installed, the FieldPort SWA50 operates with the old firmware.

16 Repair

16.1 General notes

Repairs may only be performed by Endress+Hauser staff or by individuals authorized and trained by Endress+Hauser.

16.2 Disposal



If required by the Directive 2012/19/EU on waste electrical and electronic equipment (WEEE), the product is marked with the depicted symbol in order to minimize the disposal of WEEE as unsorted municipal waste. Do not dispose of products bearing this marking as unsorted municipal waste. Instead, return them to Endress+Hauser for disposal under the applicable conditions.

17 Accessories

Optional accessories:

Mounting bracket (order number: 71520242)

Detailed information about the accessories is available from your Endress+Hauser sales organization: www.addresses.endress.com or on the product page

18 Technical data



For detailed information on "technical data": see Technical Information TI01468S


19 Appendix

19.1 Menu overview (SmartBlue app navigation)

19.1.1 FieldPort SWA50 with WirelessHART

Pages and parameters that are marked with 1) are only shown for Endress+Hauser devices.

Pages and parameters that are marked with 2) are displayed for a FieldPort to which a field device is connected.

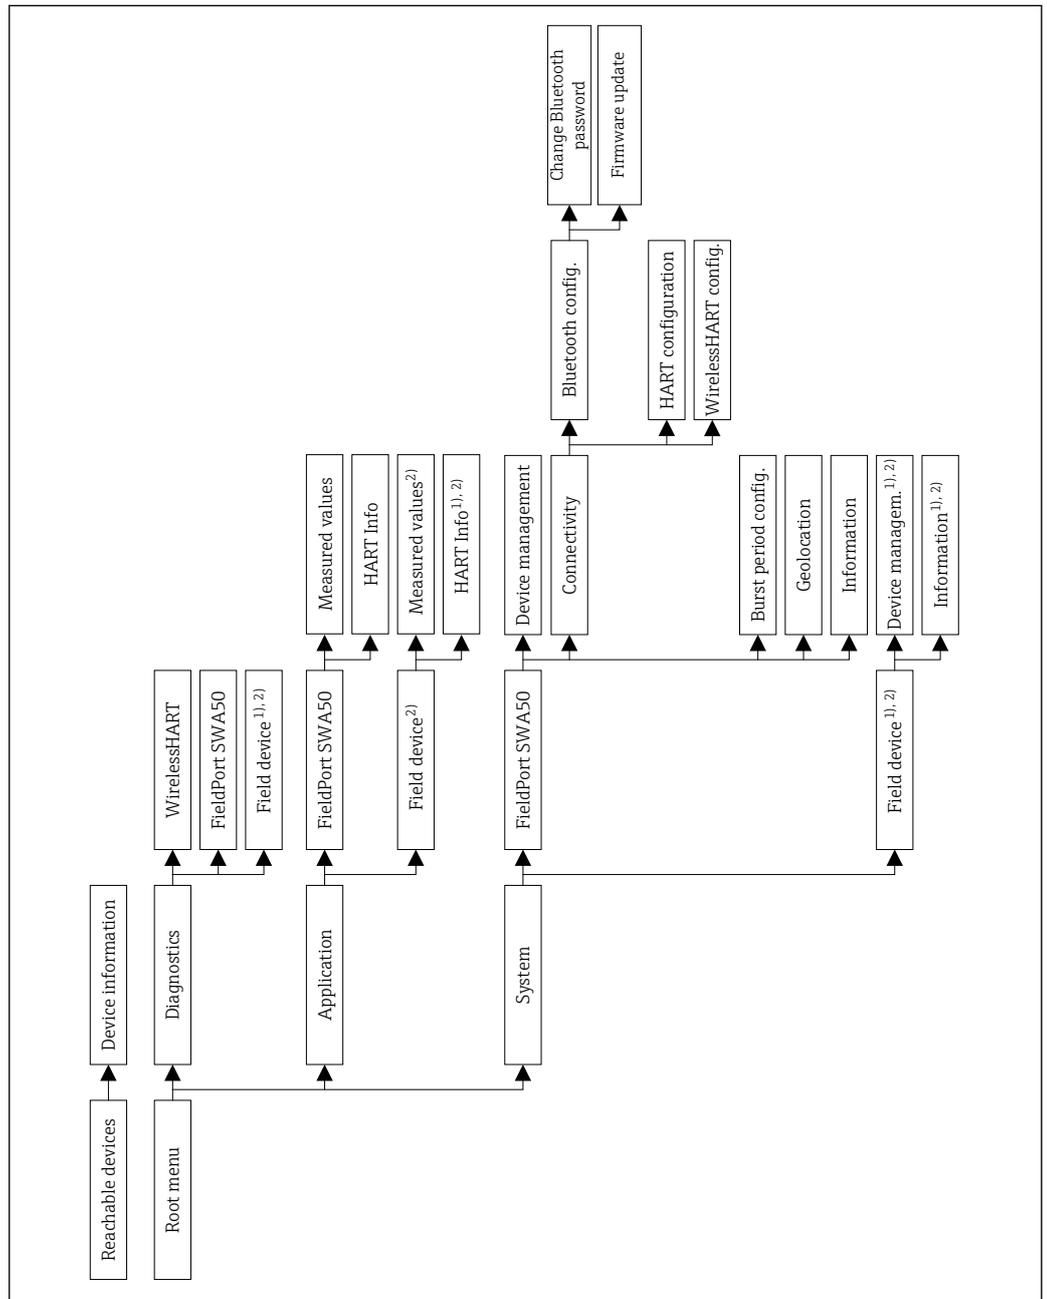

A0043771



71654358

www.addresses.endress.com
