

Description of Device Parameters

Dosimag

Electromagnetic flowmeter

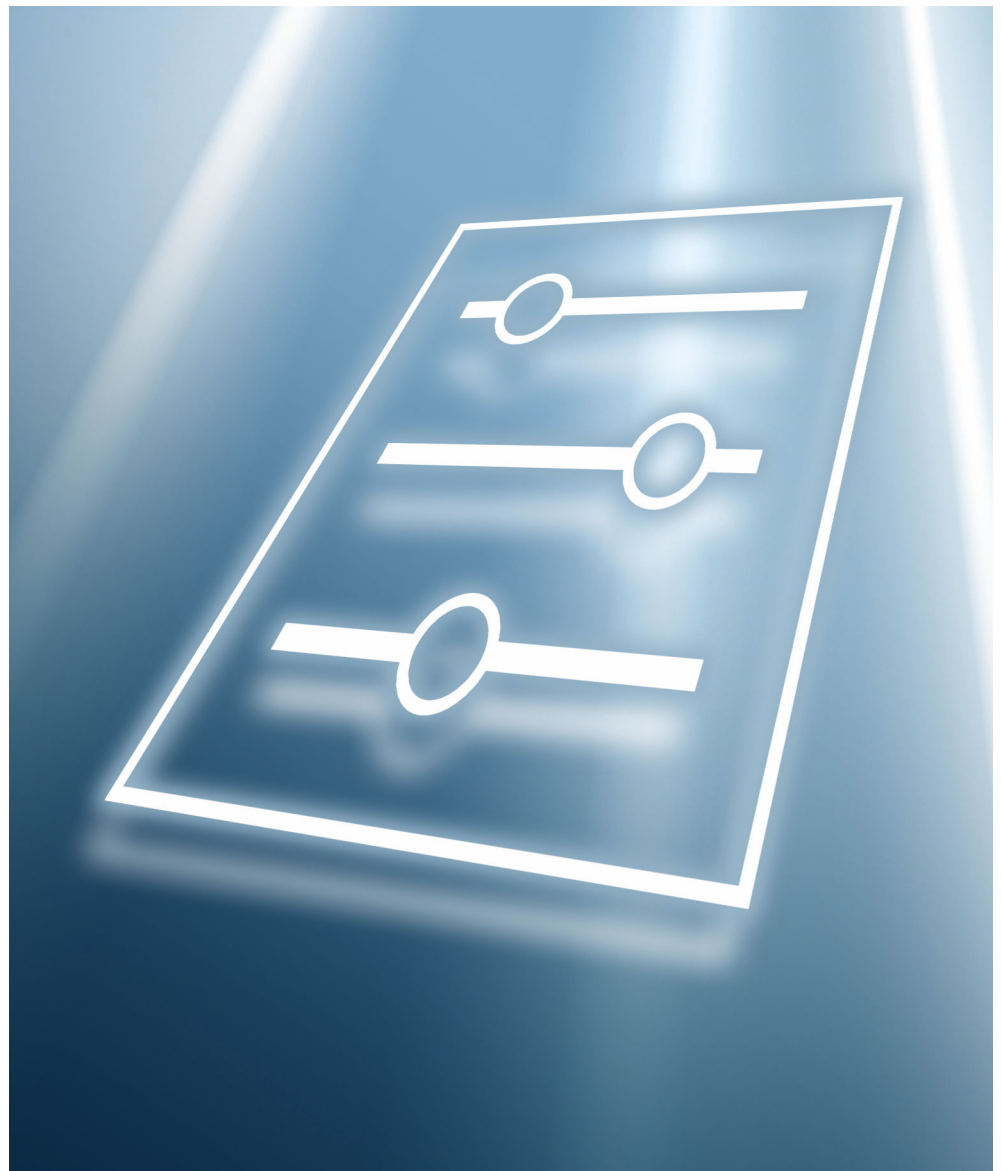


Table of contents

1	About this document	4		
1.1	Document function	4		
1.2	Target group	4		
1.3	Using this document	4		
1.3.1	Symbols	4		
1.3.2	Information on the document structure	4		
1.3.3	Structure of a parameter description ..	5		
1.4	Related documentation	5		
2	"Guidance" menu	6		
2.1	"Commissioning" wizard	6		
2.1.1	Device identification	6		
2.1.2	System units	8		
2.1.3	Totalizer 1 to n	9		
2.1.4	Process	11		
2.1.5	Pulse/frequency/switch output 1 to n	13		
2.1.6	Time format	23		
3	"Diagnostics" menu	24		
3.1	Active diagnostics	25		
3.2	Simulation	27		
3.3	Diagnostic settings	31		
3.3.1	Properties	31		
3.3.2	Diagnostic configuration	31		
4	"Application" menu	36		
4.1	Measured values	36		
4.1.1	Totalizer	37		
4.2	System units	38		
4.3	Totalizers	41		
4.3.1	Totalizer handling	41		
4.3.2	Totalizer 1 to n	41		
4.4	Sensor	45		
4.4.1	Process parameters	45		
4.4.2	Low flow cutoff	47		
4.4.3	Sensor adjustment	50		
4.4.4	Calibration	53		
4.5	Pulse/frequency/switch output 1 to n	55		
5	"System" menu	72		
5.1	Device management	73		
5.2	User management	75		
5.3	Date/time	76		
5.4	Information	77		
5.4.1	Device	77		
5.4.2	Electronic module	80		
6	Country-specific factory settings ...	81		
6.1	SI units	81		
6.1.1	System units	81		
6.1.2	Pulse value	81		
6.1.3	On value low flow cut off	81		
6.2	US units	81		
6.2.1	System units	81		
6.2.2	Pulse value	82		
6.2.3	On value low flow cut off	82		
7	Explanation of abbreviated units ...	83		
7.1	SI units	83		
7.2	US units	83		
7.3	Imperial units	84		
	Index	85		

1 About this document

1.1 Document function

The document is part of the Operating Instructions and serves as a reference for parameters, providing a detailed explanation of each individual parameter of the operating menus.

It is used to perform tasks that require detailed knowledge of the function of the device:

- Optimal adaptation of the measurement to difficult conditions
- Detailed configuration of the communication interface
- Error diagnostics in difficult cases








1.2 Target group

The document is aimed at specialists who work with the device over the entire life cycle and perform specific configurations.

1.3 Using this document





1.3.1 Symbols

Types of information

-  Preferred procedures, processes or actions
-  Permitted procedures, processes or actions
-  Forbidden procedures, processes or actions
-  Additional information
-  Reference to documentation
-  Reference to page
-  Reference to graphic



1.3.2 Information on the document structure

The parameters of all the operating menus and the commissioning wizard are described in this document.

- **Guidance** menu with the **Commissioning** wizard (→  6), which guides the user automatically through all the device parameters that are required for commissioning
- **Application** menu (→  36)
- **Diagnostics** menu (→  24)
- **System** menu (→  72)

1.3.3 Structure of a parameter description

The individual parts of a parameter description are described in the following section:

Complete parameter name	Write-protected parameter = 
Navigation	 <p>Navigation path to the parameter via the operating tool The names of the menus, submenus and parameters are abbreviated to the form in which they appear on the display and in the operating tool.</p>
Prerequisite	The parameter is only available under these specific conditions
Description	Description of the parameter function
Selection	List of the individual options for the parameter <ul style="list-style-type: none"> ■ Option 1 ■ Option 2
User entry	Input range for the parameter
User interface	Display value/data for the parameter
Additional information	Additional explanations (e.g. in examples): <ul style="list-style-type: none"> ■ On individual options ■ On display values/data ■ On the input range ■ On the parameter function

1.4 Related documentation

Technical information	Overview of the device with the most important technical data.
Operating instructions	All the information that is required in the various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal as well as the technical data and dimensions.
Sensor Brief Operating Instructions	Incoming acceptance, transport, storage and mounting of the device.
Transmitter Brief Operating Instructions	Electrical connection and commissioning of the device.
Description of Parameters	Detailed explanation of the menus and parameters.
Safety Instructions	Documents for the use of the device in hazardous areas.
Special Documentation	Documents with more detailed information on specific topics.
Installation Instructions	Installation of spare parts and accessories.


The related documentation is available online:

Device Viewer	On the www.endress.com/deviceviewer website, enter the serial number of the device: nameplate
Endress+Hauser Operations App	<ul style="list-style-type: none"> ▶ Scan the Data Matrix code: nameplate ▶ Enter the serial number of the device: nameplate

2 "Guidance" menu

Main functions for use – from fast and safe commissioning to guided support during operation.

Navigation   Guidance

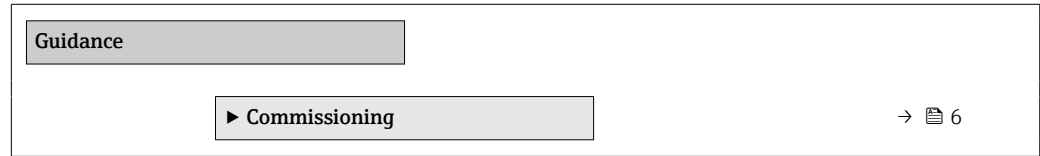

2.1 "Commissioning" wizard


Complete this wizard to commission the device.

For each parameter, enter the appropriate value or select the appropriate option.



NOTE

If you exit the wizard before completing all required parameters, the changes you have made will be saved. For this reason, the device may then be in an undefined state! In this case, a reset to the default settings is recommended.

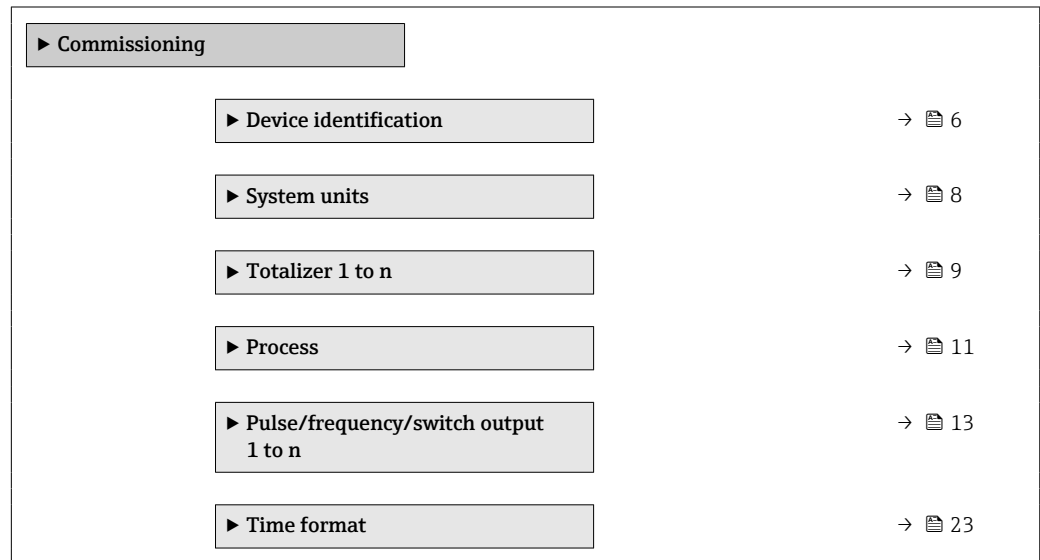Navigation   Guidance → Commissioning



2.1.1 Device identification

Navigation   Guidance → Commissioning → Device ident.

Device tag



Navigation


 Guidance → Commissioning → Device ident. → Device tag

Description

Enter a unique designation for the measuring point to be able to easily identify it within the plant.

User entry Character string comprising numbers, letters and special characters (32)

Serial number


Navigation  Guidance → Commissioning → Device ident. → Serial number

Description Displays the serial number of the measuring device. The serial number is also provided on the nameplate of the sensor and of the transmitter.

The serial number can also be used to retrieve further device-related information and documentation via the Operations app or the Device Viewer on the Endress+Hauser website.

User interface Character string comprising numbers, letters and special characters


Firmware version

Navigation  Guidance → Commissioning → Device ident. → Firmware version

Description Displays the device firmware version installed.

User interface Character string comprising numbers, letters and special characters


Device name

Navigation  Guidance → Commissioning → Device ident. → Device name

Description Displays the name of the transmitter. The transmitter name is also provided on the nameplate of the transmitter.

User interface Character string comprising numbers, letters and special characters

2.1.2 System units

Navigation  Guidance → Commissioning → System units



Volume flow unit

Navigation  Guidance → Commissioning → System units → Volume flow unit

Description Select the volume flow unit.

Selection	<i>SI units</i>	<i>US units</i>	<i>Imperial units</i>
	■ cm ³ /s	■ af/s	■ gal/s (imp)
	■ cm ³ /min	■ af/min	■ gal/min (imp)
	■ cm ³ /h	■ af/h	■ gal/h (imp)
	■ cm ³ /d	■ af/d	■ gal/d (imp)
	■ dm ³ /s	■ ft ³ /s	■ Mgal/s (imp)
	■ dm ³ /min	■ ft ³ /min	■ Mgal/min (imp)
	■ dm ³ /h	■ ft ³ /h	■ Mgal/h (imp)
	■ dm ³ /d	■ ft ³ /d	■ Mgal/d (imp)
	■ m ³ /s	■ fl oz/s (us)	■ bbl/s (imp;beer)
	■ m ³ /min	■ fl oz/min (us)	■ bbl/min (imp;beer)
	■ m ³ /h	■ fl oz/h (us)	■ bbl/h (imp;beer)
	■ m ³ /d	■ fl oz/d (us)	■ bbl/d (imp;beer)
	■ ml/s	■ gal/s (us)	■ bbl/s (imp;oil)
	■ ml/min	■ gal/min (us)	■ bbl/min (imp;oil)
	■ ml/h	■ gal/h (us)	■ bbl/h (imp;oil)
	■ ml/d	■ gal/d (us)	■ bbl/d (imp;oil)
	■ l/s	■ Mgal/s (us)	
	■ l/min	■ Mgal/min (us)	
	■ l/h	■ Mgal/h (us)	
	■ l/d	■ Mgal/d (us)	
	■ hl/s	■ bbl/s (us;liq.)	
	■ hl/min	■ bbl/min (us;liq.)	
	■ hl/h	■ bbl/h (us;liq.)	
	■ hl/d	■ bbl/d (us;liq.)	
	■ Ml/s	■ bbl/s (us;beer)	
	■ Ml/min	■ bbl/min (us;beer)	
	■ Ml/h	■ bbl/h (us;beer)	
	■ Ml/d	■ bbl/d (us;beer)	
		■ bbl/s (us;oil)	
		■ bbl/min (us;oil)	
		■ bbl/h (us;oil)	
		■ bbl/d (us;oil)	
		■ bbl/s (us;tank)	
		■ bbl/min (us;tank)	
		■ bbl/h (us;tank)	
		■ bbl/d (us;tank)	
		■ kgal/s (us)	
		■ kgal/min (us)	
		■ kgal/h (us)	
		■ kgal/d (us)	

Additional information *Options*

 For an explanation of the abbreviated units: →  83

Volume unit



Navigation Guidance → Commissioning → System units → Volume unit

Description Select the volume unit.

- Selection**
- | | | |
|--|--|---|
| <p><i>SI units</i></p> <ul style="list-style-type: none"> ■ cm³ ■ dm³ ■ m³ ■ ml ■ l ■ hl ■ Ml Mega | <p><i>US units</i></p> <ul style="list-style-type: none"> ■ af ■ ft³ ■ fl oz (us) ■ gal (us) ■ kgal (us) ■ Mgal (us) ■ bbl (us;oil) ■ bbl (us;liq.) ■ bbl (us;beer) ■ bbl (us;tank) | <p><i>Imperial units</i></p> <ul style="list-style-type: none"> ■ gal (imp) ■ Mgal (imp) ■ bbl (imp;beer) ■ bbl (imp;oil) |
|--|--|---|

Additional information *Selection*
 For an explanation of the abbreviated units: → 83

2.1.3 Totalizer 1 to n

Navigation Guidance → Commissioning → Totalizer 1 to n

Assign process variable



Navigation Guidance → Commissioning → Totalizer 1 to n → AssignVariab. 1 to n

Description Select a process variable to activate the totalizer.
 If the process variable is changed or the totalizer deactivated, the totalizer is reset to "0".

- Selection**
- Off
 - Volume flow

Process variable unit



Navigation Guidance → Commissioning → Totalizer 1 to n → VariableUnit 1 to n

Description Select the unit for the process variable of the totalizer.

Selection

SI units

- cm³*
- dm³*
- m³*
- ml*
- l*
- hl*
- Ml Mega*

US units

- af*
- ft³*
- Mft³*
- Mft³*
- fl oz (us)*
- gal (us)*
- kgal (us)*
- Mgal (us)*
- bbl (us;liq.)*
- bbl (us;beer)*
- bbl (us;oil)*
- bbl (us;tank)*

Imperial units

- gal (imp)*
- Mgal (imp)*
- bbl (imp;beer)*
- bbl (imp;oil)*

* Visibility depends on order options or device settings

or

Other units

None*

* Visibility depends on order options or device settings

Totalizer operation mode



Navigation

Guidance → Commissioning → Totalizer 1 to n → Operat. mode 1 to n

Description

Select the totalizer operation mode, e.g. only totalize forward flow or only totalize reverse flow.

Selection

- Net
- Forward
- Reverse

Additional information

Selection

- **Net** option
The flow values in the forward and reverse flow directions are totalized and netted against each other. Net flow is recorded in the flow direction.
- **Forward** option
Only the flow in the forward flow direction is totalized.
- **Reverse** option
Only the flow in the reverse flow direction is totalized (= reverse flow quantity).

Totalizer failure behavior



Navigation

Guidance → Commissioning → Totalizer 1 to n → FailureBehav. 1 to n

Description

Specify how the totalizer should behave in the event of a device alarm.


- Selection**
- Hold
 - Continue
 - Last valid value + continue

- Additional information** *Selection*
- **Hold** option
The totalizer is stopped in the event of a device alarm.
 - **Continue** option
The totalizer continues to totalize based on the current value measured; the device alarm is ignored.
 - **Last valid value + continue** option
The totalizer continues to totalize based on the last valid value measured before the device alarm occurred.

2.1.4 Process

Navigation  Guidance → Commissioning → Process


Low flow cutoff

Navigation  Guidance → Commissioning → Process → Low flow cutoff

Description Select a process variable for low flow cutoff to activate low flow cutoff.




- Selection**
- Off
 - Volume flow

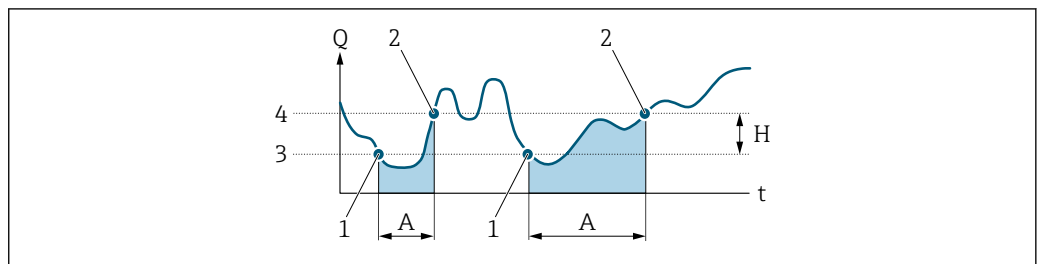
Additional information Description



A0012887

- Q Flow
- t Time
- H Hysteresis
- A Low flow cut off active
- 1 Low flow cut off is activated
- 2 Low flow cut off is deactivated
- 3 On-value entered
- 4 Off-value entered

On value low flow cutoff	
Navigation	 Guidance → Commissioning → Process → On value
Description	Enter on value to switch on low flow cutoff. Value = 0: No low flow cutoff Value > 0: Low flow cutoff is activated
User entry	Positive floating-point number
Off value low flow cutoff	
Navigation	 Guidance → Commissioning → Process → Off value
Description	Enter off value to switch off low flow cutoff. The off value is entered as a positive hysteresis with respect to the on value.
User entry	0 to 100.0 %
Pressure shock suppression	
Navigation	 Guidance → Commissioning → Process → Pres. shock sup.
Description	Enter a time span for signal suppression (= pressure shock suppression active), for example to prevent the device from registering flow movements in the pipe when a valve is closed. Pressure shock suppression is activated when the flow rate drops below the on value for low flow cutoff. Values reported when pressure shock suppression is active: Flow: 0 Totalizer: Last valid value Pressure shock suppression is deactivated when the time span specified has elapsed and the flow rate exceeds the off value for low flow cutoff.
User entry	0 to 100 s
Additional information	<i>Example</i> When a valve is closed, momentarily strong fluid movements may occur in the pipeline, which are registered by the device. These totalized flow values lead to a false totalizer status, particularly during batching processes.

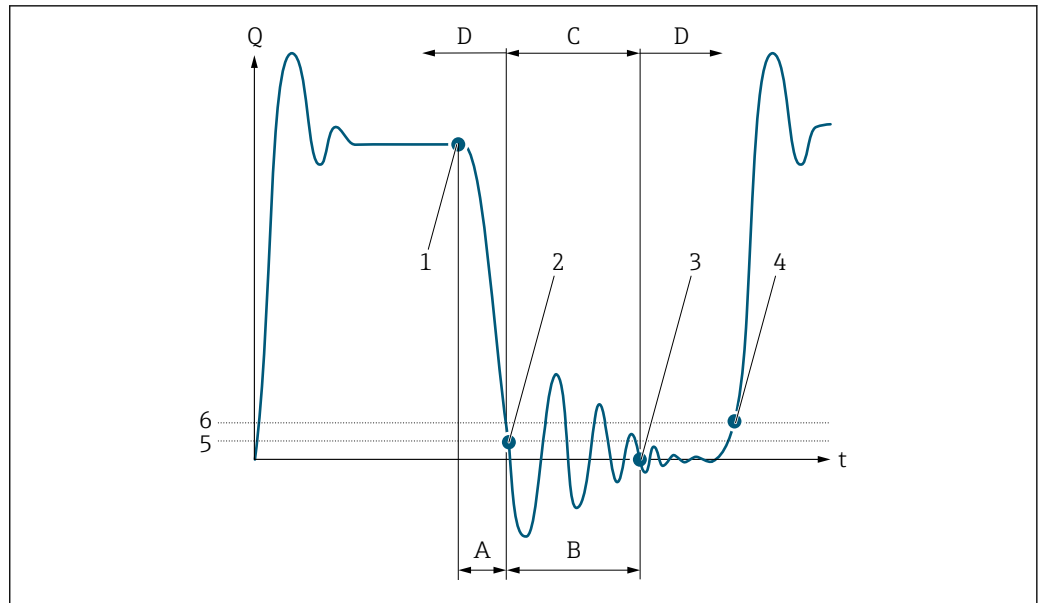

A0012888

- Q Flow
- t Time
- A After run
- B Pressure shock
- C Pressure shock suppression active according to the time entered
- D Pressure shock suppression inactive
- 1 Valve closes
- 2 Flow falls below the on-value of the low flow cut off: pressure shock suppression is activated
- 3 The time entered has elapsed: pressure shock suppression is deactivated
- 4 The current flow value is processed and displayed again.
- 5 On value for low flow cut off
- 6 Off value for low flow cut off

2.1.5 Pulse/frequency/switch output 1 to n

Navigation Guidance → Commissioning → PFS output 1 to n

Operating mode

Navigation Guidance → Commissioning → PFS output 1 to n → Operating mode

Description Select the operating mode for the output.

- Selection
- Off
 - Pulse
 - Automatic pulse
 - Frequency
 - Switch

Additional information


Selection

- **Pulse** option
 Quantitatively proportional pulse with pulse width to be configured. Whenever the pulse value for the specified process variable is reached, a pulse is emitted, the duration of which is set within the "Pulse width" parameter.
 The process variable for the pulse output is specified in the "Assign pulse output" parameter.
- **Automatic pulse** option
 Quantitatively proportional pulse with a fixed 1:1 ratio of pulse-to-interval. Whenever the pulse value for the specified process variable is reached, a pulse is emitted.
 The process variable for the pulse output is specified in the "Assign pulse output" parameter.
- **Frequency** option
 The output frequency is proportional to the value for the process variable assigned, with a pulse-to-interval ratio of 1:1.
 The process variable for the frequency output is specified in the "Assign frequency output" parameter.
- **Switch** option
 Indicates when the state of the device changes, e.g. when a specified limit value is reached or an alarm or warning is triggered.
 The switch output can be in one of two states: either it is conductive or it is non-conductive.
 When the function assigned to the switch output is triggered, the switch output will depending on the output configuration either be continuously conductive or continuously non-conductive.

"Pulse" option

Example

- Flow rate approx. 100 g/s
- Pulse value 0.1 g
- Pulse width 0.05 ms
- Pulse rate 1 000 pulse/s

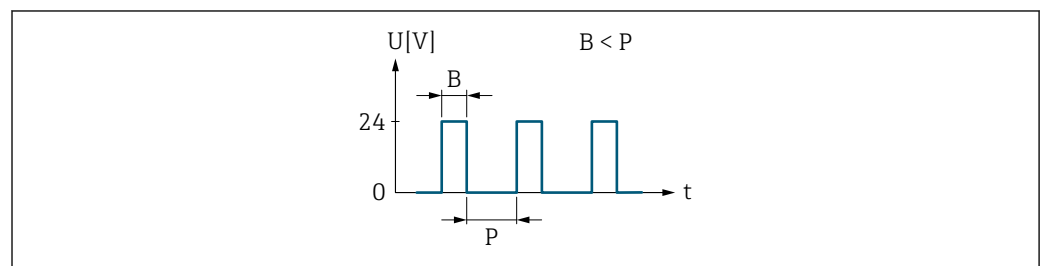

A0026883

1 Quantity-proportional pulse (pulse value) with pulse width to be configured

- B Pulse width entered
- P Pauses between the individual pulses


"Frequency" option

Example

- Flow rate Q approx. 100 g/s
- Min. frequency (f_{min}) 0 Hz
- Max. frequency (f_{max}) 1000 Hz
- Flow rate at min. frequency (Q_{min}) 0 g/s
- Flow rate at max. frequency (Q_{max}) 1000 g/s
- Output frequency (f_{out}) approx. 100 Hz

$$f_{out} = f_{min} + Q \times [(f_{max} - f_{min}) / (Q_{max} - Q_{min})] =$$

$$0 \text{ Hz} + 100 \text{ g/s} \times [(1000 \text{ Hz} - 0 \text{ Hz}) / (1000 \text{ g/s} - 0 \text{ g/s})] = \mathbf{100 \text{ Hz}}$$

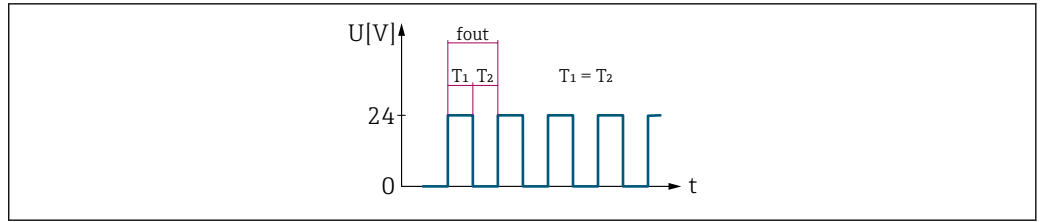


A0026886

2 Flow-proportional frequency output

"Switch" option

Example

Alarm response without alarm

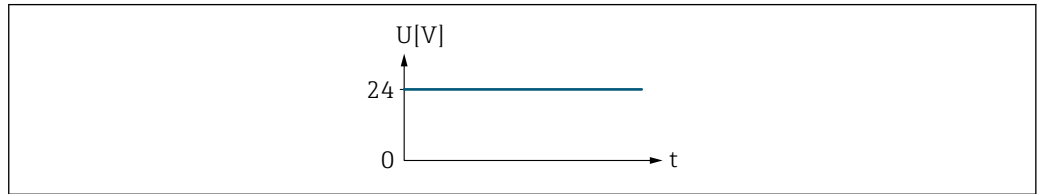


A0026884

3 No alarm, high level

Example

Alarm response in case of alarm

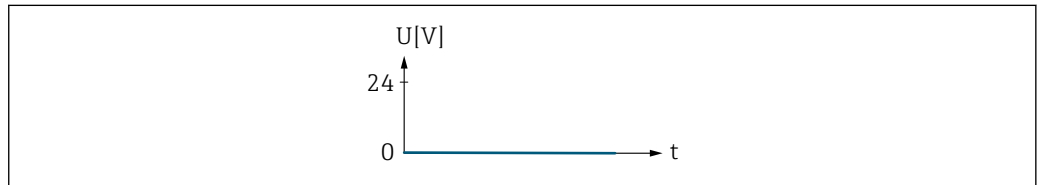

A0026885

4 Alarm, low level

Assign frequency output



Navigation

Guidance → Commissioning → PFS output 1 to n → Assign freq.

Description

Select a process variable for the frequency output.

Selection

- Off
- Volume flow
- Temperature *

* Visibility depends on order options or device settings

Minimum frequency value

**Navigation**

Guidance → Commissioning → PFS output 1 to n → Min. freq. value

Description

Enter the frequency to report for the lower range value of the measured value range.
The lower range value for the measured value range that corresponds to the minimum frequency is specified in the "Measuring value at minimum frequency" parameter.

User entry

0.0 to 10 000.0 Hz

Measuring value at minimum frequency

**Navigation**

Guidance → Commissioning → PFS output 1 to n → Val. at min.freq

Description

Enter the lower range value for the measured value range.
Depending on the setting selected for the "Measuring mode" parameter, the value specified for this parameter and the "Measuring value at maximum frequency" parameter must have the same algebraic sign or not.
As a rule, the lower range value is scaled to be lower than the upper range value. As a result, the behavior of the frequency output is proportional to the process variable assigned. If the lower range value is scaled to be higher than the upper range value, then the behavior of the frequency output will be inversely proportional to the process variable assigned.

User entry

Signed floating-point number

Maximum frequency value

**Navigation**

Guidance → Commissioning → PFS output 1 to n → Max. freq. value

Description

Enter the frequency to report for the upper range value of the measured value range.
The upper range value for the measured value range that corresponds to the maximum frequency is specified in the "Measuring value at maximum frequency" parameter.

User entry

0.0 to 10 000.0 Hz

Measuring value at maximum frequency

**Navigation**

Guidance → Commissioning → PFS output 1 to n → Val. at max.freq

Description

Enter upper range value for the measured value range.

User entry

Signed floating-point number

Failure mode
**Navigation**

Guidance → Commissioning → PFS output 1 to n → Failure mode

Description

Specify how the output should behave in the event of a device alarm.

For safety reasons, it is recommended that the behavior of the output in the event of a device alarm be predefined.

Selection

- Actual value
- Defined value
- 0 Hz

Additional information

Selection

- **Actual value** option
The frequency output continues to report the actual flow rate measured. The fault condition is ignored.
- **Defined value** option
The frequency output reports the value specified.
The value is specified in the "Failure frequency" parameter.
- **0 Hz** option
The frequency output reports 0 Hz.

Failure frequency
**Navigation**

Guidance → Commissioning → PFS output 1 to n → Failure freq.

Description

Enter the value for the "Defined value" option in the "Failure mode" parameter.

User entry

0.0 to 10 000.0 Hz

Assign pulse output
**Navigation**

Guidance → Commissioning → PFS output 1 to n → Assign pulse

Description

Select the process variable for the pulse output.

Selection

- Off
- Volume flow

Pulse width



Navigation

☰ Guidance → Commissioning → PFS output 1 to n → Pulse width

Description

Specify the duration of a pulse.

The maximum pulse rate is defined by $f_{max} = 1 / (2 \times \text{pulse width})$. The interval between two pulses (P) is at least as long as the specified pulse width (B).

The maximum flow is defined by $Q_{max} = f_{max} \times \text{pulse value}$. If the flow exceeds these limit values, the measuring device displays the diagnostic message "443 Pulse output saturated".

Example:

Pulse value: 0.1 g

Pulse width: 0.1 ms

$f_{max}: 1 / (2 \times 0.1 \text{ ms}) = 5 \text{ kHz}$


$Q_{max}: 5 \text{ kHz} \times 0.1 \text{ g} = 0.5 \text{ kg/s}$

User entry

0.05 to 2 000 ms

Additional information

Description

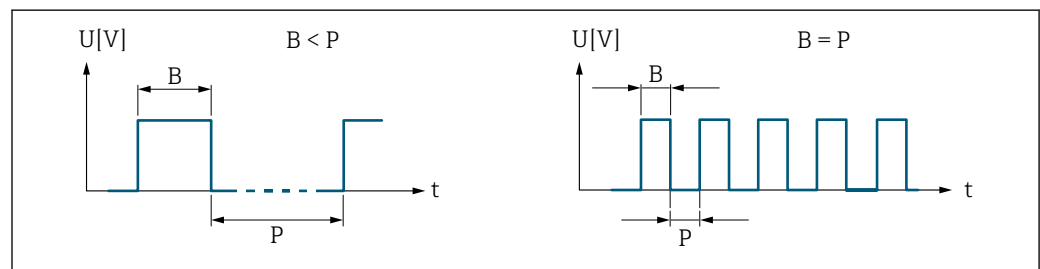

A0026882

B Pulse width entered
P Pauses between the individual pulses

Value per pulse



Navigation

☰ Guidance → Commissioning → PFS output 1 to n → Value per pulse

Description

Enter the measured value that corresponds to one pulse.

The lower the value, the better the resolution and the higher the pulse frequency.

User entry

Signed floating-point number

Switch output function



Navigation

☰ Guidance → Commissioning → PFS output 1 to n → Switch out funct

Description

Assign a function to the switch output.

- Selection**
- Off
 - On
 - Diagnostic behavior
 - Limit
 - Flow direction check
 - Status

- Additional information** *Selection*
- **Off** option
The switch output is permanently switched off (open, non-conductive).
 - **On** option
The switch output is permanently switched on (closed, conductive).
 - **Diagnostic behavior** option
The switch output is switched on (closed, conductive), if there is a pending diagnostic event of the assigned behavioral category.
 - **Limit** option
The switch output is switched on (closed, conductive), if a limit value specified for the process variable is reached.
 - **Flow direction check** option
The switch output is switched on (closed, conductive), when the flow direction changes (forward or reverse flow).
 - **Status** option
The switch output is switched on (closed, conductive) to indicate the status for the selected device function ("Assign status" parameter).

Assign diagnostic behavior



Navigation  Guidance → Commissioning → PFS output 1 to n → Assign diag. beh

Description The switch output is switched on (closed, conductive), if there is a pending diagnostic event of the assigned behavioral category.

- Selection**
- Alarm
 - Alarm or warning
 - Warning

- Additional information** *Selection*
- **Alarm** option
The switch output is only switched on for diagnostic events of the "Alarm" category.
 - **Alarm or warning** option
The switch output is switched on for diagnostic events of the "Alarm" or "Warning" category.
 - **Warning** option
The switch output is only switched on for diagnostic events of the "Warning" category.

Assign limit



Navigation

Guidance → Commissioning → PFS output 1 to n → Assign limit

Description

Select the process variable to monitor in case the specified limit value is exceeded. If a limit value for the selected process variable is exceeded, the output is switched on.

Selection


- Off
- Volume flow
- Flow velocity
- Totalizer 1
- Totalizer 2
- Totalizer 3
- Temperature *

Additional information

Switch-on point > switch-off point

Behavior of the status output if switch-on point > switch-off point:

- Process variable > switch-on point: transistor is conductive
- Process variable < switch-off point: transistor is not conductive

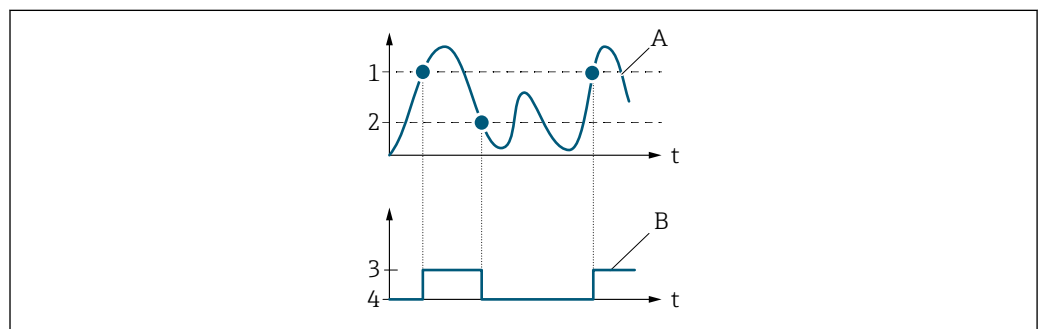

A0026891


- 1 Switch-on value
- 2 Switch-off value
- 3 Conductive
- 4 Non-conductive
- A Process variable
- B Status output

Switch-on point < switch-off point

Behavior of the status output if switch-on point < switch-off point:

- Process variable < switch-on point: transistor is conductive
- Process variable > switch-off point: transistor is not conductive

* Visibility depends on order options or device settings

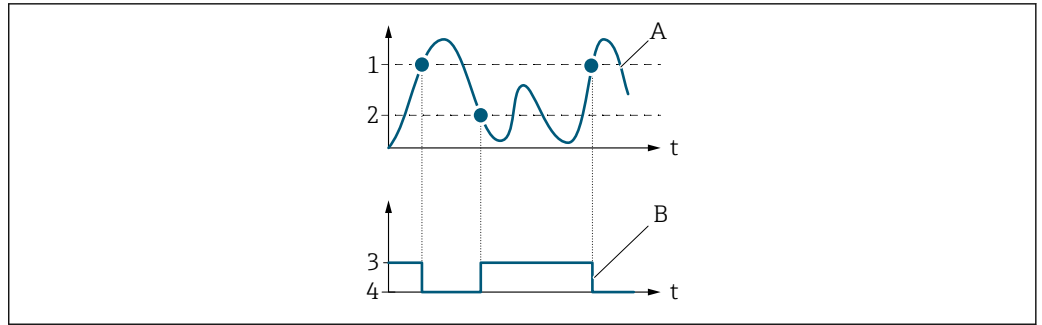


A0026892

- 1 Switch-on value
- 2 Switch-off value
- 3 Conductive
- 4 Non-conductive
- A Process variable
- B Status output

Switch-on point = switch-off point

Behavior of the status output if switch-on point = switch-off point:

- Process variable > switch-on point: transistor is conductive
- Process variable < switch-off point: transistor is not conductive

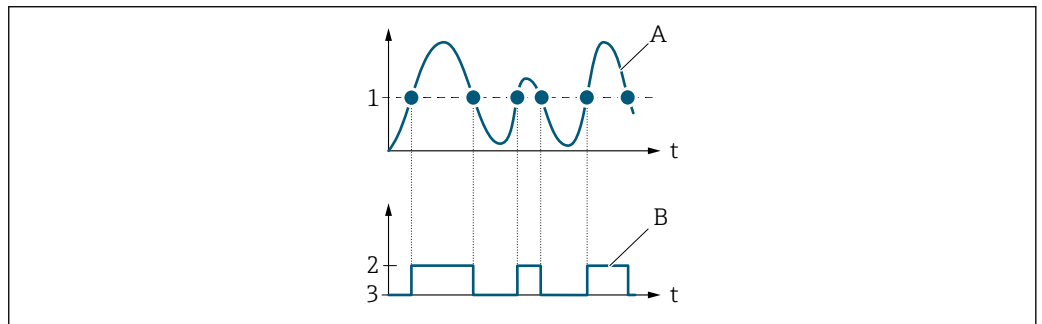

A0026893

- 1 Switch-on point = switch-off point
- 2 Conductive
- 3 Non-conductive
- A Process variable
- B Status output

Switch-on value



Navigation

Guidance → Commissioning → PFS output 1 to n → Switch-on value

Description

Enter the limit value for the switch-on point (process variable > switch-on value = closed, conductive).

To use a hysteresis: Switch-on point > Switch-off point.

User entry

Signed floating-point number

Switch-off value

**Navigation**

Guidance → Commissioning → PFS output 1 to n → Switch-off value

Description

Enter the limit value for the switch-off point (process variable < switch-off value = open, non-conductive).

To use a hysteresis: Switch-on point > Switch-off point.

User entry

Signed floating-point number

Switch-on delay

**Navigation**

Guidance → Commissioning → PFS output 1 to n → Switch-on delay

Description

Enter delay before the switch output is switched on.

User entry

0.0 to 100.0 s

Switch-off delay

**Navigation**

Guidance → Commissioning → PFS output 1 to n → Switch-off delay

Description

Enter delay before the switch output is switched off.

User entry

0.0 to 100.0 s

Assign status

**Navigation**

Guidance → Commissioning → PFS output 1 to n → Assign status

Description

Select the device function for which to report the status.

If the switch-on point for the selected device function is reached, the output is switched on (closed and conductive). Otherwise, the output is non-conductive.

The output behavior can be inverted in the "Invert output signal" parameter, i.e. in this case the output will be non-conductive when switched on and conductive when switched off. The "Invert output signal" parameter is not available for all devices.

Selection

Low flow cutoff

Failure mode
**Navigation**

Guidance → Commissioning → PFS output 1 to n → Failure mode

Description

Specify how the output should behave in the event of a device alarm.

For safety reasons, it is recommended that the behavior of the output in the event of a device alarm be predefined.

Selection

- Actual status
- Open
- Closed

Additional information

Selection

- **Actual status** option

The switch output continues to report the actual state of the switch output based on the function assigned ("Switch output function" parameter). The fault condition is ignored.

- **Open** option

In the event of a device alarm, the switch output's transistor is set to "non-conductive".

2.1.6 Time format

Navigation Guidance → Commissioning → Time format

Time format
**Navigation**

Guidance → Commissioning → Time format → Time format

Description

Select the time format.

Selection

- 24 h
- 12 h AM/PM

Additional information


Selection

For an explanation of the abbreviated units: → 83


3 "Diagnostics" menu

Troubleshooting and preventive maintenance – settings for device behavior during process and device events as well as assistance and measures for diagnostic purposes.




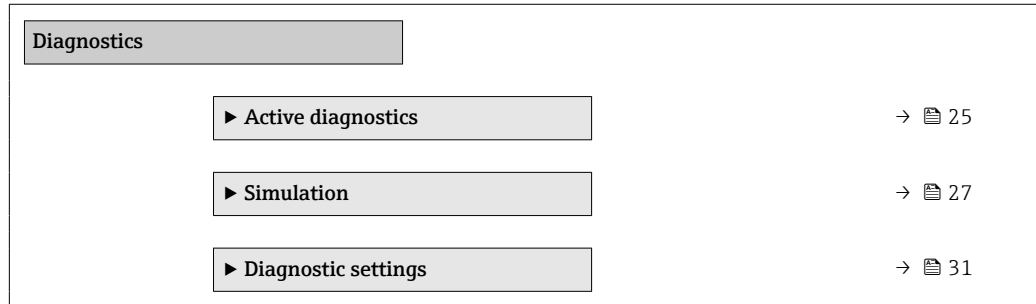


Navigation  Diagnostics




3.1 Active diagnostics

Navigation   Diagnostics → Active diagnos.

▶ Active diagnostics

Actual diagnostics	→  25
Timestamp	→  25
Previous diagnostics	→  25
Timestamp	→  26
Operating time from restart	→  26
Operating time	→  26

Actual diagnostics

Navigation  Diagnostics → Active diagnos. → Actual diagnos.

Prerequisite A diagnostic event has occurred.

Description Displays the currently active diagnostic message.
 If there is more than one pending diagnostic event, the message for the diagnostic event with the highest priority is displayed.

User interface Positive integer

Timestamp

Navigation  Diagnostics → Active diagnos. → Timestamp

Description Displays the timestamp for the currently active diagnostic message.

User interface Days (d), hours (h), minutes (m), seconds (s)

Previous diagnostics


Navigation  Diagnostics → Active diagnos. → Prev.diagnostics

Prerequisite At least two diagnostic events have already occurred.

Description Displays the diagnostic message for the last diagnostic event that has ended.

User interface Positive integer


Timestamp

Navigation  Diagnostics → Active diagnos. → Timestamp

Description Displays the timestamp of the diagnostic message generated for the last diagnostic event that has ended.

User interface Days (d), hours (h), minutes (m), seconds (s)


Operating time from restart

Navigation  Diagnostics → Active diagnos. → Time fr. restart

Description Indicates how long the device has been in operation since the last time the device was restarted.

User interface Days (d), hours (h), minutes (m), seconds (s)

Operating time










Navigation  Diagnostics → Active diagnos. → Operating time

Description Indicates how long the device has been in operation.


User interface Days (d), hours (h), minutes (m), seconds (s)

3.2 Simulation

Navigation  Diagnostics → Simulation

► Simulation	
Assign simulation process variable	→  27
Process value	→  28
Frequency output 1 to n simulation	→  28
Frequency output 1 to n value	→  28
Pulse output simulation 1 to n	→  28
Pulse value 1 to n	→  29
Switch output simulation 1 to n	→  29
Switch state 1 to n	→  29
Device alarm simulation	→  30
Diagnostic event simulation	→  30

Assign simulation process variable

Navigation  Diagnostics → Simulation → Assign proc.var.

Description Select a process variable to activate the simulation.

- Selection**
- Off
 - Volume flow
 - Temperature *

Additional information *Description*
 The display alternates between the measured value and a diagnostics message of the "function check" category (C) when simulation is active.

* Visibility depends on order options or device settings

Process value



Navigation  Diagnostics → Simulation → Process value

Description Enter the process value to simulate.
The unit is set in the "System units" menu.

User entry Signed floating-point number

Frequency output simulation



Navigation  Diagnostics → Simulation → Freq.outp 1 to n sim.

Description Switch simulation of the frequency output on or off.


Selection

- Off
- On

Additional information *Description*
The display alternates between the measured value and a diagnostics message of the "function check" category (C) when simulation is active.

Frequency output value




Navigation  Diagnostics → Simulation → Freq.outp 1 to n val.

Description Enter the frequency to simulate.

User entry 0.0 to 10 000.0 Hz

Pulse output simulation



Navigation  Diagnostics → Simulation → Puls.outp.sim. 1 to n

Description Switch simulation of the pulse output on or off.

Selection

- Off
- Fixed value
- Down-counting value


Additional information *Selection*

- **Fixed value** option
Pulses are emitted continuously with the pulse width specified in the "Pulse width" parameter.
- **Down-counting value** option
The number of pulses specified in the "Pulse value " parameter are emitted.

Description

The display alternates between the measured value and a diagnostics message of the "function check" category (C) when simulation is active.


Pulse value 

Navigation  Diagnostics → Simulation → Pulse value 1 to n

Description Enter the number of pulses to simulate.

User entry 0 to 65 535

Switch output simulation 

Navigation  Diagnostics → Simulation → Switch sim. 1 to n


Description Switch simulation of the switch output on or off.

Selection ■ Off
 ■ On

Additional information *Description*

The display alternates between the measured value and a diagnostics message of the "function check" category (C) when simulation is active.

Switch state 


Navigation  Diagnostics → Simulation → Switch state 1 to n

Description Select the switch state to simulate.


Selection ■ Open
 ■ Closed

Additional information	<i>Selection</i> <ul style="list-style-type: none">▪ Open option The switch output is not conductive.▪ Closed option The switch output is conductive.
-------------------------------	--

Device alarm simulation

Navigation	 Diagnostics → Simulation → Dev. alarm sim.
Description	Switch the device alarm simulation on or off. While simulation is in progress, a diagnostic message of the Function Check (C) category is displayed.
Selection	<ul style="list-style-type: none">▪ Off▪ On



Diagnostic event simulation

Navigation	 Diagnostics → Simulation → Diagnostic event
Description	Select the diagnostic event to simulate.
Selection	Off

3.3 Diagnostic settings

Navigation   Diagnostics → Diag. settings


▶ Diagnostic settings

- ▶ Properties →  31
- ▶ Diagnostic configuration →  31

3.3.1 Properties


Navigation   Diagnostics → Diag. settings → Properties

▶ Properties

- Alarm delay →  31

Alarm delay

Navigation

 Diagnostics → Diag. settings → Properties → Alarm delay



Description

Enter a delay to suppress momentarily pending diagnostic messages.
Only applies to diagnostic events that allow for a delay before the diagnostic message is generated.



User entry

0 to 60 s


3.3.2 Diagnostic configuration


Navigation   Diagnostics → Diag. settings → Diag. config.

▶ Diagnostic configuration

- ▶ Configuration →  32
- ▶ Process →  33

Configuration

Navigation  Diagnostics → Diag. settings → Diag. config. → Configuration

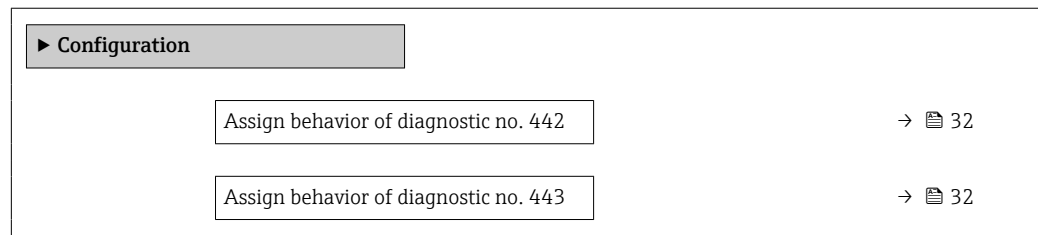

Assign behavior of diagnostic no. 442

Navigation  Diagnostics → Diag. settings → Diag. config. → Configuration → Diagnostic no. 442

Description Select behavior for diagnostic event "442 Frequency output faulty".

- Selection**
- Off
 - Alarm
 - Warning
 - Logbook entry only

- Additional information** *Selection*
- **Off** option
The diagnostic event is ignored and no diagnostic message is generated or logged.
 - **Alarm** option
The device stops measuring. The signal outputs and totalizers assume the specified alarm condition. A diagnostic message is generated.
 - **Warning** option
The device continues measuring. The signal outputs and totalizers are not affected. A diagnostic message is generated.
 - **Logbook entry only** option
The device continues measuring. The diagnostic message is only displayed in the "Event logbook" submenu and does not alternate with the standard operational information displayed.

Assign behavior of diagnostic no. 443

Navigation  Diagnostics → Diag. settings → Diag. config. → Configuration → Diagnostic no. 443

Description Select behavior for diagnostic event "443 Pulse output faulty".

- Selection**
- Off
 - Alarm
 - Warning
 - Logbook entry only



Additional information

Selection





- **Off** option
The diagnostic event is ignored and no diagnostic message is generated or logged.
- **Alarm** option
The device stops measuring. The signal outputs and totalizers assume the specified alarm condition. A diagnostic message is generated.
- **Warning** option
The device continues measuring. The signal outputs and totalizers are not affected. A diagnostic message is generated.
- **Logbook entry only** option
The device continues measuring. The diagnostic message is only displayed in the "Event logbook" submenu and does not alternate with the standard operational information displayed.

Process

Navigation

  Diagnostics → Diag. settings → Diag. config. → Process


▶ Process

Assign behavior of diagnostic no. 842	→  33
Assign behavior of diagnostic no. 937	→  34
Assign behavior of diagnostic no. 938	→  34
Assign behavior of diagnostic no. 961	→  35

Assign behavior of diagnostic no. 842



Navigation

 Diagnostics → Diag. settings → Diag. config. → Process → Diagnostic no. 842

Description

Select behavior for diagnostic event "842 Process value below limit".

Selection

- Off
- Alarm
- Warning
- Logbook entry only

Additional information	<i>Selection</i> <ul style="list-style-type: none"> ▪ Off option The diagnostic event is ignored and no diagnostic message is generated or logged. ▪ Alarm option The device stops measuring. The signal outputs and totalizers assume the specified alarm condition. A diagnostic message is generated. ▪ Warning option The device continues measuring. The signal outputs and totalizers are not affected. A diagnostic message is generated. ▪ Logbook entry only option The device continues measuring. The diagnostic message is only displayed in the "Event logbook" submenu and does not alternate with the standard operational information displayed.
-------------------------------	--

Assign behavior of diagnostic no. 937


Navigation	Diagnostics → Diag. settings → Diag. config. → Process → Diagnostic no. 937
Description	Select behavior for diagnostic event "937 Sensor symmetry".
Selection	<ul style="list-style-type: none"> ▪ Off ▪ Alarm ▪ Warning ▪ Logbook entry only

Additional information	<i>Selection</i> <ul style="list-style-type: none"> ▪ Off option The diagnostic event is ignored and no diagnostic message is generated or logged. ▪ Alarm option The device stops measuring. The signal outputs and totalizers assume the specified alarm condition. A diagnostic message is generated. ▪ Warning option The device continues measuring. The signal outputs and totalizers are not affected. A diagnostic message is generated. ▪ Logbook entry only option The device continues measuring. The diagnostic message is only displayed in the "Event logbook" submenu and does not alternate with the standard operational information displayed.
-------------------------------	--

Assign behavior of diagnostic no. 938


Navigation	Diagnostics → Diag. settings → Diag. config. → Process → Diagnostic no. 938
Description	Select behavior for diagnostic event "938 Coil current not stable".
Selection	<ul style="list-style-type: none"> ▪ Off ▪ Alarm ▪ Warning ▪ Logbook entry only

Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ■ Off option The diagnostic event is ignored and no diagnostic message is generated or logged. ■ Alarm option The device stops measuring. The signal outputs and totalizers assume the specified alarm condition. A diagnostic message is generated. ■ Warning option The device continues measuring. The signal outputs and totalizers are not affected. A diagnostic message is generated. ■ Logbook entry only option The device continues measuring. The diagnostic message is only displayed in the "Event logbook" submenu and does not alternate with the standard operational information displayed.
-------------------------------	---

Assign behavior of diagnostic no. 961








Navigation	Diagnostics → Diag. settings → Diag. config. → Process → Diagnostic no. 961
Description	Select behavior for diagnostic event "961 Electrode potential out of specification".
Selection	<ul style="list-style-type: none"> ■ Off ■ Alarm ■ Warning ■ Logbook entry only
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ■ Off option The diagnostic event is ignored and no diagnostic message is generated or logged. ■ Alarm option The device stops measuring. The signal outputs and totalizers assume the specified alarm condition. A diagnostic message is generated. ■ Warning option The device continues measuring. The signal outputs and totalizers are not affected. A diagnostic message is generated. ■ Logbook entry only option The device continues measuring. The diagnostic message is only displayed in the "Event logbook" submenu and does not alternate with the standard operational information displayed.

4 "Application" menu



Targeted optimization to the application – comprehensive device settings from sensor technology to system integration for optimum application adaptation.

Navigation  Application

Application	
▶ Measured values	→  36
▶ System units	→  38
▶ Totalizers	→  41
▶ Sensor	→  45
▶ Pulse/frequency/switch output 1 to n	→  55

4.1 Measured values

Navigation  Application → Measured values

▶ Measured values	
Volume flow	→  36
▶ Totalizer	→  37

Volume flow


Navigation  Application → Measured values → Volume flow

Description Displays the volume flow measured.
The unit is set in the "System units" menu.


User interface Signed floating-point number

4.1.1 Totalizer


Navigation  Application → Measured values → Totalizer

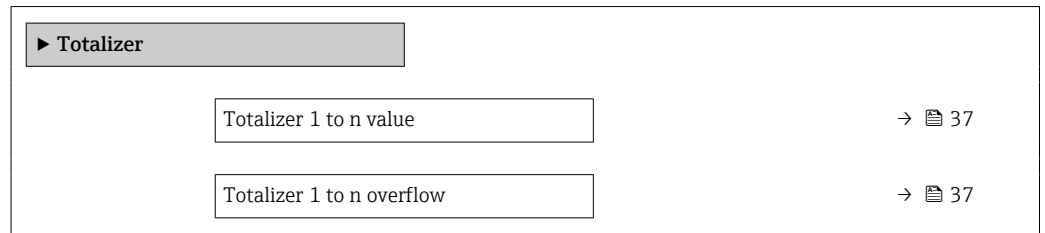

Totalizer value


Navigation	 Application → Measured values → Totalizer → Tot. 1 to n value
Prerequisite	A process variable has been selected in the Assign process variable parameter in the Totalizer 1 to n submenu.
Description	<p>Displays the totalizer counter since the last reset.</p> <p>This parameter can only display figures up to 7 digits. If the counter exceeds this range, the overflow is displayed in the "Totalizer overflow" parameter.</p> <p>Example:</p> <p>Value of "Totalizer value" parameter: 1,968,457 m³ Value of "Totalizer overflow" parameter: 1×10^7 (1 overflow) = 10,000,000 m³ Counter (total): 11,968,457 m³</p> <p>In the event of a fault condition, the totalizer behaves as specified in the "Totalizer failure behavior" parameter.</p>
User interface	Signed floating-point number

Totalizer overflow

Navigation	 Application → Measured values → Totalizer → Tot. 1 to n overflow
Prerequisite	A process variable has been selected in the Assign process variable parameter in the Totalizer 1 to n submenu.
Description	Displays the number of overflows for the totalizer counter ("Totalizer value" parameter).
User interface	-32 000.0 to 32 000.0

4.2 System units

Navigation  Application → System units

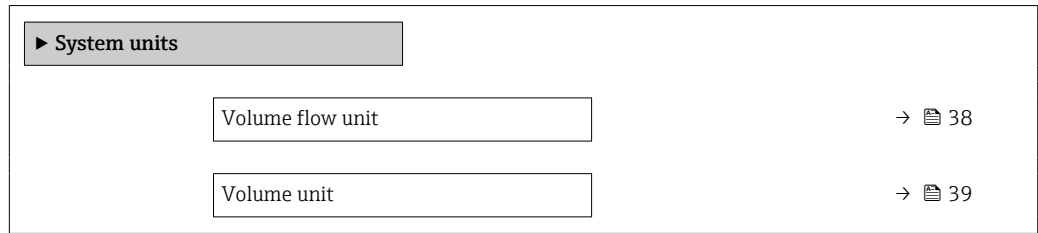

Volume flow unit

Navigation  Application → System units → Volume flow unit

Description Select the volume flow unit.

Selection

SI units

- cm³/s
- cm³/min
- cm³/h
- cm³/d
- dm³/s
- dm³/min
- dm³/h
- dm³/d
- m³/s
- m³/min
- m³/h
- m³/d
- ml/s
- ml/min
- ml/h
- ml/d
- l/s
- l/min
- l/h
- l/d
- hl/s
- hl/min
- hl/h
- hl/d
- Ml/s
- Ml/min
- Ml/h
- Ml/d

US units



- af/s
- af/min
- af/h
- af/d
- ft³/s
- ft³/min
- ft³/h
- ft³/d
- fl oz/s (us)
- fl oz/min (us)
- fl oz/h (us)
- fl oz/d (us)
- gal/s (us)
- gal/min (us)
- gal/h (us)
- gal/d (us)
- Mgal/s (us)
- Mgal/min (us)
- Mgal/h (us)
- Mgal/d (us)
- bbl/s (us;liq.)
- bbl/min (us;liq.)
- bbl/h (us;liq.)
- bbl/d (us;liq.)
- bbl/s (us;beer)
- bbl/min (us;beer)
- bbl/h (us;beer)
- bbl/d (us;beer)
- bbl/s (us;oil)
- bbl/min (us;oil)
- bbl/h (us;oil)
- bbl/d (us;oil)
- bbl/s (us;tank)
- bbl/min (us;tank)
- bbl/h (us;tank)
- bbl/d (us;tank)
- kgal/s (us)
- kgal/min (us)
- kgal/h (us)
- kgal/d (us)

Imperial units

- gal/s (imp)
- gal/min (imp)
- gal/h (imp)
- gal/d (imp)
- Mgal/s (imp)
- Mgal/min (imp)
- Mgal/h (imp)
- Mgal/d (imp)
- bbl/s (imp;beer)
- bbl/min (imp;beer)
- bbl/h (imp;beer)
- bbl/d (imp;beer)
- bbl/s (imp;oil)
- bbl/min (imp;oil)
- bbl/h (imp;oil)
- bbl/d (imp;oil)

Additional information

Options

 For an explanation of the abbreviated units: →  83

Volume unit



Navigation

 Application → System units → Volume unit

Description

Select the volume unit.

Selection*SI units*

- cm³
- dm³
- m³
- ml
- l
- hl
- Ml Mega



US units

- af
- ft³
- fl oz (us)
- gal (us)
- kgal (us)
- Mgal (us)
- bbl (us;oil)
- bbl (us;liq.)
- bbl (us;beer)
- bbl (us;tank)

Imperial units

- gal (imp)
- Mgal (imp)
- bbl (imp;beer)
- bbl (imp;oil)


Additional information*Selection*


 For an explanation of the abbreviated units: →  83

4.3 Totalizers



Navigation   Application → Totalizers

▶ Totalizers


▶ Totalizer handling →  41

▶ Totalizer 1 to n →  41


4.3.1 Totalizer handling

Navigation   Application → Totalizers → Totalizer



▶ Totalizer handling

Reset all totalizers →  41


Reset all totalizers


Navigation	 Application → Totalizers → Totalizer → Reset all tot.
Description	Reset all totalizers to "0" and restart the totalizers. The counter readings are not logged prior to the reset.
Selection	<ul style="list-style-type: none"> ■ Cancel ■ Reset + totalize


4.3.2 Totalizer 1 to n


Navigation   Application → Totalizers → Totalizer 1 to n

▶ Totalizer 1 to n

Assign process variable 1 to n →  42

Process variable unit 1 to n →  42

Totalizer 1 to n operation mode →  43

Totalizer 1 to n control →  43

Preset value 1 to n	→ 44
Totalizer 1 to n failure behavior	→ 44

Assign process variable



Navigation

Application → Totalizers → Totalizer 1 to n → AssignVariab. 1 to n

Description

Select a process variable to activate the totalizer.
If the process variable is changed or the totalizer deactivated, the totalizer is reset to "0".

Selection

- Off
- Volume flow

Process variable unit



Navigation

Application → Totalizers → Totalizer 1 to n → VariableUnit 1 to n

Description

Select the unit for the process variable of the totalizer.

Selection

- | | | |
|---|--|---|
| <p><i>SI units</i></p> <ul style="list-style-type: none"> ■ cm³* ■ dm³* ■ m³* ■ ml* ■ l* ■ hl* ■ Ml Mega* | <p><i>US units</i></p> <ul style="list-style-type: none"> ■ af* ■ ft³* ■ Mft³* ■ Mft³* ■ fl oz (us)* ■ gal (us)* ■ kgal (us)* ■ Mgal (us)* ■ bbl (us;liq.)* ■ bbl (us;beer)* ■ bbl (us;oil)* ■ bbl (us;tank)* | <p><i>Imperial units</i></p> <ul style="list-style-type: none"> ■ gal (imp)* ■ Mgal (imp)* ■ bbl (imp;beer)* ■ bbl (imp;oil)* |
|---|--|---|

* Visibility depends on order options or device settings

or

Other units
None*

* Visibility depends on order options or device settings

Totalizer operation mode





Navigation	Application → Totalizers → Totalizer 1 to n → Operat. mode 1 to n
Description	Select the totalizer operation mode, e.g. only totalize forward flow or only totalize reverse flow.
Selection	<ul style="list-style-type: none"> ■ Net ■ Forward ■ Reverse
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ■ Net option The flow values in the forward and reverse flow directions are totalized and netted against each other. Net flow is recorded in the flow direction. ■ Forward option Only the flow in the forward flow direction is totalized. ■ Reverse option Only the flow in the reverse flow direction is totalized (= reverse flow quantity).

Totalizer control


Navigation	Application → Totalizers → Totalizer 1 to n → Tot. 1 to n control
Prerequisite	A process variable has been selected in the Assign process variable parameter in the Totalizer 1 to n submenu.
Description	Operate the totalizer.
Selection	<ul style="list-style-type: none"> ■ Totalize ■ Reset + hold ■ Preset + hold ■ Reset + totalize ■ Preset + totalize ■ Hold
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ■ Totalize option The totalizer is started or continues running. ■ Reset + hold option The totalizer is reset to "0" and stopped. ■ Preset + hold option The totalizer is stopped and set to the start value specified in the "Preset value " parameter. ■ Reset + totalize option The totalizer is reset to "0" and restarted. ■ Preset + totalize option The totalizer is stopped and set to the start value specified in the "Preset value " parameter. ■ Hold option The totalizer is stopped.

Preset value

Navigation	 Application → Totalizers → Totalizer 1 to n → Preset value 1 to n
Prerequisite	A process variable has been selected in the Assign process variable parameter in the Totalizer 1 to n submenu.
Description	Specify a start value for the totalizer.
User entry	Signed floating-point number
Additional information	<p><i>Description</i></p> <p>The unit of the selected process variable is specified for the totalizer in the Unit totalizer parameter (→  9).</p> <p><i>Example</i></p> <p>This configuration is suitable for applications such as iterative filling processes with a fixed batch quantity.</p>





Totalizer failure behavior



Navigation	 Application → Totalizers → Totalizer 1 to n → FailureBehav. 1 to n
Description	Specify how the totalizer should behave in the event of a device alarm.
Selection	<ul style="list-style-type: none"> ■ Hold ■ Continue ■ Last valid value + continue
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ■ Hold option The totalizer is stopped in the event of a device alarm. ■ Continue option The totalizer continues to totalize based on the current value measured; the device alarm is ignored. ■ Last valid value + continue option The totalizer continues to totalize based on the last valid value measured before the device alarm occurred.






4.4 Sensor

Navigation  Application → Sensor

▶ Sensor	
▶ Process parameters	→  45
▶ Low flow cutoff	→  47
▶ Sensor adjustment	→  50
▶ Calibration	→  53


4.4.1 Process parameters

Navigation  Application → Sensor → Process param.

▶ Process parameters	
Binomial filter depth	→  45
Median filter depth	→  46
Flow damping	→  46
Flow override	→  46
Coil current mode	→  47

Binomial filter depth

Navigation

 Application → Sensor → Process param. → Binomial filter


Description

Set the binomial filter depth (0 - 32). As the filter depth increases, so does the reaction time of the device, i.e. flow damping increases (0 = off).


User entry

0 to 32




Median filter depth 

Navigation	 Application → Sensor → Process param. → Median filter
Description	Set the filter depth to reduce the sensitivity of the measuring signal to interference peaks. Value = 0: No damping Value > 0: Damping increases
User entry	0 to 32

Flow damping 

Navigation	 Application → Sensor → Process param. → Flow damping
Description	Enter a time constant for flow damping. Value = 0: No damping Value > 0: Damping increases Damping is implemented by means of a proportional transmission behavior with first order delay (PT1 element).
User entry	0.0 to 100.0 s

Flow override 

Navigation	 Application → Sensor → Process param. → Flow override
Description	Reports the flow rate as zero until flow override is deactivated. Can be used for example when cleaning the pipeline.
Selection	<ul style="list-style-type: none"> ■ Off ■ On
Additional information	<p><i>Selection</i></p> <p>"On" option Activates flow override and the diagnostic message "453 Flow override active" is generated. Values reported: Flow variables: Zero Other process variables: As measured Totalizers: Stop totalizing</p> <p><i>Effect</i></p> <p> This setting affects all the functions of the measuring device.</p> <p> Positive zero return is not relevant for most applications.</p>

Coil current mode



Navigation Application → Sensor → Process param. → CoilCurrentMode

Description Select the coil current mode.

- Selection**
- Automatic
 - Standard
 - Low

Additional information *Selection*

- **Automatic** option
Reduced power consumption for cleaning processes at high temperatures
- **Standard** option
Nominal power consumption
- **Low** option
Reduced power consumption

4.4.2 Low flow cutoff

Low flow cut off is an important function for many applications to shut out inherent noise from the measuring device and the application in the lower measuring range. If the flow drops below a certain minimum value, the value is set to **0** so that the flow signal can be kept at the zero point between two batches.

Navigation Application → Sensor → Low flow cutoff

▶ **Low flow cutoff**

Low flow cutoff	→ 47
On value low flow cutoff	→ 48
Off value low flow cutoff	→ 48
Pressure shock suppression	→ 49
Pressure shock suppression delay	→ 50

Low flow cutoff




Navigation Application → Sensor → Low flow cutoff → Low flow cutoff

Description Select a process variable for low flow cutoff to activate low flow cutoff.

- Selection**
- Off
 - Volume flow

Additional information Description

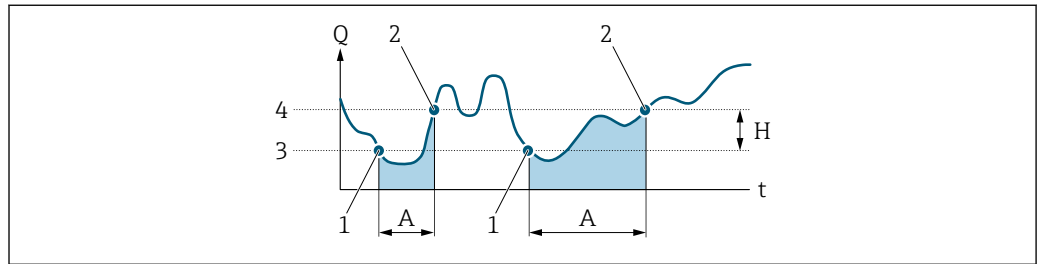

A0012887

- Q* Flow
- t* Time
- H* Hysteresis
- A* Low flow cut off active
- 1* Low flow cut off is activated
- 2* Low flow cut off is deactivated
- 3* On-value entered
- 4* Off-value entered

On value low flow cutoff



Navigation Application → Sensor → Low flow cutoff → On value

Description Enter on value to switch on low flow cutoff.
 Value = 0: No low flow cutoff
 Value > 0: Low flow cutoff is activated

User entry Positive floating-point number

Off value low flow cutoff



Navigation Application → Sensor → Low flow cutoff → Off value

Description Enter off value to switch off low flow cutoff. The off value is entered as a positive hysteresis with respect to the on value.

User entry 0 to 100.0 %

Pressure shock suppression



Navigation

☰ Application → Sensor → Low flow cutoff → Pres. shock sup.

Description

Enter a time span for signal suppression (= pressure shock suppression active), for example to prevent the device from registering flow movements in the pipe when a valve is closed.

Pressure shock suppression is activated when the flow rate drops below the on value for low flow cutoff.

Values reported when pressure shock suppression is active:

Flow: 0

Totalizer: Last valid value

Pressure shock suppression is deactivated when the time span specified has elapsed and the flow rate exceeds the off value for low flow cutoff.


User entry

0 to 100 s

Additional information

Example

When a valve is closed, momentarily strong fluid movements may occur in the pipeline, which are registered by the device. These totalized flow values lead to a false totalizer status, particularly during batching processes.

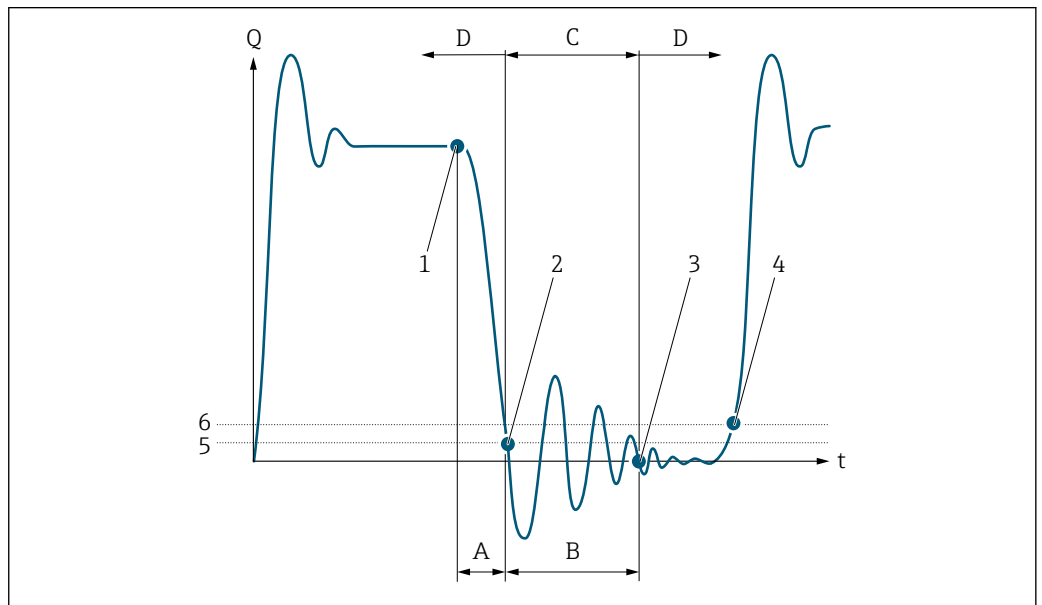

A0012888

- Q Flow
- t Time
- A After run
- B Pressure shock
- C Pressure shock suppression active according to the time entered
- D Pressure shock suppression inactive
- 1 Valve closes
- 2 Flow falls below the on-value of the low flow cut off: pressure shock suppression is activated
- 3 The time entered has elapsed: pressure shock suppression is deactivated
- 4 The current flow value is processed and displayed again.
- 5 On value for low flow cut off
- 6 Off value for low flow cut off

Pressure shock suppression delay



Navigation	☰ Application → Sensor → Low flow cutoff → PresShockSpDelay
Description	If required, enter a delay until pressure shock suppression is activated to suppress a response to momentary low flow.
User entry	Positive floating-point number

4.4.3 Sensor adjustment

Navigation ☰☰ Application → Sensor → Sensor adjustm.

▶ **Sensor adjustment**

Installation direction	→ ☰ 50
Integration time	→ ☰ 50
Measuring period	→ ☰ 51
▶ Zero adjustment	→ ☰ 51
▶ Process variable adjustment	→ ☰ 52

Installation direction



Navigation	☰ Application → Sensor → Sensor adjustm. → Install. direct.
Description	Select the sign of the flow direction.
Selection	<ul style="list-style-type: none"> ■ Forward flow ■ Reverse flow

Integration time



Navigation	☰ Application → Sensor → Sensor adjustm. → Integration time
Description	Set the duration of an integration cycle.
User entry	1 to 65 ms

Measuring period



Navigation

☰ Application → Sensor → Sensor adjustm. → Measuring period

Description

Set the duration of a full measuring period.

The measuring period is the time span over which a magnetic field is produced to create a measuring point.

User entry

0 to 1 000 ms

Zero adjustment

Navigation

☰☰ Application → Sensor → Sensor adjustm. → Zero adjustment

▶ Zero adjustment

Zero point adjustment control	→ ☰ 51
Status	→ ☰ 51
Progress	→ ☰ 52

Zero point adjustment control

Navigation

☰ Application → Sensor → Sensor adjustm. → Zero adjustment → Zero point adj.

Description

Start or cancel a zero point adjustment.

The following conditions must be met to perform a zero point adjustment successfully:

The actual flow rate must be 0.

The pressure must be at least 1.034 bar.

Selection

- Cancel
- Start

Status

Navigation

☰ Application → Sensor → Sensor adjustm. → Zero adjustment → Status

Description

Displays the status of the zero point adjustment.

- User interface**
- Busy
 - Failed
 - Done

Progress

Navigation  Application → Sensor → Sensor adjustm. → Zero adjustment → Progress


Description Shows the progress of the process.


User interface 0 to 100 %

Process variable adjustment

Navigation   Application → Sensor → Sensor adjustm. → Variable adjust

▶ **Process variable adjustment**

Volume flow offset →  52

Volume flow factor →  52

Volume flow offset



Navigation  Application → Sensor → Sensor adjustm. → Variable adjust → Vol. flow offset

Description Enter the offset by which to shift the zero point for volume flow in m³/s.

User entry Signed floating-point number

Additional information *Description*
 Corrected value = (factor × value) + offset

Volume flow factor



Navigation  Application → Sensor → Sensor adjustm. → Variable adjust → Vol. flow factor


Description Enter the multiplication factor to apply to the volume flow.

User entry Positive floating-point number


Additional information *Description*
 Corrected value = (factor × value) + offset

4.4.4 Calibration

Navigation  Application → Sensor → Calibration

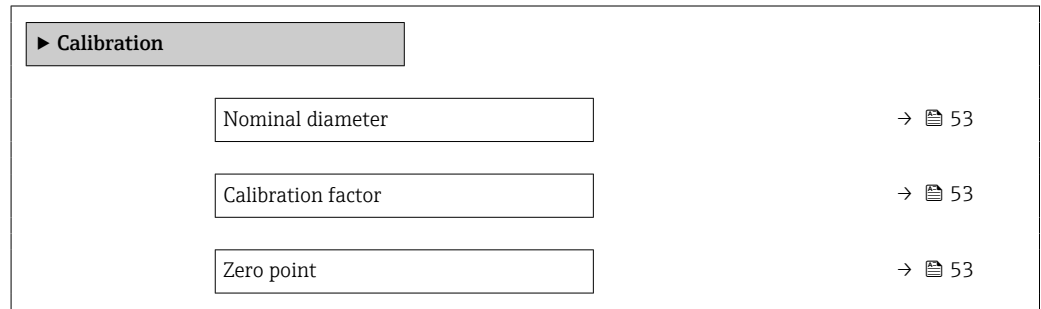

Nominal diameter

Navigation  Application → Sensor → Calibration → Nominal diameter

Description Displays the nominal diameter of the sensor.

User interface Character string comprising numbers, letters and special characters

Calibration factor

Navigation  Application → Sensor → Calibration → Cal. factor

Description Displays the current calibration factor for the sensor. The factory setting for the calibration factor can be found on the sensor's nameplate.

User interface Positive floating-point number

Zero point

Navigation  Application → Sensor → Calibration → Zero point

Description Displays the zero point correction value for the sensor.
 Users logged on in the Service role have write access.









User interface

Signed floating-point number

4.5 Pulse/frequency/switch output 1 to n


Navigation  Application → PFS output 1 to n

► Pulse/frequency/switch output 1 to n	
Operating mode	→ 56
Assign pulse output	→ 59
Measuring mode	→ 59
Value per pulse	→ 60
Pulse width	→ 60
Failure mode	→ 61
Pulse output	→ 61
Assign frequency output	→ 62
Measuring mode	→ 62
Minimum frequency value	→ 64
Maximum frequency value	→ 64
Measuring value at minimum frequency	→ 64
Measuring value at maximum frequency	→ 64
Damping output	→ 65
Failure mode	→ 65
Failure frequency	→ 65
Output frequency	→ 66
Switch output function	→ 66
Assign diagnostic behavior	→ 66
Assign limit	→ 67
Switch-on value	→ 68

Switch-on delay	→  69
Switch-off value	→  69
Switch-off delay	→  69
Assign flow direction check	→  69
Assign status	→  70
Failure mode	→  70
Invert output signal	→  70
Switch state	→  71

Operating mode

Navigation

 Application → PFS output 1 to n → Operating mode

Description

Select the operating mode for the output.

Selection

- Off
- Pulse
- Automatic pulse
- Frequency
- Switch

Additional information*Selection***■ Pulse option**

Quantitatively proportional pulse with pulse width to be configured. Whenever the pulse value for the specified process variable is reached, a pulse is emitted, the duration of which is set within the "Pulse width" parameter.

The process variable for the pulse output is specified in the "Assign pulse output " parameter.

■ Automatic pulse option

Quantitatively proportional pulse with a fixed 1:1 ratio of pulse-to-interval. Whenever the pulse value for the specified process variable is reached, a pulse is emitted.

The process variable for the pulse output is specified in the "Assign pulse output " parameter.

■ Frequency option

The output frequency is proportional to the value for the process variable assigned, with a pulse-to-interval ratio of 1:1.

The process variable for the frequency output is specified in the "Assign frequency output" parameter.

■ Switch option

Indicates when the state of the device changes, e.g. when a specified limit value is reached or an alarm or warning is triggered.

The switch output can be in one of two states: either it is conductive or it is non-conductive.

When the function assigned to the switch output is triggered, the switch output will depending on the output configuration either be continuously conductive or continuously non-conductive.

"Off" option

The pulse/frequency/switch output is not used.


"Pulse" option

Quantity-dependent pulse with configurable pulse width

- Whenever a specific volume is reached (pulse value), a pulse is output, the duration of which was set previously (pulse width).
- The pulses are never shorter than the set duration.
- This option is used for most batching applications.
- Depending on the setting, it is important when using this option that the recording device is capable of detecting pulses transmitted at a pulse rate of 10 kHz.

Example

- Flow rate approx. 100 g/s
- Pulse value 0.1 g
- Pulse width 0.05 ms
- Pulse rate 1 000 Impuls/s

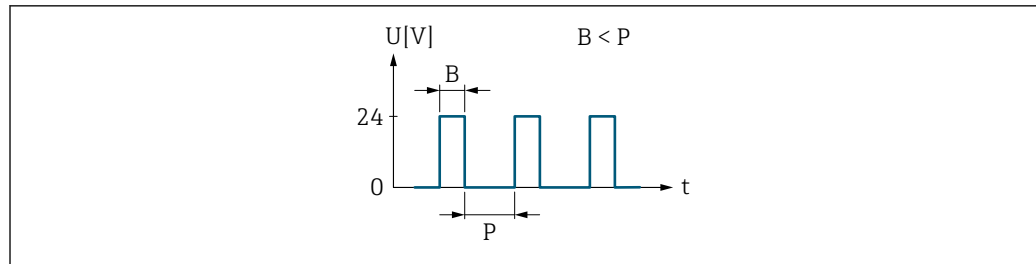

A0026883

5 Quantity-proportional pulse (pulse value) with pulse width to be configured

B Pulse width entered

P Pauses between the individual pulses


"Automatic pulse" option

Quantity-proportional pulse with on/off ratio of 1:1

- This is used if the duration of the active pulse is not known.
- Whenever a specific volume is reached (pulse value), a pulse with a pulse-off ratio of 1:1 is output.
- In this case, the pulse width is not relevant.
- When using this option, it is important that the recording device is capable of detecting pulses transmitted at a pulse rate of 10 kHz.

Example

- Flow rate approx. 100 g/s
- Pulse value 0.1 g
- Automatic pulse width
- Pulse rate approx. 1 000 Impuls/s

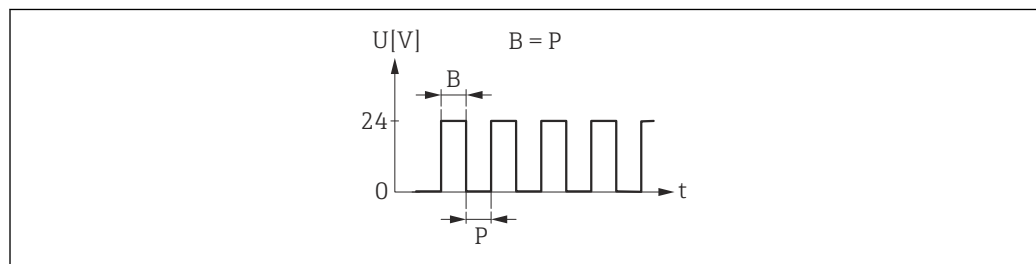

A0026881

6 Quantity-proportional pulse (pulse value) with automatic pulse width

B Automatic pulse width

P Pauses between the individual pulses


"Frequency" option

Flow-proportional frequency output with 1:1 on/off ratio

- An output frequency is output that is proportional to the value of a process variable, such as mass flow, volume flow, density or temperature.
- An output frequency is output that is proportional to the value of the volume flow process variable.
- Only this option can be used to output the density and temperature process variables.

Example

- Flow rate approx. 100 g/s
- Max. frequency 10 kHz
- Flow rate at max. frequency 1 000 g/s
- Output frequency approx. 1 000 Hz

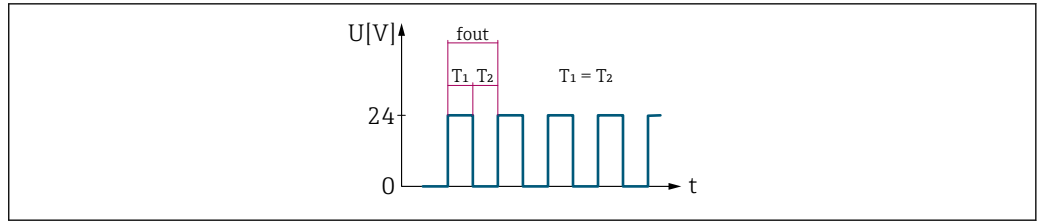

A0026886


7 Flow-proportional frequency output

"Switch" option

Contact for displaying a condition (e.g. alarm or warning if a limit value is reached)

Example

Alarm response without alarm

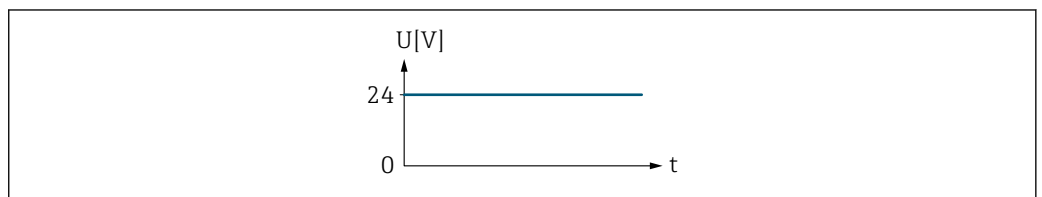


A0026884

8 No alarm, high level

Example

Alarm response in case of alarm

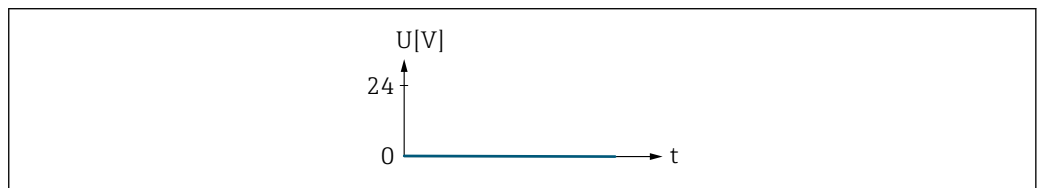

A0026885

9 Alarm, low level

Assign pulse output



Navigation

Application → PFS output 1 to n → Assign pulse

Description

Select the process variable for the pulse output.

Selection

- Off
- Volume flow

Measuring mode



Navigation

Application → PFS output 1 to n → Measuring mode

Description

Select the measuring mode for the pulse output.


Selection

- Forward flow
- Forward/Reverse flow
- Reverse flow
- Reverse flow compensation

Additional information*Selection*

- **Forward flow** option
Positive flow is reported, negative flow is not reported.
- **Forward/Reverse flow** option
Both positive and negative flow are reported (absolute value), whereby no distinction is made between positive and negative flow.
- **Reverse flow** option
Negative flow is reported, positive flow is not reported.
- **Reverse flow compensation** option
Positive flow is reported. Negative flow quantities are buffered, processed, and reported after a maximum delay of 60 s.
This option is used e.g. to compensate intermittent negative flow, which may occur in connection with positive displacement pumps as a result of wear and tear or high viscosity.

Value per pulse**Navigation**

 Application → PFS output 1 to n → Value per pulse


Description

Enter the measured value that corresponds to one pulse.
The lower the value, the better the resolution and the higher the pulse frequency.

User entry

Signed floating-point number

Pulse width**Navigation**

 Application → PFS output 1 to n → Pulse width

Description


Specify the duration of a pulse.
The maximum pulse rate is defined by $f_{\max} = 1 / (2 \times \text{pulse width})$. The interval between two pulses (P) is at least as long as the specified pulse width (B).
The maximum flow is defined by $Q_{\max} = f_{\max} \times \text{pulse value}$. If the flow exceeds these limit values, the measuring device displays the diagnostic message "443 Pulse output saturated".
Example:
Pulse value: 0.1 g
Pulse width: 0.1 ms
 $f_{\max}: 1 / (2 \times 0.1 \text{ ms}) = 5 \text{ kHz}$
 $Q_{\max}: 5 \text{ kHz} \times 0.1 \text{ g} = 0.5 \text{ kg/s}$

User entry

0.05 to 2 000 ms

Additional information

Description

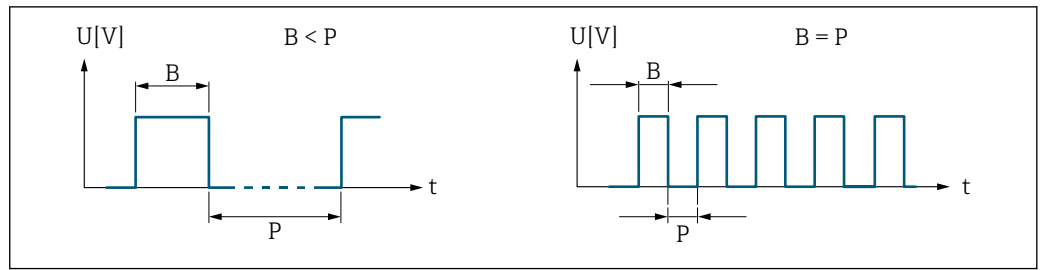

B Pulse width entered
 P Pauses between the individual pulses

A0026882

Failure mode



Navigation

☰ Application → PFS output 1 to n → Failure mode

Description

Specify how the output should behave in the event of a device alarm.
 For safety reasons, it is recommended that the behavior of the output in the event of a device alarm be predefined.

Selection

- Actual value
- No pulses

Additional information

Selection

- **Actual value** option
 The pulse output continues to emit pulses based on the actual value measured. The fault condition is ignored.
 A device alarm indicates a serious malfunction that may impact measurement quality to the point that accuracy can no longer be ensured. This option is only recommended if the necessary safeguards are in place to ensure that no alarm condition impacts measurement quality.
- **No pulses** option
 In the event of a device alarm, no pulses are emitted.

Pulse output

Navigation

☰ Application → PFS output 1 to n → Pulse output

Description

Displays the frequency at which pulses are currently emitted.
 The output behavior can be inverted in the "Invert output signal" parameter, i.e. in this case the transistor will be non-conductive for the duration of a pulse.
 The "Invert output signal" parameter is not available for all devices.

User interface

Positive floating-point number

Assign frequency output


Navigation Application → PFS output 1 to n → Assign freq.

Description Select a process variable for the frequency output.

- Selection**
- Off
 - Volume flow
 - Temperature *

Measuring mode


Navigation Application → PFS output 1 to n → Measuring mode

Description Select the measuring mode for the frequency output.

- Selection**
- Forward flow
 - Forward/Reverse flow
 - Reverse flow
 - Reverse flow compensation

Additional information *Selection*

- **Forward flow** option
Positive flow is reported, negative flow is not reported.
- **Forward/Reverse flow** option
Both positive and negative flow are reported (absolute value), whereby no distinction is made between positive and negative flow.
- **Reverse flow** option
Negative flow is reported, positive flow is not reported.
- **Reverse flow compensation** option
Positive flow is reported. Negative flow quantities are buffered, processed, and reported after a maximum delay of 60 s.
This option is used e.g. to compensate intermittent negative flow, which may occur in connection with positive displacement pumps as a result of wear and tear or high viscosity.

"Forward flow" option


The frequency output signal is proportional to the measured variable assigned. The measuring range is determined by the value that is assigned to the Measuring value at maximum frequency (A). The measured value for the minimum frequency is implicitly 0.

The flow components outside the scaled measuring range are taken into account for signal output as follows:

Measuring value at maximum frequency = 10 kg/h

- If the effective flow exceeds measured value A, the **△S442 Frequency output 1 to n** diagnostic message is displayed. If the value is exceeded, the frequency remains at the maximum frequency, or at the failure frequency according to the configuration.
- If the value is undershot, i.e. negative flow occurs, 0 Hz is output and no diagnostic message is displayed.

* Visibility depends on order options or device settings

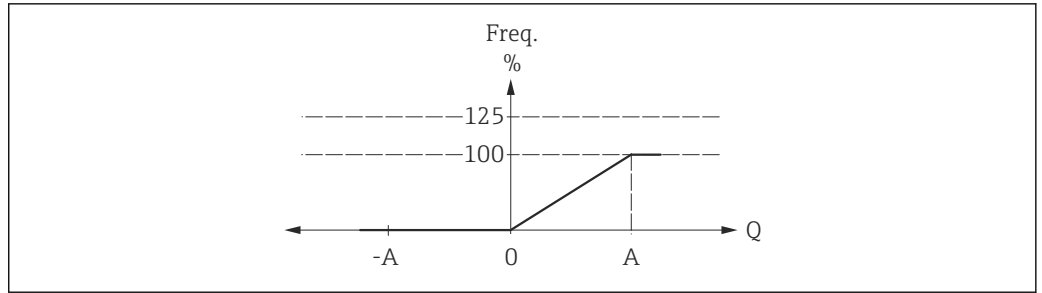

A0026880


A Measuring value at maximum frequency

"Forward/Reverse flow" option

The frequency output signal is independent of the direction of flow (absolute amount of the measured variable). The flow direction can be output via the configurable switch outputs.

The flow components outside the scaled measuring range are taken into account for signal output as follows:

If the effective flow exceeds the absolute value A, the **△S442 Frequency output 1 to n** diagnostic message is displayed. If the value is exceeded, the frequency remains at the maximum frequency, or at the failure frequency according to the configuration.

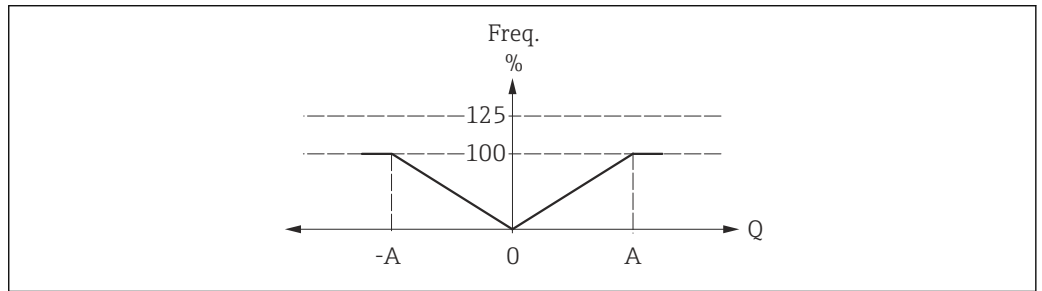


A0026879

A Measuring value at maximum frequency

"Reverse flow" option

The flow components outside the scaled measuring range are taken into account for signal output as follows:

- If the effective flow drops below the value A (normally a negative value with reverse flow), the **△S442 Frequency output 1 to n** diagnostic message is displayed. If the value is undershot, the frequency remains at the maximum frequency, or at the failure frequency according to the configuration.
- If the value is exceeded, i.e. positive flow occurs, 0 Hz is output and no diagnostic message is displayed.

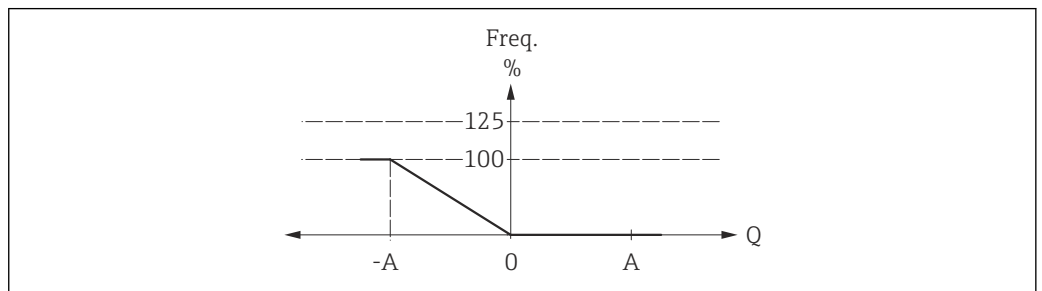

A0027042

A Measuring value at maximum frequency

Minimum frequency value**Navigation**

 Application → PFS output 1 to n → Min. freq. value

Description

Enter the frequency to report for the lower range value of the measured value range.
The lower range value for the measured value range that corresponds to the minimum frequency is specified in the "Measuring value at minimum frequency" parameter.

User entry

0.0 to 10 000.0 Hz

Maximum frequency value**Navigation**

 Application → PFS output 1 to n → Max. freq. value


Description

Enter the frequency to report for the upper range value of the measured value range.
The upper range value for the measured value range that corresponds to the maximum frequency is specified in the "Measuring value at maximum frequency" parameter.

User entry

0.0 to 10 000.0 Hz

Measuring value at minimum frequency**Navigation**

 Application → PFS output 1 to n → Val. at min.freq

Description

Enter the lower range value for the measured value range.
Depending on the setting selected for the "Measuring mode" parameter, the value specified for this parameter and the "Measuring value at maximum frequency" parameter must have the same algebraic sign or not.
As a rule, the lower range value is scaled to be lower than the upper range value. As a result, the behavior of the frequency output is proportional to the process variable assigned. If the lower range value is scaled to be higher than the upper range value, then the behavior of the frequency output will be inversely proportional to the process variable assigned.

User entry

Signed floating-point number

Measuring value at maximum frequency**Navigation**

 Application → PFS output 1 to n → Val. at max.freq

Description

Enter upper range value for the measured value range.

User entry

Signed floating-point number

Damping output


Navigation	Application → PFS output 1 to n → Damping out.
Description	<p>Enter a time constant to set the reaction time of the output signal to fluctuations in the measured value (PT1 element).</p> <p>The smaller the time constant, the faster the output reacts to fluctuations in the measured value.</p> <p>If the time constant is 0, damping is deactivated.</p>
User entry	0 to 999.9 s


Failure mode


Navigation	Application → PFS output 1 to n → Failure mode
Description	<p>Specify how the output should behave in the event of a device alarm.</p> <p>For safety reasons, it is recommended that the behavior of the output in the event of a device alarm be predefined.</p>
Selection	<ul style="list-style-type: none"> ▪ Actual value ▪ Defined value ▪ 0 Hz
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ▪ Actual value option The frequency output continues to report the actual flow rate measured. The fault condition is ignored. ▪ Defined value option The frequency output reports the value specified. The value is specified in the "Failure frequency" parameter. ▪ 0 Hz option The frequency output reports 0 Hz.

Failure frequency



Navigation	Application → PFS output 1 to n → Failure freq.
Description	Enter the value for the "Defined value" option in the "Failure mode" parameter.
User entry	0.0 to 10 000.0 Hz

Output frequency

Navigation	 Application → PFS output 1 to n → Output freq.
Description	Displays the frequency reported for the process value measured.
User interface	0.0 to 10 000.0 Hz


Switch output function



Navigation	 Application → PFS output 1 to n → Switch out funct
Description	Assign a function to the switch output.
Selection	<ul style="list-style-type: none"> ▪ Off ▪ On ▪ Diagnostic behavior ▪ Limit ▪ Flow direction check ▪ Status
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ▪ Off option The switch output is permanently switched off (open, non-conductive). ▪ On option The switch output is permanently switched on (closed, conductive). ▪ Diagnostic behavior option The switch output is switched on (closed, conductive), if there is a pending diagnostic event of the assigned behavioral category. ▪ Limit option The switch output is switched on (closed, conductive), if a limit value specified for the process variable is reached. ▪ Flow direction check option The switch output is switched on (closed, conductive), when the flow direction changes (forward or reverse flow). ▪ Status option The switch output is switched on (closed, conductive) to indicate the status for the selected device function ("Assign status" parameter).

Assign diagnostic behavior



Navigation	 Application → PFS output 1 to n → Assign diag. beh
Description	The switch output is switched on (closed, conductive), if there is a pending diagnostic event of the assigned behavioral category.
Selection	<ul style="list-style-type: none"> ▪ Alarm ▪ Alarm or warning ▪ Warning

Additional information

Selection

- **Alarm** option
The switch output is only switched on for diagnostic events of the "Alarm" category.
- **Alarm or warning** option
The switch output is switched on for diagnostic events of the "Alarm" or "Warning" category.
- **Warning** option
The switch output is only switched on for diagnostic events of the "Warning" category.

Assign limit



Navigation

☰ Application → PFS output 1 to n → Assign limit

Description

Select the process variable to monitor in case the specified limit value is exceeded. If a limit value for the selected process variable is exceeded, the output is switched on.

Selection


- Off
- Volume flow
- Flow velocity
- Totalizer 1
- Totalizer 2
- Totalizer 3
- Temperature *

Additional information

Switch-on point > switch-off point

Behavior of the status output if switch-on point > switch-off point:

- Process variable > switch-on point: transistor is conductive
- Process variable < switch-off point: transistor is not conductive

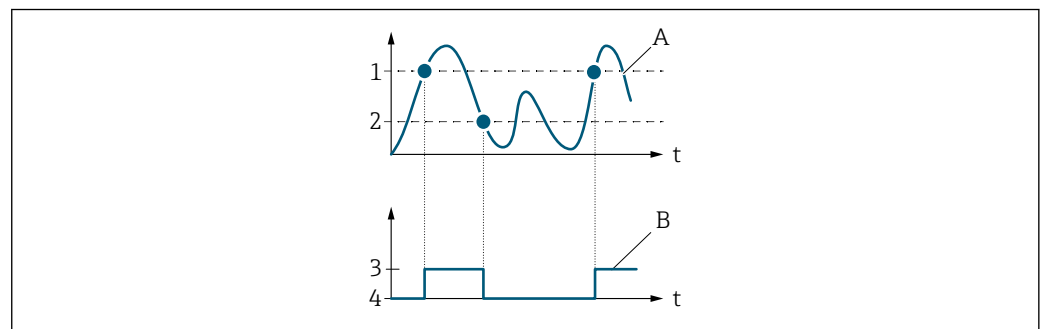

A0026891


- 1 Switch-on value
- 2 Switch-off value
- 3 Conductive
- 4 Non-conductive
- A Process variable
- B Status output

Switch-on point < switch-off point

Behavior of the status output if switch-on point < switch-off point:

- Process variable < switch-on point: transistor is conductive
- Process variable > switch-off point: transistor is not conductive

* Visibility depends on order options or device settings

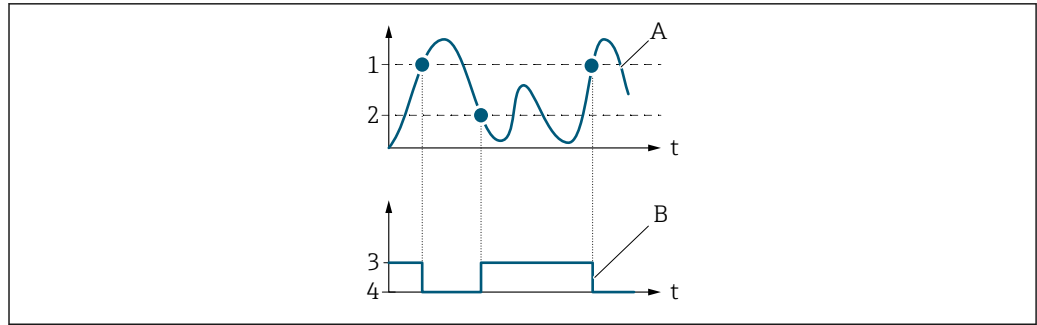


A0026892

- 1 Switch-on value
- 2 Switch-off value
- 3 Conductive
- 4 Non-conductive
- A Process variable
- B Status output

Switch-on point = switch-off point

Behavior of the status output if switch-on point = switch-off point:

- Process variable > switch-on point: transistor is conductive
- Process variable < switch-off point: transistor is not conductive

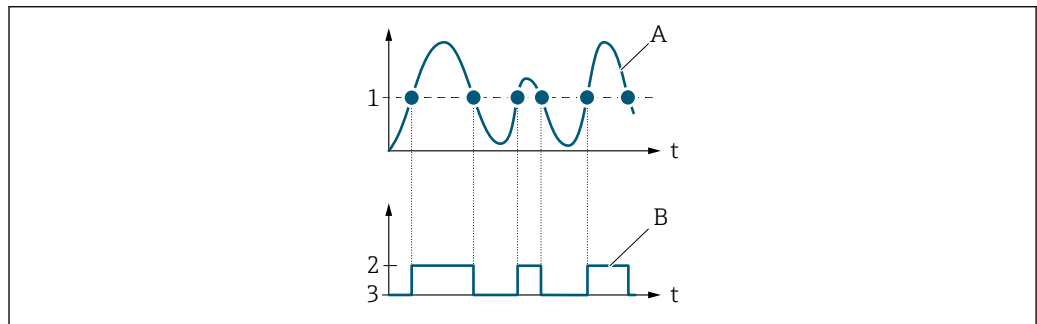

A0026893

- 1 Switch-on point = switch-off point
- 2 Conductive
- 3 Non-conductive
- A Process variable
- B Status output

Switch-on value



Navigation

☰ Application → PFS output 1 to n → Switch-on value

Description

Enter the limit value for the switch-on point (process variable > switch-on value = closed, conductive).

To use a hysteresis: Switch-on point > Switch-off point.

User entry

Signed floating-point number

Switch-on delay



Navigation	Application → PFS output 1 to n → Switch-on delay
Description	Enter delay before the switch output is switched on.
User entry	0.0 to 100.0 s

Switch-off value



Navigation	Application → PFS output 1 to n → Switch-off value
Description	Enter the limit value for the switch-off point (process variable < switch-off value = open, non-conductive). To use a hysteresis: Switch-on point > Switch-off point.
User entry	Signed floating-point number

Switch-off delay




Navigation	Application → PFS output 1 to n → Switch-off delay
Description	Enter delay before the switch output is switched off.
User entry	0.0 to 100.0 s

Assign flow direction check




Navigation	Application → PFS output 1 to n → Assign dir.check
Description	Select a process variable for flow direction monitoring.
Selection	<ul style="list-style-type: none">■ Off■ Volume flow


Assign status 


Navigation	 Application → PFS output 1 to n → Assign status
Description	<p>Select the device function for which to report the status.</p> <p>If the switch-on point for the selected device function is reached, the output is switched on (closed and conductive). Otherwise, the output is non-conductive.</p> <p>The output behavior can be inverted in the "Invert output signal" parameter, i.e. in this case the output will be non-conductive when switched on and conductive when switched off. The "Invert output signal" parameter is not available for all devices.</p>
Selection	Low flow cutoff

Failure mode 


Navigation	 Application → PFS output 1 to n → Failure mode
Description	<p>Specify how the output should behave in the event of a device alarm.</p> <p>For safety reasons, it is recommended that the behavior of the output in the event of a device alarm be predefined.</p>
Selection	<ul style="list-style-type: none"> ■ Actual status ■ Open ■ Closed
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ■ Actual status option The switch output continues to report the actual state of the switch output based on the function assigned ("Switch output function" parameter). The fault condition is ignored. ■ Open option In the event of a device alarm, the switch output's transistor is set to "non-conductive".

Invert output signal 

Navigation	 Application → PFS output 1 to n → Invert outp.sig.
Description	<p>Indicate whether to invert the output signal (Yes/No).</p> <p>If the output signal is inverted, the output behavior is the reverse of its configuration. This setting does not apply to the frequency output.</p>
Selection	<ul style="list-style-type: none"> ■ No ■ Yes
Additional information	<p><i>Selection</i></p> <p>No option (passive - negative)</p>

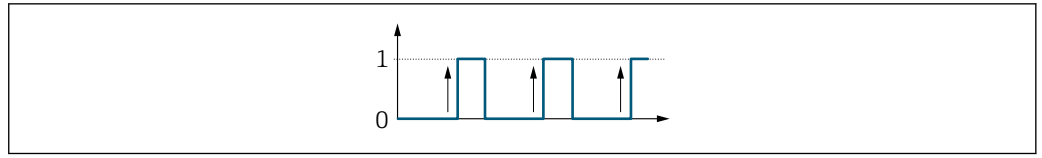

Yes option (passive - positive)

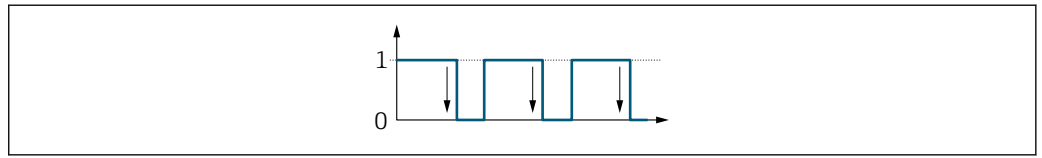

Switch state

Navigation

📄 Application → PFS output 1 to n → Switch state

Description

Indicates the current switch state of the switch output.

User interface

- Open
- Closed


Additional information


User interface

- **Open** option
The switch output is not conductive.
- **Closed** option
The switch output is conductive.

5 "System" menu

Overall device management and security settings – management of system settings and adaption to operational requirements.





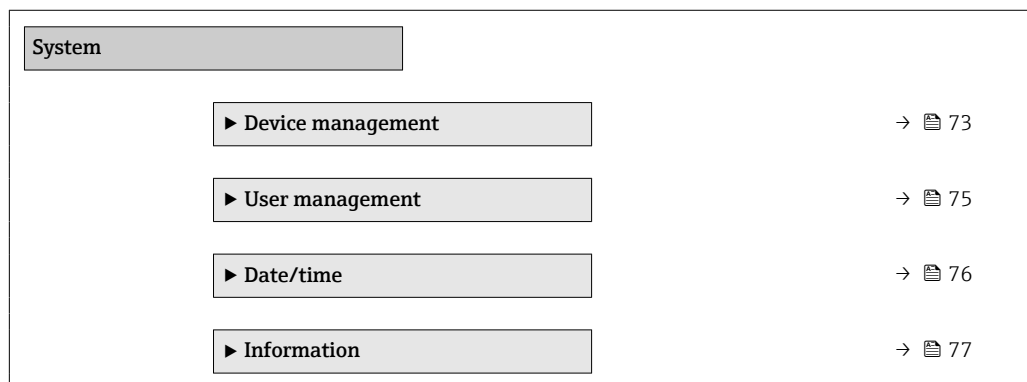Navigation  System




5.1 Device management

Navigation   System → Device manag.


▶ Device management

Device tag	→  73
Locking status	→  73
Configuration counter	→  74
Device reset	→  74


Device tag

Navigation	 System → Device manag. → Device tag
Description	Enter a unique designation for the measuring point to be able to easily identify it within the plant.
User entry	Character string comprising numbers, letters and special characters (32)

Locking status

Navigation	 System → Device manag. → Locking status
Description	Indicates the write protection with the highest priority that is currently active.
User interface	Temporarily locked
Additional information	<p><i>User interface</i></p> <p>"Temporarily locked" option</p> <p>Due to internal procedures that are currently in progress (e.g. data upload/download, reset, etc.), write access to the parameters is temporarily locked. The parameters can be modified again, once the internal procedures are complete.</p>

Configuration counter

Navigation
 System → Device manag. → Config. counter
Description

Displays the counter for the number of times the device configuration has changed.

If the value for a static parameter changes, the counter increments by 1. This is to enable tracking different parameter versions.


When multiple parameters are changed simultaneously, e.g. when loading a configuration file into the device from an external source such as FieldCare, the counter may increment.

The counter cannot be reset. Nor is it reset to a default value on performing a device reset. Once the counter has incremented to 65535, it restarts at 1.

User interface

0 to 65 535

Device reset

**Navigation**
 System → Device manag. → Device reset
Description

Reset the device configuration - either entirely or in part - to a defined state.

Selection

- Cancel
- To delivery settings
- Restart device
- Restore S-DAT backup *
- Create T-DAT backup
- Restore T-DAT backup *


Additional information*Selection*

- **To delivery settings** option
Every parameter for which a customer-specific default setting was ordered is reset to the customer-specific value. All other parameters are reset to the factory setting.
- **Restart device** option
The restart resets every parameter with data stored in volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.
- **Restore S-DAT backup** option
Restores the data that is saved on the S-DAT.
This function can be used to resolve the memory issue "083 Memory content inconsistent" or to restore the S-DAT data when a new S-DAT has been installed.
- **Create T-DAT backup** option
Creates T-DAT backup.
- **Restore T-DAT backup** option
Restores the data saved on the T-DAT.
This function can be used to resolve the memory issue "283 Memory content inconsistent" or to restore the T-DAT data when a new T-DAT has been installed.


* Visibility depends on order options or device settings

5.2 User management


Navigation   System → User manag.

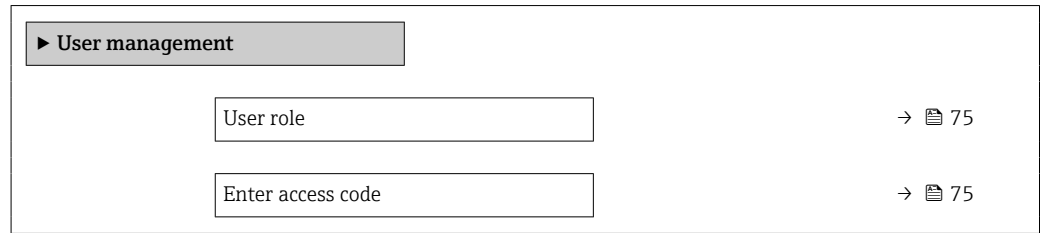

User role


Navigation	 System → User manag. → User role
Description	Displays the role the user is currently logged on in. The role determines the user's access rights for the parameters. The access rights can be changed via the "Enter access code" parameter.
User interface	<ul style="list-style-type: none"> ▪ Operator ▪ Maintenance ▪ Service ▪ Production ▪ Development
Additional information	<p><i>User interface</i></p> <ul style="list-style-type: none"> ▪ Operator option Provides only read access to parameters. ▪ Maintenance option Provides read and write access to parameters. For some parameters, the user must be logged on in the Service role to obtain write access. ▪ Service option Provides read and write access to Service parameters.

Enter access code


Navigation	 System → User manag. → Ent. access code
Description	Use this function to enter the user-specific release code to remove parameter write protection.
User entry	Max. 16-digit character string comprising numbers, letters and special characters

5.3 Date/time

Navigation   System → Date/time

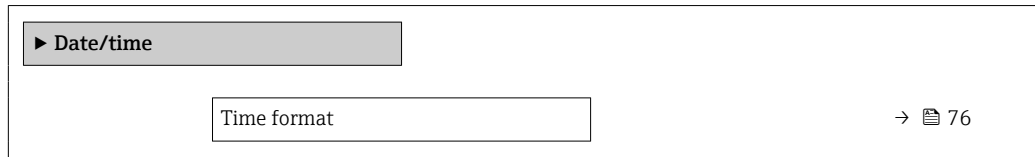



Time format

Navigation  System → Date/time → Time format

Description Select the time format.



- Selection**
- 24 h
 - 12 h AM/PM

Additional information *Selection*

 For an explanation of the abbreviated units: →  83











5.4 Information

Navigation   System → Information

▶ Information	
▶ Device	→  77
▶ Electronic module	→  80

5.4.1 Device

Navigation   System → Information → Device

▶ Device	
Device name	→  77
Device tag	→  78
Serial number	→  78
Order code	→  78
Firmware version	→  78
Extended order code 1	→  79
Extended order code 2	→  79
Extended order code 3	→  79
ENP version	→  79
Manufacturer	→  80

Device name

Navigation  System → Information → Device → Device name

Description Displays the name of the transmitter. The transmitter name is also provided on the nameplate of the transmitter.

User interface Character string comprising numbers, letters and special characters

Device tag 

Navigation  System → Information → Device → Device tag

Description Enter a unique designation for the measuring point to be able to easily identify it within the plant.

User entry Character string comprising numbers, letters and special characters (32)

Serial number

Navigation  System → Information → Device → Serial number

Description Displays the serial number of the measuring device. The serial number is also provided on the nameplate of the sensor and of the transmitter.
The serial number can also be used to retrieve further device-related information and documentation via the Operations app or the Device Viewer on the Endress+Hauser website.

User interface Character string comprising numbers, letters and special characters


Order code 

Navigation  System → Information → Device → Order code

Description Displays the device order code.
The order code is used for instance to order a replacement or spare device or to verify that the device features specified on the order form match the shipping note.

User interface Character string comprising numbers, letters and special characters

Firmware version

Navigation  System → Information → Device → Firmware version

Description Displays the device firmware version installed.

User interface Character string comprising numbers, letters and special characters

Extended order code 1
**Navigation**

System → Information → Device → Ext. order cd. 1

Description

Displays the first, second and/or third part of the extended order code.

Due to character length restrictions, the extended order code is split into a maximum of 3 parameters. The extended order code indicates for each feature in the product structure the selected option, thereby uniquely identifying the device model.

The extended order code can also be found on the nameplate.

User interface

Character string comprising numbers, letters and special characters

Extended order code 2
**Navigation**

System → Information → Device → Ext. order cd. 2

Description

Displays the first, second and/or third part of the extended order code.

Due to character length restrictions, the extended order code is split into a maximum of 3 parameters. The extended order code indicates for each feature in the product structure the selected option, thereby uniquely identifying the device model.

The extended order code can also be found on the nameplate.

User interface

Character string comprising numbers, letters and special characters

Extended order code 3
**Navigation**

System → Information → Device → Ext. order cd. 3

Description

Displays the first, second and/or third part of the extended order code.

Due to character length restrictions, the extended order code is split into a maximum of 3 parameters. The extended order code indicates for each feature in the product structure the selected option, thereby uniquely identifying the device model.

The extended order code can also be found on the nameplate.

User interface

Character string comprising numbers, letters and special characters

ENP version
Navigation

System → Information → Device → ENP version


Description

Displays the version of the electronic nameplate (ENP).


User interface


Character string comprising numbers, letters and special characters

Manufacturer


Navigation	 System → Information → Device → Manufacturer
Description	Displays the manufacturer.
User interface	Character string comprising numbers, letters and special characters

5.4.2 Electronic module

Navigation   System → Information → Electr. module

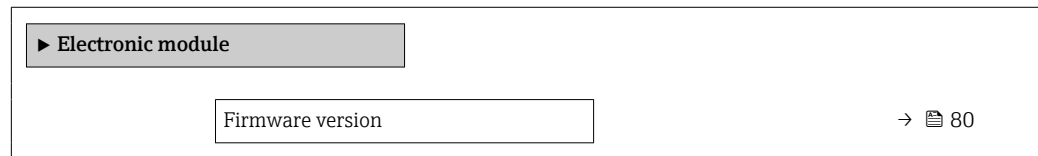

Firmware version

Navigation	 System → Information → Electr. module → Firmware version
Description	Displays the firmware version of the module.
User interface	Positive integer

6 Country-specific factory settings

6.1 SI units

 Not valid for USA and Canada.


6.1.1 System units

Volume	ml
Volume flow	ml/s

6.1.2 Pulse value

Nominal diameter [mm]	[ml/p]
4	0.005
8	0.02
15	0.1
15K	0.1
25	0.2

6.1.3 On value low flow cut off

 The switch-on point depends on the type of medium and the nominal diameter.

Nominal diameter [mm]	On value low flow cut off (v ~ 0.04 m/s) [ml/s]
4	0.5
8	2
15K ¹⁾	7
15	7
25	16

1) Conical version (corresponds to DN 12)

6.2 US units

 Only valid for USA and Canada.

6.2.1 System units

Volume	fl oz (us)
Volume flow	fl oz/s (us)

6.2.2 Pulse value

Nominal diameter [in]	[fl oz/p]
$\frac{1}{8}$	0.0002
$\frac{3}{8}$	0.001
$\frac{1}{2}$	0.004
$\frac{1}{2}K$	0.004
1	0.007

6.2.3 On value low flow cut off



The switch-on point depends on the type of medium and the nominal diameter.

Nominal diameter [in]	On value low flow cut off ($v \sim 0.13$ ft/s) [oz fl/s]
$\frac{5}{32}$	0.02
$\frac{5}{16}$	0.08
$\frac{1}{2}K$ ¹⁾	0.25
$\frac{1}{2}$	0.25
1	0.53

1) Conical version (corresponds to DN 12)

7 Explanation of abbreviated units

7.1 SI units

Process variable	Units	Explanation
Density	g/cm ³ , g/m ³	Gram/volume unit
	kg/dm ³ , kg/l, kg/m ³	Kilogram/volume unit
	SD4°C, SD15°C, SD20°C	Specific density: The specific density is the ratio of the density of the fluid to the density of water at a water temperature of 4 °C (39 °F), 15 °C (59 °F), 20 °C (68 °F).
	SG4°C, SG15°C, SG20°C	Specific gravity: The specific gravity is the ratio of the density of the fluid to the density of water at a water temperature of 4 °C (39 °F), 15 °C (59 °F), 20 °C (68 °F).
Mass	g, kg, t	Gram, kilogram, metric ton
Mass flow	g/s, g/min, g/h, g/d	Gram/time unit
	kg/s, kg/min, kg/h, kg/d	Kilogram/time unit
	t/s, t/min, t/h, t/d	Metric ton/time unit
Temperature	°C , K	Celsius, Kelvin
Volume	cm ³ , dm ³ , m ³	Cubic centimeter, cubic decimeter, cubic meter
	ml, l, hl, Ml Mega	Milliliter, liter, hectoliter, megaliter
Time	s, m, h, d, y	Second, minute, hour, day, year

7.2 US units

Process variable	Units	Explanation
Density	lb/ft ³ , lb/gal (us)	Pound/cubic foot, pound/gallon
	lb/bbl (us;liq.), lb/bbl (us;beer), lb/bbl (us;oil), lb/bbl (us;tank)	Pound/volume unit
Mass	oz, lb, STon	Ounce, pound, standard ton
Mass flow	oz/s, oz/min, oz/h, oz/d	Ounce/time unit
	lb/s, lb/min, lb/h, lb/d	Pound/time unit
	STon/s, STon/min, STon/h, STon/d	Standard ton/time unit
Temperature	°F, °R	Fahrenheit, Rankine
Volume	af	Acre foot
	ft ³	Cubic foot
	fl oz (us), gal (us), kgal (us), Mgal (us)	Fluid ounce, gallon, kilogallon, million gallon
	bbl (us;liq.), bbl (us;beer), bbl (us;oil), bbl (us;tank)	Barrel (normal liquids), barrel (beer), barrel (petrochemicals), barrel (filling tanks)
Volume flow	af/s, af/min, af/h, af/d	Acre foot/time unit
	ft ³ /s, ft ³ /min, ft ³ /h, ft ³ /d	Cubic foot/time unit
	fl oz/s (us), fl oz/min (us), fl oz/h (us), fl oz/d (us)	Fluid ounce/time unit
	gal/s (us), gal/min (us), gal/h (us), gal/d (us)	Gallon/time unit
	kgal/s (us), kgal/min (us), kgal/h (us), kgal/d (us)	Kilogallon/time unit

Process variable	Units	Explanation
	Mgal/s (us), Mgal/min (us), Mgal/h (us), Mgal/d (us)	Million gallon/time unit
	bbbl/s (us;liq.), bbl/min (us;liq.), bbl/h (us;liq.), bbl/d (us;liq.)	Barrel/time unit (normal liquids) Normal liquids: 31.5 gal/bbl
	bbbl/s (us;beer), bbl/min (us;beer), bbl/h (us;beer), bbl/d (us;beer)	Barrel /time unit (beer) Beer: 31.0 gal/bbl
	bbbl/s (us;oil), bbl/min (us;oil), bbl/h (us;oil), bbl/d (us;oil)	Barrel/time unit (petrochemicals) Petrochemicals: 42.0 gal/bbl
	bbbl/s (us;tank), bbl/min (us;tank), bbl/h (us;tank), bbl/d (us;tank)	Barrel/time unit (filling tank) Filling tanks: 55.0 gal/bbl
Time	s, m, h, d, y	Second, minute, hour, day, year
	am, pm	Ante meridiem (before midday), post meridiem (after midday)

7.3 Imperial units

Process variable	Units	Explanation
Density	lb/gal (imp), lb/bbl (imp;beer), lb/bbl (imp;oil)	Pound/volume unit
Volume	gal (imp), Mgal (imp)	Gallon, mega gallon
	bbl (imp;beer), bbl (imp;oil)	Barrel (beer), barrel (petrochemicals)
Volume flow	gal/s (imp), gal/min (imp), gal/h (imp), gal/d (imp)	Gallon/time unit
	Mgal/s (imp), Mgal/min (imp), Mgal/h (imp), Mgal/d (imp)	Mega gallon/time unit
	bbbl/s (imp;beer), bbl/min (imp;beer), bbl/h (imp;beer), bbl/d (imp;beer)	Barrel /time unit (beer) Beer: 36.0 gal/bbl
	bbbl/s (imp;oil), bbl/min (imp;oil), bbl/h (imp;oil), bbl/d (imp;oil)	Barrel/time unit (petrochemicals) Petrochemicals: 34.97 gal/bbl
Time	s, m, h, d, y	Second, minute, hour, day, year
	am, pm	Ante meridiem (before midday), post meridiem (after midday)

Index

A

- Active diagnostics (Submenu) 25
- Actual diagnostics (Parameter) 25
- Alarm delay (Parameter) 31
- Application (Menu) 36
- Assign behavior of diagnostic no. 442 (Parameter) . . . 32
- Assign behavior of diagnostic no. 443 (Parameter) . . . 32
- Assign behavior of diagnostic no. 842 (Parameter) . . . 33
- Assign behavior of diagnostic no. 937 (Parameter) . . . 34
- Assign behavior of diagnostic no. 938 (Parameter) . . . 34
- Assign behavior of diagnostic no. 961 (Parameter) . . . 35
- Assign diagnostic behavior (Parameter) 19, 66
- Assign flow direction check (Parameter) 69
- Assign frequency output (Parameter) 15, 62
- Assign limit (Parameter) 20, 67
- Assign process variable 1 to n (Parameter) 9, 42
- Assign pulse output (Parameter) 17, 59
- Assign simulation process variable (Parameter) 27
- Assign status (Parameter) 22, 70

B

- Binomial filter depth (Parameter) 45

C

- Calibration (Submenu) 53
- Calibration factor (Parameter) 53
- Coil current mode (Parameter) 47
- Commissioning (Wizard) 6
- Configuration (Submenu) 32
- Configuration counter (Parameter) 74

D

- Damping output (Parameter) 65
- Date/time (Submenu) 76
- Device (Submenu) 77
- Device alarm simulation (Parameter) 30
- Device identification (Wizard) 6
- Device management (Submenu) 73
- Device name (Parameter) 7, 77
- Device reset (Parameter) 74
- Device tag (Parameter) 6, 73, 78
- Diagnostic configuration (Submenu) 31
- Diagnostic event simulation (Parameter) 30
- Diagnostic settings (Submenu) 31
- Diagnostics (Menu) 24
- Document
 - Target group 4

E

- Electronic module (Submenu) 80
- ENP version (Parameter) 79
- Enter access code (Parameter) 75
- Extended order code 1 (Parameter) 79
- Extended order code 2 (Parameter) 79
- Extended order code 3 (Parameter) 79

F

- Factory settings 81
 - SI units 81
 - US units 81
- Failure frequency (Parameter) 17, 65
- Failure mode (Parameter) 17, 23, 61, 65, 70
- Firmware version (Parameter) 7, 78, 80
- Flow damping (Parameter) 46
- Flow override (Parameter) 46
- Frequency output 1 to n simulation (Parameter) 28
- Frequency output 1 to n value (Parameter) 28

G

- Guidance (Menu) 6

I

- Information (Submenu) 77
- Installation direction (Parameter) 50
- Integration time (Parameter) 50
- Invert output signal (Parameter) 70

L

- Locking status (Parameter) 73
- Low flow cutoff (Parameter) 11, 47
- Low flow cutoff (Submenu) 47

M

- Manufacturer (Parameter) 80
- Maximum frequency value (Parameter) 16, 64
- Measured values (Submenu) 36
- Measuring mode (Parameter) 59, 62
- Measuring period (Parameter) 51
- Measuring value at maximum frequency (Parameter)
 - 16, 64
- Measuring value at minimum frequency (Parameter)
 - 16, 64
- Median filter depth (Parameter) 46
- Menu
 - Application 36
 - Diagnostics 24
 - Guidance 6
 - System 72
- Minimum frequency value (Parameter) 16, 64

N

- Nominal diameter (Parameter) 53

O

- Off value low flow cutoff (Parameter) 12, 48
- On value low flow cutoff (Parameter) 12, 48
- Operating mode (Parameter) 13, 56
- Operating time (Parameter) 26
- Operating time from restart (Parameter) 26
- Order code (Parameter) 78
- Output frequency (Parameter) 66

P

Preset value 1 to n (Parameter)	44
Pressure shock suppression (Parameter)	12, 49
Pressure shock suppression delay (Parameter)	50
Previous diagnostics (Parameter)	25
Process (Submenu)	33
Process (Wizard)	11
Process parameters (Submenu)	45
Process value (Parameter)	28
Process variable adjustment (Submenu)	52
Process variable unit 1 to n (Parameter)	9, 42
Progress (Parameter)	52
Properties (Submenu)	31
Pulse output (Parameter)	61
Pulse output simulation 1 to n (Parameter)	28
Pulse value 1 to n (Parameter)	29
Pulse width (Parameter)	18, 60
Pulse/frequency/switch output 1 to n (Submenu)	55
Pulse/frequency/switch output 1 to n (Wizard)	13

R

Reset all totalizers (Parameter)	41
--	----

S

Sensor (Submenu)	45
Sensor adjustment (Submenu)	50
Serial number (Parameter)	7, 78
Simulation (Submenu)	27
Status (Parameter)	51

Submenu

Active diagnostics	25
Calibration	53
Configuration	32
Date/time	76
Device	77
Device management	73
Diagnostic configuration	31
Diagnostic settings	31
Electronic module	80
Information	77
Low flow cutoff	47
Measured values	36
Process	33
Process parameters	45
Process variable adjustment	52
Properties	31
Pulse/frequency/switch output 1 to n	55
Sensor	45
Sensor adjustment	50
Simulation	27
System units	38
Totalizer	37
Totalizer 1 to n	41
Totalizer handling	41
Totalizers	41
User management	75
Zero adjustment	51
Switch output function (Parameter)	18, 66
Switch output simulation 1 to n (Parameter)	29

Switch state (Parameter)	71
Switch state 1 to n (Parameter)	29
Switch-off delay (Parameter)	22, 69
Switch-off value (Parameter)	22, 69
Switch-on delay (Parameter)	22, 69
Switch-on value (Parameter)	21, 68
System (Menu)	72
System units (Submenu)	38
System units (Wizard)	8

T

Target group	4
Time format (Parameter)	23, 76
Time format (Wizard)	23
Timestamp (Parameter)	25, 26
Totalizer (Submenu)	37
Totalizer 1 to n (Submenu)	41
Totalizer 1 to n (Wizard)	9
Totalizer 1 to n control (Parameter)	43
Totalizer 1 to n failure behavior (Parameter)	10, 44
Totalizer 1 to n operation mode (Parameter)	10, 43
Totalizer 1 to n overflow (Parameter)	37
Totalizer 1 to n value (Parameter)	37
Totalizer handling (Submenu)	41
Totalizers (Submenu)	41

U

User management (Submenu)	75
User role (Parameter)	75

V

Value per pulse (Parameter)	18, 60
Volume flow (Parameter)	36
Volume flow factor (Parameter)	52
Volume flow offset (Parameter)	52
Volume flow unit (Parameter)	8, 38
Volume unit (Parameter)	9, 39

W

Wizard

Commissioning	6
Device identification	6
Process	11
Pulse/frequency/switch output 1 to n	13
System units	8
Time format	23
Totalizer 1 to n	9

Z

Zero adjustment (Submenu)	51
Zero point (Parameter)	53
Zero point adjustment control (Parameter)	51



71656471

www.addresses.endress.com
