

Safety Instructions

TX6x

RTD/TC modular thermometers

1Ex d IIC T6...T1 Gb X

Ga/Gb Ex d IIC T6...T1 X

Ex tb IIIC T85 °C...T450 °C Db X

Ex ta/tb IIIC T85 °C...T450 °C Da/Db X



TX6x

RTD/TC modular thermometers

Table of contents

About this document	3
Associated documentation	3
Supplementary documentation	3
Certificates and declarations	3
Manufacturer address	3
Safety instructions	4
Safety instructions: Installation of protection flameproof	4
Safety instructions: Installation of dust ignition protection	5
Safety instructions: Partition wall	6
Safety instructions: Specific conditions of use	6
Temperature tables	7
Electrical connection data	7

About this document

The document number of these Safety Instructions (XA) must match the information on the nameplate.

Associated documentation

To commission the device, please observe the Operating Instructions pertaining to the device:

www.endress.com/<product code>, e.g. TR66

Supplementary documentation

Explosion protection brochure: CP00021Z

The explosion protection brochure is available on the Internet:

www.endress.com/Downloads

Certificates and declarations**EAC certificate**

The device meet the fundamental health and safety requirements for the design and construction of devices and protective systems intended for use in potentially explosive atmospheres.

- Certification body: ТОО/Ж ШС "Т-Стандарт"
- Certificate number: EAЭС KZ 7500525.01.01.01909


Affixing the certificate number certifies conformity with the following standards:

- GOST 31610.0-2019 (IEC 60079-0:2017)
- GOST IEC 60079-1-2013
- GOST IEC 60079-31-2013
- GOST 31610.26-2016 (IEC 60079-26:2014)

Manufacturer address

Endress+Hauser Wetzler GmbH + Co. KG
Obere Wank 1
87484 Nesselwang, Germany

Safety instructions

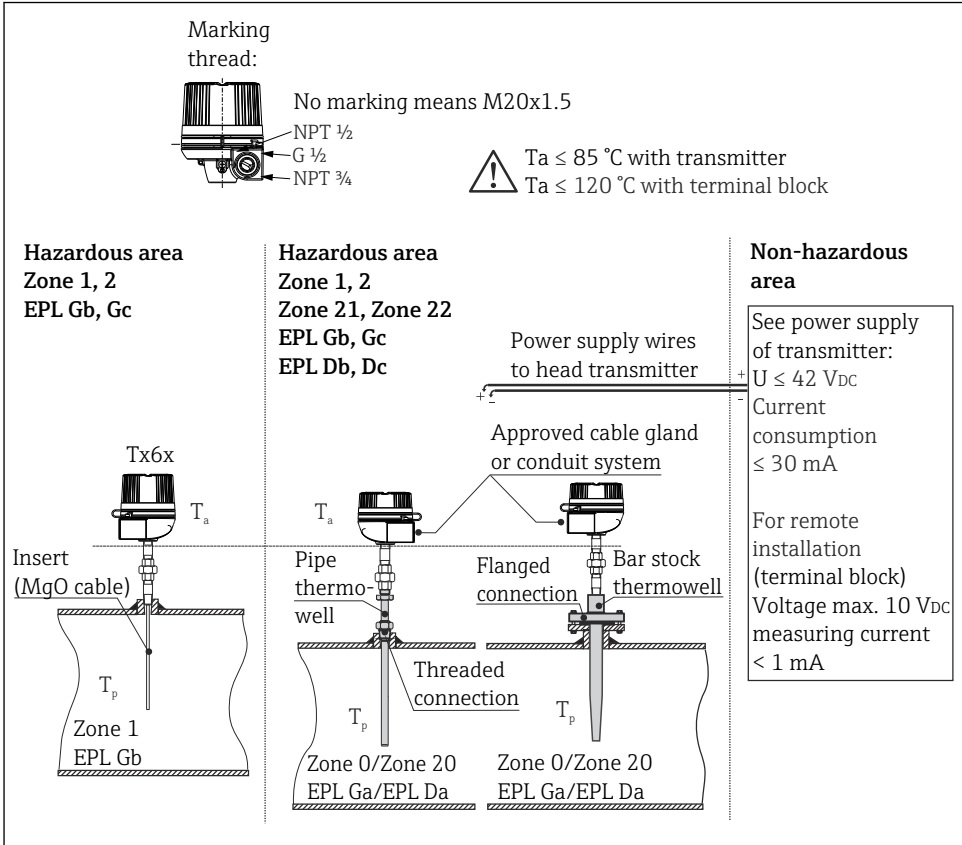

Safety instructions: Installation of protection flameproof

- Comply with the installation and safety instructions in the Operating Instructions.
- Install the device according to the manufacturer's instructions and any other valid standards and regulations (e.g. EN/IEC 60079-14).
- The housing of the thermometer must be connected to the potential matching line.
- Only the approved wire entries as specified in paragraph 10 of EN/IEC 60079-14, paragraph 16 of EN/IEC 60079-0, paragraph 13 of EN/IEC 60079-1 must be used.
- For connection through a conduit entry approved for this purpose the associated sealing facility shall be mounted directly to the housing.

- Seal the cable entries with certified cable glands and or blanking elements which have at least type of protection Ex db and Ex tb suitable for Group IIC and IIIC (degree of protection IP6X).
- The maximum specified ambient temperature T_a at terminal head may not be exceeded.
- If this equipment is used above $+65\text{ }^\circ\text{C}$, the cables and cable gland shall be suitable at least max. $T_a + 12\text{K}$.
- During operation, the cover must be screwed all the way in and the cover's safety catch must be fastened.
- The thermometer must be installed so, that even in the event of rare incidents, an ignition source due to impact or friction between the enclosure and iron/steel is excluded.

WARNING

Potentially explosive atmospheres

- ▶ Do not open the electrical connection of the supply circuit when energized if there is a potentially explosive atmosphere.

Safety instructions: Installation of dust ignition protection

- Comply with the installation and safety instructions in the Operating Instructions.
- Install the device according to the manufacturer's instructions and any other valid standards and regulations (e.g. EN/IEC 60079-14).
- Seal the cable entries tight with certified cables which have at least type of protection Ex tb suitable for Group IIIC (degree of protection IP6X)
- The housing of the thermometer must be connected to the potential matching line.
- If this equipment is used above $+65\text{ }^\circ\text{C}$, the cables and cable gland shall be suitable at least max. $T_a + 12\text{K}$.

WARNING

Explosive atmosphere

- ▶ In an explosive atmosphere, do not open the device when voltage is supplied (ensure that the IP6x housing protection is maintained during operation).

**Safety
instructions:
Partition wall**

- The provided thermowells are out of materials AISI316/1.4401, AISI316L/1.4404, 1.4435, AISI A105/1.0460, AISI 446/1.4749, Alloy 600/2.4816, AISI 316Ti/W1.4571, Hastelloy® C- 276/2.4819 or Alloy 400/2.4360 and have a minimum thickness of at least 1 mm.
- Install the thermometer in a partition wall which is in compliance with EN/IEC 60079-26 in reference to its ultimate application.
- Use only thermowells out of materials complying with EN/IEC 60079-0 chapter 8.3 (e.g. AISI316/.1.4401, AISI316L/.1.4404, AISI 316Ti/1.4571...)

**Safety
instructions:
Specific
conditions of use**

- The flameproof joints are not intended to be repaired.
- Sensors of TX6x with diameter smaller than 6 mm shall be protected by thermowell.
- It shall be verified, taking into account the worst case process and ambient temperatures,
 - that the temperature of the enclosure at the process connection point does not exceed the ambient temperature range of the assembly and
 - the temperature of the optionally used RBFF1NS union does not exceed the service temperature range of -50 to +150 °C for following option:
 Neck length N; Material; Fitting;
D 104 mm; 316; NU 1/2"NPT F
E 156 mm; 316; NUN 1/2"NPT M
H 104 mm; A105; NU 1/2"NPT F
- Install only head transmitters not exceeding a maximum power dissipation of 2.2 W with a temperature input rating not exceeding 10 V_{DC} and 1 mA.
- For assure that the temperature assembly has a degree of protection of IP6X the user shall provide a thermowell or equivalent component at the process side.

Temperature tables

The relation between the type, electrical connection, temperature class, maximum surface temperature, ambient temperature range and process temperature range is shown in the following table.

Type	Electrical connection	Temperature class	Maximum surface temperature	Ambient temperature range	Process temperature range Insert diameter	
					3 mm, 6 mm dual	6 mm
Tx6x	Terminal block ¹⁾ (C)	T6	T85 °C	-50 to +70 °C	-50 to +55 °C	-50 to +68 °C
		T5	T100 °C	-50 to +80 °C	-50 to +70 °C	-50 to +83 °C
		T4	T135 °C	-50 to +120 °C	-50 to +105 °C	-50 to +118 °C
		T3	T200 °C	-50 to +120 °C	-50 to +170 °C	-50 to +183 °C
		T2	T300 °C	-50 to +120 °C	-50 to +265 °C	-50 to +278 °C
		T1	T450 °C	-50 to +120 °C	-50 to +415 °C	-50 to +428 °C
	Flying leads (F) or Transmitter iTEMP TMT71(A) iTEMP TMT72 (E) iTEMP TMT82 (K, L, M, N) iTEMP TMT84 (B) iTEMP TMT85 (D) iTEMP TMT31 (U, O) iTEMP TMT86 (X, Z)	T6	T85 °C	-40 to +65 °C	-50 to +55 °C	-50 to +68 °C
		T5	T100 °C	-40 to +80 °C	-50 to +70 °C	-50 to +83 °C
		T4	T135 °C	-40 to +85 °C	-50 to +105 °C	-50 to +118 °C
		T3	T200 °C	-40 to +85 °C	-50 to +170 °C	-50 to +183 °C
		T2	T300 °C	-40 to +85 °C	-50 to +265 °C	-50 to +278 °C
		T1	T450 °C	-40 to +85 °C	-50 to +415 °C	-50 to +428 °C

1) in an enclosure with a blind cover;

Electrical connection data

Type	Electrical data
TX6x	$U_b \leq 42 V_{DC}$ Current consumption $\leq 30 \text{ mA}$ Remote installation: Voltage max. $10 V_{DC}$ Measuring current $I < 1 \text{ mA}$



71665544

www.addresses.endress.com
