# Technical Information **Proline Promass O 100**

Coriolis flowmeter



# The robust high-pressure measuring instrument with an ultra-compact transmitter

## Application

- Measuring principle operates independently of physical fluid properties such as viscosity or density
- For premium accuracy at highest process pressures, fully suitable for offshore conditions

### Device properties

- Measuring tube in 25Cr Duplex, 1.4410 (UNS S32750)
- Process pressure up to PN 250 (Class 1500)
- Nominal diameter: DN 80 to 250 (3 to 10")
- Robust, ultra-compact transmitter housing
- Highest degree of protection: IP69K
- Local display available

#### Your benefits

- Maximum safety highest resistance to stress corrosion cracking
- Fewer process measuring points multivariable measurement (flow, density, temperature)
- Space-saving installation no in-/outlet run needs
- Space-saving transmitter full functionality on smallest footprint
- Time-saving local operation without additional software and hardware – integrated web server
- Integrated verification Heartbeat Technology



# Table of contents

About this document	4	Degree of protection	49
Symbols	. 4	Shock and vibration resistance	
		Electromagnetic compatibility (EMC)	49
Function and system design	. 5		
Measuring principle			49
Measuring system		Medium temperature range	
Equipment architecture	8	Pressure-temperature ratings	50
Reliability	8	Sensor housing	
		Rupture disk	
Input	. 9	Flow limit	51
Measured variable		Pressure loss	52
Measuring range		Static pressure	52
Operable flow range		Thermal insulation	52
Input signal		Heating	52 53
Output	10		
Output signal	10	Mechanical construction	54
Signal on alarm	1	Dimensions in SI units	54
Ex connection data	13	Dimensions in US units	
Low flow cut off	14	Weight	
Protocol-specific data	14	Materials	
•		Process connections	
Power supply	24	Surface roughness	05
Terminal assignment			
Pin assignment, device plug		Operability	
Supply voltage	34	Operating concept	
Power consumption		Local display	
Current consumption	34	Remote operation	
Device fuse		Service interface	66
Power supply failure	35		
Electrical connection	35	Certificates and approvals	68
Potential equalization	39	CE mark	68
Terminals	39	UKCA marking	69
Cable entries	40	RCM marking	
Cable specification	40	Ex approval	69
		HART certification	
Performance characteristics	41	Certification PROFIBUS	70
Reference operating conditions		Certification PROFINET	70
Maximum measurement error		EtherNet/IP certification	
Repeatability	42	Modbus RS485 certification	70
Response time	43	Pressure Equipment Directive External standards and guidelines	70 70
Influence of ambient temperature	43	LATERNAL STANDARDS AND GUIDENINES	70
Influence of medium temperature	43		
Influence of medium pressure	44	Ordering information	71
Design fundamentals	44		
		Application packages	71
Installation	45	Heartbeat Technology	71
Installation point		Concentration measurement	72
Orientation	46	Special density	
Inlet and outlet runs	47	Extended density	72
Special mounting instructions	47		
Installing the Safety Barrier Promass 100	48	Accessories	73
		Device-specific accessories	73
Environment	49	Communication-specific accessories	
Ambient temperature range	49	Service-specific accessories	
Storage temperature	49	System components	
Climate class	49	•	
	1		

Supplementary documentation	75
Standard documentation	75
Supplementary device-dependent documentation	75
Registered trademarks	76

# About this document

## Symbols Electrical symbols

Symbol	Meaning
	Direct current
~	Alternating current
$\overline{\sim}$	Direct current and alternating current
=	Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
	Potential equalization connection (PE: protective earth) Ground terminals that must be connected to ground prior to establishing any other connections.
	The ground terminals are located on the interior and exterior of the device:  Interior ground terminal: potential equalization is connected to the supply network.  Exterior ground terminal: device is connected to the plant grounding system.

## $Symbols \ for \ certain \ types \ of \ information$

Symbol	Meaning
$\checkmark$	Permitted Procedures, processes or actions that are permitted.
	Preferred Procedures, processes or actions that are preferred.
X	Forbidden Procedures, processes or actions that are forbidden.
i	Tip Indicates additional information.
	Reference to documentation
A=	Reference to page
	Reference to graphic
	Visual inspection

## Symbols in graphics

Symbol	Meaning
1, 2, 3,	Item numbers
1., 2., 3.,	Series of steps
A, B, C,	Views
A-A, B-B, C-C,	Sections
EX	Hazardous area
×	Safe area (non-hazardous area)
≋➡	Flow direction

## Function and system design

#### Measuring principle

The measuring principle is based on the controlled generation of Coriolis forces. These forces are always present in a system when both translational and rotational movements are superimposed.

 $F_c = 2 \cdot \Delta m (v \cdot \omega)$ 

 $F_c$  = Coriolis force

 $\Delta m = moving mass$ 


 $\omega$  = rotational velocity

v = radial velocity in rotating or oscillating system

The amplitude of the Coriolis force depends on the moving mass  $\Delta m$ , its velocity v in the system and thus on the mass flow. Instead of a constant rotational velocity  $\omega$ , the sensor uses oscillation.

In the sensor, two parallel measuring tubes containing flowing fluid oscillate in antiphase, acting like a tuning fork. The Coriolis forces produced at the measuring tubes cause a phase shift in the tube oscillations (see illustration):

- At zero flow (when the fluid is at a standstill) the two tubes oscillate in phase (1).
- Mass flow causes deceleration of the oscillation at the inlet of the tubes (2) and acceleration at the outlet (3).

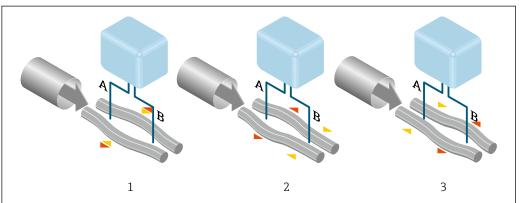

A0028850

The phase difference (A-B) increases with increasing mass flow. Electrodynamic sensors register the tube oscillations at the inlet and outlet. System balance is ensured by the antiphase oscillation of the two measuring tubes. The measuring principle operates independently of temperature, pressure, viscosity, conductivity and flow profile.

#### Density measurement

The measuring tube is continuously excited at its resonance frequency. A change in the mass and thus the density of the oscillating system (comprising measuring tube and fluid) results in a corresponding, automatic adjustment in the oscillation frequency. The resonance frequency is thus a function of the medium density. The microprocessor utilizes this relationship to obtain a density signal.

## Volume measurement

Together with the measured mass flow, this is used to calculate the volume flow.

## Temperature measurement

The temperature of the measuring tube is determined in order to calculate the compensation factor due to temperature effects. This signal corresponds to the process temperature and is also available as an output signal.

#### Gas Fraction Handler (GFH)

The Gas Fraction Handler is a Promass software function that improves measurement stability and repeatability. The function continuously checks for the presence of disturbances in single-phase flow, i.e. gas bubbles in liquids or droplets in gas. In the presence of the second phase, flow and density become increasingly unstable. The Gas Fraction Handler function improves measurement stability

with respect to the severity of the disturbances, without any effect under single-phase flow conditions.

The Gas Fraction Handler is only available in device versions with HART, Modbus RS485, PROFINET and PROFINET with Ethernet-APL.

For detailed information on the Gas Fraction Handler, see the Special Documentation for "Gas Fraction Handler"


## Measuring system

The device consists of a transmitter and a sensor. If a device with Modbus RS485 intrinsically safe is ordered, the Safety Barrier Promass 100 is part of the scope of supply and must be implemented to operate the device.

The device is available as a compact version:

The transmitter and sensor form a mechanical unit.

#### Transmitter

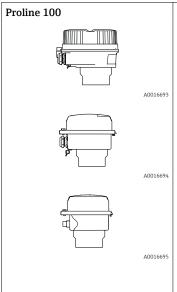

Device versions and materials:

- Compact, aluminum, coated:
   Aluminum, AlSi10Mg, coated
- Compact, stainless:
   Stainless steel 1.4404 (316L)
- Ultra-compact, stainless:
   Stainless steel 1.4404 (316L)


#### Configuration:

- Via operating tools (e.g. FieldCare, DeviceCare)
- Also for device version with local display (LCD):
   Via web browser (e.g. Microsoft Internet Explorer)
- Also for device version with 4-20 mA HART, pulse/frequency/switch output:

Via web browser (e.g. Microsoft Internet Explorer)


- Also for device version with EtherNet/IP output:
  - Via web browser (e.g. Microsoft Internet Explorer)
  - Via Add-on Profile Level 3 for automation system from Rockwell Automation
  - Via Electronic Data Sheet (EDS)
- Also for device version with PROFINET output:
  - Via web browser (e.g. Microsoft Internet Explorer)
  - Via device master file (GSD)

## Sensor

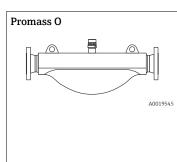


- Bent dual-tube system
- For use at high pressures
- Simultaneous measurement of flow, volume flow, density and temperature (multivariable)
- Suitable for offshore applications
- Nominal diameters: DN 80 to 250 (3 to 10")
- Materials:
  - Sensor: stainless steel, 1.4404 (316L)
  - Measuring tubes:
    - Stainless steel, 1.4410/UNS S32750 25Cr Duplex (Super Duplex)
  - Process connections:
     Stainless steel, 1.4410/F53 25Cr Duplex (Super Duplex)

## **Safety Barrier Promass 100**

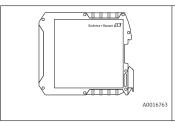

- Dual-channel safety barrier for installation in non-hazardous locations or zone 2/div. 2:
  - Channel 1: DC 24 V power supply
  - Channel 2: Modbus RS485
- In addition to current, voltage and power limitation, it offers galvanic isolation of circuits for explosion protection.
- Easy top-hat rail mounting (DIN 35 mm) for installation in control cabinets

## **Equipment architecture**

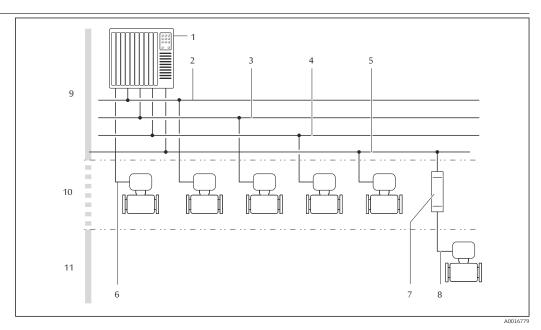

 $\ \blacksquare \ 1$  Possibilities for integrating measuring devices into a system

- 1 Control system (e.g. PLC)
- 2 EtherNet/IP
- 3 PROFIBUS DP
- 4 PROFINET
- 5 Modbus RS485
- 6 4-20 mA HART, pulse/frequency/switch output
- 7 Safety Barrier Promass 100
- 8 Modbus RS485 intrinsically safe
- 9 Non-hazardous area
- 10 Non-hazardous area and Zone 2/Div. 2
- 11 Hazardous area and Zone 1/Div. 1

## Reliability IT security

Our warranty is valid only if the product is installed and used as described in the Operating Instructions. The product is equipped with security mechanisms to protect it against any inadvertent changes to the settings.

IT security measures, which provide additional protection for the product and associated data transfer, must be implemented by the operators themselves in line with their security standards.

8

# Input

#### Measured variable

#### Direct measured variables

- Mass flow
- Density
- Temperature

#### Calculated measured variables

- Volume flow
- Corrected volume flow
- Reference density

#### Measuring range

## Measuring range for liquids


DN		Measuring range full scal	e values $\dot{m}_{\min(F)}$ to $\dot{m}_{\max(F)}$
[mm]	[in]	[kg/h]	[lb/min]
80	3	0 to 180 000	0 to 6615
100	4	0 to 350 000	0 to 12860
150	6	0 to 800 000	0 to 29400

#### Measuring range for gases

The full scale value depends on the density and the sound velocity of the gas used. The full scale value can be calculated with the following formulas:

$$\dot{m}_{\text{max}(G)} = (\rho_G \cdot (c_G/m) \cdot d_i^2 \cdot (\pi/4) \cdot 3600 \cdot n)$$

m <sub>max(G)</sub>	Maximum full scale value for gas [kg/h]
ρ <sub>G</sub>	Gas density in [kg/m³] at operating conditions
$\mathbf{c}_{G}$	Sound velocity (gas) [m/s]
d <sub>i</sub>	Measuring tube internal diameter [m]
π	Pi
n = 2	Number of measuring tubes
m = 2	For all gases except pure H2 and He gas
m = 3	For pure H2 and He gas

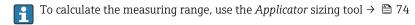

## Recommended measuring range



Flow limit  $\rightarrow$   $\blacksquare$  51

## Operable flow range

Over 1000:1.


Flow rates above the preset full scale value do not override the electronics unit, with the result that the totalizer values are registered correctly.

#### Input signal

#### External measured values

To increase the measurement accuracy of certain measured variables or to calculate the corrected volume flow for gases, the automation system can continuously write different measured values to the measuring instrument:

- Operating pressure to increase measurement accuracy (Endress+Hauser recommends the use of a pressure measuring instrument for absolute pressure, e.g. Cerabar M or Cerabar S)
- Medium temperature to increase measurement accuracy (e.g. iTEMP)
- Reference density for calculating the corrected volume flow for gases

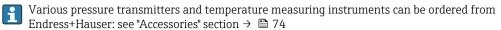

It is recommended to read in external measured values to calculate the following measured variables:

- Mass flow
- Corrected volume flow

#### HART protocol

The measured values are written from the automation system to the measuring device via the HART protocol. The pressure transmitter must support the following protocol-specific functions:

- HART protocol
- Burst mode

#### Digital communication

The measured values can be written by the automation system via:

- PROFIBUS DP
- Modbus RS485
- Ethernet/IP
- PROFINET

## Output

#### Output signal

#### HART current output

Current output	4-20 mA HART (active)
Maximum output values	<ul><li>DC 24 V (no flow)</li><li>22.5 mA</li></ul>
Load	$0$ to $700\Omega$
Resolution	0.38 μΑ
Damping	Configurable: 0.07 to 999 s
Assignable measured variables	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>The range of options increases if the measuring device has one or more application packages.</li> </ul>

#### Pulse/frequency/switch output

Function	Can be set to pulse, frequency or switch output
Version	Passive, open collector
Maximum input values	■ DC 30 V ■ 25 mA
Voltage drop	For 25 mA: ≤ DC 2 V
Pulse output	

Pulse width	Configurable: 0.05 to 2 000 ms	
Maximum pulse rate	10 000 Impulse/s	
Pulse value	Adjustable	
Assignable measured variables	Mass flow Volume flow Corrected volume flow	
Frequency output		
Output frequency	Configurable: 0 to 10 000 Hz	
Damping	Configurable: 0 to 999 s	
Pulse/pause ratio	1:1	
Assignable measured variables	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>The range of options increases if the measuring device has one or more application packages.</li> </ul>	
Switch output		
Switching behavior	Binary, conductive or non-conductive	
Switching delay	Configurable: 0 to 100 s	
Number of switching cycles	Unlimited	
Assignable functions	<ul> <li>Off</li> <li>On</li> <li>Diagnostic behavior</li> <li>Limit value</li> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>Totalizer 1-3</li> <li>Flow direction monitoring</li> <li>Status</li> <li>Partially filled pipe detection</li> <li>Low flow cut off</li> <li>The range of options increases if the measuring device has one or more application packages.</li> </ul>	

## PROFIBUS DP

Signal encoding	NRZ code
Data transfer	9.6 kBaud12 MBaud
Terminating resistor	Integrated, can be activated via DIP switches

## Modbus RS485

Physical interface	In accordance with EIA/TIA-485-A standard
Terminating resistor	<ul> <li>For device version used in non-hazardous areas or Zone 2/Div. 2: integrated and can be activated via DIP switches on the transmitter electronics module</li> <li>For device version used in intrinsically safe areas: integrated and can be activated via DIP switches on the Safety Barrier Promass 100</li> </ul>

## EtherNet/IP

## **PROFINET**

Standards In accordance with IEEE 802.3	
---	--

## Signal on alarm

Depending on the interface, failure information is displayed as follows:

## Current output 4 to 20 mA

#### 4 to 20 mA

Failure mode	Choose from:  4 to 20 mA in accordance with NAMUR recommendation NE 43  4 to 20 mA in accordance with US  Min. value: 3.59 mA  Max. value: 22.5 mA  Definable value between: 3.59 to 22.5 mA  Actual value  Last valid value
--------------	--

## Pulse/frequency/switch output

Pulse output	
Fault mode	Choose from:  Actual value  No pulses
Frequency output	
Fault mode	Choose from:  Actual value  O Hz  Definable value between: 0 to 12 500 Hz
Switch output	
Fault mode	Choose from:  Current status  Open  Closed

## PROFIBUS DP

Status and alarm	Diagnostics in accordance with PROFIBUS PA Profile 3.02
messages	

## Modbus RS485

Failure mode	Choose from:
	■ NaN value instead of current value
	■ Last valid value

## EtherNet/IP

Device diagnostics	Device condition can be read out in Input Assembly
--------------------	--

#### **PROFINET**

Device diagnostics	According to "Application Layer protocol for decentralized periphery", Version 2.3
--------------------	--

## Local display

Plain text display	With information on cause and remedial measures
Backlight	Red backlighting indicates a device error.



Status signal as per NAMUR recommendation NE 107

## Interface/protocol

- Via digital communication:
  - HART protocol
  - PROFIBUS DP
  - Modbus RS485
  - EtherNet/IP
  - PROFINET
- Via service interface CDI-RJ45 service interface

Plain text display	With information on cause and remedial measures
--------------------	---



Additional information on remote operation  $\rightarrow \stackrel{ ext{$\cong$}}{} 64$ 

#### Web browser

Plain text display	With information on cause and remedial measures
--------------------	---

## Light emitting diodes (LED)

Status information	Status indicated by various light emitting diodes
	The following information is displayed depending on the device version:
	Supply voltage active
	Data transmission active
	Device alarm/error has occurred
	■ EtherNet/IP network available
	■ EtherNet/IP connection established
	■ PROFINET network available
	■ PROFINET connection established
	PROFINET blinking feature

## Ex connection data

These values only apply for the following device version:

Order code for "Output", option M "Modbus RS485", for use in intrinsically safe areas

## **Safety Barrier Promass 100**

#### Safety-related values

Terminal numbers			
Supply voltage		Signal tra	nsmission
2 (L-) 1 (L+)		26 (B)	27 (A)
U <sub>nom</sub> = DC 24 V U <sub>max</sub> = AC 260 V		$U_{\text{nom}} = U_{\text{max}} = A$	

## Intrinsically safe values

Terminal numbers			
Supply voltage Signal transmission			nsmission
20 (L-) 10 (L+) 62 (B)		72 (A)	
$\begin{array}{c} U_o = 16.24 \ V \\ I_o = 623 \ mA \\ P_o = 2.45 \ W \\ With \ IIC^{1)}: L_o = 92.8 \ \mu\text{H}, C_o = 0.433 \ \mu\text{F}, L_o/R_o = 14.6 \ \mu\text{H}/\Omega \\ With \ IIB: L_o = 372 \ \mu\text{H}, C_o = 2.57 \ \mu\text{F}, L_o/R_o = 58.3 \ \mu\text{H}/\Omega \end{array}$			
For an overview and for information on the interdependencies between the gas group - sensor - nominal diameter, see the "Safety Instructions" (XA) document for the measuring device			

1) The gas group depends on the sensor and nominal diameter ff.

## Transmitter

Intrinsically safe values

	Order code	Terminal numbers			
■ Option <b>BM</b> : ATEX II2G + IECEx Z1 Ex ia, II2D Ex tb  ■ Option <b>BO</b> : ATEX II1/2G + IECEx Z0/Z1 Ex ia, II2D  ■ Option <b>BQ</b> : ATEX II1/2G + IECEx Z0/Z1 Ex ia  ■ Option <b>BU</b> : ATEX II2G + IECEx Z1 Ex ia  ■ Option <b>BU</b> : ATEX II2G + IECEx Z1 Ex ia  ■ Option <b>C2</b> : CSA C/US IS Cl. I, II, III Div. 1  ■ Option <b>85</b> : ATEX II2G + IECEx Z1 Ex ia + CSA C/US	"Approval"	Supply voltage Signal transmiss		nsmission	
■ Option <b>BO</b> : ATEX II1/2G + IECEx Z0/Z1 Ex ia, II2D		20 (L-)	10 (L+)	62 (B)	72 (A)

| | |

diameter, see the "Safety Instructions" (XA) document for the measuring device

## Low flow cut off

The switch points for low flow cut off are user-selectable.

## Protocol-specific data

## HART

Manufacturer ID	0x11
Device type ID	0x4A
HART protocol revision	7
Device description files (DTM, DD)	Information and files under: www.endress.com
HART load	Min. 250 Ω

Dynamic variables	Read out the dynamic variables: HART command 3 The measured variables can be freely assigned to the dynamic variables.
	Measured variables for PV (primary dynamic variable)  Mass flow Volume flow Corrected volume flow Density Reference density Temperature
	Measured variables for SV, TV, QV (secondary, tertiary and quaternary dynamic variable)  Mass flow  Volume flow  Corrected volume flow  Density  Reference density  Temperature  Totalizer 1  Totalizer 2  Totalizer 3
	The range of options increases if the measuring device has one or more application packages.  Heartbeat Technology application package  Additional measured variables are available with the Heartbeat Technology application package:  Carrier pipe temperature  Oscillation amplitude 0
Device variables	Read out the device variables: HART command 9 The device variables are permanently assigned.  A maximum of 8 device variables can be transmitted:  0 = mass flow 1 = volume flow 2 = corrected volume flow 3 = density 4 = reference density 5 = temperature 6 = totalizer 1 7 = totalizer 2 8 = totalizer 3 13 = target mass flow 14 = carrier mass flow 15 = concentration

## PROFIBUS DP

Manufacturer ID	0x11
Ident number	0x1561
Profile version	3.02
Device description files (GSD, DTM, DD)	Information and files available at:  ■ https://www.endress.com/download On the device product page: PRODUCTS → Product Finder → Links ■ https://www.profibus.com

[a	
Output values	Analog input 1 to 8
(from measuring instrument to	Mass flow
automation system)	Volume flow
	Corrected volume flow     Torget more flow
	Target mass flow     Common mass flow
	Carrier mass flow     Descite
	Density     Reference density
	<ul><li>Reference density</li><li>Concentration</li></ul>
	Temperature     Carrier pipe temperature
	<ul><li>Carrier pipe temperature</li><li>Electronics temperature</li></ul>
	Oscillation frequency
	Oscillation amplitude
	Frequency fluctuation
	Oscillation damping
	Tube damping fluctuation
	Signal asymmetry
	Exciter current
	Digital input 1 to 2
	Partially filled pipe detection
	Low flow cut off
	Totalizer 1 to 3
	Mass flow
	■ Volume flow
	Corrected volume flow
Input values	Analog output 1 to 3 (fixed assignment)
(from automation system to	Pressure
measuring instrument)	■ Temperature
measuring mistrament,	Reference density
	Digital output 1 to 3 (fixed assignment)
	Digital output 1: switch positive zero return on/off
	Digital output 2: perform zero adjustment     Digital output 2: perform zero adjustment
	Digital output 3: switch switch output on/off
	Totalizer 1 to 3
	■ Totalize
	Reset and hold
	Preset and hold
	■ Stop
	Operating mode configuration:
	• Net flow total
	Forward flow total
	Reverse flow total
Supported functions	■ Identification & maintenance
	Straightforward device identification on the part of the control system and
	nameplate
	■ PROFIBUS upload/download
	Reading and writing parameters is up to ten times faster with PROFIBUS
	upload/download.
	■ Condensed status
	Straightforward and self-explanatory diagnostic information by
	categorizing diagnostic messages that occur
Configuration of the device	■ DIP switches on the I/O electronics module
address	Via operating tools (e.g. FieldCare)
auaress	- via operating tools (e.g. Fieldcare)

#### Modbus RS485

Protocol	Modbus Applications Protocol Specification V1.1	
Device type	Slave	
Slave address range	1 to 247	
Broadcast address range	0	

Function codes	<ul> <li>03: Read holding register</li> <li>04: Read input register</li> <li>06: Write single registers</li> <li>08: Diagnostics</li> <li>16: Write multiple registers</li> <li>23: Read/write multiple registers</li> </ul>
Broadcast messages	Supported by the following function codes:  06: Write single registers  16: Write multiple registers  23: Read/write multiple registers
Supported baud rate	<ul> <li>1200 BAUD</li> <li>2400 BAUD</li> <li>4800 BAUD</li> <li>9600 BAUD</li> <li>19200 BAUD</li> <li>38400 BAUD</li> <li>57600 BAUD</li> <li>115200 BAUD</li> </ul>
Data transfer mode	• ASCII • RTU
Data access	Each device parameter can be accessed via Modbus RS485.  For Modbus register information, see "Description of device parameters" documentation →   75

## EtherNet/IP

Protocol	■ The CIP Networks Library Volume 1: Common Industrial Protocol ■ The CIP Networks Library Volume 2: Ethernet/IP Adaptation of CIP	
Communication type	■ 10Base-T ■ 100Base-TX	
Device profile	Generic device (product type: 0x2B)	
Manufacturer ID	0x49E	
Device type ID	0x104A	
Baud rates	Automatic 10/100 Mbit with half-duplex and full-duplex detection	
Polarity	Auto-polarity for automatic correction of crossed TxD and RxD pairs	
Supported CIP connections	Max. 3 connections	
Explicit connections	Max. 6 connections	
I/O connections	Max. 6 connections (scanner)	
Configuration options for measuring instrument	<ul> <li>DIP switches on the electronics module for IP addressing</li> <li>Manufacturer-specific software (FieldCare)</li> <li>Add-on Profile Level 3 for Rockwell Automation control systems</li> <li>Web browser</li> <li>Electronic Data Sheet (EDS) integrated in the measuring instrument</li> </ul>	
Configuration of the EtherNet interface	<ul> <li>Speed: 10 MBit, 100 MBit, auto (factory setting)</li> <li>Duplex: half-duplex, full-duplex, auto (factory setting)</li> </ul>	
Configuration of the device address	<ul> <li>DIP switches on the electronics module for IP addressing (last octet)</li> <li>DHCP</li> <li>Manufacturer-specific software (FieldCare)</li> <li>Add-on Profile Level 3 for Rockwell Automation control systems</li> <li>Web browser</li> <li>Ethernet/IP tools, e.g. RSLinx (Rockwell Automation)</li> </ul>	
Device Level Ring (DLR)	No	

RPI	5 ms to 10 s (factory setting: 2	5 ms to 10 s (factory setting: 20 ms)		
Exclusive Owner Multicast		Instance	Size [byte]	
	Instance configuration:	0x68	398	
	$O \rightarrow T$ configuration:	0x66	64	
	$T \rightarrow O$ configuration:	0x64	44	
Exclusive Owner Multicast		Instance	Size [byte]	
	Instance configuration:	0x69	-	
	$O \rightarrow T$ configuration:	0x66	64	
	$T \rightarrow 0$ configuration:	0x64	44	
Input only Multicast		Instance	Size [byte]	
	Instance configuration:	0x68	398	
	$O \rightarrow T$ configuration:	0xC7	-	
	$T \rightarrow O$ configuration:	0x64	44	
Input only Multicast		Instance	Size [byte]	
	Instance configuration:	0x69	-	
	$O \rightarrow T$ configuration:	0xC7	-	
	$T \rightarrow O$ configuration:	0x64	44	
	<ul><li>Density</li><li>Reference density</li></ul>			
	<ul> <li>Reference density</li> <li>Temperature</li> <li>Totalizer 1</li> <li>Totalizer 2</li> <li>Totalizer 3</li> </ul>			
RPI	<ul><li>Reference density</li><li>Temperature</li><li>Totalizer 1</li><li>Totalizer 2</li></ul>	20 ms)		
RPI	<ul> <li>Reference density</li> <li>Temperature</li> <li>Totalizer 1</li> <li>Totalizer 2</li> <li>Totalizer 3</li> </ul>	20 ms) Instance	Size [byte]	
RPI	Reference density Temperature Totalizer 1 Totalizer 2 Totalizer 3  5 ms to 10 s (factory setting: Instance configuration:	Instance 0x68	Size [byte]	
RPI	■ Reference density ■ Temperature ■ Totalizer 1 ■ Totalizer 2 ■ Totalizer 3  5 ms to 10 s (factory setting: Instance configuration:  O → T configuration:	Instance		
RPI Exclusive Owner Multicast	Reference density Temperature Totalizer 1 Totalizer 2 Totalizer 3  5 ms to 10 s (factory setting: Instance configuration:	Instance 0x68	398	
RPI Exclusive Owner Multicast	■ Reference density ■ Temperature ■ Totalizer 1 ■ Totalizer 2 ■ Totalizer 3  5 ms to 10 s (factory setting: Instance configuration:  O → T configuration:	Instance 0x68 0x66	398 64	
RPI Exclusive Owner Multicast	■ Reference density ■ Temperature ■ Totalizer 1 ■ Totalizer 2 ■ Totalizer 3  5 ms to 10 s (factory setting: Instance configuration:  O → T configuration:	0x68 0x66 0x65	398 64 88	
RPI Exclusive Owner Multicast	<ul> <li>Reference density</li> <li>Temperature</li> <li>Totalizer 1</li> <li>Totalizer 2</li> <li>Totalizer 3</li> <li>5 ms to 10 s (factory setting:</li> <li>Instance configuration:</li> <li>O → T configuration:</li> <li>T → O configuration:</li> </ul>	Instance  0x68  0x66  0x65  Instance	398 64 88 Size [byte]	
RPI Exclusive Owner Multicast	<ul> <li>Reference density</li> <li>Temperature</li> <li>Totalizer 1</li> <li>Totalizer 2</li> <li>Totalizer 3</li> </ul> 5 ms to 10 s (factory setting: <ul> <li>Instance configuration:</li> <li>O → T configuration:</li> <li>T → O configuration:</li> </ul> Instance configuration: <ul> <li>Instance configuration:</li> </ul>	0x68 0x66 0x65 Instance 0x69	398 64 88 Size [byte]	
RPI Exclusive Owner Multicast  Exclusive Owner Multicast	<ul> <li>Reference density</li> <li>Temperature</li> <li>Totalizer 1</li> <li>Totalizer 2</li> <li>Totalizer 3</li> </ul> 5 ms to 10 s (factory setting: Instance configuration: <ul> <li>O → T configuration:</li> <li>T → O configuration:</li> <li>O → T configuration:</li> </ul> Instance configuration: <ul> <li>O → T configuration:</li> </ul>	0x68 0x66 0x65 Instance 0x69 0x66	398 64 88 Size [byte] - 64	
RPI Exclusive Owner Multicast  Exclusive Owner Multicast	<ul> <li>Reference density</li> <li>Temperature</li> <li>Totalizer 1</li> <li>Totalizer 2</li> <li>Totalizer 3</li> </ul> 5 ms to 10 s (factory setting: Instance configuration: <ul> <li>O → T configuration:</li> <li>T → O configuration:</li> <li>O → T configuration:</li> </ul> Instance configuration: <ul> <li>O → T configuration:</li> </ul>	0x68 0x66 0x65 Instance 0x69 0x66 0x65	398 64 88 Size [byte] - 64 88	
RPI Exclusive Owner Multicast  Exclusive Owner Multicast	<ul> <li>Reference density</li> <li>Temperature</li> <li>Totalizer 1</li> <li>Totalizer 2</li> <li>Totalizer 3</li> </ul> 5 ms to 10 s (factory setting: Instance configuration: <ul> <li>O → T configuration:</li> <li>T → O configuration:</li> <li>O → T configuration:</li> <li>T → O configuration:</li> </ul>	0x68 0x66 0x65 Instance 0x69 0x66 0x65 Instance	398 64 88 Size [byte] - 64 88 Size [byte]	
RPI Exclusive Owner Multicast  Exclusive Owner Multicast	<ul> <li>Reference density</li> <li>Temperature</li> <li>Totalizer 1</li> <li>Totalizer 2</li> <li>Totalizer 3</li> </ul> 5 ms to 10 s (factory setting: Instance configuration: <ul> <li>O → T configuration:</li> <li>T → O configuration:</li> <li>O → T configuration:</li> <li>Instance configuration:</li> <li>T → O configuration:</li> <li>Instance configuration:</li> </ul>	Instance  0x68  0x66  0x65  Instance  0x69  0x66  0x65  Instance  0x68	398 64 88 Size [byte] - 64 88 Size [byte] 398	
Configurable Input  RPI  Exclusive Owner Multicast  Exclusive Owner Multicast  Input only Multicast	<ul> <li>Reference density</li> <li>Temperature</li> <li>Totalizer 1</li> <li>Totalizer 2</li> <li>Totalizer 3</li> </ul> 5 ms to 10 s (factory setting: <ul> <li>Instance configuration:</li> <li>O → T configuration:</li> <li>T → O configuration:</li> <li>O → T configuration:</li> <li>T → O configuration:</li> <li>T → O configuration:</li> <li>T → Configuration:</li> <li>T → Configuration:</li> </ul>	Instance	398 64 88 Size [byte] - 64 88 Size [byte] 398 -	
RPI Exclusive Owner Multicast  Exclusive Owner Multicast  Input only Multicast	<ul> <li>Reference density</li> <li>Temperature</li> <li>Totalizer 1</li> <li>Totalizer 2</li> <li>Totalizer 3</li> </ul> 5 ms to 10 s (factory setting: <ul> <li>Instance configuration:</li> <li>O → T configuration:</li> <li>T → O configuration:</li> <li>O → T configuration:</li> <li>T → O configuration:</li> <li>T → O configuration:</li> <li>T → Configuration:</li> <li>T → Configuration:</li> </ul>	Instance  0x68  0x66  0x65  Instance  0x69  0x66  0x65  Instance  0x68  0xC7  0x65	398 64 88 Size [byte] - 64 88 Size [byte] 398 - 88	
RPI Exclusive Owner Multicast  Exclusive Owner Multicast  Input only Multicast	<ul> <li>Reference density</li> <li>Temperature</li> <li>Totalizer 1</li> <li>Totalizer 2</li> <li>Totalizer 3</li> </ul> 5 ms to 10 s (factory setting: <ul> <li>Instance configuration:</li> <li>O → T configuration:</li> <li>T → O configuration:</li> <li>O → T configuration:</li> <li>T → O configuration:</li> </ul>	Instance	398 64 88 Size [byte] - 64 88 Size [byte] 398 - 88 Size [byte]	

Configurable Input Assembly	<ul> <li>Current device diagnostics</li> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>Totalizer 1</li> <li>Totalizer 2</li> <li>Totalizer 3</li> <li>The range of options increases if the measuring device has one or more application packages.</li> </ul>
Fix output	
Output Assembly	<ul> <li>Activation of reset totalizers 1-3</li> <li>Activation of pressure compensation</li> <li>Activation of reference density compensation</li> <li>Activation of temperature compensation</li> <li>Reset totalizers 1-3</li> <li>External pressure value</li> <li>Pressure unit</li> <li>External reference density</li> <li>Reference density unit</li> <li>External temperature</li> <li>Temperature unit</li> </ul>
Configuration	
Configuration Assembly	Only the most common configurations are listed below.  Software write protection  Mass flow unit  Mass unit  Volume flow unit  Volume unit  Corrected volume flow unit  Corrected volume unit  Density unit  Reference density unit  Temperature unit  Pressure unit  Length  Totalizer 1-3:  Assignment  Unit  Mode of operation  Failure mode  Alarm delay

## PROFINET

Protocol	"Application layer protocol for decentral device periphery and distributed automation", version 2.3
Conformity class	В
Communication type	100 Mbps
Device profile	Application interface identifier 0xF600 Generic device
Manufacturer ID	0x11
Device type ID	0x844A
Device description files (GSD, DTM)	Information and files available at:  ■ https://www.endress.com/download On the device product page: PRODUCTS → Product Finder → Links ■ https://www.profibus.com
Baud rates	Automatic 100 Mbit/s with full-duplex detection

Periods	From 8 ms
Polarity	Auto-polarity for automatic correction of crossed TxD and RxD pairs
Supported connections	<ul> <li>1 x AR (Application Relation)</li> <li>1 x Input CR (Communication Relation)</li> <li>1 x Output CR (Communication Relation)</li> <li>1 x Alarm CR (Communication Relation)</li> </ul>
Configuration options for measuring instrument	<ul> <li>DIP switches on the electronics module, for device name assignment (last part)</li> <li>Manufacturer-specific software (FieldCare, DeviceCare)</li> <li>Web browser</li> <li>Device master file (GSD), can be read out via the integrated web server of the measuring instrument</li> </ul>
Configuration of the device name	<ul> <li>DIP switches on the electronics module, for device name assignment (last part)</li> <li>DCP protocol</li> </ul>
Output values (from measuring instrument to automation system)	Analog Input module (slot 1 to 14)  Mass flow  Volume flow  Corrected volume flow  Target mass flow  Carrier mass flow  Density  Reference density  Concentration  Temperature  Carrier pipe temperature  Electronics temperature  Oscillation frequency  Oscillation amplitude  Frequency fluctuation  Oscillation damping  Tube damping fluctuation  Signal asymmetry  Exciter current
	Discrete Input module (slot 1 to 14)  Empty pipe detection  Low flow cut off  Diagnostics Input module (slot 1 to 14)  Last diagnostics  Current diagnostics  Totalizer 1 to 3 (slot 15 to 17)  Mass flow
	■ Volume flow ■ Corrected volume flow Heartbeat Verification module (fixed assignment) Verification status (slot 23)
	The range of options increases if the measuring device has one or more application packages.

Input values (from automation system to measuring instrument)	Analog Output module (fixed assignment)  External pressure (slot 18)  External temperature (slot 19)  External reference density (slot 20)  Discrete Output module (fixed assignment)  Activate/deactivate positive zero return (slot 21)  Perform zero adjustment (slot 22)
	Totalizer 1 to 3 (slot 15 to 17)  Totalize  Reset and hold  Preset and hold  Stop  Operating mode configuration:  Net flow total  Forward flow total  Reverse flow total
	Heartbeat Verification module (fixed assignment) Start verification (slot 23)  The range of options increases if the measuring device has one or more application packages.
Supported functions	<ul> <li>Identification &amp; maintenance         Simple device identification via:         <ul> <li>Control system</li> <li>Nameplate</li> </ul> </li> <li>Measured value status         <ul> <li>The process variables are communicated with a measured value status</li> </ul> </li> <li>Blinking feature via the local display for simple device identification and assignment</li> </ul>

## Administration of software options

Input/output value	Process variable	Category	Slot
Output value	Mass flow	Process variable	114
	Volume flow		
	Corrected volume flow		
	Density		
	Reference density		
	Temperature		
	Electronics temperature		
	Oscillation frequency		
	Frequency fluctuation		
	Oscillation damping		
	Oscillation frequency		
	Signal asymmetry		
	Exciter current		
	Empty pipe detection	_	
	Low flow cut off		
	Current device diagnostics		
	Previous device diagnostics		
Output value	Target mass flow	Concentration 1)	114
	Carrier mass flow		
	Concentration		
Output value	Carrier pipe temperature	Heartbeat Technology <sup>2)</sup>	114

Input/output value	Process variable	Category	Slot
	Oscillation damping 1		
	Oscillation frequency 1		
	Oscillation amplitude 0		
	Oscillation amplitude 1		
	Frequency fluctuation 1		
	Tube damping fluctuation 1		
	Exciter current 1		
Input value	External density	Process monitoring	18
	External temperature		19
	External reference density		20
	Flow override		21
	Zero adjustment		22
	Verification status	Heartbeat Verification 2)	23

- 1) 2)
- Only available with the "Concentration" application package. Only available with the Heartbeat Technology application package.

## Startup configuration

# Startup configuration (NSU)

If startup configuration is enabled, the configuration of the most important device parameters is taken from the automation system and used.


The following configuration is taken from the automation system:

- Management
  - Software revision
  - Write protection
- System units
  - Mass flow
  - Mass
  - Volume flow
  - Volume
  - Corrected volume flow
  - Corrected volume
  - Density
  - Reference density
  - Temperature
  - Pressure
- Concentration application package
  - Coefficients A0 to A4
  - Coefficients B1 to B3
- Sensor adjustment
- Process parameters
  - Damping (flow, density, temperature)
  - Flow override
- Low flow cut off
  - Assign process variable
  - Switch-on/switch-off point
  - Pressure shock suppression
- Empty pipe detection
  - Assign process variable
  - Limit values
  - Response time
  - Max. damping
- Corrected volume flow calculation
  - External reference density
  - Fixed reference density
  - Reference temperature
  - Linear expansion coefficient
  - Square expansion coefficient
- Measuring mode
  - Medium
  - Gas type
  - Reference sound velocity
- Temperature coefficient sound velocity
- External compensation
  - Pressure compensation
  - Pressure value
  - External pressure
- Diagnostic settings
- Diagnostic behavior for diverse diagnostic information

# **Power supply**

## Terminal assignment

## Overview: housing version and connection versions

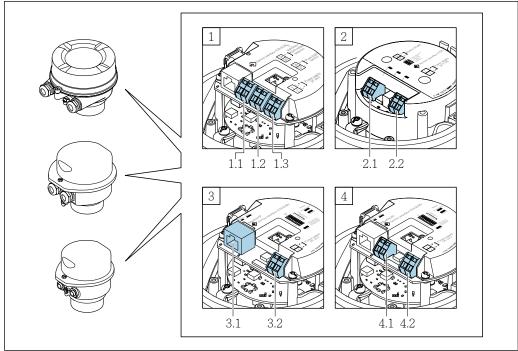

A0016770

- A Housing version: compact, aluminum coated
- B Housing version: compact, stainless
- C Housing version: ultra-compact, stainless
- 1 Connection version: 4-20 mA HART, pulse/frequency/switch output
- 1.1 Signal transmission: pulse/frequency/switch output
- 1.2 Signal transmission: 4-20 mA HART
- 1.3 Supply voltage
- 2 Connection version: Modbus RS485
- 2.1 Signal transmission
- 2.2 Supply voltage
- 3 Connection version: EtherNet/IP and PROFINET
- 3.1 Signal transmission
- 3.2 Supply voltage
- 4 Connection version: PROFIBUS DP
- 4.1 Signal transmission
- 4.2 Supply voltage

#### Transmitter

Connection version 4-20 mA HART with pulse/frequency/switch output


Order code for "Output", option  ${\bf B}$ 

Depending on the housing version, the transmitters can be ordered with terminals or device plugs.

Order code	Connection me	thods available	Possible options for order code
"Housing"	Outputs	Power supply	"Electrical connection"
Options A, B	Terminals	Terminals	<ul> <li>Option A: coupling M20x1</li> <li>Option B: thread M20x1</li> <li>Option C: thread G ½"</li> <li>Option D: thread NPT ½"</li> </ul>
Options A, B	Device plugs → 🗎 32	Terminals	■ Option <b>L</b> : plug M12x1 + thread NPT ½" ■ Option <b>N</b> : plug M12x1 + coupling M20 ■ Option <b>P</b> : plug M12x1 + thread G ½" ■ Option <b>U</b> : plug M12x1 + thread M20
Options A, B, C	Device plugs → 🖺 32	Device plugs → 🖺 32	Option <b>Q</b> : 2 x plug M12x1

Order code for "Housing":

- Option **A**: compact, coated aluminum
- ${\color{red} \bullet}$  Option  ${\bf B}:$  compact, stainless
- Option **C**: ultra-compact, stainless

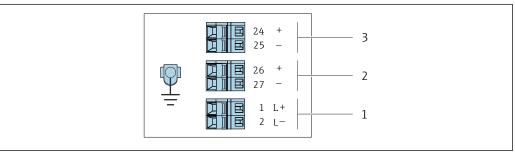

A001688

- 2 Terminal assignment 4-20 mA HART with pulse/frequency/switch output
- 1 Power supply: DC 24 V
- 2 Output 1: 4-20 mA HART (active)
- 3 Output 2: pulse/frequency/switch output (passive)

	Terminal number					
Order code "Output"	Power supply		Output 1		Output 2	
	2 (L-)	1 (L+)	27 (-)	26 (+)	25 (-)	24 (+)
Option <b>B</b>	DC 24 V		4-20 mA HART (active)		Pulse/frequency/switch output (passive)	

Order code for "Output":

Option B: 4-20 mA HART with pulse/frequency/switch output

#### PROFIBUS DP connection version

For use in the non-hazardous area and Zone 2/Div. 2


Order code for "Output", option  ${\bf L}$ 

Depending on the housing version, the transmitters can be ordered with terminals or device plugs.

Order code	Connection me	thods available	Descible antique for order and
"Housing"	Output	Power supply	Possible options for order code "Electrical connection"
Options A, B	Terminals	Terminals	<ul> <li>Option A: coupling M20x1</li> <li>Option B: thread M20x1</li> <li>Option C: thread G ½"</li> <li>Option D: thread NPT ½"</li> </ul>
Options A, B	Device plug connectors → 🖺 32	Terminals	■ Option L: plug M12x1 + thread NPT ½" ■ Option N: plug M12x1 + coupling M20 ■ Option P: plug M12x1 + thread G ½" ■ Option U: plug M12x1 + thread M20
Options A, B, C	Device plug connectors → 🖺 32	Device plug connectors → 🖺 32	Option <b>Q</b> : 2 x plug M12x1

Order code for "Housing":

- Option A: compact, coated aluminum
- Option B: compact, stainless
- Option **C**: ultra-compact, stainless

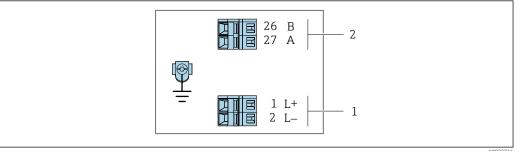

- ₩ 3 PROFIBUS DP terminal assignment
- Power supply: DC 24 V PROFIBUS DP

	Terminal number			
Order code	Power supply		Output	
"Output"	2 (L-)	1 (L+)	26 (RxD/TxD-P)	27 (RxD/TxD- N)
Option <b>L</b>	DC 24 V		В	А

Order code for "Output":

Option L: PROFIBUS DP, for use in non-hazardous areas and Zone 2/Div. 2

26

Modbus RS485 connection version

For use in the non-hazardous area and Zone 2/Div. 2


Order code for "Output", option  $\boldsymbol{M}$ 

Depending on the housing version, the transmitters can be ordered with terminals or device plugs.

Order code	Connection me	thods available	Possible options for order code
"Housing"	Output	Power supply	"Electrical connection"
Options A, B	Terminals	Terminals	<ul> <li>Option A: coupling M20x1</li> <li>Option B: thread M20x1</li> <li>Option C: thread G ½"</li> <li>Option D: thread NPT ½"</li> </ul>
Options A, B	Device plugs → 🖺 32	Terminals	■ Option L: plug M12x1 + thread NPT ½" ■ Option N: plug M12x1 + coupling M20 ■ Option P: plug M12x1 + thread G ½" ■ Option U: plug M12x1 + thread M20
Options A, B, C	Device plugs → 🖺 32	Device plugs → 🖺 32	Option <b>Q</b> : 2 x plug M12x1

Order code for "Housing":

- $\, \bullet \,$  Option A: compact, coated aluminum
- Option **B**: compact, stainless
- Option **C**: ultra-compact, stainless

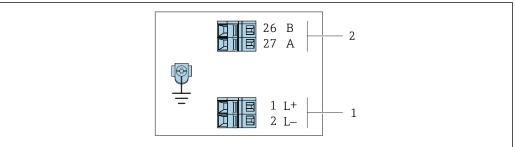

- € 4 Modbus RS485 terminal assignment, connection version for use in non-hazardous areas and Zone 2/Div.
- Power supply: DC 24 V
- Modbus RS485

	Terminal number			
Order code "Output"	Power supply		Output	
	1 (L+)	2 (L-)	26 (B)	27 (A)
Option <b>M</b>	DC 24 V		Modbus	RS485

Order code for "Output":

Option M: Modbus RS485, for use in non-hazardous areas and Zone 2/Div. 2

#### Modbus RS485 connection version

For use in the intrinsically safe area. Connection via Safety Barrier Promass 100.


Order code for "Output", option  ${\bf M}$ 

Depending on the housing version, the transmitters can be ordered with terminals or device plugs.

Order code	Connection me	thods available	Describle entions for order sade
"Housing"	Output	Power supply	Possible options for order code "Electrical connection"
Options A, B	Terminals	Terminals	<ul> <li>Option A: coupling M20x1</li> <li>Option B: thread M20x1</li> <li>Option C: thread G ½"</li> <li>Option D: thread NPT ½"</li> </ul>
A, B, C	Device plugs →		Option I: plug M12x1

Order code for "Housing":

- Option A: compact, coated aluminum
- Option B: compact, stainless
- Option C: ultra-compact, stainless

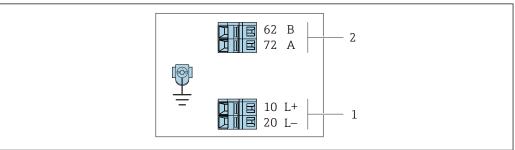

A0030219

- Modbus RS485 terminal assignment, connection version for use in intrinsically safe areas (connection via Safety Barrier Promass 100)
- 1 Intrinsically safe power supply
- 2 Modbus RS485

Order code "Output"	10 (L+)	20 (L-)	62 (B)	72 (A)
Option <b>M</b>	Intrinsically safe supply voltage		Modbus RS485	intrinsically safe

Order code for "Output":

Option  $\mathbf{M}$ : Modbus RS485, for use in the intrinsically safe area (connection via Safety Barrier Promass 100)

EtherNet/IP connection version


Order code for "Output", option  ${\bf N}$ 

Depending on the housing version, the transmitters can be ordered with terminals or device plugs.

Order code	Connection methods available		Descible entions for order sode
"Housing"	Output	Power supply	Possible options for order code "Electrical connection"
Options A, B	Device plug connectors → 🖺 33	Terminals	■ Option <b>L</b> : plug M12x1 + thread NPT ½" ■ Option <b>N</b> : plug M12x1 + coupling M20 ■ Option <b>P</b> : plug M12x1 + thread G ½" ■ Option <b>U</b> : plug M12x1 + thread M20
Options A, B, C	Device plug connectors → 🗎 33	Device plug connectors → 🗎 33	Option <b>Q</b> : 2 x plug M12x1

Order code for "Housing":

- Option A: compact, coated aluminumOption B: compact, stainless
- Option **C**: ultra-compact, stainless

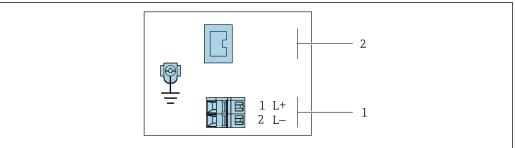

- **₽** 6 EtherNet/IP terminal assignment
- Power supply: DC 24 V
- EtherNet/IP

	Terminal number			
Order code "Output"	Power supply		Output	
	2 (L-)	1 (L+)	Device plug M12x1	
Option <b>N</b>	DC 24 V		EtherNet/IP	
Order code for "Output": Option <b>N</b> : EtherNet/IP				

#### PROFINET connection version


Order code for "Output", option  ${\bf R}$ 

Depending on the housing version, the transmitters can be ordered with terminals or device plugs.

Oudou oo do	Order code Connection methods available		Possible options for order code	
"Housing"	Output	Power supply	"Electrical connection"	
Options A, B	Device plug connectors → 🖺 31	Terminals	■ Option L: plug M12x1 + thread NPT ½" ■ Option N: plug M12x1 + coupling M20 ■ Option P: plug M12x1 + thread G ½" ■ Option U: plug M12x1 + thread M20	
Options A, B, C	Device plug connectors → 🗎 31	Device plug connectors → 🗎 31	Option <b>Q</b> : 2 x plug M12x1	

Order code for "Housing":

- Option A: compact, coated aluminum
   Option B: compact, stainless
- Option C: ultra-compact, stainless

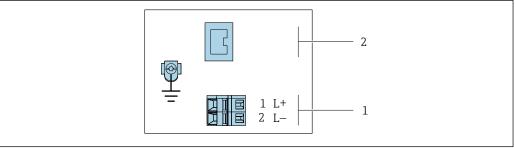


A0017054

- **₽** 7 PROFINET terminal assignment
- Power supply: DC 24 V PROFINET

	Terminal number			
Order code "Output"	Power supply		Output	
- m <b>.</b>	2 (L-)	1 (L+)	Device plug M12x1	
Option R	DC 24 V		PROFINET	
Order code for "Output": Option <b>R</b> : PROFINET				

30

#### **Safety Barrier Promass 100**

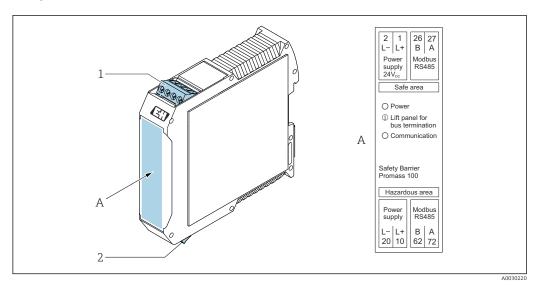

- 8 Safety Barrier Promass 100 with terminals
- 1 Non-hazardous area, Zone 2, Class I Division 2
- 2 Intrinsically safe area

#### Pin assignment, device plug


Order codes for the M12x1 plugs, see the "Order code for **electrical connection**" column:

- 4-20 mA HART, pulse/frequency/switch output → 🗎 24
- PROFIBUS DP→ 🖺 26
- Modbus RS485 → 🖺 27
- Ethernet/IP → 🗎 29
- PROFINET → 🗎 30

#### Supply voltage

Intrinsically safe for all connection versions except MODBUS RS485 (device side), male connection (nlna)

Poevice plug MODBUS RS485 intrinsically safe with supply voltage  $\rightarrow \stackrel{\square}{=} 32$ 

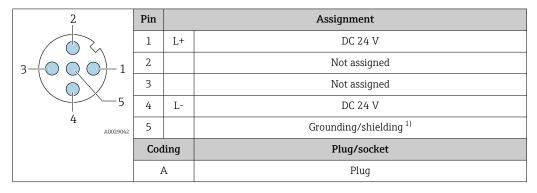

- 1) Not assigned for order code for "Housing", option C "Ultra-compact, hygienic, stainless"
- The following is recommended as a socket:
  - Binder, series 763, part no. 79 3440 35 05
  - Alternatively: Phoenix part no. 1682951 SAC-5P-5.0-PUR/M12FS SH
  - With the order code for "Output", option **B**: 4-20 mA HART, pulse/frequency/switch output
  - With the order code for "Output", option N: EtherNet/IP
  - When using the device in a hazardous location: Use a suitably certified socket.

#### 4-20 mA HART with pulse/frequency/switch output

Device plug for signal transmission (device side), female connection

2	Pin		Assignment
250	1	+	4-20 mA HART (active)
$1 \longrightarrow 0 \longrightarrow 3$	2	-	4-20 mA HART (active)
	3	+	Pulse/frequency/switch output (passive)
5	4	-	Pulse/frequency/switch output (passive)
4 A0016810	5		Grounding/shielding 1)
	Cod	ling	Plug/socket
	A	A	Socket

1) Not assigned for order code for "Housing", option C "Ultra-compact, hygienic, stainless"



• Recommended plug: Binder, series 763, part no. 79 3439 12 05


When using the device in a hazardous location, use a suitably certified plug.

#### PROFIBUS DP



For use in the non-hazardous area and Zone 2/Div. 2.

Device plug for signal transmission (device side)

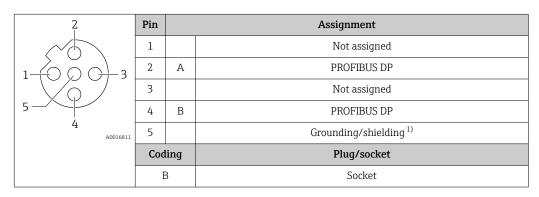

1) Not assigned for order code for "Housing", option C "Ultra-compact, hygienic, stainless"




• Recommended plug: Binder, series 763, part no. 79 4449 20 05

When using the device in a hazardous location, use a suitably certified plug.

## **MODBUS RS485**

Device plug for signal transmission with supply voltage (device side), MODBUS RS485 (intrinsically safe)

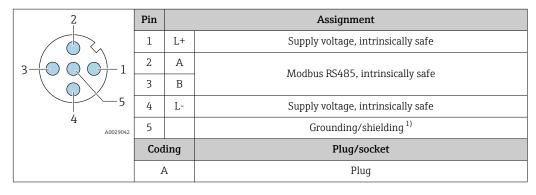

1) Not assigned for order code for "Housing", option C "Ultra-compact, hygienic, stainless"

- Recommended socket: Binder, series 763, part no. 79 3439 12 05
  - When using the device in a hazardous location: Use a suitably certified socket.

Device plug for signal transmission (device side), MODBUS RS485 (not intrinsically safe)

For use in the non-hazardous area and Zone  $2/\text{Div.}\ 2$ .

2	Pin		Assignment
	1		Not assigned
1 0 0 3	2	А	Modbus RS485
	3		Not assigned
5	4	В	Modbus RS485
4 A0016811	5		Grounding/shielding 1)
	Cod	ling	Plug/socket
	I	3	Socket

- Not assigned for order code for "Housing", option C "Ultra-compact, hygienic, stainless"
- Recommended plug: Binder, series 763, part no. 79 4449 20 05
  - When using the device in a hazardous location, use a suitably certified plug.

#### EtherNet/IP

Device plug for signal transmission (device side)

2	Pin		Assignment
	1	+	Tx
1 3	2	+	Rx
	3	1	Tx
	4	-	Rx
4 A0016812	Cod	ling	Plug/socket
	I	)	Socket

Recommended plug:

- Binder, series 763, part no. 99 3729 810 04
- Phoenix, part no. 1543223 SACC-M12MSD-4Q
- When using the device in a hazardous location, use a suitably certified plug.

#### **PROFINET**

Device plug for signal transmission (device side)

2	Pin		Assignment
	1	+	TD+
1 3	2	+	RD +
	3	-	TD -
	4	-	RD -
4 A0016812	Cod	ling	Plug/socket
	I	)	Socket

Recommended plug:

- Binder, series 825, part no. 99 3729 810 04
- Phoenix, part no. 1543223 SACC-M12MSD-4Q
- When using the device in a hazardous location, use a suitably certified plug.

## Supply voltage

The power unit must be tested to ensure it meets safety requirements (e.g. PELV, SELV).

#### Transmitter

For device version with communication type:

- HART, PROFIBUS DP, EtherNet/IP: DC 20 to 30 V
- Modbus RS485, device version:
  - For use in the non-hazardous area and Zone 2/Div. 2: DC 20 to 30 V
  - For use in the intrinsically safe area: power supply via Safety Barrier Promass 100

#### Promass 100 safety barrier

DC 20 to 30 V

## Power consumption

#### Transmitter

Order code for "Output"	Maximum Power consumption
Option <b>B</b> : 4-20 mA HART with pulse/frequency/switch output	3.5 W
Option L: PROFIBUS DP	3.5 W
Option <b>M</b> Modbus RS485, for use in non-hazardous areas and Zone 2/Div. 2	3.5 W
Option <b>M</b> : Modbus RS485, for use in intrinsically safe areas	2.45 W
Option N: EtherNet/IP	3.5 W
Option R: PROFINET	3.5 W

#### Promass 100 safety barrier

Order code for "Output"	Maximum Power consumption	
Option <b>M</b> : Modbus RS485, for use in intrinsically safe areas	4.8 W	

## **Current consumption**

## Transmitter

Order code for "Output"	Maximum Current consumption	Maximum switch-on current
Option <b>B</b> : 4-20mA HART, pul./freq./switch output	145 mA	18 A (< 0.125 ms)
Option L: PROFIBUS DP	145 mA	18 A (< 0.125 ms)
Option <b>M</b> Modbus RS485, for use in non-hazardous areas and Zone 2/Div. 2	90 mA	10 A (< 0.8 ms)
Option $\mathbf{M}$ : Modbus RS485, for use in intrinsically safe areas	145 mA	16 A (< 0.4 ms)
Option <b>N</b> : EtherNet/IP	145 mA	18 A (< 0.125 ms)
Option <b>R</b> : PROFINET	145 mA	18 A (< 0.125 ms)

## Promass 100 safety barrier

Order code for "Output"	Maximum Current consumption	Maximum switch-on current
Option <b>M</b> : Modbus RS485, for use in intrinsically safe areas	230 mA	10 A (< 0.8 ms)

## Device fuse


Fine-wire fuse (slow-blow) T2A

#### Power supply failure

- Totalizers stop at the last value measured.
- Depending on the device version, the configuration is retained in the device memory or in the pluggable data memory (HistoROM DAT).
- Error messages (incl. total operated hours) are stored.

#### **Electrical connection**

#### Connecting the transmitter

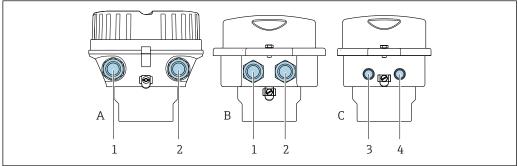


A001692

- A Housing version: compact, coated, aluminum
- B Housing version: compact, stainless
- 1 Cable entry or device plug for signal transmission
- 2 Cable entry or device plug for supply voltage
- C Housing version: ultra-compact, stainless
- 3 Device plug for signal transmission
- 4 Device plug for supply voltage
- In the case of device versions with a connector, the transmitter housing does not need to be opened to connect the signal cable or power supply cable.


## Connection examples

Current output 4 to 20 mA HART

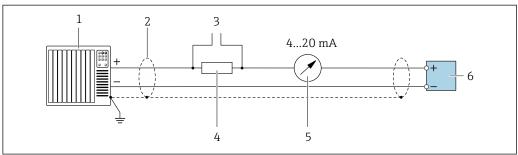

A00290


- 9 Connection example for 4 to 20 mA HART current output (active)
- Automation system with current input (e.g. PLC)
- 3 Connection for HART operating devices → 🖺 64
- 4 Resistor for HART communication ( $\geq 250 \Omega$ ): observe maximum load
- 5 Analog display unit: observe maximum load
- 5 Transmitter

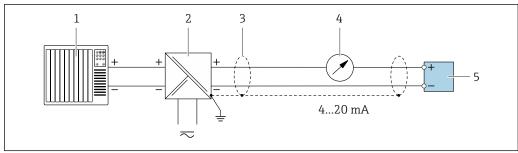

#### ■ 10 Connection example for 4 to 20 mA HART current output (passive)

- Automation system with current input (e.g. PLC)
- 2 Power supply
- 3 Cable shield provided at one end. The cable shield must be grounded at both ends to comply with EMC
- Analog display unit: observe maximum load
- Transmitter


#### Pulse/frequency output

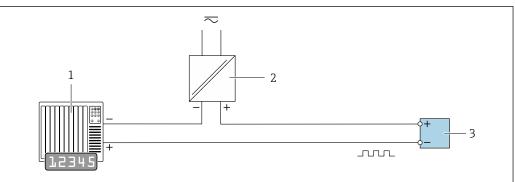

#### Connection example for pulse/frequency output (passive)

- 1 Automation system with pulse/frequency input (e.g. PLC with 10 k $\Omega$  pull-up or pull-down resistor)
- 3

## Switch output

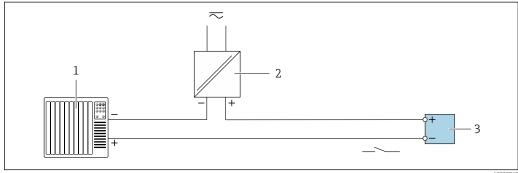


## Connection example for switch output (passive)

- 1 Automation system with switch input (e.g. PLC with a 10 k $\Omega$  pull-up or pull-down resistor)
- 2 Power supply
- 3 Transmitter: observe input values

36


## PROFIBUS DP

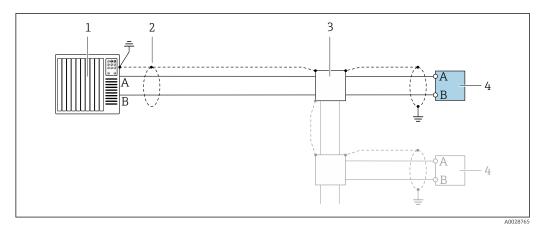

- $\blacksquare$  13 Connection example for PROFIBUS DP, non-hazardous area and Zone 2/Div. 2
- 1 Control system (e.g. PLC)
- 2 Cable shield provided at one end. The cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- 3 Distribution box
- 4 Transmitter
- If baud rates > 1.5 MBaud an EMC cable entry must be used and the cable shield must continue as far as the terminal wherever possible.

Modbus RS485


Modbus RS485, non-hazardous area and Zone 2/Div. 2

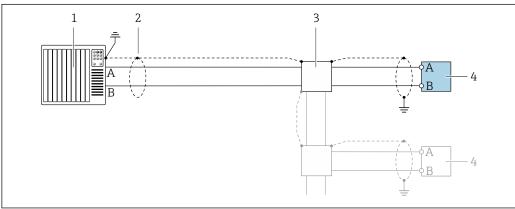

A00287

- 14 Connection example for Modbus RS485, non-hazardous area and Zone 2/Div. 2
- 1 Control system (e.g. PLC)
- 3 Distribution box
- 4 Transmitter


## Modbus RS485 intrinsically safe

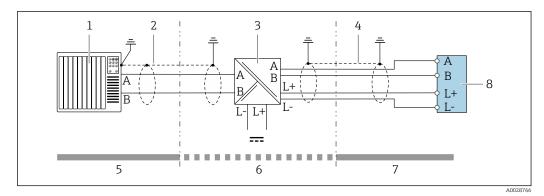

■ 15 Connection example for Modbus RS485 intrinsically safe

- Control system (e.g. PLC)
- Cable shield provided at one end. Observe cable specifications 2
- 3 Safety Barrier Promass 100
- Observe cable specifications 4
- 5 Non-hazardous area
- 6 Non-hazardous area and Zone 2/Div. 2
- Intrinsically safe area
- Transmitter


## EtherNet/IP

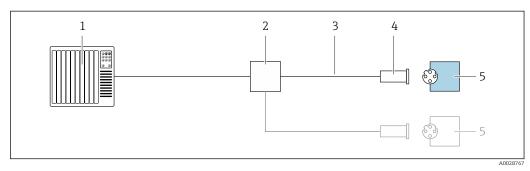

**■** 16 Connection example for EtherNet/IP

- 1 Control system (e.g. PLC)
- 2 Ethernet switch
- 3 Observe cable specifications
- Device plug 4
- Transmitter


## **PROFINET**

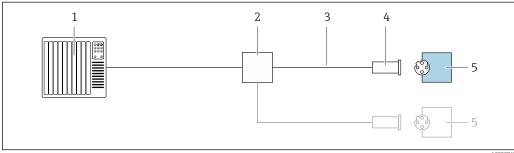

Connection example for PROFINET


- 1 Control system (e.g. PLC)
- 2 Ethernet switch
- 3 Observe cable specifications
- 4 Device plug
- Transmitter

## HART input

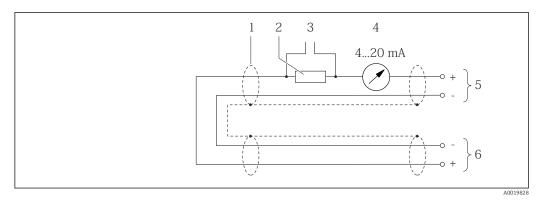

IS Connection example for HART input (burst mode) via current output (active)

- 1 Cable shield provided at one end. Observe cable specifications
- Resistor for HART communication ( $\geq 250 \Omega$ ): observe maximum load
- 3 Connection for HART operating devices
- 4 Analog display unit
- 5 Transmitter
- 6 Sensor for external measured variable

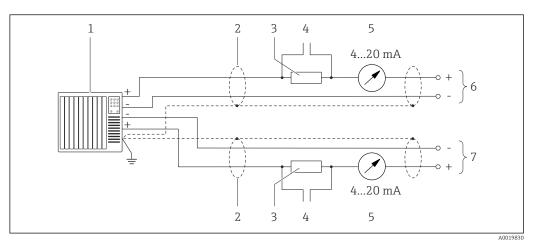

■ 19 Connection example for HART input (master mode) via current output (active)

- 1 Automation system with current input (e.g. PLC).Prerequisite: automation system with HART version 6, HART commands 113 and 114 can be processed.
- 2 Cable shield provided at one end. Observe cable specifications
- 3 Resistor for HART communication (≥ 250 Ω): observe maximum load
- 4 Connection for HART operating devices
- 5 Analog display unit
- 6 Transmitter
- 7 Sensor for external measured variable

## Potential equalization

## Requirements

For potential equalization:

- Pay attention to in-house grounding concepts
- Take account of operating conditions, such as the pipe material and grounding
- $\ \ \, \bullet \,$  Connect the medium, sensor and transmitter to the same electric potential
- Use a ground cable with a minimum cross-section of 6 mm<sup>2</sup> (10 AWG) and a cable lug for potential equalization connections

## **Terminals**

### Transmitter

Spring terminals for wire cross-sections 0.5 to 2.5 mm<sup>2</sup> (20 to 14 AWG)

## Promass 100 safety barrier

Plug-in screw terminals for wire cross-sections 0.5 to 2.5 mm<sup>2</sup> (20 to 14 AWG)

#### Cable entries

- Cable gland: M20  $\times$  1.5 with cable Ø 6 to 12 mm (0.24 to 0.47 in)
- Thread for cable entry:
  - M20
  - G ½"
  - NPT ½"

## Cable specification

#### Permitted temperature range

- The installation guidelines that apply in the country of installation must be observed.
- The cables must be suitable for the minimum and maximum temperatures to be expected.

## Power supply cable (incl. conductor for the inner ground terminal)

Standard installation cable is sufficient.

## Signal cable



For custody transfer, all signal lines must be shielded cables (tinned copper braiding, optical coverage  $\geq$  85 %). The cable shield must be connected on both sides.

Current output 4 to 20 mA HART

Shielded twisted-pair cable.



See https://www.fieldcommgroup.org "HART PROTOCOL SPECIFICATIONS".

Pulse /frequency /switch output

Standard installation cable is sufficient.

## PROFIBUS DP

Shielded twisted-pair cable. Cable type A is recommended.



See https://www.profibus.com "PROFIBUS Installation Guidelines".

Modbus RS485

Shielded twisted-pair cable.



See https://modbus.org "MODBUS over Serial Line Specification and Implementation Guide".

#### EtherNet/IP

Twisted-pair Ethernet CAT 5 or better.



See https://www.odva.org"EtherNet/IP Media Planning & Installation Manual".

### PROFINET

Only PROFINET cables.



See https://www.profibus.com "PROFINET Planning guideline".

## Connecting cable between Safety Barrier Promass 100 and measuring device

Cable type	Shielded twisted-pair cable with 2x2 wires. When grounding the cable shield, observe the grounding concept of the plant.
Maximum cable resistance	$2.5~\Omega$ , one side

Comply with the maximum cable resistance specifications to ensure the operational reliability of the measuring device.


The maximum cable length for individual wire cross-sections is specified in the table below. Observe the maximum capacitance and inductance per unit length of the cable and connection values for hazardous areas .

Wire cros	s-section	Maximum o	cable length
[mm <sup>2</sup> ]	[AWG]	[m]	[ft]
0.5	20	70	230
0.75	18	100	328
1.0	17	100	328
1.5	16	200	656
2.5	14	300	984

## Performance characteristics

## Reference operating conditions


- Error limits based on ISO 11631
- Water
  - +15 to +45 °C (+59 to +113 °F)
  - 2 to 6 bar (29 to 87 psi)
- Data as indicated in the calibration protocol
- Accuracy based on accredited calibration rigs according to ISO 17025

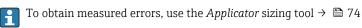

## Maximum measurement error

o.r. = of reading;  $1 \text{ g/cm}^3 = 1 \text{ kg/l}$ ; T = medium temperature

## Base accuracy

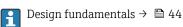

Mass flow and volume flow (liquids)

- ±0.05 % o.r. (optional for mass flow: PremiumCal; order code for "Calibration flow", option D)
- ±0.10 % o.r. (standard)

Mass flow (gases)

±0.35 % o.r.

Density (liquids)

Under reference conditions	Standard density calibration	Wide-range Density specification <sup>1) 2)</sup>	Extended density calibration <sup>3) 4)</sup>
[g/cm³]	[g/cm³]	[g/cm³]	[g/cm³]
±0.0005	±0.0005	±0.001	±0.0005

- Valid range for special density calibration: 0 to 2 g/cm<sup>3</sup>, +5 to +80  $^{\circ}$ C (+41 to +176  $^{\circ}$ F)
- 2) order code for "Application package", option EE "Special density" (for nominal diameter ≤ 100 DN)
- Valid range for extended density calibration: 0 to 2  $q/cm^3$ , +20 to +60 °C (+68 to +140 °F)
- 4) order code for "Application package", option E1 "Extended density"

## Temperature

 $\pm 0.5 \,^{\circ}\text{C} \pm 0.005 \cdot \text{T} \,^{\circ}\text{C} \, (\pm 0.9 \,^{\circ}\text{F} \pm 0.003 \cdot (\text{T} - 32) \,^{\circ}\text{F})$ 

## Zero point stability

DN		Zero point stability	
[mm]	[in]	[kg/h]	[lb/min]
80	3	9	0.330
100	4	14	0.514
150	6	32	1.17
250	10	88	3.23

## Flow values

Flow values as turndown parameters depending on nominal diameter.

SI units

DN	1:1	1:10	1:20	1:50	1:100	1:500
[mm]	[kg/h]	[kg/h]	[kg/h]	[kg/h]	[kg/h]	[kg/h]
80	180 000	18000	9 000	3 600	1800	360
100	350000	35 000	17500	7 000	3 500	700
150	800 000	80000	40 000	16 000	8 000	1600

## US units

DN	1:1	1:10	1:20	1:50	1:100	1:500
[inch]	[lb/min]	[lb/min]	[lb/min]	[lb/min]	[lb/min]	[lb/min]
3	6615	661.5	330.8	132.3	66.15	13.23
4	12 860	1286	643.0	257.2	128.6	25.72
6	29 400	2940	1470	588	294	58.80

## Accuracy of outputs

The output accuracy must be factored into the measurement error if analog outputs are used; but can be ignored for fieldbus outputs (e.g. Modbus RS485, EtherNet/IP).

The outputs have the following base accuracy specifications.

Current output

Accuracy	Max. ±5 μA

Pulse/frequency output

o.r. = of reading

Accuracy	Max. ±50 ppm o.r. (over the entire ambient temperature range)
----------	---

## Repeatability

o.r. = of reading;  $1 \text{ g/cm}^3 = 1 \text{ kg/l}$ ; T = medium temperature

## Base repeatability

ightharpoonup Design fundamentals ightharpoonup ightharpoonup 44

Mass flow and volume flow (liquids)

±0.025 % o.r. (PremiumCal, for mass flow)

±0.05 % o.r.

Mass flow (gases)

±0.25 % o.r.

Density (liquids)

 $\pm 0.00025 \text{ g/cm}^3$ 

**Temperature** 

 $\pm 0.25 \,^{\circ}\text{C} \pm 0.0025 \cdot \text{T} \,^{\circ}\text{C} \, (\pm 0.45 \,^{\circ}\text{F} \pm 0.0015 \cdot (\text{T}-32) \,^{\circ}\text{F})$ 

## Response time

The response time depends on the configuration (damping).

## Influence of ambient temperature

## **Current output**

o.r. = of reading

**Temperature coefficient** Max. ±0.005 % o.r./°C

## Pulse/frequency output

Temperature coefficient	No additional effect. Included in accuracy.
-------------------------	---

## Influence of medium temperature

## Mass flow

o.f.s. = of full scale value

If there is a difference between the temperature during zero adjustment and the process temperature, the additional measurement error of the sensors is typically  $\pm 0.0002$  %o.f.s./°C ( $\pm 0.0001$  % o.f.s./°F).

The influence is reduced when the zero adjustment is performed at process temperature.

#### Density


If there is a difference between the density calibration temperature and the process temperature, the measurement error of the sensors is typically  $\pm 0.00005$  g/cm<sup>3</sup>/°C ( $\pm 0.000025$  g/cm<sup>3</sup>/°F). Field density adjustment is possible.

## Wide-range density specification (special density calibration)

If the process temperature is outside the valid range ( $\rightarrow \triangleq 41$ ) the measurement error is  $\pm 0.00005 \text{ g/cm}^3$  /°C ( $\pm 0.000025 \text{ g/cm}^3$  /°F)

## Extended density specification

If the process temperature is outside the valid range ( $\rightarrow \triangleq 41$ ) the measurement error is  $\pm 0.000025$  g/cm<sup>3</sup> /°C ( $\pm 0.0000125$  g/cm<sup>3</sup> /°F)

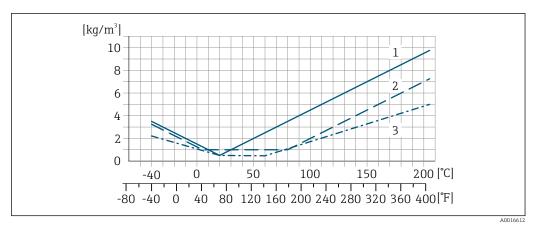

- Field density adjustment, for example at +20  $^{\circ}$ C (+68  $^{\circ}$ F)
- Special density calibration 2
- Extended density calibration

## Temperature

 $\pm 0.005 \cdot \text{T} \, ^{\circ}\text{C} \, (\pm 0.005 \cdot (\text{T} - 32) \, ^{\circ}\text{F})$ 

## Influence of medium pressure

The following shows how the process pressure (gauge pressure) affects the accuracy of the mass flow.

o.r. = of reading



It is possible to compensate for the effect by:

- Reading in the current pressure measured value via the current input or a digital input.
- Specifying a fixed value for the pressure in the device parameters.



DN		[% o.r./bar]	[% o.r./psi]
[mm]	[in]		
80	3	-0.0056	-0.0004
100	4	-0.0037	-0.0002
150	6	-0.002	-0.0001
250	10	-0.0067	-0.0005

## Design fundamentals

o.r. = of reading, o.f.s. = of full scale value

BaseAccu = base accuracy in % o.r., BaseRepeat = base repeatability in % o.r.

MeasValue = measured value; ZeroPoint = zero point stability


Calculation of the maximum measured error as a function of the flow rate

Flow rate	Maximum measured error in % o.r.
$\geq \frac{\text{ZeroPoint}}{\text{BaseAccu}} \cdot 100$	± BaseAccu
A0021332	AUU21337
< ZeroPoint · 100	± ZeroPoint MeasValue · 100
A0021333	A0021334

Calculation of the maximum repeatability as a function of the flow rate

Flow rate		Maximum repeatability in % o.r.
$\geq \frac{\frac{1}{2} \cdot ZeroPoint}{BaseRepeat} \cdot 100$		± BaseRepeat
A	A0021335	200023
< <sup>1</sup> / <sub>2</sub> ⋅ ZeroPoint ⋅ 100		$\pm \frac{1}{2} \cdot \frac{\text{ZeroPoint}}{\text{MeasValue}} \cdot 100$
A	A0021336	A0021337


## Example of maximum measurement error

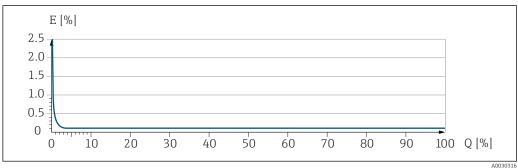

- Maximum measurement error in % o.r. (example)
- Q Flow rate in % of maximum full scale value

## Installation

## Installation point

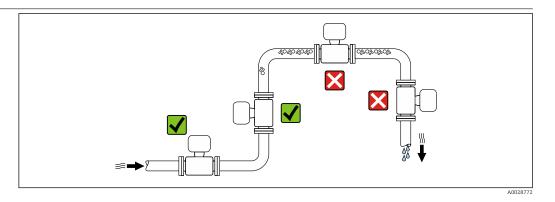


To prevent measuring errors arising from accumulation of gas bubbles in the measuring pipe, avoid the following mounting locations in the piping:

- Highest point of a pipeline.
- Directly upstream of a free pipe outlet in a down pipe.

## Installation in down pipes

However, the following installation suggestion allows for installation in an open vertical pipeline. Pipe restrictions or the use of an orifice with a smaller cross-section than the nominal diameter prevent the sensor running empty while measurement is in progress.

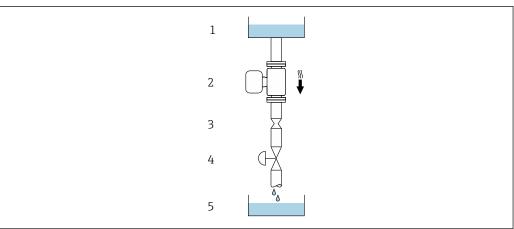

A002877

■ 20 Installation in a down pipe (e.g. for batching applications)

- 1 Supply tank
- 2 Sensor
- 3 Orifice plate, pipe restriction
- 4 Valve
- 5 Filling vessel

D	N	Ø orifice plate, pipe restriction			
[mm] [in]		[mm]	[in]		
80	3	50	1.97		
100	4	65	2.60		
150	6	90	3.54		


## Orientation

The direction of the arrow on the sensor nameplate helps you to install the sensor according to the flow direction (direction of medium flow through the piping).

	Orientatio	n	Recommendation
A	Vertical orientation	A0015591	<b>✓ ✓</b> <sup>1)</sup>
В	Horizontal orientation, transmitter at top	A0015589	Exception: $\rightarrow \                                   $
С	Horizontal orientation, transmitter at bottom	A0015590	<b>✓ ✓</b> <sup>3)</sup> Exception: → <b>②</b> 21, <b>△</b> 47
D	Horizontal orientation, transmitter at side	A0015592	×

- 1) This orientation is recommended to ensure self-draining.
- 2) Applications with low process temperatures may reduce the ambient temperature. To maintain the minimum ambient temperature for the transmitter, this orientation is recommended.
- 3) Applications with high process temperatures may increase the ambient temperature. To maintain the maximum ambient temperature for the transmitter, this orientation is recommended.

If a sensor is installed horizontally with a curved measuring tube, match the position of the sensor to the fluid properties.

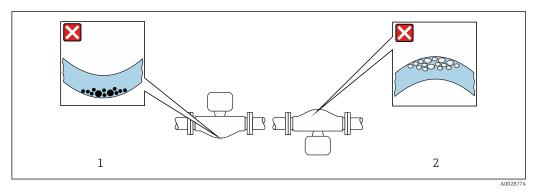

■ 21 Orientation of sensor with curved measuring tube

- 1 Avoid this orientation for fluids with entrained solids: Risk of solids accumulating
- 2 Avoid this orientation for outgassing fluids: Risk of gas accumulating

#### Inlet and outlet runs

## Special mounting instructions

#### Drainability

When installed vertically, the measuring tubes can be drained completely and protected against buildup.

## Hygienic compatibility

i

When installing in hygienic applications, please refer to the information in the "Certificates and approvals/hygienic compatibility" section

#### Rupture disk

Process-related information:  $\rightarrow \implies 51$ .

## **WARNING**

## Danger from medium escaping!

Medium escaping under pressure can cause injury or material damage.


- ▶ Take precautions to prevent danger to persons and damage if the rupture disk is actuated.
- ▶ Observe the information on the rupture disk sticker.
- Make sure that the function and operation of the rupture disk is not impeded through the installation of the device.
- ▶ Do not use a heating jacket.
- ▶ Do not remove or damage the rupture disk.

The position of the rupture disk is indicated by a sticker affixed beside it.

The transportation guard must be removed.

The existing connecting nozzles are not intended for the purpose of rinsing or pressure monitoring, but instead serve as the mounting location for the rupture disk.

In the event of a failure of the rupture disk, a drain device can be screwed onto the internal thread of the rupture disk in order to drain off any escaping medium.

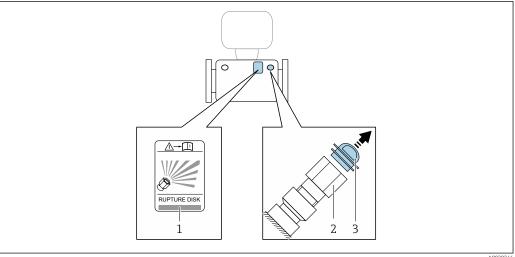

- 1 Rupture disk label
- Rupture disk with 1/2" NPT internal thread and 1" width across flats 2
- 3 Transportation guard

For information on the dimensions, see the "Mechanical construction" section (accessories).

### Zero verification and zero adjustment

All measuring instruments are calibrated in accordance with state-of-the-art technology. Calibration takes place under reference conditions  $\rightarrow \triangleq 41$ . Therefore, a zero adjustment in the field is generally not required.

Experience shows that zero adjustment is advisable only in special cases:


- To achieve maximum measurement accuracy even with low flow rates.
- Under extreme process or operating conditions (e.g. very high process temperatures or very highviscosity fluids).
- For gas applications with low pressure

For information on checking the zero point and performing a zero adjustment, see the Operating Instructions for the device.



To achieve the highest possible measurement accuracy at low flow rates, the installation must protect the sensor from mechanical stresses during operation.

## Installing the Safety Barrier Promass 100

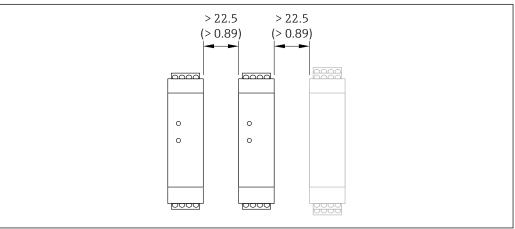

**₽** 22 Minimum distance between additional Safety Barrier Promass 100 or other modules. Engineering unit mm (in)

## **Environment**

	Environment					
Ambient temperature range	Measuring device	<ul> <li>-40 to +60 °C (-40 to +140 °F)</li> <li>Order code for "Test, certificate", option JM:</li> <li>-50 to +60 °C (-58 to +140 °F)</li> </ul>				
	Safety barrier Promass 100	-40 to +60 °C (-40 to +140 °F)				
	<ul><li>If operating outdoors: Avoid direct sunlight, particular</li></ul>	ılarly in warm climatic regions.				
Storage temperature	-40 to +80 °C (-40 to +176 °F),	preferably at +20 °C (+68 °F) (standard version)				
	-50 to +80 °C (−58 to +176 °F) (	Order code for "Test, certificate", option JM)				
Climate class	DIN EN 60068-2-38 (test Z/AD)					
Degree of protection	<ul><li>With the order code for "Senso</li><li>When the housing is open: IP2</li></ul>	nclosure, suitable for pollution degree 4 or options", option CM: IP69 can also be ordered 20, Type 1 enclosure, suitable for pollution degree 2 enclosure, suitable for pollution degree 2				
Shock and vibration	Vibration sinusoidal, in accordance with IEC 60068-2-6					
resistance	<ul> <li>2 to 8.4 Hz, 7.5 mm peak</li> <li>8.4 to 2000 Hz, 2 g peak</li> </ul>					
	Vibration broad-band random, according to IEC 60068-2-64					
	<ul> <li>■ 10 to 200 Hz, 0.01 g²/Hz</li> <li>■ 200 to 2000 Hz, 0.003 g²/Hz</li> <li>■ Total: 2.70 g rms</li> </ul>					
	Shock half-sine, according to IEC 60068-2-27					
	6 ms 50 g					
	Rough handling shocks accord	ing to IEC 60068-2-31				
Electromagnetic compatibility (EMC)	<ul> <li>As per IEC/EN 61000-6-2 a</li> <li>As per IEC/EN 61326</li> <li>Complies with emission limits</li> <li>Device version with PROFIBUS Volume 2, IEC 61784</li> </ul>	JAMUR Recommendation 21 (NE 21)				
		nust continue as far as the terminal wherever possible.				

- e used and the cable shield must continue as far as the terminal wherever possible.
- Details are provided in the Declaration of Conformity.
- This unit is not intended for use in residential environments and cannot guarantee adequate protection of the radio reception in such environments.


## **Process**

## Medium temperature range -40 to +205 °C (-40 to +401 °F)

## Pressure-temperature ratings


The following pressure/temperature diagrams apply to all pressure-bearing parts of the device and not just the process connection. The diagrams show the maximum permissible medium pressure depending on the specific medium temperature.

## Flange connection similar to EN 1092-1 (DIN 2501)

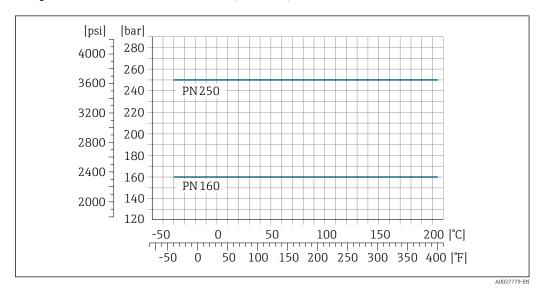

■ 23 With flange material stainless steel, 1.4410/F53 25Cr Duplex (Super Duplex)

## Flange connection similar to ASME B16.5

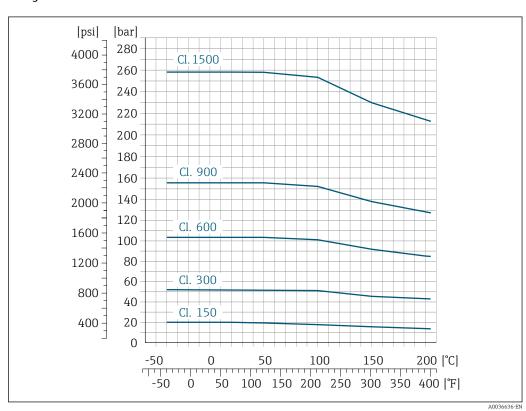

■ 24 With flange material stainless steel, 1.4410/F53 25Cr Duplex (Super Duplex)

Sensor housing

The sensor housing is filled with dry nitrogen gas and protects the electronics and mechanics inside.

If a measuring tube fails (e.g. due to process characteristics like corrosive or abrasive fluids), the fluid will initially be contained by the sensor housing.

In the event of a tube failure, the pressure level inside the sensor housing will rise according to the operating process pressure. If the user judges that the sensor housing burst pressure does not provide an adequate safety margin, the device can be fitted with a rupture disk. This prevents excessively high pressure from forming inside the sensor housing. Therefore, the use of a rupture disk is strongly recommended in applications involving high gas pressures, and particularly in applications in which the process pressure is greater than 2/3 of the sensor housing burst pressure.

If there is a need to drain the leaking medium into a discharge device, the sensor should be fitted with a rupture disk. Connect the discharge to the additional threaded connection  $\rightarrow \triangleq 58$ .

If the sensor is to be purged with gas (gas detection), it should be equipped with purge connections.



Do not open the purge connections unless the containment can be filled immediately with a dry, inert gas. Use only low pressure to purge.

## Maximum pressure:

- DN 80 to 150 (3 to 6"): 5 bar (72.5 psi)
- DN 250 (10"): 3 bar (43.5 psi)

#### Burst pressure of the sensor housing

The following sensor housing burst pressures are only valid for standard devices and/or devices equipped with closed purge connections (not opened/as delivered).

If a device fitted with purge connections (order code for "Sensor option", option CH "Purge connection") is connected to the purge system, the maximum pressure is determined by the purge system itself or by the device, depending on which component has the lower pressure classification.

If the device is fitted with a rupture disk (order code for "Sensor option", option CA "Rupture disk"), the rupture disk trigger pressure is decisive.

The sensor housing burst pressure refers to a typical internal pressure which is reached prior to mechanical failure of the sensor housing and which was determined during type testing. The corresponding type test declaration can be ordered with the device (order code for "Additional approval", option LN "Sensor housing burst pressure, type test").

D	N	Sensor housing burst pressure			
[mm]	[mm] [in]		[psi]		
80	3	120	1740		
100	4	95	1370		
150	6	75	1080		
250	10	50	720		

For information on the dimensions: see the "Mechanical construction" section


### Rupture disk

To increase the level of safety, a device version with a rupture disk with a trigger pressure of 10 to 15 bar (145 to 217.5 psi)can be used (order code for "Sensor option", option CA "rupture disk").

For information on the dimensions: see the "Mechanical construction" section (accessories)  $\rightarrow \triangleq 58$ 

## Flow limit

Select the nominal diameter by optimizing between the required flow range and permissible pressure

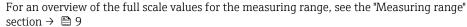

- The minimum recommended full scale value is approx. 1/20 of the maximum full scale value
- In most applications, 20 to 50 % of the maximum full scale value can be considered ideal
- A low full scale value must be selected for abrasive media (such as liquids with entrained solids): flow velocity < 1 m/s (< 3 ft/s).
- For gas measurement the following rules apply:
- The flow velocity in the measuring tubes should not exceed half the sound velocity (0.5 Mach).
- The maximum mass flow depends on the density of the gas: formula
- To calculate the flow limit, use the *Applicator* sizing tool  $\rightarrow \Box 74$

#### Pressure loss




## Static pressure

It is important that cavitation does not occur, or that gases entrained in the liquids do not outgas. This is prevented by means of a sufficiently high static pressure.

For this reason, the following mounting locations are recommended:

- At the lowest point in a vertical pipe
- Downstream from pumps (no danger of vacuum)

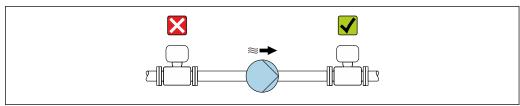

A0028777

#### Thermal insulation


In the case of some fluids, it is important to keep the heat radiated from the sensor to the transmitter to a low level. A wide range of materials can be used for the required insulation.

Order code for "Measuring tube material", option FA with an extended neck length of  $105\ mm$  (4.13 in).

## NOTICE

## Electronics overheating on account of thermal insulation!

- ▶ Recommended orientation: horizontal orientation, transmitter housing pointing downwards.
- ▶ Do not insulate the transmitter housing .
- ► Maximum permissible temperature at the lower end of the transmitter housing: 80 °C (176 °F)
- Regarding thermal insulation with an exposed extended neck: We advise against insulating the
  extended neck to ensure optimal heat dissipation.

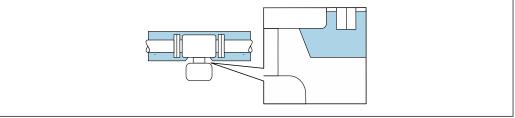

A00343

■ 25 Thermal insulation with exposed extended neck

## Heating

Some fluids require suitable measures to avoid loss of heat at the sensor.

## Heating options

- Electrical heating, e.g. with electric band heaters <sup>1)</sup>
- Via pipes carrying hot water or steam
- Via heating jackets

## **NOTICE**

## Danger of overheating when heating

- ► Ensure that the temperature at the lower end of the transmitter housing does not exceed 80 °C (176 °F).
- ▶ Ensure that sufficient convection takes place at the transmitter neck.
- ► Ensure that a sufficiently large area of the transmitter neck remains exposed. The uncovered part serves as a radiator and protects the electronics from overheating and excessive cooling.
- ▶ When using in potentially explosive atmospheres, observe the information in the device-specific Ex documentation. For detailed information on the temperature tables, see the separate document entitled "Safety Instructions" (XA) for the device.
- ► Consider the "830 ambient temperature too high" and "832 electronics temperature too high" process diagnostics if overheating cannot be ruled out based on a suitable system design.


#### **Vibrations**

The high oscillation frequency of the measuring tubes ensures that the correct operation of the measuring system is not influenced by plant vibrations.

## Mechanical construction

## Dimensions in SI units

## **Compact version**

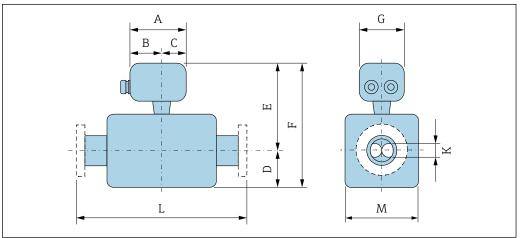

A00337

Order code for "Housing", option A "Compact, aluminum, coated"

DN	A 1)	B 1)	С	D	E <sup>2)</sup>	F <sup>2)</sup>	G	К	L	M
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]
80	148	94	54	200	292	492	136	38.5	3)	117
100	148	94	54	254	308	562	136	49.0	3)	138
150	148	94	54	378	328	706	136	66.1	3)	205

- 1) Depending on the cable gland used: values up to + 30 mm
- 2) If using a display, order code for "Display; Operation", option B: values + 28 mm
- 3) Depends on the particular process connection (Verweisziel existiert nicht, aber @y.link.required='true')

Order code for "Housing", option B "Compact, hygienic, stainless"

DN	A 1)	B 1)	С	D	E 2)	F 2)	G	K	L	М
[mm]										
80	137	78	59	200	288	488	134	38.5	3)	117
100	137	78	59	254	304	548	134	49.0	3)	138
150	137	78	59	378	324	702	134	66.1	3)	205

- 1) Depending on the cable gland used: values up to  $\pm$  30 mm
- 2) If using a display, order code for "Display; Operation", option B: values + 28 mm
- 3) Depends on the particular process connection (Verweisziel existiert nicht, aber @y.link.required='true')


Order code for "Housing", option C "Ultra-compact, hygienic, stainless"

DN	A 1)	B 1)	С	D	E 2)	F 2)	G	К	L	M
[mm]										
80	124	68	56	200	287	487	112	38.5	Depend s on the particul ar process connect ion (Verwei sziel existiert nicht, aber @y.link. require d='true')	117
100	124	68	56	254	303	547	112	49.0		138
150	124	68	56	378	323	701	112	66.1		205

Depending on the cable gland used: values up to  $\pm$  30 mm If using a display, order code for "Display; Operation", option B: values  $\pm$  14 mm 1) 2)

## Flange connections

Fixed flange EN 1092-1, ASME B16.5, JIS B2220

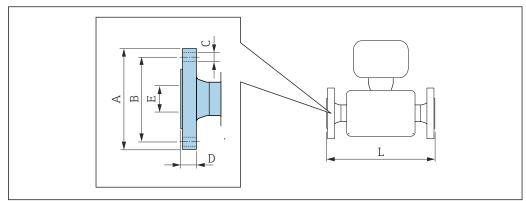

A002317

H

Length tolerance for dimension L in mm:

■  $\overrightarrow{DN} \le 100: +1.5/-2.0$ 

■ DN ≥ 150: ±3.5

# Flange according to EN 1092-1 Form B2 (DIN 2501): PN160 Stainless steel, 1.4410/F53 25Cr Duplex (Super Duplex) Order code for "Process connection", option DAD

DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]
80	230	180	8 × Ø26	36	80.9	916
100	265	210	8 × Ø30	40	104.3	1208
150	355	290	12 × Ø33	50	155.7	1476

Flange w	rith groove according to EN 1092-1 Form D (DIN 2512N): PN160
Stainless	steel, 1.4410/F53 25Cr Duplex (Super Duplex)
Order cod	le for "Process connection", option <b>DCD</b>

DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]
80	230	180	8 × Ø26	36	80.9	916
100	265	210	8 × Ø30	40	104.3	1208
150	355	290	12 × Ø33	50	155.7	1476

Flange according to EN 1092-1 Form B2 (DIN 2501): PN250
Stainless steel, 1.4410/F53 25Cr Duplex (Super Duplex)
Order code for "Process connection" ontion DRD

DN С D E L [mm] [mm] [mm] [mm] [mm] [mm] [mm] 80 255 200 8 × Ø30 46 77.7 948 100 300 235 8 × Ø33 54 100.3 1248 150 390 320 12 × Ø36 68 148.3 1540

## Flange with groove according to EN 1092-1 Form D (DIN 2512N): PN250 Stainless steel, 1.4410/F53 25Cr Duplex (Super Duplex)

Order code for "Process connection", option **DDD** 

DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]
80	255	200	8 × Ø30	46	77.7	948
100	300	235	8 × Ø33	54	100.3	1248
150	390	320	12 × Ø36	68	148.3	1540

Flange according to ASME B16.5: Class 900 Schedule 40
Stainless steel, 1.4410/F53 25Cr Duplex (Super Duplex)

Order code for "Process connection", option ADD

DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]
80	240	190.5	8 × Ø25.4	45.1	78.0	962
100	290	235	8 × Ø31.8	51.4	102.4	1251
150	380	317.5	12 × Ø31.8	62.6	154.1	1513

## Flange according to ASME B16.5: Class 1500 Schedule 80 Stainless steel, 1.4410/F53 25Cr Duplex (Super Duplex)

Order code for "Process connection", option AFD

DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]
80	265	203.2	8 × Ø31.8	54.8	73.7	993
100	310	241.3	8 × Ø35.1	60.8	97.3	1270
150	395	317.5	12 × Ø38.1	89.6	146.3	1577

## RTJ flange according to ASME B16.5: Class 900 Schedule 40 Stainless steel, 1.4410/F53 25Cr Duplex (Super Duplex)

Order code for "Process connection", option AED

oraci coac joi	1 / 0 0 0 0 0 0 / 1 / 10	ction, option 2	<del></del>			
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]
80	240	190.5	8 × Ø25.4	46.0	78.0	963
100	290	235	8 × Ø31.8	52.3	102.4	1252
150	380	317.5	12 × Ø31.8	63.5	154.1	1515


## RTJ flange according to ASME B16.5: Class 1500 Schedule 80 Stainless steel, 1.4410/F53 25Cr Duplex (Super Duplex)

Order code for "Process connection", option AGD

Oraci coae joi	order code for Trocess connection, option Add										
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]					
80	265	203.2	8 × Ø31.8	55.7	73.7	995					
100	310	241.3	8 × Ø35.1	61.7	97.3	1272					
150	395	317.5	12 × Ø38.1	92.1	146.3	1582					

## Accessories

Purge connections/rupture disk

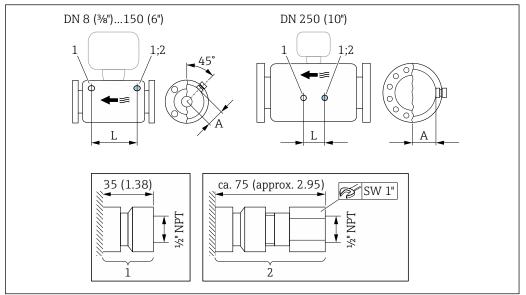

A002891


₹ 26

- 1 Connection nipple for purge connections: order code for "Sensor options", option CH "Purge connection"
- 2 Connection nipple with rupture disk: order code for "Sensor option", option CA "Rupture disk"

DN	A	L		
[mm]	[mm]	[mm]		
80	101	560		
100	120	684		
150	141	880		
250	182	380		

## **Dimensions in US units**

## **Compact version**

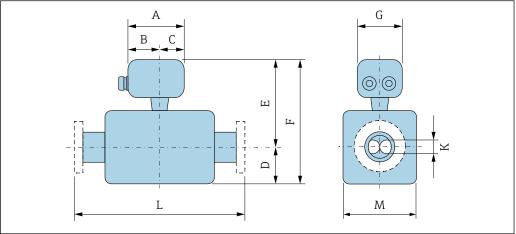

A003378

Order code for "Housing", option A "Compact, aluminum, coated"

DN	A 1)	B 1)	С	D	E <sup>2)</sup>	F <sup>2)</sup>	G	К	L	М
[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]
3	5.83	3.7	2.13	7.87	11.5	19.37	5.35	1.52	3)	4.61
4	5.83	3.7	2.13	10	12.13	22.13	5.35	1.93		5.43
6	5.83	3.7	2.13	14.88	12.91	27.8	5.35	2.6		8.07

- 1) Depending on the cable gland used: values up to + 30 in
- 2) If using a display, order code for "Display; Operation", option B: values + 28 in
- 3) Depends on the particular process connection (Verweisziel existiert nicht, aber @y.link.required='true')

Order code for "Housing", option B "Compact, hygienic, stainless"

DN	A 1)	B 1)	С	D	E <sup>2)</sup>	F <sup>2)</sup>	G	К	L	М
[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]
3	5.39	3.07	2.32	7.87	11.34	19.21	5.28	1.52	3)	4.61
4	5.39	3.07	2.32	10	11.97	21.57	5.28	1.93	3)	5.43
6	5.39	3.07	2.32	14.88	12.76	27.64	5.28	2.6	3)	8.07

- 1) Depending on the cable gland used: values up to  $\pm$  30 in
- 2) If using a display, order code for "Display; Operation", option B: values + 28 in
- 3) Depends on the particular process connection (Verweisziel existiert nicht, aber @y.link.required='true')


Order code for "Housing", option C "Ultra-compact, hygienic, stainless"

DN	A 1)	B 1)	С	D	E 2)	F 2)	G	K	L	M
[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	
3	4.88	2.68	2.2	7.87	11.3	19.17	4.41	1.52	Depend s on the particul ar process connect ion (Verwei sziel existiert nicht, aber @y.link. require d='true')	4.61
4	4.88	2.68	2.2	10	11.93	21.54	4.41	1.93		5.43
6	4.88	2.68	2.2	14.88	12.72	27.6	4.41	2.6		8.07

- 1) Depending on the cable gland used: values up to + 30 in
- 2) If using a display, order code for "Display; Operation", option B: values + 14 in

## Flange connections

Fixed flange ASME B16.5

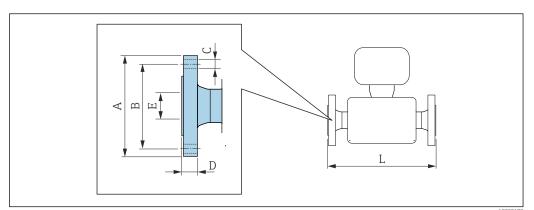

Length tolerance for dimension L in inches: • DN  $\leq$  4": +0.06/-0.08

• DN  $\geq$  6":  $\pm$ 0.14

Stainless st	Flange according to ASME B16.5: Class 900 Schedule 40 Stainless steel, 1.4410/F53 25Cr Duplex (Super Duplex) Order code for "Process connection", option ADD										
DN [in]	A [in]	B [in]	C [in]	D [in]	E [in]	L [in]					
3	9.45	7.5	8 × Ø1.0	1.78	3.07	37.87					
4	11.42	9.25	8 × Ø1.25	2.02	4.03	49.25					
6	14.96	12.5	12 × Ø1.25	2.46	6.07	59.57					


Stainless st	Flange according to ASME B16.5: Class 1500 Schedule 80 Stainless steel, 1.4410/F53 25Cr Duplex (Super Duplex) Order code for "Process connection", option AFD										
DN [in]	A [in]	B [in]	C [in]	D [in]	E [in]	L [in]					
3	10.43	8	8 × Ø1.0	2.16	2.9	39.09					
4	12.20	9.5	8 × Ø1.38	2.39	3.83	50					
6	15.55	12.5	12 × Ø1.50	3.53	5.76	62.09					

Stainless st	RTJ flange according to ASME B16.5: Class 900 Schedule 40 Stainless steel, 1.4410/F53 25Cr Duplex (Super Duplex) Order code for "Process connection", option AED										
DN [in]	A [in]	B [in]	C [in]	D [in]	E [in]	L [in]					
3	9.45	7.5	8 × Ø1.0	1.81	3.07	37.91					
4	11.42	9.25	8 × Ø1.25	2.06	4.03	49.29					
6	14.96	12.5	12 × Ø1.25	2.5	6.07	59.65					

Stainless st	9	3 25Cr Duplex	ss 1500 Schedule 80 (Super Duplex) AGD			
DN [in]	A [in]	B [in]	C [in]	D [in]	E [in]	L [in]
3	10.43	8	8 × Ø1.0	2.19	2.9	39.17
4	12.2	9.5	8 × Ø1.38	2.43	3.83	50.08
6	15.55	12.5	12 × Ø1.50	3.63	5.76	62.28

## Accessories

*Purge connections/rupture disk* 

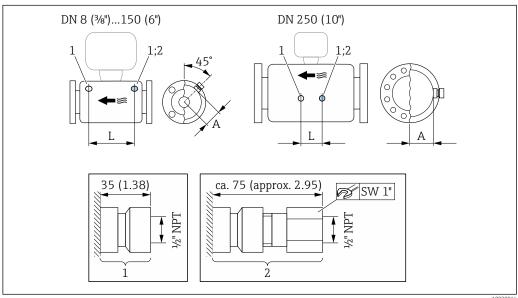

- A0028914
- 1 Connection nipple for purge connections: order code for "Sensor options", option CH "Purge connection"
- 2 Connection nipple with rupture disk: order code for "Sensor option", option CA "Rupture disk"

DN	A	L
[in]	[in]	[in]
3	3.98	22.05
4	4.72	26.93
6	5.55	34.65
10	7.17	14.96

## Weight

All values (weight exclusive of packaging material) refer to devices with ASME B16.5 Class 900 flanges. Weight specifications including transmitter: order code for "Housing", option A "Compact, aluminum coated".

## Weight in SI units

DN [mm]	Weight [kg]
80	75
100	141
150	246
250	572

## Weight in US units

DN [in]	Weight [lbs]
3	165
4	311
6	542
10	1261

## **Safety Barrier Promass 100**


49 g (1.73 ounce)

### Materials

## Transmitter housing

- Order code for "Housing", option A "Compact, aluminum coated": Aluminum, AlSi10Mg, coated
- Order code for "Housing", option **B** "Compact, stainless": Stainless steel 1.4404 (316L)
- $\bullet$  Order code for "Housing", option  $\boldsymbol{C}$  "Ultra-compact, stainless": Stainless steel 1.4404 (316L)
- Window material for optional local display (→ 🖺 64):
  - For order code for "Housing", option A: glass
  - For order code for "Housing", option **B** and **C**: plastic

## Cable entries/cable glands

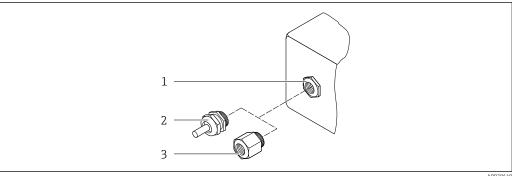

## $\blacksquare$ 27 Possible cable entries/cable glands

- Female thread M20  $\times$  1.5
- 2 Cable gland M20  $\times$  1.5
- Adapter for cable entry with female thread G 1/2" or NPT 1/2"

Order code for "Housing", option A "Compact, aluminum, coated"

The various cable entries are suitable for hazardous and non-hazardous areas.

Cable entry/cable gland	Material
Cable gland M20 × 1.5	
Adapter for cable entry with internal thread G ½"	Nickel-plated brass
Adapter for cable entry with internal thread NPT 1/2"	

Order code for "Housing", option B "Compact, stainless"

The various cable entries are suitable for hazardous and non-hazardous areas.

Cable entry/cable gland	Material
Cable gland M20 × 1.5	Stainless steel, 1.4404 (316L)
Adapter for cable entry with internal thread G ½"	
Adapter for cable entry with internal thread NPT ½"	

## Device plug

Electrical connection	Material
Plug M12x1	<ul> <li>Socket: Stainless steel, 1.4404 (316L)</li> <li>Contact housing: Polyamide</li> <li>Contacts: Gold-plated brass</li> </ul>

## Sensor housing

- Acid and alkali-resistant outer surface
- Stainless steel, 1.4404 (316L)

## Measuring tubes

Stainless steel, 1.4410/UNS S32750 25Cr Duplex (Super Duplex)

## **Process connections**

Stainless steel, 1.4410/F53 25Cr Duplex (Super Duplex)

## Accessories

Protective cover

Stainless steel, 1.4404 (316L)

Safety Barrier Promass 100

Housing: Polyamide

## **Process connections**

Fixed flange connections:

- EN 1092-1 (DIN 2512N) flange
- ASME B16.5 flange
- JIS B2220 flange



Process connection materials

## Surface roughness

All data refer to parts in contact with the medium.

The following surface roughness categories can be ordered:

Not polished

## Operability

## Operating concept

## Operator-oriented menu structure for user-specific tasks

- Commissioning
- Operation
- Diagnostics
- Expert level

## Quick and safe commissioning

- Individual menus for applications
- Menu guidance with brief explanations of the individual parameter functions

#### Reliable operation

- Operation in the following languages:
  - Via "FieldCare", "DeviceCare" operating tool: English, German, French, Spanish, Italian, Chinese, Japanese
  - Via integrated Web browser(only available for device versions with HART, PROFIBUS DP, PROFINET and EtherNet/IP):
    - English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish, Chinese, Japanese, Bahasa (Indonesian), Vietnamese, Czech, Swedish, Korean
- Uniform operating philosophy applied to operating tools and Web browser
- If replacing the electronic module, transfer the device configuration via the plug-in memory (HistoROM DAT) which contains the process and measuring device data and the event logbook. No need to reconfigure.

For devices with Modbus RS485, the data recovery function is implemented without the plug-in memory (HistoROM DAT).

## Efficient diagnostics increase measurement availability

- Troubleshooting measures can be called up via the operating tools and web browser
- Diverse simulation options
- Status indicated by several light emitting diodes (LEDs) on the electronic module in the housing compartment

## Local display



A local display is only available for device versions with the following communication protocols: HART, PROFIBUS-DP, PROFINET, EtherNet/IP

The local display is only available with the following device order code: Order code for "Display; operation", option **B**: 4-line; illuminated, via communication


## Display element

- 4-line liquid crystal display with 16 characters per line.
- White background lighting; switches to red in event of device errors.
- Format for displaying measured variables and status variables can be individually configured.
- Permitted ambient temperature for the display: -20 to +60 °C (-4 to +140 °F). The readability of the display may be impaired at temperatures outside the temperature range.

## Remote operation

## Via HART protocol

This communication interface is available in device versions with a HART output.

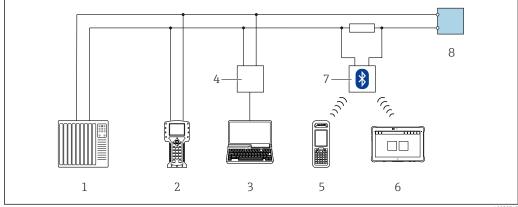


■ 28 Options for remote operation via HART protocol

- Control system (e.g. PLC)
- 2 Field Communicator 475
- 3 Computer with operating tool (e.g. FieldCare, AMS Device Manager, SIMATIC PDM)
- Commubox FXA195 (USB)
- 5 Field Xpert SFX350 or SFX370
- Field Xpert SMT70
- VIATOR Bluetooth modem with connecting cable
- Transmitter

64

## Via PROFIBUS DP network

This communication interface is available in device versions with PROFIBUS DP.

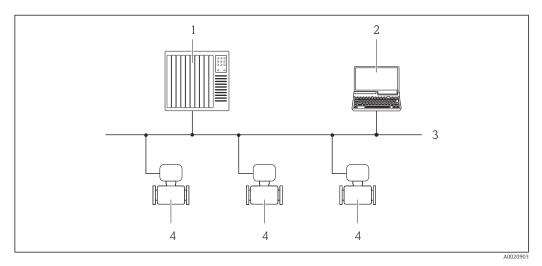


₹ 29 Options for remote operation via PROFIBUS DP network

- 1 Automation system
- Computer with PROFIBUS network card 2
- 3 PROFIBUS DP network
- Measuring device

## Via EtherNet/IP network

This communication interface is available in device versions with EtherNet/IP.

Star topology

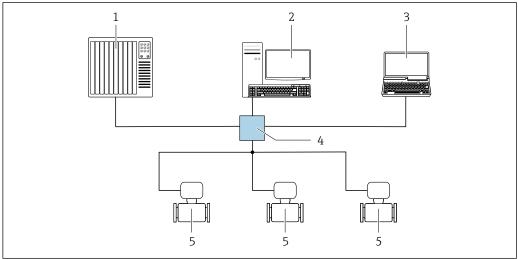


₹ 30 Options for remote operation via EtherNet/IP network: star topology

- Automation system, e.g. "RSLogix" (Rockwell Automation)
- Workstation for measuring device operation: with Custom Add-On Profile for "RSLogix 5000" (Rockwell 2 Automation) or with Electronic Data Sheet (EDS)
- Computer with Web browser (e.g. Internet Explorer) for accessing the integrated Web server or computer with operating tool (e.g. FieldCare, DeviceCare) with COM DTM "CDI Communication TCP/IP"
- Standard Ethernet switch, e.g. Scalance X204 (Siemens)
- Measuring device

## Via PROFINET network

This communication interface is available in device versions with PROFINET.

## Star topology

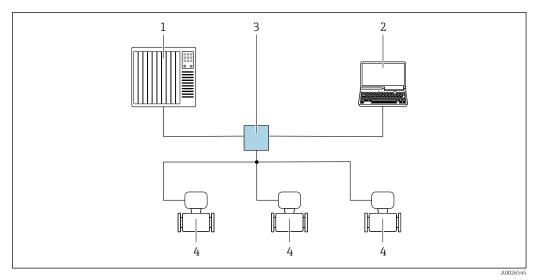

■ 31 Options for remote operation via PROFINET network: star topology

- 1 Automation system, e.g. Simatic S7 (Siemens)
- 2 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated Web server or computer with operating tool (e.g. FieldCare, DeviceCare, SIMATIC PDM) with COM DTM "CDI Communication TCP/IP"
- 3 Standard Ethernet switch, e.g. Scalance X204 (Siemens)
- 4 Measuring device


## Service interface

## Via service interface (CDI-RJ45)

This communication interface is present in the following device version:

- Order code for "Output", option **B**: 4-20 mA HART, pulse/frequency/switch output
- Order code for "Output", option **L**: PROFIBUS DP
- Order code for "Output", option N: EtherNet/IP
- Order code for "Output", option **R**: PROFINET

## HART

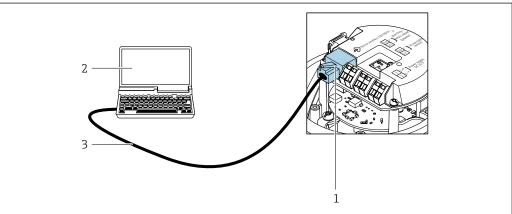


A0016926

- 32 Connection for the order code for "Output", option B: 4-20 mA HART, pulse/frequency/switch output
- 1 Service interface (CDI-RJ45) of the measuring device with access to the integrated web server
- 2 Computer with web browser (e.g. Internet Explorer) for accessing the integrated web server or with "FieldCare" operating tool with COM DTM "CDI Communication TCP/IP"
- 3 Standard Ethernet connecting cable with RJ45 plug

66

## PROFIBUS DP

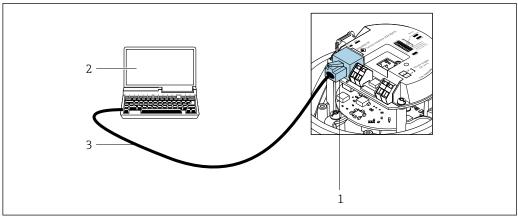


A0021270

## ■ 33 Connection for order code for "Output", option L: PROFIBUS DP

- 1 Service interface (CDI-RJ45) of the measuring device with access to the integrated web server
- 2 Computer with web browser (e.g. Internet Explorer) for accessing the integrated web server or with "FieldCare" operating tool with COM DTM "CDI Communication TCP/IP"
- 3 Standard Ethernet connecting cable with RJ45 plug

## EtherNet/IP

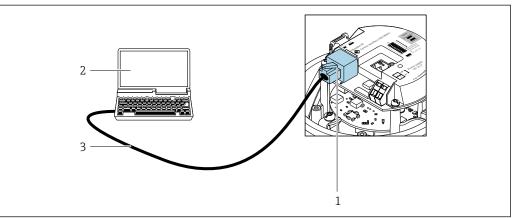


A0016940

■ 34 Connection for order code for "Output", option N: EtherNet/IP

- Service interface (CDI-RJ45) and EtherNet/IP interface of the measuring device with access to the integrated web server
- 2 Computer with web browser (e.g. Internet Explorer) for accessing the integrated web server or with "FieldCare" operating tool with COM DTM "CDI Communication TCP/IP"
- 3 Standard Ethernet connecting cable with RJ45 plug

## **PROFINET**

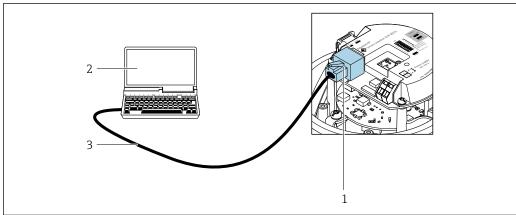


- Connection for order code for "Output", option R: PROFINET ■ 35
- Service interface (CDI-RJ45) and PROFINET interface of the measuring device with access to the integrated web server
- Computer with web browser (e.g. Internet Explorer) for accessing the integrated web server or with "FieldCare" operating tool with COM DTM "CDI Communication TCP/IP"
- Standard Ethernet connecting cable with RJ45 plug

## Via service interface (CDI)

This communication interface is present in the following device version: Order code for "Output", option M: Modbus RS485

#### Modbus RS485

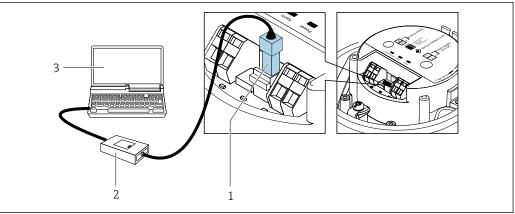

- Service interface (CDI) of measuring device
- 2 Commubox FXA291
- Computer with "FieldCare" operating tool with COM DTM "CDI Communication FXA291"

## Certificates and approvals

Current certificates and approvals for the product are available at www.endress.com on the relevant product page:

- 1. Select the product using the filters and search field.
- 2. Open the product page.
- 3. Select **Downloads**.

CE mark

The device meets the legal requirements of the applicable EU Directives. These are listed in the corresponding EU Declaration of Conformity along with the standards applied.

Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.

## **UKCA** marking

The device meets the legal requirements of the applicable UK regulations (Statutory Instruments). These are listed in the UKCA Declaration of Conformity along with the designated standards. By selecting the order option for UKCA marking, Endress+Hauser confirms a successful evaluation and testing of the device by affixing the UKCA mark.

Contact address Endress+Hauser UK: Endress+Hauser Ltd. Floats Road Manchester M23 9NF United Kingdom www.uk.endress.com

## RCM marking

The measuring system meets the EMC requirements of the "Australian Communications and Media Authority (ACMA)".

## Ex approval

The measuring device is certified for use in hazardous areas and the relevant safety instructions are provided in the separate "Safety Instructions" (XA) document. Reference is made to this document on the nameplate.



The separate Ex documentation (XA) containing all the relevant explosion protection data is available from your Endress+Hauser sales center.

#### ATEX/IECEx

Currently, the following versions for use in hazardous areas are available:

#### Ex ia

Category (ATEX)	Type of protection
II1/2G	Ex ia IIC T6T1 Ga/Gb or Ex ia IIB T6T1 Ga/Gb
II2G	Ex ia IIC T6T1 Gb or Ex ia IIB T6T1 Gb
II1/2G, II2D	Ex ia IIC T6T1 Ga/Gb or Ex ia IIB T6T1 Ga/Gb Ex tb IIIC Txx °C Db
II2G, II2D	Ex ia IIC T6T1 Gb or Ex ia IIB T6T1 Gb Ex tb IIIC Txx °C Db

#### Ex nA

Category (ATEX)	Type of protection
II3G	Ex nA IIC T6T1 Gc or Ex nA IIC T5-T1 Gc

## $_{C}CSA_{US}$

Currently, the following versions for use in hazardous areas are available:

IS (Ex i)

- Class I Division 1 Groups ABCD
- Class II Division 1 Groups EFG and Class III

NI (Ex nA)

Class I Division 2 Groups ABCD

## **HART** certification

## HART interface

The measuring device is certified and registered by the FieldComm Group. The measuring system meets all the requirements of the following specifications:

- Certified according to HART 7
- The device can also be operated with certified devices of other manufacturers (interoperability)

#### Certification PROFIBUS

#### **PROFIBUS** interface

The measuring device is certified and registered by the PNO (PROFIBUS Nutzerorganisation e.V./ PROFIBUS User Organization). The measuring system meets all the requirements of the following specifications:

- Certified according to PA Profile 3.02
- The device can also be operated with certified devices of other manufacturers (interoperability)

#### **Certification PROFINET**

#### PROFINET interface

The measuring device is certified and registered by the PNO (PROFIBUS Nutzerorganisation e.V. / PROFIBUS User Organization). The measuring system meets all the requirements of the following specifications:

- Certified according to:
  - Test specification for PROFINET devices
  - PROFINET Security Level 1- Netload Class 2 0 Mbps
- The device can also be operated with certified devices of other manufacturers (interoperability)
- The device supports PROFINET S2 system redundancy.

#### EtherNet/IP certification

The measuring device is certified and registered by the ODVA (Open Device Vendor Association). The measuring system meets all the requirements of the following specifications:

- Certified in accordance with the ODVA Conformance Test
- EtherNet/IP Performance Test
- EtherNet/IP PlugFest compliance
- The device can also be operated with certified devices of other manufacturers (interoperability)

#### Modbus RS485 certification

The measuring device meets all the requirements of the MODBUS RS485 conformity test and has the "MODBUS RS485 Conformance Test Policy, Version 2.0". The measuring device has successfully passed all the test procedures carried out.

## **Pressure Equipment Directive**

The measuring devices can be ordered with or without PED or PESR. If a device with PED or PESR is required, this must be ordered explicitly. A UK order option must be selected for PESR under the order code for "Approvals".

- With the marking
  - a) PED/G1/x (x = category) or
  - b) PESR/G1/x (x = category)
  - on the sensor nameplate,  $\dot{E}$ ndress+Hauser confirms compliance with the "Essential Safety Requirements"
  - a) specified in Annex I of the Pressure Equipment Directive 2014/68/EU or
  - b) Schedule 2 of Statutory Instruments 2016 No. 1105.
- Devices bearing this marking (PED or PESR) are suitable for the following types of medium:
  - Media in Group 1 and 2 with a vapor pressure greater than, or smaller and equal to 0.5 bar (7.3 psi)
  - Unstable gases
- Devices not bearing this marking (without PED or PESR) are designed and manufactured according to sound engineering practice. They meet the requirements of
  - a) Art. 4 Para. 3 of the Pressure Equipment Directive 2014/68/EU or
  - b) Part 1, Para. 8 of Statutory Instruments 2016 No. 1105.

The scope of application is indicated

- a) in diagrams 6 to 9 in Annex II of the Pressure Equipment Directive 2014/68/EU or
- b) Schedule 3, Para. 2 of Statutory Instruments 2016 No. 1105.

## External standards and guidelines

■ EN 60529

Degrees of protection provided by enclosures (IP code)

■ IEC/EN 60068-2-6

Environmental influences: Test procedure - Test Fc: vibrate (sinusoidal).

■ IEC/EN 60068-2-31

Environmental influences: Test procedure - Test Ec: shocks due to rough handling, primarily for devices.

■ EN 61010-1

Safety requirements for electrical equipment for measurement, control and laboratory use - general requirements

■ EN 61326-1/-2-3

EMC requirements for electrical equipment for measurement, control and laboratory use

■ NAMUR NE 21

Electromagnetic compatibility (EMC) of industrial process and laboratory control equipment

■ NAMUR NE 32

Data retention in the event of a power failure in field and control instruments with microprocessors

NAMUR NE 43

Standardization of the signal level for the breakdown information of digital transmitters with analog output signal.

■ NAMUR NE 53

Software of field devices and signal-processing devices with digital electronics

NAMUR NE 80

The application of the pressure equipment directive to process control devices

■ NAMUR NE 105

Specifications for integrating fieldbus devices in engineering tools for field devices

■ NAMUR NE 107

Self-monitoring and diagnosis of field devices

■ NAMUR NE 131

Requirements for field devices for standard applications

■ NAMUR NE 132

Coriolis mass meter

■ NACE MR0103

Materials resistant to sulfide stress cracking in corrosive petroleum refining environments.

■ NACE MR0175/ISO 15156-1

Materials for use in H2S-containing Environments in Oil and Gas Production.

■ ETSI EN 300 328

Guidelines for 2.4 GHz radio components.

■ EN 301489

Electromagnetic compatibility and radio spectrum matters (ERM).

## Ordering information

Detailed ordering information is available from your nearest sales organization www.addresses.endress.com or in the Product Configurator at www.endress.com:

- 1. Select the product using the filters and search field.
- 2. Open the product page.
- 3. Select **Configuration**.

## Product Configurator - the tool for individual product configuration

- Up-to-the-minute configuration data
- Depending on the device: Direct input of measuring point-specific information such as measuring range or operating language
- Automatic verification of exclusion criteria
- Automatic creation of the order code and its breakdown in PDF or Excel output format
- $\, \blacksquare \,$  Ability to order directly in the Endress+Hauser Online Shop

## Application packages

Many different application packages are available to enhance the functionality of the device. Such packages might be needed to address safety aspects or specific application requirements.

The application packages can be ordered with the device or subsequently from Endress+Hauser. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: <a href="https://www.endress.com">www.endress.com</a>.



**Heartbeat Technology** 

Order code for "Application package", option EB "Heartbeat Verification + Monitoring"

## **Heartbeat Verification**

Meets the requirement for traceable verification to DIN ISO 9001:2008 Chapter 7.6 a) "Control of monitoring and measuring equipment".

- Functional testing in the installed state without interrupting the process.
- Traceable verification results on request, including a report.
- Simple testing process via local operation or other operating interfaces.
- Clear measuring point assessment (pass/fail) with high test coverage within the framework of manufacturer specifications.
- Extension of calibration intervals according to operator's risk assessment.

## **Heartbeat Monitoring**

Continuously supplies data, which are characteristic of the measuring principle, to an external condition monitoring system for the purpose of preventive maintenance or process analysis. These data enable the operator to:

- Draw conclusions using these data and other information about the impact process influences (e.g. corrosion, abrasion, buildup etc.) have on the measuring performance over time.
- Schedule servicing in time.
- Monitor the process or product quality, e.g. gas pockets .



For detailed information, see the Special Documentation for the device.

#### **Concentration measurement**

Order code for "Application package", option ED "Concentration"

Calculation and outputting of fluid concentrations.

The measured density is converted to the concentration of a substance of a binary mixture using the "Concentration" application package:

- Choice of predefined fluids (e.g. various sugar solutions, acids, alkalis, salts, ethanol etc.).
- Common or user-defined units (°Brix, °Plato, % mass, % volume, mol/l etc.) for standard applications.
- Concentration calculation from user-defined tables.

The measured values are output via the digital and analog outputs of the device.



For detailed information, see the Special Documentation for the device.

### Special density

Order code for "Application package", option EE "Special density"

Many applications use density as a key measured value for monitoring quality or controlling processes. The measuring instrument measures the density of the fluid as standard and makes this value available to the control system.

The "Special Density" application package offers high-precision density measurement over a wide density and temperature range particularly for applications subject to varying process conditions.

The calibration certificate supplied contains the following information:

- Density performance in air
- Density performance in liquids with different density
- Density performance in water with different temperatures



For detailed information, see the Operating Instructions for the device.

## Extended density

Order code for "Application package", option E1 "Extended density"

For volume-based applications, the device can calculate and output a volume flow rate by dividing the mass flow rate by the measured density.

This application package is the standard calibration for custody transfer applications according to national and international standards (e.g. OIML, MID). It is recommended for volume-based fiscal dosing applications over a wide temperature range.

The calibration certificate supplied describes the density performance in air and water at various temperatures in detail.



For detailed information, see the Operating Instructions for the device.

## Accessories

Various accessories, which can be ordered with the device or subsequently from Endress+Hauser, are available for the device. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.

## Device-specific accessories

## For the sensor

Accessories	Description	
Heating jacket	Is used to stabilize the temperature of the fluids in the sensor. Water, water vapor and other non-corrosive liquids are permitted for use as fluids.	
	If using oil as a heating medium, please consult with Endress+Hauser.	
	Special Documentation SD02159D	

## Communication-specific accessories

Accessories	Description
Commubox FXA195 HART	For intrinsically safe HART communication with FieldCare via the USB port.  Technical Information TI00404F
Commubox FXA291	Connects Endress+Hauser field devices with a CDI interface (= Endress+Hauser Common Data Interface) and the USB port of a computer or laptop.  Technical Information TI00405C
HART loop converter HMX50	Is used to evaluate and convert dynamic HART process variables to analog current signals or limit values.  • Technical Information TI00429F • Operating Instructions BA00371F
Wireless HART adapter SWA70	Is used for the wireless connection of field devices.  The WirelessHART adapter can be easily integrated into field devices and existing infrastructures, offers data protection and transmission safety and can be operated in parallel with other wireless networks with minimum cabling complexity.  Operating Instructions BA00061S
Fieldgate FXA42	Transmission of the measured values of connected 4 to 20 mA analog measuring instruments, as well as digital measuring instruments  Technical Information TI01297S  Operating Instructions BA01778S  Product page: www.endress.com/fxa42
Field Xpert SMT50	The Field Xpert SMT50 tablet PC for device configuration enables mobile plant asset management in the non-hazardous areas. It is suitable for commissioning and maintenance staff to manage field instruments with a digital communication interface and to record progress.  This tablet PC is designed as an all-in-one solution with a preinstalled driver library and is an easy-to-use, touch-sensitive tool which can be used to manage the field instruments throughout their entire life cycle.
	<ul> <li>Technical Information TI01555S</li> <li>Operating Instructions BA02053S</li> <li>Product page: www.endress.com/smt50</li> </ul>

Field Xpert SMT70	The Field Xpert SMT70 tablet PC for device configuration enables mobile plan asset management in hazardous and non-hazardous areas. It is suitable for commissioning and maintenance staff to manage field instruments with a dig communication interface and to record progress.  This tablet PC is designed as an all-in-one solution with a preinstalled driver liand is an easy-to-use, touch-sensitive tool which can be used to manage the finstruments throughout their entire life cycle.	
	<ul> <li>Technical Information TI01342S</li> <li>Operating Instructions BA01709S</li> <li>Product page: www.endress.com/smt70</li> </ul>	
Field Xpert SMT77	The Field Xpert SMT77 tablet PC for device configuration enables mobile plant asset management in areas categorized as Ex Zone 1.	
	<ul> <li>Technical Information TI01418S</li> <li>Operating Instructions BA01923S</li> <li>Product page: www.endress.com/smt77</li> </ul>	

## Service-specific accessories

Accessories	Description
Applicator	Software for selecting and sizing Endress+Hauser measuring instruments:  Choice of measuring instruments for industrial requirements  Calculation of all the necessary data for identifying the optimum flowmeter: e.g. nominal diameter, pressure loss, flow velocity and measurement accuracy.  Graphic display of the calculation results  Determination of the partial order code, administration, documentation and access to all project-related data and parameters over the entire life cycle of a project.
	Applicator is available: Via the Internet: https://portal.endress.com/webapp/applicator
Netilion	lloT ecosystem: Unlock knowledge With the Netilion IIoT ecosystem,Endress+Hauser allows you to optimize your plant performance, digitize workflows, share knowledge, and enhance collaboration. Drawing upon decades of experience in process automation, Endress+Hauser offers the process industry an IIoT ecosystem designed to effortlessly extract insights from data. These insights allow process optimization, leading to increased plant availability, efficiency, and reliability - ultimately resulting in a more profitable plant.  www.netilion.endress.com
FieldCare	FDT-based plant asset management tool from Endress+Hauser. It can configure all intelligent field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.  Operating Instructions BA00027S and BA00059S
DeviceCare	Tool to connect and configure Endress+Hauser field devices.  Innovation brochure IN01047S

## System components

Accessories	Description
Memograph M graphic data manager	The Memograph M graphic data manager provides information on all the relevant measured variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on a SD card or USB stick.  The Technical Information TI00133R
	• Operating Instructions BA00247R
iTEMP	The temperature transmitters can be used in all applications and are suitable for the measurement of gases, steam and liquids. They can be used to read in the medium temperature.
	"Fields of Activity" document FA00006T

74

## Supplementary documentation



For an overview of the scope of the associated Technical Documentation, refer to the following:

- Device Viewer (www.endress.com/deviceviewer): Enter the serial number from the nameplate
- Endress+Hauser Operations app: Enter serial number from nameplate or scan matrix code on nameplate.

## Standard documentation



Supplementary information on the semi-standard options is available in the relevant Special Documentation in the TSP database.

## **Brief Operating instructions**

*Brief Operating Instructions for the sensor* 

Measuring instrument	Documentation code
Proline Promass O	KA01285D

## Brief operating instructions for transmitter

	Documentation code		
Measuring instrument	H A R TPROFIBUS DP	Modbus RS485	t h eP rR NO eF tI /N
Proline Promass 100	KKA01333D A 0 1 3 3 4 D	KA01335D	KK AA 00 11 33 33 26 DD

## **Operating Instructions**

	Documentation code				
Measuring device	HART	PROFIBUS DP	Modbus RS485	EtherNet/IP	PROFINET
Promass O 100	BA01191D	BA01252D	BA01180D	BA01185D	BA01430D

## Description of device parameters

	Documentation code					
Measuring device	HART PROFIBUS DP Modbus RS485 EtherNet/IP PROFINET					
Promass 100	GP01033D	GP01034D	GP01035D	GP01036D	GP01037D	

## Supplementary devicedependent documentation

## **Safety Instructions**

Content	Documentation code
ATEX/IECEx Ex i	XA00159D
ATEX/IECEx Ex nA	XA01029D

Content	Documentation code
cCSAus IS	XA00160D
INMETRO Ex i	XA01219D
INMETRO Ex nA	XA01220D
NEPSI Ex i	XA01249D
NEPSI Ex nA	XA01262D

## **Special Documentation**

Content	Documentation code
Information on the Pressure Equipment Directive	SD00142D
Modbus RS485 Register Information	SD00154D
Concentration measurement	SD01152D
Concentration measurement	SD01503D
Heartbeat Technology	SD01153D
Heartbeat Technology	SD01493D
Web server	SD01820D
Web server	SD01821D
Web server	SD01822D
Web server	SD01823D

## **Installation instructions**

Contents	Note
Installation instructions for spare part sets and accessories	Documentation code: specified for each individual accessory $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $

## Registered trademarks

## **HART**®

Registered trademark of the FieldComm Group, Austin, Texas USA

#### PROFIBUS®

Registered trademark of the PROFIBUS Nutzerorganisation e.V. (PROFIBUS User Organization), Karlsruhe, Germany

#### Modbus®

Registered trademark of SCHNEIDER AUTOMATION, INC.

## EtherNet/IP™

Trademark of ODVA, Inc.

#### PROFINET®

Registered trademark of the PROFIBUS Nutzerorganisation e.V. (PROFIBUS User Organization), Karlsruhe, Germany

## TRI-CLAMP®

Registered trademark of Ladish & Co., Inc., Kenosha, USA







www.addresses.endress.com