


# Description of device parameters **J22 and JT33 TDLAS Gas Analyzer**

Modbus TCP and Modbus RS485



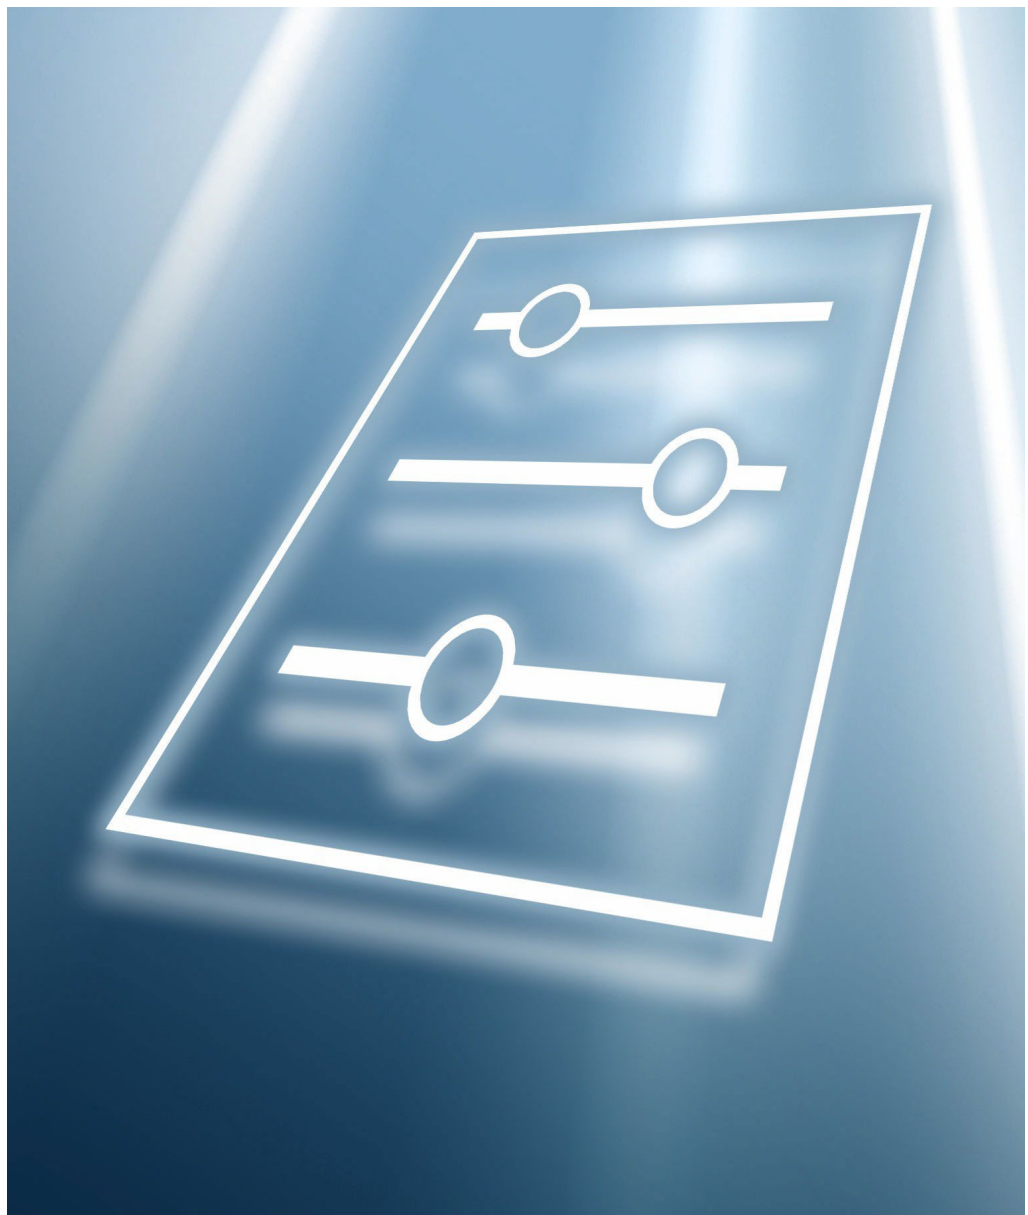

## Table of Contents





<b>1</b>	<b>About this document .....</b>	<b>3</b>		
1.1	Warnings.....	3		
1.2	Symbols on the device.....	3		
1.3	U.S. export compliance.....	3		
1.4	Document function.....	3		
1.4.1	Target group .....	3		
1.5	Using this document .....	4		
1.5.1	Information on the document structure	4		
1.5.2	Structure of a parameter description .....	5		
1.6	Symbols used.....	5		
1.6.1	Symbols for types of information .....	5		
1.6.2	Symbols in graphics .....	6		
1.7	Documentation .....	6		
1.7.1	Standard documentation .....	6		
<b>2</b>	<b>Overview of the Expert menu.....</b>	<b>7</b>		
<b>3</b>	<b>Description of device parameters .....</b>	<b>10</b>		
3.1	System .....	11		
3.1.1	Display .....	12		
3.1.2	Configuration backup.....	22		
3.1.3	Diagnostic handling .....	24		
3.1.4	Administration .....	28		
3.2	Sensor .....	32		
3.2.1	Measured values.....	32		
3.2.2	System units.....	43		
3.2.3	Stream .....	47		
3.2.4	Dew point .....	49		
3.2.5	Peak tracking .....	53		
3.2.6	Sensor adjustment.....	53		
3.2.7	Stream change compensation.....	56		
3.2.8	Calibration.....	57		
3.3	I/O configuration .....	58		
3.4	Input.....	60		
3.4.1	Current input 1 to n.....	60		
3.5	Output.....	62		
3.5.1	Current output 1 to n .....	62		
3.5.2	Switch output 1.....	68		
3.5.3	Relay output 1 to n .....	72		
3.6	Communication .....	76		
3.6.1	Modbus configuration.....	76		
3.6.2	Modbus information .....	82		
3.6.3	Modbus data map.....	82		
3.6.4	Web server .....	83		
3.6.5	WLAN .....	86		
3.7	Diagnostics .....	90		
3.7.1	Diagnostic list .....	92		
3.7.2	Event logbook.....	96		
3.7.3	Device information.....	97		
3.7.4	Main electronic module + I/O module 1 99			
3.7.5	Sensor electronic module (ISEM) .....	100		
3.7.6	I/O module 2 .....	101		
3.7.7	I/O module 3 .....	102		
3.7.8	MAC electronic module (ISEM) .....	103		
3.7.9	Display module .....	104		
3.7.10	Data logging.....	104		
3.7.11	Heartbeat Technology .....	108		
3.7.12	Simulation.....	122		
3.7.13	Spectrum plots.....	126		
3.7.14	SD card.....	133		
<b>4</b>	<b>Approval specific factory settings ..</b>	<b>135</b>		
4.1	SI units.....	135		
4.1.1	System units .....	135		
4.1.2	Full scale values.....	135		
4.1.3	Output current span.....	135		
4.2	US units .....	135		
4.2.1	System units .....	135		
4.2.2	Full scale values.....	135		
4.2.3	Output current span.....	135		
<b>5</b>	<b>Explanation of abbreviated units ...</b>	<b>136</b>		
5.1	SI units.....	136		
5.2	US units .....	136		
5.3	Imperial units .....	136		
<b>6</b>	<b>Modbus register information .....</b>	<b>137</b>		
6.1	Notes.....	137		
6.1.1	Structure of the register information	137		
6.1.2	Address model.....	137		
6.2	Overview of the Expert operating menu.....	138		
6.3	Register information.....	148		
6.3.1	System submenu .....	148		
6.3.2	Sensor .....	152		
6.3.3	I/O configuration submenu.....	158		
6.3.4	Input submenu .....	158		
6.3.5	Output submenu.....	159		
6.3.6	Communication submenu .....	162		
6.3.7	WLAN .....	164		
6.3.8	Diagnostics.....	165		
6.3.9	Simulation.....	173		
6.3.10	Spectrum plots.....	173		
6.3.11	SD card.....	174		

# 1 About this document

## 1.1 Warnings

Structure of Information	Meaning
 <b>WARNING</b> <b>Causes (/consequences)</b> Consequences of noncompliance (if applicable) ▶ Corrective action	This symbol alerts you to a dangerous situation. Failure to avoid the dangerous situation can result in a fatal or serious injury.
 <b>CAUTION</b> <b>Causes (/consequences)</b> Consequences of noncompliance (if applicable) ▶ Corrective action	This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or more serious injuries.
<b>NOTICE</b> <b>Cause/situation</b> Consequences of noncompliance (if applicable) ▶ Action/note	This symbol alerts you to situations which may result in damage to property.

## 1.2 Symbols on the device

Symbol	Description
	The Laser Radiation symbol is used to alert the user to the danger of exposure to hazardous visible laser radiation when using the J22 or JT33 TDLAS Gas Analyzer.
	The High Voltage symbol that alerts people to the presence of electric potential large enough to cause injury or damage. In certain industries, high voltage refers to voltage above a certain threshold. Equipment and conductors that carry high voltage warrant special safety requirements and procedures.
	The WEEE symbol indicates that the product may not be discarded as unsorted waste but must be sent to separate collection facilities for recovery and recycling.
	The CE Marking indicates conformity with health, safety, and environmental protection standards for products sold within the European economic area (EEA).

## 1.3 U.S. export compliance

The policy of Endress+Hauser is strict compliance with U.S. export control laws as detailed in the website of the [Bureau of Industry and Security](#) at the U.S. Department of Commerce.

## 1.4 Document function

The document is part of the Operating Instructions and serves as a reference for parameters, providing a detailed explanation of each individual parameter of the operating menu.


### 1.4.1 Target group


The document is aimed at specialists who work with the device over the entire life cycle and perform specific configurations. It is used to perform tasks that require detailed knowledge of the function of the device:


- Commissioning measurements under difficult conditions
- Optimal adaptation of the measurement to difficult conditions
- Detailed configuration of the communication interface
- Error diagnostics in difficult cases

## 1.5 Using this document



### 1.5.1 Information on the document structure

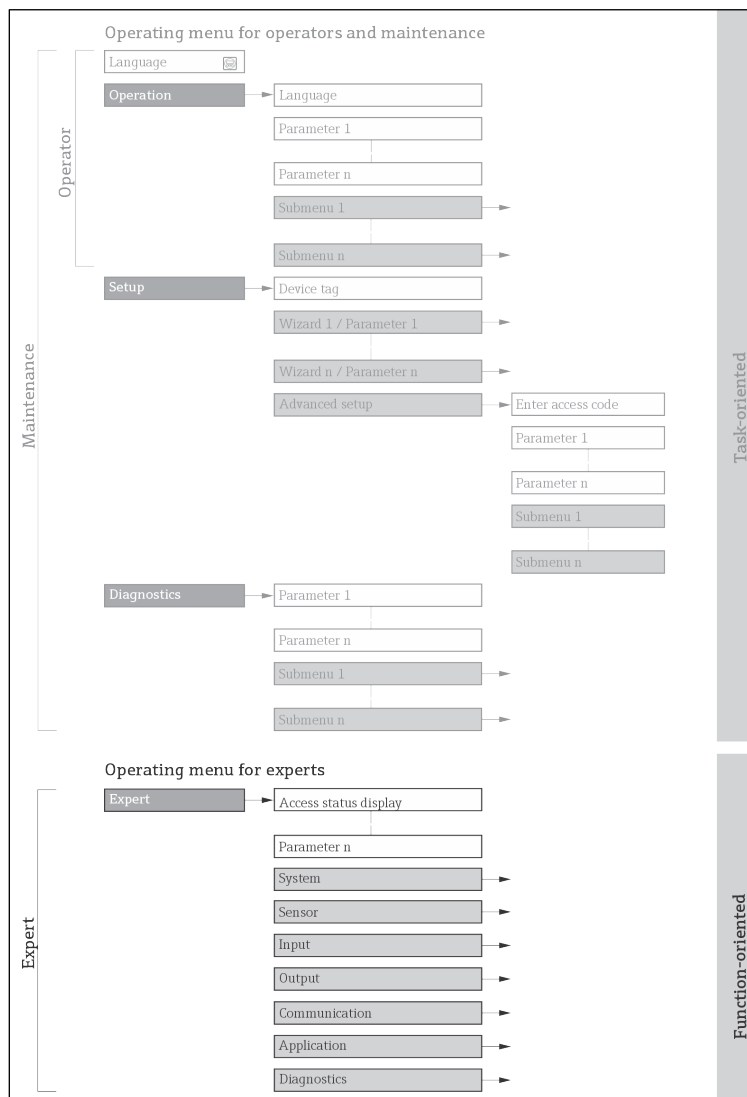The document lists the submenus and their parameters according to the structure from the *Expert menu* →  which is displayed when the Maintenance user role is enabled.





 1 Sample graphic for the schematic layout of the operating menu

#### NOTICE

- ▶ Additional information regarding the arrangement of the parameters according to the menu structure of the Operation menu, Setup menu, Diagnostics menu with a brief description can be found in the *Operating Instructions* → .
- ▶ Operating concept of the operating menus can also be found in the *Operating Instructions* → .








## 1.5.2 Structure of a parameter description

The individual parts of a parameter description are described in the following section:

Completed Parameter Name	Description
Navigation	 Navigation path to the parameter via the local display or web browser  Navigation path to the parameter via the operating tool The names of the menus, submenus and parameters are abbreviated to the form in which they appear on the display and in the operating tool.
Prerequisite	The parameter is only available under these specific conditions
Description	Description of the parameter function
Selection	List of the individual options for the parameter <ul style="list-style-type: none"> <li>▪ Option 1</li> <li>▪ Option 2</li> </ul>
User entry	Parameter entry range
User interface	Display value/data of the parameter
Factory setting	Default setting ex works
Additional information	Additional explanations such as: <ul style="list-style-type: none"> <li>▪ On individual options</li> <li>▪ On display values/data</li> <li>▪ On the input range</li> <li>▪ On the factory setting</li> <li>▪ On the parameter function</li> </ul>

## 1.6 Symbols used

### 1.6.1 Symbols for types of information

Symbol	Description
 A0011193	Tip Indicates additional information.
 A0028658	Reference to documentation
 A0028659	Reference to page
 A0028660	Reference to graphic
 A0028662	Operation via local display
 A0028663	Operation via operating tool
 A0028665	Access code protected parameter

## 1.6.2 Symbols in graphics

Symbol	Description
1, 2, 3 ...	Item numbers
A, B, C, ...	Views
A-A, B-B, C-C, ...	Sections


## 1.7 Documentation


### 1.7.1 Standard documentation

Part Number	Document Type	Description
BA02152C	J22 Operating Instruction	A complete overview of the operations required to install, commission, and maintain the device.
XA02708C	J22 Safety Instruction	Requirements for installing or operating the J22 TDLAS gas analyzer related to personnel or equipment safety.
XA03086C	J22 Safety Instruction INMETRO	Requirements for installing or operating the J22 TDLAS gas analyzer related to personnel or equipment safety. Document for INMETRO Certification.
XA03087C	J22 Safety Instruction JPNEx	Requirements for installing or operating the J22 TDLAS gas analyzer related to personnel or equipment safety. Document for JPNEx Certification.
XA03090C	J22 Safety Instruction PESO/KC	Requirements for installing or operating the J22 TDLAS gas analyzer related to personnel or equipment safety. Document for PESO/KC Certification.
TI01607C	J22 Technical Information	Planning aid for your device. The document contains all the technical data on the analyzer.
BA02297C	JT33 Operating Instructions	A complete overview of the operations required to install, commission, and maintain the device.
TI01722C	JT33 Technical Information	Planning aid for your device. The document contains all the technical data on the analyzer.
XA03137C	JT33 Safety Instructions	Requirements for installing or operating the JT33 TDLAS gas analyzer related to personnel or equipment safety.

## 2 Overview of the Expert menu

The following table provides an overview of the menu structure of the expert operating menu and its parameters. The page reference indicates where the associated description of the submenu or parameter can be found.

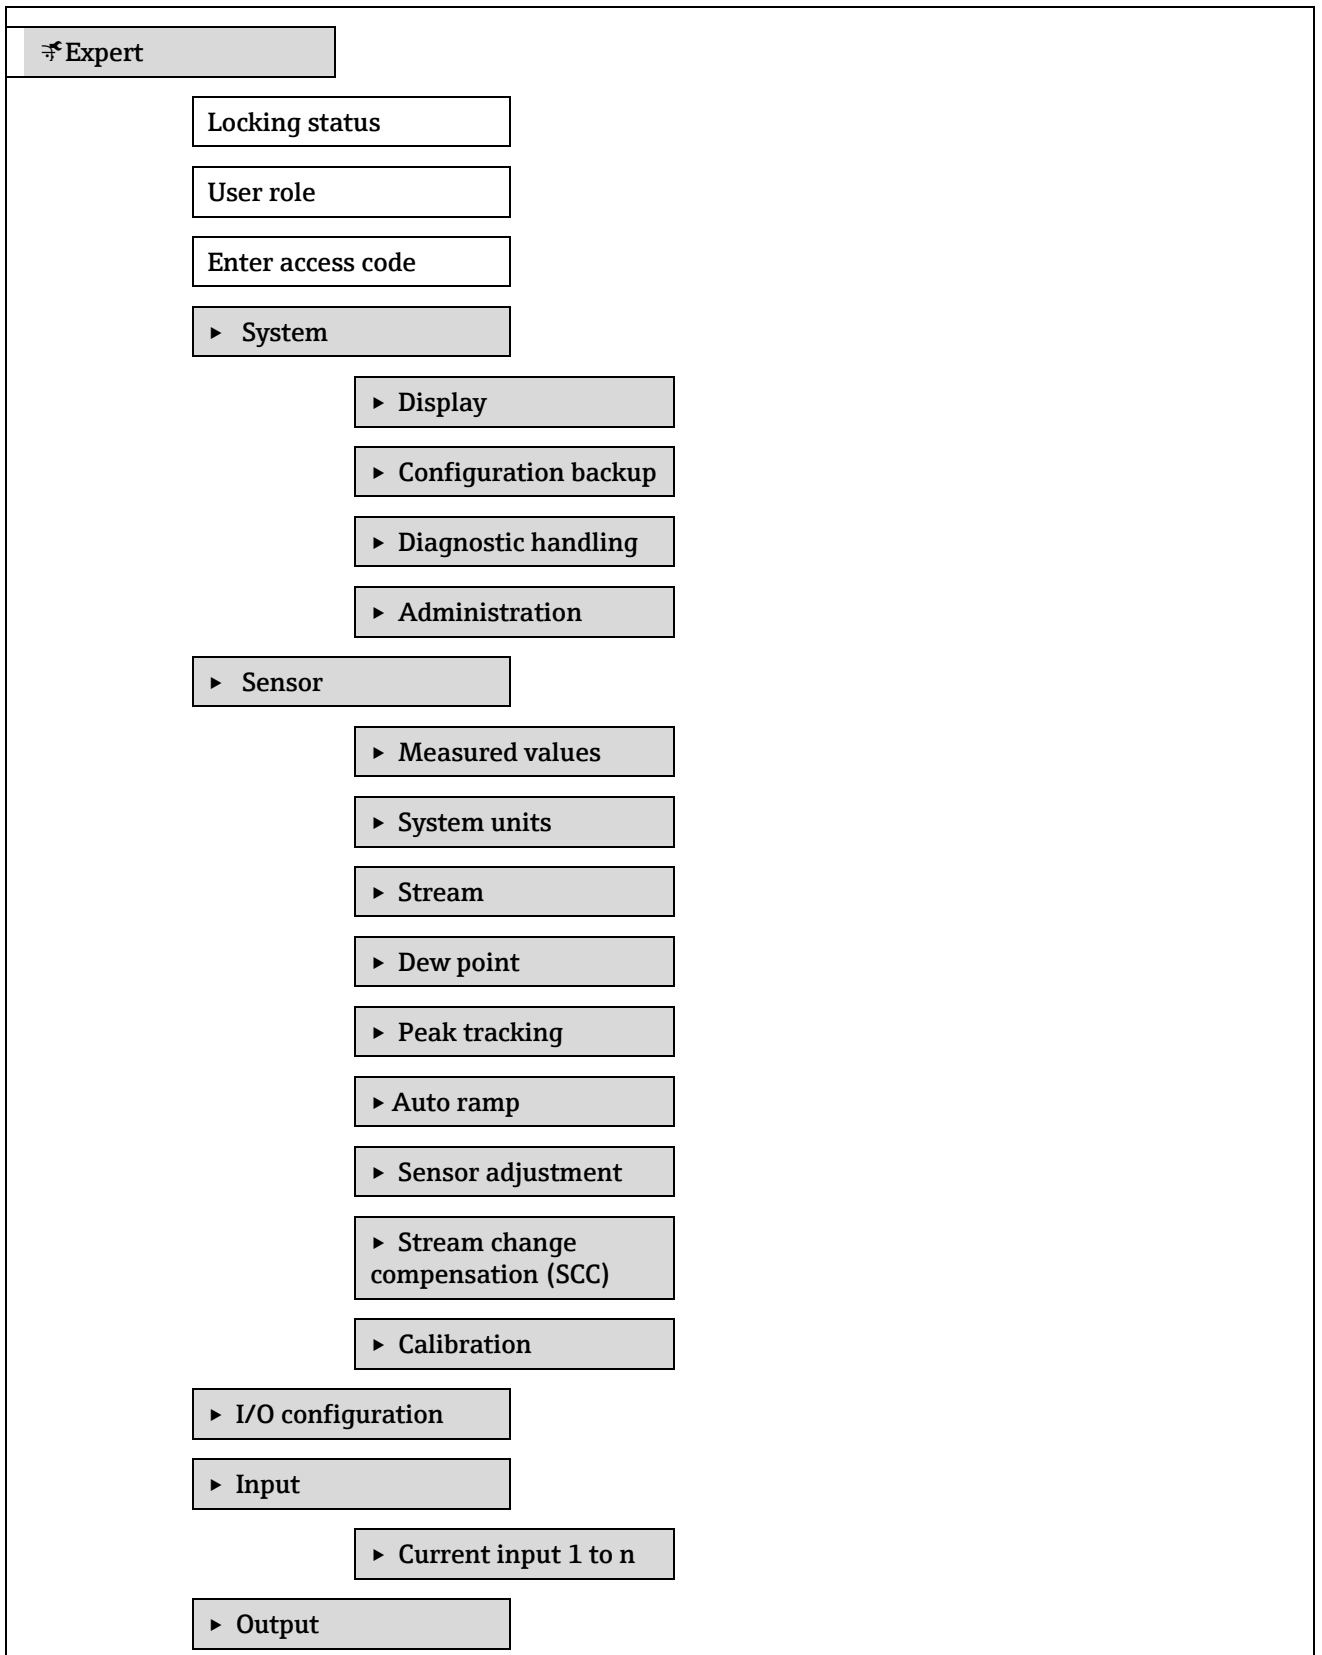

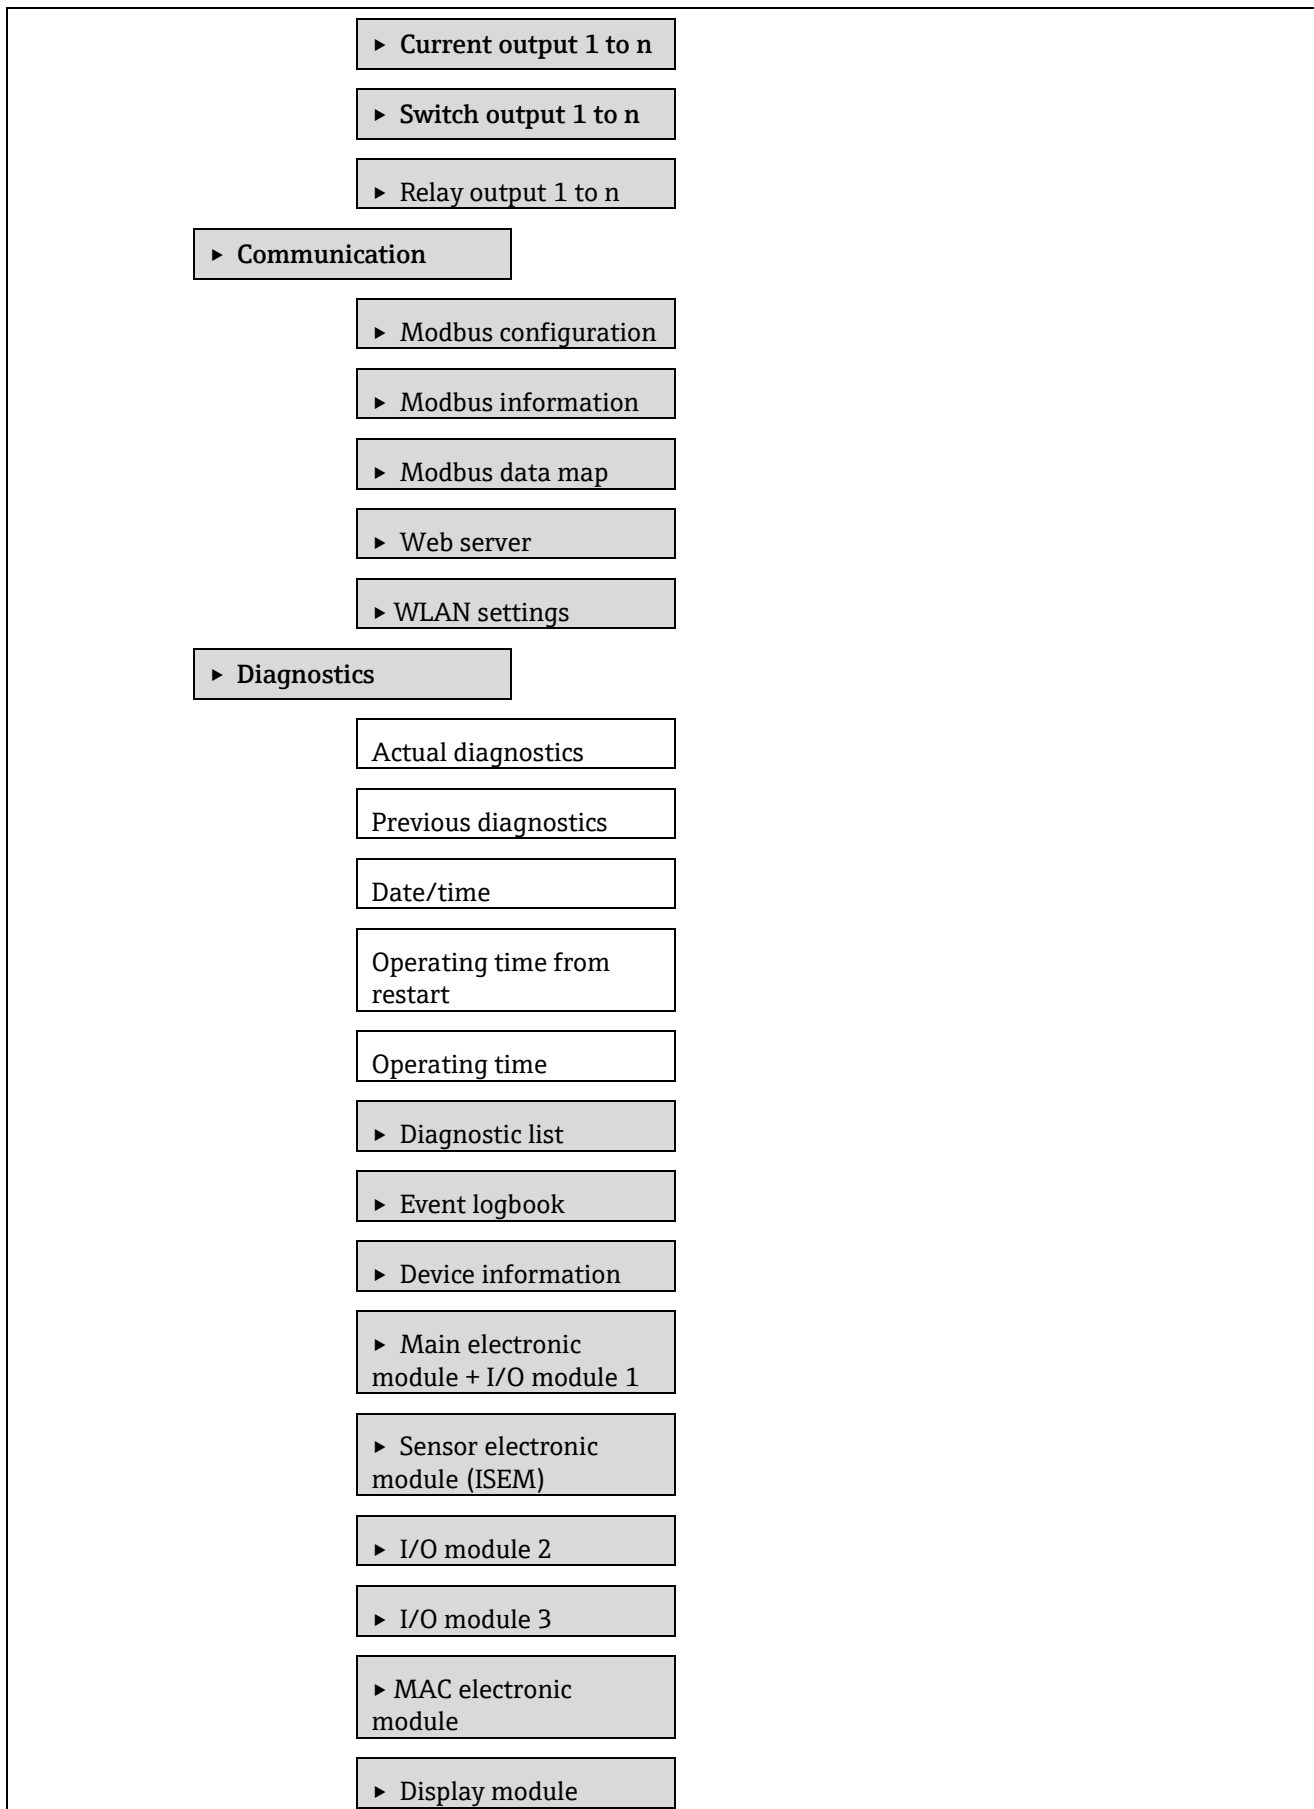




- ▶ Data logging
- ▶ Heartbeat Technology
- ▶ Spectrum plots
- ▶ SD card
- ▶ Simulation

### 3 Description of device parameters

In the following section, the parameters are listed according to the menu structure of the local display. Specific parameters for the operating tools are included at the appropriate points in the menu structure.

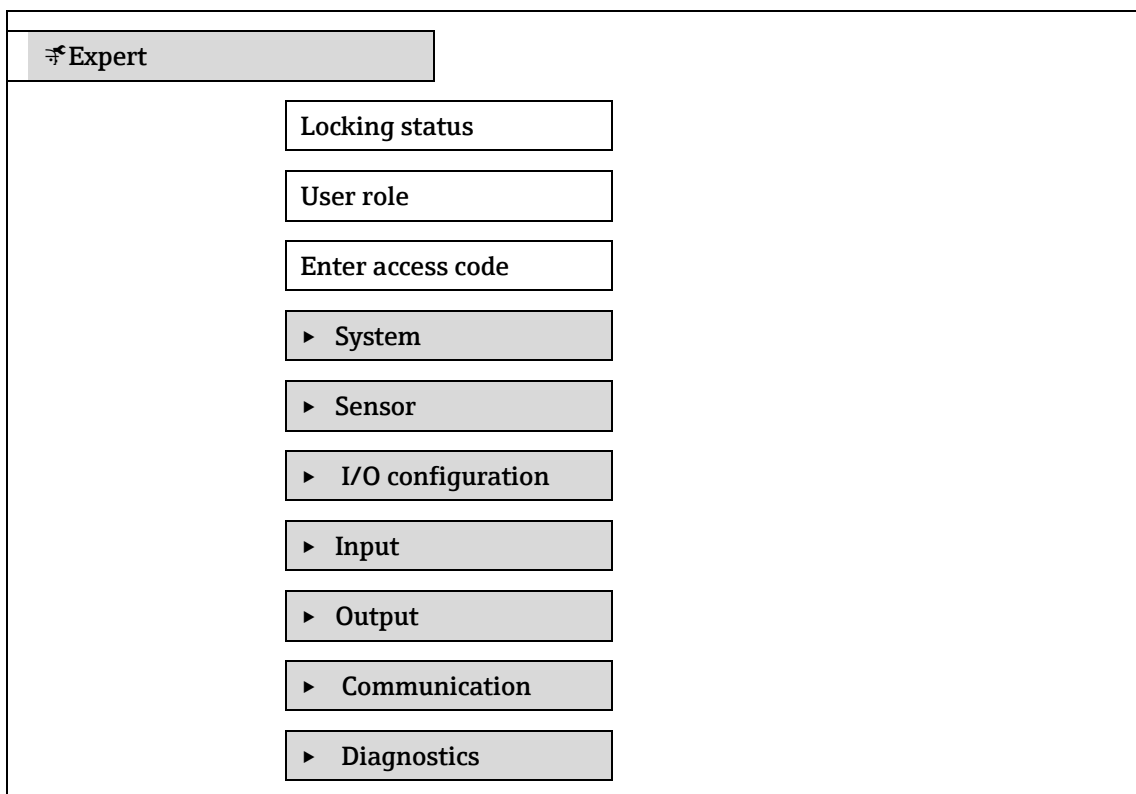

#### Locking status

##### Navigation

Expert → Locking status

##### Description

Displays the active write protection.

##### User interface

- Hardware locked
- Temporarily locked

##### Additional information

###### *User interface*

If two or more types of write protection are active, the write protection with the highest priority is shown on the local display. In the operating tool all active types of write protection are displayed.

###### NOTICE

- ▶ Detailed information on access authorization is provided in the "User roles and associated access authorization" and "Operating concept" sections of the *Operating Instructions for the device* → .

###### *Selection*

Options	Description
None	The access authorization displayed in the <i>Locking status parameter</i> →  applies. Only appears on local display.
Hardware locked (priority 1)	The DIP switch for hardware locking is activated on the PCB board. This locks write access to the parameters (e.g., via local display or operating tool).

Options	Description
Temporarily locked (priority 4)	Write access to the parameters is temporarily locked on account of internal processes running in the device (e.g., data upload/download, reset, etc.). Once the internal processing has been completed, the parameters can be changed once again.

---

### User role

---

<b>Navigation</b>	🏠📄 Expert → User role
<b>Description</b>	Displays the access authorization to the parameters via the local display, Web browser or operating tool.
<b>User entry</b>	Operator Maintenance
<b>Factory setting</b>	Maintenance
<b>Additional information</b>	Access authorization can be modified via the <i>Enter access code parameter</i> → 📄. If additional write protection is active, this restricts the current access authorization even further.
	<b>NOTICE</b>
	▶ Detailed information on access authorization is provided in the "User roles and associated access authorization" and "Operating concept" sections of the <i>Operating Instructions for the device</i> → 📄.

---


### Enter access code

---


<b>Navigation</b>	🏠📄 Expert → Ent. access code
<b>Description</b>	Use this function to enter the user-specific release code to remove parameter write protection.
<b>User entry</b>	Max. 16-digit character string comprising numbers, letters, and special characters
<b>Factory setting</b>	0000; can be changed by customer
<b>Additional information</b>	See the <i>J22 Operating instruction BA02152C</i> → 📄 or <i>JT33 Operating Instruction BA02297C</i> → 📄 for instructions on logging in.


## 3.1 System

**Navigation** 🏠📄 Expert → System

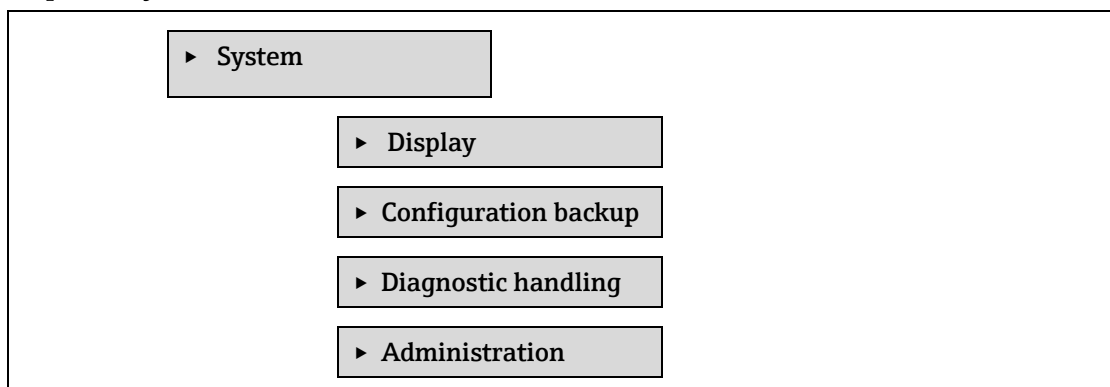

### 3.1.1 Display

Navigation  Expert → System → Display

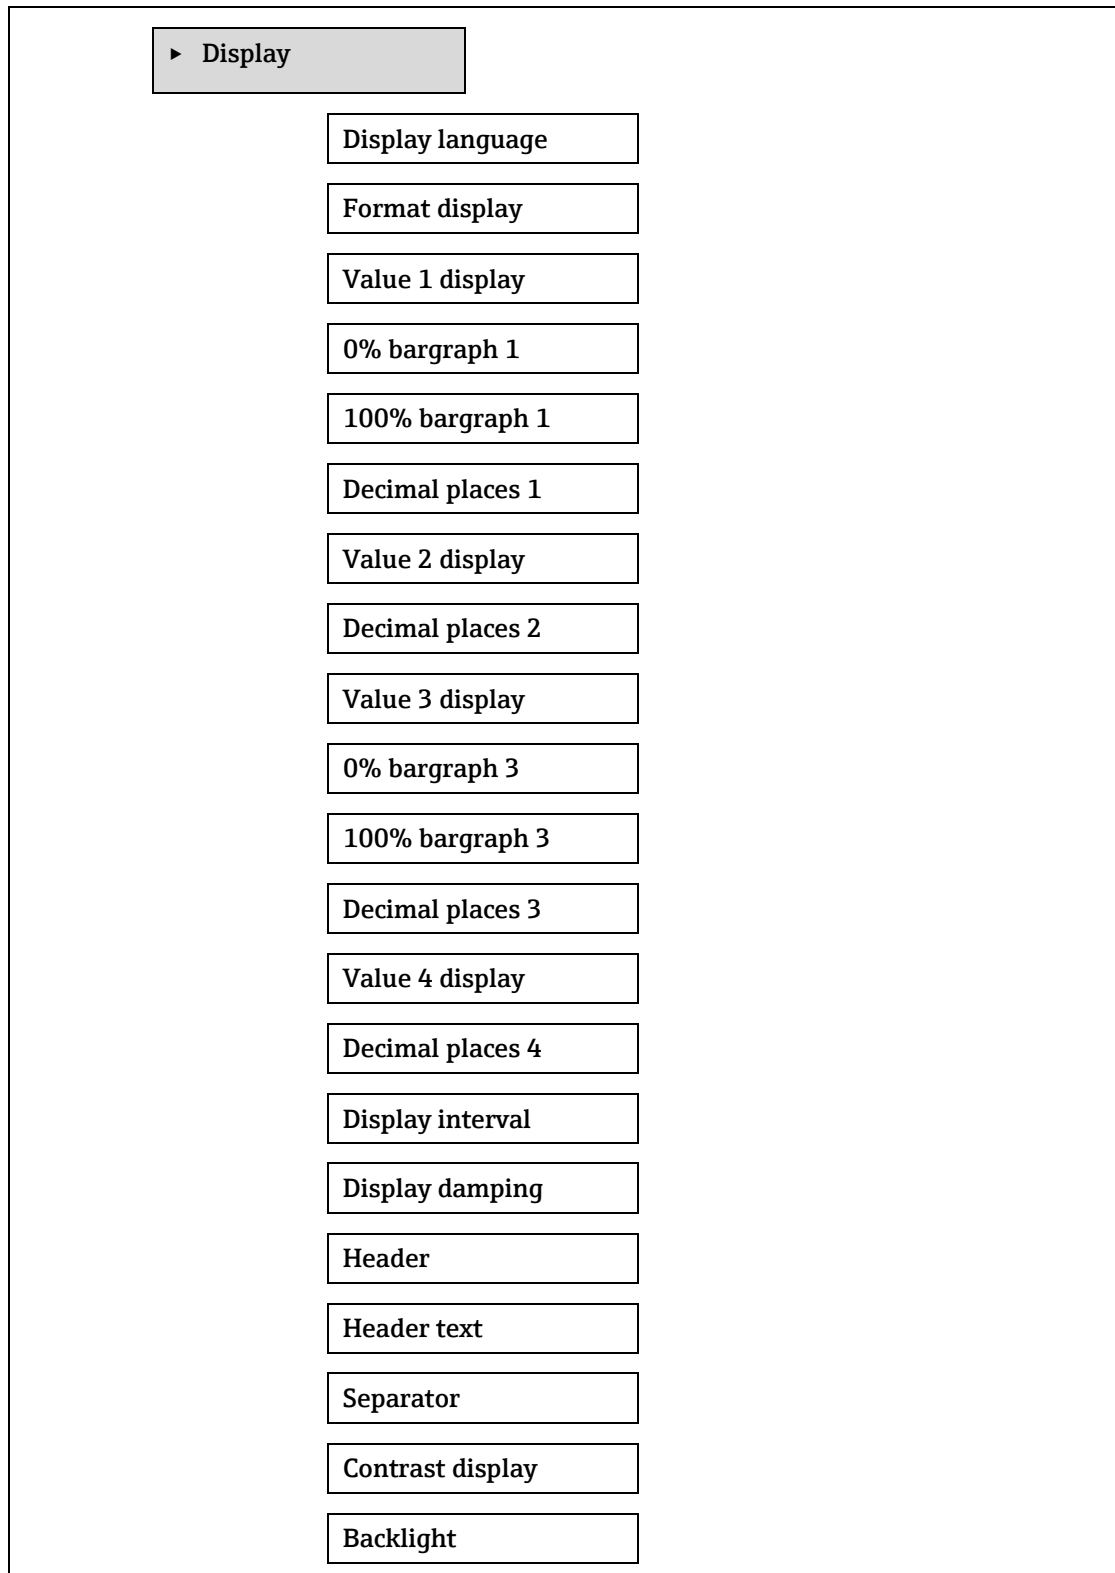

- Display
  - Display language
  - Format display
  - Value 1 display
  - 0% bargraph 1
  - 100% bargraph 1
  - Decimal places 1
  - Value 2 display
  - Decimal places 2
  - Value 3 display
  - 0% bargraph 3
  - 100% bargraph 3
  - Decimal places 3
  - Value 4 display
  - Decimal places 4
  - Display interval
  - Display damping
  - Header
  - Header text
  - Separator
  - Contrast display
  - Backlight

---

**Display language**


---

<b>Navigation</b>	☰☰ Expert → System → Display → Display language
<b>Prerequisite</b>	A local display is provided.
<b>Description</b>	Use this function to select the configured language on the local display.
<b>Selection</b>	English Français Italiano русский язык (Russian) 中文 (Chinese)
<b>Factory setting</b>	English (alternatively, the ordered language is preset in the device)


---

**Format display**






---

<b>Navigation</b>	☰☰ Expert → System → Display → Format display
<b>Prerequisite</b>	A local display is provided.
<b>Description</b>	Use this function to select how the measured value is shown on the local display.
<b>Selection</b>	1 value, max. size 1 bargraph + 1 value 2 values 1 value large + 2 values 4 values
<b>Factory setting</b>	1 value, max. size
<b>Additional information</b>	<p><i>Description</i></p> <p>The display format (size, bar graph, etc.) and number of measured values displayed simultaneously (1 to 4) can be configured. This setting only applies to normal operation.</p> <p>The <i>Value 1 display parameter</i> → ☰ to Value 4 display parameters are used to specify which measured values are shown on the local display and in what order.</p> <p>If more measured values are specified than the display mode selected permits, then the values alternate on the device display. The display time until the next change is configured using the <i>Display interval parameter</i> → ☰.</p> <p>Possible measured values shown on the local display:</p>

"1 value, max. size" option

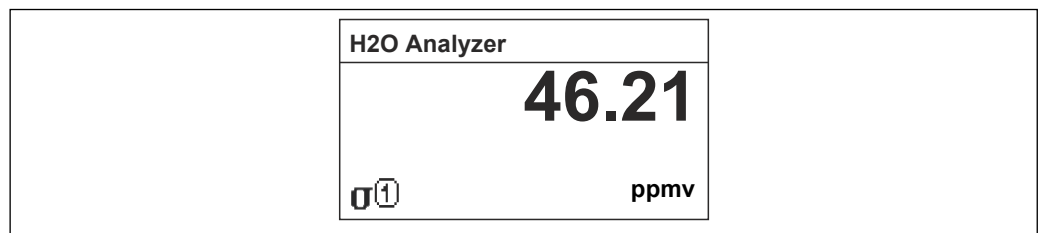

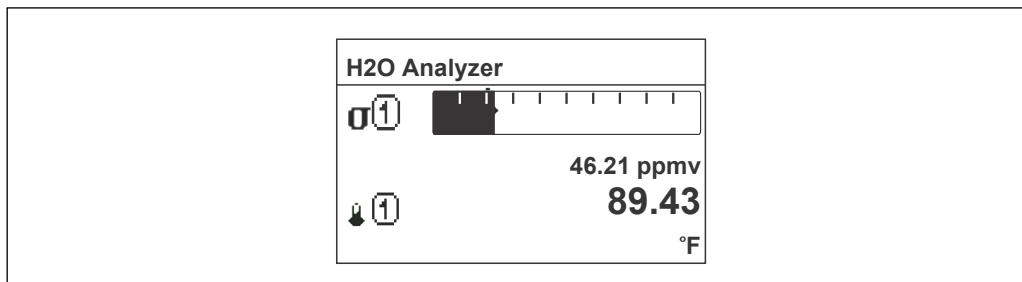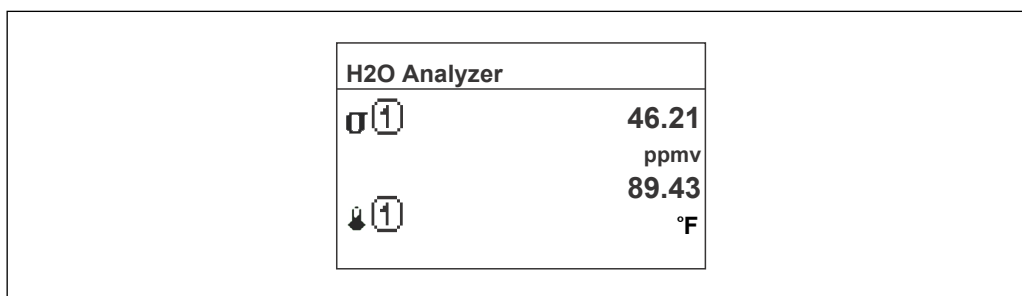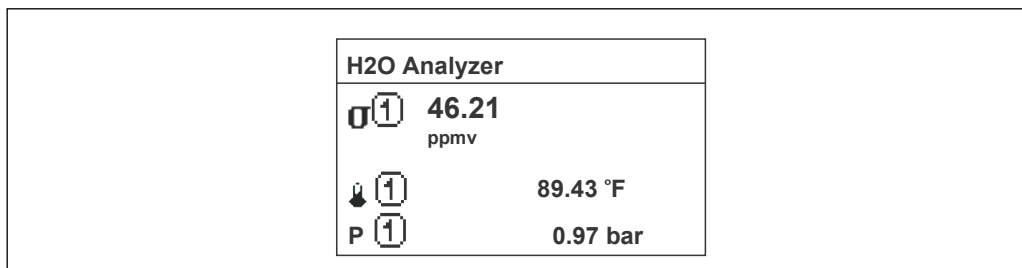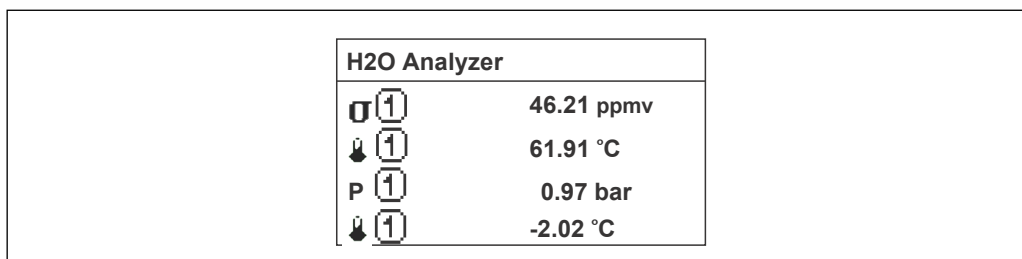

A0016529

*"1 bargraph + 1 value" option**"2 values" option**"1 value large + 2 values" option**"4 values" option***Value 1 display**

**Navigation** Expert → System → Display → Value 1 display





**Prerequisite** A local display is provided.

**Description** Use this function to select one of the measured values shown on the local display.

<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Concentration</li> <li>▪ Dew point 1(H<sub>2</sub>O only)<sup>1</sup></li> <li>▪ Dew point 2(H<sub>2</sub>O only)<sup>1</sup></li> <li>▪ Cell gas pressure</li> <li>▪ Cell gas temperature</li> </ul>
<b>Factory setting</b>	Concentration
<b>Additional information</b>	<p><i>Description</i></p> <p>If several measured values are displayed at once, the measured value selected here will be the first value to be displayed. The value is only displayed during normal operation.</p> <p>The <i>Format display parameter</i> →  is used to specify how many measured values are displayed simultaneously and how.</p> <p><i>Dependency</i></p> <p>The unit of the displayed measured value is taken from <i>System units</i> → .</p>



---

### 0% bargraph value 1

<b>Navigation</b>	  Expert → System → Display → 0% bargraph 1
<b>Prerequisite</b>	A local display is provided.
<b>Description</b>	Use this function to enter the 0% bar graph value to be shown on the display for the measured value 1.
<b>User entry</b>	Signed floating-point number
<b>Factory setting</b>	ppmv
<b>Additional information</b>	<p><i>Description</i></p> <p>The <i>Format display parameter</i> →  is used to specify that the measured value is to be displayed as a bar graph.</p> <p><i>User entry</i></p> <p>The unit of the displayed measured value is taken from <i>System units</i> → .</p>

---


### 100% bargraph value 1

<b>Navigation</b>	  Expert → System → Display → 100% bargraph 1
<b>Prerequisite</b>	A local display is provided.
<b>Description</b>	Use this function to enter the 100% bar graph value to be shown on the display for the measured value 1.
<b>User entry</b>	Signed floating-point number
<b>Factory setting</b>	ppmv


---

<sup>1</sup> Visibility depends on order options or device settings


**Additional information***Description*

The *Format display parameter* →  is used to specify that the measured value is to be displayed as a bar graph.


*User entry*

The unit of the displayed measured value is taken from *System units* → .

**Decimal places 1****Navigation**

  Expert → System → Display → Decimal places 1

**Prerequisite**

A selection was made in the *Value 1 display parameter* → .

**Description**

Use this function to select the number of decimal places for measured value 1.

**Selection**

Signed floating-point number

- x
- x.X
- x.XX
- x.XXX
- x.XXXX



**Factory setting**

x.XX

**Additional information***Description*

This setting does not affect the accuracy of the device for measuring or calculating the value.

**Value 2 display****Navigation**

  Expert → System → Display → Value 2 display


**Prerequisite**

A local display is provided.

**Description**

Use this function to select a measured value that is shown on the local display.

**User entry**


For the picklist, see the *Value 1 display parameter* → .

**Factory setting**


None

**Additional information***Description*



If several measured values are displayed at once, the measured value selected here will be the second value to be displayed. The value is only displayed during normal operation.

The *Format display parameter* →  is used to specify how many measured values are displayed simultaneously and how.


*Dependency*

The unit of the displayed measured value is taken from *System units* → .

**Decimal places 2****Navigation**

  Expert → System → Display → Decimal places 2

**Prerequisite**






A measured value is specified in the *Value 2 display parameter* → .



<b>Description</b>	Use this function to select the number of decimal places for measured value 2.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ x</li> <li>▪ x.X</li> <li>▪ x.XX</li> <li>▪ x.XXX</li> <li>▪ x.XXXX</li> </ul>
<b>Factory setting</b>	x.XX
<b>Additional information</b>	<p><i>Description</i></p> <p>This setting does not affect the accuracy of the device for measuring or calculating the value.</p>






---

### Value 3 display

<b>Navigation</b>	  Expert → System → Display → Value 3 display
<b>Prerequisite</b>	A local display is provided.
<b>Description</b>	Use this function to select a measured value that is shown on the local display.
<b>Selection</b>	For the picklist, see the <i>Value 1 display parameter</i> →  .
<b>Factory setting</b>	None
<b>Additional information</b>	<p><i>Description</i></p> <p>If several measured values are displayed at once, the measured value selected here will be the third value to be displayed. The value is only displayed during normal operation.</p> <p>The <i>Format display parameter</i> →  is used to specify how many measured values are displayed simultaneously and how.</p> <p><i>Selection</i></p> <p>The unit of the displayed measured value is taken from <i>System units</i> → .</p>

---

### 0% bargraph value 3

<b>Navigation</b>	  Expert → System → Display → 0% bargraph 3
<b>Prerequisite</b>	A selection was made in the <i>Value 3 display parameter</i> →  .
<b>Description</b>	Use this function to enter the 0% bar graph value to be shown on the display for the measured value 3.
<b>User entry</b>	Signed floating-point number
<b>Factory setting</b>	None
<b>Additional information</b>	<p><i>Description</i></p> <p>The <i>Format display parameter</i> →  is used to specify that the measured value is to be displayed as a bar graph.</p> <p><i>User entry</i></p> <p>The unit of the displayed measured value is taken from <i>System units</i> → .</p>

**100% bargraph value 3**

<b>Navigation</b>	Expert → System → Display → 100% bargraph 3
<b>Prerequisite</b>	A selection was made in the <i>Value 3 display parameter</i> → .
<b>Description</b>	Use this function to enter the 100% bar graph value to be shown on the display for the measured value 3.
<b>User entry</b>	Signed floating-point number
<b>Factory setting</b>	None
<b>Additional information</b>	<p><i>Description</i></p> <p>The <i>Format display parameter</i> →  is used to specify that the measured value is to be displayed as a bar graph.</p> <p><i>User entry</i></p> <p>The unit of the displayed measured value is taken from the <i>System units</i> → .</p>


**Decimal places 3**


<b>Navigation</b>	Expert → System → Display → Decimal places 3
<b>Prerequisite</b>	A measured value is specified in the <i>Value 3 display parameter</i> → .
<b>Description</b>	Use this function to select the number of decimal places for measured value 3.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ x</li> <li>▪ x.x</li> <li>▪ x.xx</li> <li>▪ x.xxx</li> <li>▪ x.xxxx</li> </ul>
<b>Factory setting</b>	x.xx
<b>Additional information</b>	<p><i>Description</i></p> <p>This setting does not affect the accuracy of the device for measuring or calculating the value.</p>



**Value 4 display**

<b>Navigation</b>	Expert → System → Display → Value 4 display
<b>Prerequisite</b>	A local display is provided.
<b>Description</b>	Use this function to select a measured value that is shown on the local display.
<b>Selection</b>	For the picklist, see the <i>Value 1 display parameter</i> → .
<b>Factory setting</b>	None
<b>Additional information</b>	<p><i>Description</i></p> <p>If several measured values are displayed at once, the measured value selected here will be the fourth value to be displayed. The value is only displayed during normal operation.</p> <p>The <i>Format display parameter</i> →  is used to specify how many measured values are displayed simultaneously and how.</p>

*Selection*

The unit of the displayed measured value is taken from *System units* → .

**Decimal places 4** 

**Navigation**   Expert → System → Display → Decimal places 4

**Prerequisite** A measured value is specified in the *Value 4 display parameter* → .

**Description** Use this function to select the number of decimal places for measured value 4.



**Selection**

- x
- x.x
- x.xx
- x.xxx
- x.xxxx

**Factory setting** x.xx

**Additional information** *Description*  
This setting does not affect the accuracy of the device for measuring or calculating the value.

**Display interval**

**Navigation**   Expert → System → Display → Display interval




**Prerequisite** A local display is provided.


**Description** Use this function to enter the length of time the measured values are displayed if the values alternate on the display.



**User entry** 1 to 10 s

**Factory setting** 5 s

**Additional information** *Description*  
This type of alternating display only occurs automatically if the number of measured values defined exceeds the number of values the selected display format can display simultaneously.

- The *Value 1 display parameter* →  to *Value 4 display parameter* →  is used to specify which measured values are shown on the local display.
- The display format for the measured values displayed is defined in the *Format display parameter* → .

**Display damping** 

**Navigation**   Expert → System → Display → Display damping

**Prerequisite** A local display is provided.

**Description** Use this function to enter a time constant for the reaction time of the local display to fluctuations in the measured value caused by process conditions.

**User entry** 0.0 to 999.9 s

**Factory setting** 0.0 s

**Additional information** *User entry*

Use this function to enter a time constant (PT1 element<sup>1</sup>) for display damping:

- If a low time constant is entered, the display reacts particularly quickly to fluctuating measured variables.
- On the other hand, the display reacts more slowly if a high time constant is entered.
- Damping is switched off if **0** is entered (factory setting).

---

## Header



**Navigation** Expert → System → Display → Header

**Prerequisite** A local display is provided.


**Description** Use this function to select the contents of the header of the local display.

**Selection**

- Device tag
- Free text

**Factory setting** Device tag

**Additional information** *Description*  
The header text only appears during normal operation.

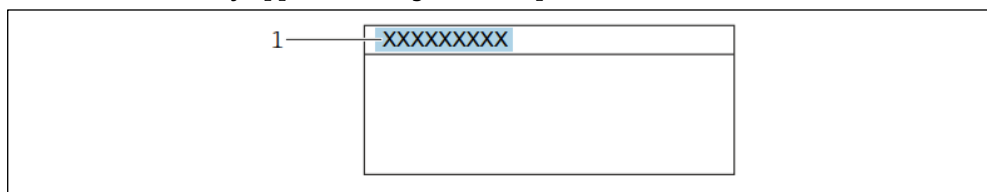

A0029422

1 Position of the header text on the display

*Selection*

**Device tag** is defined in the *Device tag parameter* → .

**Free text** is defined in the *Header text parameter* → .

---

## Header text



**Navigation** Expert → System → Display → Header text

**Prerequisite** The **Free text** option is selected in the *Header parameter* → .


**Description** Use this function to enter a customer-specific text for the header of the local display.

**User entry** Max. 12 characters, such as letters, numbers, or special characters (e.g., @, %, /)

**Factory setting** . (point)

**Additional information** *Description*  
The header text only appears during normal operation.

<sup>1</sup> Proportional transmission behavior with first order delay

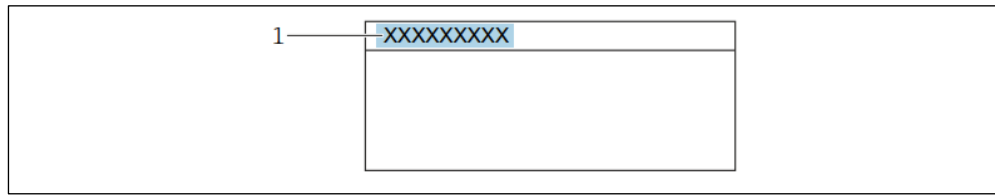

A0029422

1 Position of the header text on the display

*User entry*

The number of characters displayed depends on the characters used.

---

**Separator**



- Navigation**      Expert → System → Display → Separator
- Prerequisite**      A local display is provided.
- Description**      Use this function to select the decimal separator.
- Selection**
  - . (point)
  - , (comma)
- Factory setting**      -----

---

**Contrast display**


- Navigation**      Expert → System → Display → Contrast display
- Prerequisite**      A local display is provided.
- Description**      Use this function to enter a value to adapt the display contrast to the ambient conditions (e.g., the lighting or viewing angle).
- User entry**          20 to 80 %
- Factory setting**      Default value is 50 %


---

**Backlight**

- Navigation**      Expert → System → Display → Backlight
- Prerequisite**      A local display is provided.
- Description**      Use this function to switch the backlight of the local display on and off.
- Selection**
  - Disable
  - Enable
- Factory setting**      Enable


### 3.1.2 Configuration backup

**Navigation**  Expert → System → Configuration Backup

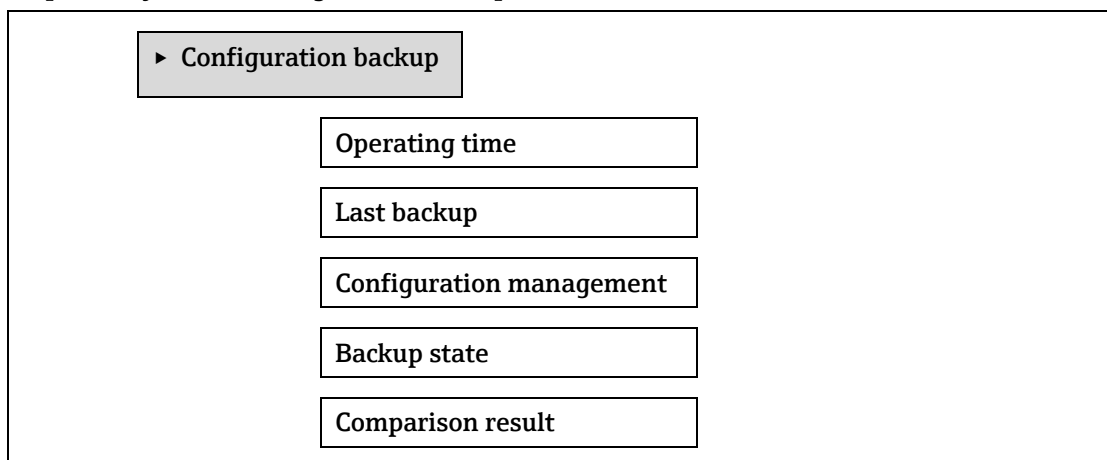


---

#### Operating Time

**Navigation**  Expert → System → Configuration backup → Operating time

**Description** Use this function to display the length of time the device has been in operation.

**User interface** Days (d), hours (h), minutes (m) and seconds (s)

**Additional information** *User interface*  
The maximum number of days is 9999, which is equivalent to 27 years.

---

#### Last backup


**Navigation**  Expert → System → Configuration backup → Last backup

**Description** Displays the time since a backup copy of the data was last saved to the device memory.

**User interface** Days (d), hours (h), minutes (m) and seconds (s)

---

#### Configuration management

**Navigation**  Expert → System → Configuration backup → Configuration management

**Description** Use this function to select an action to save the data to the device memory.

**Selection**


- Cancel
- Execute backup
- Restore<sup>1</sup>
- Clear backup data
- Compare<sup>1</sup>

**Factory setting** Cancel

---

<sup>1</sup> Visibility depends on order options or device settings

**Additional information***Selection*

- **Cancel:** No action is executed, and the user exits the parameter.
- **Execute backup:** A backup copy of the current device configuration is saved from the HistoROM backup to the memory of the device. The backup copy includes the transmitter data of the device. The following message appears on local display: Backup active, please wait!
- **Restore<sup>1</sup>:** The last backup copy of the device configuration is restored from the device memory to the device's HistoROM backup. The backup copy includes the transmitter data of the device. The following message appears on local display: Restore active! Do not interrupt power supply!
- **Clear backup data:** The backup copy of the device configuration is deleted from the memory of the device. The following message appears on local display: Deleting file
- **Compare<sup>1</sup>:** The device configuration saved in the device memory is compared with the current device configuration of the HistoROM backup. The following message appears on local display: *Comparing files*. The result can be viewed in *Comparison result parameter* → .

*HistoROM*



A HistoROM is a "non-volatile" device memory in the form of an EEPROM.

---

**Backup state**

---

**Navigation**

  Expert → System → Configuration backup → Backup state

**Description**

Displays the status of the data backup process.

**User interface**

- None
- Backup in progress
- Restoring in progress
- Delete in progress
- Compare in progress
- Restoring failed
- Backup failed

**Factory setting**



None

---

**Comparison result**

---

**Navigation**

  Expert → System → Configuration backup → Compar. result

**Description**

Displays the last result of the comparison of the data records in the device memory and in the HistoROM.


**User interface**

- Settings identical
- Settings not identical
- No backup available
- Backup settings corrupt
- Check not done
- Dataset incompatible

**Factory setting**

Check not done

**Additional information***Description*

The comparison is started via the **Compare** option in the *Configuration management parameter* → .

*Selection*

- **Settings identical.** The current device configuration of the HistoROM is identical to the backup copy in the device memory.



If the transmitter configuration of another device has been transmitted to the device via HistoROM in the Configuration management parameter, the current device configuration of the HistoROM is only partially identical to the backup copy in the device memory. The settings for the transmitter are not identical.


- **Settings not identical.** The current device configuration of the HistoROM is not identical to the backup copy in the device memory.
- **No backup available.** There is no backup copy of the device configuration of the HistoROM in the device memory.
- **Backup settings corrupt.** The current device configuration of the HistoROM is corrupt or not compatible with the backup copy in the device memory.
- **Check not done.** The device configuration of the HistoROM has not yet been compared to the backup copy in the device memory.
- **Dataset incompatible.** The backup copy in the device memory is not compatible with the device.



*HistoROM*

A HistoROM is a "non-volatile" device memory in the form of an EEPROM.

**3.1.3 Diagnostic handling**

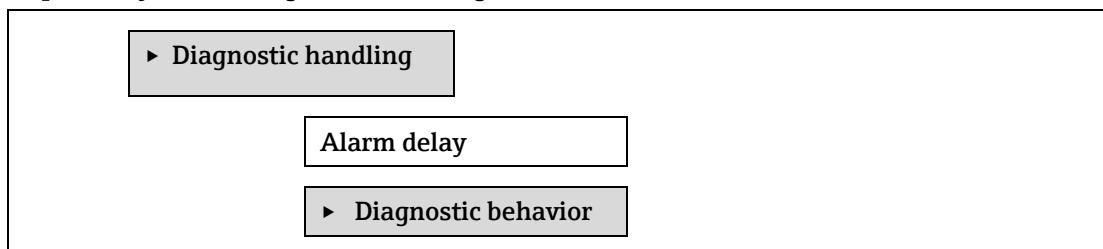*Navigation*   Expert → System → Diagnostic Handling

**Alarm delay****Navigation**

  Expert → System → Diagnostic handling → Alarm delay

**Description**

Use this function to enter the time interval until the device generates a diagnostic message. The diagnostic message is reset without a time delay.

**User entry**

0 to 60 s

**Factory setting**

0 s



<b>Additional information</b>	<p><i>Result</i></p> <p>This setting affects the following diagnostic messages:</p> <ul style="list-style-type: none"> <li>▪ 832 Electronics temperature too high</li> <li>▪ 833 Electronics temperature too low</li> <li>▪ 904 Cell gas flow not detected</li> </ul>
-------------------------------	---

**Diagnostic behavior submenu**

Each item of diagnostic information is assigned a specific diagnostic behavior at the factory. The user can change this assignment for specific diagnostic information in the **Diagnostic behavior** submenu.


The following options are available in the **Diagnostic no. xxx** parameters:

<b>Alarm</b>	<p>The device stops measurement. The measured value output via Modbus RS485 assume the defined alarm condition. A diagnostic message is generated.</p> <p>The background lighting changes to red.</p>
<b>Warning</b>	<p>The device continues to measure. The measured value output via Modbus RS485 is not affected. A diagnostic message is generated.</p>
<b>Logbook entry only</b>	<p>The device continues to measure. The diagnostic message is displayed only in the <i>Event logbook submenu</i> →  and is not displayed in alternation with the operational display.</p>
<b>Off</b>	<p>The diagnostic event is ignored, and no diagnostic message is generated or entered.</p>

**NOTICE**


- ▶ For a list of all the diagnostic events, see the *Operating Instructions* → .

*Navigation* Expert → System → Diagnostic handling → Diagnostic Behavior

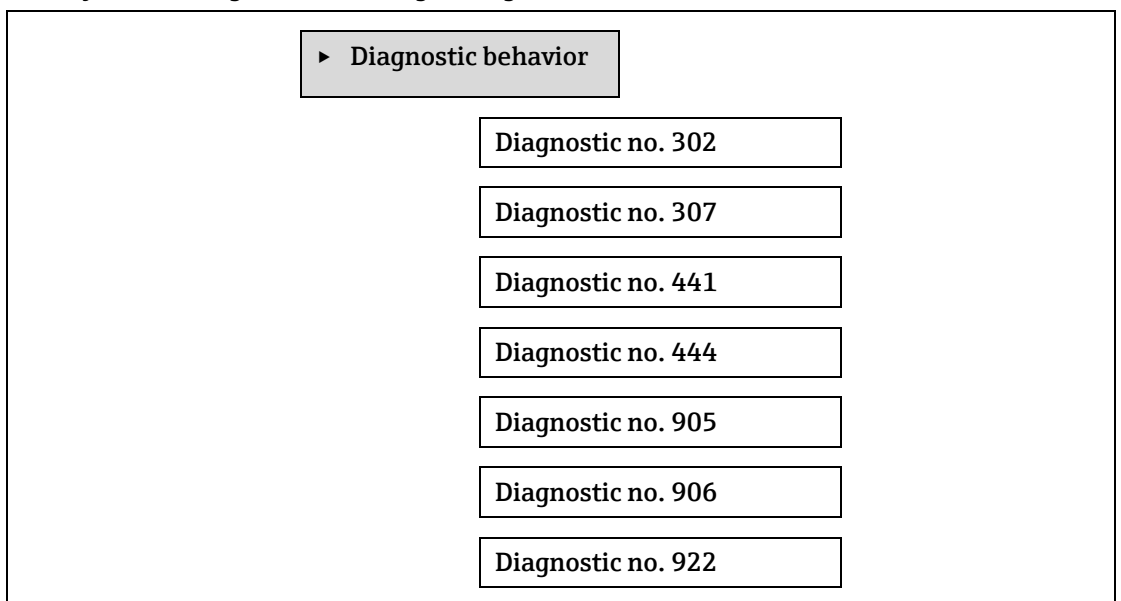




**Diagnostic no. 302 (Device verification active)**




<b>Navigation</b>	<p>  Expert → System → Diagnostic handling → Diagnostic behavior → Diagnostic no. 302</p>
<b>Description</b>	<p>Option for changing the diagnostic behavior of the diagnostic message <b>302 Device verification active</b>.</p>
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Alarm</li> <li>▪ Warning</li> </ul>

<b>Factory setting</b>	Warning
<b>Additional information</b>	For a detailed description of the options available, refer to the <i>Diagnostic behavior submenu description</i> →  .



### Diagnostic no. 307 (Heater connection error)


<b>Navigation</b>	  Expert → System → Diagnostic handling → Diagnostic behavior → Diagnostic no. 307
<b>Description</b>	Use this function to change the diagnostic behavior of the <b>307 Heater connection error</b> diagnostic message.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ Alarm</li> <li>▪ Warning</li> <li>▪ Logbook entry only</li> <li>▪ Reset</li> </ul>
<b>Factory setting</b>	Alarm
<b>Additional information</b>	For a detailed description of the options available, refer to the <i>Diagnostic behavior submenu description</i> →  .

### Assign behavior of diagnostic no. 441 (Current output 1 to n)

<b>Navigation</b>	  Expert → System → Diagnostic handling → Diagnostic behavior → Diagnostic no. 441
<b>Description</b>	Use this function to change the diagnostic behavior of the <b>441 Current output 1 to n</b> diagnostic message.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ Alarm</li> <li>▪ Warning</li> <li>▪ Logbook entry only</li> </ul>
<b>Factory setting</b>	Warning
<b>Additional information</b>	For a detailed description of the options available, refer to the <i>Diagnostic behavior submenu description</i> →  .




### Assign behavior of diagnostic no. 444 (Current input 1 to n)

<b>Navigation</b>	  Expert → System → Diagnostic handling → Diagnostic behavior → Diagnostic no. 444
<b>Prerequisite</b>	The device has one current input.
<b>Description</b>	Use this function to change the diagnostic behavior of the <b>444 Current input 1 to n</b> diagnostic message.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ Alarm</li> <li>▪ Warning</li> <li>▪ Logbook entry only</li> </ul>

<b>Factory setting</b>	Warning
<b>Additional information</b>	For a detailed description of the options available, refer to the <i>Diagnostic behavior submenu description</i> →  .




---

### Assign behavior of diagnostic no. 905 (Validation failed)

<b>Navigation</b>	  Expert → System → Diagnostic handling → Diagnostic behavior → Diagnostic no. 905
<b>Description</b>	Use this function to change the diagnostic behavior of the <b>905 Validation failed</b> diagnostic message.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ Alarm</li> <li>▪ Warning</li> <li>▪ Logbook entry only</li> <li>▪ Reset</li> </ul>
<b>Factory setting</b>	Warning
<b>Additional information</b>	For a detailed description of the options available, refer to the <i>Diagnostic behavior submenu description</i> →  .



---


### Assign behavior of diagnostic no. 906 (Enclosure temperature spike)

<b>Navigation</b>	  Expert → System → Diagnostic handling → Diagnostic behavior → Diagnostic no. 906
<b>Description</b>	Use this function to change the diagnostic behavior of the <b>906 Enclosure temperature spike</b> diagnostic message.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ Alarm</li> <li>▪ Warning</li> <li>▪ Logbook entry only</li> <li>▪ Reset</li> </ul>
<b>Factory setting</b>	Warning
<b>Additional information</b>	For a detailed description of the options available, refer to the <i>Diagnostic behavior submenu description</i> →  .



---


### Assign behavior of diagnostic no. 922 (Scrubber protection active)

<b>Navigation</b>	  Expert → System → Diagnostic handling → Diagnostic behavior → Diagnostic no. 922
<b>Description</b>	Use this function to change the diagnostic behavior of the <b>922 Scrubber protection active</b> diagnostic message.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Warning</li> <li>▪ Logbook entry only</li> </ul> Reset
<b>Factory setting</b>	Logbook entry only

**Additional information** For a detailed description of the options available, refer to the *Diagnostic behavior submenu description* → .

### 3.1.4 Administration

**Navigation**   Expert → System → Administration

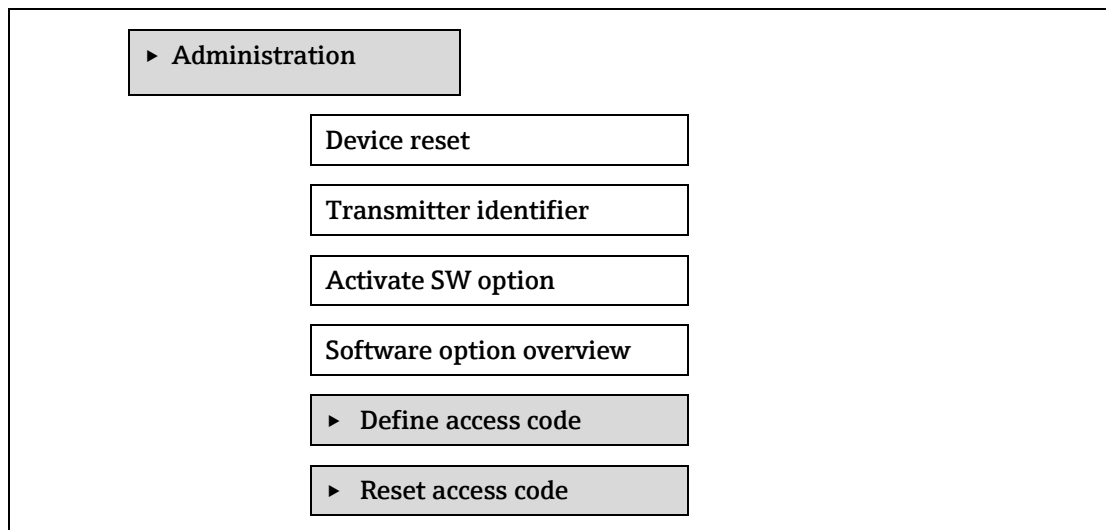

#### Device reset


**Navigation**   Expert → System → Administration → Device reset

**Description** Reset the device configuration, either entirely or in part, to a defined state.

- Selection**
- Cancel
  - Restart device
  - To delivery settings
  - Restore S-DAT backup<sup>1</sup>

**Factory setting** Cancel

- Additional information** *Options*
- **Cancel.** No action is executed, and the user exits the parameter.
  - **Restart device.** The restart resets every parameter with data stored in volatile memory (RAM) to the factory setting (e.g., measured value data). The device configuration remains unchanged.
  - **To delivery settings.** Every parameter for which a customer-specific default setting was ordered is reset to the customer-specific value. All other parameters are reset to the factory setting.
  - **Restore S-DAT backup.** Restores the data that is saved on the S-DAT. Additional information: This function can be used to resolve the memory issue "083 Memory content inconsistent" or to restore the S-DAT data when a new S-DAT has been installed.

 This option is displayed only in an alarm condition.

<sup>1</sup> Visibility depends on order options or device settings

---

**Transmitter identifier**


<b>Navigation</b>	Expert → System → Administration → Transmitter identifier
<b>Description</b>	Select transmitter identifier.
<b>User interface</b>	<ul style="list-style-type: none"> <li>▪ Unknown</li> <li>▪ 500</li> <li>▪ 300</li> </ul>
<b>Factory setting</b>	300

---


**Activate SW option**


<b>Navigation</b>	Expert → System → Administration → Activate SW option
<b>Description</b>	Use this function to enter an activation code to enable an additional, ordered software option.
<b>User entry</b>	Max. 10-digit string consisting of numbers.
<b>Factory setting</b>	Depends on the software option ordered
<b>Additional information</b>	<p><i>Description</i></p> <p>If a measuring device was ordered with an additional software option, the activation code is programmed in the device at the factory.</p> <p><i>User entry</i></p> <p>To activate a software option subsequently, please contact your Endress+Hauser sales organization.</p> <p>If an incorrect or invalid code is entered, this results in the loss of software options that have already been activated.</p> <ul style="list-style-type: none"> <li>▪ Before you enter a new activation code, make a note of the current activation code.</li> <li>▪ Enter the new activation code provided by Endress+Hauser when the new software option was ordered.</li> <li>▪ Once the activation code has been entered, check if the new software option is displayed in the <i>Software option overview parameter</i> → .</li> </ul> <p>↳ The new software option is active if it is displayed.</p> <p>↳ If the new software option is not displayed or all software options have been deleted, the code entered was either incorrect or invalid.</p> <ul style="list-style-type: none"> <li>▪ If the code entered is incorrect or invalid, enter the old activation code.</li> <li>▪ Have your Endress+Hauser sales organization check the new activation code remembering to specify the serial number or ask for the code again.</li> </ul> <p><i>Example for a software option</i></p> <p>"Extended HistoROM"</p> <p>The software options currently enabled are displayed in the <i>Software option overview parameter</i> → .</p> <p><i>Web browser</i></p> <p>Once a software option has been activated, the page may be loaded again in the Web browser.</p> <div style="background-color: #0070C0; color: white; padding: 2px; text-align: center;"><b>NOTICE</b></div> <ul style="list-style-type: none"> <li>▶ The activation code is linked to the serial number of the measuring device and varies according to the device and software option.</li> </ul>

---


**Software option overview**



---

<b>Navigation</b>	 Expert → System → Administration → SW option overview
<b>Description</b>	Displays all the software options that are enabled in the device.
<b>User interface</b>	<ul style="list-style-type: none"> <li>▪ Extended HistoROM<sup>1</sup></li> <li>▪ Heartbeat Monitoring<sup>1</sup></li> <li>▪ Heartbeat Verification<sup>1</sup></li> </ul>
<b>Additional information</b>	<p><i>Description</i></p> <p>Displays all the options that are available if ordered by the customer.</p>

**Define access code wizard**

The **Define access code** wizard is only available when operating via the local display or Web browser. If operating via the operating tool, the **Define access code** parameter can be found directly in the **Administration** submenu. There is no **Confirm access code** parameter if the device is operated via the operating tool.

**Navigation**  Expert → System → Administration → Define access code

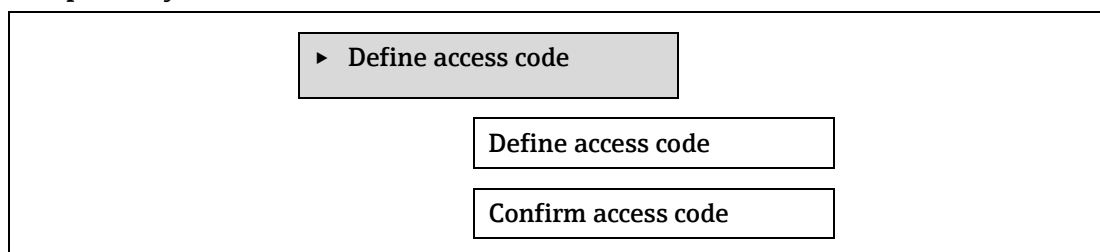






---

**Define access code**


---



<b>Navigation</b>	 Expert → System → Administration → Define access code → Define access code
<b>Description</b>	Use this function to enter a user-specific release code to restrict write-access to the parameters. This protects the device configuration against any inadvertent modifications via the local display, Web browser, FieldCare or DeviceCare (via CDI-RJ45 service interface).
<b>User entry</b>	Max. 16-digit character string comprising numbers, letters, and special characters.
<b>Additional information</b>	<p><i>Description</i></p> <p>The write protection affects all parameters in the document marked with the  symbol. On the local display, the  symbol in front of a parameter indicates that the parameter is write-protected.</p> <p>The parameters that cannot be write-accessed are grayed out in the Web browser.</p> <p><b>NOTICE</b></p> <ul style="list-style-type: none"> <li>▶ Once the access code has been defined, write-protected parameters can only be modified if the access code is entered in the <i>Enter access code parameter</i> → .</li> <li>▶ If you lose the access code, please contact your Endress+Hauser sales organization.</li> </ul> <p><i>User entry</i></p> <p>A message is displayed if the access code is not in the input range.</p>

<sup>1</sup> Visibility depends on order options or device settings

*Factory setting*

If the factory setting is not changed or **0** is defined as the access code, the parameters are not write protected, and the device configuration data can be modified. The user is logged on in the **Maintenance** role.

---

**Confirm access code** 🔒

---


**Navigation**      🏠📄 Expert → System → Administration → Define access code → Confirm code

**Description**      Enter the defined release code a second time to confirm the release code.

**User entry**      Max. 16-digit character string comprising numbers, letters, and special characters.

**Reset access code submenu**

**Navigation**      🏠📄 Expert → System → Administration → Reset access code

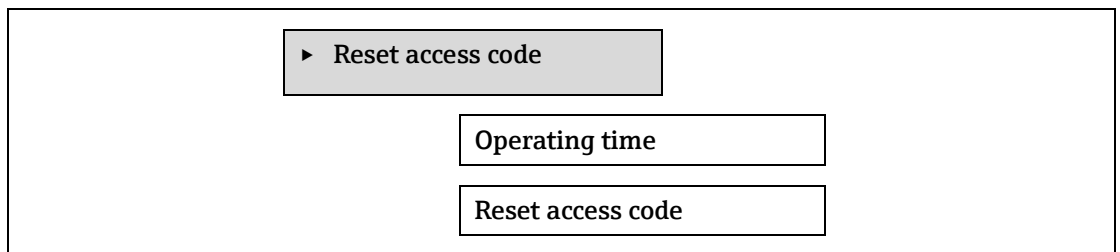


---

**Operating time**

---

**Navigation**      🏠📄 Expert → System → Administration → Reset access code → Operating time

**Description**      Use this function to display the length of time the device has been in operation.

**User interface**      Days (d), hours (h), minutes (m) and seconds (s)

**Additional information**      *User interface*  
 The maximum number of days is 9999, which is equivalent to 27 years.

---

**Reset access code**

---

**Navigation**      🏠📄 Expert → System → Administration → Reset access code → Reset access code

**Description**      Use this function to enter a reset code to reset the user-specific access codes to the factory setting.

**User entry**      Character string comprising numbers, letters, and special characters.

**Factory setting**      0x00

**Additional information**      *Description*  
 For a reset code, contact your Endress+Hauser service organization.


*User entry*

The reset code can only be entered via:


- Web browser
- Fieldbus


## 3.2 Sensor

*Navigation*  Expert → Sensor

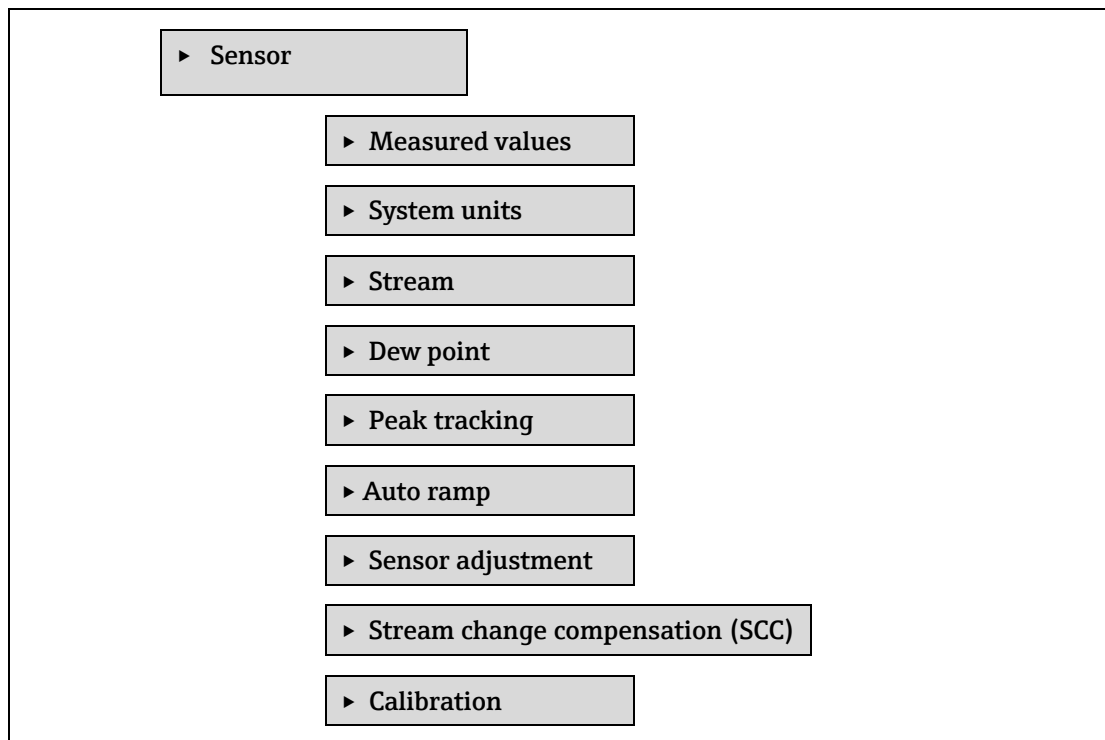


### 3.2.1 Measured values

*Navigation*  Expert → Sensor → Measured values

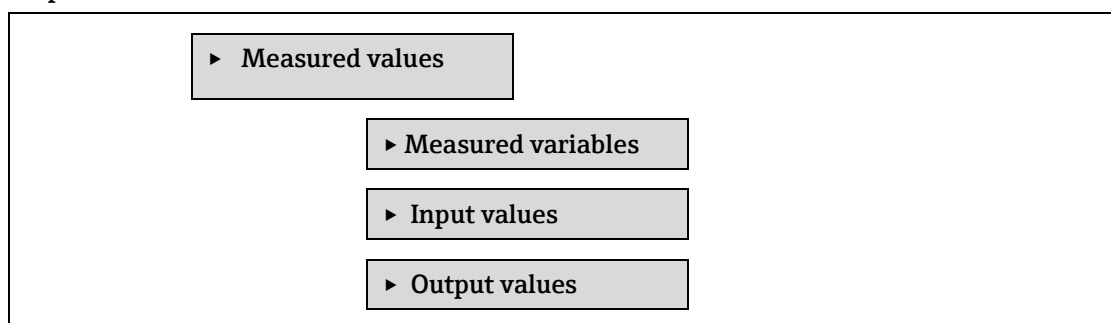

#### Measured variables submenu

*Navigation*  Expert → Sensor → Measured values → Measured variables

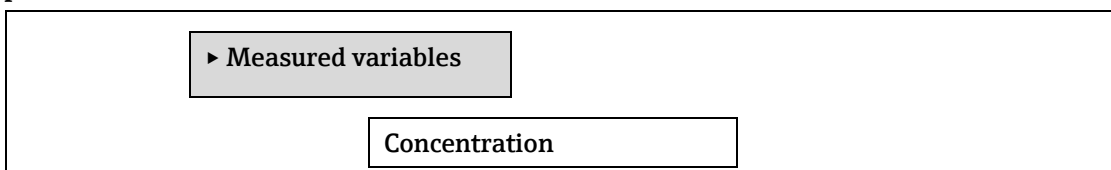






Dew point 1
Dew point 2
Cell gas pressure
Cell gas temperature
Detect. ref. level
Detect. zero level
Peak 1 index delta
Peak 2 index delta
Peak 3 index delta
Peak 1 delta dry
Peak 2 delta dry
Peak 3 delta dry
Peak track index delta
Peak track midpoint delta
Auto ramp delta
Scrubber capacity remaining
Scrubber life remaining
Spectrum peak values

---

## Concentration





---

<b>Navigation</b>	  Expert → Sensor → Measured values → Measured variables → Concentration
<b>Description</b>	Displays the concentration of the analyte currently measured in the sample cell.
<b>User interface</b>	0 to 1000000 ppmv
<b>Additional information</b>	The unit is taken from the <i>concentration unit parameter</i> →  . Concentration refers to the amount of analyte of interest that is measured within the gas sample.

---

**Dew point 1**





---

<b>Navigation</b>	  Expert → Sensor → Measured values → Measured variables → Dew point 1
<b>Prerequisite</b>	The Analyte type is moisture H <sub>2</sub> O. In the Dew point method 1 parameter, the Off selection is not selected.
<b>Description</b>	Displays the moisture dew point temperature that is currently calculated.
<b>User interface</b>	Signed floating-point number
<b>Additional information</b>	The unit is taken from the <i>Temperature unit parameter</i> →  . Dew point is the temperature at which moisture will start to condense into liquid for a given concentration and pressure. There are several industry accepted methods for moisture dew point calculation. See <i>BA02152C</i> →  for more details.

---

**Dew point 2**




---

<b>Navigation</b>	  Expert → Sensor → Measured values → Measured variables → Dew point 2
<b>Prerequisite</b>	The Analyte type is moisture H <sub>2</sub> O. In the Dew point method 2 parameter, the Off selection is not selected.
<b>Description</b>	Displays the moisture dew point temperature that is currently calculated.
<b>User interface</b>	Signed floating-point number
<b>Additional information</b>	The unit is taken from the <i>temperature unit parameter</i> →  . Dew point is the temperature at which moisture will start to condense into liquid for a given concentration and pressure. There are several industry accepted methods for moisture dew point calculation. See <i>BA02152C</i> →  for more details.

---

**Cell gas pressure**




---

<b>Navigation</b>	  Expert → Sensor → Measured values → Measured variables → Cell gas pressure
<b>Description</b>	Displays the gas pressure currently measured in the sample cell.
<b>User interface</b>	Signed floating-point number
<b>Additional information</b>	The unit is taken from the <i>pressure unit parameter</i> →  . The current pressure of the sample cell during measurement.

---

**Cell gas temperature**



---

<b>Navigation</b>	  Expert → Sensor → Measured values → Measured variables → Cell gas temperature
<b>Description</b>	Displays the gas temperature currently measured in the sample cell.
<b>User interface</b>	Signed floating-point number
<b>Additional information</b>	The unit is taken from the <i>temperature unit parameter</i> →  . The current temperature of the sample cell during measurement.

---

**Detector reference level**




---

<b>Navigation</b>	  Expert → Sensor → Measured values → Measured variables → Detector reference level
<b>Description</b>	Displays the laser detector reference level currently measured.
<b>User interface</b>	0 to 5 mA
<b>Additional information</b>	The magnitude of the DC laser power. An out-of-range value can indicate the optics need to be cleaned or there is an alignment problem.

---

**Detector zero level**




---

<b>Navigation</b>	  Expert → Sensor → Measured values → Measured variables → Detector zero level
<b>Description</b>	Displays the laser detector zero level currently measured.
<b>User interface</b>	0 to 5 mA
<b>Additional information</b>	The DC laser power when the laser is turned off (e.g., dark current).

---

**Peak 1 index delta**




---

<b>Navigation</b>	  Expert → Sensor → Measured values → Measured variables → Peak 1 index delta
<b>Description</b>	Displays the difference in the peak 1 index position and the target index in the currently measured 2f spectrum.
<b>User interface</b>	-511.0 to 511.0

---

**Peak 2 index delta**




---

<b>Navigation</b>	  Expert → Sensor → Measured values → Measured variables → Peak 2 index delta
<b>Prerequisite</b>	The analyzer is calibrated for two peaks.
<b>Description</b>	Displays the difference in the peak 2 index position and the target index in the currently measured 2f spectrum.
<b>User interface</b>	-511.0 to 511.0

---

**Peak 3 index delta**




---

<b>Navigation</b>	  Expert → Sensor → Measured values → Measured variables → Peak 3 index delta
<b>Prerequisite</b>	The analyzer is calibrated for three peaks.
<b>Description</b>	Displays the difference in the peak 2 index position and the target index in the currently measured 2f spectrum.
<b>User interface</b>	-511.0 to 511.0

---

**Peak 1 delta dry**



---

<b>Navigation</b>	  Expert → Sensor → Measured values → Measured variables → Peak 1 index delta dry
<b>Prerequisite</b>	The Calculation method is CLS Differential (JT33).
<b>Description</b>	Displays the difference in the peak 1 index position and the target index in the currently measured dry 2f spectrum.
<b>User Interface</b>	-511.0 to 511.0

---

**Peak 2 delta dry**



---

<b>Navigation</b>	  Expert → Sensor → Measured values → Measured variables → Peak 2 index delta dry
<b>Prerequisite</b>	The Calculation method is CLS Differential (JT33) and the analyzer is calibrated for two peaks.
<b>Description</b>	Displays the difference in the peak 2 index position and the target index in the currently measured dry 2f spectrum.
<b>User Interface</b>	-511.0 to 511.0

---

**Peak 3 delta dry**



---

<b>Navigation</b>	  Expert → Sensor → Measured values → Measured variables → Peak 3 index delta dry
<b>Prerequisite</b>	The Calculation method is CLS Differential (JT33) and the analyzer is calibrated for three peaks.
<b>Description</b>	Displays the difference in the peak 3 index position and the target index in the currently measured dry 2f spectrum.
<b>User Interface</b>	-511.0 to 511.0

---

**Peak track index delta**



---

<b>Navigation</b>	  Expert → Sensor → Measured values → Measured variables → Peak track index delta
<b>Prerequisite</b>	Displays the difference in the peak track index and the target index in the currently measured 2f spectrum.
<b>Description</b>	-511.0 to 511.0
<b>User Interface</b>	If <b>Off</b> is selected in the Peak tracking analyzer control parameter, this value will be zero. Otherwise, this value will mimic the parameter Peak 1 to n index delta, Peak 1 to n delta dry, or cross correlation depending on which peak is being used for peak tracking.

---



**Midpoint delta**

---

<b>Navigation</b>	  Expert → Sensor → Measured values → Measured variables → Midpoint delta
<b>Description</b>	Displays the difference in the calibrated midpoint value and the currently used midpoint value.
<b>User interface</b>	0.0 to 120.0 mA

**Additional information** If **Off** is selected in the Peak tracking analyzer control parameter, this value will be zero. Otherwise, this value will be the amount of change applied to the calibrated **midpoint value** by the peak tracking algorithm.

### Auto ramp delta



**Navigation**   Expert → Sensor → Measured values → Measured variables → Auto ramp delta

**Description** Displays the difference in the calibrated ramp value and the currently used ramp value.

**User interface** 0.0 to 120.0 mA

**Additional information** If **Off** is selected in the Auto ramp analyzer control parameter, this value will be zero. Otherwise, this value will be the amount of change applied to the calibrated ramp value by the auto ramp algorithm.

### Scrubber capacity remaining

**Navigation**   Expert → Sensor → Measured values → Measured variables → Scrubber capacity remaining



**Prerequisite** The Calculation method is CLS Differential (JT33).

**Description** Displays the predicted scrubber percent capacity remaining.

**User interface** 0 to 100 %

**Additional information** The M921 Scrubber depleted event will be activated when the capacity is predicted to be less than the capacity limit (typically set to 5%). Refer to the Operating Instructions for information on servicing the scrubber.

### Scrubber life remaining

**Navigation**   Expert → Sensor → Measured values → Measured variables → Scrubber life remaining


**Prerequisite** The Calculation method is CLS Differential (JT33).


**Description** Displays the predicted scrubber life remaining in months.

**User interface** 0 to 300 months

**Additional information** The M921 Scrubber depleted event will be activated when the months in service has reached zero months remaining. Refer to the Operating Instructions for information on servicing the scrubber.

### Spectrum peak values submenu

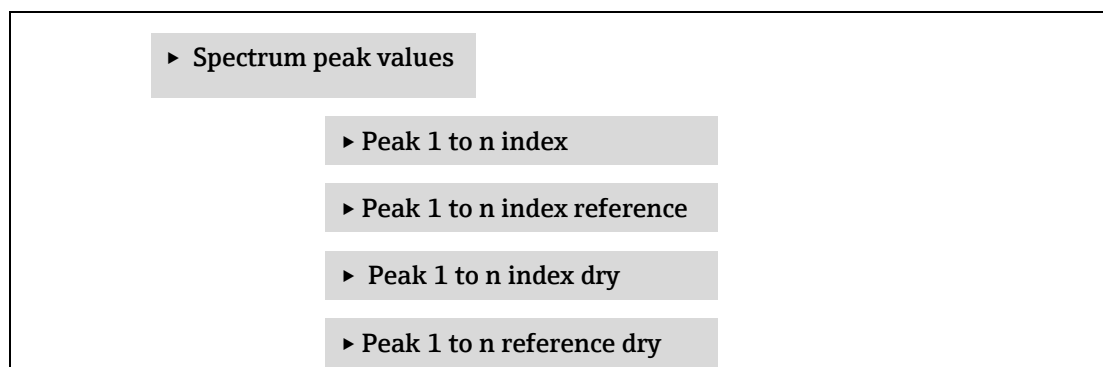

**Navigation**   Expert → Sensor → Measured values → Measured variables → Spectrum peak values



▶ Peak track index
▶ Peak separation ratio
▶ Peak separation index delta
▶ Peak separation ratio dry
▶ Peak separation index delta dry



---

### Peak 1 to n index

<b>Navigation</b>	  Expert → Sensor → Measured values → Measured variables → Peak 1 index
<b>Description</b>	Displays the absorption peak 1 to n index position in the currently measured 2f spectrum.
<b>User interface</b>	0.0 to 511.0
<b>Additional information</b>	Position of the absorption peak along the scan.



---

### Peak 1 to n index reference

<b>Navigation</b>	  Expert → Sensor → Measured values → Measured variables → Peak 1 to n index reference
<b>Prerequisite</b>	Peak index target find method is set to Dynamic. Typically used in applications with reference curves (e.g., JT33).
<b>Description</b>	Displays the peak 1 to n index target when using a dynamically found target index.
<b>User interface</b>	0.0 to 511.0
<b>Additional information</b>	If the target peak index is not dynamically found then it will use a statically defined target peak index.



---

### Peak 1 to n index dry

<b>Navigation</b>	  Expert → Sensor → Measured values → Measured variables → Peak 1 to index dry
<b>Prerequisite</b>	The Calculation method is CLS Differential (JT33)
<b>Description</b>	Displays the dry absorption peak 1 to n index position in the currently measured 2f spectrum.
<b>User interface</b>	0.0 to 511.0
<b>Additional information</b>	Position of the absorption peak along the scan.

---



### Peak 1 to n reference dry

<b>Navigation</b>	  Expert → Sensor → Measured values → Measured variables → Peak 1 to n index reference dry
-------------------	--

<b>Prerequisite</b>	Peak index target find method is set to Dynamic and Calculation method is CLS Differential. Typically used in applications with reference curves (e.g., JT33).
<b>Description</b>	Displays the dry peak 1 to n index target when using a dynamically found target index.
<b>User interface</b>	0.0 to 511.0
<b>Additional information</b>	If the target peak index is not dynamically found then it will use a statically defined target peak index.



---

#### Peak track index

<b>Navigation</b>	  Expert → Sensor → Measured values → Measured variables → Peak track index
<b>Description</b>	Displays the peak track index for the peak used for peak tracking in the currently measured 2f spectrum.
<b>User interface</b>	0.0 to 511.0
<b>Additional information</b>	If Off is selected in the Peak tracking analyzer control parameter, this value will be zero. Otherwise, this value will mimic the parameter Peak 1 to n index depending on which peak is being used for peak tracking.



---

#### Peak separation ratio

<b>Navigation</b>	  Expert → Sensor → Measured values → Measured variables → Peak separation ratio
<b>Prerequisites</b>	Auto ramp analyzer control is On and auto ramp is used for the active calibration.
<b>Description</b>	Displays the peak separation ratio between the 2f and reference peaks.
<b>User interface</b>	Signed floating-point number
<b>Additional information</b>	None



---

#### Peak separation index delta

<b>Navigation</b>	  Expert → Sensor → Measured values → Measured variables → Peak separation index delta
<b>Prerequisites</b>	Auto ramp analyzer control is On and auto ramp is used for the active calibration.
<b>Description</b>	Displays the difference in the 2f peak separation and the reference peak separation.
<b>User interface</b>	-511.0 to 511.0
<b>Additional information</b>	None

---



#### Peak separation ratio dry

<b>Navigation</b>	  Expert → Sensor → Measured values → Measured variables → Peak separation ratio dry
<b>Prerequisites</b>	Auto ramp analyzer control is On and auto ramp is used for the active calibration.
<b>Description</b>	Displays the peak separation ratio between the 2f dry and reference dry peaks.
<b>User interface</b>	Signed floating-point number
<b>Additional information</b>	None



---


**Peak separation index delta dry**




---


<b>Navigation</b>	  Expert → Sensor → Measured values → Measured variables → Peak separation index delta dry
<b>Prerequisites</b>	Auto ramp analyzer control is On and auto ramp is used for the active calibration.
<b>Description</b>	Displays the difference in the 2f dry peak separation and the reference dry peak separation.
<b>User interface</b>	-511.0 to 511.0
<b>Additional information</b>	None

**Input values submenu**

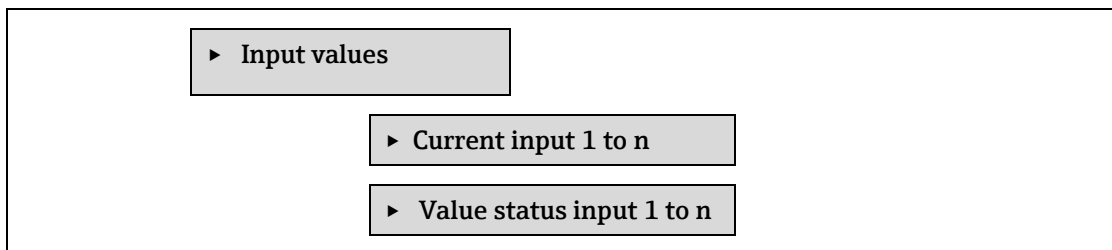**Navigation**   Expert → Sensor → Measured val. → Input values


**Current input 1 to n submenu**

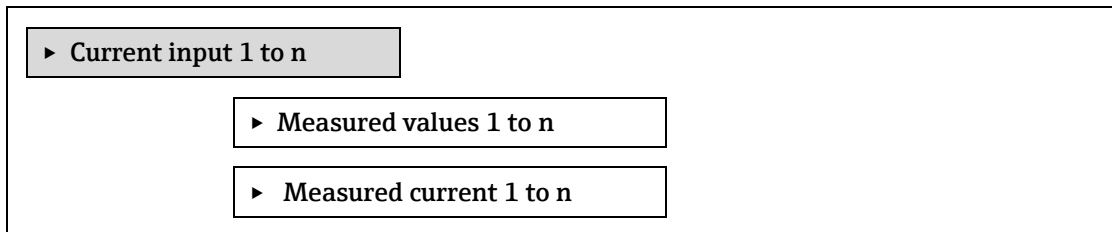

**Navigation**   Expert → Sensor → Measured val. → Input values → Current input 1 to n




---

**Measured values 1 to n**




---

<b>Navigation</b>	  Expert → Sensor → Measured values → Input values → Current input 1 to n → Measured values 1 to n
<b>Description</b>	Displays the current input value.
<b>User interface</b>	Signed floating-point number

---



**Measured current 1 to n**



---

<b>Navigation</b>	  Expert → Sensor → Measured values → Input values → Current input 1 to n → Measured current 1 to n
<b>Description</b>	Displays the current value of the current input.
<b>User interface</b>	0 to 22.5 mA





**Value status input 1 to n submenu**

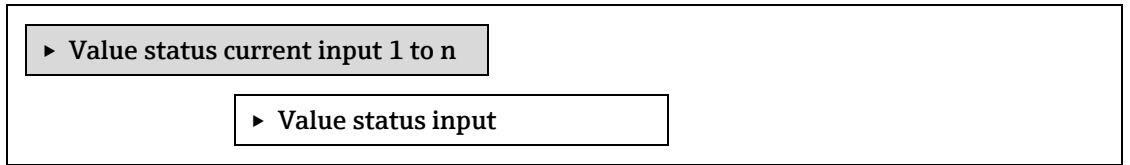**Navigation**      Expert → Sensor → Measured values → Input values → Value status input 1 to n




---



**Value status input**


**Navigation**      Expert → Sensor → Measured values → Input values → Value status input 1 to n → Value status input

**Description**    Displays the current input signal level.



- User interface**
- High
  - Low


**Output values submenu**

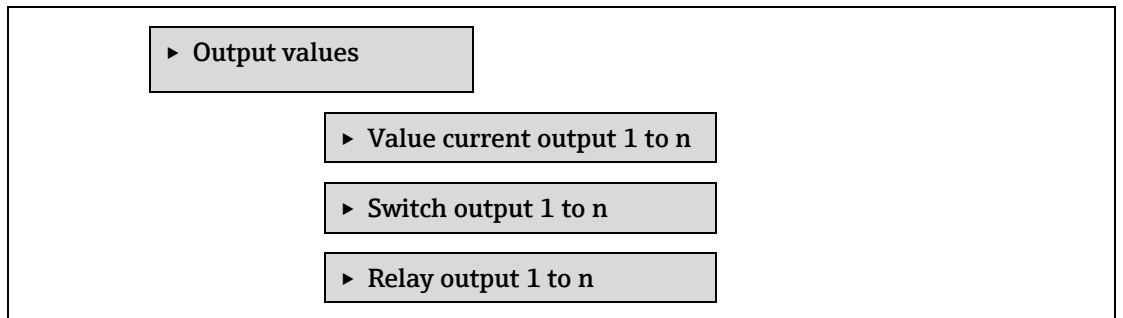**Navigation**      Expert → Sensor → Measured val. → Output values





**Value current output 1 to n submenu**

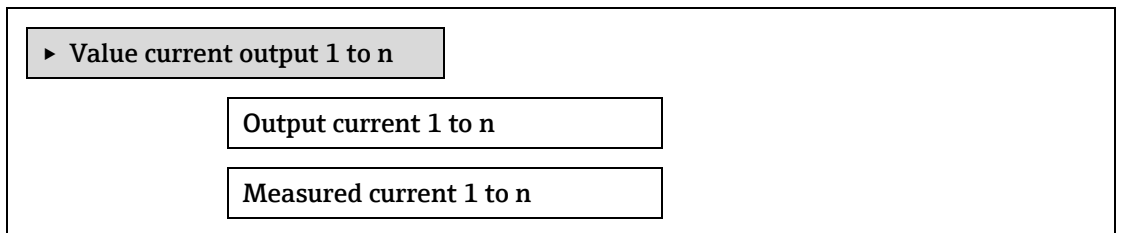**Navigation**      Expert → Sensor → Measured val. → Output values → Val. curr.outp 1 to n




---

**Output current 1 to n**

**Navigation**      Expert → Sensor → Measured values → Output values → Value current output 1 to n → Output current 1 to n

**Description**    Displays the current value currently calculated for the current output.

**User interface**    0 to 22.5 mA

---


**Measured current 1 to n**


---

<b>Navigation</b>	🔍📄 Expert → Sensor → Measured val. → Output values → Val. Current output 1 to n → Measured current 1 to n
<b>Description</b>	Displays the actual measured value of the output current.
<b>User interface</b>	0 to 30 mA

**Switch output 1 to n submenu**

**Navigation**    🔍📄 Expert → Sensor → Measured val. → Output values → Switch output 1 to n

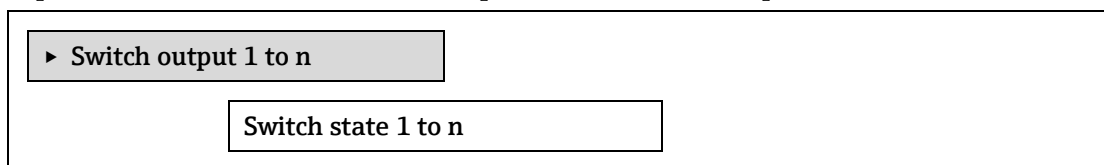


---


**Switch state 1 to n**


---

<b>Navigation</b>	🔍📄 Expert → Sensor → Measured val. → Output values → Switch output 1 to n → Switch state 1 to n
<b>Prerequisite</b>	The <b>Switch</b> option is selected in the <i>Operating mode parameter</i> → 📄.
<b>Description</b>	Displays the current switch status of the status output.
<b>User interface</b>	<ul style="list-style-type: none"> <li>▪ Open</li> <li>▪ Closed</li> </ul>
<b>Additional information</b>	<p><i>User interface</i></p> <ul style="list-style-type: none"> <li>▪ <b>Open.</b> The switch output is not conductive.</li> <li>▪ <b>Closed.</b> The switch output is conductive.</li> </ul>

**Relay output 1 to n submenu**

**Navigation**    🔍📄 Expert → Sensor → Measured val. → Output values → Relay output 1 to n

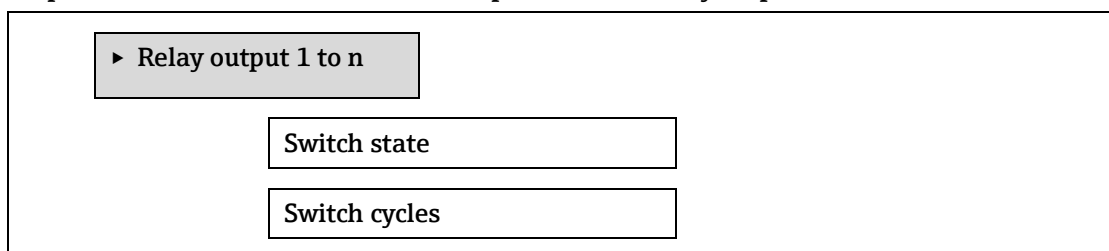


---



**Switch state**


---

<b>Navigation</b>	🔍📄 Expert → Sensor → Measured val. → Output values → Relay output 1 to n → Switch state
<b>Description</b>	Displays the current status of the relay output.
<b>User interface</b>	<ul style="list-style-type: none"> <li>▪ Open</li> <li>▪ Closed</li> </ul>


- Additional information** *User interface*
- **Open.** The relay output is not conductive.
  - **Closed.** The relay output is conductive.

**Switch cycles**

- Navigation**   Expert → Sensor → Measured val. → Output values → Relay output 1 to n → Switch cycles
- Description** Displays all the switch cycles performed.
- User interface** Positive integer



**3.2.2 System units**

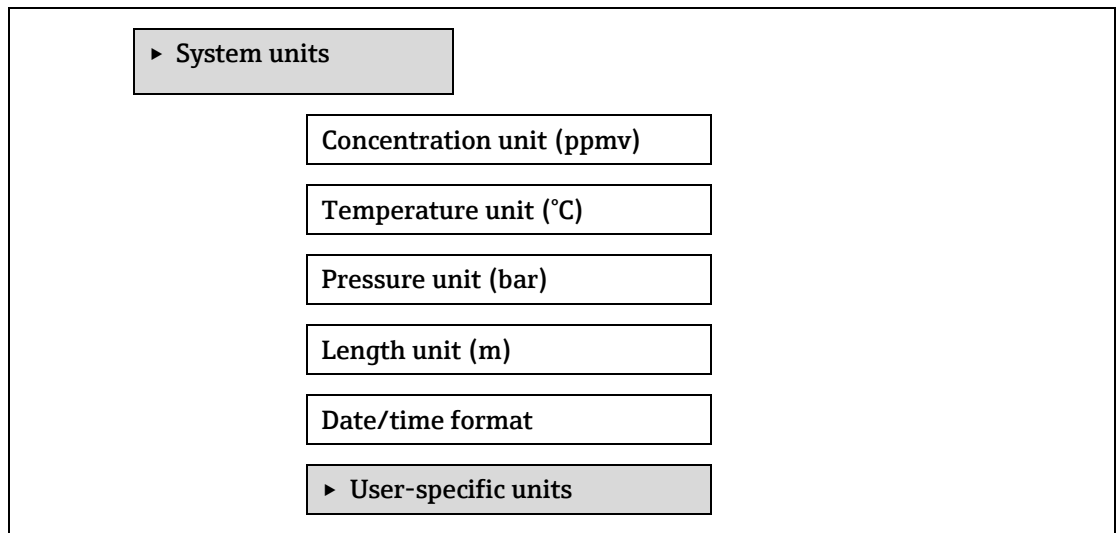*Navigation*   Expert → Sensor → System units



**Concentration unit**



- Navigation**   Expert → Sensor → System units → Concentration unit
- Description** Use this function to select the unit for the concentration.
- Selection** Selections depend on analyte type.
- ppmv
  - ppbv
  - %vol
  - lb/MMscf
  - mg/sm<sup>3</sup>
  - mg/Nm<sup>3</sup>
  - gr/100 scf
  - User conc.
- Factory setting** ppmv

**Additional information**

The default conversion factors per analyte are defined below and are based on ISO 13443:1996 Natural Gas, ISO, 5024, ASTM D1071- Standard reference conditions are 15° C, 101.325 kPa and Normal reference conditions are 0° C, 101.325 kPa. Furthermore, they are based on pipeline quality natural gas.

Analyte	ppmv	ppbv	%vol	lb/MMscf	mg/sm <sup>3</sup>	mg/Nm <sup>3</sup>	gr/100 scf
H <sub>2</sub> O	1	1000	0.0001	0.04748	0.7619	0.8038	-
H <sub>2</sub> S	1	1000	0.0001	-	1.4414	1.5205	0.630115

**Effect**

The selected unit applies for:

- Concentration parameter →
- Concentration offset →
- Validation concentration →
- Measured concentration →
- Concentration average →
- Concentration standard deviation →
- Concentration minimum →
- Concentration maximum →

**Selection**

For an explanation of the abbreviated units, see Approval specific factory settings → .

**Temperature unit****Navigation**

Expert → Sensor → System units → Temperature unit

**Description**

Use this function to select the unit for the temperature.

**Selection**

SI units

- °C
- K

US units

- °F
- °R

**Factory setting**

Approval-specific:

- °C
- °F

**Additional information****Effect**

The selected unit applies for:

- *Cell gas temperature parameter* →
- *Dew point 1 parameter* →
- *Dew point 2 parameter* →

**Selection**

For an explanation of the abbreviated units, see Approval specific factory settings → .

**Pressure unit**

**Navigation** Expert → Sensor → System units → Pressure unit

**Description** Use this function to select the unit for the pipe pressure.

**Selection**

SI units	US units
▪ MPa a	▪ psi a
▪ MPa g	▪ psi g
▪ kPa a	
▪ kPa g	
▪ Pa a	
▪ Pa g	
▪ bar	
▪ bar g	

**Factory setting** Approval-specific:

- bar a
- psi a

**Additional information** *Result*  
The unit is taken from:

- *Cell gas pressure value parameter* →
- *Pipeline pressure fixed* →
- *Pipeline pressure* →

*Selection*

For an explanation of the abbreviated units, see *Approval specific factory settings* → .

**Length unit**

**Navigation** Expert → Sensor → System units → Length unit

**Description** Use this function to select the length unit for nominal diameter.

**Selection**

- M
- ft
- in
- mm
- μm

**Factory setting** m

**Additional information** *Selection*  
For an explanation of the abbreviated units, see *Approval specific factory settings* → .

**Date/time format**

**Navigation** Expert → Sensor → System units → Date/time format

**Description** Use this function to select the desired time format for the analyzer.

**Selection**



- dd.mm.yy hh:mm


- dd.mm.yy hh:mm am/pm
- mm/dd/yy hh:mm
- mm/dd/yy hh:mm am/pm

**Factory setting** dd.mm.yy hh:mm

**Additional information** *Selection*  
For an explanation of the abbreviated units, see *Approval specific factory settings* → .



### User-specific units submenu

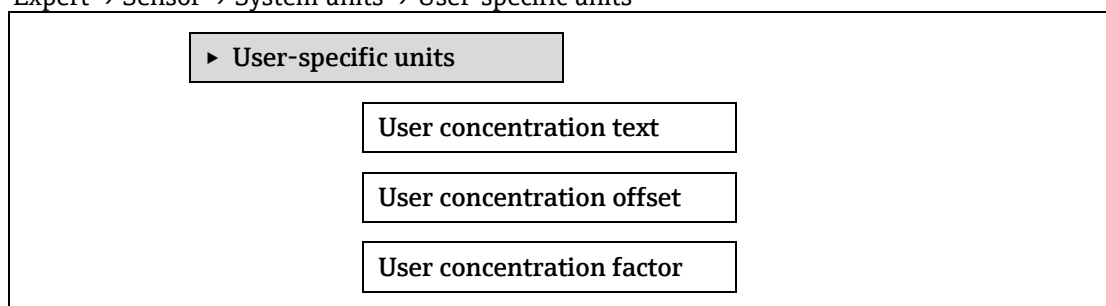*Navigation*   Expert → Sensor → System units → User-specific units




---


### User concentration text

**Navigation**   Expert → Sensor → System units → User-specific units → User concentration text

**Description** Use this function to enter a text for the user-specific unit of concentration. The corresponding concentration units are generated automatically.

**User entry** Max. 10 characters such as letters, numbers, or special characters (@, %, /)



**Factory setting** User conc.

**Additional information** *Result*  
The defined unit is shown as an option in the choose list of the *Concentration unit parameter* → .

*Example*  
Enter text "ppmw" for parts per million by weight.

---

### User concentration offset

**Navigation**   Expert → Sensor → System units → User-specific units → User concentration offset

**Description** Use this function to enter the zero-point shift for the user-specific concentration unit.

**User entry** Signed floating-point number

**Factory setting** 0.0


**Additional information** Value in user-specific unit = (factor × value in basic unit) + offset

**User concentration factor**

<b>Navigation</b>	🏠📄 Expert → Sensor → System units → User-specific units → User concentration factor
<b>Description</b>	Use this function to enter a quantity factor for the user-specific concentration unit.
<b>User entry</b>	Signed floating-point number
<b>Factory setting</b>	1.0

**3.2.3 Stream**

Navigation 🏠📄 Expert → Sensor → Stream

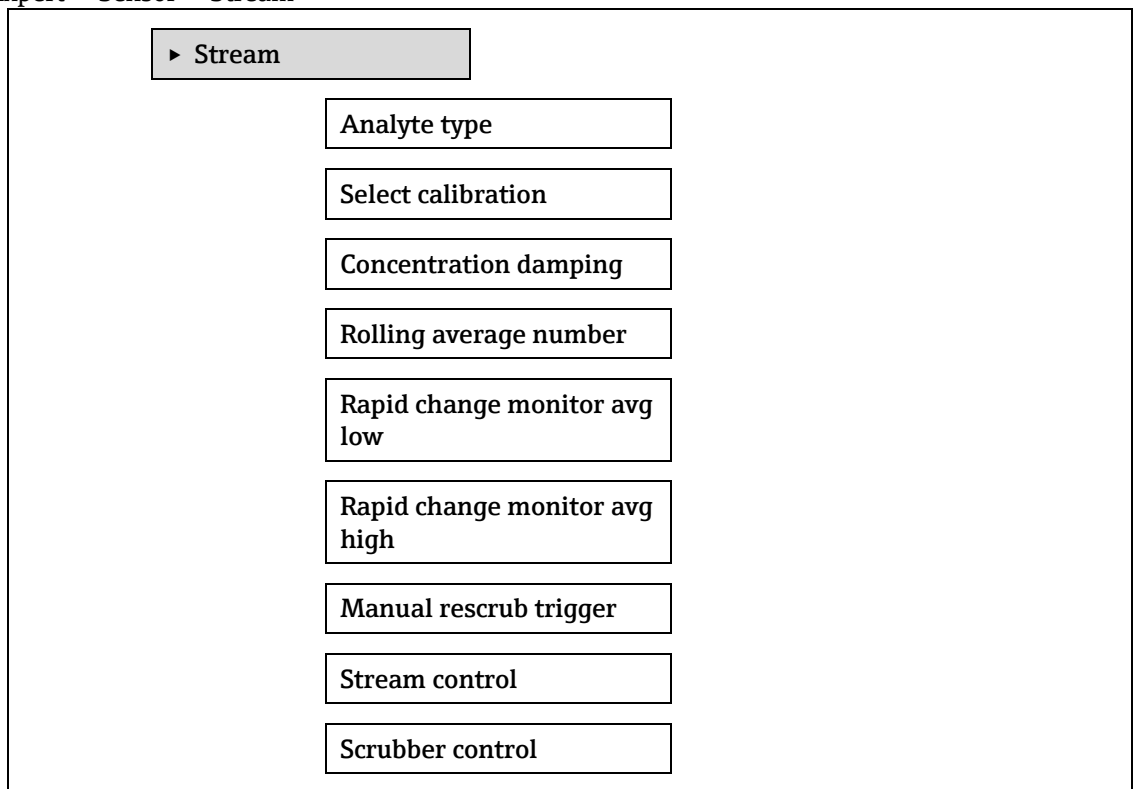

**Analyte type**

<b>Navigation</b>	🏠📄 Expert → Sensor → Stream → Analyte type
<b>Description</b>	Displays the analyte of interest the analyzer has been calibrated for.
<b>User interface</b>	<ul style="list-style-type: none"> <li>▪ H<sub>2</sub>O</li> <li>▪ H<sub>2</sub>S</li> </ul>

**Select calibration**





<b>Navigation</b>	🏠📄 Expert → Sensor → Stream → Select calibration
<b>Description</b>	Select the calibration to use for measurement. The analyzer may have several calibrations to choose from.

<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ 1</li> <li>▪ 2</li> <li>▪ 3</li> <li>▪ 4</li> </ul>
------------------	--

**Factory setting** 1

**Additional information** Some analyzers may be configured with multiple calibrations including a calibration for validation gas. Refer to the Calibration Reports provided with this shipment for information on the stream calibrations.

### Calibration damping

**Navigation**   Expert → Sensor → Stream → Concentration damping



**Description** Method for averaging concentration readings to reduce the noise in the final result.

**Selection**

- Off
- Rolling average
- Rapid change monitor

**Factory setting** For J22, rolling average  
For JT33, rapid change monitor

### Rolling average number

**Navigation**   Expert → Sensor → Stream → Rolling average number



**Prerequisite** Concentration damping is set to Rolling average

**Description** The number of measurements included in rolling average

**Selection** 1 to 1000

**Factory setting** 4

### Rapid change monitor average low

**Navigation**   Expert → Sensor → Stream → Rapid change monitor average low



**Prerequisite** Concentration damping is set to Rapid change monitor

**Description** The low number of values to average for rapid change monitor

**Selection** 2 to 64

**Factory setting** 2

### Rapid change monitor average high

**Navigation**   Expert → Sensor → Stream → Rapid change monitor average high

**Prerequisite** Concentration damping is set to Rapid change monitor

**Description** The high number of values to average for rapid change monitor

**Selection** 2 to 1000

**Factory setting** 300



**Manual rescrub trigger**

<b>Navigation</b>	🔍📄 Expert → Sensor → Stream → Manual rescrub trigger
<b>Prerequisite</b>	The Calculation method is CLS Differential (JT33)
<b>Description</b>	A manual trigger to force a new scrub cycle to start
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ Start</li> </ul>
<b>Factory setting</b>	Off

**Stream control**


<b>Navigation</b>	🔍📄 Expert → Sensor → Stream → Stream control
<b>Prerequisite</b>	The analyzer has a MAC installed
<b>Description</b>	The stream currently flowing through the analyzer
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Process</li> <li>▪ Validation 1</li> <li>▪ Validation 2</li> </ul>
<b>Factory setting</b>	Process

**Scrubber control**

<b>Navigation</b>	🔍📄 Expert → Sensor → Stream → Scrubber control
<b>Prerequisite</b>	The Calculation method is CLS Differential (JT33)
<b>Description</b>	On if gas is currently flowing through the scrubber
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ On</li> <li>▪ Off</li> </ul>
<b>Factory setting</b>	Off

**3.2.4 Dew point**

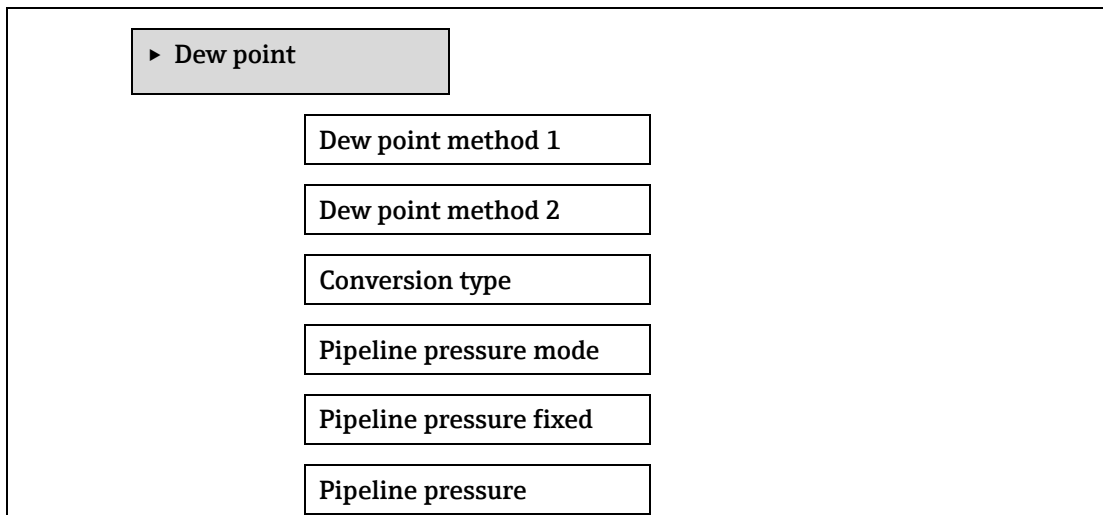

*Navigation* 🔍📄 Expert → Sensor → Dew point



► Calibration 1 to n



---

### Dew point method 1

<b>Navigation</b>	  Expert → Sensor → Dew point → Dew point method 1
<b>Description</b>	Select the dew point temperature method to use for conversion from concentration and pressure.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ ASTM1</li> <li>▪ ASTM2</li> <li>▪ ISO</li> <li>▪ AB</li> </ul>
<b>Factory setting</b>	Off



---

### Dew point method 2

<b>Navigation</b>	  Expert → Sensor → Dew point → Dew point method 2
<b>Description</b>	Select the dew point temperature method to use for conversion from concentration and pressure.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ ASTM1</li> <li>▪ ASTM2</li> <li>▪ ISO</li> <li>▪ AB</li> </ul>
<b>Factory setting</b>	Off



---

### Conversion type

<b>Navigation</b>	  Expert → Sensor → Dew point → Conversion type
<b>Description</b>	Select to use ideal or real gas laws for the dew point method.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Ideal</li> <li>▪ Real</li> </ul>
<b>Factory setting</b>	Ideal

---

### Pipeline pressure mode



<b>Navigation</b>	  Expert → Sensor → Dew point → Pipeline pressure mode
<b>Description</b>	Select how the pipeline pressure will be input.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Fixed value</li> <li>▪ External value</li> </ul>

**Factory setting** Fixed

---

### Pipeline pressure fixed

---

**Navigation**   Expert → Sensor → Dew point → Pipeline pressure fixed

**Description** Enter the fixed pipeline pressure value.



**User entry** Signed floating-point number

**Factory setting** 0.0000 bar

---

### Pipeline pressure external

---



**Navigation**   Expert → Sensor → Dew point → Pipeline pressure external

**Description** Enter the external pipeline pressure value.

**User entry** Signed floating-point number

**Factory setting** 0.0000 bar

### Calibration 1 to n submenu

**Navigation**   Expert → Sensor → Dew point → Calibration 1 to n

▶ Calibration 1 to n

Methane CH<sub>4</sub>

Ethane C<sub>2</sub>H<sub>6</sub>

Propane C<sub>3</sub>H<sub>8</sub>

iButane C<sub>4</sub>H<sub>10</sub>

N-Butane C<sub>4</sub>H<sub>10</sub>

Isopentane C<sub>5</sub>H<sub>12</sub>

N-Pentane C<sub>5</sub>H<sub>12</sub>

Neopentane C<sub>5</sub>H<sub>12</sub>

Hexane+ C<sub>6</sub>H<sub>14</sub>+


Nitrogen N<sub>2</sub>

Carbon diox. CO<sub>2</sub>

Hydrog.sulf. H<sub>2</sub>S

Hydrogen H <sub>2</sub>
-------------------------

**Component (n)****Navigation**

 Expert → Sensor → Dew point → Calibration 1 to n → Component (n)

**Description**

Describes the mole fraction of each background component within the gas stream.



The term “mol” in the table below is an abbreviation for mole fraction.

Parameter	Description	User entry	Factory setting
Stream change compensation	Enables or disables the Stream Change Compensation feature.	<ul style="list-style-type: none"> <li>■ On</li> <li>■ Off</li> </ul>	Off
Methane CH <sub>4</sub>	Sets the mole fraction of Methane in the dry gas mixture.	0.4 to 1.0 mol	0.75 mol
Ethane C <sub>2</sub> H <sub>6</sub>	Sets the mole fraction of Ethane in the dry gas mixture.	0.0 to 0.2 mol	0.1 mol
Propane C <sub>3</sub> H <sub>8</sub>	Sets the mole fraction of Propane in the dry gas mixture.	0.0 to 0.15 mol	0.05 mol
IButane C <sub>4</sub> H <sub>10</sub>	Sets the mole fraction of Ibutane in the dry gas mixture.	0.0 to 0.1 mol	0 mol
N-Butane C <sub>4</sub> H <sub>10</sub>	Sets the mole fraction of N-Butane in the dry gas mixture.	0.0 to 0.1 mol	0 mol
Isopentane C <sub>5</sub> H <sub>12</sub>	Sets the mole fraction of Isopentane in the dry gas mixture.	0.0 to 0.1 mol	0 mol
N-Pentane C <sub>5</sub> H <sub>12</sub>	Sets the mole fraction of N-Pentane in the dry gas mixture.	0.0 to 0.1 mol	0 mol
Neopentane C <sub>5</sub> H <sub>12</sub>	Sets the mole fraction of Neopentane in the dry gas mixture.	0.0 to 0.1 mol	0 mol
Hexane+ C <sub>6</sub> H <sub>14</sub> <sup>+</sup>	Sets the mole fraction of Hexane+ in the dry gas mixture.	0.0 to 0.1 mol	0 mol
Nitrogen N <sub>2</sub>	Sets the mole fraction of Nitrogen in the dry gas mixture.	0.0 to 0.55 mol	0 mol
Carbon dioxide CO <sub>2</sub>	Sets the mole fraction of Carbon dioxide in the dry gas mixture.	0.0 to 0.3 mol	0.1 mol
Hydrogen sulfide H <sub>2</sub> S	Sets the mole fraction of Hydrogen sulfide in the dry gas mixture.	0.0 to 0.05 mol	0 mol
Hydrogen H <sub>2</sub>	Sets the mole fraction of Hydrogen in the dry gas mixture.	0.0 to 0.2 mol	0 mol

**User entry**

Positive floating-point value (reference each component in above table).



**Factory setting**


Refer to table.

**Additional information**

The mole fraction of each background component should add up to 1.

### 3.2.5 Peak tracking

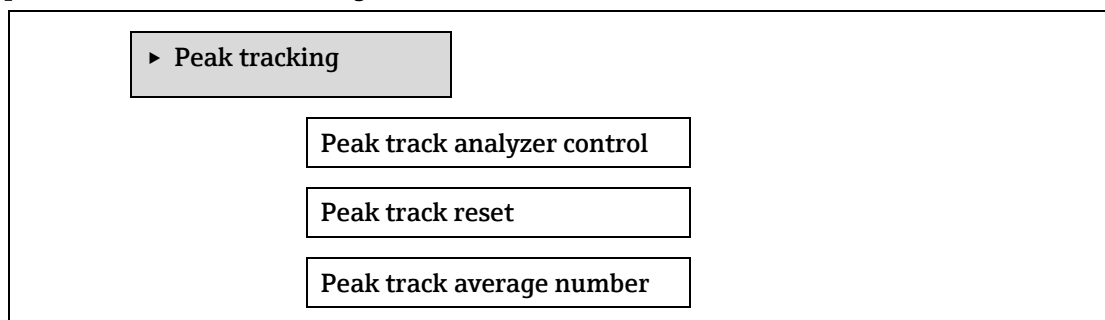

Navigation   Expert → Sensor → Peak tracking




---

#### Peak track analyzer control

---

Navigation   Expert → Sensor → Peak tracking → Peak track analyzer control

Description Switch peak track on or off for the analyzer. There are separate peak track settings for each calibration. Normal operation peak tracking should be on.

Selection



- Off
- On

Factory setting Off

---

#### Peak track reset

---

Navigation   Expert → Sensor → Peak tracking → Peak track reset

Description Reset analyzer peak midpoint current value to original calibrated peak location.

Selection



- Off
- Reset

Factory setting Off

---

#### Peak track average number

---



Navigation   Expert → Sensor → Peak tracking → Peak track average number


Description Number of measurements to average for a peak track adjustment


Selection 1 to 3600

Factory setting 10

### 3.2.6 Sensor adjustment

Navigation   Expert → Sensor → Sensor adjustment

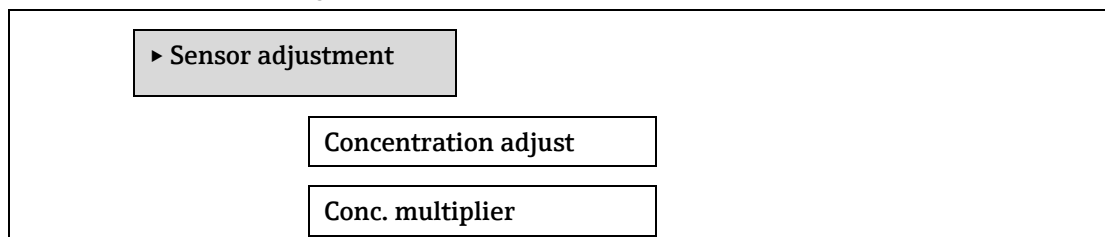

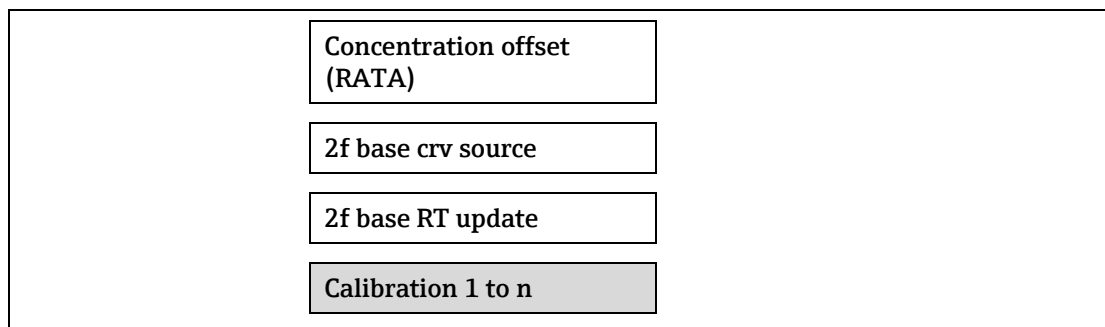


---

### Concentration adjust

---

<b>Navigation</b>	Expert → Sensor → Sensor adjustment → Concentration adjust
<b>Description</b>	Switch concentration adjustment feature (e.g., concentration multiplier and offset) on or off.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ On</li> <li>▪ Off</li> </ul>
<b>Factory setting</b>	Off
<b>Additional information</b>	Allows user definable adjustment of the analyzer reading without affecting factory calibration.

---

### Conc. multiplier

---

<b>Navigation</b>	Expert → Sensor → Sensor adjustment → Conc. multiplier
<b>Description</b>	Set the value that the concentration is multiplied by when concentration adjustment is turned on.
<b>User interface</b>	Signed floating-point number
<b>Factory setting</b>	1.0000

---

### Concentration offset (RATA)

---

<b>Navigation</b>	Expert → Sensor → Sensor adjustment → Concentration offset (RATA)
<b>Description</b>	Set the value added (i.e., offset) to the concentration when concentration adjustment is turned on.
<b>User interface</b>	Signed floating-point number
<b>Factory setting</b>	0.0000 ppmv

---



### 2f base curve source

---



<b>Navigation</b>	Expert → Sensor → Sensor adjustment → 2f base curve source
<b>Prerequisite</b>	Calculation method is PH2f (J22)
<b>Description</b>	Select source for base curve (i.e., Ref0 from factory or Ref0 from last RT update) used in measurement calculations.


- Selection**
- Ref0 curve
  - Ref0 RT curve
- Factory setting** Ref0 curve

**2f base RT update**



- Navigation**   Expert → Sensor → Sensor adjustment → 2f base RT update
- Prerequisite** Calculation method is PH2f (J22)
- Description** When Ref0 RT curve is selected, start will initiate saving the RT (Real Time) base curve data for measurement calculations.
- Selection**
- Cancel
  - Start
- Factory setting** Ref0 curve

**Calibration 1 to n submenu**

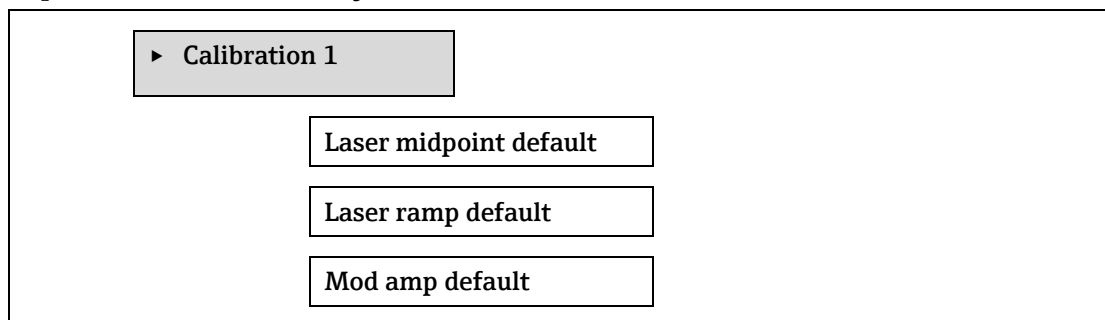

**Navigation**   Expert → Sensor → Sensor adjustment → Calibration 1 to n



**Laser midpoint default**

- Navigation**   Expert → Sensor → Sensor adjustment → Calibration 1 to n → Laser midpoint default
- Description** Displays factory calibrated midpoint for each calibration stream.
- User interface** 0 to 120 mA
- Additional information** This value serves as a starting point for midpoint delta to optimized peak position.



**Laser ramp default**

- Navigation**   Expert → Sensor → Sensor adjustment → Calibration 1 to n → Laser ramp default
- Description** Displays factory calibrated ramp for each calibration stream.
- User interface** 0 to 120 mA
- Additional information** Laser ramp represents the scan width of the spectrum.

---

**Laser modulation amplitude default**



---



**Navigation**        Expert → Sensor → Sensor adjustment → Calibration 1 to n → Mod amp default


**Description**      Modulation amplitude setting to optimize peak performance.

**User interface**      0 to 100 mA

### 3.2.7 Stream change compensation

For more information regarding stream change compensation, refer to the *Operating Instructions* → 

**Navigation**        Expert → Sensor → Stream change compensation

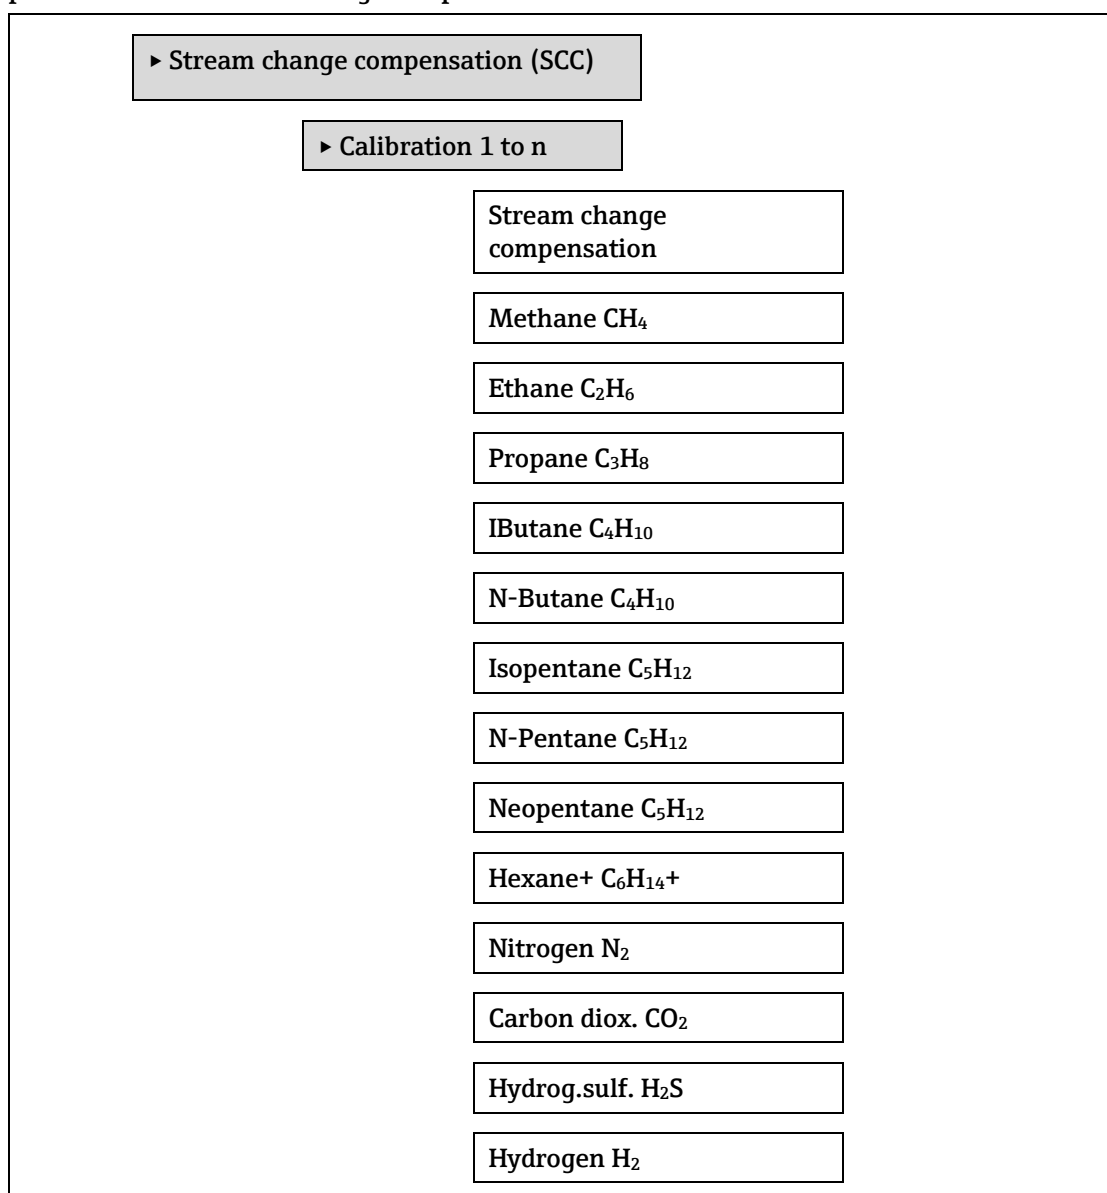




---

**Calibration 1 to n → Stream change compensation**


---



**Navigation**        Expert → Sensor → Stream change compensation → Calibration 1 to n → Stream change compensation




<b>Prerequisite</b>	Analyzer must be calibrated for a supporting application.
<b>Description</b>	Switch on to allow concentration measurement compensation based on gas background composition values. Values can be static or live.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ On</li> </ul>
<b>Factory setting</b>	Off

**Component (n)** 🔒

<b>Navigation</b>	🔍📄 Expert → Sensor → Stream change compensation → Calibration 1 to n → Component (n)
<b>Prerequisite</b>	Analyzer must be calibrated for a supporting application.
<b>Description</b>	These values define the gas background values. They are shared with the dew point.
<b>User entry</b>	Signed floating-point number, mole fraction
<b>Factory setting</b>	Gas background dependent. Refer to <i>dew point calibration components</i> → 📄.

### 3.2.8 Calibration

**Navigation** 🔍📄 Expert → Sensor → Calibration

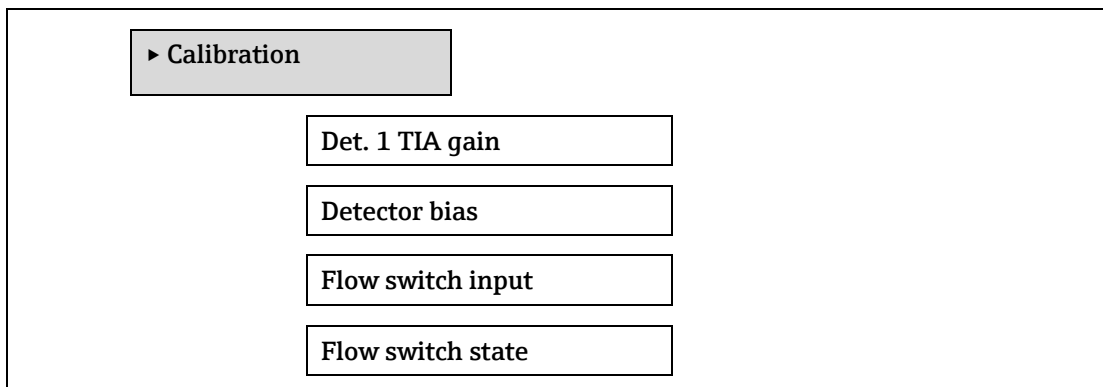

**Det. 1 TIA gain**

<b>Navigation</b>	🔍📄 Expert → Sensor → Calibration → Det. 1 TIA gain
<b>Description</b>	Transimpedance amplifier (TIA) gain setting
<b>Selection</b>	0 to 15

**Detector bias**

<b>Navigation</b>	🔍📄 Expert → Sensor → Calibration → Detector bias
<b>Description</b>	Bias voltage used to run the optical detector.
<b>Selection</b>	Signed floating-point number

---

**Flow switch input**


---

<b>Navigation</b>	🔍📄 Expert → Sensor → Calibration → Flow switch input
<b>Description</b>	Discrete input from flow switch to signal flow / no-flow of sample gas.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Normally Open</li> <li>▪ Normally Closed</li> <li>▪ Off</li> </ul>

---


**Flow switch state**


---

<b>Navigation</b>	🔍📄 Expert → Sensor → Calibration → Flow switch state
<b>Prerequisite</b>	Flow switch is installed and configured.
<b>Description</b>	Displays current status of flow switch.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ No Flow</li> <li>▪ Flow</li> </ul>

### 3.3 I/O configuration

*Navigation*    🔍📄 Expert → I/O configuration

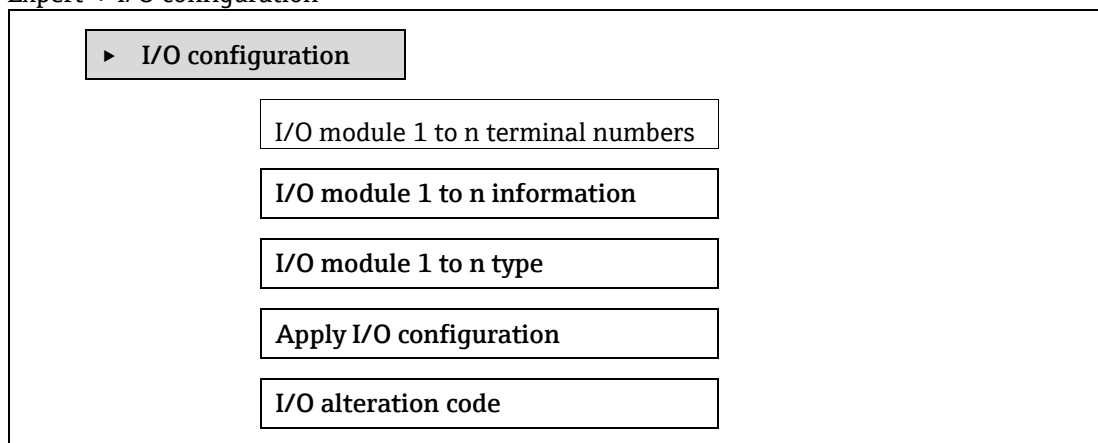


---

**I/O module 1 to n terminal numbers**


---

<b>Navigation</b>	🔍📄 Expert → I/O configuration → I/O module 1 to n terminals
<b>Description</b>	Displays the terminal numbers used by the I/O module.
<b>User interface</b>	<ul style="list-style-type: none"> <li>▪ Not used</li> <li>▪ 26-27 (I/O 1)</li> <li>▪ 24-25 (I/O 2)</li> <li>▪ 22-23 (I/O 3)</li> </ul>

---

**I/O module 1 to n information**


---



<b>Navigation</b>	🔍📄 Expert → I/O configuration → I/O module 1 to n information
<b>Description</b>	Displays information about the plugged in I/O module.

<b>User interface</b>	<ul style="list-style-type: none"> <li>▪ Not plugged</li> <li>▪ Invalid</li> <li>▪ Not configurable</li> <li>▪ Configurable</li> <li>▪ MODBUS</li> </ul>
<b>Additional information</b>	<ul style="list-style-type: none"> <li>▪ <b>Not plugged.</b> The I/O module is not plugged in.</li> <li>▪ <b>Invalid.</b> The I/O module is not plugged correctly.</li> <li>▪ <b>Not configurable.</b> The I/O module is not configurable.</li> <li>▪ <b>Configurable.</b> The I/O module is configurable.</li> <li>▪ <b>MODBUS.</b> The I/O module is configured for Modbus.</li> </ul>

---

### I/O module 1 to n type



---

<b>Navigation</b>	  Expert → I/O configuration → I/O module 1 to n type
<b>Prerequisite</b>	Must have I/O Module installed. For the following order code: <ul style="list-style-type: none"> <li>▪ “Output; input 2,” “Configurable I/O initial setting off”</li> <li>▪ “Output; input 3,” “Configurable I/O initial setting off”</li> </ul>
<b>Description</b>	Use this function to select the I/O module type for the configuration of the I/O module.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ Current output <sup>1</sup></li> <li>▪ Current input <sup>1</sup></li> <li>▪ Switch output <sup>1</sup></li> <li>▪ Relay output <sup>1</sup></li> </ul>
<b>Factory setting</b>	Off

---

### Apply I/O configuration



---

<b>Navigation</b>	  Expert → I/O configuration → Apply I/O configuration
<b>Description</b>	Use this function to activate the newly configured I/O module type.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ No</li> <li>▪ Yes</li> </ul>
<b>Factory setting</b>	No

---

### I/O alteration code

---


<b>Navigation</b>	  Expert → I/O configuration → I/O alteration code
<b>Description</b>	Activates configuration for each I/O.
<b>User entry</b>	Positive integer

---

<sup>1</sup> Visibility depends on order options or device settings


**Factory setting** Device specific

**Additional information** *Description*



The I/O configuration is changed in the *I/O module type parameter* → .


## 3.4 Input

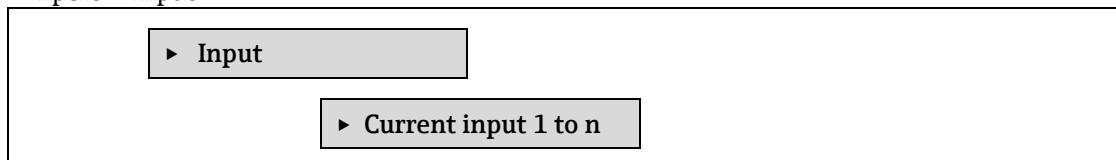*Navigation*   Expert → Input





### 3.4.1 Current input 1 to n

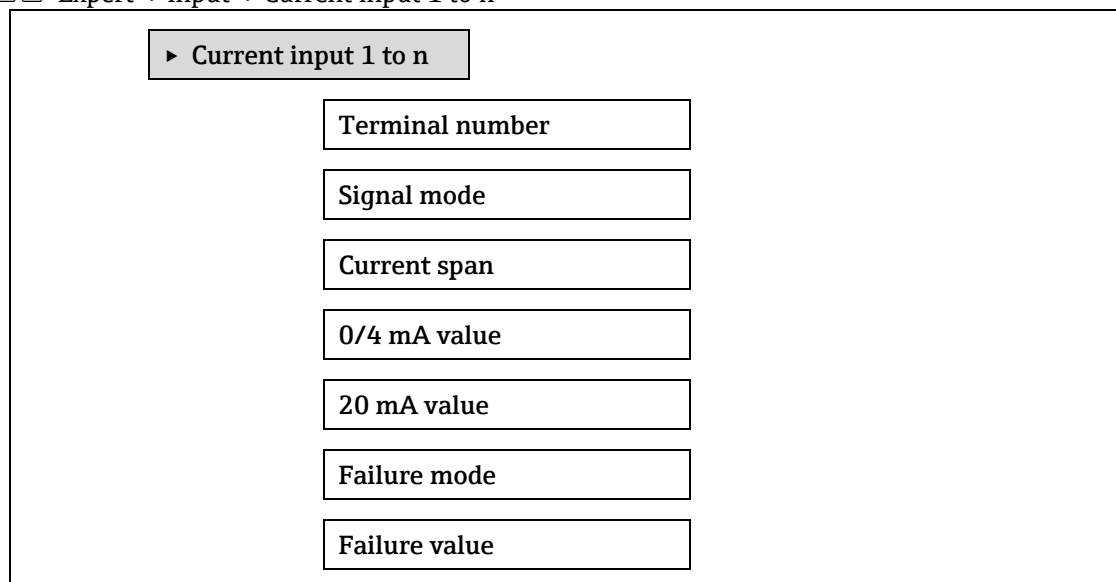*Navigation*   Expert → Input → Current input 1 to n




---

#### Terminal number

**Navigation**   Expert → Input → Current input 1 to n → Terminal number

**Description** Displays the terminal numbers used by the current input module.

**User interface**

- Not used
- 24-25 (I/O 2)
- 22-23 (I/O 3)



**Additional information** *"Not used" option*

The current input module does not use any terminal numbers.

---

#### Signal mode



**Navigation**   Expert → Input → Current input 1 to n → Signal mode



**Description** Use this function to select the signal mode for the current input.

**User interface**

- Passive
- Active

**Additional information** Active

## Current span

**Navigation**   Expert → Input → Current input 1 to n → Current span


**Description** Use this function to select the current range for the process value output and the upper and lower level for signal on alarm.

**Selection**



- 0-20 mA
- 4-20 mA NAMUR
- 4-20 mA US
- FIXED CURRENT

**Factory setting** Approval-specific:

- 4 to 20 mA NAMUR (3.8 to 20.5 mA)
- 4 to 20 mA US (3.9 to 20.8 mA)

**Additional information** Sample values for the current range: *Current range output* → .

## 0/4 mA value



**Navigation**   Expert → Input → Current input 1 to n → 0/4 mA value

**Description** Use this function to enter a value for the 4 mA current.


**Selection** Signed floating-point number

**Factory setting** 0



**Additional information** *Current input behavior*  
The current input behaves differently depending on the settings configured in the following parameters:

- *Current span* → 
- *Failure mode* → 

*Configuration examples*

Pay attention to the configuration examples for *4 mA value parameter* → .


## 20 mA value

**Navigation**   Expert → Input → Current input 1 to n → 20 mA value

**Description** Use this function to enter a value for the 20 mA current.



**User entry** Signed floating-point number


**Factory setting** Depends on country and factory calibration

**Additional information** *Configuration examples*  
Pay attention to the configuration examples for the *4 mA value parameter* → .

---

## Failure mode

**Navigation**   Expert → Input → Current input 1 to n → Failure mode


**Description** Use this function to select the input behavior when measuring a current outside the configured *Current span parameter* → .

**Selection**

- Alarm
- Last valid value
- Defined value



**Factory setting** Alarm

**Additional information** *Options*

- **Alarm.** An error message is set.
- **Last valid value.** The last valid measured value is used.
- **Defined value.** The *Failure value parameter* → .

---

## Failure value

**Navigation**   Expert → Input → Current input 1 to n → Failure value

**Prerequisite** In the *Failure mode parameter* →  the **Defined value** option is selected.


**Description** Use this function to enter the value that the device uses if it does not receive an input signal from the external device, or if the input signal is invalid.

**User entry** Signed floating-point number



**Factory setting** 0

## 3.5 Output

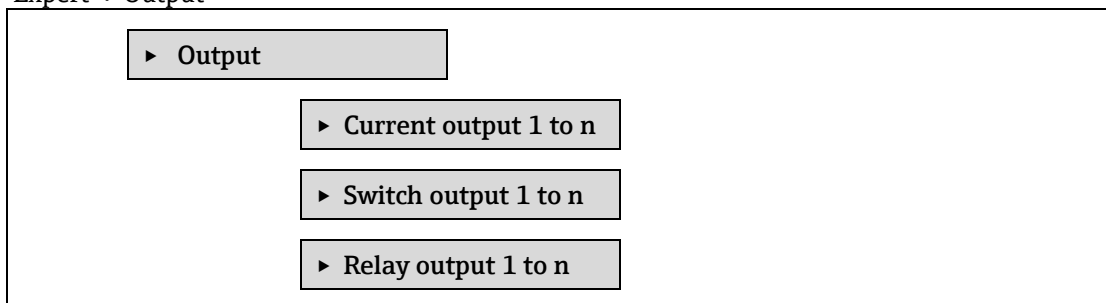*Navigation*   Expert → Output



### 3.5.1 Current output 1 to n

*Navigation*   Expert → Output → Current output 1 to n

▶ Current output 1 to n

Terminal number

Signal mode

Process variable current output

Current range out

Fixed current

Lower range value outp

Upper range value outp

Damping current output

Failure behavior current output

Failure current

Output current 1 to n

Measured current 1 to n

---

### Terminal number

<b>Navigation</b>	☰☰ Expert → Output → Current output 1 to n → Terminal number
<b>Description</b>	Displays the terminal numbers used by the current output module.
<b>User interface</b>	<ul style="list-style-type: none"> <li>▪ Not used</li> <li>▪ 24-25 (I/O 2)</li> <li>▪ 22-23 (I/O 3)</li> </ul>
<b>Additional information</b>	<p><i>"Not used" option</i></p> <p>The current output module does not use any terminal numbers.</p>

---

### Signal mode



<b>Navigation</b>	☰☰ Expert → Output → Current output 1 to n → Signal mode
<b>Description</b>	Use this function to select the signal mode for the current output.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Active</li> <li>▪ Passive</li> </ul>
<b>Factory setting</b>	Active



## Process variable current output 🔒

**Navigation**   Expert → Output → Current output 1 to n → Process variable current output

**Description** Use this function to select a process variable for the current output.

- Selection**
- Off
  - Concentration
  - Dew Point 1
  - Dew Point 2
  - Cell Gas Temperature

## Current range output 🔒

**Navigation**   Expert → Output → Current output 1 to n → Current range output




**Description** Select current range for process value output and upper/lower level for alarm signal.

- Selection**
- 0-20 mA
  - 4-20 mA NAMUR
  - 4-20 mA US
  - FIXED CURRENT

- Factory setting** Approval specific:
- 4...20 mA NAMUR (3.8. 20.5 mA)
  - 4...20 mA US (3.9. 20.8 mA)

### Additional information

#### Description


- In the event of a device alarm, the current output adopts the value specified in the *Failure mode parameter* → .
- If the measured value is outside the measuring range, the **△S441 Current output 1 to n** diagnostic message is displayed.
- The measuring range is specified via the *Lower range value output parameter* →  and *Upper range value output parameter* → .

#### "Fixed current" option

The current value is set via the *Fixed current parameter* → .

#### Example

Shows the relationship between the current range for the output of the process value and the two signal on alarm levels:

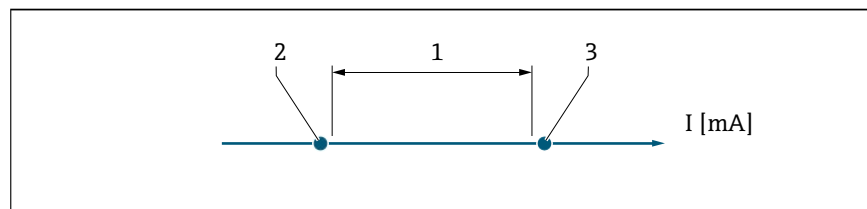

A0094351

1. Current range for process value
2. Lower level for signal on alarm
3. Upper level for signal on alarm

Selection	1	2	3
4...20 mA NAMUR (3.8...20.5 mA)	3.8 to 20.5 mA	< 3.6 mA	> 21.95 mA






4...20 mA US (3.9...20.8 mA)	3.9 to 20.8 mA US	< 3.6 mA	> 21.95 mA
4...20 mA (4...20.5 mA)	4 to 20.5 mA	< 3.6 mA	> 21.95 mA
0...20 mA (0...20.5 mA)	0 to 20.5 mA	0 mA	> 21.95 mA

If the measurement exceeds or falls below the upper or lower signal on alarm level, the **△S441 Current output 1 to n** diagnostic message is displayed.

---

### Fixed Current







---

<b>Navigation</b>	  Expert → Output → Current output 1 to n → Fixed current
<b>Prerequisite</b>	The <b>Fixed current</b> option is selected in the <i>Current range output parameter</i> →  .
<b>Description</b>	Use this function to enter a constant current value for the current output.
<b>User entry</b>	0 to 22.5 mA
<b>Factory setting</b>	22.5 mA

---

### Lower range value output




---

<b>Navigation</b>	  Expert → Output → Current output 1 to n → Lower range output
<b>Prerequisite</b>	One of the following options is selected in the <i>Current range output parameter</i> →  : <ul style="list-style-type: none"> <li>▪ 0-20 mA</li> <li>▪ 4-20 mA NAMUR</li> <li>▪ 4-20 mA US</li> <li>▪ FIXED CURRENT</li> </ul>
<b>Description</b>	Use this function to enter a value for the start of measuring range.
<b>User entry</b>	Signed non-negative floating-point number
<b>Factory setting</b>	0 ppmv
<b>Additional information</b>	<p><i>Dependency</i></p> <p>The unit depends on the process variable selected in the <i>Assign current output parameter</i> → .</p> <p><i>Current output behavior</i></p> <p>The current output behaves differently depending on the settings configured in the following parameters:</p> <ul style="list-style-type: none"> <li>▪ <i>Current span</i> → </li> <li>▪ <i>Failure mode</i> → </li> </ul>


---

### Upper range value output

---





<b>Navigation</b>	  Expert → Output → Current output 1 to n → Upper range output
<b>Prerequisite</b>	One of the following options is selected in the <i>Current range output parameter</i> →  : <ul style="list-style-type: none"> <li>▪ 0-20 mA</li> <li>▪ 4-20 mA NAMUR</li> </ul>

- 4-20 mA US
- FIXED CURRENT

<b>Description</b>	Use this function to enter a value for the end of measuring range.
<b>User entry</b>	Signed positive floating-point number
<b>Factory setting</b>	Calibration dependent (remove link)
<b>Additional information</b>	<p><i>Dependency</i></p> <p>The unit depends on the process variable selected in the <i>Assign current output parameter</i> → .</p>





---

### Damping current output

<b>Navigation</b>	  Expert → Output → Current output 1 to n → Damping current output
<b>Prerequisite</b>	<p>A process variable is selected in the <i>Assign current output parameter</i> →  and one of the following options is selected in the <i>Current range output parameter</i> → :</p> <ul style="list-style-type: none"> <li>▪ 0-20 mA</li> <li>▪ 4-20 mA NAMUR</li> <li>▪ 4-20 mA US</li> <li>▪ FIXED CURRENT</li> </ul>
<b>Description</b>	Use this function to enter a time constant for the reaction time of the current output signal to fluctuations in the measured value caused by process conditions.
<b>User entry</b>	0.0 to 999.9 s
<b>Factory setting</b>	1.0 s
<b>Additional information</b>	<p>Use this function to enter a time constant (PT1 element<sup>1</sup>) for current output damping:</p> <ul style="list-style-type: none"> <li>▪ If a low time constant is entered, the current output reacts particularly quickly to fluctuating measured variables.</li> <li>▪ On the other hand, the current output reacts more slowly if a high time constant is entered.</li> </ul> <p>Damping is switched off if 0 is entered (factory setting).</p>




---

### Failure behavior current output

<b>Navigation</b>	  Expert → Output → Current output 1 to n → Failure behavior output
<b>Prerequisite</b>	<p>A process variable is selected in the <i>Assign current output parameter</i> →  and one of the following options is selected in the <i>Current range output parameter</i> → :</p> <ul style="list-style-type: none"> <li>▪ 0-20 mA</li> <li>▪ 4-20 mA NAMUR</li> <li>▪ 4-20 mA US</li> <li>▪ FIXED CURRENT</li> </ul>
<b>Description</b>	Use this function to select the value of the current output in the event of a device alarm.

---




<sup>1</sup> Proportional transmission behavior with first order delay

<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Min.</li> <li>▪ Max.</li> <li>▪ Last valid value</li> <li>▪ Actual value</li> <li>▪ Fixed value</li> </ul>
<b>Factory setting</b>	Max.
<b>Additional information</b>	<p><i>Description</i></p> <p>This setting does not affect the failsafe mode of other outputs. This is specified in separate parameters.</p> <p><i>"Min." option</i></p> <p>The current output adopts the value of the lower level for signal on alarm. The signal on alarm level is defined via the <i>Current range output parameter</i> → .</p> <p><i>"Max." option</i></p> <p>The current output adopts the value of the upper level for signal on alarm. The signal on alarm level is defined via the <i>Current range output parameter</i> → .</p> <p><i>"Last valid value" option</i></p> <p>The current output adopts the last measured value that was valid before the device alarm occurred.</p> <p><i>"Actual value" option</i></p> <p>The current output adopts the measured value based on the current measurement; the device alarm is ignored.</p> <p><i>"Defined value" option</i></p> <p>The current output adopts a defined measured value. The measured value is defined via the <i>Failure current parameter</i> → .</p>

---

## Failure current



---

<b>Navigation</b>	  Expert → Output → Current output 1 to n → Failure current
<b>Prerequisite</b>	The <b>Defined value</b> option is selected in the <i>Failure mode parameter</i> →  .
<b>Description</b>	Use this function to enter a fixed value that the current output adopts in the event of a device alarm.
<b>User entry</b>	0 to 22.5 mA
<b>Factory setting</b>	22.5 mA

---

## Output current 1 to n



---

<b>Navigation</b>	  Expert → Output → Current output 1 to n → Output current 1 to n
<b>Description</b>	Displays the current value currently calculated for the current output.
<b>User interface</b>	0 to 22.5 mA

---

**Measured current 1 to n**




---


**Navigation**        Expert → Output → Current output 1 to n → Measured current 1 to n

**Description**      Displays the actual measured value of the output current.

**User interface**      0 to 30 mA

### 3.5.2 Switch output 1

**Navigation**        Expert → Output → Switch output 1 to n

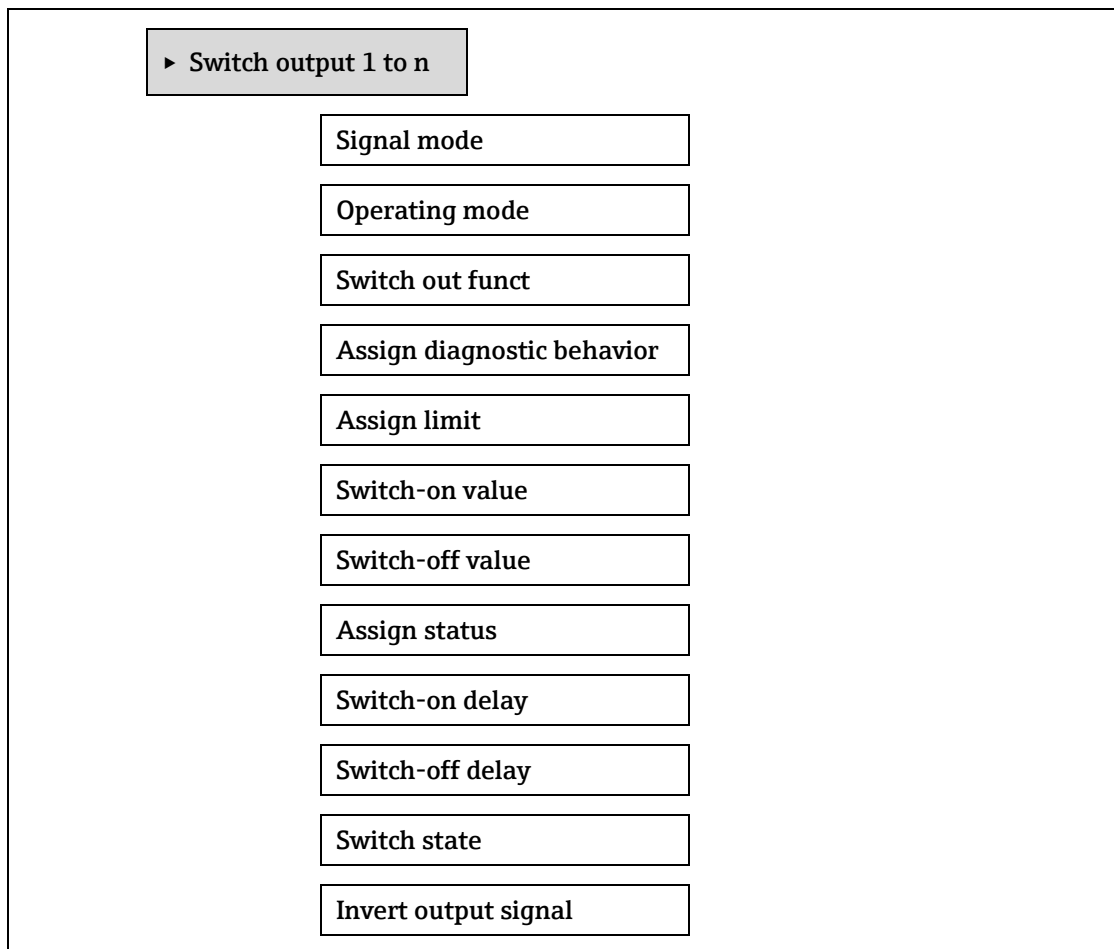




---

**Signal mode**


---



**Navigation**        Expert → Output → Switch output 1 to n → Signal mode

**Description**      Use this function to select the signal mode for the switch output.

**Selection**

- Passive
- Passive NAMUR



**Additional information**

- Passive
- Active

---

**Operating mode**





---

<b>Navigation</b>	  Expert → Output → Switch output 1 to n → Operating mode
<b>Description</b>	Displays the operating mode of the output.
<b>Selection</b>	Switch
<b>Factory setting</b>	Switch

---

**Switch output function**






---

<b>Navigation</b>	  Expert → Output → Switch output 1 to n → Switch out function
<b>Prerequisite</b>	The <b>Switch</b> option is selected in the <i>Operating mode parameter</i> →  .
<b>Description</b>	Use this function to select a function for the switch output.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ On</li> <li>▪ Diagnostic behavior</li> <li>▪ Limit</li> <li>▪ Status</li> </ul>
<b>Factory setting</b>	Off
<b>Additional information</b>	<p><i>Selection</i></p> <ul style="list-style-type: none"> <li>▪ <b>Off.</b> The switch output is permanently switched off (open, non-conductive).</li> <li>▪ <b>On.</b> The switch output is permanently switched on (closed, conductive).</li> <li>▪ <b>Diagnostic behavior.</b> Indicates if the diagnostic event is present or not. Is used to output diagnostic information and to react to it appropriately at the system level.</li> <li>▪ <b>Limit.</b> Indicates if a specified limit value has been reached for the process variable. Is used to output diagnostic information relating to the process and to react to it appropriately at the system level.</li> <li>▪ <b>Status.</b> Displays the device status when validation control is selected.</li> </ul>

---

**Assign diagnostic behavior**


---

<b>Navigation</b>	  Expert → Output → Switch output 1 to n → Assign diagnostic behavior
<b>Prerequisite</b>	<ul style="list-style-type: none"> <li>▪ In the <i>Operating mode parameter</i> → , the <b>Switch</b> option is selected.</li> <li>▪ In the <i>Switch output function parameter</i> → , the <b>Diagnostic behavior</b> option is selected.</li> </ul>
<b>Description</b>	Use this function to select the diagnostic event category that is displayed for the switch output.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Alarm</li> <li>▪ Alarm or warning</li> <li>▪ Warning</li> </ul>
<b>Factory setting</b>	Alarm
<b>Additional information</b>	<p><i>Description</i></p> <p>If no diagnostic event is pending, the switch output is closed and conductive.</p>

*Selection*

- **Alarm.** The switch output signals only diagnostic events in the alarm category.
- **Alarm or warning.** The switch output signals diagnostic events in the alarm and warning category.
- **Warning.** The switch output signals only diagnostic events in the warning category.

**Assign limit****Navigation**

Expert → Output → Switch output 1 to n → Assign limit

**Prerequisite**

- In the *Operating mode parameter* → , the **Switch** option is selected.
- In the *Switch output function parameter* → , the **Limit** option is selected.

**Description**

Use this function to select a process variable for the limit function.

**Selection**

- Off
- Concentration
- Dew Point 1
- Dew Point 2

**Factory setting**

Concentration

**Switch-on value****Navigation**

Expert → Output → Switch output 1 to n → Switch-on value

**Prerequisite**

- The **Switch** option is selected in the *Operating mode parameter* → .
- The **Limit** option is selected in the *Switch output function parameter* → .

**Description**

Use this function to enter the measured value for the switch-on point.

**Selection**

Signed floating-point number

**Factory setting**

0 ppmv

**Additional information***Description*

Use this function to enter the limit value for the switch-on value (process variable > switch-on value = closed, conductive).

When using a hysteresis: Switch-on value > Switch-off value.

*Dependency*

The unit depends on the process variable selected in the **Assign limit** parameter (→ 139).

**Switch-off value****Navigation**

Expert → Output → Switch output 1 to n → Switch-off value

**Prerequisite**


- The **Switch** option is selected in the *Operating mode parameter* → .
- The **Limit** option is selected in the *Switch output function parameter* → .

**Description**


Use this function to enter the measured value for the switch-off point.





**User entry**

Signed floating-point number


<b>Factory setting</b>	0 ppmv
<b>Additional information</b>	<p><i>Description</i></p> <p>Use this function to enter the limit value for the switch-off value (process variable &lt; switch-off value = open, non-conductive).</p> <p>When using a hysteresis: Switch-on value &gt; Switch-off value.</p> <p><i>Dependency</i></p> <p>The unit depends on the process variable selected in the <b>Assign limit</b> parameter (→  139).</p>





---

**Assign status**



<b>Navigation</b>	  Expert → Output → Switch output 1 to n → Assign status
<b>Prerequisite</b>	<ul style="list-style-type: none"> <li>▪ The <b>Switch</b> option is selected in the <i>Operating mode parameter</i> → .</li> <li>▪ The <b>Status</b> option is selected in the <i>Switch output function parameter</i> → .</li> </ul>
<b>Description</b>	Use this function to select a device status for the switch output.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ Validation Control</li> </ul>
<b>Factory setting</b>	Off





---

**Switch-on delay**


<b>Navigation</b>	  Expert → Output → Switch output 1 to n → Switch-on delay
<b>Prerequisite</b>	<ul style="list-style-type: none"> <li>▪ The <b>Switch</b> option is selected in the <i>Operating mode parameter</i> → .</li> <li>▪ The <b>Limit</b> option is selected in the <i>Switch output function parameter</i> → .</li> </ul>
<b>Description</b>	Use this function to enter a delay time for switching on the switch output.
<b>User entry</b>	0.0 to 100.0 s
<b>Factory setting</b>	0.0 s

---


**Switch-off delay**


<b>Navigation</b>	  Expert → Output → Switch output 1 to n → Switch-off delay
<b>Prerequisite</b>	<ul style="list-style-type: none"> <li>▪ The <b>Switch</b> option is selected in the <i>Operating mode parameter</i> → .</li> <li>▪ The <b>Limit</b> option is selected in the <i>Switch output function parameter</i> → .</li> </ul>
<b>Description</b>	Use this function to enter a delay time for switching off the switch output.
<b>User entry</b>	0.0 to 100.0 s
<b>Factory setting</b>	0.0 s

---

**Switch state**

<b>Navigation</b>	  Expert → Output → Switch output 1 to n → Switch state
-------------------	---

**Prerequisite** The **Switch** option is selected in the *Operating mode parameter* → .

**Description** Displays the current switch status of the status output.



**Selection**

- Open
- Closed

**Additional information** *User interface*

- **Open.** The switch output is not conductive.
- **Closed.** The switch output is conductive.

## Invert output signal

**Navigation**   Expert → Output → Switch output 1 to n → Invert output signal


**Description** Use this function to select whether to invert the output signal.

**Selection**

- No
- Yes


**Factory setting** No

**Additional information** *Selection*  
No option (passive - negative)

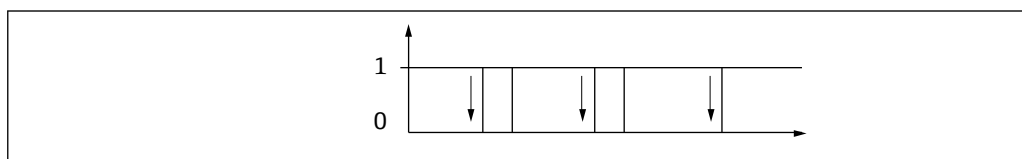



A0026693

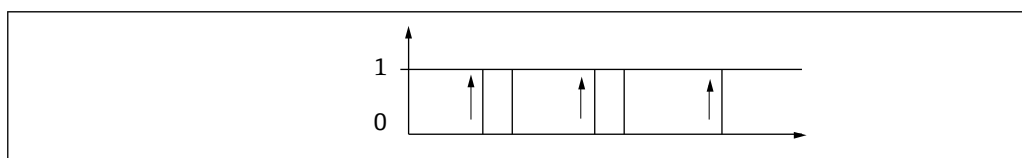
Yes option (passive - positive)



A0026692

### 3.5.3 Relay output 1 to n

**Navigation**   Expert → Output → Relay output 1 to n

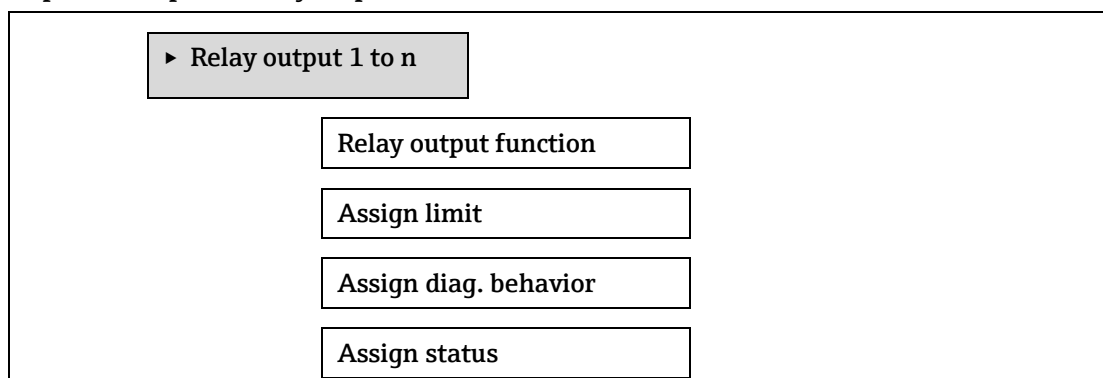



Switch-off value
Switch-off delay
Switch-on value
Switch-on delay
Switch state
Powerless relay status

---

**Relay output function**


**Navigation** Expert → Output → Relay output 1 to n → Relay output function

**Description** Use this function to select an output function for the relay output.

**User interface**

- Closed
- Open
- Diagnostic behavior
- Limit
- Status

**Factory setting** Closed

**Additional information** *Selection*

- **Closed.** The relay output is permanently switched on (closed, conductive).
- **Open.** The relay output is permanently switched off (open, non-conductive).
- **Diagnostic behavior.** Indicates if the diagnostic event is present or not. Is used to output diagnostic information and to react to it appropriately at the system level.
- **Limit.** Indicates if a specified limit value has been reached for the process variable. Is used to output diagnostic information relating to the process and to react to it appropriately at the system level.
- **Status.** Displays the device status when validation control is selected.

---

**Assign limit**


**Navigation** Expert → Output → Relay output 1 to n → Assign limit

**Prerequisite** The **Limit** option is selected in the *Relay output function parameter* → .

**Description** Use this function to select a process variable for the limit value function.

**Selection**

- Off
- Concentration
- Dew Point 1
- Dew Point 2

**Factory setting** Off

---

**Assign diagnostic behavior**


<b>Navigation</b>	Expert → Output → Relay output 1 to n → Assign diagnostic behavior
<b>Prerequisite</b>	In the <i>Relay output function parameter</i> → , the <b>Diagnostic behavior</b> option is selected.
<b>Description</b>	Use this function to select the category of the diagnostic events that are displayed for the relay output.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Alarm</li> <li>▪ Alarm or warning</li> <li>▪ Warning</li> </ul>
<b>Factory setting</b>	Alarm
<b>Additional information</b>	<p><i>Description</i></p> <p>If no diagnostic event is pending, the relay output is closed and conductive.</p> <p><i>Selection</i></p> <ul style="list-style-type: none"> <li>▪ <b>Alarm.</b> The relay output signals only diagnostic events in the alarm category.</li> <li>▪ <b>Alarm or warning.</b> The relay output signals diagnostic events in the alarm and warning category.</li> <li>▪ <b>Warning.</b> The relay output signals only diagnostic events in the warning category.</li> </ul>

---

**Assign status**



<b>Navigation</b>	Expert → Output → Relay output 1 to n → Assign status
<b>Prerequisite</b>	In the <i>Relay output function parameter</i> → , the <b>Digital Output</b> option is selected.
<b>Description</b>	Use this function to select the device status for the relay output.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ Validation Control</li> </ul>
<b>Factory setting</b>	Off


---




**Switch-off value**



<b>Navigation</b>	Expert → Output → Relay output 1 to n → Switch-off value
<b>Prerequisite</b>	In the <i>Relay output function parameter</i> → , the <b>Limit</b> option is selected.
<b>Description</b>	Use this function to enter the measured value for the switch-off point.
<b>User entry</b>	Signed floating-point number
<b>Factory setting</b>	0 ppmv
<b>Additional information</b>	<p><i>Description</i></p> <p>Use this function to enter the limit value for the switch-off value (process variable &lt; switch-off value = open, non-conductive).</p> <p>When using a hysteresis: Switch-on value &gt; Switch-off value.</p>





*Dependency*


The unit is dependent on the process variable selected in the **Assign limit** parameter (→  146).




**Switch-off delay** 

<b>Navigation</b>	  Expert → Output → Relay output 1 to n → Switch-off delay
<b>Prerequisite</b>	In the <i>Relay output function parameter</i> →  , the <b>Limit</b> option is selected.
<b>Description</b>	Use this function to enter a delay time for switching off the switch output
<b>Selection</b>	0.0 to 100.0 s
<b>Factory setting</b>	0.0 s



**Switch-on value** 

<b>Navigation</b>	  Expert → Output → Relay output 1 to n → Switch-on value
<b>Prerequisite</b>	The <b>Limit</b> option is selected in the <i>Relay output function parameter</i> →  .
<b>Description</b>	Use this function to enter the measured value for the switch-on point.
<b>User entry</b>	Signed floating-point number
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ Validation Control</li> </ul>
<b>Additional information</b>	<p><i>Description</i></p> <p>Use this function to enter the limit value for the switch-on value (process variable &gt; switch-on value = closed, conductive).</p> <p>When using a hysteresis: Switch-on value &gt; Switch-off value.</p> <p><i>Dependency</i></p> <p>The unit is dependent on the process variable selected in the <b>Assign limit</b> parameter (→  146).</p>

**Switch-on delay** 

<b>Navigation</b>	  Expert → Output → Relay output 1 to n → Switch-on delay (0814-1 to n)
<b>Prerequisite</b>	In the <i>Relay output function parameter</i> →  , the <b>Limit</b> option is selected.
<b>Description</b>	Use this function to enter a delay time for switching on the switch output.
<b>User entry</b>	0.0 to 100.0 s
<b>Factory setting</b>	0.0 s

**Switch state**

<b>Navigation</b>	  Expert → Output → Relay output 1 to n → Switch state
-------------------	--

**Description** Displays the current status of the relay output.

**User interface**

- Open
- Closed

**Additional information** *User interface*

- **Open.** The relay output is not conductive.
- **Closed.** The relay output is conductive.

---

### Powerless relay status 🔒

---

**Navigation** 🏠📁 Expert → Output → Relay output 1 to n → Powerless relay

**Description** Use this function to select the quiescent state for the relay output.

**Selection**

- Open
- Closed


**Factory setting** Open

**Additional information** *Selection*

- **Open.** The relay output is not conductive.
- **Closed.** The relay output is conductive.


## 3.6 Communication

**Navigation** 📁 Expert → Communication

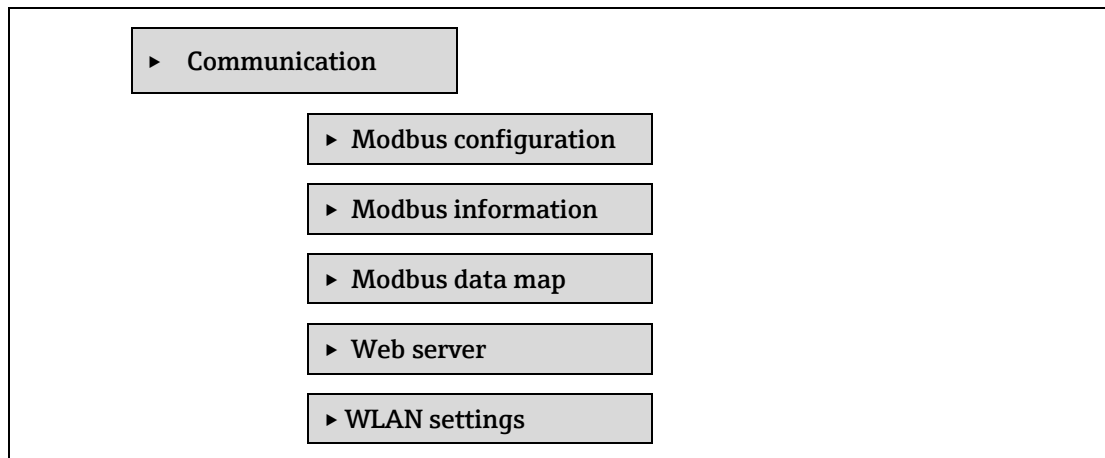

### 3.6.1 Modbus configuration

**Navigation** Expert → Communication → Modbus configuration

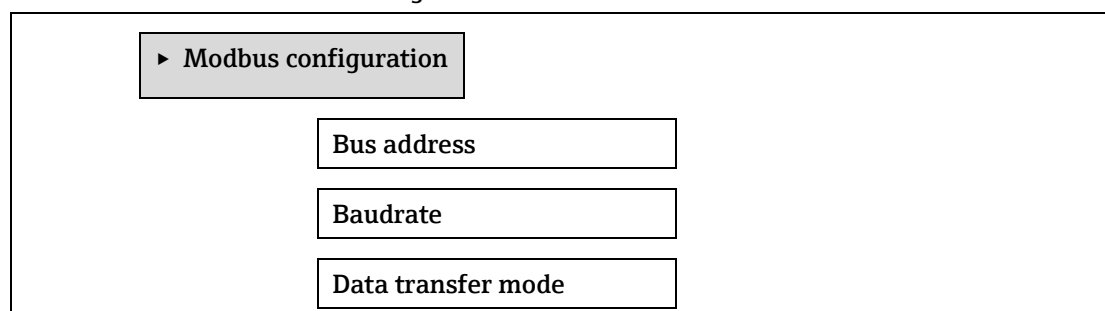

Parity
Byte order
Telegram delay
Priority IP address
Inactivity timeout
Max connections
Failure mode
Bus termination
Fieldbus writing access

---

**Bus address**



<b>Navigation</b>	Expert → Communication → Modbus configuration → Bus address
<b>Prerequisite</b>	Modbus RS485 Device
<b>Description</b>	Use this function to enter the device address.
<b>User entry</b>	1 to 247
<b>Factory setting</b>	247

---

**Baudrate**



<b>Navigation</b>	Expert → Communication → Modbus configuration → Baudrate
<b>Prerequisite</b>	Modbus RS485 Device
<b>Description</b>	Use this function to select a transmission rate.
<b>User entry</b>	<ul style="list-style-type: none"> <li>▪ 1200 BAUD</li> <li>▪ 2400 BAUD</li> <li>▪ 4800 BAUD</li> <li>▪ 9600 BAUD</li> <li>▪ 19200 BAUD</li> <li>▪ 38400 BAUD</li> <li>▪ 57600 BAUD</li> <li>▪ 115200 BAUD</li> </ul>
<b>Factory setting</b>	19200 BAUD

---

**Data transfer mode**





<b>Navigation</b>	Expert → Communication → Modbus configuration → Data transfer mode
-------------------	--

<b>Prerequisite</b>	Modbus RS485 Device
<b>Description</b>	Use this function to select the data transmission mode.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ ASCII</li> <li>▪ RTU</li> </ul>
<b>Factory setting</b>	RTU
<b>Additional information</b>	<p><i>Options</i></p> <ul style="list-style-type: none"> <li>▪ <b>ASCII.</b> Transmission of data in the form of readable ASCII characters. Error protection via LRC.</li> <li>▪ <b>RTU.</b> Transmission of data in binary form. Error protection via CRC16.</li> </ul>

---

## Parity



---

<b>Navigation</b>	  Expert → Communication → Modbus configuration → Parity
<b>Prerequisite</b>	Modbus RS485 Device
<b>Description</b>	Use this function to select the parity bit.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Odd</li> <li>▪ Even</li> <li>▪ None / 1 stop bit</li> <li>▪ None / 2 stop bits</li> </ul>
<b>Factory setting</b>	Even
<b>Additional information</b>	<p><i>Options</i></p> <p>Picklist <b>ASCII</b> option:</p> <ul style="list-style-type: none"> <li>▪ 0 = <b>Even</b> option</li> <li>▪ 1 = <b>Odd</b> option</li> </ul> <p>Picklist <b>RTU</b> option:</p> <ul style="list-style-type: none"> <li>▪ 0 = <b>Even</b> option</li> <li>▪ 1 = <b>Odd</b> option</li> <li>▪ 2 = None / 1 stop bit option</li> <li>▪ 3 = None / 2 stop bits option</li> </ul>

---


## Byte order

---

<b>Navigation</b>	  Expert → Communication → Modbus configuration → Byte order
<b>Description</b>	Use this function to select the sequence in which the bytes are transmitted. The transmission sequence must be coordinated with the Modbus master.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ 0-1-2-3</li> <li>▪ 3-2-1-0</li> <li>▪ 1-0-3-2</li> <li>▪ 2-3-0-1</li> </ul>
<b>Factory setting</b>	1-0-3-2


**Additional information**


*Description*

The byte sequence is not standardized by the Modbus protocol. However, if the host system and the measuring device do not use the same byte sequence, correct data exchange is not possible. Changing the byte sequence in the host system often requires an extensive knowledge and significant programming efforts. Endress+Hauser introduced the *Byte order parameter* →  for this reason.

This makes it possible to use the standard settings of the host system and change the byte sequence on the measuring device by trial and error. If correct data exchange cannot be achieved by changing the byte sequence, the settings for the byte sequence of the host system must be adapted accordingly.

*Byte transmission sequence*

Byte addressing, i.e., the transmission sequence of the bytes, is not specified in the Modbus specification. For this reason, it is important to coordinate or match the addressing method between the master and slave during commissioning. This can be configured in the measuring device using the *Byte order parameter* → .

The bytes are transmitted depending on the selection in the *Byte order parameter* → .

FLOAT

	Sequence			
Options	1.	2.	3.	4.
1 - 0 - 3 - 2 *	Byte 1 (MMMMMMMM)	Byte 0 (MMMMMMMM)	Byte 3 (SEEEEEEE)	Byte 2 (EMMMMMMM)
0 - 1 - 2 - 3	Byte 0 (MMMMMMMM)	Byte 1 (MMMMMMMM)	Byte 2 (EMMMMMMM)	Byte 3 (SEEEEEEE)
2 - 3 - 0 - 1	Byte 2 (EMMMMMMM)	Byte 3 (SEEEEEEE)	Byte 0 (MMMMMMMM)	Byte 1 (MMMMMMMM)
3 - 2 - 1 - 0	Byte 3 (SEEEEEEE)	Byte 2 (EMMMMMMM)	Byte 1 (MMMMMMMM)	Byte 0 (MMMMMMMM)

\* = factory setting, S = sign, E = exponent, M = mantissa

INTEGER

	Sequence	
Options	1.	2.
1 - 0 - 3 - 2 *	Byte 1 (MSB)	Byte 0 (LSB)
3 - 2 - 1 - 0		
0 - 1 - 2 - 3	Byte 0 (LSB)	Byte 1 (MSB)
2 - 3 - 0 - 1		

\* = factory setting, MSB = most significant byte, LSB = least significant byte

STRING

Presentation taking the example of a device parameter with a data length of 18 bytes.

	Sequence				
Options	1.	2.	...	17.	18.
1 - 0 - 3 - 2 *	Byte 17 (MSB)	Byte 16	...	Byte 1	Byte 0 (LSB)
3 - 2 - 1 - 0					
0 - 1 - 2 - 3	Byte 16	Byte 17 (MSB)	...	Byte 0 (LSB)	Byte 1
2 - 3 - 0 - 1					

* = factory setting, MSB = most significant byte, LSB = least significant byte
--

---

**Telegram delay**


<b>Navigation</b>	Expert → Communication → Modbus configuration → Telegram delay
<b>Prerequisite</b>	Modbus RS485 Device
<b>Description</b>	Use this function to enter a delay time after which the measuring device replies to the request telegram of the Modbus master. This allows communication to adapt to slow Modbus RS485 masters.
<b>User entry</b>	0 to 100 ms
<b>Factory setting</b>	6 ms

---

**Priority IP address**


<b>Navigation</b>	Expert → Communication → Modbus configuration → Priority IP address
<b>Prerequisite</b>	Modbus TCP Device
<b>Description</b>	The client IP address which has a guaranteed connection to the server (analyzer).
<b>User entry</b>	Signed floating-point number
<b>Factory setting</b>	0.0.0.0

---

**Inactivity timeout**


<b>Navigation</b>	Expert → Communication → Modbus configuration → Inactivity timeout
<b>Prerequisite</b>	Modbus TCP Device
<b>Description</b>	The amount of inactivity time before the client connection is closed for non-priority IP addresses.
<b>User entry</b>	0 to 99 s
<b>Factory setting</b>	0 s

---

**Max connections**


<b>Navigation</b>	Expert → Communication → Modbus configuration → Max connections
<b>Prerequisite</b>	Modbus TCP Device
<b>Description</b>	Number of connections to the Modbus server.
<b>User entry</b>	1 to 4
<b>Factory setting</b>	4



---

**Failure mode**


<b>Navigation</b>	Expert → Communication → Modbus configuration → Failure mode
<b>Description</b>	Use this function to select the measured value output in the event of a diagnostic message via Modbus communication.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ NaN value<sup>1</sup></li> <li>▪ Last valid value</li> </ul>
<b>Factory setting</b>	NaN value
<b>Additional information</b>	<p><i>Options</i></p> <ul style="list-style-type: none"> <li>▪ <b>NaN value.</b> The device outputs the NaN value<sup>1</sup>.</li> <li>▪ <b>Last valid value.</b> The device outputs the last valid measured value before the fault occurred. This effect of this parameter depends on the option selected in the <b>Assign diagnostic behavior</b> parameter.</li> </ul>

---

**Bus termination**

<b>Navigation</b>	Expert → Communication → Modbus configuration → Bus termination
<b>Prerequisite</b>	Modbus RS485 Device
<b>Description</b>	Displays whether the terminating resistor is enabled or disabled.
<b>User interface</b>	<ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ On</li> </ul>
<b>Factory setting</b>	Off
<b>Additional information</b>	<p><i>Selection</i></p> <ul style="list-style-type: none"> <li>▪ <b>Off.</b> The terminating resistor is disabled.</li> <li>▪ <b>On.</b> The terminating resistor is enabled.</li> </ul> <p>For detailed information about enabling the terminating resistor, see the <i>Operating Instructions for the device</i> → , "Enabling the terminating resistor" section.</p>

---

**Fieldbus writing access**

<b>Navigation</b>	Expert → Communication → Modbus configuration → Fieldbus writing access
<b>Description</b>	Use this function to restrict access to the measuring device via fieldbus (Modbus protocol).
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Read + write</li> <li>▪ Read only</li> </ul>
<b>Factory setting</b>	Read + write
<b>Additional information</b>	<p><i>Description</i></p> <p>If read and write protection is enabled, the parameter can only be controlled and reset via local operation. Access is no longer possible via operating tools. This does not affect cyclic measured value transmission to the higher-order system, which is always guaranteed.</p>

---


<sup>1</sup> Not a Number



*Selection*

- **Read + write.** The parameters are read and write parameters.
- **Read only.** The parameters are read only parameters.

**3.6.2 Modbus information**

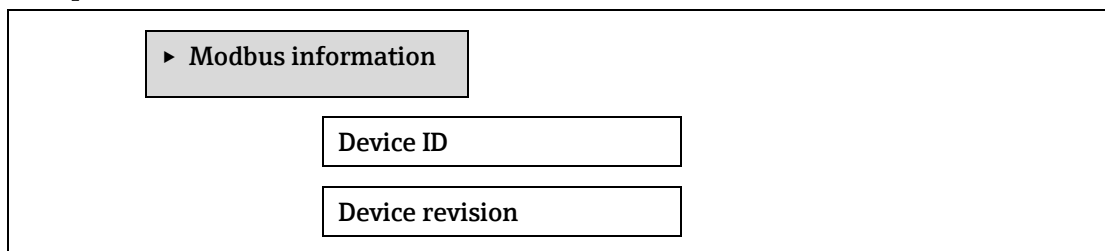**Navigation**  Expert → Communication → Modbus information



**Device ID**

**Navigation**   Expert → Communication → Modbus information → Device ID

**Description** Displays the device ID for identifying the measuring device.

**User interface** 4-digit hexadecimal number

**Device revision**


**Navigation**   Expert → Communication → Modbus information → Device revision

**Description** Displays the device revision.

**User interface** 4-digit hexadecimal number

**3.6.3 Modbus data map**

**Navigation**  Expert → Communication → Modbus data map

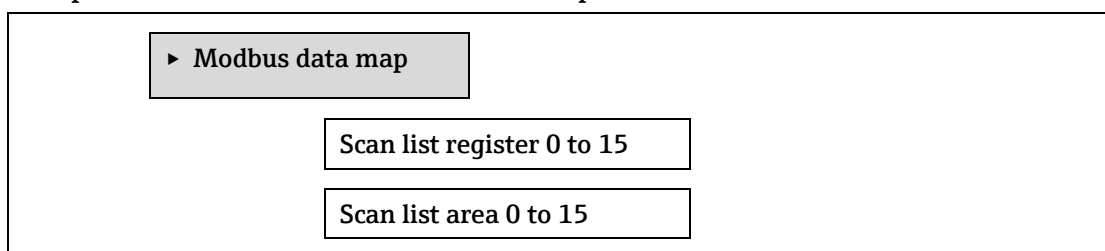

**Scan list register 0 to 15**


<b>Navigation</b>	Expert → Communication → Modbus data map → Scan list register 0 to 15
<b>Description</b>	Use this function to enter the scan list register. By entering the register address (1-based), up to 16 device parameters can be grouped by assigning them to the scan list registers 0 to 15. The data of the device parameters assigned here are read out via the register addresses 5051 to 5081.
<b>User entry</b>	1 to 65,535
<b>Factory setting</b>	1

**Scan list area 0 to 15**

<b>Navigation</b>	Expert → Communication → Modbus data map → Scan list area 0 to 15
<b>Description</b>	Use this function to enter the scan list area.
<b>User entry</b>	1 to 65,535
<b>Factory setting</b>	1

**3.6.4 Web server**

**Navigation** Expert → Communication → Web server

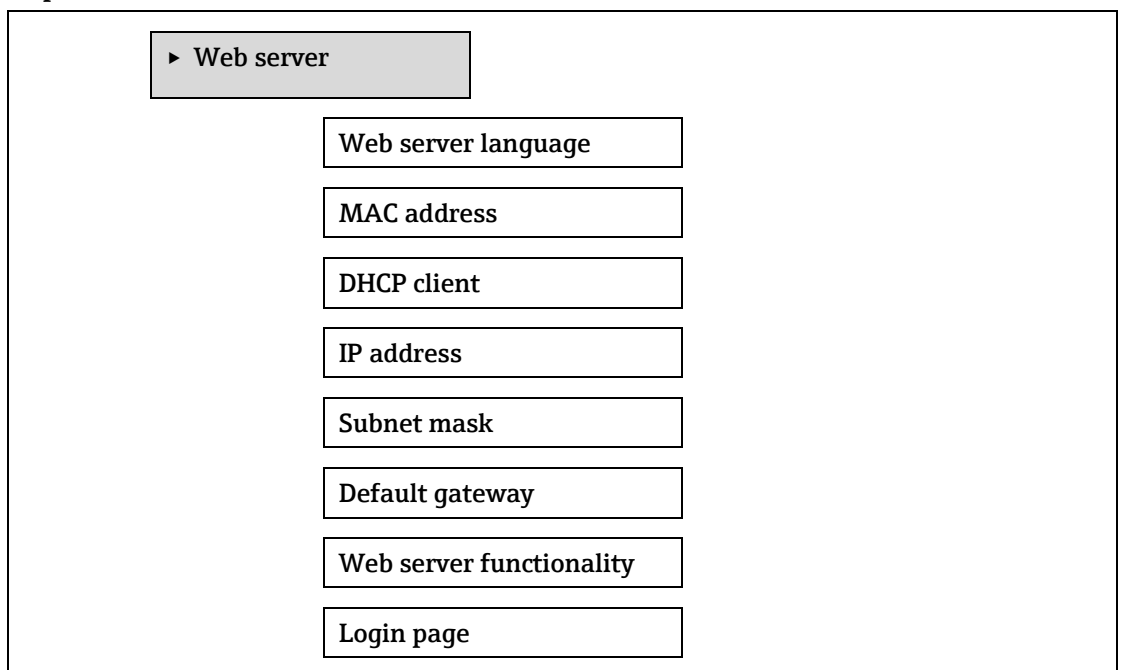**Web server language**

<b>Navigation</b>	Expert → Communication → Web server → Webserv.language
<b>Description</b>	Use this function to select the language configured for the Web server.
<b>User entry</b>	<ul style="list-style-type: none"> <li>English</li> </ul>



- Français
- Italiano
- русский язык (Russian)
- 中文 (Chinese)

**Factory setting** English

---

### MAC address

---

**Navigation**   Expert → Communication → Web server → MAC Address

**Description** Displays the MAC address of the measuring device.

**User entry** Unique 12-digit character string comprising letters and numbers.



**Factory setting** Each measuring device is given an individual address.

**Additional information** *Example*  
For the display format 00:07:05:10:01:5F

---

### DHCP client

---




**Navigation**   Expert → Communication → Web server → DHCP client

**Description** Use this function to activate and deactivate the DHCP client functionality.


**Selection**

- Off
- On

**Factory setting** Off

**Additional information** *Effect*  
If the DHCP client functionality of the web server is selected, the *IP address* → , *Subnet mask* → , and *Default gateway* →  are set automatically.



#### NOTICE

- ▶ Identification is via the MAC address of the measuring device.
- ▶ The **IP address** in the *IP address parameter* →  is ignored as long as the **DHCP client parameter** is active. This is also the case, in particular, if the DHCP server cannot be reached. The **IP address** in the parameter of the same name is only used if the **DHCP client parameter** is inactive.

---

### IP address

---

**Navigation**   Expert → Communication → Web server → IP address

**Description** Display or enter the IP address of the Web server integrated in the measuring device.

**User entry** 4 octet: 0 to 255 (in the particular octet)

**Factory setting** 192.168.1.212

---

**Subnet mask**

---



<b>Navigation</b>	Expert → Communication → Web server → Subnet mask
<b>Description</b>	Display or enter the subnet mask.
<b>User entry</b>	4 octet: 0 to 255 (in the particular octet)
<b>Factory setting</b>	255.255.255.0

---

**Default gateway**

---



<b>Navigation</b>	Expert → Communication → Web server → Default gateway
<b>Description</b>	Display or enter the Default gateway.
<b>User entry</b>	4 octet: 0 to 255 (in the particular octet)
<b>Factory setting</b>	0.0.0.0

---

**Web server functionality**

---



<b>Navigation</b>	Expert → Communication → Web server → Webserver functionality
<b>Description</b>	Use this function to switch the Web server on and off.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ HTML Off</li> <li>▪ On</li> </ul>
<b>Factory setting</b>	On
<b>Additional information</b>	<p><i>Description</i></p> <ul style="list-style-type: none"> <li>▪ <b>Off.</b> The Web server is completely disabled.</li> <li>▪ Port 80 is locked.</li> <li>▪ <b>HTML Off.</b> The HTML version of the Web server is not available.</li> <li>▪ <b>On.</b> The complete Web server functionality is available.</li> <li>▪ JavaScript is used.</li> <li>▪ The password is transferred in an encrypted state.</li> <li>▪ Any change to the password is also transferred in an encrypted state.</li> </ul>

---


**Login page**

---



<b>Navigation</b>	Expert → Communication → Web server → Login page
<b>Description</b>	Use this function to select the format of the login page.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Without header</li> <li>▪ With header</li> </ul>
<b>Factory setting</b>	With header

### 3.6.5 WLAN

Navigation  Expert → Communication → WLAN

▶ WLAN settings

WLAN

WLAN mode

SSID name

Network security

Security identification

User name

WLAN password

Connection state

Received signal strength

WLAN IP address

Gateway IP address

IP address DNS

WLAN subnet mask

WLAN MAC address

WLAN passphrase

Assign SSID name


SSID name

Select antenna

WLAN channel

---

#### WLAN

Navigation  Expert → Communication → WLAN settings → WLAN

Description Use this function to enable and disable the WLAN connection

Selection



- Disable
- Enable

**Factory setting**      *Enable*

---

### WLAN mode

---

**Navigation**              Expert → Communication → WLAN settings → WLAN mode

**Description**            Use this function to select the WLAN mode.



**Selection**              WLAN access point  
WLAN client

**Factory setting**        WLAN access point

---

### SSID name

---

**Navigation**              Expert → Communication → WLAN settings → SSID name

**Prerequisite**          The client is activated.

**Description**            Use this function to enter the user-defined SSID name (max. 32 characters) of the WLAN network.



**Selection**              -

**Factory setting**        -

---

### Network security

---

**Navigation**              Expert → Communication → WLAN settings → Network security

**Description**            Use this function to select the type of security for the WLAN interface.

**Selection**

- Unsecured
- WPA2-PSK
- EAP-PEAP with MSCHAPv2 \*
- EAP-PEAP MSCHAPv2 no server authentic. \*
- EAP-TLS (Visibility depends on order options or device settings)

**Factory setting**        WPA2-PSK

**Additional information**      Selection

- Unsecured
- Access the WLAN connection without identification.
- WPA2-PSK
- Access the WLAN connection with a network key.
- EAP-PEAP with MSCHAPv2
- Access the WLAN connection with a password-based authentication protocol.
- EAP-PEAP MSCHAPv2 no server authentic.
- Access the WLAN connection with a password-based protocol without server authentication.
- EAP-TLS
- Access the WLAN connection with a certificate-based, two-way authentication of the client and network

---

### Security identification

---



**Navigation**              Expert → Communication → WLAN settings → Security identification

**Description** Use this function to select the security settings (download via the menu: Data Management > Security > Download WLAN).

**User interface**

- Trusted issuer certificate
- Device certificate
- Device private key

#### User name



**Navigation**   Expert → Communication → WLAN settings → User name

**Description** Use this function to enter the username of the WLAN network.

**Selection** -

**Factory setting** -

#### WLAN password



**Navigation**   Expert → Communication → WLAN settings → WLAN password

**Description** Use this function to enter the WLAN password for the WLAN network.

**Selection** -

**Factory setting** -

#### Connection state

**Navigation**   Expert → Communication → WLAN settings → Connection state



**Description** The connection status is displayed

**User interface**

- Connected
- Not connected

**Factory setting** Not connected

#### Received signal strength

**Navigation**   Expert → Communication → WLAN settings → Received signal strength



**Description** Displays the signal strength received.

**Selection**

- Low
- Medium
- High

**Factory setting** High

#### WLAN IP address

**Navigation**   Expert → Communication → WLAN settings → WLAN IP address

**Description** Use this function to enter the IP address of the measuring device's WLAN connection.



**User entry** 4 octet: 0 to 255 (in the particular octet)

**Factory setting** 192.168.1.212

#### Gateway IP address



---

**Navigation**        Expert → Communication → WLAN settings → Gateway IP address

**Description**      Use this function to enter the IP address of the gateway.



**User interface**      Character string comprising numbers, letters and special characters

**Factory setting**      192.168.1.212

---

#### IP address domain name server (DNS)

---

**Navigation**        Expert → Communication → WLAN settings → IP address DNS

**Description**      Use this function to enter the IP address of the domain name server.



**Selection**      Character string comprising numbers, letters and special characters

**Factory setting**      192.168.1.212

---

#### WLAN subnet mask

---

**Navigation**        Expert → Communication → WLAN settings → WLAN subnet mask

**Description**      Use this function to enter the subnet mask.

**Selection**      4 octet: 0 to 255 (in the particular octet)

**Factory setting**      255.255.255.0

---

#### WLAN MAC address

---

**Navigation**        Expert → Communication → WLAN settings → WLAN MAC address

**Description**      Displays the media access control (MAC) address of the measuring device.

**User interface**      Unique 12-digit character string comprising letters and numbers



**Factory setting**      Each measuring device is given an individual address.

**Additional information**      *Example*  
For the display format  
00:07:05:10:01:5F

---

#### WLAN passphrase

---

**Navigation**        Expert → Communication → WLAN settings → WLAN passphrase

**Prerequisite**      The WPA2-PSK option is selected in the Security type parameter.

**Description**      Use this function to enter the network key.

**User entry**      8 to 32-digit character string comprising numbers, letters and special characters (without spaces)

**Factory setting**      Serial number of the measuring device (e.g. L100A802000)

---

#### Assign SSID name

---

**Navigation**        Expert → Communication → WLAN settings → Assign SSID name

**Description**      Use this function to select which name is used for the SSID.

**Selection**



- Device tag
- User-defined

**Factory setting** User-defined

**Additional information** *Selection*

- Device tag  
The device tag name is used as the SSID.
- User-defined  
A user-defined name is used as the SSID.

### Select antenna

**Navigation**   Expert → Communication → WLAN settings → Select antenna



**Description** Use this function to select whether the external or internal antenna is used for reception.

**Selection**

- External antenna
- Internal antenna

**Factory setting** Internal antenna

### WLAN channel

**Navigation**   Expert → Communication → WLAN settings → WLAN channel

**Description** Use this function to enter the 2.4 GHz WLAN channel.

**User entry** 1 to 11


**Factory setting** 6


**Additional information** *Description*

- It is only necessary to enter a 2.4 GHz WLAN channel if multiple WLAN devices are in use.
- If just one measuring device is in use, it is recommended to keep the factory setting.

## 3.7 Diagnostics

**Navigation**   Expert → Diagnostics

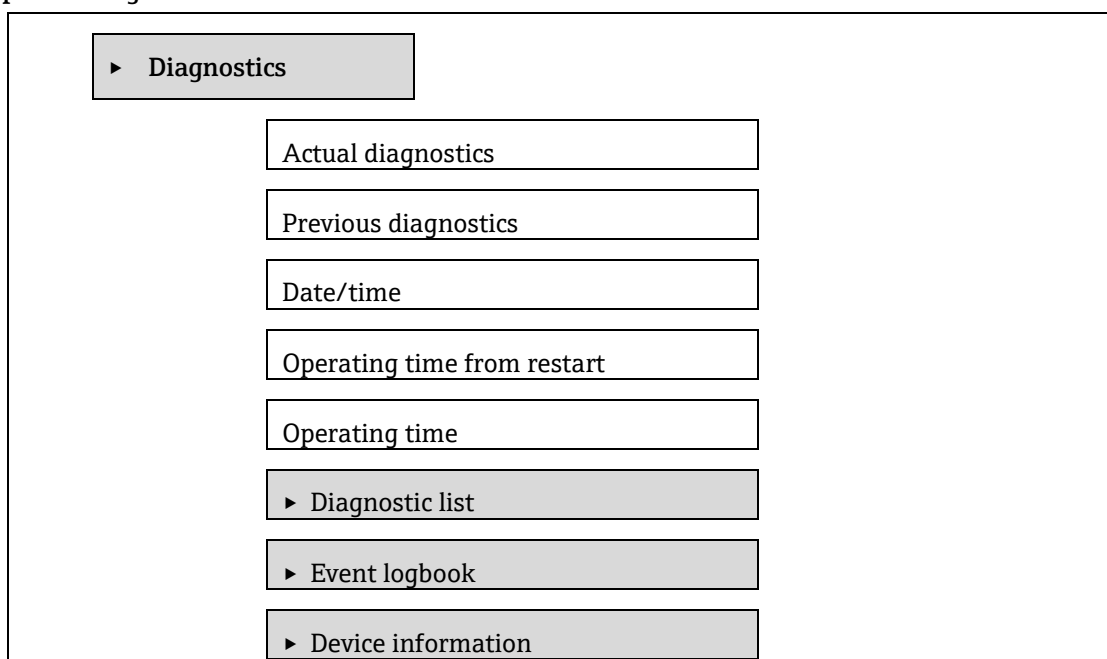

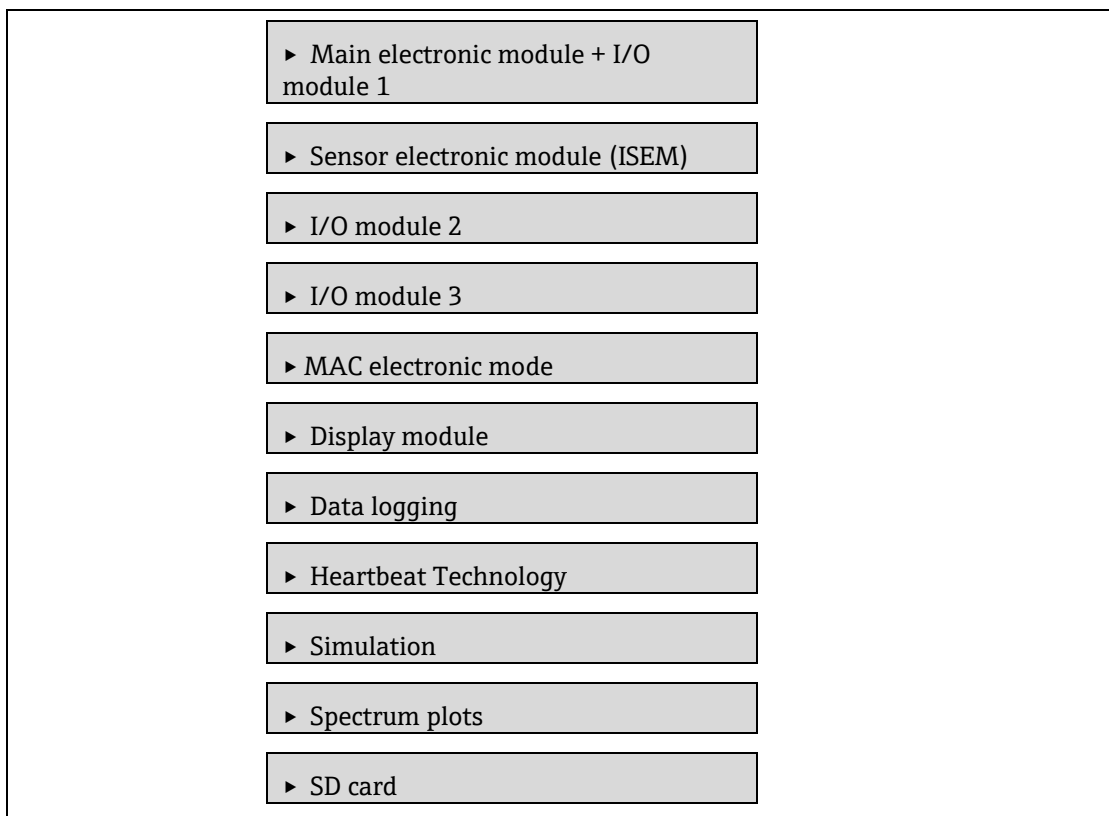


---

### Actual diagnostics

---


<b>Navigation</b>	☰☰ Expert → Diagnostics → Actual diagnostics
<b>Prerequisite</b>	A diagnostic event has occurred.
<b>Description</b>	Displays the current diagnostic message. If two or more messages occur simultaneously, the message with the highest priority is shown on the display.
<b>User interface</b>	Symbol for diagnostic behavior, diagnostic code and short message.
<b>Additional information</b>	<p><i>Display</i></p> <p>Additional pending diagnostic messages can be viewed in the <i>Diagnostic list Submenu</i> → ☰.</p> <p>Via the local display: the time stamp and corrective measures referring to the cause of the diagnostic message can be accessed via the ☰ key.</p> <p><i>Example</i></p> <p>For the display format:</p> <p>⊗F271 Main electronics failure</p>

---

### Previous diagnostics

---

<b>Navigation</b>	☰☰ Expert → Diagnostics → Previous diagnostics
<b>Prerequisite</b>	Two diagnostic events have already occurred.
<b>Description</b>	Displays the diagnostic message that occurred before the current message.
<b>User interface</b>	0 to 65,535

**Additional information** *Display*  
Via the local display: the time stamp and corrective measures referring to the cause of the diagnostic message can be accessed via the  key.

*Example*

For the display format:

 F271 Main electronics failure

**Date/time**

**Navigation**   Expert → Diagnostics → Date/time



**Description** Current date and time of the analyzer

**User interface**

- dd.mm.yy hh:mm
- mm.dd.yy hh:mm am/pm
- mm/dd/yy hh:mm
- mm/dd/yy hh:mm am/pm

**Additional information** The input must match the date/time format selected otherwise it will be rejected. In addition, the analyzer does not account for time zones or daylight saving time.



**Operating time from restart**

**Navigation**   Expert → Diagnostics → Operating time from restart

**Description** Use this function to display the time the device has been in operation since the last device restart.

**User interface** Days (d), hours (h), minutes (m) and seconds (s)

**Operating time**

**Navigation**   Expert → Diagnostics → Operating time



**Description** Use this function to display the length of time the device has been in operation.


**User interface** Days (d), hours (h), minutes (m) and seconds (s)


**Additional information** *User interface*

The maximum number of days is 9999, which is equivalent to 27 years.

### 3.7.1 Diagnostic list

**Navigation**   Expert → Diagnostics → Diagnostic list

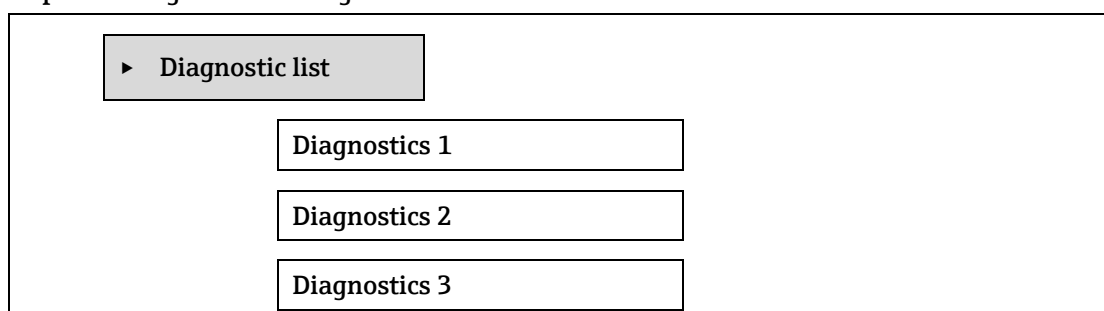

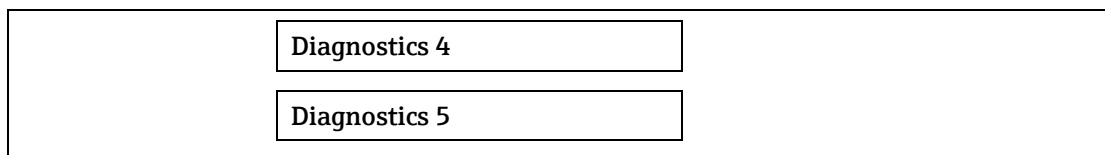


---

### Diagnostics 1

---

<b>Navigation</b>	Expert → Diagnostics → Diagnostic list → Diagnostics 1
<b>Description</b>	Displays the current diagnostics message with the highest priority.
<b>User interface</b>	0 to 65,535
<b>Additional information</b>	<p><i>Display</i></p> <p>Via the local display: the time stamp and corrective measures referring to the cause of the diagnostic message can be accessed via the  key.</p> <p><i>Examples</i></p> <p>For the display format:</p> <ul style="list-style-type: none"> <li> F 271 Main electronics failure</li> <li> F276 I/O module failure</li> </ul>

---

### Timestamp 1

---

<b>Navigation</b>	Expert → Diagnostics → Diagnostic list → Timestamp
<b>Description</b>	Displays the operating time when the diagnostic message with the highest priority occurred.
<b>User interface</b>	Days (d), hours (h), minutes (m) and seconds (s)
<b>Additional information</b>	<p><i>Display</i></p> <p>The diagnostic message can be viewed via the <i>Diagnostics 1 parameter</i> → .</p> <p><i>Example</i></p> <p>For the display format:</p> <p>24d12h13m00s</p>

---

### Diagnostics 2



---

<b>Navigation</b>	Expert → Diagnostics → Diagnostic list → Diagnostics 2
<b>Description</b>	Displays the current diagnostics message with the second-highest priority.
<b>User interface</b>	0 to 65,535
<b>Additional information</b>	<p><i>Display</i></p> <p>Via the local display: the time stamp and corrective measures referring to the cause of the diagnostic message can be accessed via the  key.</p> <p><i>Examples</i></p> <p>For the display format:</p> <ul style="list-style-type: none"> <li> F271 Main electronics failure</li> <li> F276 I/O module failure</li> </ul>

---

**Timestamp 2**





---

<b>Navigation</b>	 Expert → Diagnostics → Diagnostic list → Timestamp
<b>Description</b>	Displays the operating time when the diagnostic message with the second-highest priority occurred.
<b>User interface</b>	Days (d), hours (h), minutes (m) and seconds (s)
<b>Additional information</b>	<p><i>Display</i></p> <p>The diagnostic message can be viewed via the <i>Diagnostics 2 parameter</i> → .</p> <p><i>Example</i></p> <p>For the display format: 24d12h13m00s</p>

---

**Diagnostics 3**




---

<b>Navigation</b>	  Expert → Diagnostics → Diagnostic list → Diagnostics 3
<b>Description</b>	Displays the current diagnostics message with the third-highest priority.
<b>User interface</b>	0 to 65,535
<b>Additional information</b>	<p><i>Display</i></p> <p>Via the local display: the time stamp and corrective measures referring to the cause of the diagnostic message can be accessed via the  key.</p> <p><i>Examples</i></p> <p>For the display format:</p> <ul style="list-style-type: none"> <li>⊗ F271 Main electronics failure</li> <li>⊗ F276 I/O module failure</li> </ul>

---

**Timestamp 3**




---


<b>Navigation</b>	 Expert → Diagnostics → Diagnostic list → Timestamp
<b>Description</b>	Displays the operating time when the diagnostic message with the third-highest priority occurred.
<b>User interface</b>	Days (d), hours (h), minutes (m) and seconds (s)
<b>Additional information</b>	<p><i>Display</i></p> <p>The diagnostic message can be viewed via the <i>Diagnostics 3 parameter</i> → .</p> <p><i>Example</i></p> <p>For the display format: 24d12h13m00s</p>

---

**Diagnostics 4**


---



<b>Navigation</b>	  Expert → Diagnostics → Diagnostic list → Diagnostics 4
<b>Description</b>	Displays the current diagnostics message with the fourth-highest priority.

<b>User interface</b>	0 to 65,535
<b>Additional information</b>	<p><i>Display</i></p> <p>Via the local display: the time stamp and corrective measures referring to the cause of the diagnostic message can be accessed via the  key.</p> <p><i>Examples</i></p> <p>For the display format:</p> <ul style="list-style-type: none"> <li>⊗ F271 Main electronics failure</li> <li>⊗ F276 I/O module failure</li> </ul>

---

#### Timestamp 4




---

<b>Navigation</b>	 Expert → Diagnostics → Diagnostic list → Timestamp
<b>Description</b>	Displays the operating time when the diagnostic message with the fourth-highest priority occurred.
<b>User interface</b>	Days (d), hours (h), minutes (m) and seconds (s)
<b>Additional information</b>	<p><i>Display</i></p> <p>The diagnostic message can be viewed via the <i>Diagnostics 4 parameter</i> → .</p> <p><i>Example</i></p> <p>For the display format:</p> <p>24d12h13m00s</p>

---

#### Diagnostics 5


---


<b>Navigation</b>	  Expert → Diagnostics → Diagnostic list → Diagnostics 5
<b>Description</b>	Displays the current diagnostics message with the fifth-highest priority.
<b>User interface</b>	Symbol for diagnostic behavior, diagnostic code and short message.
<b>Additional information</b>	<p><i>Display</i></p> <p>Via the local display: the time stamp and corrective measures referring to the cause of the diagnostic message can be accessed via the  key.</p> <p><i>Examples</i></p> <p>For the display format:</p> <ul style="list-style-type: none"> <li>⊗ F271 Main electronics failure</li> <li>⊗ F276 I/O module failure</li> </ul>

---

#### Timestamp 5

---


<b>Navigation</b>	 Expert → Diagnostics → Diagnostic list → Timestamp
<b>Description</b>	Displays the operating time when the diagnostic message with the fifth-highest priority occurred.
<b>User interface</b>	Days (d), hours (h), minutes (m) and seconds (s)


<b>Additional information</b>	<p><i>Display</i></p> <p>The diagnostic message can be viewed via the <i>Diagnostics 5 parameter</i> → .</p> <p><i>Example</i></p> <p>For the display format: 24d12h13m00s</p>
-------------------------------	---

### 3.7.2 Event logbook

#### Viewing event messages


Event messages are displayed in chronological order. The event history includes both diagnostic events and information events. The symbol in front of the timestamp indicates whether the event has started or ended.

**Navigation**  Expert → Diagnostics → Event logbook

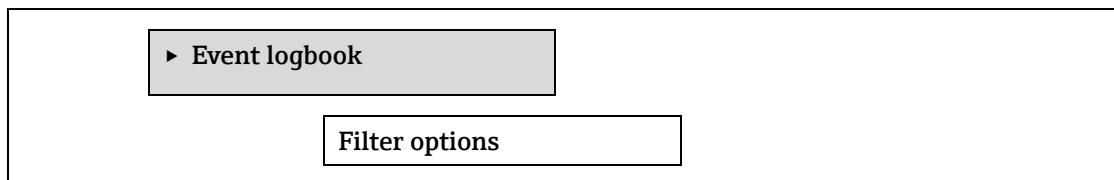



---


#### Filter options

<b>Navigation</b>	 Expert → Diagnostics → Event logbook → Filter options
<b>Description</b>	Use this function to select the category whose event messages are displayed in the event logbook of the local display.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ All</li> <li>▪ Failure (F)</li> <li>▪ Function check (C)</li> <li>▪ Out of specification (S)</li> <li>▪ Maintenance required (M)</li> <li>▪ Information (I)</li> </ul>
<b>Factory setting</b>	All
<b>Additional information</b>	<p><i>Description</i></p> <p>The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107:</p> <p>F = Failure C = Function Check S = Out of Specification M = Maintenance Required I = Information</p>




### 3.7.3 Device information

Navigation  Expert → Diagnostics → Device info

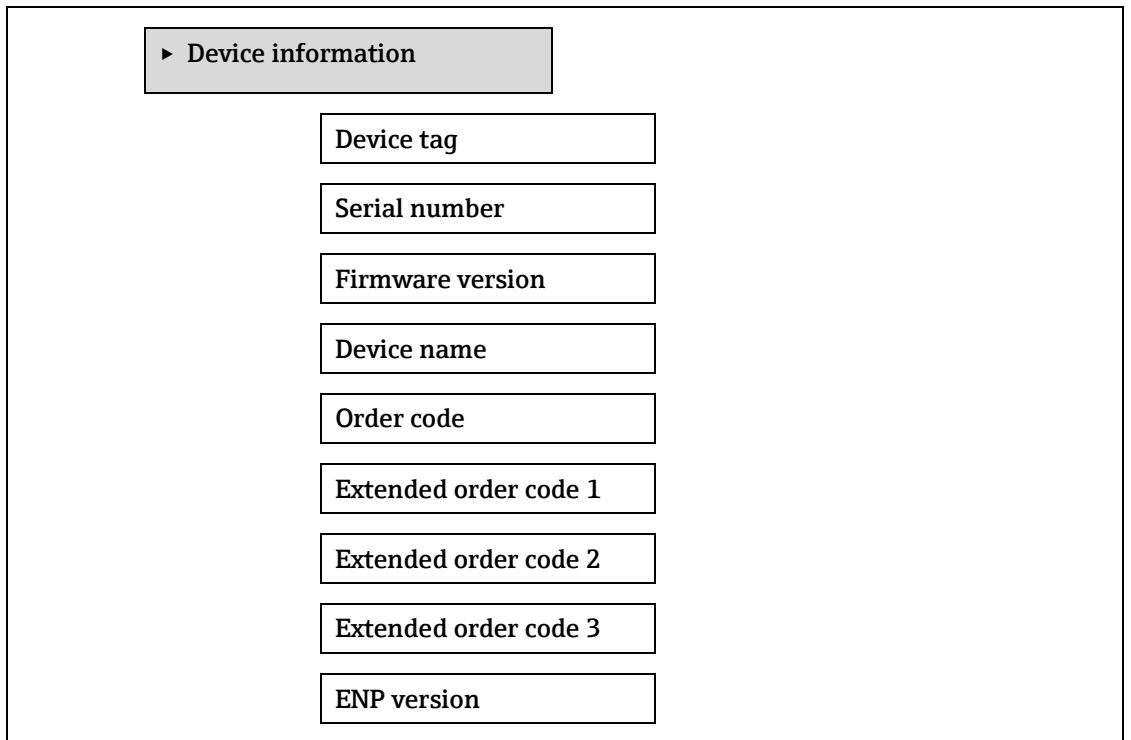


---

#### Device tag


**Navigation**  Expert → Diagnostics → Device information → Device tag

**Description** Displays a unique name for the measuring point so it can be identified quickly within the user’s facility. It is displayed in the header.

**User interface** Max. 32 characters, such as letters, numbers or special characters (e.g., @, %, /).

**Factory setting** H<sub>2</sub>O Analyzer

**Additional information** *User interface*

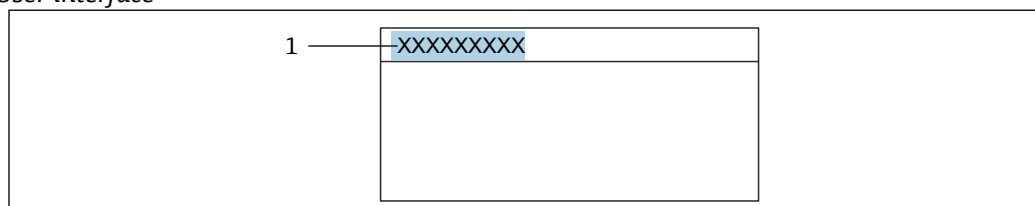


A0029422

1 Position of the header text on the display

The number of characters displayed depends on the characters used.

---

#### Serial number

**Navigation**  Expert → Diagnostics → Device information → Serial number

**Description** Displays the serial number of the measuring device.  
The number can be found on the nameplate of the analyzer.



**User interface** Max. 11-digit character string comprising letters and numbers.

**Additional information** *Description*

**Uses of the serial number:**

- To identify the measuring device quickly, e.g., when contacting Endress+Hauser.
- To obtain specific information on the measuring device using the Device Viewer:  
[www.endress.com/deviceviewer](http://www.endress.com/deviceviewer)

### Firmware version

**Navigation**   Expert → Diagnostics → Device information → Firmware version



**Description** Displays the device firmware version installed.

**User interface** Character string in the format xx.yy.zz

**Additional information** *Display*  
The Firmware version is also located:

- On the title page of the Operating instructions
- On the transmitter nameplate



### Device name

**Navigation**   Expert → Diagnostics → Device information → Device name

**Description** Displays the name of the transmitter. It can also be found on the nameplate of the transmitter.

**User interface** H<sub>2</sub>O Analyzer

### Order code

**Navigation**   Expert → Diagnostics → Device information → Order code

**Description** Displays the device order code.



**User interface** Character string composed of letters, numbers and certain punctuation marks (e.g., /).

**Additional information** *Description*  
The order code can be found on the nameplate of the sensor and transmitter in the "Order code" field.  
The order code is generated from the extended order code through a process of reversible transformation. The extended order code indicates the attributes for all the device features in the product structure. The device features are not directly readable from the order code.


**Uses of the order code:**




- To order an identical spare device.
- To identify the device quickly and easily, e.g., when contacting Endress+Hauser.


### Extended order code 1




**Navigation**   Expert → Diagnostics → Device information → Extended order code 1

<b>Description</b>	Displays the first part of the extended order code. Due to length restrictions, the extended order code is split into a maximum of 3 parameters.
<b>User interface</b>	Character string
<b>Additional information</b>	<i>Description</i> The extended order code indicates the version of all the features of the product structure for the measuring device and thus uniquely identifies the measuring device.



**Extended order code 2** 

<b>Navigation</b>	  Expert → Diagnostics → Device information → Extended order code 2
<b>Description</b>	Displays the second part of the extended order code.
<b>User interface</b>	Character string
<b>Additional information</b>	For additional information, see <i>Extended order code 1 parameter</i> →  .

**Extended order code 3** 


<b>Navigation</b>	  Expert → Diagnostics → Device information → Extended order code 3
<b>Description</b>	Displays the third part of the extended order code.
<b>User interface</b>	Character string
<b>Additional information</b>	For additional information, see <i>Extended order code 1 parameter</i> →  .


**ENP version**

<b>Navigation</b>	  Expert → Diagnostics → Device information → ENP version
<b>Description</b>	Displays the version of the electronic nameplate.
<b>User interface</b>	Character string
<b>Factory setting</b>	2.02.00
<b>Additional information</b>	<i>Description</i> This electronic nameplate stores a data record for device identification that includes more data than the nameplates attached to the outside of the device.

**3.7.4 Main electronic module + I/O module 1**

**Navigation**   Expert → Diagnostics → Main electronic +I/O module 1

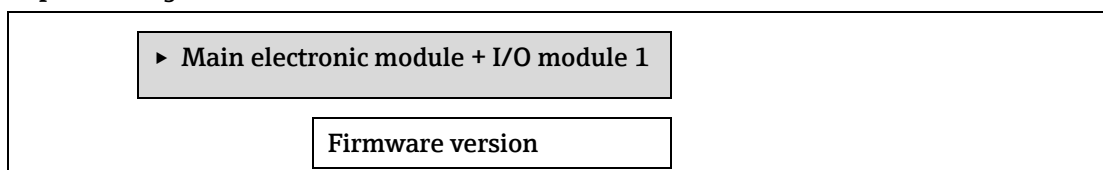

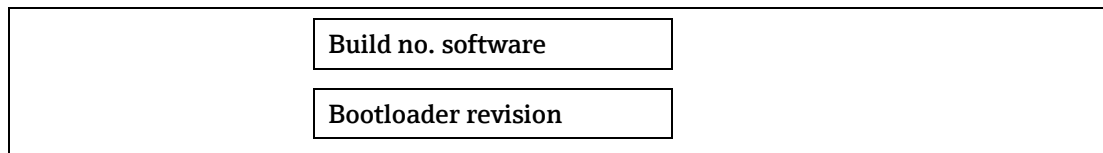


---

### Firmware version

---

**Navigation**      Expert → Diagnostics → Main electronic +I/O module 1 → Firmware version

**Description**      Use this function to display the firmware revision of the module.

**User interface**      Positive integer

---

### Build no. software

---

**Navigation**      Expert → Diagnostics → Main electronic +I/O module 1 → Build no. software

**Description**      Use this function to display the software build number of the module.

**User interface**      Positive integer

---

### Bootloader revision

---


**Navigation**      Expert → Diagnostics → Main electronic +I/O module 1 → Bootloader revision

**Description**      Use this function to display the bootloader revision of the software.

**User interface**      Positive integer

## 3.7.5 Sensor electronic module (ISEM)

**Navigation**      Expert → Diagnostics → Sens. Electronic

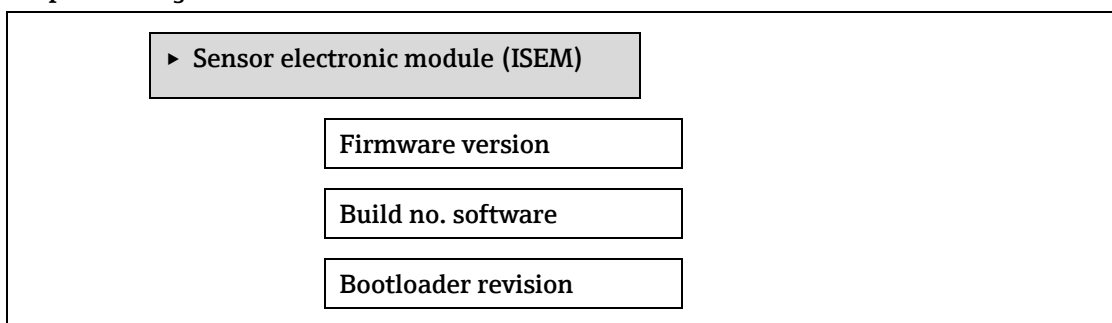


---

### Firmware version

---

**Navigation**      Expert → Diagnostics → Sensor electronic module (ISEM) → Firmware version

**Description**      Use this function to display the firmware revision of the module.

**User interface**      Positive integer

---

**Build no. software**

---

<b>Navigation</b>	🔍📄 Expert → Diagnostics → Sensor electronic module (ISEM) → Build no. software
<b>Description</b>	Use this function to display the software build number of the module.
<b>User interface</b>	Positive integer

---


**Bootloader revision**

---

<b>Navigation</b>	🔍📄 Expert → Diagnostics → Sensor electronic module (ISEM) → Bootloader rev.
<b>Description</b>	Use this function to display the bootloader revision of the software.
<b>User interface</b>	Positive integer

### 3.7.6 I/O module 2

**Navigation** 🔍📄 Expert → Diagnostics → I/O module 2

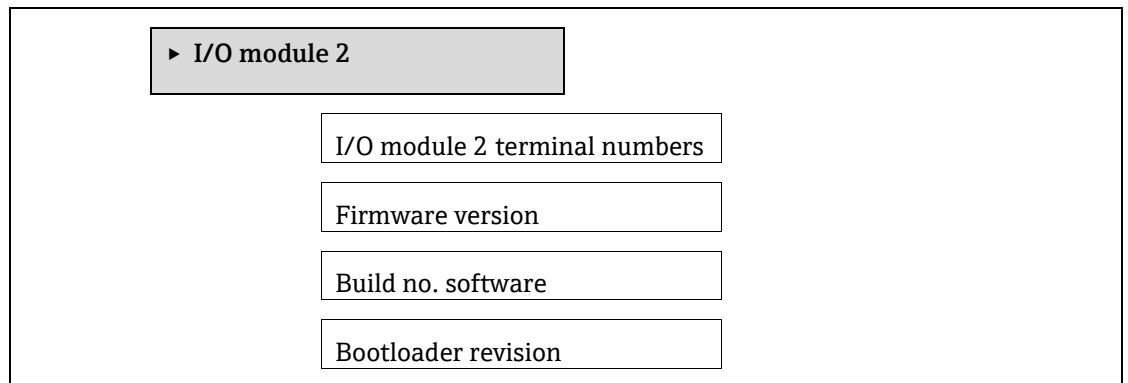

---

**I/O module 2 terminal numbers**

---

<b>Navigation</b>	🔍📄 Expert → Diagnostics → I/O module 2 → I/O 2 terminals
<b>Description</b>	Displays the terminal numbers used by the I/O module.
<b>User interface</b>	<ul style="list-style-type: none"> <li>▪ Not used</li> <li>▪ 26-27 (I/O 1)</li> <li>▪ 24-25 (I/O 2)</li> <li>▪ 22-23 (I/O 3)</li> </ul>

---

**Firmware version**



---

<b>Navigation</b>	🔍📄 Expert → Diagnostics → I/O module 2 → Firmware version
<b>Description</b>	Use this function to display the firmware revision of the module.
<b>User interface</b>	Positive integer

---

**Build no. software**



---

**Navigation**   Expert → Diagnostics → I/O module 2 → Build no. software**Description** Use this function to display the software build number of the module.**User interface** Positive integer

---




**Bootloader revision**

---

**Navigation**   Expert → Diagnostics → I/O module 2 → Bootloader rev.**Description** Use this function to display the bootloader revision of the software.**User interface** Positive integer

---

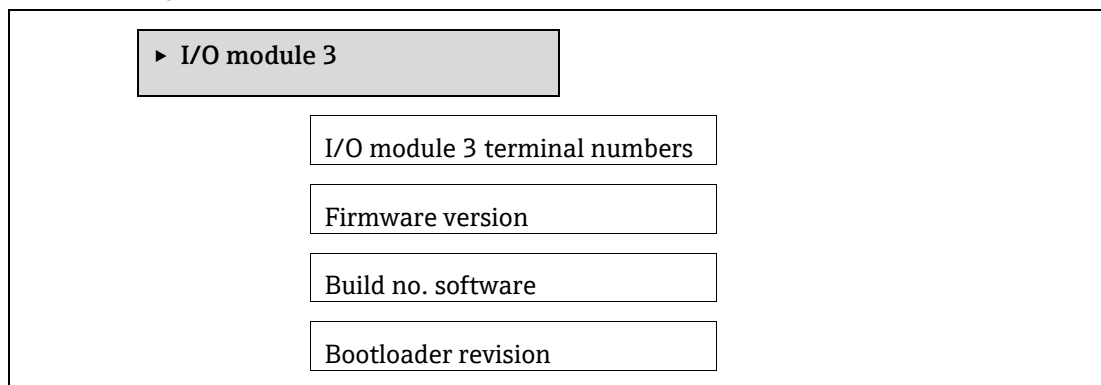

### 3.7.7 I/O module 3

**Navigation**   Expert → Diagnostics → I/O module 3

---

**I/O module 3 terminal numbers**

---



**Navigation**   Expert → Diagnostics → I/O module 3 → I/O 3 terminals**Description** Displays the terminal numbers used by the I/O module.**User interface**

- Not used
- 26-27 (I/O 1)
- 24-25 (I/O 2)
- 22-23 (I/O 3)

---

**Firmware version**



---

**Navigation**   Expert → Diagnostics → I/O module 3 → Firmware version**Description** Use this function to display the firmware revision of the module.**User interface** Positive integer

---



**Build no. software**

---



**Navigation**   Expert → Diagnostics → I/O module 3 → Build no. software


**Description** Use this function to display the software build number of the module.  
**User interface** Positive integer

**Bootloader revision**



**Navigation**   Expert → Diagnostics → I/O module 3 → Bootloader rev.  
**Description** Use this function to display the bootloader revision of the software.  
**User interface** Positive integer

**3.7.8 MAC electronic module (ISEM)**

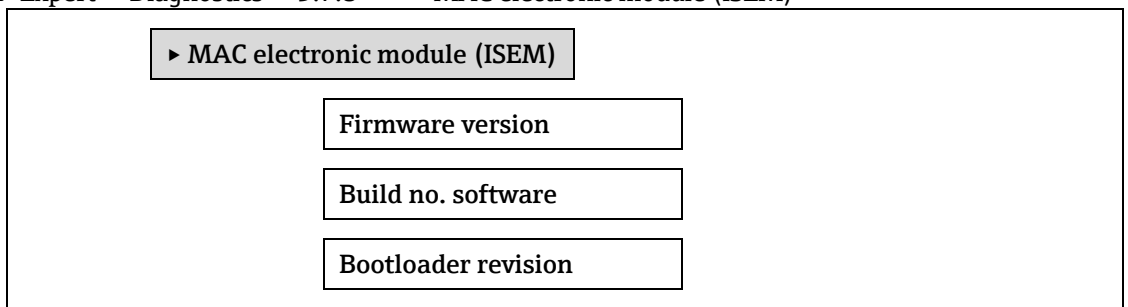

*Navigation*   Expert → Diagnostics → 3.7.8 MAC electronic module (ISEM)





**Firmware version**

**Navigation**   Expert → Diagnostics → Display module → Firmware version  
**Description** Use this function to display the firmware revision of the module.  
**User interface** Positive integer



**Build no. software**


**Navigation**   Expert → Diagnostics → Display module → Build no. software  
**Description** Use this function to display the software build number of the module.  
**User interface** Positive integer

**Bootloader revision**

**Navigation**   Expert → Diagnostics → Display module → Bootloader rev.  
**Description** Use this function to display the bootloader revision of the software.  
**User interface** Positive integer



### 3.7.9 Display module

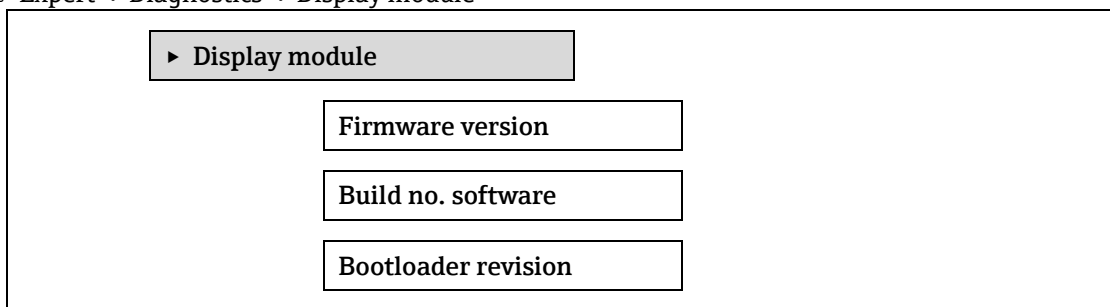Navigation   Expert → Diagnostics → Display module




---

#### Firmware version



Navigation   Expert → Diagnostics → Display module → Firmware version

Description Use this function to display the firmware revision of the module.

User interface Positive integer

---

#### Build no. software



Navigation   Expert → Diagnostics → Display module → Build no. software

Description Use this function to display the software build number of the module.

User interface Positive integer

---


#### Bootloader revision

Navigation   Expert → Diagnostics → Display module → Bootloader rev.

Description Use this function to display the bootloader revision of the software.


User interface Positive integer

### 3.7.10 Data logging

Navigation  Expert → Diagnostics → Data logging

#### NOTICE

► This menu is available through the web server only. The analyzer's local display does not support charts.

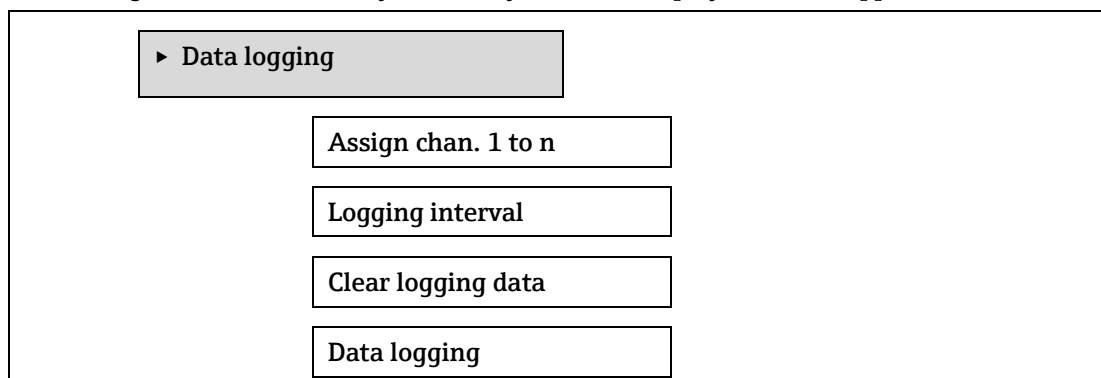



Logging delay
Data log.control
Data log. status
Logging duration

---

**Assign channel 1 to n**


**Navigation** Expert → Diagnostics → Data logging → Assign channel 1 to n

**Description** Use this function to select a process variable for the data logging channel.

- Selection**
- Off
  - Concentration
  - Cell gas pressure
  - Cell gas temperature
  - Dew point 1
  - Dew point 2
  - Current output 1
  - Current output 2
  - Flow switch state

**Factory setting** Off

**Additional information** *Description*  
 With the extended HistoROM a total of 1000 measured values can be logged. This means:

- 1000 data points if 1 logging channel is used
- 500 data points if 2 logging channels are used
- 333 data points if 3 logging channels are used
- 250 data points if 4 logging channels are used

Once the maximum number of data points is reached, the oldest data points in the data log are cyclically overwritten in such a way that the last 1000, 500, 333 or 250 measured values are always in the log (ring memory principle).

**NOTICE**

- ▶ The log contents are cleared if the option selected is changed.

---

**Logging interval**


**Navigation** Expert → Diagnostics → Data logging → Logging interval

**Description** Use this function to enter the logging interval  $T_{log}$  for data logging. This value defines the time interval between the individual data points in the memory.

**User entry** 0.1 to 3600.0 s

**Factory setting** 1.0 s

**Additional information** *Description*  
 This defines the interval between the individual data points in the data log, and thus the

maximum loggable process time  $T_{log}$ :

- If 1 logging channel is used:  $T_{log} = 1000 \times t_{log}$
- If 2 logging channels are used:  $T_{log} = 500 \times t_{log}$
- If 3 logging channels are used:  $T_{log} = 333 \times t_{log}$
- If 4 logging channels are used:  $T_{log} = 250 \times t_{log}$

Once this time elapses, the oldest data points in the data log are cyclically overwritten such that a time of  $T_{log}$  always remains in the memory (ring memory principle).

#### NOTICE

- ▶ The log contents are cleared if the length of the logging interval is changed.





#### Example

If 1 logging channel is used:

- $T_{log} = 1000 \times 1 \text{ s} = 1\,000 \text{ s} \approx 15 \text{ min}$
- $T_{log} = 1000 \times 10 \text{ s} = 10\,000 \text{ s} \approx 3 \text{ h}$
- $T_{log} = 1000 \times 80 \text{ s} = 80\,000 \text{ s} \approx 1 \text{ d}$
- $T_{log} = 1000 \times 3\,600 \text{ s} = 3\,600\,000 \text{ s} \approx 41 \text{ d}$





---

## Clear logging data

<b>Navigation</b>	<ul style="list-style-type: none"> <li>  Diagnostics → Data logging → Clear logging</li> <li>  Expert → Diagnostics → Data logging → Clear logging</li> </ul>
<b>Description</b>	Use this function to clear the entire logging data.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Cancel</li> <li>▪ Clear data</li> </ul>
<b>Factory setting</b>	Cancel
<b>Additional information</b>	<p><i>Selection</i></p> <ul style="list-style-type: none"> <li>▪ <b>Cancel.</b> The data is not cleared. All the data is retained.</li> <li>▪ <b>Clear data.</b> The logging data is cleared. The logging process starts from the beginning.</li> </ul>

---

## Data logging

<b>Navigation</b>	<ul style="list-style-type: none"> <li>  Diagnostics → Data logging → Data logging</li> <li>  Expert → Diagnostics → Data logging → Data logging</li> </ul>
<b>Description</b>	Use this function to select the data logging method.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Overwriting</li> <li>▪ Not overwriting</li> </ul>
<b>Factory setting</b>	Overwriting
<b>Additional information</b>	<p><i>Selection</i></p> <ul style="list-style-type: none"> <li>▪ <b>Overwriting.</b> The device memory applies the FIFO<sup>1</sup> principle.</li> </ul>







<sup>1</sup> FIFO = First in, first out data storage

- **Not overwriting.** Data logging is canceled if the measured value memory is full (single shot).

---

### Logging delay






---

<b>Navigation</b>	<ul style="list-style-type: none"> <li>  Diagnostics → Data logging → Logging delay</li> <li>  Expert → Diagnostics → Data logging → Logging delay</li> </ul>
<b>Prerequisite</b>	In the <i>Data logging parameter</i> →  , the <b>Not overwriting</b> option is selected.
<b>Description</b>	Use this function to enter the time delay for measured value logging.
<b>User entry</b>	0 to 999 h
<b>Factory setting</b>	0 h
<b>Additional information</b>	<p><i>Description</i></p> <p>Once data logging has been started with the <i>Data logging control parameter</i> → , the device does not save any data for the duration of the delay time entered.</p>

---

### Data logging control






---

<b>Navigation</b>	<ul style="list-style-type: none"> <li>  Diagnostics → Data logging → Data logging control</li> <li>  Expert → Diagnostics → Data logging → Data logging control</li> </ul>
<b>Prerequisite</b>	In the <i>Data logging parameter</i> →  , the <b>Not overwriting</b> option is selected.
<b>Description</b>	Use this function to start and stop measured value logging.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ None</li> <li>▪ Delete + start</li> <li>▪ Stop</li> </ul>
<b>Factory setting</b>	None
<b>Additional information</b>	<p><i>Selection</i></p> <ul style="list-style-type: none"> <li>▪ <b>None.</b> Initial measured value logging status.</li> <li>▪ <b>Delete + start.</b> All the measured values recorded for all the channels are deleted and measured value logging starts again.</li> <li>▪ <b>Stop.</b> Measured value logging is stopped.</li> </ul>

---

### Data logging status

---





<b>Navigation</b>	<ul style="list-style-type: none"> <li>  Diagnostics → Data logging → Data log. status</li> <li>  Expert → Diagnostics → Data logging → Data log. status</li> </ul>
<b>Prerequisite</b>	In the <i>Data logging parameter</i> →  , the <b>Not overwriting</b> option is selected.
<b>Description</b>	Displays the measured value logging status.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Done</li> <li>▪ Delay active</li> <li>▪ Active</li> <li>▪ Stopped</li> </ul>


**Factory setting** Done

**Additional information** Selection

- **Done.** Measured value logging has been performed and completed successfully.
- **Delay active.** Measured value logging has been started but the logging interval has not yet elapsed.
- **Active.** The logging interval has elapsed, and measured value logging is active.
- **Stopped.** Measured value logging is stopped.

### Logging duration

**Navigation**   Diagnostics → Data logging → Logging duration  
  Expert → Diagnostics → Data logging → Logging duration

**Prerequisite** In the *Data logging parameter* → , the **Not overwriting** option is selected.



**Description** Displays the total logging duration.


**Selection** Positive floating-point number

**Factory setting** 0 s



### 3.7.11 Heartbeat Technology


For detailed information on the parameter descriptions for the **Heartbeat Verification+Monitoring**, refer to *Heartbeat technology J22 and JT33 TDLAS gas analyzers Special Documentation (SD02912C)*.

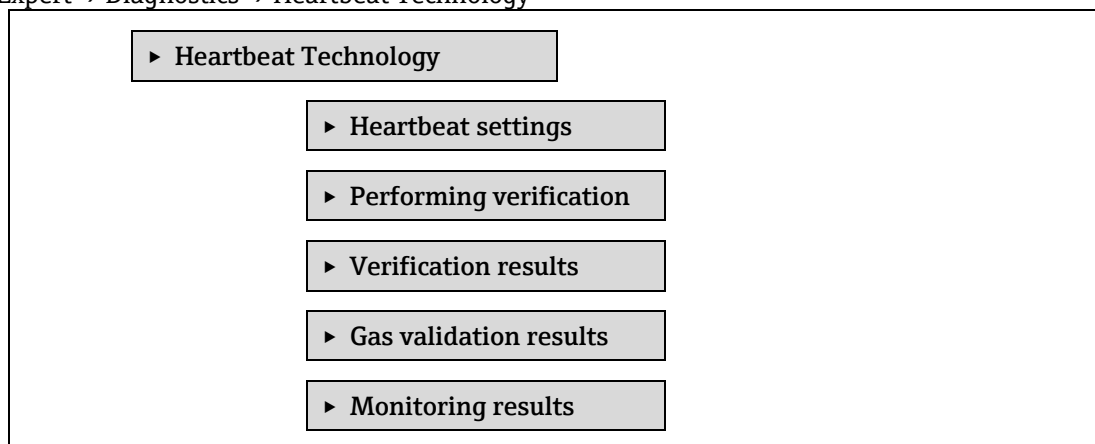**Navigation**   Expert → Diagnostics → Heartbeat Technology



#### Heartbeat settings submenu

**Navigation**   Expert → Diagnostics → Heartbeat Technology → Heartbeat settings

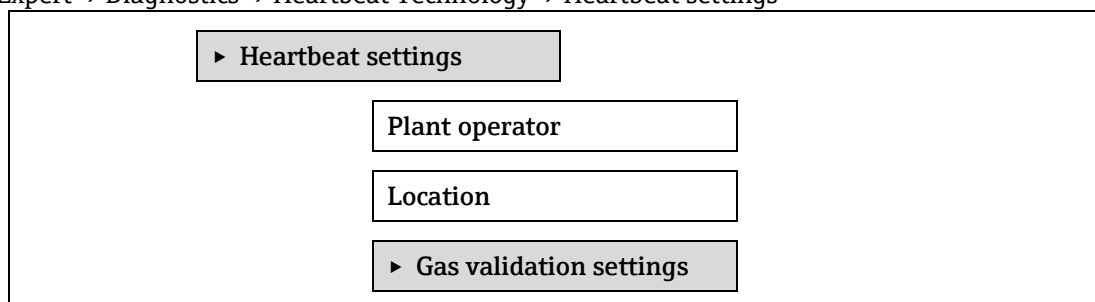

**Plant operator**



- Navigation**      Expert → Diagnostics → Heartbeat Technology → Heartbeat settings → Plant operator
- Description**      Use this function to enter the facility operator.
- User entry**      Max. 32 characters such as letters, numbers, or special characters (e.g., @, %, /).

**Location**



- Navigation**      Expert → Diagnostics → Heartbeat Technology → Heartbeat settings → Location
- Description**      Use this function to enter the location.
- User entry**      Max. 32 characters such as letters, numbers, or special characters (e.g., @, %, /).

**Gas validation settings submenu**

*Navigation*      Expert → Diagnostics → Heartbeat Technology → Heartbeat settings → Gas validation settings

▶ Gas validation settings

Select validation calibration

Validation Type

Num Validations

Validation gas purge time

Meas. duration

Validation gas information

Validation 1 to n  
concentration target

Validation 1 to n allowance

Scheduled validation

Validation interval day

Validation start hour

Last scheduled validation

Next scheduled validation

Start validation

**Select validation calibration**

<b>Navigation</b>	Expert → Diagnostics → Heartbeat Technology → Heartbeat settings → Gas validation settings → Select validation calibration
<b>Description</b>	Select the calibration for validation. It should closely match the composition of the validation gas.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ 1</li> <li>▪ 2</li> <li>▪ 3</li> <li>▪ 4</li> </ul>
<b>Factory setting</b>	1

**Validation Type**

<b>Navigation</b>	Expert → Diagnostics → Heartbeat Technology → Heartbeat settings → Gas validation settings → Validation Type
<b>Description</b>	Select whether the validation gas flow is manual (user controlled) or auto (device controlled).
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Validation manual gas</li> <li>▪ Validation auto gas</li> </ul>
<b>Factory setting</b>	Validation manual gas

**Num Validations**

<b>Navigation</b>	Expert → Diagnostics → Heartbeat Technology → Heartbeat settings → Gas validation settings → Num Validations
<b>Description</b>	Select the number of validation points.
<b>Selection</b>	1
<b>Factory setting</b>	1

**Validation gas purge time**

<b>Navigation</b>	Expert → Diagnostics → Heartbeat Technology → Heartbeat settings → Gas validation settings → Validation gas purge time
<b>Description</b>	Enter the validation gas purge time.
<b>User entry</b>	0 to 5 minutes
<b>Factory setting</b>	1.00 min

**Meas. Duration**



<b>Navigation</b>	Expert → Diagnostics → Heartbeat Technology → Heartbeat settings → Gas validation settings → Meas. duration
-------------------	---

<b>Description</b>	Enter the duration for calculating the measurement statistics (mean, standard deviation).
<b>User entry</b>	0.25 to 60 minutes
<b>Factory setting</b>	1.00 min

---

### Validation gas information



---

<b>Navigation</b>	  Expert → Diagnostics → Heartbeat Technology → Heartbeat settings → Gas validation settings → Validation gas information
<b>Description</b>	Enter a description or identifier for the source of validation gas (stream, bottle, bottle serial number).
<b>User entry</b>	Max. 32 characters such as letters, numbers, or special characters (e.g., @, %, /).
<b>Factory setting</b>	Unknown validation gas

---

### Validation 1 to n concentration target



---

<b>Navigation</b>	  Expert → Diagnostics → Heartbeat Technology → Heartbeat settings → Gas validation settings → Validation concentration
<b>Description</b>	Enter the concentration of the analyte in the validation gas.
<b>User entry</b>	0 to 1000000 ppmv
<b>Factory setting</b>	0 ppmv
<b>Additional information</b>	Validation concentration value dependent upon the concentration unit.

---

### Validation 1 to n allowance



---

<b>Navigation</b>	  Expert → Diagnostics → Heartbeat Technology → Heartbeat settings → Gas validation settings → Validation allowance
<b>Description</b>	Set the deviation allowance between the validation concentration and the measured concentration.
<b>User entry</b>	0 to 100 %
<b>Factory setting</b>	0.0000%

---

### Scheduled validation



---

<b>Navigation</b>	  Expert → Diagnostics → Heartbeat Technology → Heartbeat settings → Gas validation settings → scheduled validation
<b>Description</b>	Allow validation to automatically run based on a scheduled time of day
<b>User entry</b>	<ul style="list-style-type: none"> <li>▪ On</li> <li>▪ Off</li> </ul>
<b>Factory setting</b>	1

---

**Validation interval day**



---

<b>Navigation</b>	  Expert → Diagnostics → Heartbeat Technology → Heartbeat settings → Gas validation settings → Validation interval day
<b>Description</b>	Set the hour of the day when the validation will start
<b>User entry</b>	1 to 365
<b>Factory setting</b>	1

---

**Validation start hour**



---

<b>Navigation</b>	  Expert → Diagnostics → Heartbeat Technology → Heartbeat settings → Gas validation settings → validation start hour
<b>Description</b>	Set the hour of the day when the validation will start
<b>User entry</b>	1 to 23
<b>Factory setting</b>	8

---

**Last scheduled validation**



---

<b>Navigation</b>	  Expert → Diagnostics → Heartbeat Technology → Heartbeat settings → Gas validation settings → Last scheduled validation
<b>Description</b>	The last day and time validation was scheduled to run
<b>User entry</b>	Not done
<b>Factory setting</b>	Not done

---

**Next scheduled validation**



---

<b>Navigation</b>	  Expert → Diagnostics → Heartbeat Technology → Heartbeat settings → Gas validation settings → Next scheduled validation
<b>Description</b>	The next day and time validation is scheduled to run
<b>User entry</b>	Local time
<b>Factory setting</b>	Not done

---



**Start validation**

---

<b>Navigation</b>	  Expert → Diagnostics → Heartbeat Technology → Heartbeat settings → Gas validation settings → Start validation
<b>Description</b>	Triggers an automated Heartbeat validation report for validation
<b>User entry</b>	<ul style="list-style-type: none"> <li>▪ Cancel</li> <li>▪ Start</li> </ul>
<b>Factory setting</b>	Cancel



**Performing verification**

Navigation   Expert → Diagnostics → Heartbeat Techn. → Perform.verific.

▶ Performing verification

Date/time

Meas. Duration

Verification mode

Ext. device info

Start verification

Switch gas valve

Progress

Measured val.


Output values

Measured conc.

Status

Verification result

---

**Date/time** 


**Navigation**   Expert → Diagnostics → Date/time


**Description** Current date and time of the analyzer

- User interface**
- dd.mm.yy hh:mm
  - mm.dd.yy hh:mm am/pm
  - mm/dd/yy hh:mm
  - mm/dd/yy hh:mm am/pm

**Additional information** The input must match the date/time format selected otherwise it will be rejected. In addition, the analyzer does not account for time zones or daylight saving time.

---

**Meas. duration** 

**Navigation**   Expert → Diagnostics → Heartbeat Technology → Performing verification → Meas. Duration

**Prerequisite** Can be edited if verification status is not active.

**Description** Enter the duration for calculating the measurement statistics (mean, standard deviation).

**User entry** 0.25 to 60 minutes

---

**Verification mode**


<b>Navigation</b>	Expert → Diagnostics → Heartbeat Technology → Performing verification → Verification mode
<b>Prerequisite</b>	Can be edited if verification status is not active.
<b>Description</b>	Select verification mode. <ul style="list-style-type: none"> <li>▪ <b>Standard verification.</b> Verification is performed automatically by the device and without manual checking of external measured variables.</li> <li>▪ <b>Extended validation.</b> Similar to standard verification but with performing measurement using validation reference gas.</li> <li>▪ <b>Extended current output.</b> Similar to standard verification but with performing measurement using validation reference gas.</li> <li>▪ <b>Extended validation and current output.</b> This feature performs both extended validation and extended current output.</li> </ul>
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Standard verification</li> <li>▪ Extended validation</li> <li>▪ Extended current output</li> <li>▪ Extended validation and current output</li> </ul>
<b>Factory setting</b>	Standard verification

---

**External device information**


<b>Navigation</b>	Expert → Diagnostics → Heartbeat Technology → Performing verification → Ext. device info
<b>Prerequisite</b>	With the following conditions: The <b>Extended current output or Extended val and current out</b> option is selected in the <a href="#">Verification mode parameter</a> → . Can be edited if the verification status is not active.
<b>Description</b>	Record measuring equipment for extended verification.
<b>User entry</b>	Max. 32 characters such as letters, numbers or special characters (e.g. @,% , /).

---

**Start verification**


<b>Navigation</b>	Expert → Diagnostics → Heartbeat Technology → Performing verification → Start verification
<b>Description</b>	Start the verification. To carry out a complete verification, select the selection parameters individually. Once the external measured values have been recorded, verification is started using the <b>Start</b> option.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Cancel</li> <li>▪ Output 1 low value<sup>1</sup></li> <li>▪ Output 1 high value<sup>1</sup></li> </ul>



---

<sup>1</sup> Visibility depends on order options or device settings

- Output 2 low value <sup>1</sup>
- Output 2 high value <sup>1</sup>
- Start
- Prepare validation
- End validation

**Factory setting** Cancel

### Switch gas valve

**Navigation**   Expert → Diagnostics → Heartbeat Technology → Performing verification → Switch gas valve

**Prerequisite** Validation type is manual validation

**Description** While running a manual validation this parameter will appear when it is time for the user to change the gas from process to validation and again when the gas should be changed from validation back to process. Once the gas stream is changed then update the parameter value to Proceed to allow the Heartbeat validation to continue.

**Selection**

- Cancel
- Proceed

**Factory setting** Cancel



### Progress


**Navigation**   Expert → Diagnostics → Heartbeat Technology → Performing verification → Progress

**Description** The progress of the process is indicated.

**User interface** 0 to 100 %

### Measured values

**Navigation**   Expert → Diagnostics → Heartbeat Technology → Performing verification → Measured values

**Prerequisite** One of the following options is selected in the *Start verification parameter* → :

- Output 1 low value
- Output 1 high value
- Output 2 low value
- Output 2 high value

**Description** Use this function to enter the measured values (actual values) for the external measured variable current output: Output current in [mA].



**User entry** Signed floating-point number

**Factory setting** 0

---

**Output values**




---

<b>Navigation</b>	  Expert → Diagnostics → Heartbeat Technology → Performing verification → Output values
<b>Description</b>	Displays the simulated output values (target values) for the external measured variable current output: Output current in [mA].
<b>User interface</b>	Signed floating-point number

---

**Measured concentration**




---

<b>Navigation</b>	  Expert → Diagnostics → Heartbeat Technology → Performing verification → Measured concentration
<b>Description</b>	Displays the concentration of the validation gas during extended validation.
<b>User interface</b>	0 to 1000000 ppmv

---

**Status**




---

<b>Navigation</b>	  Expert → Diagnostics → Heartbeat Technology → Performing verification → Status
<b>Description</b>	Displays the current status of the verification.
<b>User interface</b>	<ul style="list-style-type: none"> <li>▪ Done</li> <li>▪ Busy</li> <li>▪ Failed</li> <li>▪ Not done</li> <li>▪ Validation purging</li> <li>▪ Process purging</li> <li>▪ Switch gas valve</li> <li>▪ Scrubbing</li> </ul>



---

**Verification result**


---

<b>Navigation</b>	  Expert → Diagnostics → Heartbeat Technology → Performing verification → Verification Result
<b>Description</b>	Displays the overall result of the verification.
<b>User interface</b>	<ul style="list-style-type: none"> <li>▪ Not supported</li> <li>▪ Passed</li> <li>▪ Not done</li> <li>▪ Failed</li> <li>▪ Not plugged</li> </ul>
<b>Factory setting</b>	Not done

**Verification results submenu**

**Navigation**   Expert → Diagnostics → Heartbeat Technology → Verification Results

Verification results

Date/time

Verification ID

Operating time

Verification result

Sensor

Sens. electronic

Gas validation



I/O module

System status

---

**Date/time**



---

<b>Navigation</b>	  Expert → Diagnostics → Heartbeat Technology → Verification results → Date/time
<b>Prerequisite</b>	The verification has been performed.
<b>Description</b>	Date and time of the last Heartbeat verification.
<b>User interface</b>	<ul style="list-style-type: none"> <li>▪ dd.mm.yy hh:mm</li> <li>▪ mm.dd.yy hh:mm am/pm</li> <li>▪ mm/dd/yy hh:mm</li> <li>▪ mm/dd/yy hh:mm am/pm</li> </ul>

---

**Verification ID**



---

<b>Navigation</b>	  Expert → Diagnostics → Heartbeat Technology → Verification results → Verification ID
<b>Prerequisite</b>	The verification has been performed.
<b>Description</b>	Displays consecutive numbering of the verification results in the measuring device.
<b>User interface</b>	0 to 65,535
<b>Factory setting</b>	0

---

**Operating time**




---

<b>Navigation</b>	  Expert → Diagnostics → Heartbeat Technology → Verification results → Operating time
<b>Prerequisite</b>	The verification has been performed.
<b>Description</b>	Indicates how long the device has been in operation up to the verification.
<b>User interface</b>	Days (d), hours (h), minutes (m), seconds (s)

---

**Verification result**





---

<b>Navigation</b>	  Expert → Diagnostics → Heartbeat Technology → Verification results → Verification result
<b>Description</b>	Displays the overall result of the verification.
<b>User interface</b>	<ul style="list-style-type: none"> <li>▪ Not supported</li> <li>▪ Passed</li> <li>▪ Not done</li> <li>▪ Failed</li> </ul>
<b>Factory setting</b>	Not done

---

**Sensor**





---

<b>Navigation</b>	  Expert → Diagnostics → Heartbeat Technology → Verification results → Sensor
<b>Prerequisite</b>	The <b>Failed</b> option result is shown in the <i>Verification result parameter</i> →  .
<b>Description</b>	Displays the result for the sensor.
<b>User interface</b>	<ul style="list-style-type: none"> <li>▪ Not supported</li> <li>▪ Passed</li> <li>▪ Not done</li> <li>▪ Failed</li> </ul>
<b>Factory setting</b>	Not done

---

**Sensor electronic module (ISEM)**





---

<b>Navigation</b>	  Expert → Diagnostics → Heartbeat Technology → Verification results → Sens. Electronic
<b>Prerequisite</b>	The <b>Failed</b> option result is shown in the <i>Verification result parameter</i> →  .
<b>Description</b>	Displays the result for the sensor electronics module (ISEM).
<b>User interface</b>	<ul style="list-style-type: none"> <li>▪ Not supported</li> <li>▪ Passed</li> <li>▪ Not done</li> <li>▪ Failed</li> </ul>
<b>Factory setting</b>	Not done

---

**Gas validation**





---

<b>Navigation</b>	  Expert → Diagnostics → Heartbeat Technology → Verification results → Gas validation
<b>Prerequisite</b>	The Failed option result is shown in the <i>Verification result parameter</i> →  .
<b>Description</b>	Displays the results for the gas validation.
<b>User interface</b>	<ul style="list-style-type: none"> <li>▪ Failed</li> <li>▪ Passed</li> <li>▪ Not done</li> <li>▪ Not supported</li> <li>▪ Not plugged</li> </ul>
<b>Factory setting</b>	Not done

---

**I/O module**





---

<b>Navigation</b>	  Expert → Diagnostics → Heartbeat Technology → Verification results → I/O module
<b>Prerequisite</b>	In the <i>Verification result parameter</i> →  , the <b>Failed</b> option was displayed.
<b>Description</b>	<p>Displays the result for I/O module monitoring of the I/O module.</p> <ul style="list-style-type: none"> <li>▪ For current output: Accuracy of the current</li> <li>▪ Current input: Accuracy of the current</li> <li>▪ Relay output: Number of switching cycles</li> </ul> <p><b>Heartbeat Verification</b> does not check the digital inputs and outputs and does not output any result for them.</p>
<b>User interface</b>	<ul style="list-style-type: none"> <li>▪ Not supported</li> <li>▪ Passed</li> <li>▪ Not done</li> <li>▪ Not plugged</li> <li>▪ Failed</li> </ul>
<b>Factory setting</b>	Not done



---


**System status**




---

<b>Navigation</b>	  Expert → Diagnostics → Heartbeat Technology → Verification results → System status
<b>Prerequisite</b>	The <b>Failed</b> option result is shown in the <i>Verification result parameter</i> →  .
<b>Description</b>	Displays the system condition. Tests the measuring device for active errors.
<b>User interface</b>	<ul style="list-style-type: none"> <li>▪ Not supported</li> <li>▪ Passed</li> <li>▪ Not done</li> <li>▪ Failed</li> </ul>
<b>Factory setting</b>	Not done

**Gas validation results submenu**

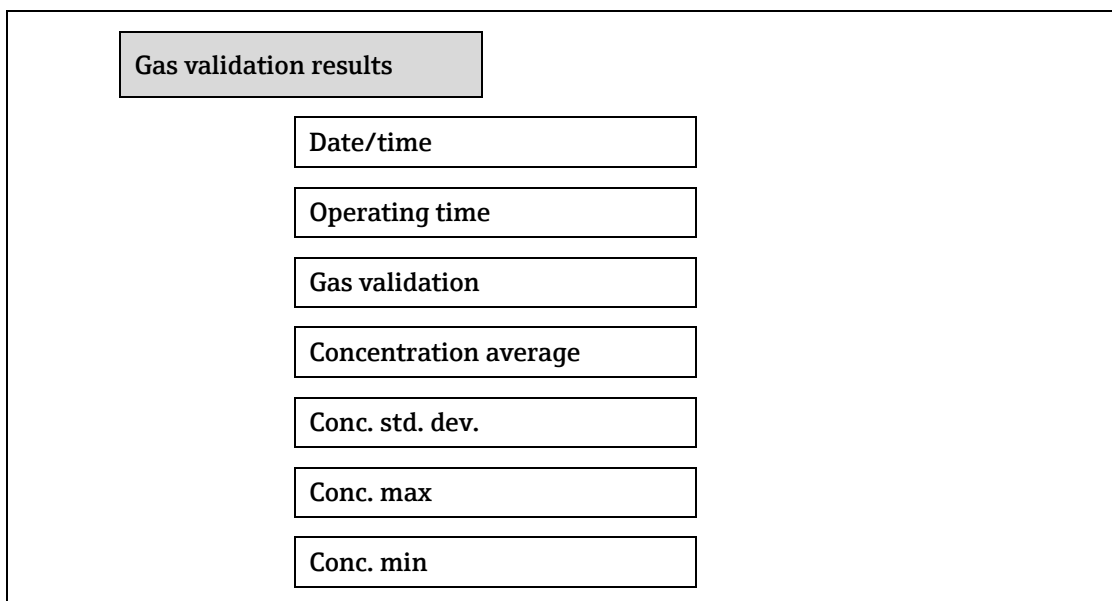**Navigation**      Expert → Diagnostics → Heartbeat Techn. → Gas validation results

**Date/time**

**Navigation**      Expert → Diagnostics → Heartbeat Technology → Gas validation results → Date/time

**Prerequisite**    The verification has been performed.

**Description**    Date and time of the last Heartbeat gas validation.

**User interface**

- dd.mm.yy hh:mm
- mm.dd.yy hh:mm am/pm
- mm/dd/yy hh:mm
- mm/dd/yy hh:mm am/pm

**Operating time**

**Navigation**      Expert → Diagnostics → Heartbeat Technology → Gas validation results → Operating time

**Prerequisite**    The verification has been performed.

**Description**    Indicates how long the device has been in operation up to the verification.

**User interface**    Days (d), hours (h), minutes (m), seconds (s)

**Gas validation**

**Navigation**      Expert → Diagnostics → Heartbeat Technology → Gas validation results → Gas validation

**Prerequisite**    The verification has been performed.

**Description**    Status after gas validation is completed.

**User interface**

- Not supported
- Passed



- Not done
- Not plugged
- Failed

---

### Concentration 1 to n average

---

<b>Navigation</b>	🔍📄 Expert → Diagnostics → Heartbeat Technology → Gas validation results → Concentration average
<b>Prerequisite</b>	The verification has been performed.
<b>Description</b>	0 to 1000000 ppmv
<b>User interface</b>	Average gas concentration as determined during validation.

---

### Concentration 1 to n standard deviation

---

<b>Navigation</b>	🔍📄 Expert → Diagnostics → Heartbeat Technology → Gas validation results → Conc. Std. dev.
<b>Prerequisite</b>	The verification has been performed.
<b>Description</b>	Positive floating-point value of concentration standard deviation as determined during validation.
<b>User interface</b>	0 to 1000000 ppmv

---

### Concentration 1 to n maximum

---

<b>Navigation</b>	🔍📄 Expert → Diagnostics → Heartbeat Technology → Gas validation results → Conc. Max
<b>Prerequisite</b>	The verification has been performed.
<b>Description</b>	Maximum concentration as determined during gas validation.
<b>User interface</b>	0 to 1000000 ppmv



---


### Concentration 1 to n minimum

---

<b>Navigation</b>	🔍📄 Expert → Diagnostics → Heartbeat Technology → Gas validation results → Conc. Min
<b>Prerequisite</b>	The verification has been performed.
<b>Description</b>	Minimum concentration as determined during gas validation.
<b>User interface</b>	0 to 1000000 ppmv

### Monitoring results submenu

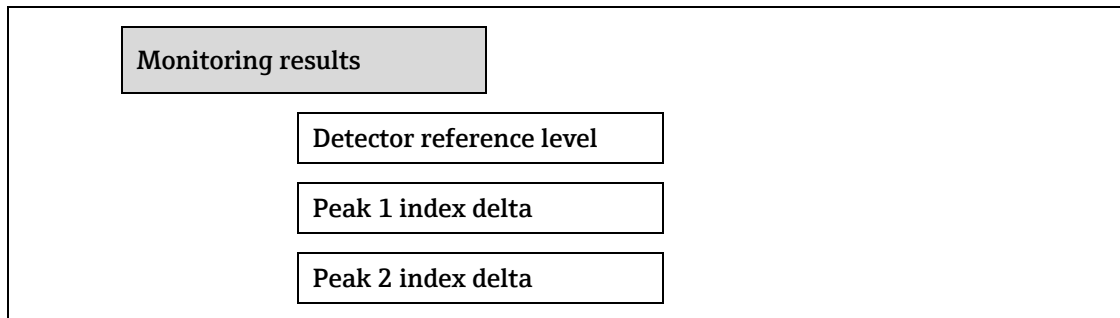

**Navigation**   Expert → Diagnostics → Heartbeat Techn. → Monitor. results




---

#### Detector reference level

---

**Navigation**   Expert → Diagnostics → Heartbeat Technology → Monitor. results → Detector reference level

**Description** Signal from optical detector.

**User interface** 0 to 5 mA

---

#### Peak 1 index delta

---

**Navigation**   Expert → Diagnostics → Heartbeat Technology → Monitor. results → Peak 1 index delta

**Description** Difference between target peak 1 value and current peak 1 value.

**User interface** -511.0 to 511.0

---

#### Peak 2 index delta

---



**Navigation**   Expert → Diagnostics → Heartbeat Technology → Monitor. results → Peak 2 index delta


**Description** Difference between target peak 2 value and current peak 2 value.

**User interface** -511.0 to 511.0

**User interface** -511.0 to 511.0

### 3.7.12 Simulation

**Navigation**   Expert → Diagnostics → Simulation

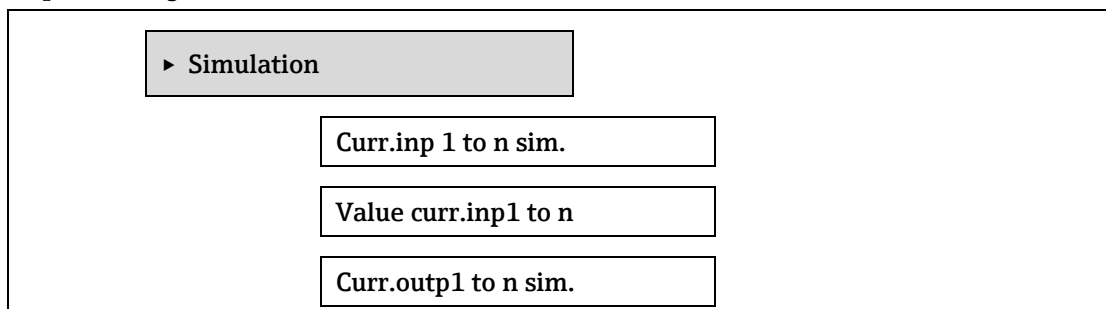

Curr.outpval. 1 to n
Switch sim. 1 to n
Switch state 1 to n
Relay out.1 to n sim
Switch state 1 to n
Dev. alarm sim.
Event category
Diag. event sim.

**Current input 1 to n simulation**



- Navigation** Expert → Diagnostics → Simulation → Current input 1 to n sim.
- Description** Option for switching simulation of the current input on and off. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.  
The desired simulation value is defined in the **Value current input 1 to n** parameter.
- Selection**
- Off
  - On
- Factory setting** Off
- Additional information** *Selection*
- **Off.** Current simulation is switched off. The device is in normal measuring mode or another process variable is being simulated.
  - **On.** Current simulation is active.

**Value current input 1 to n**



- Navigation** Expert → Diagnostics → Simulation → Value current input 1 to n
- Prerequisite** In the **Current input 1 to n simulation** parameter, the **On** option is selected.
- Description** Use this function to enter the current value for the simulation. In this way, users can verify the correct configuration of the current input and the correct function of upstream feed-in units.
- User entry** 0 to 22.5 mA

**Current output 1 to n simulation**



- Navigation** Expert → Diagnostics → Simulation → Current output 1 to n sim.

<b>Description</b>	Use this function to switch simulation of the current output on and off. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ On</li> </ul>
<b>Factory setting</b>	Off
<b>Additional information</b>	<p><i>Description</i></p> <p>The desired simulation value is defined in the <b>Value current output 1 to n</b> parameter.</p> <p><i>Selection</i></p> <ul style="list-style-type: none"> <li>▪ <b>Off.</b> Current simulation is switched off. The device is in normal measuring mode, or another process variable is being simulated.</li> <li>▪ <b>On.</b> Current simulation is active.</li> </ul>

---

**Current output value 1 to n**


<b>Navigation</b>	Expert → Diagnostics → Simulation → Current output value 1 to n
<b>Prerequisite</b>	In the <b>Current output 1 to n simulation</b> parameter, the <b>On</b> option is selected.
<b>Description</b>	Use this function to enter a current value for the simulation. In this way, users can verify the correct adjustment of the current output.
<b>User entry</b>	0 to 22.5 mA
<b>Additional information</b>	<p><i>Dependency</i></p> <p>The input range is dependent on the option selected in the <i>Current span parameter</i> → .</p>

---

**Switch output simulation 1 to n**


<b>Navigation</b>	Expert → Diagnostics → Simulation → Switch output simulation 1 to n
<b>Prerequisite</b>	In the <i>Operating mode parameter</i> → , the <b>Switch</b> option is selected.
<b>Description</b>	Use this function to switch simulation of the switch output on and off. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ On</li> </ul>
<b>Factory setting</b>	Off
<b>Additional information</b>	<p><i>Description</i></p> <p>The desired simulation value is defined in the <b>Switch state 1 to n</b> parameter.</p> <p><i>Selection</i></p> <ul style="list-style-type: none"> <li>▪ <b>Off.</b> Switch simulation is switched off. The device is in normal measuring mode, or another process variable is being simulated.</li> <li>▪ <b>On.</b> Switch simulation is active.</li> </ul>

---

**Switch state 1 to n**


<b>Navigation</b>	Expert → Diagnostics → Simulation → Switch state 1 to n
<b>Description</b>	Use this function to select a switch value for the simulation. In this way, users can verify the correct adjustment of the switch output and the correct function of downstream switching units.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Open</li> <li>▪ Closed</li> </ul>
<b>Additional information</b>	<p><i>Selection</i></p> <ul style="list-style-type: none"> <li>▪ <b>Open.</b> Switch simulation is switched off. The device is in normal measuring mode, or another process variable is being simulated.</li> <li>▪ <b>Closed.</b> Switch simulation is active.</li> </ul>

---

**Relay output 1 to n simulation**


<b>Navigation</b>	Expert → Diagnostics → Simulation → Relay out. 1 to n sim
<b>Description</b>	Use this function to switch simulation of the relay output on and off. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ On</li> </ul>
<b>Factory setting</b>	Off
<b>Additional information</b>	<p><i>Description</i></p> <p>The desired simulation value is defined in the <b>Switch state 1 to n</b> parameter.</p> <p><i>Selection</i></p> <ul style="list-style-type: none"> <li>▪ <b>Off.</b> Relay simulation is switched off. The device is in normal measuring mode, or another process variable is being simulated.</li> <li>▪ <b>On.</b> Relay simulation is active.</li> </ul>

---

**Switch state 1 to n**


<b>Navigation</b>	Expert → Diagnostics → Simulation → Switch state 1 to n
<b>Prerequisite</b>	The <b>On</b> option is selected in the <b>Switch output simulation 1 to n</b> parameter.
<b>Description</b>	Use this function to select a relay value for the simulation. In this way, users can verify the correct adjustment of the relay output and the correct function of downstream switching units.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Open</li> <li>▪ Closed</li> </ul>
<b>Additional information</b>	<p><i>Selection</i></p> <ul style="list-style-type: none"> <li>▪ <b>Open.</b> Relay simulation is switched off. The device is in normal measuring mode, or another process variable is being simulated.</li> <li>▪ <b>Closed.</b> Relay simulation is active.</li> </ul>

**Device alarm simulation**

**Navigation** Expert → Diagnostics → Simulation → Device alarm simulation

**Description** Use this function to switch the device alarm on and off.

**Selection**

- Off
- On

**Factory setting** Off

**Additional information** *Description*  
The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.

**Diagnostic event category**

**Navigation** Expert → Diagnostics → Simulation → Event category

**Description** Use this function to select the category of the diagnostic events that are displayed for the simulation in the *Diagnostic event simulation parameter* → .

**Selection**

- Sensor
- Electronics
- Configuration
- Process

**Factory setting** Process

**Diagnostic event simulation**

**Navigation** Expert → Diagnostics → Simulation → Diag. event sim.

**Description** Use this function to select a diagnostic event for the simulation process that is activated.

**Selection**


- Off
- Diagnostic event picklist (depends on the category selected)

**Factory setting** Off

**Additional information** *Description*  
For the simulation, you can choose from the diagnostic events of the category selected in the *Diagnostic event category parameter* → .

**3.7.13 Spectrum plots**

**Navigation** Expert → Diagnostics → Spectrum plots

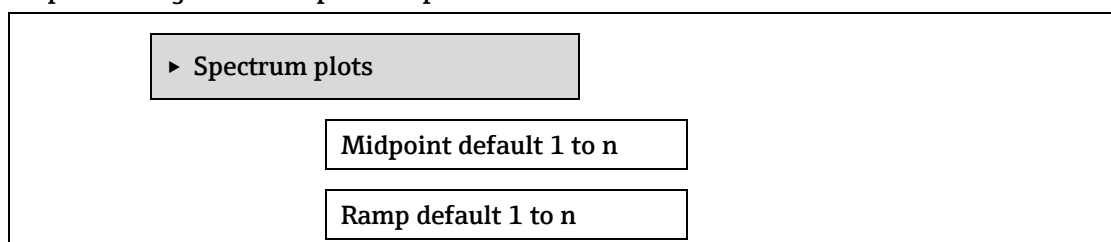

Concentration
Dew point 1
Dew point 2
Cell gas pressure
Cell gas temperature
Detect. reference level
Detect. zero level
Peak 1 to n index
Peak 1 to n index delta
Peak 1 to n index reference
Peak 1 to n index dry
Peak 1 to n index delta dry
Peak 1 to n index reference dry
Peak track index
Peak track index delta
Midpoint delta
Auto ramp delta
Assign spectrum 1 to n
Analyzer control
Peak track Reset
Det. 1 TIA gain

**Midpoint default 1 to n**



**Navigation**

📄🔍 Expert → Diagnostics → Spectrum plots → Midpoint default 1 to n

**Description**

This value serves as a starting point for midpoint delta to optimized peak position.

**Selection**



0 to 120 mA

**Additional information** Peak midpoint value set during factory calibration.

---

### Ramp default 1 to n

---

**Navigation**   Expert → Diagnostics → Spectrum plots → Ramp default 1 to n

**Description** Displays factory calibrated ramp for each calibration stream.



**Selection** 0 to 120 mA

**Additional information** Laser ramp represents the scan width of the spectrum.

---

### Concentration

---

**Navigation**   Expert → Diagnostics → Spectrum plots → Concentration

**Description** Concentration of the measured analyte within the gas stream.



**Selection** 0 to 1000000 ppmv

**Additional information** Provides a plot of the measured concentration of the analyte.

---



### Dew point 1

---

**Navigation**   Expert → Diagnostics → Spectrum plots → Dew point 1

**Description** Displays the moisture dew point 1 temperature that is currently calculated.



**Selection** Signed floating-point number

**Additional information** The unit is taken from the *Temperature unit parameter* → . Dew point is the temperature at which moisture will start to condense into liquid for a given concentration and pressure. There are several industry accepted methods for moisture dew point calculation. See BA02152C →  for more details.

---



### Dew point 2

---

**Navigation**   Expert → Diagnostics → Spectrum plots → Dew point 2

**Description** Displays the moisture dew point 2 temperature that is currently calculated.

**Selection** Signed floating-point number




**Additional information** The unit is taken from the *Temperature unit parameter* → . Dew point is the temperature at which moisture will start to condense into liquid for a given concentration and pressure. There are several industry accepted methods for moisture dew point calculation. See BA02152C →  for more details.



---

**Cell gas pressure**





---

<b>Navigation</b>	  Expert → Diagnostics → Spectrum plots → Cell gas pressure
<b>Description</b>	Plots the gas pressure currently measured in the sample cell.
<b>Selection</b>	-0.5 to 6.9 Bar
<b>Additional information</b>	The unit is taken from the <i>Pressure unit parameter</i> →  . The current pressure of the sample cell during measurement.

---

**Cell gas temperature**




---

<b>Navigation</b>	  Expert → Diagnostics → Spectrum plots → Cell gas temperature
<b>Description</b>	Displays the gas pressure currently measured in the sample cell.
<b>Selection</b>	-20 to +60 °C
<b>Additional information</b>	The unit is taken from the <i>Temperature unit parameter</i> →  . The current temperature of the sample cell during measurement.

---

**Detector reference level**




---

<b>Navigation</b>	  Expert → Diagnostics → Spectrum plots → Detector reference level
<b>Description</b>	Plots the laser detector reference level currently measured.
<b>Selection</b>	0 to 5 mA
<b>Additional information</b>	The magnitude of the DC laser current. An out-of-range value can indicate the optics need to be cleaned or there is an alignment problem.

---

**Detector zero level**




---

<b>Navigation</b>	  Expert → Diagnostics → Spectrum plots → Detector zero level
<b>Description</b>	Displays the laser detector zero level currently measured.
<b>Selection</b>	0 to 5 mA
<b>Additional information</b>	The DC laser power when the laser is turned off (e.g., dark current).

---

**Peak 1 to n index**




---

<b>Navigation</b>	  Expert → Diagnostics → Spectrum plots → Peak 1 to n index
<b>Description</b>	Displays the absorption peak 1 to n index position in the currently measured 2f spectrum.
<b>Selection</b>	0 to 511.0
<b>Additional information</b>	Position of the absorption peak along the scan.

---

**Peak 1 to n index delta**



---

<b>Navigation</b>	  Expert → Diagnostics → Spectrum plots → Peak 1 to n index delta
<b>Description</b>	Displays of peak 1 to n index delta.
<b>Selection</b>	-511.0 to 511.0
<b>Additional information</b>	Peak 1 to n index delta is the difference between target peak 1 value and current peak 1 value.

---

**Peak 1 to n index reference**



---

<b>Navigation</b>	  Expert → Diagnostics → Spectrum plots → Peak 1 to n index reference
<b>Prerequisite</b>	Peak index target find method is set to Dynamic. Typically used in applications with reference curves (e.g., JT33).
<b>Description</b>	Displays the peak 1 to n index reference when using a dynamically found target index.
<b>User interface</b>	0.0 to 511.0
<b>Additional information</b>	If the target peak index is not dynamically found then it will use a statically defined target peak index.

---

**Peak 1 to n index dry**



---

<b>Navigation</b>	  Expert → Diagnostics → Spectrum plots → Peak 1 to n index dry
<b>Prerequisite</b>	The calculation method is CLS Differential (JT33)
<b>Description</b>	Displays the dry absorption peak 1 to n index position in the dry 2f spectrum.
<b>User interface</b>	0.0 to 511.0

---

**Peak 1 to n index delta dry**



---

<b>Navigation</b>	  Expert → Diagnostics → Spectrum plots → Peak 1 to n index delta dry
<b>Prerequisite</b>	The calculation method is CLS Differential (JT33).
<b>Description</b>	Displays the difference in the peak 1 to n index position and the target index in the currently measured dry 2f spectrum.
<b>User interface</b>	-511.0 to 511.0

---

**Peak 1 to n index reference dry**

---



<b>Navigation</b>	  Expert → Diagnostics → Spectrum plots → Peak 1 to n index reference dry
<b>Prerequisite</b>	Peak index target find method is set to Dynamic and Calculation method is CLS Differential. Typically used in applications with reference curves (e.g., JT33).
<b>Description</b>	Displays the dry peak 1 to n index target when using a dynamically found target index.

<b>User interface</b>	0.0 to 511.0
<b>Additional information</b>	If the target peak index is not dynamically found then it will use a statically defined target peak index.

---

### Peak track index



---

<b>Navigation</b>	  Expert → Diagnostics → Spectrum plots → Peak track index
<b>Description</b>	Displays the peak track index for the peak used for peak tracking in the currently measured 2f spectrum.
<b>Selection</b>	0 to 511.0
<b>Additional information</b>	If Off is selected in the Peak tracking analyzer control parameter this value will be zero. Otherwise, this value will mimic the parameter Peak 1 to n index depending on which peak is being used for peak tracking.

---

### Peak track index delta



---

<b>Navigation</b>	  Expert → Diagnostics → Spectrum plots → Peak track index delta
<b>Description</b>	Displays the difference in the peak track index and the target index in the currently measured 2f spectrum.
<b>Selection</b>	-511.0. to 511.0
<b>Additional information</b>	If Off is selected in the Peak tracking analyzer control parameter, this value will be zero. Otherwise, this value will mimic the parameter Peak 1 to n index delta depending on which peak is being used for peak tracking.

---

### Midpoint delta



---

<b>Navigation</b>	  Expert → Diagnostics → Spectrum plots → Midpoint delta
<b>Description</b>	Displays the difference in the calibrated midpoint value and the currently used midpoint value.
<b>Selection</b>	0 to 120 mA
<b>Additional information</b>	If Off is selected in the Peak tracking analyzer control parameter this value will be zero. Otherwise, this value will be the amount of change applied to the calibrated midpoint value by the peak tracking algorithm.

---

### Auto ramp delta



---

<b>Navigation</b>	  Expert → Diagnostics → Spectrum plots → Auto ramp delta
<b>Description</b>	Displays the difference in the calibrated ramp value and the currently used ramp value.
<b>Selection</b>	0.0 to 120.0 mA
<b>Additional information</b>	If Off is selected in the Auto ramp analyzer control parameter, this value will be zero. Otherwise, this value will be the amount of change applied to the calibrated ramp value by the auto ramp algorithm.

---

### Assign spectrum 1 to n

---



**Navigation**   Expert → Diagnostics → Spectrum plots → Assign spectrum 1 to n

**Description** Assign a curve for spectra plot visualization

- Selection**
- Off
  - DC dry
  - DC dry ref 1
  - DC
  - DC wet
  - DC wet ref 1
  - 2f dry raw
  - 2f dry
  - 2f dry ref 1
  - 2f dry ref 1 p.wet
  - 2f raw
  - 2f wet raw
  - 2f
  - 2f wet
  - 2f wet ref 1
  - 2f wet ref 1 FR
  - 2f final
  - Ref 1
  - Ref 2
  - Ref 3
  - Ref baseline
  - Ref baseline RT
  - 2f composite
  - DC background
  - 2f background

---

## Analyzer control

**Navigation**   Expert → Diagnostics → Spectrum plots → Analyzer control

**Description** Controls whether peak tracking is activated.



- Selection**
- Off
  - On

**Factory setting** Off

**Additional information** Switch peak track on or off for the analyzer. There are separate peak track settings for each calibration. Normal operation peak tracking should be on.

---

## Reset

**Navigation**   Expert → Diagnostics → Spectrum plots → Reset

**Description** Reset analyzer peak midpoint current value.


<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ Reset</li> </ul>
<b>Factory setting</b>	Off
<b>Additional information</b>	Reset will change analyzer peak midpoint current value to original calibrated peak location.

**Det. 1 TIA gain**

<b>Navigation</b>	🏠📄 Expert → Diagnostics → Spectrum plots → Det. 1 TIA gain
<b>Description</b>	Display for TIA gain value.
<b>Selection</b>	0 to 15
<b>Additional information</b>	Transimpedance amplifier (TIA) gain value.

**3.7.14 SD card**

*Navigation* 🏠📄 Expert → Diagnostics → SD card

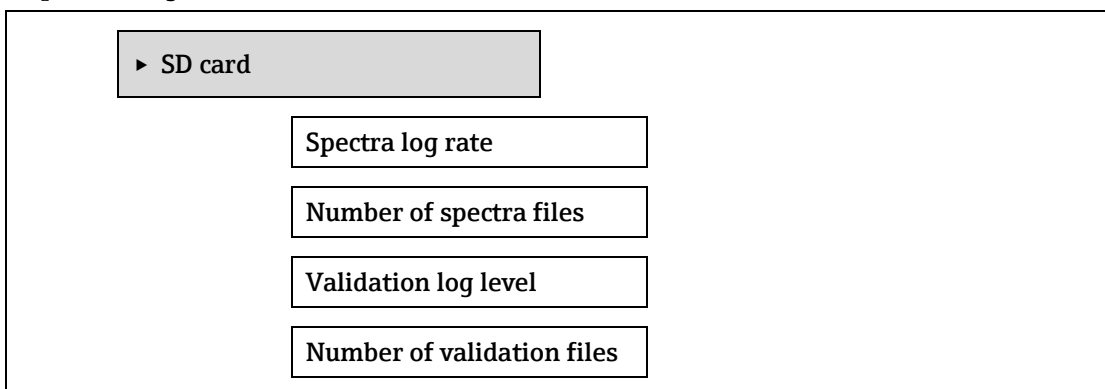

**Spectra log rate**



<b>Navigation</b>	🏠📄 Expert → Diagnostics → SD card → Spectra log rate
<b>Description</b>	The frequency in which spectra data is saved to the SD card.
<b>Selection</b>	1 to 86400 sec
<b>Factory setting</b>	3600 s
<b>Additional information</b>	Under normal operation, one spectra log file per day will be generated; however, with faster logging rates more than one file each day can be generated.

**Number of spectra files**



<b>Navigation</b>	🏠📄 Expert → Diagnostics → SD card → Number of spectra file
<b>Description</b>	Estimated number of spectra files.

<b>User interface</b>	0 to 400
<b>Additional information</b>	The analyzer supports up to 400 spectra log files. Files are saved as FIFO <sup>1</sup> . For smaller capacity SD cards, the number of maximum files is reduced to 30.

---

### Validation log level



---

<b>Navigation</b>	  Expert → Diagnostics → SD card → Validation log level
<b>Description</b>	Determines the amount of information logged to the validation log file during Heartbeat extended validation.
<b>Selection</b>	<ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ Normal</li> <li>▪ Extended</li> <li>▪ All</li> </ul>
<b>Factory setting</b>	Normal
<b>Additional information</b>	<ul style="list-style-type: none"> <li>▪ <b>Off.</b> No validation log information is created.</li> <li>▪ <b>Normal.</b> While validation is measuring; log trend, first/middle/last spectrum and validation results</li> <li>▪ <b>Extended.</b> Includes Normal log level plus every spectrum while validation is measuring.</li> <li>▪ <b>All.</b> Includes Extended log level plus every trend and spectrum during purge before and after validation.</li> </ul>

---

### Number of validation files

---

<b>Navigation</b>	  Expert → Diagnostics → SD card → Number of validation files
<b>Description</b>	Current number of validation files saved to the SD card.
<b>User interface</b>	0 to 60
<b>Additional information</b>	For SD cards < 1GB maximum number of files reduced to 30.

---

<sup>1</sup> FIFO = First in, first out data storage

## 4 Approval specific factory settings

### 4.1 SI units

#### 4.1.1 System units

Process variable	Unit
Temperature	°C
Pressure	bar a

#### 4.1.2 Full scale values

##### NOTICE

The factory settings apply to the following parameters:

- ▶ 20 mA value (full scale value of the current output)
- ▶ 100% bar graph value 1

#### 4.1.3 Output current span

Output	Current range
Current output 1...n	4 to 20 mA NAMUR

### 4.2 US units

#### 4.2.1 System units

Process variable	Unit
Temperature	°F
Pressure	psi a

#### 4.2.2 Full scale values

##### NOTICE

The factory settings apply to the following parameters:

- ▶ 20 mA value (full scale value of the current output)
- ▶ 100% bar graph value 1

#### 4.2.3 Output current span

Output	Current range
Current output 1...n	4 to 20 mA US

## 5 Explanation of abbreviated units

### 5.1 SI units

Process variable	Units	Explanation
Pressure	Pa a, kPa a, MPa a	Pascal, kilopascal, megapascal (absolute)
	bar	Bar
	Pa g, kPa g, MPa g	Pascal, kilopascal, megapascal (relative/gauge)
	bar g	Bar (relative/gauge)
Concentration	ppmv	Part per million by volume
Temperature	°C, K	Celsius, Kelvin
Time	s, m, h, d, y	Second, minute, hour, day, year

### 5.2 US units

Process variable	Units	Explanation
Pressure	psi a	Pounds per square inch (absolute)
	psi g	Pounds per square inch (gauge)
Concentration	ppmv	Part per million by volume
	ppbv	Parts per billion by volume
	lb/MMscf	Pounds per million standard cubic feet
	gr/100 scf	Grains per 100 standard cubic feet
	%vol	Percent by volume
Temperature	°F, °R	Fahrenheit, Rankine
Time	s, m, h, d, y	Second, minute, hour, day, year
	am, pm	Ante meridiem (before midday), post meridiem (after midday)

### 5.3 Imperial units

Process variable	Units	Explanation
Concentration	ppmv	Part per million by volume
	ppbv	Parts per billion by volume
	mg/sm <sup>3</sup>	Milligrams per standard cubic meter
	mg/Nm <sup>3</sup>	Milligrams per normal cubic meter
	%vol	Percent by volume
Time	s, m, h, d, y	Second, minute, hour, day, year
	am, pm	Ante meridiem (before midday), post meridiem (after midday)




## 6 Modbus register information

### 6.1 Notes

References to Modbus refers to Modbus TCP and RS485 devices unless otherwise noted.

#### 6.1.1 Structure of the register information

The individual parts of a parameter description are described in the following section:

Navigation: navigation path to the parameter					
Parameter	Register	Data type	Access type	User interface/ Selection/User entry	→ 
Name of parameter	Indicated in decimal numerical format	Float length = 4 byte Integer length = 2 byte String length, depending on parameter	Possible type of access to parameter: Read access via function codes 03, 04 or 23 Write access via function codes 06, 16 or 23	Options List of the individual options for the parameter Option 1 Option 2 Option 3 (+) (+) = Factory setting depends on country, order options or device settings User entry Specific value or input range for the parameter	Page number information and cross-reference to the standard parameter description

#### NOTICE

If non-volatile device parameters are modified via the MODBUS function codes 06, 16 or 23, the change is saved in the EEPROM of the measuring device.

- ▶ The number of writes to the EEPROM is technically restricted to a maximum of 1 million.
- ▶ Make sure to comply with this limit since, if it is exceeded, data loss and measuring device failure will result.
- ▶ Avoid constantly writing non-volatile device parameters via the MODBUS.

#### 6.1.2 Address model


The Modbus register addresses of the measuring device are implemented in accordance with the “Modbus Applications Protocol Specification V1.1.” In the Modbus protocols, the addresses are encoded using 16 bits with a number between 0 and 65,535. These are 0-based addresses. Therefore, the Modbus protocol address is equal to the register minus one.

Function code	Access type	Register in accordance with "Modbus Applications Protocol Specification"
03 04 23	Read	XXXX Example: 9455 Concentration
06 16 23	Write	XXXX Example: 2439 Concentration Unit

## 6.2 Overview of the Expert operating menu

The following table provides an overview of the menu structure of the expert operating menu and its parameters. The page reference indicates where the associated description of the submenu or parameter can be found.

Expert
Locking status
User role
Enter access code
▶ System
▶ Display
Display language
Format display
Value 1 display
0% bargraph 1
100% bargraph 1
Decimal places 1
Value 2 display
Decimal places 2
Value 3 display
0% bargraph 3
100% bargraph 3
Decimal places 3
Value 4 display
Decimal places 4
Display interval
Display damping
Header
Header text
Separator
Contrast display
Backlight
▶ Configuration backup
Operating time
Last backup
Configuration mgmt.
Backup state
Comparison result
▶ Diagnostic handling
Alarm delay
Life remaining

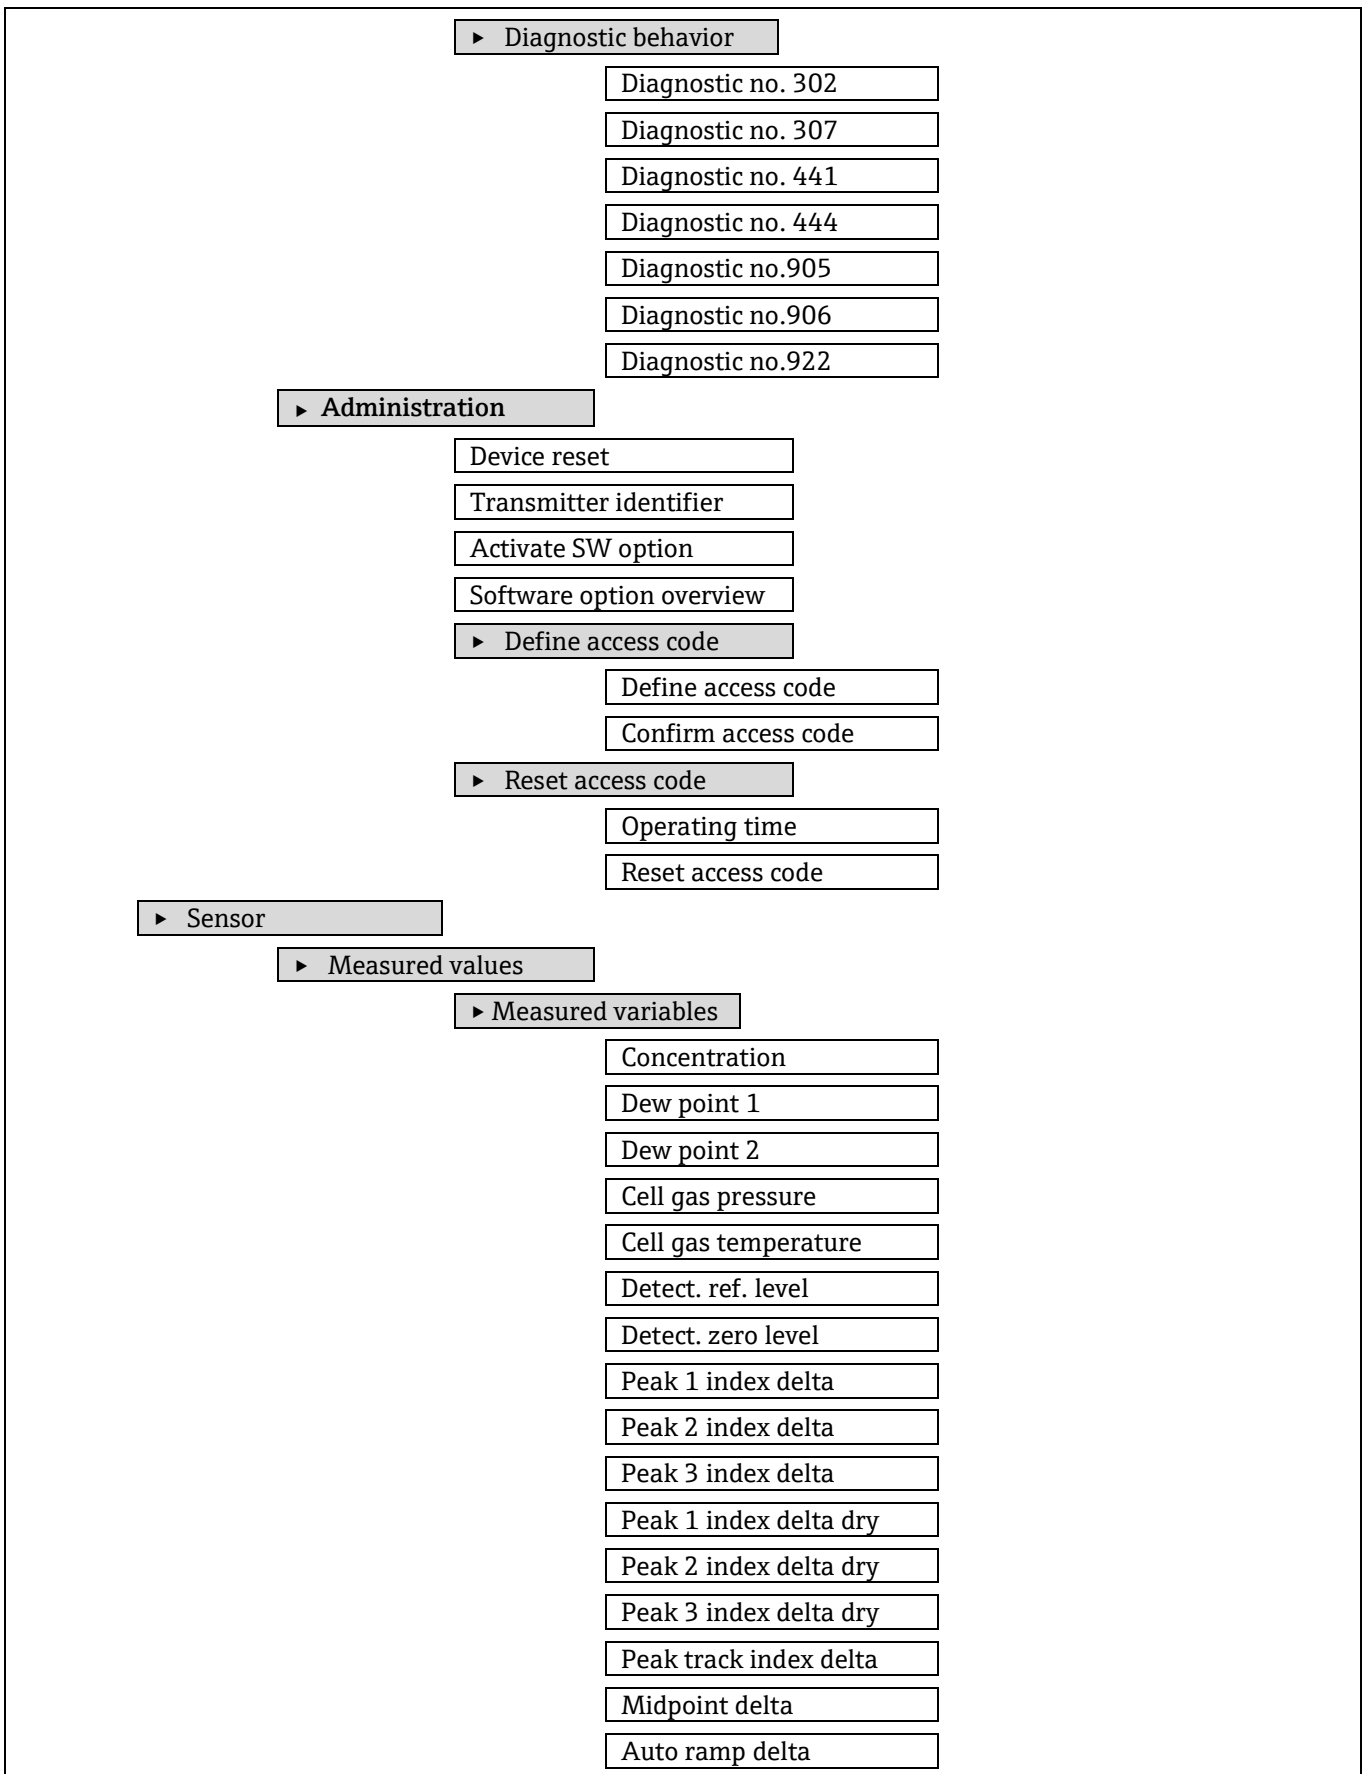

Capacity remaining
Life remaining
▶ Peak values
Peak 1 to n index
Peak 1 to n reference
Peak 1 to n index dry
Peak 1 to n reference dry
Peak track index
Peak sep. ratio
Peak sep. delta
Peak sep. ratio dry
Peak sep. delta dry
▶ Input values
▶ Current input 1 to n
Measured val. 1 to n
Measured curr. 1 to n
▶ Val.stat.inp. 1 to n
Val.stat.inp. 1 to n
▶ Output values
▶ Current output 1 to n
Output curr.
Measur. curr.
▶ Switch output 1 to n
Switch state
▶ Relay output 1 to n
Switch state
Switch cycles
Max. cycles no.
▶ System units
Concentration unit (ppmv)
Temperature unit (°C)
Pressure unit (bar)
Length unit (m)
Date/time format
▶ User-specific units
User concentration text
User concentration offset
User concentration factor

<b>► Stream</b>	
	Analyte type
	Select calibration
	Concentration dampening
	Rolling average number
	RCM average low
	RCM average high
	Rescrub trigger
	Stream control
	Scrubber control
<b>► Dew point</b>	
	Dew point method 1
	Dew point method 2
	Conversion type
	Pipeline pressure mode
	Pipeline pressure fixed
	Pipeline pressure
	<b>► Calibration 1 to n</b>
	Methane CH <sub>4</sub>
	Ethane C <sub>2</sub> H <sub>6</sub>
	Propane C <sub>3</sub> H <sub>8</sub>
	IButane C <sub>4</sub> H <sub>10</sub>
	N-Butane C <sub>4</sub> H <sub>10</sub>
	Isopentane C <sub>5</sub> H <sub>12</sub>
	N-Pentane C <sub>5</sub> H <sub>12</sub>
	Neopentane C <sub>5</sub> H <sub>12</sub>
	Hexane+ C <sub>6</sub> H <sub>14</sub> +
	Nitrogen N <sub>2</sub>
	Carbon diox. CO <sub>2</sub>
	Hydrog.sulf. H <sub>2</sub> S
	Hydrogen H <sub>2</sub>
<b>► Peak tracking</b>	
	Peak track analyzer control
	Peak track reset
	Peak track average number
<b>► Sensor adjustment</b>	
	Concentration adjustment
	Concentration multiplier
	Concentration offset

Base crv source
Base RT update
Calibration 1 to n
Midpoint default
Terminal no.
Signal mode
Proc.var. outp
Curr.range out
Fixed current
Low.range outp
Upp.range outp
Damp.curr.outp
Fail.behav.out
Fail. current
Output curr.
Measur. curr.
► Switch output 1 to n
Signal mode
Operating mode
Switch out funct
Assign diag. beh
Assign limit
Switch-on value
Switch-off value
Assign status
Switch-on delay
Switch-off delay
Switch state
Invert outp.sig.
► Relay output 1 to n
Relay output function
Assign limit
Assign diag. beh
Assign status
Switch-off value
Switch-off delay
Switch-on value
Switch-on delay
Switch state

	Powerless relay
▶ Communication	
▶ Modbus configuration	
	Bus address
	Baudrate
	Data transfer mode
	Parity
	Byte order
	Telegram delay
	Prio. IP address
	Inactivity timeout
	Max connections
	Failure mode
	Bus termination
	Fieldbus writing access
▶ Modbus information	
	Device ID
	Device revision
▶ Modbus data map	
	Scan list register 0 to 15
▶ Web server	
	Web server language
	MAC address
	DHCP client
	IP address
	Subnet mask
	Default gateway
	Web server functionality
	Login page
▶ WLAN settings	
	WLAN
	WLAN mode
	SSID name
	Network security
	Section identification
	User name
	WLAN password
	Connection state
	Rec. Signal strength

WLAN IP address
Gateway IP address
IP address DNS
WLAN subnet mask
WLAN MAC address
WLAN passphrase
SSID name
Select antenna
WLAN channel
<b>▶ Diagnostics</b>
Actual diagnostics
Previous diagnostics
Date/time
Operating time from restart
Operating time
<b>▶ Diagnostic list</b>
Diagnostics 1
Diagnostics 2
Diagnostics 3
Diagnostics 4
Diagnostics 5
<b>▶ Event logbook</b>
Filter option
<b>▶ Device information</b>
Device tag
Serial number
Firmware version
Device name
Order code
Extended order code 1
Extended order code 2
Extended order code 3
ENP version
<b>▶ Main electronic module + I/O module 1</b>
Firmware version
Build no. software
Bootloader revision
<b>▶ Sensor electronic module (ISEM)</b>
Firmware version



Build no. software
Bootloader revision
▶ I/O module 2
I/O module 2 terminal numbers
Firmware version
Build no. software
Bootloader revision
▶ I/O module 3
I/O module 3 terminal numbers
Firmware version
Build no. software
Bootloader revision
▶ I/O module 4
I/O module 4 terminal numbers
Firmware version
Build no. software
Bootloader revision
▶ Display module
Firmware version
Build no. software
Bootloader revision
▶ Display module
Firmware version
Build no. software
Bootloader revision
▶ Data logging
Assign chan. 1 to n
Logging interval
Clear logging
Data logging
Logging delay
Data log.control
Data log. status
Logging duration
▶ Heartbeat Technology
▶ Heartbeat settings
Plant operator
Location
▶ Gas validation settings

Select validation calibration
Validation type
Number validation points
Validation purge time
Meas. duration
Val. 1 to n concentration tar.
Val. 1 to n allowance
Scheduled validation
Validation interval day
Validation start hour
Last scheduled validation
Next scheduled validation
Start validation
<b>Performing verification</b>
Date/time
Meas. Duration
Verification mode
Ext. device info
Start verification
Switch gas valve
Progress
Measured validation
Output values
Measured concentration
Status
Verification result
<b>Verification results</b>
Date/time
Verification ID
Operating time
Verification result
Sensor
Sens. electronic
Gas validation
I/O module
System status
<b>Gas validation results</b>
Date/time
Operating time

Gas validation
Concentration 1 to n average
Conc. 1 to n standard deviation
Concentration 1 to n max
Concentration 1 to n min
Monitoring results
Detector reference level
Peak 1 index delta
Peak 2 index delta
► Spectrum plots
Midpoint default 1 to n
Ramp default 1 to n
Concentration
Dew point 1
Dew point 2
Cell gas press.
Cell gas temp.
Detect. ref. level
Detect. zero level
Peak 1 to n index
Peak1 to n index delta
Peak 1 to n index reference
Peak 1 to n index dry
Peak 1 to n reference dry
Peak track index delta
Midpoint delta
Auto ramp delta
Assign spec. 1 to n
Analyzer control
Reset
Det. 1 TIA gain
► SD card
Spectra log rate
Num. spectra file
Val. log level
Num. val. files
► Simulation
Current input 1 to n sim.
Value current inp1 to n

Status input simulation 1 to n
Input sign level 1 to n
Current output 1 to n simulation
Current output validation 1 to n
Switch simulation 1 to n
Switch state 1 to n
Relay output 1 to n simulation
Switch state 1 to n
Dev. Alarm simulation
Event category
Diagnostic event


### 6.3 Register information

Parameter	Register	Data type	Access	Selection/User entry/User interface
Locking status	4918	Integer	Read	256 = Hardware locked 512 = Temporarily locked
User role	2178	Integer	Read	0 = Operator 1 = Maintenance
Enter access code	2177	Integer	Read / Write	Four-digit access code

#### 6.3.1 System submenu

##### 6.3.1.1 Display

Parameter	Register	Data type	Access	Selection/User entry/User interface
Display language	3673	Integer	Read / Write	0 = English 1 = Français 2 = Italiano 3 = русский язык (Russian) 4 = 中文 (Chinese)
Format display	3625	Integer	Read / Write	0 = 1 value, max. size 1 = 1 bargraph + 1 value 2 = 2 values 3 = 1 value large + 2 values 4 = 4 values
Value 1 display	3963	Integer	Read / Write	2 = Cell gas pressure 3 = Cell gas temperature 4 = Dew point 1 5 = Dew point 2 151 = Concentration

Parameter	Register	Data type	Access	Selection/User entry/User interface
0% bargraph value 1	4136 to 4137	Float	Read / Write	Signed floating-point number
100% bargraph value 1	4142 to 4143	Float	Read / Write	Signed floating-point number
Decimal places 1	3365	Integer	Read / Write	0 = x 1 = x.x 2 = x.xx 3 = x.xxx 4 = x.xxxx
Value 2 display	3964	Integer	Read / Write	For the picklist, see the Value 1 display parameter (→  14)
Decimal places 2	4049	Integer	Read / Write	0 = x 1 = x.x 2 = x.xx 3 = x.xxx 4 = x.xxxx
Value 3 display	3966	Integer	Read / Write	For the picklist, see the <b>Value 1 display</b>
0% bargraph value 3	4138 to 4139	Float	Read / Write	Signed floating-point number
100% bargraph value 3	4140 to 4141	Float	Read / Write	Signed floating-point number
Decimal places 3	4050	Integer	Read / Write	0 = x 1 = x.x 2 = x.xx 3 = x.xxx 4 = x.xxxx
Value 4 display	3965	Integer	Read / Write	For the picklist, see the <b>Value 1 display</b>
Decimal places 4	4051	Integer	Read / Write	0 = x 1 = x.x 2 = x.xx 3 = x.xxx 4 = x.xxxx
Display interval	3604 to 3605	Float	Read / Write	1 to 10 s
Display damping	3554 to 3555	Float	Read / Write	0.0 to 999.9 s
Header	3624	Integer	Read / Write	0 = Device tag 1 = Free text
Header text	3968 to 3973	String	Read / Write	Max. 12 characters, such as letters, numbers or special characters (e.g., @, %, /)
Separator	3671	Integer	Read / Write	1 = point . 2 = comma ,

Parameter	Register	Data type	Access	Selection/User entry/User interface
Contrast display	3674 to 3675	Float	Read / Write	20 to 80 %
Backlight	3967	Integer	Read / Write	0 = Disable 1 = Enable

### 6.3.1.2 Configuration backup

Parameter	Register	Data type	Access	Selection/User entry/User interface
Operating time	2631 to 2637	String	Read	Days (d), hours (h), minutes (m) and seconds (s)
Last backup	6430 to 6436	String	Read	Days (d), hours (h), minutes (m) and seconds (s)
Configuration management	5500	Integer	Read / Write	0 = Cancel 1 = Execute backup 2 = Restore 4 = Clear backup data 5 = Compare
Backup state	5502	Integer	Read	1 = Backup in progress 2 = Restoring in progress 4 = Delete in progress 5 = Compare in progress 6 = Restoring failed 7 = Backup failed 251 = None
Comparison result	5514	Integer	Read	0 = Settings identical 1 = Settings not identical 2 = No backup available 3 = Check not done 4 = Backup settings corrupt 5 = Dataset incompatible

### 6.3.1.3 Diagnostic handling

Parameter	Register	Data type	Access	Selection/User entry/User interface
Alarm delay	6808 to 6809	Float	Read / Write	0 to 60 s

### Diagnostic behavior submenu

Parameter	Register	Data type	Access	Selection/User entry/User interface
Assign behavior of diagnostic no. 302	2312	Integer	Read / Write	0 = Warning 1 = Alarm
Assign behavior of diagnostic no. 441	4742	Integer	Read / Write	0 = Off 1 = Logbook entry only 2 = Warning

Parameter	Register	Data type	Access	Selection/User entry/User interface
				3 = Alarm
Assign behavior of diagnostic no. 444	5120	Integer	Read / Write	0 = Off 1 = Logbook entry only 2 = Warning 3 = Alarm
Assign behavior of diagnostic no. 905	30025	Integer	Read / Write	0 = Off 1 = Alarm 2 = Warning 3 = Logbook entry only 4 = Reset

#### 6.3.1.4 Administration

Parameter	Register	Data type	Access	Selection/User entry/User interface
Device reset	6817	Integer	Read / Write	0 = Cancel 1 = Restart device 2 = To delivery settings
Transmitter identifier	4510	Integer	Read	1 = 300
Activate SW option	2795	String	Read / Write	Max. 10-digit string consisting of numbers.
Software option overview	2902	Integer	Read	1 = Extended HistorOM 32768 = Heartbeat Verification 16384 = Heartbeat Monitoring

#### Define access code submenu

Parameter	Register	Data type	Access	Selection/User entry/User interface
Define access code	8677 to 8684	String	Read / Write	Max. 16-digit character string comprising numbers, letters, and special characters
Confirm access code	8685 to 8692	String	Read / Write	Max. 16-digit character string comprising numbers, letters, and special characters

#### Reset access code submenu

Parameter	Register	Data type	Access	Selection/User entry/User interface
Operating time	2631 to 2637	String	Read	Days (d), hours (h), minutes (m) and seconds (s)
Reset access code	8880 to 8895	String	Read / Write	Character string comprising numbers, letters, and special characters

## 6.3.2 Sensor

### 6.3.2.1 Measured values

#### Measured variables submenu

Parameter	Register	Data type	Access	Selection/User entry/User interface
Concentration	9455 to 9456	Float	Read	0 to 1000000 ppmv
Dew point 1	21458 to 21459	Float	Read	Signed floating-point number
Dew point 2	21800 to 21801	Float	Read	Signed floating-point number
Cell gas pressure	25216 to 25217	Float	Read	Signed floating-point number
Cell gas temperature	21854 to 21855	Float	Read	Signed floating-point number
Detector reference level	4720 to 4721	Float	Read	0 to 5 mA
Detector zero level	9667 to 9668	Float	Read	0 to 5 mA
Peak 1 index	9834 to 9835	Float	Read	0.0 to 511.0
Peak 1 index delta	30581 to 30582	Float	Read	-511.0 to 511.0
Peak 2 index	27600 to 27601	Float	Read	0.0 to 511.0
Peak 2 index delta	30672 to 30673	Float	Read	-511.0 to 511.0
Peak track index	29018 to 29019	Float	Read	0.0 to 511.0
Peak track index delta	28814 to 28815	Float	Read	-511.0 to 511.0
Midpoint delta	47236 to 47237	Float	Read	0.0 to 120.0 mA

#### Input values submenu

##### Current input 1 to n

Parameter	Register	Data type	Access	Selection/User entry/User interface
Measured values 1 to n	1: 6151 to 6152 2: 6153 to 6154 3: 6155 to 6156	Float	Read	Signed floating-point number
Measured current 1 to n	1: 6131 to 6132 2: 6133 to 6134 3: 6135 to 6136	Float	Read	0 to 22.5 mA

##### Value status input 1 to n

Parameter	Register	Data type	Access	Selection/User entry/User interface
Value status input 1 to n	1: 2746 2: 4699 3: 4700	Integer	Read	0 = Low 1 = High



**Output values submenu***Value current output 1 to n*

Parameter	Register	Data type	Access	Selection/User entry/User interface
Output current 1 to n	1: 5931 to 5932 2: 5933 to 5934 3: 5935 to 5936	Float	Read	0 to 22.5 mA
Measured current 1 to n	1: 5779 to 5780 2: 5781 to 5782 3: 5783 to 5784	Float	Read	0 to 30 mA

*Switch output 1 to n*

Parameter	Register	Data type	Access	Selection/User entry/User interface
Switch state 1 to n	1: 2485 2: 2486 3: 9917	Integer	Read	1 = Open 6 = Closed

*Relay output 1 to n*

Parameter	Register	Data type	Access	Selection/User entry/User interface
Switch state	1: 3518 2: 3519 3: 9875	Integer	Read	1 = Open 6 = Closed
Switch cycles	1: 7625 2: 7627 3: 7629	Integer	Read	Positive integer
Max. switch cycles number	1: 21919 2: 21921 3: 21923	Integer	Read	Positive integer

**6.3.2.2 System units**

Parameter	Register	Data type	Access	Selection/User entry/User interface
Concentration unit	2439	Integer	Read / Write	0 = ppmv 1 = lb/MMscf 2 = %vol 3 = mg/sm3 4 = ppbv 5 = mg/Nm3 240 = User conc.
Temperature unit	2109	Integer	Read / Write	0 = °C 1 = K 2 = °F 3 = °R
Pressure unit	2130	Integer	Read / Write	0 = bar 1 = psi a 2 = bar g

Parameter	Register	Data type	Access	Selection/User entry/User interface
				3 = psi g 4 = Pa a 5 = kPa a 6 = MPa a 7 = Pa g 8 = kPa g 9 = MPa g
Length unit	2087	Integer	Read / Write	44 = ft 45 = m 47 = in 49 = mm 240 = $\mu\text{m}$
Date/time format	2150	Integer	Read / Write	0 = dd.mm.yy hh:mm 1 = mm/dd/yy hh:mm am/pm 2 = dd.mm.yy hh:mm am/pm 3 = mm/dd/yy hh:mm

#### User-specific units submenu

Parameter	Register	Data type	Access	Selection/User entry/User interface
User concentration text	2585 to 2589	String	Read / Write	Max. 10 characters such as letters, numbers, or special characters (@, %, /)
User concentration offset	2490 to 2491	Float	Read / Write	Signed floating-point number
User concentration factor	2554 to 2555	Float	Read / Write	Signed floating-point number

#### 6.3.2.3 Stream

Parameter	Register	Data type	Access	Selection/User entry/User interface
Analyte type	21930	Integer	Read / Write	0 = H <sub>2</sub> O 1 = CO <sub>2</sub> 2 = H <sub>2</sub> S 3 = CH <sub>4</sub> 4 = NH <sub>3</sub> 5 = HCl 6 = O <sub>2</sub> 7 = CO 8 = SO <sub>2</sub> 9 = C <sub>2</sub> H <sub>2</sub>
Select calibration	22968	Integer	Read / Write	0 = 1 1 = 2 2 = 3 3 = 4

Parameter	Register	Data type	Access	Selection/User entry/User interface
Rolling average number	6876	Integer	Read / Write	1 to 256

#### 6.3.2.4 Dew Point

Parameter	Register	Data type	Access	Selection/User entry/User interface
Dew point method 1	21595	Integer	Read / Write	0 = Off 1 = ASTM1 2 = ASTM2 3 = ISO 4 = AB
Dew point method 2	7631	Integer	Read / Write	0 = Off 1 = ASTM1 2 = ASTM2 3 = ISO 4 = AB
Conversion type	21596	Integer	Read / Write	0 = Ideal 1 = Real
Pipeline pressure mode	48175	Integer	Read / Write	1 = Fixed value 0 = External value 11 = Current input 1 12 = Current input 2 13 = Current input 3
Pipeline pressure fixed	48251 to 48252	Float	Read / Write	Signed floating-point number
Pipeline pressure	9483 to 9484	Float	Read / Write	Signed floating-point number

#### Dew point calibration submenu

Parameter	Register	Data type	Access	Selection/User entry/User interface
Methane CH <sub>4</sub>	26445, 26453, 26461, 26469	Float	Read / Write	0.4 to 1.0 mole fraction
Ethane C <sub>2</sub> H <sub>6</sub>	26317, 26325, 26333, 26341	Float	Read / Write	0.0 to 0.2 mole fraction
Propane C <sub>3</sub> H <sub>8</sub>	26509, 26517, 26525, 26533	Float	Read / Write	0.0 to 0.15 mole fraction
Isobutane C <sub>4</sub> H <sub>10</sub>	25486, 25494, 25502, 25510	Float	Read / Write	0.0 to 0.1 mole fraction
N-Butane C <sub>4</sub> H <sub>10</sub>	26915, 26917, 26919, 26921	Float	Read / Write	0.0 to 0.1 mole fraction
Isopentane C <sub>5</sub> H <sub>12</sub>	27968, 27970, 27972, 27974	Float	Read / Write	0.0 to 0.1 mole fraction
N-Pentane C <sub>5</sub> H <sub>12</sub>	26931, 26933, 26935, 26937	Float	Read / Write	0.0 to 0.1 mole fraction

Parameter	Register	Data type	Access	Selection/User entry/User interface
Neopentane C <sub>5</sub> H <sub>12</sub>	26923, 26925, 26927, 26929	Float	Read / Write	0.0 to 0.1 mole fraction
Hexane+ C <sub>6</sub> H <sub>14</sub> +	27976, 27978, 27980, 27982	Float	Read / Write	0.0 to 0.1 mole fraction
Nitrogen N <sub>2</sub>	25314, 25322, 25330, 25338	Float	Read / Write	0.0 to 0.55 mole fraction
Carbon diox. CO <sub>2</sub>	26199, 26207, 26215, 26223	Float	Read / Write	0.0 to 0.3 mole fraction
Hydrog.sulf. H <sub>2</sub> S	26381, 26389, 26397, 26405	Float	Read / Write	0.0 to 0.05 mole fraction
Hydrogen H <sub>2</sub>	29191, 29193, 29195, 29197	Float	Read / Write	0.0 to 0.2 mole fraction

### 6.3.2.5 Peak Tracking

Parameter	Register	Data type	Access	Selection/User entry/User interface
Peak track analyzer control	21460	Integer	Read / Write	0 = Off 1 = On
Peak track reset	4727	Integer	Read / Write	0 = Off 3 = Reset
Peak track average number	21568	Integer	Read / Write	1 to 3600

### 6.3.2.6 Sensor adjustment

Parameter	Register	Data type	Access	Selection/User entry/User interface
Concentration adjustment	47129	Integer	Read / Write	0 = Off 1 = On
Concentration multiplier	47222 to 47223	Float	Read / Write	-1000000 to 1000000
Concentration offset	47224 to 47225	Float	Read / Write	Signed floating-point number
2f base crv source	28614	Integer	Read / Write	0 = Ref0 curve 1 = Ref0 RT curve
2f base RT update	30669	Integer	Read / Write	0 = Cancel 1 = Start

### Sensor adjustment calibration submenu

Parameter	Register	Data type	Access	Selection/User entry/User interface
Laser midpoint default	31090, 31092, 31094, 31096	Float	Read / Write	0 to 120 mA
Laser ramp default	26750, 26752, 26754, 26756	Float	Read / Write	0 to 120 mA

Parameter	Register	Data type	Access	Selection/User entry/User interface
Laser modulation amplitude default	36077, 36079, 36081, 36083	Float	Read / Write	0 to 100 mA

### 6.3.2.7 Stream change compensation (SCC)

Parameter	Register	Data type	Access	Selection/User entry/User interface
Calibration 1 to n	35689 to 35692	Integer	Read	1 = No 0 = Yes

### SCC calibration submenu

Parameter	Register	Data type	Access	Selection/User entry/User interface
Methane CH <sub>4</sub>	26445, 26453, 26461, 26469	Float	Read / Write	0.4 to 1.0 mole fraction
Ethane C <sub>2</sub> H <sub>6</sub>	26317, 26325, 26333, 26341	Float	Read / Write	0.0 to 0.2 mole fraction
Propane C <sub>3</sub> H <sub>8</sub>	26509, 26517, 26525, 26533	Float	Read / Write	0.0 to 0.15 mole fraction
Isobutane C <sub>4</sub> H <sub>10</sub>	25486, 25494, 25502, 25510	Float	Read / Write	0.0 to 0.1 mole fraction
N-Butane C <sub>4</sub> H <sub>10</sub>	26915, 26917, 26919, 26921	Float	Read / Write	0.0 to 0.1 mole fraction
Isopentane C <sub>5</sub> H <sub>12</sub>	27968, 27970, 27972, 27974	Float	Read / Write	0.0 to 0.1 mole fraction
N-Pentane C <sub>5</sub> H <sub>12</sub>	26931, 26933, 26935, 26937	Float	Read / Write	0.0 to 0.1 mole fraction
Neopentane C <sub>5</sub> H <sub>12</sub>	26923, 26925, 26927, 26929	Float	Read / Write	0.0 to 0.1 mole fraction
Hexane+ C <sub>6</sub> H <sub>14</sub> +	27976, 27978, 27980, 27982	Float	Read / Write	0.0 to 0.1 mole fraction
Nitrogen N <sub>2</sub>	25314, 25322, 25330, 25338	Float	Read / Write	0.0 to 0.55 mole fraction
Carbon diox. CO <sub>2</sub>	26199, 26207, 26215, 26223	Float	Read / Write	0.0 to 0.3 mole fraction
Hydrog.sulf. H <sub>2</sub> S	26381, 26389, 26397, 26405	Float	Read / Write	0.0 to 0.05 mole fraction
Hydrogen H <sub>2</sub>	29191, 29193, 29195, 29197	Float	Read / Write	0.0 to 0.2 mole fraction

### 6.3.2.8 Calibration

Parameter	Register	Data type	Access	Selection/User entry/User interface
Det. 1 TIA gain	29235	Integer	Read	0 to 15
Detector bias	29237 to 29238	Float	Read / Write	Signed floating-point value

Parameter	Register	Data type	Access	Selection/User entry/User interface
Flow switch input	4712	Integer	Read / Write	0 = Off 1 = Normally open 2 = Normally closed
Flow switch state	29222	Integer	Read	0 = No flow 1 = Flow

### 6.3.3 I/O configuration submenu

Parameter	Register	Data type	Access	Selection/User entry/User interface
I/O module 1 to n terminal numbers	1: 6541 2: 6542 3: 6543	Integer	Read	0 = Not used 1 = 26-27 (I/O 1) 2 = 24-25 (I/O 2) 3 = 22-23 (I/O 3)
I/O module 1 to n information	1: 8659 2: 8660 3: 8661	Integer	Read	1 = MODBUS 2 = Configurable 3 = Not configurable 254 = Not plugged 255 = Invalid
I/O module 1 to n type	1: 6417 2: 6418 3: 6419	Integer	Read / Write	0 = Off 1 = Current output <sup>1</sup> 2 = Current input <sup>1</sup> 3 = Switch output <sup>1</sup> 5 = Status input <sup>1</sup> 6 = Relay output <sup>1</sup>
Apply I/O configuration	8665	Integer	Read / Write	0 = Yes 1 = No
I/O alteration code	6427	Integer	Read/Write	Positive integer

### 6.3.4 Input submenu

#### 6.3.4.1 Current input 1 to n

Parameter	Register	Data type	Access	Selection/User entry/User interface
Terminal number	1: 6548 2: 6549 3: 6550	Integer	Read	0 = Not used 1 = 26-27 (I/O 1) 2 = 24-25 (I/O 2) 3 = 22-23 (I/O 3)
Signal mode	1: 6424 2: 6425	Integer	Read / Write	0 = Passive 2 = Active
Current span	1: 6147 2: 6148	Integer	Read / Write	0 = 4 to 20 mA (4 to 20.5 mA) 1 = 4 to 20 mA US (3.9 to 20.8 mA)

<sup>1</sup> Visibility depends on order options or device settings

Parameter	Register	Data type	Access	Selection/User entry/User interface
				2 = 4 to 20 mA NAMUR (3.8 to 20.5 mA) 3 = 0 to 20 mA (0 to 20.5 mA)
0/4 mA value	1: 6111 to 6112 2: 6113 to 6114	Float	Read / Write	Signed floating-point number
20 mA value	1: 6119 to 6120 2: 6121 to 6122	Float	Read / Write	Signed floating-point number
Failure mode	1: 6159 2: 6160	Integer	Read / Write	1 = Last valid value 2 = Alarm 6 = Defined value
Failure value	1: 6163 to 6164 2: 6165 to 6166	Float	Read / Write	Signed floating-point number

## 6.3.5 Output submenu

### 6.3.5.1 Current output 1 to n

Parameter	Register	Data type	Access	Selection/User entry/User interface
Terminal number	1: 6545 2: 6546	Integer	Read	0 = Not used 1 = 26-27 (I/O 1) 2 = 24-25 (I/O 2) 3 = 22-23 (I/O 3)
Signal mode	1: 6421 2: 6422	Integer	Read / Write	0 = Passive 2 = Active
Process variable current output	5927 to 5929	Integer	Read / Write	0 = Off 151 = Concentration 3 = Cell gas temperature 4 = Dew point 1 5 = Dew point 2
Current range output	1: 5923 2: 5924	Integer	Read / Write	0 = 4 to 20 mA (4 to 20.5 mA) 1 = 4 to 20 mA US (3.9 to 20.8 mA) 2 = 4 to 20 mA NAMUR (3.8 to 20.5 mA) 3 = 0 to 20 mA (0 to 20.5 mA) 4 = Fixed value
Fixed current	1: 5987 to 5988 2: 5989 to 5990	Float	Read / Write	0 to 22.5 mA
Lower range value output	1: 6195 to 6196 2: 6197 to 6198	Float	Read / Write	Signed floating-point number
Upper range value output	1: 5915 to 5916 2: 5917 to 5918	Float	Read / Write	Signed floating-point number
Damping current output	1: 5903 to 5904 2: 5905 to 5906	Float	Read / Write	0.0 to 999.9 s

Parameter	Register	Data type	Access	Selection/User entry/User interface
Failure behavior current output	1: 5911 2: 5912	Integer	Read / Write	0 = Min. 1 = Max. 4 = Actual value 5 = Last valid value 6 = Fixed value
Failure current	1: 5979 to 5980 2: 5981 to 5982	Float	Read / Write	0 to 22.5 mA
Output current 1 to n	1: 5931 to 5932 2: 5933 to 5934	Float	Read	0 to 22.5 mA
Measured current 1 to n	1: 5779 to 5780 2: 5781 to 5782	Float	Read	0 to 30 mA

### 6.3.5.2 Switch output 1 to n

Parameter	Register	Data type	Access	Selection/User entry/User interface
Terminal number	1: 6551 2: 6552	Integer	Read	0 = Not used 1 = 26-27 (I/O 1) 2 = 24-25 (I/O 2) 3 = 22-23 (I/O 3)
Signal mode	1: 6235 2: 6236	Integer	Read / Write	0 = Passive 2 = Active 3 = Passive NAMUR
Operating mode	1: 4479 2: 4480	Integer	Read / Write	1 = Switch
Switch output function	1: 3022 2: 3023	Integer	Read / Write	0 = Off 1 = On 2 = Diagnostic behavior 4 = Limit 5 = Status
Assign diagnostic behavior	1: 3096 2: 3097	Integer	Read / Write	0 = Alarm 1 = Warning 2 = Alarm or warning
Assign limit	1: 3184 2: 3185	Integer	Read / Write	0 = Off 151 = Concentration 4 = Dew point 1 5 = Dew point 2
Switch-on value	1: 3242 to 3243 2: 3244 to 3245	Float	Read / Write	Signed floating-point number
Switch-off value	1: 3234 to 3235 2: 3236 to 3237	Float	Read / Write	Signed floating-point number
Switch-on delay	1: 6247 to 6248 2: 6249 to 6250	Float	Read / Write	0.0 to 100.0 s
Switch-off delay	1: 6239 to 6240 2: 6241 to 6242	Float	Read / Write	0.0 to 100.0 s



Parameter	Register	Data type	Access	Selection/User entry/User interface
Failure mode	1: 3384 2: 3385	Integer	Read / Write	0 = Actual status 1 = Open 6 = Closed
Switch state 1 to n	1: 2485 2: 2486	Integer	Read	1 = Open 6 = Closed
Invert output signal	1: 2583 2: 2584	Integer	Read / Write	0 = Yes 1 = No

### 6.3.5.3 Relay output 1

Parameter	Register	Data type	Access	Selection/User entry/User interface
Terminal number	1: 8278 2: 8279	Integer	Read	0 = Not used 1 = 26-27 (I/O 1) 2 = 24-25 (I/O 2) 3 = 22-23 (I/O 3)
Relay output function	1: 2488 2: 2489	Integer	Read / Write	1 = Open 2 = Diagnostic behavior 4 = Limit 5 = Status 6 = Closed
Assign limit	1: 8248 2: 8249	Integer	Read / Write	0 = Off 4 = Dew point 1 5 = Dew point 2 151 = Concentration
Assign diagnostic behavior	1: 8245 2: 8246	Integer	Read / Write	0 = Alarm 1 = Warning 2 = Alarm or warning
Switch-off value	1: 8260 to 8261 2: 8262 to 8263	Float	Read / Write	Signed floating-point number
Switch-off delay	1: 8254 to 8255 2: 8256 to 8257	Float	Read / Write	0.0 to 100.0 s
Switch-on value	1: 8233 to 8234 2: 8235 to 8236	Float	Read / Write	Signed floating-point number
Switch-on delay	1: 8266 to 8267 2: 8268 to 8269	Float	Read / Write	0.0 to 100.0 s
Failure mode	1: 8242 2: 8243	Integer	Read / Write	0 = Actual status 1 = Open 6 = Closed
Switch state	1: 3518 2: 3519	Integer	Read	1 = Open 6 = Closed
Powerless relay status	1: 7009 2: 7010	Integer	Read / Write	1 = Open 6 = Closed

## 6.3.6 Communication submenu

### 6.3.6.1 Modbus configuration

Parameter	Register	Data type	Access	Selection/User entry/User interface
Bus address <sup>1</sup>	4910	Integer	Read / Write	1 to 247
Baudrate <sup>1</sup>	4912	Integer	Read / Write	0 = 1200 BAUD 1 = 2400 BAUD 2 = 4800 BAUD 3 = 9600 BAUD 4 = 19200 BAUD 5 = 38400 BAUD 6 = 57600 BAUD 7 = 115200 BAUD
Data transfer mode <sup>1</sup>	4913	Integer	Read / Write	0 = RTU 1 = ASCII
Parity <sup>1</sup>	4914	Integer	Read / Write	0 = Even 1 = Odd 2 = None / 2 stop bits 3 = None / 1 stop bit
Byte order	4915	Integer	Read / Write	0 = 0-1-2-3 1 = 3-2-1-0 2 = 2-3-0-1 3 = 1-0-3-2
Telegram delay <sup>2</sup>	4916 to 4917	Float	Read / Write	0 to 100 ms
Priority IP address <sup>3</sup>	28273 to 28280	String	Read / Write	4 octet: 0 to 255 (in the particular octet)
Inactivity timeout <sup>2</sup>	47014 to 47015	Float	Read / Write	0 to 99 s
Max connections <sup>2</sup>	47016	Integer	Read / Write	1 to 4
Failure mode	4920	Integer	Read / Write	1 = Last valid value 255 = NaN <sup>4</sup> value
Bus termination <sup>1</sup>	5774	Integer	Read	0 = Off 1 = On
Fieldbus writing access	6807	Integer	Read / Write	0 = Read + write 1 = Read only

<sup>1</sup> Modbus RS485 only

<sup>2</sup> Modbus RS485 only

<sup>3</sup> Modbus TCP only

<sup>4</sup> NaN = Not a number

**6.3.6.2 Modbus information**

Parameter	Register	Data type	Access	Selection/User entry/User interface
Device ID	2547	Integer	Read	4-digit hexadecimal number
Device revision	4481	Integer	Read	4-digit hexadecimal number

**6.3.6.3 Modbus data map**

Parameter	Register	Data type	Access	Selection/User entry/User interface
Scan list register 0 to 15	0: 5001 1: 5002 2: 5003 3: 5004 4: 5005 5: 5006 6: 5007 7: 5008 8: 5009 9: 5010 10: 5011 11: 5012 12: 5013 13: 5014 14: 5015 15: 5016	Integer	Read / Write	1 to 65,535
Scan list data area 0 to 15	0: 5051 to 5052 1: 5053 to 5054 2: 5055 to 5056 3: 5057 to 5058 4: 5059 to 5060 5: 5061 to 5062 6: 5063 to 5064 7: 5065 to 5066 8: 5067 to 5068 9: 5069 to 5070 10: 5071 to 5072 11: 5073 to 5074 12: 5075 to 5076 13: 5077 to 5078 14: 5079 to 5080 15: 5081 to 5082	Integer / Float	Read / Write	Dependent on scan list register entered

**6.3.6.4 Web server**

Parameter	Register	Data type	Access	Selection/User entry/User interface
Web server language	4219	Integer	Read / Write	0 = English 1 = Français 2 = Italiano 3 = русский язык (Russian)

Parameter	Register	Data type	Access	Selection/User entry/User interface
				4 = 中文 (Chinese)
MAC address	4210 to 4218	String	Read	Unique 12-digit character string comprising letters and numbers
DHCP client	21781	Integer	Read / Write	0 = Off 1 = On
IP address	4155 to 4162	String	Read / Write	4 octet: 0 to 255 (in the particular octet)
Subnet mask	4163 to 4170	String	Read / Write	4 octet: 0 to 255 (in the particular octet)
Default gateway	4171 to 4178	String	Read / Write	4 octet: 0 to 255 (in the particular octet)
Web server functionality	4220	Integer	Read / Write	0 = Off 1 = On 2 = HTML Off
Login page	5802	Integer	Read / Write	0 = Without header 1 = With header

### 6.3.7 WLAN

Parameter	Register	Data type	Access	Selection/User entry/User interface
WLAN	6178	Integer	Read/Write	0-Disable 1=Enable
WLAN mode	28777	Integer	Read/Write	0=WLAN access point 1=WLAN client
SSID name	28940 to 28955	String	Read/Write	-
Network security	6206	Integer	Read/Write	0 = Unsecured 1 = WPA2-PSK 2 = EAP-PEAP with MSCHAPv2 * 3 = EAP-TLS * 4 = EAP-PEAP MSCHAPv2 no server authentic. *
Security identification	28817	Integer	Read	1 = Trusted issuer certificate 2 = Device certificate 4 = Device private key
User name	28956 to 28971	String	Read/Write	-
WLAN password	28972 to 28987	String	Read/Write	-
Connection state	29221	Integer	Read	<b>0=Not connected</b> 1=Connected
Received signal strength	28818	Integer	Read	2=Medium 9=Low <b>10-High</b>
WLAN IP address	8643 to 8650	String	Read/Write	4 octet: 0 to 255 (in the particular octet)

Parameter	Register	Data type	Access	Selection/User entry/User interface
Gateway IP address	29227 to 29234	String	Read	Character string comprising numbers, letters and special characters.
IP address DNS	29283 to 29290	String	Read	Character string comprising numbers, letters and special characters.
WLAN subnet mask	8651 to 8658	String	Read/Write	4 octet: 0 to 255 (in the particular octet)
WLAN MAC address	8602 to 8610	String	Read	Unique 12-digit character string comprising letters and numbers
WLAN passphrase	8611 to 8626	String	Read/Write	8 to 32-digit character string comprising numbers, letters and special characters (without spaces)
Assign SSID name	6218	Integer	Read/Write	0=Device tag <b>1=User-defined</b>
SSID name	8627 to 8642	String	Read/Write	Max. 32-digit character string comprising numbers, letters and special characters
Select antenna	6182	Integer	Read/Write	0=External antenna 1=Internal antenna
WLAN channel	6102	Integer	Read/Write	1 to 11

### 6.3.8 Diagnostics

Parameter	Register	Data type	Access	Selection/User entry/User interface
Actual diagnostic status signal	2075	Integer	Read	0: OK 1: Failure (F) 2: Function check (C) 8: Out of specification (S) 4: Maintenance required (M) 16: --- 32: Not categorized
Actual diagnostic number	6801	Integer	Read	0 to 65,535
Actual diagnostic service ID	2732	Integer	Read	0 to 65,535
Actual diagnostic string	6821 to 6830	String	Read	Diagnostic number, service ID and status signal
Previous diagnostics service ID	2734	Integer	Read	0 to 65,535
Operating time from restart	2624 to 2630	String	Read	Days (d), hours (h), minutes (m) and seconds (s)
Operating time	2631 to 2637	String	Read	Days (d), hours (h), minutes (m) and seconds (s)

**6.3.8.1 Diagnostic list**

Parameter	Register	Data type	Access	Selection/User entry/User interface
Diagnostics 1	2736	Integer	Read	0 to 65,535
Diagnostics 2	2738	Integer	Read	0 to 65,535
Diagnostics 3	2740	Integer	Read	0 to 65,535
Diagnostics 4	2742	Integer	Read	0 to 65,535
Diagnostics 5	2744	Integer	Read	0 to 65,535

**6.3.8.2 Event logbook**

Parameter	Register	Data type	Access	Selection/User entry/User interface
Filter options	4596	Integer	Read / Write	0 = Failure (F) 4 = Maintenance required (M) 8 = Function check (C) 12 = Out of specification (S) 16 = Information (I) 255 = All

**6.3.8.3 Device information**

Parameter	Register	Data type	Access	Selection/User entry/User interface
Device tag	2026 to 2041	String	Read	Max. 32 characters, such as letters, numbers, or special characters (e.g., @, %, /).
Serial number	7003 to 7008	String	Read	Max. 11-digit character string comprising letters and numbers.
Firmware version	7277 to 7280	String	Read	Character string in the format xx.yy.zz
Device name	7238 to 7245	String	Read	J22 TDLAS Gas Analyzer
Order code	2058 to 2067	String	Read	Character string composed of letters, numbers, and certain punctuation marks (e.g., /).
Extended order code 1	2212 to 2221	String	Read	Character string
Extended order code 2	2222 to 2231	String	Read	Character string
Extended order code 3	2232 to 2241	String	Read	Character string
ENP version	4003 to 4010	String	Read	Character string

**6.3.8.4 Main electronic module + I/O module 1**

Parameter	Register	Data type	Access	Selection/User entry/User interface
Firmware version	7039	Integer	Read	Positive integer
Build no. software	2326	Integer	Read	Positive integer
Bootloader revision	2264	Integer	Read	Positive integer

**6.3.8.5 Sensor electronic module (ISEM)**

Parameter	Register	Data type	Access	Selection/User entry/User interface
Firmware version	5165	Integer	Read	Positive integer
Build no. software	4989	Integer	Read	Positive integer
Bootloader revision	4802	Integer	Read	Positive integer

**6.3.8.6 I/O module 2**

Parameter	Register	Data type	Access	Selection/User entry/User interface
I/O module 2 terminal numbers	6542	Integer	Read	0 = Not used 1 = 26-27 (I/O 1) 2 = 24-25 (I/O 2) 3 = 22-23 (I/O 3)
Firmware version	9877	Integer	Read	Positive integer
Build no. software	9918	Integer	Read	Positive integer
Bootloader revision	9984	Integer	Read	Positive integer

**6.3.8.7 I/O module 3**

Parameter	Register	Data type	Access	Selection/User entry/User interface
I/O module 3 terminal numbers	6543	Integer	Read	0 = Not used 1 = 26-27 (I/O 1) 2 = 24-25 (I/O 2) 3 = 22-23 (I/O 3)
Firmware version	9879	Integer	Read	Positive integer
Build no. software	9919	Integer	Read	Positive integer
Bootloader revision	9986	Integer	Read	Positive integer

**6.3.8.8 Display module**

Parameter	Register	Data type	Access	Selection/User entry/User interface
Firmware version	5163	Integer	Read	Positive integer
Build no. software	4988	Integer	Read	Positive integer
Bootloader revision	4800	Integer	Read	Positive integer

**6.3.8.9 Data logging**

Parameter	Register	Data type	Access	Selection/User entry/User interface
Assign chan. 1	2445	Integer	Read / Write	0 = Off 2 = Cell gas pressure 3 = Cell gas temperature 4 = Dew point 1 5 = Dew point 2 121 = Current output 1 122 = Current output 2 151 = Concentration 152 = Flow switch state

Parameter	Register	Data type	Access	Selection/User entry/User interface
Assign chan. 2	2446	Integer	Read / Write	0 = Off 2 = Cell gas pressure 3 = Cell gas temperature 4 = Dew point 1 5 = Dew point 2 121 = Current output 1 122 = Current output 2 151 = Concentration 152 = Flow switch state
Assign chan. 3	2548	Integer	Read / Write	0 = Off 2 = Cell gas pressure 3 = Cell gas temperature 4 = Dew point 1 5 = Dew point 2 121 = Current output 1 122 = Current output 2 151 = Concentration 152 = Flow switch state
Assign chan. 4	4286	Integer	Read / Write	0 = Off 2 = Cell gas pressure 3 = Cell gas temperature 4 = Dew point 1 5 = Dew point 2 121 = Current output 1 122 = Current output 2 151 = Concentration 152 = Flow switch state
Logging interval	4288 to 4289	Float	Read / Write	0.1 to 3600.0 s
Clear logging	4287	Integer	Read / Write	0 = Cancel 2 = Clear data
Data logging	5950	Integer	Read / Write	0 = Overwriting 1 = Not overwriting
Logging delay	5938	Integer	Read / Write	0 to 999 hours
Data logging control	5930	Integer	Read / Write	0 = None 1 = Stop 2 = Delete + start
Data logging status	5937	Integer	Read / Write	0 = Done 1 = Stopped 2 = Active 3 = Delay active
Logging duration	2827 to 2828	Float	Read / Write	Positive floating-point number



**6.3.8.10 Heartbeat Technology****Heartbeat settings submenu**

Parameter	Register	Data type	Access	Selection/User entry/User interface
Plant operator	3414 to 3429	String	Read / Write	Max. 32 characters such as letters, numbers, or special characters (e.g., @, %, /)
Location	3430 to 3445	String	Read / Write	Max. 32 characters such as letters, numbers, or special characters (e.g., @, %, /)

**Gas validation settings submenu**

Parameter	Register	Data type	Access	Selection/User entry/User interface
Select validation calibration	4717	Integer	Read / Write	0 = 1 1 = 2 2 = 3 3 = 4
Validation type	26456	Integer	Read / Write	0 = Validation manual gas 1 = Validation auto gas
Number of validation points	30005	Integer	Read / Write	0 = 1 1 = 2
Validation gas purge time	33276 to 33277	Float	Read / Write	0 to 5 minutes
Measurement duration	6476 to 6477	Float	Read / Write	0.25 to 60 minutes
Validation gas information	47238 to 47253	String	Read / Write	Max. 32 characters such as letters, numbers, or special characters (e.g., @, %, /)
Validation concentration	47226 to 47227	Float	Read / Write	0 to 1000000 ppmv
Validation allowance	47228 to 47229	Float	Read / Write	0 to 100%
Start validation	30015	Integer	Read/Write	0: Cancel, 1: Start

**Performing verification submenu**

Parameter	Register	Data type	Access	Selection/User entry/User interface
Year	2495	Integer	Read / Write	9 to 99

Parameter	Register	Data type	Access	Selection/User entry/User interface
Month	2494	Integer	Read / Write	0 = January 1 = February 2 = March 3 = April 4 = May 5 = June 6 = July 7 = August 8 = September 9 = October 10 = November 11 = December
Day	2493	Integer	Read / Write	1 to 31 d
Hour	2492	Integer	Read / Write	0 to 23 h
AM/PM	2496	Integer	Read / Write	0 = AM 1 = PM
Minute	2467	Integer	Read / Write	0 to 59 min
Measurement duration	6476 to 6477	Float	Read / Write	0.25 to 60 minutes
Verification mode	2366	Integer	Read / Write	0 = Standard verification 3 = Extended validation 4 = Extended current output 2 = Extended validation and current output
External device information	20493 to 20508	String	Read / Write	Max. 32 characters such as letters, numbers or special characters (e.g. @,% , /)
Start verification	2270	Integer	Read / Write	0 = Cancel 1 = Start 10 = Output 1 low value <sup>1</sup> 11 = Output 1 high value <sup>1</sup> 12 = Output 2 low value <sup>1</sup> 13 = Output 2 high value <sup>1</sup> 18 = Prepare validation 19 = End validation
Progress	6797	Integer	Read	0 to 100 %

<sup>1</sup> Visibility depends on order options or device settings

Parameter	Register	Data type	Access	Selection/User entry/User interface
Status	2079	Integer	Read	0 = Failed 1 = Done 3 = Not done 8 = Busy 9 = Purging
Measured values	5512 to 5513	Float	Read / Write	Signed floating-point number
Output values	5516 to 5517	Float	Read	Signed floating-point number
Measured concentration	36752 to 36753	Float	Read	0 to 1000000 ppmv
Verification result	2355	Integer	Read	0 = Failed 2 = Passed 3 = Not done 250 = Not supported 254 = Not plugged

### Gas verification results submenu

The parameter values are based upon the results of the last extended validation and do not reflect the status of the measurement device. Subsequent extended validations will overwrite these parameters.

Parameter	Register	Data type	Access	Selection/User entry/User interface
Operating time	3346 to 3359	String	Read	Days (d), hours (h), minutes (m), seconds (s)
Verification ID	2315	Integer	Read	0 to 65535
Date/time	2372 to 2391	String	Read	This field appears in the system unit format defined in the main menu setup. Refer to the system units in the <i>J22 and JT33 TDLAS Gas Analyzer Device Parameters (GP01198C)</i> .
Verification result	2355	Integer	Read	0 = Failed 2 = Passed 3 = Not done 250 = Not supported 254 = Not plugged
Sensor (OH)	2384	Integer	Read	0 = Failed 2 = Passed 3 = Not done 250 = Not supported 254 = Not plugged
Sensor electronic module (ISEM)	2385	Integer	Read	0 = Failed 2 = Passed 3 = Not done 250 = Not supported 254 = Not plugged

Parameter	Register	Data type	Access	Selection/User entry/User interface
Gas validation	5199	Integer	Read	0 = Failed 2 = Passed 3 = Not done 250 = Not supported 254 = Not plugged
I/O module	2386	Integer	Read	0 = Failed 2 = Passed 3 = Not done 250 = Not supported 254 = Not plugged
System status	5790	Integer	Read	0 = Failed 2 = Passed 3 = Not done 250 = Not supported 254 = Not plugged
Verification mode	2366	Integer	Read/Write	0 = Standard verification 3 = Extended validation 4 = Extended current output

#### Gas validation results submenu

Parameter	Register	Data type	Access	Selection/User entry/User interface
Date/time	48598 to 48617	String	Read	dd.mm.yy hh:mm (Dependent on date/time format selected)
Operating time	48608 to 48614	String	Read	Days (d), hours (h), minutes (m), seconds (s)
Gas validation	44668	Integer	Read	0 = Failed 2 = Passed 3 = Not done 250 = Not supported 254 = Not plugged
Concentration average	48034 to 48035	Float	Read	0 to 1000000 ppmv
Concentration standard deviation	36754 to 36755	Float	Read	0 to 1000000 ppmv
Concentration maximum	48229 to 48230	Float	Read	0 to 1000000 ppmv
Concentration minimum	48596 to 48597	Float	Read	0 to 1000000 ppmv

#### Monitoring results submenu

Parameter	Register	Data type	Access	Selection/User entry/User interface
Detector reference level	4720 to 4721	Float	Read	0 to 5 mA
Peak 1 index delta	30581	Float	Read	-511.0 to 511.0

Parameter	Register	Data type	Access	Selection/User entry/User interface
Peak 2 index delta	30672	Float	Read	-511.0 to 511.0

### 6.3.9 Simulation

Parameter	Register	Data type	Access	Selection/User entry/User interface
Current input 1 to n simulation	1: 6127 2: 6128	Integer	Read / Write	0 = Off 1 = On
Value current input 1 to n	1: 6139 to 6140 2: 6141 to 6142	Float	Read / Write	0 to 22.5 mA
Current output 1 to n simulation	1: 5939 2: 5940	Integer	Read / Write	0 = Off 1 = On
Current output value 1 to n	1: 5995 to 5996 2: 5997 to 5998	Float	Read / Write	0 to 22.5 mA
Switch output simulation 1 to n	1: 6223 2: 6224	Integer	Read / Write	0 = Off 1 = On
Switch state 1 to n	1: 6227 2: 6228	Integer	Read / Write	1 = Open 6 = Closed
Relay output 1 to n simulation	1: 7523 2: 7524	Integer	Read / Write	0 = Off 1 = On
Switch state 1 to n	1: 8239 2: 8240	Integer	Read / Write	1 = Open 6 = Closed
Device alarm simulation	6812	Integer	Read / Write	0 = Off 1 = On
Diagnostic event category	4261	Integer	Read / Write	0 = Sensor 1 = Electronics 2 = Configuration 3 = Process
Diagnostic event simulation	4259	Integer	Read / Write	Off Diagnostic event picklist (depends on the category selected)

### 6.3.10 Spectrum plots

Parameter	Register	Data type	Access	Selection/User entry/User interface
Midpoint default 1 to n	31090, 31092, 31094, 31096	Float	Read / Write	0 to 120 mA
Ramp default 1 to n	26750, 26752, 26754, 26756	Float	Read / Write	0 to 120 mA
Concentration	9455 to 9456	Float	Read	0 to 1000000 ppmv
Dew point 1	21458 to 21459	Float	Read	Signed floating-point number
Dew point 2	21800 to 21801	Float	Read	Signed floating-point number
Cell gas pressure	25216 to 25217	Float	Read	-0.5 to 6.9 Bar

Parameter	Register	Data type	Access	Selection/User entry/User interface
Cell gas temperature	21854 to 21855	Float	Read	-20 to +60 °C
Detector reference level	4720 to 4721	Float	Read	0 to 5 mA
Detector zero level	9667 to 9668	Float	Read	0 to 5 mA
Peak 1 index	9834 to 9835	Float	Read	0 to 511.0
Peak 1 index delta	30581 to 30582	Float	Read	-511.0 to 511.0
Peak 2 index	27600 to 27601	Float	Read	0 to 511.0
Peak 2 index delta	30672 to 30673	Float	Read	-511.0 to 511.0
Peak track index	29018 to 29019	Float	Read	0 to 511.0
Peak track index delta	28814	Float	Read	-511.0 to 511.0
Midpoint delta	47236 to 47237	Float	Read	0 to 120 mA
Analyzer control	21460	Integer	Read / Write	0 = Off 1 = On
Reset	4727	Integer	Read / Write	0 = Off 3 = Reset
Det. 1 TIA gain	29235	Integer	Read / Write	0 to 15

### 6.3.11 SD card

Parameter	Register	Data type	Access	Selection/User entry/User interface
Spectra log rate	26289 to 26290	Float	Read	45 to 86400 sec
Estimated number of spectra files	24902 to 24903	Float	Read	0 to 30
Validation log level	29082	Integer	Read / Write	0 = Off 1 = Normal 2 = Extended 255 = All
Number of validation files	30879	Integer	Read	0 to 60

[www.addresses.endress.com](http://www.addresses.endress.com)

---