Safety Instructions Micropilot FMR50/51/52/53/54/56/57

4-20 mA HART

0/1Ex ia IIC T6...T1 Ga/Gb X Ex ia IIIC T85 ℃ Da/Db X







Micropilot FMR50/51/52/53/54/56/57

4-20 mA HART

Table of contents

Associated documentation	4
Supplementary documentation	4
Certificates and declarations	4
Manufacturer address	4
Extended order code	4
Safety instructions: General	LO
Safety instructions: Specific conditions of use	LO
Safety instructions: Installation	L2
Safety instructions: Zone 0	14
Temperature tables	14
Connection data	16

Associated documentation	All documentation is available on the Internet: www.endress.com/Deviceviewer (enter the serial number from the nameplate). To commission the device, please observe the Operating Instructions
	pertaining to the device:
	 BA01045F (FMR50) BA01049F (FMR51, FMR52) BA01050F (FMR53, FMR54) BA01048F (FMR56, FMR57)
Supplementary	Explosion protection brochure: CP00021Z
documentation	The explosion protection brochure is available on the Internet: www.endress.com/Downloads
Certificates and declarations	Certificate of Conformity TP TC 012/2011
	Inspection authority: LLP "T-Standard" (ТОО/ЖШС "Т-Стандарт")
	Certificate number: EAƏC KZ 7500525.01.01.02013
	Affixing the certificate number certifies conformity with the following standards (depending on the device version):
	 GOST 31610.0-2019 (IEC 60079-0:2017) GOST 31610.11-2014 (IEC 60079-11:2011) GOST 31610.26-2016 (IEC 60079-26:2014)
Manufacturer address	Endress+Hauser SE+Co. KG Hauptstraße 1 79689 Maulburg, Germany Address of the manufacturing plant: See nameplate.
Extended order code	The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional information about the nameplate is provided in the associated Operating Instructions.

Structure of the extended order code

FMR5x	-	*******	+	A*B*C*D*E*F*G*
(Device		(Basic		(Optional
type)		specifications)		specifications)

* = Placeholder

At this position, an option (number or letter) selected from the specification is displayed instead of the placeholders.

Basic specifications


The features that are absolutely essential for the device (mandatory features) are specified in the basic specifications. The number of positions depends on the number of features available. The selected option of a feature can consist of several positions.

Optional specifications

The optional specifications describe additional features for the device (optional features). The number of positions depends on the number of features available. The features have a 2-digit structure to aid identification (e.g. JA). The first digit (ID) stands for the feature group and consists of a number or a letter (e.g. J = Test, Certificate). The second digit constitutes the value that stands for the feature within the group (e.g. A = 3.1 material (wetted parts), inspection certificate).

More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

Extended order code: Micropilot

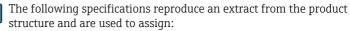

- This documentation to the device (using the extended order code on the nameplate).
- The device options cited in the document.

Device type

FMR50, FMR51, FMR52, FMR53, FMR54, FMR56, FMR57

Basic specifications

Position 1, 2 (Approval)		
Selected option		Description
FMR5x	G2	EAC 0/1Ex ia IIC T6T1 Ga/Gb X EAC Ex ia IIIC T85 °C Da/Db X

Position 3 (Power Supply, Output)		
Selected option		Description
FMR5x	А	2-wire, 4-20 mA HART
	В	2-wire, 4-20 mA HART, switch output (PFS)
	С	2-wire, 4-20 mA HART, 420 mA

Position 4 (Display, Operation)		
Selected option		Description
FMR5x	А	Without, via communication
	С	SD02, 4-line, push buttons + data backup function
	Е	SD03, 4-line, illum., touch control + data backup function
	М	Prepared for display FHX50 + custom connection
	Ν	Prepared for display FHX50 + NPT1/2"

Position 5 (Housing)		
Selected option		Description
FMR51-54 FMR57	В	GT18 dual compartment, 316L
FMR5x	С	GT20 dual compartment, Alu coated


Position 6 (Electrical Connection)		
Selected option		Description
FMR5x	А	Gland M20, IP66/68 NEMA4X/6P
	В	Thread M20, IP66/68 NEMA4X/6P
	С	Thread G1/2, IP66/68 NEMA4X/6P
	D	Thread NPT1/2, IP66/68 NEMA4X/6P

Position 7, 8 (Antenna)		
Selected o	ption	Description
FMR50	BN	Horn 80 mm/3", PP cladded, -4080°C
	BR	Horn 100 mm/4", PP cladded, -4080°C
FMR51	Bx	Horn (different sizes)
FMR52	BO	Horn 50 mm/2", -196200°C, flush mount
	BP	Horn 80 mm/3", -196200°C, flush mount
FMR53	Cx	Rod (different sizes)
FMR54	Ax	Without Horn
	Bx	Horn (different sizes)
	Dx	Planar (different sizes)
FMR56	BN	Horn 80 mm/3", PP cladded, -4080°C
	BR	Horn 100 mm/4", PP cladded, -4080°C
FMR57	Bx	Horn (different sizes)
	Fx	Parabolic (different sizes)
Shown in the temperature tables exemplary as follows:		

Position 9, 10 (Seal)		
Selected o	ption	Description
FMR51	A5	Viton GLT, -40150°C
	C1	Kalrez, -20150°C
	D2	Graphite, -196450°C (HT)
	D3	Graphite, -40250°C (XT)
FMR54	A7	Viton, -20150°C (Planar)
	A8	Viton, -40200°C
	B4	EPDM, -40150°C
	C2	Kalrez, -20200°C, conductive media max. 150°C
	D1	Graphite, -196280°C (XT)
	D2	Graphite, -196400°C (HT)

Position 9, 10 (Seal)		
Selected op	tion	Description
FMR57	A6	Viton GLT, -40200°C
	D4	Graphite, -40400°C (HT)
	n in the te plary as fo	mperature tables llows:

Position 11-13 (Process Connection)		
Selected opt	ion	Description
FMR51-54 FMR57	Axx Cxx Kxx	Flange (different sizes)
FMR50	UAE	Mounting bracket
	XR0	Connection, without flange/mounting bracket
	XxG	Slip on flange (different sizes)
FMR51	Pxx	Flange (different sizes)
	Rxx	Thread
	Txx	Tri-Clamp
FMR52	Mxx	Slotted-nut
	Txx	Tri-Clamp
FMR53	RxJ	Thread, 316L
	RxF	Thread, PVDF
FMR56	UAE	Mounting bracket
	XR0	Connection, without flange/mounting bracket
	XxG	Slip on flange (different sizes)

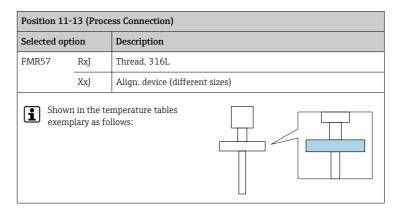

Position 14 (Air Purge Connection)					
Selected option		Description			
FMR57	1	G1/4			
	2	NPT1/4			

Optional specifications

ID Nx, Ox (Accessory Mounted)							
Selected op	otion	Description					
FMR5x	NA	Overvoltage protection					
	NF ¹⁾	Bluetooth					
FMR51	OM OU OV	Antenna extension (different sizes)					
	OW	Horn protection, PTFE, no airpurge possible					
FMR54	OM ON OR OS	Antenna extension (different sizes)					
FMR57 OP OT		Antenna extension (different sizes)					
	OW	Horn protection, PTFE, no airpurge possible					

1) Only in connection with Position 4 = C, E

Safety instructions: General	 The device is intended to be used in explosive atmospheres as defined in the scope of IEC 60079-0 or equivalent national standards. If no potentially explosive atmospheres are present or if additional protective measures have been taken: The device may be operated according to the manufacturer's specifications. Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device: Be suitably qualified for their role and the tasks they perform Be trained in explosion protection Be familiar with national regulations Install the device according to the manufacturer's instructions and national regulations. Do not operate the device outside the specified electrical, thermal and mechanical parameters. Only use the device in media to which the wetted materials have sufficient durability. Avoid electrostatic charging: Of plastic surfaces (e.g. enclosure, sensor element, special varnishing, attached additional plates,) Of isolated capacities (e.g. isolated metallic plates) Alterations to the device can affect the explosion protection and must be carried out by staff authorized to perform such work by Endress+Hauser. Refer to the temperature tables for the relationship between the permitted ambient temperature for the sensor and/or transmitter, depending on the range of application and the temperature class. When using in hybrid mixtures (gas and dust occurring simultaneously), observe additional measures for explosion protection.
Safety instructions:	Permitted ambient temperature range at the electronics enclosure: $-40 \degree C \le T_a \le +80 \degree C$
Specific conditions of use	 Observe the information in the temperature tables. In the case of process connections made of polymeric material or with polymeric coatings, avoid electrostatic charging of the plastic surfaces. To avoid electrostatic charging: Do not rub surfaces with a dry cloth. In the event of additional or alternative special varnishing on the enclosure or other metal parts or for adhesive plates: Observe the danger of electrostatic charging and discharge. Do not install in the vicinity of processes (≤ 0.5 m) generating strong electrostatic charges. The probe must not be subjected to abrasive or corrosive medium that may adversely affect the partition for the zone separation.

The zone partition wall of the device is a gas- and dust-tight feed through made of stainless-steel adapter and glass conductor bushing.

Sensor	Zone partition wall material	Wall thickness	Diameter	
FMR50-52	Stainless-steel adapter	6 mm	10 mm	
FMR56 FMR57	Glass conductor bushing	2.6 mm	2.4 mm	
	Welding seam	> 0.2 mm	-	
FMR53	Stainless-steel adapter	14 mm	25 mm	
FMR54	Glass conductor bushing	4.8 mm	6.3 mm	
	Welding seam	> 0.2 mm	-	

Device type FMR50, FMR52, FMR53, FMR54 (planar, enamel), FMR56 An antenna coated with non-conductive material can be used if avoiding electrostatic charging (e.g. through friction, cleaning, maintenance, strong medium flow).

Device type FMR51, FMR57 and Optional specification, ID Nx, Ox = OW An antenna coated with non-conductive material can be used if avoiding electrostatic charging (e.g. through friction, cleaning, maintenance, strong medium flow).

Device type FMR57 and Basic specification, Position 11-13 = XxJ

- Changing the position of the alignment device must be impossible:
 - After the alignment of the antenna via the pivot bracket
 - After tightening of the clamping flange
 - After setting the damping ring (torque 15 Nm)
- Degree of protection IP67 must be fulfilled.


Device type FMR57 and Basic specification, Position 14 = 1, 2

- If equipment with Ga/Gb or Da/Db is required: In the closed state the minimum degree of protection of the installation must be IP67.
- After removing the air purge connection: Lock the opening with a suitable plug.
 - Torque: 6-7 Nm
 - For Da/Db: thread engagement > 5 turns
- Degree of protection IP67 must be fulfilled.

Device type FMR51, FMR54, FMR57 and Optional specification, ID Nx, Ox = OM, ON, OR, OS, OU, OV, OP, OT

Avoid contact between sensor and tank wall. Take into account tank fittings and flow conditions (avoid sparks caused by impact and friction).

Safety instructions: Installation

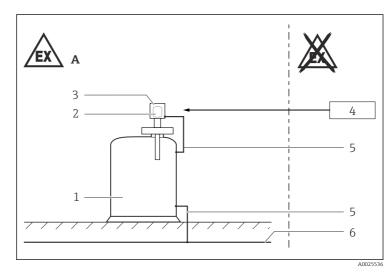

- A Zone 1, Zone 21
- 1 Tank; Zone 0, Zone 1 or Zone 20, Zone 21
- 2 Electronic insert
- 3 Enclosure
- 4 Certified associated apparatus
- 5 Potential equalization line
- 6 Potential equalization
- After aligning (rotating) the enclosure, retighten the fixing screw (see Operating Instructions).
- Install the device to exclude any mechanical damage or friction during the application. Pay particular attention to flow conditions and tank fittings.
- Only use certified cable entries or sealing plugs. The metal sealing plugs supplied meet this requirement.
- Before operation:
 - Screw in the cover all the way.
 - Tighten the securing clamp on the cover.
- After mounting and connecting the antenna, ingress protection of the enclosure must be at least IP65.
- Perform the following to achieve the degree of protection:
 - Screw the cover tight.
 - Mount the cable entry correctly.
- Continuous service temperature of the connecting cable: -40 °C to \geq +85 °C; in accordance with the range of service temperature taking into account additional influences of the process conditions (T_{a,min}), (T_{a,max} +20 K).

Basic specification, Position 4 = N

Observe the requirements according to IEC/EN 60079-14 for conduit systems and the wiring and installation instructions of the suitable Safety Instructions (XA). In addition, observe national regulations and standards for conduit systems.

Intrinsic safety

- The device is only suitable for connection to certified, intrinsically safe equipment with explosion protection Ex ia / Ex ib.
- The intrinsically safe input power circuit of the device is isolated from ground. If the device is only equipped with one input, the dielectric strength of the input is at least 500 V_{rms}. If the device is equipped with more than one input, the dielectric strength of each individual input to ground is at least 500 V_{rms}, and the dielectric strength of the inputs vis-à-vis one another is also at least 500 V_{rms}.
- Observe the pertinent guidelines when interconnecting intrinsically safe circuits.
- The device can be connected to the Endress+Hauser FXA291 service tool: refer to the Operating Instructions and specifications in the "Overvoltage protection" chapter.
- The device can be equipped with the Bluetooth[®] module: refer to the Operating Instructions and specifications in the "Bluetooth[®] module" chapter.

Basic specification, Position 3 = A

When the device is connected to certified intrinsically safe circuits of Category Ex ib for Equipment Groups IIC and IIB, the type of protection changes to Ex ib IIC and Ex ib IIB. Do not operate the antenna in Zone O if connecting to an intrinsically safe circuit of Category Ex ib.

Basic specification, Position 3 = B, C

When the intrinsically safe Ex ia circuits of the device are connected to certified intrinsically safe circuits of Category Ex ib for Equipment Groups IIC or IIB, the type of protection changes to Ex ib [ia] IIC or Ex ib [ia] IIB. Regardless of the power supply, all the internal circuits correspond to Ex ia IIC type of protection (e.g. service interface, external display, sensor).

Potential equalization

Integrate the device into the local potential equalization.

Overvoltage protection

- If an overvoltage protection against atmospheric over voltages is required: no other circuits may leave the enclosure during normal operation without additional measures.
- For installations which require overvoltage protection to comply with national regulations or standards, install the device using overvoltage protection (e.g. HAW56x from Endress+Hauser).
- Observe the safety instructions of the overvoltage protection.

Optional specification, ID Nx, Ox = NA

(Overvoltage protection Type OVP10 and Type OVP20)

The intrinsically safe input power circuit of the device is isolated from ground. If the device is only equipped with one input, the dielectric strength of the input is at least 290 $V_{\rm rms}$. If the device is equipped with more than one input, the dielectric strength of each individual input to ground is at least 290 $V_{\rm rms}$, and the dielectric strength of the inputs vis-à-vis one another is also at least 290 $V_{\rm rms}$.

Bluetooth[®] module

Optional specification, ID Nx, Ox = NF

- With Bluetooth[®] module installed: Use of external hardware not allowed (e.g. external display, service interface).
- The intrinsically safe input power circuit of the Bluetooth[®] module is isolated from ground.

Safety instructions: Zone 0

- Associated devices with galvanic isolation between the intrinsically safe and non-intrinsically safe circuits are preferred.
- If there is a risk of dangerous potential differences within Zone 0 (e.g. through the occurrence of atmospheric electricity), implement suitable measures for intrinsically safe circuits in Zone 0.

Temperature tables

 \rightarrow Safety Instructions: XA02405F

The safety instructions for temperature tables are available on the Internet: www.endress.com/Downloads

Optional specification, ID Nx, Ox = NA (Overvoltage protection Type OVP10 and Type OVP20) When using the internal overvoltage protection: Reduce the admissible ambient temperature at the enclosure by 2 K.



Observe the permitted temperature range at the antenna.

Explanation of how to use the temperature tables



Unless otherwise indicated, the positions always refer to the basic specification.

Zone 0, Zone 1 or Zone 1

1st column: Position 5 = A, B, ...

2nd column: Position 3 = A, B, ...

- (1): 1 channel used
- (2): 2 channels used

3rd column: Temperature classes T6 (85 °C) to T1 (450 °C)

Column P1 to P6: Position (temperature value) on the axes of the derating

- T_a: Ambient temperature in °C
- T_p: Process temperature in °C



Column P6 is only relevant for version B of the derating.

Example table

	(1)		P1		P2		Р3		P4		P5		P6	
= C			Tp	Ta	Tp	Ta	Tp	Ta	Tp	Ta	Tp	Ta	Tp	Ta
	A, B, C	T6	-40	60	60	60	85	54	85	-40	-40	-40	-	-
		T5	-40	75	75	75	100	69	100	-40	-40	-40	-	-
		T4	-40	80	80	80	135	68	135	-40	-40	-40	-	-

Zone 20, Zone 21

1st column: Position 5 = A, B, ...

2nd column: Position 3 = A, B, ...

- (1): 1 channel used
- (2): 2 channels used

3rd column: Process temperature

Column P1 to P6: Position (temperature value) on the axes of the derating

- T_a: Ambient temperature in °C
- T_p: Process temperature in °C




Column P6 is only relevant for version B of the derating.

	(1)		P1		P2		Р3		P4		P5		P6	
= C			Tp	Ta	Tp	Ta	Tp	Ta	Tp	Ta	Tp	Ta	Tp	Ta
	A, B, C	135	-40	80	80	80	135	67	135	-40	-40	-40	-	-
		200	-40	80	80	80	200	51	200	-40	-40	-40	I	-

Example table

Example diagrams of possible deratings

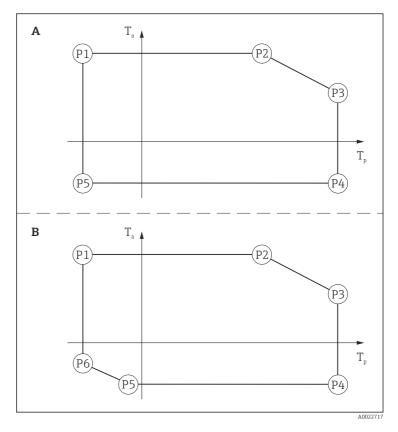

Connection data

Cable entry: Connection compartment

Ex ia IIC

Not relevant.

Ex ia IIIC

Cable gland: *Basic specification, Position 6 = A Basic specification, Position 5 = B, C*

preferably for Position 5 = B

Thread	Clamping range	Material	Sealing insert	O-ring
M20x1,5	ø 7 to 12 mm	1.4404	NBR	EPDM (ø 17x2)

preferably for Position 5 = C

Thread	Clamping range	Material	Sealing insert	0-ring	
M20x1,5	ø 8 to 10.5 mm	Ms, nickel-plated	Silicone	EPDM (ø 17x2)	

- The tightening torque refers to cable glands installed by the manufacturer:
 - Recommended: 3.5 Nm
 - Maximum: 10 Nm
 - This value may be different depending on the type of cable. However, the maximum value must not be exceeded.
- Only suitable for fixed installation. The operator must pay attention to a suitable strain relief of the cable.
- The cable glands are suitable for a low risk of mechanical danger (4 Joule) and must be mounted in a protected position if larger impact energy levels are expected.
- To maintain the ingress protection of the enclosure: Install the enclosure cover, cable glands and blind plugs correctly.

Cable entry: Electronics compartment

Cable gland: Basic specification, Position 4 = M Basic specification, Position 5 = B, C

preferably for Position 5 = B

Thread	Clamping range	Material	Sealing insert	O-ring
M16x1,5	ø 5 to 10 mm	1.4404	PA/NBR	NBR (ø 13x2)

preferably for Position 5 = C

Thread	Clamping range	Material	Sealing insert	0-ring
M16x1,5	ø 5 to 10 mm	Ms, nickel-plated	PA/NBR	NBR (ø 13x2)

- The tightening torque refers to cable glands installed by the manufacturer:
 - Recommended: 3.5 Nm
 - Maximum: 5 Nm
 - This value may be different depending on the type of cable. However, the maximum value must not be exceeded.
- Only suitable for fixed installation. The operator must pay attention to a suitable strain relief of the cable.
- The cable glands are suitable for a low risk of mechanical danger (4 Joule) and must be mounted in a protected position if larger impact energy levels are expected.
- To maintain the ingress protection of the enclosure: Install the enclosure cover, cable glands and blind plugs correctly.

Terminals

Optional specification, ID Nx, Ox = NA (*Overvoltage protection Type OVP10 and Type OVP20*) When using the internal overvoltage protection: No changes to the connection values.

Optional specification, ID Nx, Ox = NF When using the Bluetooth[®] module: No changes to the connection values.

Ex ia

Power supply and signal circuit with protection type: intrinsic safety Ex ia IIC, Ex ia IIB, Ex ia IIIC.

Terminal 1 (+), 2 (-)
Power supply
U _i = 30 V I _i = 300 mA P _i = 1 W
effective inner inductance $L_i = 0$ effective inner capacitance $C_i = 12 \text{ nF}$

Basic specification, Position 3 = A

Terminal 1 (+), 2 (–)	Terminal 3 (+), 4 (–)				
Power supply	Switch output (PFS)				
$ \begin{array}{l} U_i = 30 \ V \\ I_i = 300 \ mA \\ P_i = 1 \ W \end{array} $	$\begin{array}{l} U_i = 30 \ V \\ I_i = 300 \ mA \\ P_i = 1 \ W \end{array}$				
effective inner inductance $L_i = 0$ effective inner capacitance $C_i = 5 \text{ nF}$	effective inner inductance $L_i = 0$ effective inner capacitance $C_i = 6 nF$				

Basic specification, Position 3 = B

Basic specification, Position 3 = C

Terminal 1 (+), 2 (-)	Terminal 3 (+), 4 (-)
Power supply	Output 4 to 20 mA
$ \begin{array}{l} U_i = 30 \text{ V} \\ I_i = 300 \text{ mA} \\ P_i = 1 \text{ W} \end{array} $	$ \begin{array}{l} U_i = 30 \ V \\ I_i = 300 \ mA \\ P_i = 1 \ W \end{array} $
effective inner inductance $L_i = 0$ effective inner capacitance $C_i = 30 \text{ nF}$	effective inner inductance L_i = 0 effective inner capacitance C_i = 30 nF

Service interface (CDI)

Taking the following values into consideration, the device can be connected to the certified Endress+Hauser FXA291 service tool or a similar interface:

Service interface													
$U_i = 7.3 \text{ V}$ effective inner inductance L_i = negligible effective inner capacitance C_i = negligible													
$U_{o} = 7.3 \text{ V}$ $I_{o} = 100 \text{ mA}$ $P_{o} = 160 \text{ mW}$													
L _o (mH) =	5.00	2.00	1.00	0.50	0.20	0.15	0.10	0.05	0.02	0.01	0.005	0.002	0.001
$C_{o} (\mu F)^{(1)} =$	0.73	1.20	1.60	2.00	2.60	-	3.20	4.00	5.50	7.30	10.00	12.70	12.70
$C_{o} (\mu F)^{2)} =$	-	0.49	0.90	1.40	-	2.00	-	-	-	-	-	-	-

1) Values according to PTB "ispark" program

2) Values according to IEC/EN 60079-25, Annex C or equivalent national standards



71685330

www.addresses.endress.com

