

Safety Instructions

Proline Promag 200

Cl. I, II, III Div. 1, Zone 1 for XP
(Ex d Flameproofed version)



Document: XA01018D

Safety instructions for electrical apparatus for explosion-hazardous areas classified according to the National Electrical Code (NEC) and Canadian Electrical Code (CEC) →  3

Proline Promag 200

Table of contents

Associated documentation	4
Manufacturer's certificates	4
Extended order code	5
Safety instructions: General	6
Safety instructions: Installation	7
Safety instructions: Class II, Class III	8
Temperature tables	8
Connection values: Signal circuits	9

Associated documentation

All documentation is available:

- On the CD-ROM supplied (not included in the delivery for all device versions).
- Available for all device versions via:
 - Internet: www.endress.com/deviceviewer
 - Smart phone/tablet: *Endress+Hauser Operations App*
- In the Download Area of the Endress+Hauser web site: www.endress.com → Download

This document is an integral part of the following Operating Instructions:

Measuring device	Documentation code		
	HART	FOUNDATION Fieldbus	PROFIBUS PA
Promag H 200	BA01110D	BA01377D	BA01375D
Promag P 200	BA01111D	BA01378D	BA01376D

Additional documentation:

Document type	Contents	Documentation code
Special documentation	Remote display FHX50	SD01007F
Installation Drawing		As wanted on the nameplate.

Please note the documentation associated with the device.

Manufacturer's certificates**Certificate number**

160686-2541184

Notified body

CSA: Canadian Standards Association

Extended order code

The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional information about the nameplate is provided in the associated Operating Instructions.

Structure of the extended order code



- **Device type**
 The device and the device design is defined in the "Device type" section (Product root).
- **Basic specifications**
 The features that are absolutely essential for the device (mandatory features) are specified in the basic specifications. The number of positions depends on the number of features available. The selected option of a feature can consist of several positions.
- **Optional specifications**
 The optional specifications describe additional features for the device (optional features). The number of positions depends on the number of features available. The features have a 2-digit structure to aid identification (e.g. JA). The first digit (ID) stands for the feature group and consists of a number or a letter (e.g. J = test, certificate). The second digit constitutes the value that stands for the feature within the group (e.g. A = 3.1 material (wetted parts), inspection certificate).

More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

Device type

Position	Order code	Selected option	Description
1	Instrument family	5	Electromagnetic flowmeter
2	Sensor	H, P	Sensor type
3	Transmitter	2	Transmitter type: 2-wire, compact version
4	Generation index	B	Platform generation
5, 6	Nominal diameter	H: DN 2...25 P: DN 15...200	Nominal diameter of sensor

Basic specifications

Position	Order code	Selected option	Description
1, 2	Approval	C3	cCSA _{US}
			Class I, Division 1, Groups A, B, C, D
			Class II, Division 1, Groups E, F, G
			Class III
			Ex d[ia] IIC and AEx d[ia] IIC
			Class I, Zone 1
3	Output	A	4-20mA HART
		B	4-20mA HART, Pulse/frequency/switch output
		E	FOUNDATION Fieldbus, Pulse/frequency/switch output
		G	PROFIBUS PA, Pulse/frequency/switch output
4	Display, Operation	A	W/o; via communication
		C	SD02 4-line; push buttons + data backup function
		E	SD03 4-line, illum.; touch control + data backup function
		L	Prepared for display FHX50 + M12 connection ¹⁾
		M	Prepared for display FHX50 + M12 custom connection ¹⁾

1) FHX50 is approved separately.

Optional specifications

No options specific to hazardous locations are available.

Safety instructions: General

- Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device:
 - Be suitably qualified for their role and the tasks they perform.
 - Be trained in explosion protection.
 - Be familiar with national regulations (e.g. CEC or NEC).
- Install the device according to the manufacturer's instructions and national regulations.
- Do not operate the device outside the specified electrical, thermal and mechanical parameters.

- Only use the device in media to which the wetted materials have sufficient durability.
- Refer to the temperature tables for the relationship between the permitted ambient temperature for the sensor and/or transmitter, depending on the range of application, and the temperature classes.
- Modifications to the device can affect the explosion protection and must be carried out by staff authorized to perform such work by Endress+Hauser.
- Observe all the technical data of the device (see nameplate).
- When using in hybrid mixtures (gas and dust occurring simultaneously), additional measures should be taken. Please see approval body.
- Class II Group G: The surface temperature of the apparatus cannot exceed +165 °C.

WARNING

Substitution of components is not permitted.

- ▶ Substitution of components may impair intrinsic safety.

Safety instructions: Installation

- Continuous service temperature of the connecting cable:
–40 to +80 °C; in accordance with the range of service temperature taking into account additional influences of the process conditions ($T_{a,min}$ and $T_{a,max} + 20$ K).
- Only use certified cable entries suitable for the application. Observe selection criteria as per CEC or NEC. Accordingly, the connection terminal does not include any ignition sources.
- When the measuring device is connected, attention must be paid to explosion protection at the transmitter
- In potentially explosive atmospheres:
 - Do not disconnect the electrical connection of the power supply circuit when energized.
 - Do not open the connection compartment cover when energized.
- Install the transmitter circuit wiring according to Canadian Electrical Code (CEC) respective National Electrical Code (NEC) using threaded conduit or other wiring methods in accordance with articles 500 to 510.
- Transmitter enclosure is factory sealed. A conduit seal is not required.

Intrinsic safety

- The device can be connected to the Endress+Hauser FXA291 service tool: refer to the Operating Instructions.
- The device can be connected to the remote display FHX50 which has Ex ia explosion protection: refer to the Special documentation and Ex documentation.

Potential equalization

- Integrate the device into the local potential equalization → 9.
- If the ground connection has been established via the pipe as specified, it is also possible to integrate the sensor into the potential equalization system via the pipe.

Safety instructions: Class II, Class III

- To ensure dust-tightness, securely seal the transmitter housing, cable entries and sealing plugs.
- Only open the transmitter housing briefly, ensuring that no dust or moisture enters the housing.
- Only use certified cable entries. The metal cable entries supplied meet this requirement.
- The remote display FHX50 is not suitable for installation in Class II, Class III.

Temperature tables

Ambient temperature

Minimum ambient temperature:

Basic specification, position 3 (Output; Input) = A, B, E, G

$T_a = -40\text{ °C}$

Maximum ambient temperature:

$T_a = +60\text{ °C}$ depending on the medium temperature and temperature class

Medium temperature

Minimum medium temperature:

$T_m = -40\text{ to }0\text{ °C}$ depending on the selected device type (refer to nameplate!)

Maximum medium temperature:

T_m for T6...T1 depending on the maximum ambient temperature T_a

Compact version


T_a [°C]	T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
40	80	95	130	150	150	150
55	-	95	130	150	150	150
60 ¹⁾	-	95	130	150	150	150

- 1) The following applies for Basic specification, Position 3 (Output) = A, B, E, G:
 $P_1 = 0.85\text{ W}$

Connection values: Signal circuits

The following tables contain specifications which are dependent on the transmitter type and its input and output assignment. Compare the following specifications with those on the nameplate of the transmitter.

Connecting the transmitter

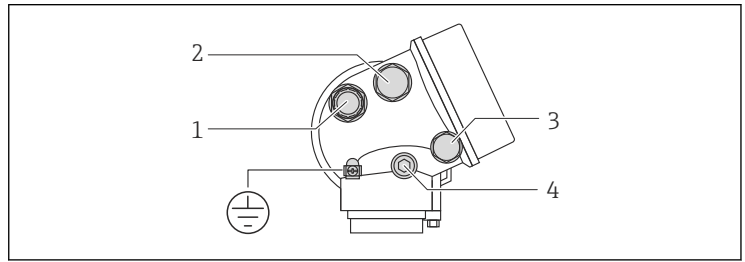

A0023831

Position		Basic specification, position 1, 2 Approval	Type of protection used for cable entry	Description
1	Cable entry for output 1	C3	XP/Ex d/DIP XP/AEx d/DIP	In the case of device versions with a plastic transport sealing plug, this plug does not meet the explosion protection requirements and must be replaced during installation by a suitable entry that meets the approval specifications.
2	Cable entry for output 2	C3	XP/Ex d/DIP XP/AEx d/DIP	In the case of device versions with a metal sealing plug, this plug is part of the device approval and meets the requirements of the explosion protection indicated on the nameplate.
3	Cable entry of the remote display and operating module FHX50	C3	XP/Ex ia/DIP XP/AEx ia/DIP	In the case of device versions with a metal sealing plug, this plug is part of the device approval and meets the requirements of the explosion protection indicated on the nameplate. In the case of device versions with a cable entry, this entry has a separate component approval and meets the requirements of the explosion protection indicated on the nameplate.
Position		Description		
4	Pressure compensation plug	<p>⚠ WARNING</p> <p>Housing degree of protection voided due to insufficient sealing of the housing.</p> <ul style="list-style-type: none"> ▶ Do not open - not a cable entry. 		
⊕	Potential equalization	<p>NOTICE</p> <p>Terminal for connection to potential equalization.</p> <ul style="list-style-type: none"> ▶ Pay attention to the grounding concept of the facility. 		

Terminal assignment

Transmitter



The order code is part of the extended order code. For detailed information on the device features and the structure of the extended order code → 5.

Connection versions

Order code for "Output"	Terminal numbers			
	Output 1		Output 2	
	1 (+)	2 (-)	3 (+)	4 (-)
Option A	4-20 mA HART (passive)		-	
Option B ¹⁾	4-20 mA HART (passive)		Pulse/frequency/switch output (passive)	
Option E ^{1) 2)}	FOUNDATION Fieldbus		Pulse/frequency/switch output (passive)	
Option G ^{1) 3)}	PROFIBUS PA		Pulse/frequency/switch output (passive)	

- 1) Output 1 must always be used; output 2 is optional.
- 2) FOUNDATION Fieldbus with integrated reverse polarity protection.
- 3) PROFIBUS PA with integrated reverse polarity protection.

Safety-related values



The order code is part of the extended order code. For detailed information on the features of the device and the structure of the extended order code → 5.

XP type of protection

Order code for "Output"	Output type	Safety-related values
Option A	4-20mA HART	$U_{nom} = DC 35 V$ $U_{max} = 250 V$
Option B	4-20mA HART	$U_{nom} = DC 35 V$ $U_{max} = 250 V$
	Pulse/frequency/switch output	$U_{nom} = DC 35 V$ $U_{max} = 250 V$ $P_{max} = 1 W$ ¹⁾
Option E	FOUNDATION Fieldbus	$U_{nom} = DC 32 V$ $U_{max} = 250 V$ $P_{max} = 0.88 W$
	Pulse/frequency/switch output	$U_{nom} = DC 35 V$ $U_{max} = 250 V$ $P_{max} = 1 W$ ¹⁾

Order code for "Output"	Output type	Safety-related values
Option G	PROFIBUS PA	$U_{nom} = DC\ 32\ V$ $U_{max} = 250\ V$ $P_{max} = 0.88\ W$
	Pulse/frequency/switch output	$U_{nom} = DC\ 35\ V$ $U_{max} = 250\ V$ $P_{max} = 1\ W^{1)}$

1) Internal circuit limited by $R_i = 760.5\ \Omega$

Remote display FHX50

Basic specification, position 1, 2 Approval	Cable specification	Basic specification, position 4 Display, Operation Option L, M
Option C3	Max. cable length: 60 m (196.85 ft)	$U_o = 7,3\ V$
		$I_o = 327\ mA$
		$P_o = 362\ mW$
		$L_o = 149\ \mu H$
		$C_o = 388\ nF$
		$C_c \leq 125\ nF$
		$L_c \leq 149\ \mu H$

www.addresses.endress.com
