

Safety Instructions

Soliphant M

FTM50, FTM51, FTM52

Ex d or Ex de IIC T6-T2 Ga/Gb (FTM50)

Ex d or Ex de [ia Ga] IIC T6-T2 Ga/Gb (FTM51/52)

Ex d or Ex de IIC T6-T2 Gb (FTM50)

Ex d or Ex de [ia Ga] IIC T6-T2 Gb (FTM51/52)

Ex ta IIIC T80°C T₅₀₀ 130°C Da (FTM50/51)

Ex ta [ia Da] IIIC T80°C T₅₀₀ 130°C Da (FTM52)

Ex ta/tb IIIC T90°C Da/Db (FTM50/51)

Ex ta/tb [ia Da] IIIC T90°C Da/Db (FTM52)

TÜV 13.0914 X



Document: XA01354F-A

Safety instructions for electrical apparatus for explosion-hazardous areas

Soliphant M

FTM50, FTM51, FTM52

Associated Documentation

This document is an integral part of the following Operating Instructions:
KA00229F/00, KA00230F/00

The Operating Instructions which are supplied and correspond to the device type apply.

Supplementary Documentation

Explosion-protection brochure:
CP00021Z/11

Designation

Explanation of the labelling and type of protection can be found in the explosion protection brochure.


Designation of explosion protection	
	FTM50 Ex d IIC T6...T2 Ga/Gb Ex d IIC T6...T3/T2 Gb Ex de IIC T6...T2 Ga/Gb Ex de IIC T6...T3/T2 Gb Ex ta IIC T80°C T ₅₀₀ 130°C Da Ex ta/tb IIC T90°C Da/Db
	FTM51 Ex d [ia Ga] IIC T6...T2 Ga/Gb Ex d [ia Ga] IIC T6...T3/T2 Gb Ex de [ia Ga] IIC T6...T2 Ga/Gb Ex de [ia Ga] IIC T6...T3/T2 Gb Ex ta IIC T80°C T ₅₀₀ 130°C Da Ex ta/tb IIC T90°C Da/Db
	FTM52 Ex d [ia Ga] IIC T6 Ga/Gb Ex d [ia Ga] IIC T6 Gb Ex de [ia Ga] IIC T6 Ga/Gb Ex de [ia Ga] IIC T6 Gb Ex ta [ia Da] IIC T80°C T ₅₀₀ 130°C Da Ex ta/tb [ia Da] IIC T90°C Da/Db

Applied standards

ABNT NBR IEC 60079-0 :2008
ABNT NBR IEC 60079-1 :2009
ABNT NBR IEC 60079-7 :2008
ABNT NBR IEC 60079-11:2009
ABNT NBR IEC 60079-26:2008
ABNT NBR IEC 60079-31:2011

Safety instructions:**General**

- Do not open the connection or electronics compartments under voltage in an explosive atmosphere.
- Waiting time before opening the electronics compartment after switching off the power supply: 17 min.
- Avoid electrostatic charging:
 - Of plastic surfaces (e.g. housing, sensor element, special varnishing, attached additional plates, ..)
 - Of isolated capacities (e.g. isolated metallic plates)

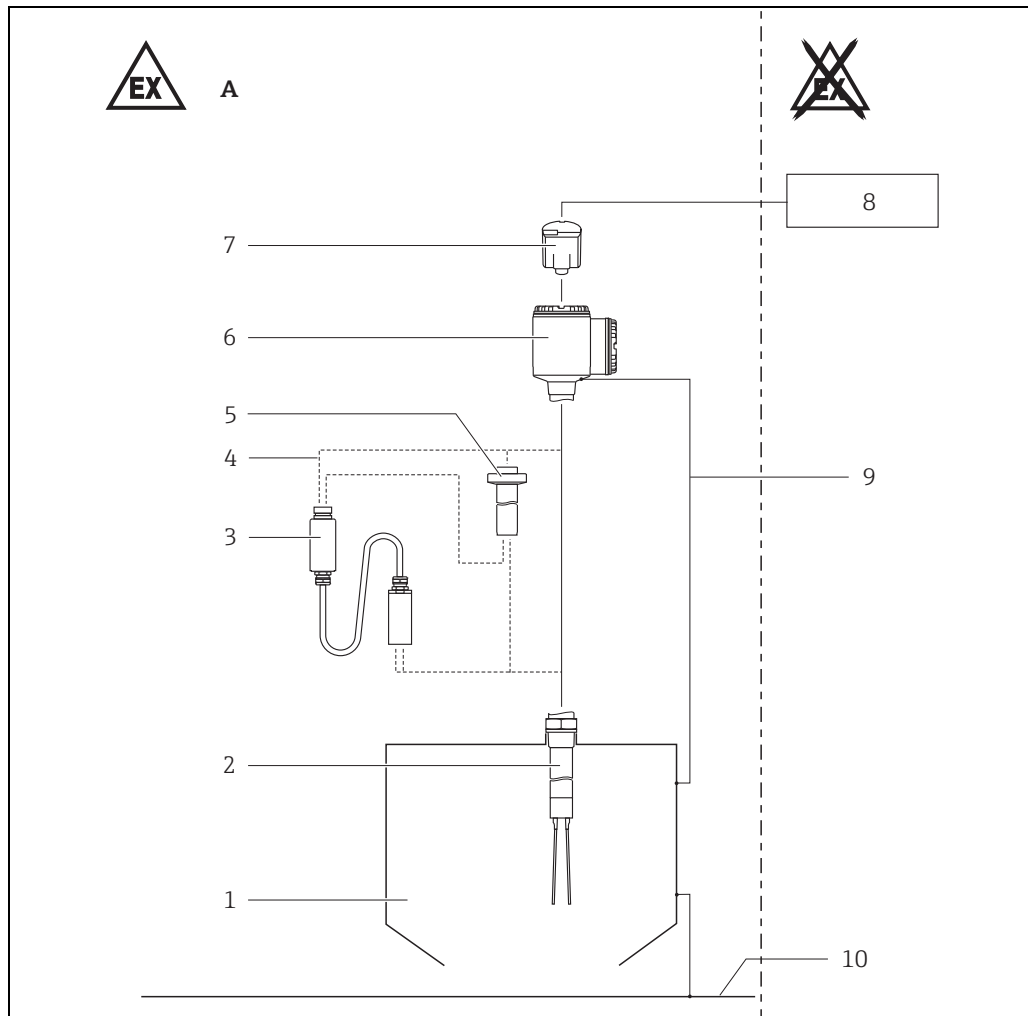Safety instructions:**Installation**

- A** Zone 1, Zone 20, Zone 21
- 1** Tank, hazardous area Zone 0, Zone 1, Zone 20
- 2** Version:
 – FTM50
 – FTM51
 – FTM52
- 3** Separate installation (optional)
- 4** [Ex ia] circuit
- 5** Temperature spacer (optional at 150 °C)
- 6** Housing:
 – F13, Aluminium (Ex d only)
 – F27, Stainless steel (Ex d only)
 – T13, Aluminium (Ex d, Ex de) with separate connection compartment
- 7** Electronic insert:
 – FEM51
 – FEM52
 – FEM54
 – FEM55
- 8** Supply unit
- 9** Potential equalization
- 10** Local potential equalization

- Comply with the installation and safety instructions in the Operating Instructions.
- Install the device according to the manufacturer's instructions and any other valid standards and regulations.
- Pay attention to the maximum process conditions according to the manufacturer's Operating Instructions. At high medium temperatures: note flange pressure load capacity as a factor of temperature.
- Connect the device using suitable cable and wire entries or using piping systems of protection type "Pressure-tight Enclosure (Ex d)".
- To maintain the ingress protection IP66/67 of the housing, install the housing cover and cable glands correctly. Close unused entry glands with approved (Ex d) sealing plugs.
- Install the device to exclude any mechanical damage or friction during the application. Pay particular attention to flow conditions and tank fittings.
- Support extension tube of Soliphant M FTM51 if a dynamic load is expected.
- Install the device to exclude impact and friction sparks on the aluminium housing.
- Only install the devices in media for which the wetted materials have sufficient durability; e.g. process connection seal (→ Technical Information TI00392F).
- Use a process connection seal that meets the materials compatibility and temperature requirements.
- When connecting the cables, ensure there is adequate strain relief at place of installation.
- Protect the connecting cable between the separate housing and the level sensor from tension and friction (e.g. due to electrostatic charge from medium flow).

**Safety instructions:
Zone 0/1**

- No danger of ignition arises from the sensor parts of Soliphant M FTM50 and FTM51 approved for Zone 0 if they are operated under non-atmospheric pressures and temperatures. Permissible medium temperatures for operation in accordance with manufacturer's specifications: dependent on ambient temperature; → 5, "Temperature tables".
- Permissible pressures for operation in accordance with manufacturer's specifications: $p_e = -1 \text{ bar} \dots +25 \text{ bar}$, dependent on process connection; → manufacturer's Operating Instructions.

Temperature tables

Compact version

FTM50	Type of protection	Ambient temperature: Housing	Process temperature
	Ex d IIC T6...T2 Ga/Gb, Gb Ex de IIC T6...T2 Ga/Gb, Gb	FEM51/52/55: $-50 \text{ °C} \leq T_a \leq +70 \text{ °C}$	$-50 \text{ °C} \leq T_p \leq +230 \text{ °C}$ $-50 \text{ °C} \leq T_p \leq +280 \text{ °C}$
	Ex d IIC T6...T3 Ga/Gb, Gb Ex de IIC T6...T3 Ga/Gb, Gb	FEM54: $-50 \text{ °C} \leq T_a \leq +60 \text{ °C}$	$-50 \text{ °C} \leq T_p \leq +150 \text{ °C}$
	Ex ta IIIC T80°C T ₅₀₀ 130°C Da* ¹ Ex ta/tb IIIC T90°C Da/Db* ²		

FTM51	Type of protection	Ambient temperature: Housing	Process temperature
	Ex d [ia Ga] IIC T6...T2 Ga/Gb, Gb Ex de [ia Ga] IIC T6...T2 Ga/Gb, Gb	FEM51/52/55: $-50 \text{ °C} \leq T_a \leq +70 \text{ °C}$	$-50 \text{ °C} \leq T_p \leq +230 \text{ °C}$ $-50 \text{ °C} \leq T_p \leq +280 \text{ °C}$
	Ex d [ia Ga] IIC T6...T3 Ga/Gb, Gb Ex de [ia Ga] IIC T6...T3 Ga/Gb, Gb	FEM54: $-50 \text{ °C} \leq T_a \leq +60 \text{ °C}$	$-50 \text{ °C} \leq T_p \leq +150 \text{ °C}$
	Ex ta IIIC T80°C T ₅₀₀ 130°C Da* ¹ Ex ta/tb IIIC T90°C Da/Db* ²		

FTM52	Type of protection	Ambient temperature: Housing	Process temperature
	Ex d [ia Ga] IIC T6 Ga/Gb, Gb Ex de [ia Ga] IIC T6 Ga/Gb, Gb	FEM51/52/55: $-50 \text{ °C} \leq T_a \leq +70 \text{ °C}$	$-50 \text{ °C} \leq T_p \leq +80 \text{ °C}$
	Ex ta [ia Da] IIIC T80°C T ₅₀₀ 130°C Da* ¹ Ex ta/tb [ia Da] IIIC T90°C Da/Db* ²	FEM54: $-50 \text{ °C} \leq T_a \leq +60 \text{ °C}$	

*1 FEM55

*2 FEM51/52/54/55

Version with separate housing

FTM50, FTM51	Type of protection	Ambient temperature: Housing	Process temperature
Housing	Ex d [ia Ga] IIC T6 Gb Ex de [ia Ga] IIC T6 Gb Ex d [ia IIIC Da] IIC T6 Gb Ex de [ia IIIC Da] IIC T6 Gb	FEM51/52/55: -50 °C ≤ T _a ≤ +70 °C FEM54: -50 °C ≤ T _a ≤ +60 °C	-50 °C ≤ T _p ≤ +150 °C
Sensor	Ex ia IIC T6...T2 Ga/Gb Ex ia IIC T6...T3 Gb	-50 °C ≤ T _a ≤ +120 °C	-50 °C ≤ T _p ≤ +230 °C -50 °C ≤ T _p ≤ +280 °C
Housing	Ex ta [ia IIC Ga] IIIC T80°C T ₅₀₀ 130°C Da* ¹ Ex ta [ia Da] IIIC T80°C T ₅₀₀ 130°C Da* ¹	FEM51/52/55: -50 °C ≤ T _a ≤ +70 °C FEM54: -50 °C ≤ T _a ≤ +60 °C	-50 °C ≤ T _p ≤ +150 °C
Sensor	Ex ia IIIC T*°C +10K Da	-50 °C ≤ T _a ≤ +120 °C	

FTM52	Type of protection	Ambient temperature: Housing	Process temperature
Housing	Ex d [ia Ga] IIC T6 Gb Ex de [ia Ga] IIC T6 Gb Ex d [ia IIIC Da] IIC T6 Gb Ex de [ia IIIC Da] IIC T6 Gb	FEM51/52/55: -50 °C ≤ T _a ≤ +70 °C FEM54: -50 °C ≤ T _a ≤ +60 °C	-50 °C ≤ T _p ≤ + 80 °C
Sensor	Ex ia IIC T6...T2 Ga/Gb Ex ia IIC T6...T3 Gb	-50 °C ≤ T _a ≤ + 80 °C	
Housing	Ex ta [ia IIC Ga] IIIC T80°C T ₅₀₀ 130°C Da* ¹ Ex ta [ia Da] IIIC T80°C T ₅₀₀ 130°C Da* ¹	FEM51/52/55: -50 °C ≤ T _a ≤ +70 °C FEM54: -50 °C ≤ T _a ≤ +60 °C	
Sensor	Ex ia IIIC T*°C +10K Da	-50 °C ≤ T _a ≤ + 80 °C	

*¹ FEM55
* depending on process temperature


Assignment of the ambient and process temperatures to the temperature classes:

FTM50, FTM51 / version	Temperature class	Fluid temperature T _p (process), (sensor)	Ambient temperature T _a (ambient), (electronics)
150 °C, 230 °C, 280 °C	T6	-50 °C... + 85 °C	→ temperature graph
150 °C, 230 °C, 280 °C	T5	-50 °C... +100 °C	
150 °C, 230 °C, 280 °C	T4	-50 °C... +135 °C	
150 °C 230 °C, 280 °C	T3 T3	-50 °C... +150 °C -50 °C... +200 °C	
230 °C, 280 °C	T2	-50 °C... +230 °C/+280 °C	

FTM52 / version	Temperature class	Fluid temperature T _p (process), (sensor)	Ambient temperature T _a (ambient), (electronics)
80 °C	T6	-40 °C... + 80 °C	-50 °C...+ 70 °C

Compact version

FTM50, FTM51

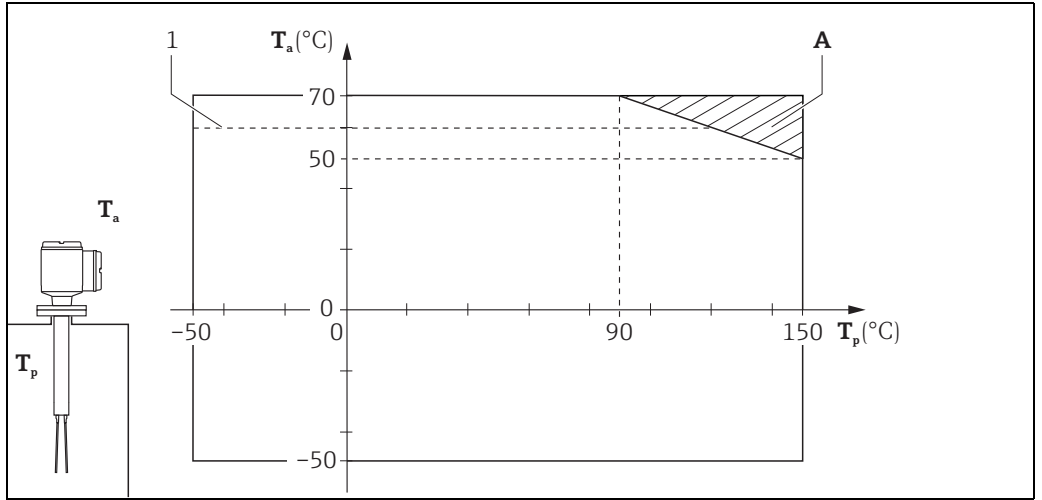

FTM5x_02




T_a Ambient temperature

T_p Process temperature

A Additional temperature range for sensors with temperature spacer

1 T_a for FEM54: -50...+60 °C

FTM52

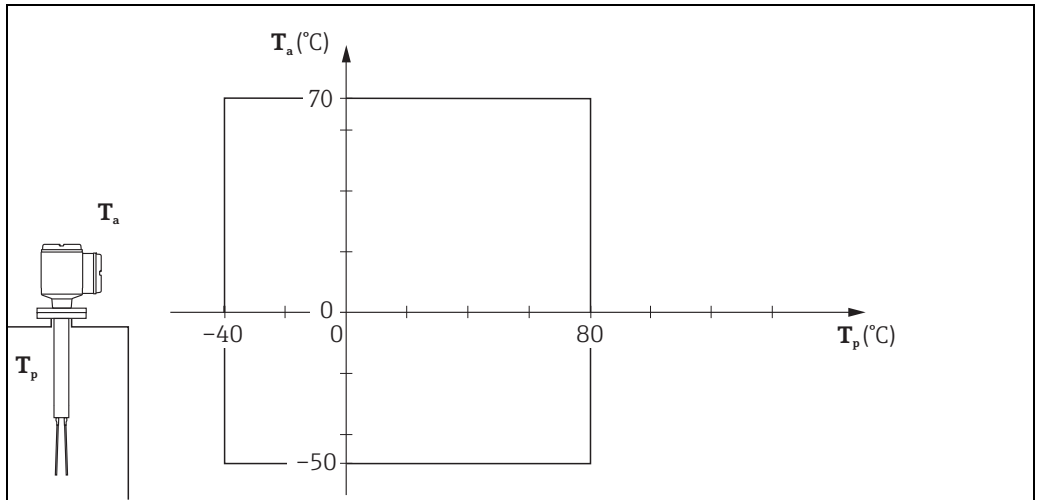

FTM5x_03




T_a Ambient temperature

T_p Process temperature

High temperature version

only FTM50, FTM51

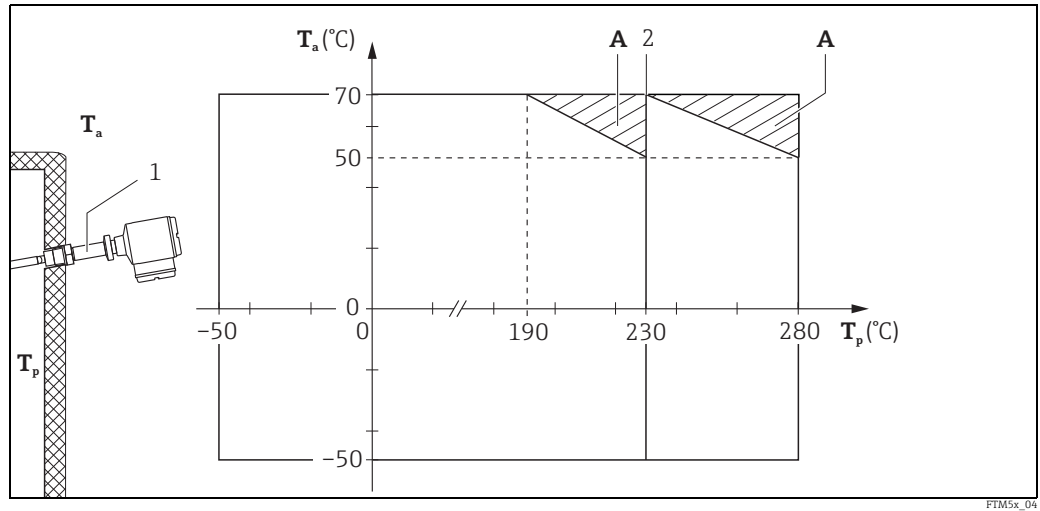


FTM5x_04



- T_a Ambient temperature
- T_p Process temperature
- A** Additionally utilizable temperature range when using the temperature spacer outside the insulation
- 1 Temperature spacer outside the insulation
- 2 Antistick coating possible up to max. 230 °C

Version with separate housing

FTM50, FTM51

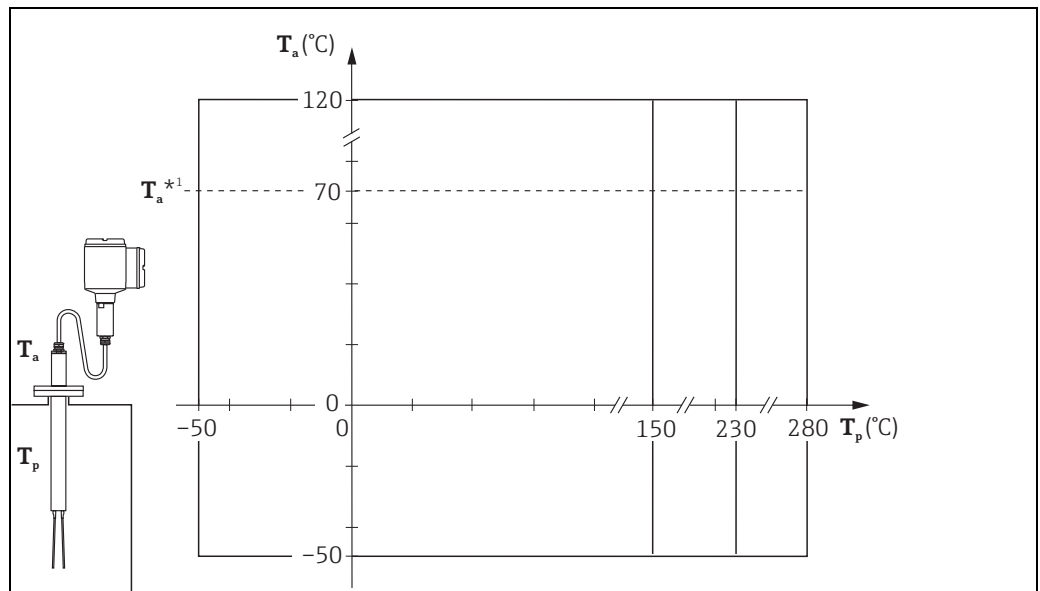


FTM5x_05



- T_a Ambient temperature
- T_p Process temperature
- *1 T_a at housing: Restriction to 70 °C

FTM52

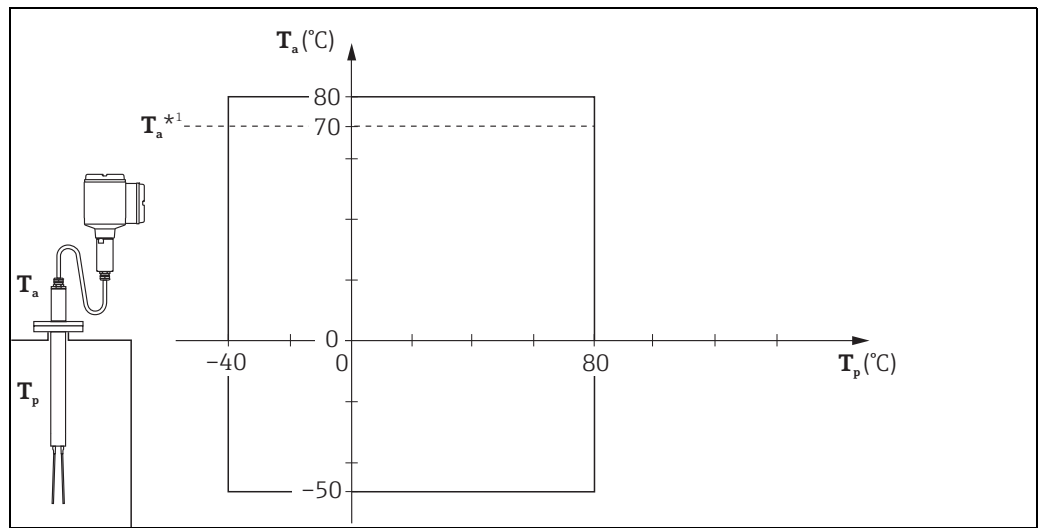

FTM5x_06



T_a Ambient temperature

T_p Process temperature

*1 T_a at housing: Restriction to 70 °C

Connection data

Electronic insert	Power supply	Relay circuit
FEM51	19...253 V AC	--
FEM52	10... 55 V DC	--
FEM54	19...253 V AC	253 V AC / 6 A (Ex de version: 4 A) 1500 VA / $\cos \varphi = 1$ 750 VA / $\cos \varphi > 0.7$
	19... 55 V DC	30 V DC / 4 A 125 V DC / 0.2 A
FEM55	11... 36 V DC	--



71275948

www.addresses.endress.com
