


















Operating Instructions

Stamolys CA71AL

Aluminium analyser

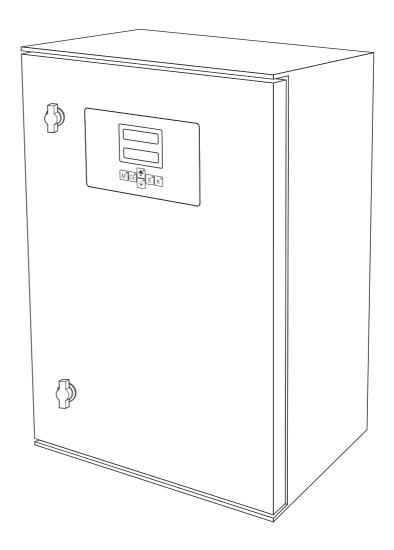




Brief overview

 $\rightarrow 144$

Technical data

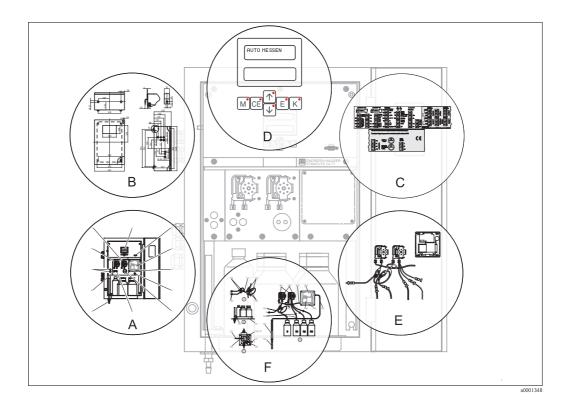

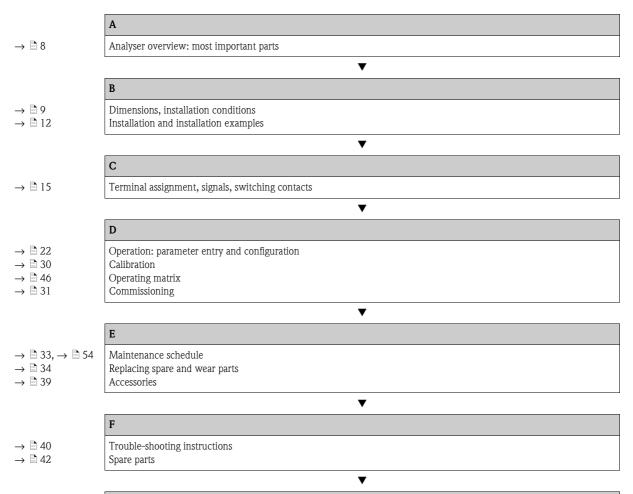


Table of contents

| 1 | Safety instructions 4 |
|--|--|
| 1.1 1.2 1.3 1.4 1.5 1.6 | Designated use4Installation, commissioning and operation4Operational safety4Return5Notes on safety icons and symbols5Document symbols5 |
| 2 | Identification 6 |
| 2.1 2.2 2.3 | Device designation6Scope of delivery7Certificates and approvals7 |
| 3 | Installation 8 |
| 3.1 3.2 3.3 3.4 3.5 3.6 | Analyser overview8Incoming acceptance, transport, storage9Installation conditions9Installation instructions12Installation examples14Post-installation check14 |
| 4 | Wiring 15 |
| 4.1 4.2 4.3 4.4 4.5 | Electrical connection15Signal connection18Switching contacts19Serial interface20Post-connection check21 |
| 5 | Operation |
| 5.1 5.2 5.3 5.4 | Operation and commissioning22Display and operating elements22Local operation22Calibration30 |
| 6 | Commissioning |
| 6.1 6.2 | Function check |
| 7 | Maintenance |
| 7.1 7.2 7.3 7.4 7.5 7.6 7.7 7.8 | Maintenance schedule33Replacing reagents34Replacing pump hoses34Replacing valve hoses36Replacing the static mixer37Replacing the photometer optical cell37Cleaning37Placing out of service38 |

| 8 | Accessories | . 39 |
|--|---|----------------------|
| 8.1 8.2 8.3 8.4 8.5 | Collecting vessel Reagents, cleaner, standard solution Hose cleaner Maintenance kit Additional accessories | 39 39 39 |
| 9 | Trouble-shooting | . 40 |
| 9.1 9.2 9.3 9.4 9.5 9.6 | Trouble-shooting instructions System error messages Process errors without messages Spare parts Return Disposal | 40 41 42 43 |
| 10 | Technical data | . 44 |
| 10.1 10.2 10.3 10.4 10.5 10.6 10.7 | Input | 44 44 44 45 |
| 11 | Appendix | . 46 |
| 11.1 11.2 11.3 11.4 | Operating matrix Ordering forms Analyser settings Maintenance schedule | 50 52 |
| | Index | 57 |

Safety instructions Stamolys CA71AL

1 Safety instructions

1.1 Designated use

Due to its good mechanical properties (ductility), aluminium is one of the most used light metals. Major users are car construction and packaging industry.

In the environment, aluminium mainly occurs in the soil, in many ores (felspar, mica). There is a low concentration of aluminium as natural content in surface water and groundwater.

Due to acid rain, aluminium bound in the soil can be set free, it penetrates into the groundwater and finally into the food chain.

For humans, aluminium is harmful to health. Aluminium is supposed to be one of the factors causing illnesses such as Alzheimer or Parkinson. Higher contents in drinking water are toxic.

The limit value acc. to the German drinking water regulations is: 0.2 mg/l Al.

The analyser is a compact photometric analysis system.

It is designed for the almost continuous monitoring of the aluminium content in drinking water and wastewater.

In particular, the analyser is intended for:

- Phosphate elimination in sewage treatment plants
- Precipitant monitoring in wastewater and drinking water applications

Any other use than the one described here compromises the safety of persons and the entire measuring system and is, therefore, not permitted.

The manufacturer is not liable for damage caused by improper or non-designated use.

1.2 Installation, commissioning and operation

Please note the following items:

- Installation, commissioning, operation and maintenance of the measuring system must only be carried out by trained technical personnel.
 - The technical personnel must be authorised for the specified activities by the system operator.
- Electrical connection must only be carried out by a certified electrician.
- Technical personnel must have read and understood these Operating Instructions and must adhere to them.
- Before commissioning the entire measuring point, check all the connections for correctness. Ensure that electrical cables and hose connections are not damaged.
- Do not operate damaged products and secure them against unintentional commissioning. Mark the damaged product as being defective.
- Measuring point faults may only be rectified by authorised and specially trained personnel.
- If faults can not be rectified, the products must be taken out of service and secured against unintentional commissioning.
- Repairs not described in these Operating Instructions may only be carried out at the manufacturer's or by the service organisation.

1.3 Operational safety

The analyser has been designed and tested according to the state of the art and left the factory in perfect functioning order.

Relevant regulations and European standards have been met.

As the user, you are responsible for complying with the following safety conditions:

- Installation instructions
- Local prevailing standards and regulations.

Stamolys CA71AL Safety instructions

1.4 Return

If the analyser has to be repaired, please return it *cleaned* to the sales centre responsible. Please use the original packaging, if possible.

Please enclose the completed "Declaration of contamination" (copy the second last page of these Operating Instructions) with the packaging and the transportation documents. No repair without completed "Declaration of contamination"!

1.5 Notes on safety icons and symbols



Warning!

This symbol alerts you to hazards. They can cause serious damage to the instrument or to persons if ignored.



Caution!

This symbol alerts you to possible faults which could arise from incorrect operation. They could cause damage to the instrument if ignored.



Note!

This symbol indicates important items of information.

1.6 Document symbols



This symbol indicates a cross reference to a defined page (e.g. p. 1).



This symbol indicates a cross reference to a defined figure (e.g. fig. 2).

Identification Stamolys CA71AL

2 Identification

2.1 Device designation

2.1.1 Nameplate

Check the order code on the nameplate (at the analyser) with the product structure (see below) and your order.

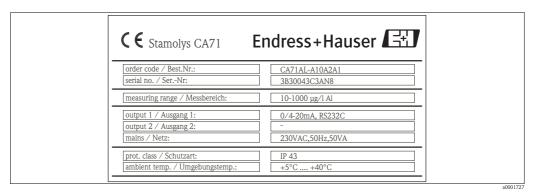


Fig. 1: Example of a nameplate

2.1.2 Product structure

| | Meas | easuring range | | | | | | | | | |
|----------|------|----------------|--|----------|---|------------|------------|---|--|--|--|
| | A | Measu | Measuring range 10 1000 μg/l Al | | | | | | | | |
| | Y | Specia | Special version acc. to customer;s specification | | | | | | | | |
| | | Samp | Sample transfer | | | | | | | | |
| | | 1 | Sample | transfer | from or | ne meast | ıring poi | nt (one-channel version) | | | |
| | | 2 | Sample | transfer | from tw | 70 meast | ıring poi | nts (two-channel version) | | | |
| | | | Powe | r supp | ly | | | | | | |
| | | | 0 | 230 V | AC / 50 | Hz | | | | | |
| | | | 1 | 115 V | AC / 60 | Hz | | | | | |
| | | | 2 | | AC / 50 | | | | | | |
| | | | 3 | 230 V | AC / 60 | Hz | | | | | |
| | | | | Colle | Collecting vessel for up to 3 analysers | | | | | | |
| | | | | Α | Withou | ıt collect | ting vess | el | | | |
| | | | | В | | - | | vithout level measurement | | | |
| | | | | С | | _ | | vith level measurement (one-channel version only) | | | |
| | | | | D | With t | wo colle | cting ves | sels without level measurement (two-channel version) | | | |
| | | | | | Hous | ing ver | sion | | | | |
| | | | | | 1 | Withou | ıt housir | ng | | | |
| | | | | | 2 | With C | GFR hous | sing | | | |
| | | | | | 3 | With s | tainless s | steel 1.4301 (AISI 304) housing | | | |
| | | | | | | Comr | nunica | tion | | | |
| | | | | | | Α | 0/4 | 20 mA, RS 232 | | | |
| | | | | | | | Addit | ional equipment | | | |
| | | | | | | | 1 | Quality certificate | | | |
| | | | | | | | 2 | Quality certificate + set of inactive reagents | | | |
| | | | | | | | 3 | Quality certificate + three sets of inactive reagents | | | |
| CA71AL - | | | | | | | | complete order code | | | |

Stamolys CA71AL Identification

2.2 Scope of delivery



Note!

Please, order reagents separately with analyser version CA71XX-XXXXXX1.

With all other versions, inactive reagents are included in the scope of delivery. You have to mix the reagents before using them. Please, read the instructions attached to the reagents.

The scope of delivery comprises:

- an analyser with mains plug
- a cleaning injector
- a tin of silicone spray
- a Norprene hose, length 2.5 m (8.2 ft), ID 1.6 mm (0.06")
- a Grifflex hose, length 2.0 m (6.56 ft), ID 19 mm (0.75")
- a C-flex hose, length 2.5 m (8.2 ft), ID 3.2 mm (0.12")
- two hose fittings of each size:
 - 1.6 mm x 1.6 mm (0.06" x 0.06")
 - 1.6 mm x 3.2 mm (0.06" x 0.12")
- two T-hose fittings of each size:
 - 1.6 mm x 1.6 mm x 1.6 mm (0.06" x 0.06" x 0.06")
 - 3.2 mm x 3.2 mm x 3.2 mm (0.12" x 0.12" x 0.12")
- an interference suppressor for the current output
- a screwed socket for the outlet pipe
- 4 edge covers
- a quality certificate
- Operating Instructions (English).

2.3 Certificates and approvals

2.3.1 **C€** approval

Declaration of conformity

The product meets the legal requirements of the harmonised European standards. The manufacturer confirms compliance with the standards by affixing the $C \in \mathbb{C}$ symbol.

2.3.2 Manufacturer certificate


Quality certificate

With the certificate the manufacturer confirms compliance with all technical regulations and the successful testing individually for your product.

Installation Stamolys CA71AL

3 Installation

3.1 Analyser overview

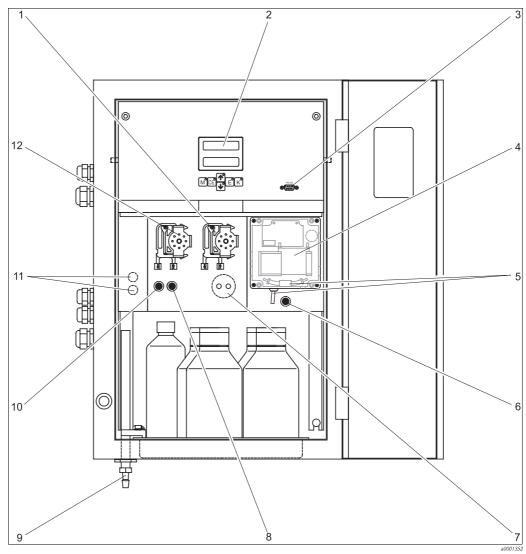

| Fig. 2: | Analyser (housing version, without hoses) | | |
|---------|--|----|---|
| 1 | Reagents pump (P2), inlet from canister | 7 | Dosage loop (with CA71SI only) |
| 2 | Display | 8 | Valve V2 |
| 3 | Serial interface RS 232 | 9 | Sample resp. reagents mix outlet (left or right, acc. |
| 4 | Photometer optical cell | | to version) |
| 5 | Static mixer (acc. to version) | 10 | Valve V1 |
| 6 | Valve V4 (version with sample outlet rightside | 11 | Channel switch: above channel 1, below channel 2 |
| | only) | 12 | Sample pump P1, inlet see below |

Inlet to the sample pump:

- Valve V1
 - hose in front: sample inlet
 - hose at the back: inlet from valve V2 (cleaner or standard solution)
- Valve V2
 - hose in front: inlet from canister with standard solution
 - hose at the back: inlet from canister with cleaner (if used, depending on version)

Stamolys CA71AL Installation

3.2 Incoming acceptance, transport, storage

- Make sure the packaging is undamaged!
 Inform the supplier about damage to the packaging.
 Keep the damaged packaging until the matter has been settled.
- Make sure the contents are undamaged!
 Inform the supplier about damage to the delivery contents.
 Keep the damaged products until the matter has been settled.
- Check that the scope of delivery is complete and agrees with your order and the shipping documents.
- The packaging material used to store or to transport the product must provide shock protection and humidity protection. The original packaging offers the best protection. Also, keep to the approved ambient conditions (see "Technical data").
- If you have any questions, please contact your supplier or your sales centre responsible.

3.3 Installation conditions

3.3.1 Design, dimensions

Stainless steel housing

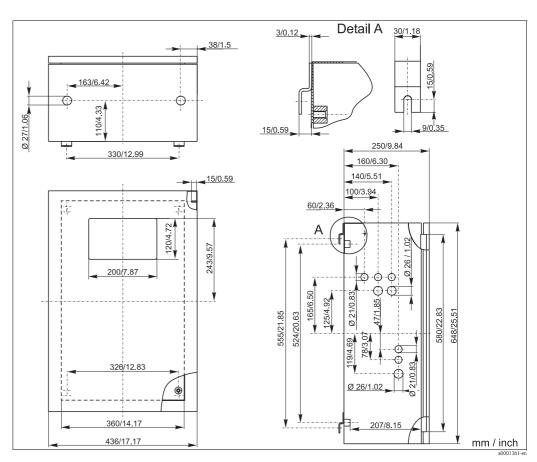


Fig. 3: Stainless steel version

Installation Stamolys CA71AL

GFR housing

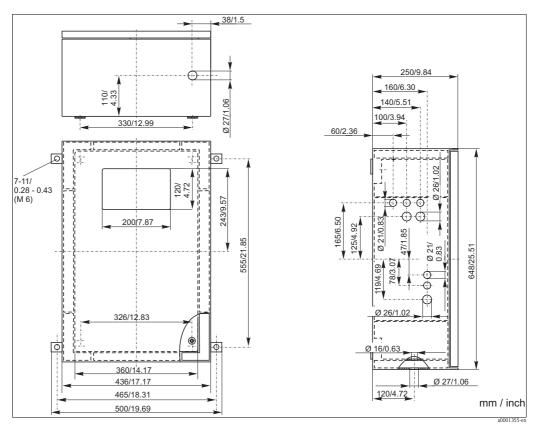


Fig. 4: GFR version

Without housing

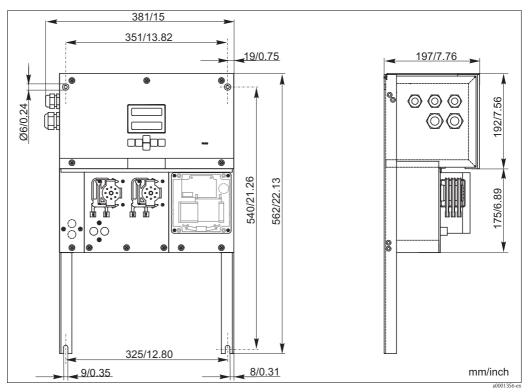


Fig. 5: Open version (without housing)

Stamolys CA71AL Installation

3.3.2 Connecting the sample line

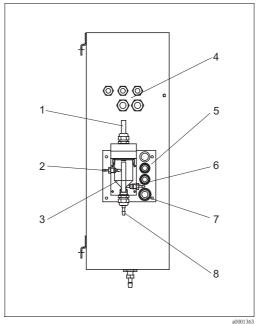


Abb. 6: Collecting vessel at analyser (optional)

Abb. 7: Collecting vessel dimensions

- 1 Ventilation
- 2 Sample inlet from sampling
- 3 Collecting vessel
- 4 Electrical connections
- 5 Analyser sample inlet

- * variable, freely adjustable dimensions
- 6 Sampling for analyser
- 7 analyser outlet
- 8 Sample overflow

One-channel version

Collecting vessel (at analyser, with or without level measurement)

Connection hose ID 3.2 mm (0.13")

Customer collecting vessel

Connection hose ID 1.6 mm (0.06")

Max. distance from collecting vessel to analyser 1 m (3.28 ft)Max. height difference from collecting vessel to analyser 0.5 m (1.64 ft)

Two-channel version

- Depending on the ordered version, one or two collecting vessels (with or without level measurement) are included in the scope of delivery.
- Level measurement is only possible for one channel.
- Only one collecting vessel can be mounted at the housing. The second is to be placed nearby the analyser.


Adjusting the level measurement (one-channel version only)

Adjust the conductive level measurement due to the number of connected analysers.

1. In dependence of the application, mount the right adjusting pin or no adjusting pin ($\rightarrow \square 8$ and $\rightarrow \square 9$, position 2).

Installation Stamolys CA71AL

2. To receive an optimum sample volume, pull the marked pipe (position 3) downwards due to your application (1, 2 or 3 analysers).

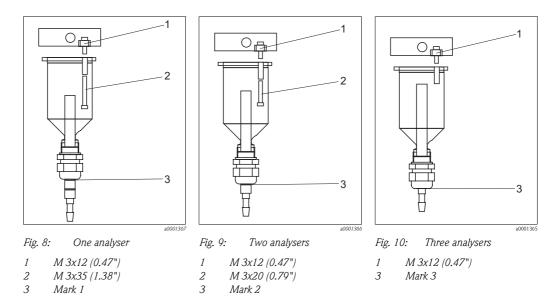

3.4 Installation instructions

To install the analyser at the intended location, proceed as follows:

- 1. Place the analyser in position and secure it to a wall using M6 screws. For the installation dimensions, please see previous chapter.
- 2. Use a spirit level to check that the cabinet is hanging level. This is the only way to ensure that any air bubbles that occur can escape from the cell.
- 3. Place the edge covers on the analyser edges (with GFK housing only).
- 4. Lay the drain pipe for the reaction products. Where possible, use fixed pipes (PVC or PE, internal diameter 34" with 3% incline).
- 5. Screw the screwed socket ID 16 downwards into the outlet pipe. Fix the Grifflex hose ID 19 at the socket by means of a hose band clip.
- 6. Insert the valve hoses according to Fig. 11. This prevents the hoses becoming stuck or being pressed against the same position for a long period of time.

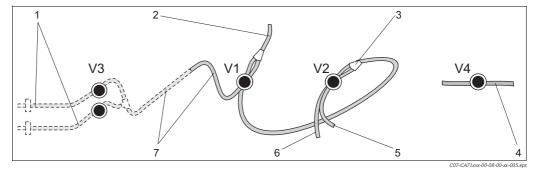


Fig. 11: Valves and valve hoses

V1-4 Valves 1, 2 and 4

V3 Two channel switch (optional)

1 Sample

- 2 To the pump
- 3 Connecting hose to valve 1, back
- 4 Outlet hose
- 5 Hose valve 2 front, standard
- 6 Hose valve 2 back, cleaning agent
 - 7 Hose valve 1 front, sample

7. Secure the hose cassettes in the corresponding pump brackets ($\rightarrow \square 12$): Sample pump on the left, reagent pump on the right. Here, the flow direction of sample and reagent must be anticlockwise.

12

Stamolys CA71AL Installation

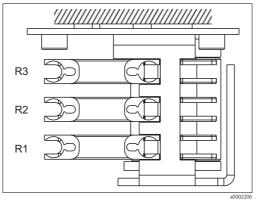


Fig. 12: Reagent pump, top view

- R1 Reagent 1
- R2 Reagent 2 (if used)
- R3 Reagent (if used)
- 8. Connect the sample transfer.

Note!

The sample can be obtained as follows:

- Directly or after a reversible flow filter or a cross current filter by means of a small pump (rating approx. 300 ml/min), suitable for clear media, e.g. in the discharge channel of a sewage treatment plant
- From a sedimentation tank or after microfiltration; this is practical for media containing flocculants,
 - e.g. in an activated sludge basin
- Sample conditioning using ultrafiltration for heavily soiled media,
 - e.g. from the primary settling tank

For questions regarding sample conditioning and its automation, please contact your Service or your Sales Centre responsible.

9. Connect the tubes from canisters containing reagents, standard and cleaning agents to the following nozzles:

| Canister | Hose designation (mark) |
|-------------------|-------------------------|
| Sample | P |
| Reagent 1 | AL-1 |
| Reagent 2 | AL-2 |
| Reagent 3 | AL-3 |
| Standard solution | S |
| Cleaner | R |



Note!

- The pressure of the hose cassette is set at the factory such that the sample and reagent are fed in without bubbles.
- Only change the pressure if the factory setting does not meet your requirements. The setting is changed by turning the adjustment screw using a 2.5 mm Allen key.

Installation Stamolys CA71AL

3.5 Installation examples

3.5.1 CAT430 or customer-specific ultra filtration and two CA71 analysers

- Permeate can contain air bubbles (CAT430) or is free of bubbles (customer-supplied ultrafiltration)
- Distance between the analysers as short as possible: sampling line between T-piece and the second analyser (→ □ 13, item 2) shorter than 1.5 m
- Cross-section of sampling line ID 3.2 4 mm
- Only one sample receiver required



Ensure that there is always sufficient sample available for both analysers. Observe this when selecting maintenance intervals for CAT430 and when setting the buffer volume on the collecting vessel.

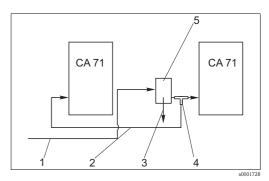


Fig. 13: Installation example

- 1 Sample from CAT430
- 2 Sampling line
- 3 Sample receiver overflow
- 4 T-piece
- 5 Collecting vessel

3.5.2 CAT411, CAT430 and two CA71 analysers (two-channel version)

- Permeate not free of air bubbles
- Distance between the analysers as short as possible: sampling line between T-piece and the second analyser (→ 14, item 5) shorter than 1.5 m
- Cross-section of sampling line ID 3.2 4 mm
- One sample receiver each (without level measurement) for CAT411 or CAT430

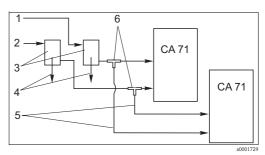


Fig. 14: Installation example

- 1 Sample from CAT430
- 2 Sample from CAT411
- 3 Collecting vessel
- 4 Collecting vessel overflow
- 5 Sampling lines
- 6 T-pieces

Note!

Ensure that there is always sufficient sample available for both analysers. Observe this when selecting maintenance intervals for CAT411 and CAT430.

3.6 Post-installation check

- After installation, check that all connections are fitted tightly and are leakage resistant.
- Ensure that the hoses cannot be removed without effort.
- Check all hoses for damage.

Stamolys CA71AL Wiring

4 Wiring

4.1 Electrical connection



Warning!

- The electrical connection must only be carried out by a certified electrician.
- Technical personnel must have read and understood the instructions in this manual and must adhere to them.
- Ensure that there is no voltage at the power cable before beginning the connection work.

4.1.1 Quick wiring guide



Caution!

- To reach the terminal strip, you must swing out the analyser frame.
- Before swinging out the analyser frame, remove the hoses from the outlet pipe. Otherwise there is danger of overflow.
- After swinging in the frame, reconnect the hoses.

Swing out the analyser frame as follows:

- 1. Loosen the two lower Allen screws SW 6 by 3 to 4 turns ($\rightarrow \square$ 15, pos. 1).
- 2. Unscrew the two upper Allen screws until the analyser frame swings out. Thus you can reach the terminal strip (pos. 2).

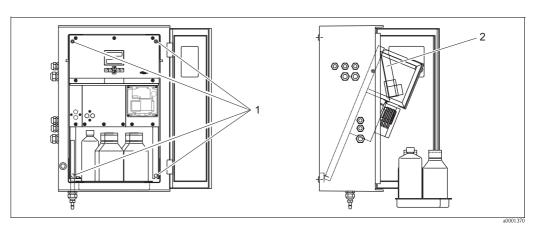


Fig. 15: Swing out of the analyser frame

- 1 Allen screws SW 6
- 2 Terminal strip



Note!

The device does not have a mains switch. Therefore, it is advantageous to have a fused socket near to the device.

Wiring Stamolys CA71AL

4.1.2 Terminal assignment



Caution!

The following figure ($\rightarrow \square$ 16) shows the connection department sticker as an example. Terminal assignment and cable core colours can be different to the originals.

For connecting your analyser only use the terminal assignment of the connection department sticker in the device $(\rightarrow \boxed{2}$ 17)!

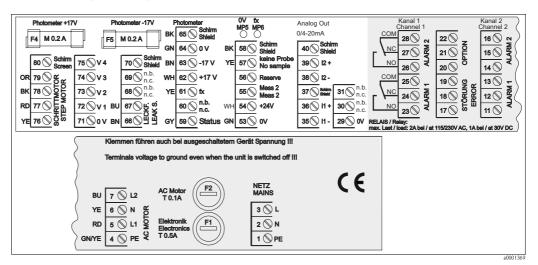


Fig. 16: Example of the connection sticker

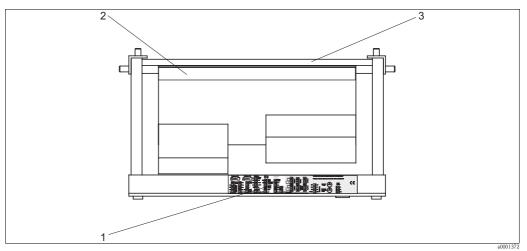


Fig. 17: Analyser from top (open version resp. swung out)

- 1 Connection department sticker
- 2 Printed circuit board with terminal strip
- 3 Backside of the analyser

Stamolys CA71AL Wiring

| Function | Designation | Terminal one channel | Terminal two channels |
|--------------------------------|-------------|----------------------|-----------------------|
| | L | 3 | 3 |
| Mains | N | 2 | 2 |
| | PE | 1 | 1 |
| | COM | 25 | 25 |
| Alarm value 1, channel 1 | NC | 24 | 24 |
| | NO | 23 | 23 |
| | COM | 28 | 28 |
| Alarm value 2, channel 1 | NC | 27 | 27 |
| | NO | 26 | 26 |
| | COM | - | 13 |
| Alarm value 1, channel 2 | NC | - | 12 |
| | NO | - | 11 |
| | COM | - | 16 |
| Alarm value 2, channel 2 | NC | - | 15 |
| | NO | - | 14 |
| | COM | 19 | 19 |
| Fault | NC | 18 | 18 |
| | NO | 17 | 17 |
| | COM | 22 | 22 |
| Reserve (unassigned terminals) | NC | 21 | 21 |
| | NO | 20 | 20 |
| | + | 36 | 36 |
| Analog output 1 0/4 20 mA | - | 35 | 35 |
| 0/ 1 20 HH 1 | Screen | PE ¹ | PE ¹ |
| | + | - | 39 |
| Analog output 2 0/4 20 mA | - | - | 38 |
| o, 20 mm | Screen | - | PE ¹ |
| Sample conditioning | Input | 57 | 57 |
| remote control | 0 V | 53 | 53 |
| Observed seeds are | Input | - | 55 |
| Channel switch-over | 0 V | - | 53 |

¹⁾ Brass screw with bolt top right in the connection compartment (marked with)



Note!

- Alarm values 1 and 2 do not need to be connected if the PLC sets its own alarm values at the analog output.
- When using a sample conditioning system:

 Connect terminals 57 and 53 on the analyser to the corresponding terminals on the sample conditioning system. For the allocation of these terminals, please see the sample conditioning system operating instructions.
- If there is a 24 V voltage at terminal 57, the analyser will not begin measurement (sample not ready). To start measurement, the voltage must stay at 0 V for at least 5 seconds.

Wiring Stamolys CA71AL

4.2 Signal connection

4.2.1 Screening of the analog outputs

The interference suppressor attenuates electromagnetic effects on control, power and signal lines. After the connection of the data transfer cables clip the interference suppressor (in scope of delivery) on the cable cores (not on the outer insulation of the cable!). Place the cable screen out of the interference suppressor and connect it to PE (brass screw with bolt, top right in the connection compartment) ($\rightarrow \square 18$).

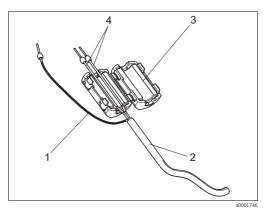


Fig. 18: Interference protection of the signal cable

- 1 Cable screen (to PE)
- 2 Signal cable
- 3 Interference suppressor
- 4 Cable cores of the signal cable



Note

With the two-channel version, place the cable cores of all cables (data cables to analog output 1 and to analog output 2) through the interference suppressor.

4.2.2 One-channel version

| Connection | Designation | Function |
|----------------|-----------------|--|
| | Leak | Liquid has collected in the drip pan |
| Signal inputs | No sample | No sample available, measurement is not started, display flashes |
| | AV 1 | Alarm value 1 exceeded or undershot |
| Signal outputs | AV 2 | Alarm value 2 exceeded or undershot |
| Signal outputs | Fault | Retrieves error message using operation menu |
| | Measurement end | Displays "Measurement finished" (5 s) |
| Analog output | 1–1 channel 1 | 0 or 4 mA = measuring range start 20 mA = measuring range end |

Stamolys CA71AL Wiring

4.2.3 Two-channel version

| Connection | Designation | Function | | | | |
|-------------------|---|--|--|--|--|--|
| | Leak | Liquid has collected in the drip pan | | | | |
| Signal inputs | No sample | No sample available, measurement is not started, display flashes | | | | |
| | AV 1-1 | Alarm value 1, channel 1 exceeded or undershot | | | | |
| | AV 2-1 | Alarm value 2, channel 1 exceeded or undershot | | | | |
| | AV 1-2 | Alarm value 1, channel 2 exceeded or undershot | | | | |
| Signal outputs | AV 2-2 | Alarm value 2, channel 2 exceeded or undershot | | | | |
| | Fault | Retrieves error message using operation menu | | | | |
| | Channel ½ or measurement end ¹ | Displays active channel Displays "Measurement finished" (5 s) | | | | |
| Analogoutnut | 1–1 channel 1 | 0 or 4 mA = measuring range start 20 mA = measuring range end | | | | |
| Analog output | l-2 channel 2 | 0 or 4 mA = measuring range start 20 mA = measuring range end | | | | |
| Channel selection | Meas. 2 | 0 V = channel 1 24 V = channel 2 | | | | |

¹⁾ Alternative selection

4.3 Switching contacts

One-channel version

| Connection | Terminal connection for condition fulfilled | | | | | Terminal connection for condition not fulfilled | | | | Terminal connection for power off | | |
|------------|---|----------------|-------------|----------------|----------|---|-------------|----------------|----------------|-----------------------------------|----------------|--|
| AV 1 | A: R: | 25 25 | - | 23 24 | A: R: | 25 25 | - | 24 23 | 25 | - | 24 | |
| AV 2 | A: R: | 28 28 | - | 26 27 | A: R: | 28 28 | - | 27 26 | 28 | - | 27 | |
| Fault | A: R: | 19 19 | - | 17 18 | A: R: | 19 19 | - | 18 17 | 19 | - | 18 | |
| Unassigned | | 22 16 13 | - - - | 20 14 11 | | 22 16 13 | - - - | 21 15 12 | 22 16 13 | - - - | 21 15 12 | |

Wiring Stamolys CA71AL

Two-channel version

| Connection | | Terminal connection for condition fulfilled | | | | Terminal connection for condition not fulfilled | | | | Terminal connection for power off | | |
|---------------------------|----------|---|---|----------|----------|---|---|----------|----|-----------------------------------|----|--|
| AV 1 - 1 | A: R: | 25 25 | - | 23 24 | A: R: | 25 25 | - | 24 23 | 25 | - | 24 | |
| AV 1 - 2 | A: R: | 13 13 | - | 11 12 | A: R: | 13 13 | - | 12 11 | 13 | - | 12 | |
| AV 2 - 1 | A: R: | 28 28 | - | 26 27 | A: R: | 28 28 | - | 27 26 | 28 | - | 27 | |
| AV 2 - 2 | A: R: | 16 16 | - | 14 15 | A: R: | 16 16 | - | 15 14 | 16 | - | 15 | |
| Fault | A: R: | 19 19 | - | 17 18 | A: R: | 19 19 | - | 18 17 | 19 | - | 18 | |
| Channel ½ measurement end | A: R: | 22 22 | - | 20 21 | A: R: | 22 22 | - | 21 20 | 22 | - | 21 | |

A = NO current configured

R = NC current configured



Note!

Condition fulfilled means:

■ AV 1: concentration > Alarm value 1

■ AV 2: concentration > Alarm value 2

■ Fault: error occurred

Contacts AV 1, AV 2 and fault are only affected during automatic operation.

4.4 Serial interface

| RS 232 (| of CA 71 | COM 1 | /2 at PC |
|-----------------|----------|----------|-----------------|
| SUB-D, nine-pin | Function | Function | SUB-D, nine-pin |
| 3 | TxD | RxD | 2 |
| 2 | RxD | TxD | 3 |
| 8 | CTS | RTS | 7 |
| | | CTS | 8 |
| 5 | GND | GND | 5 |

Software protocol: 9600, N, 8, 1 Output format: ASCII

The results (measured value+unit of measure+CR) are output in the "Data memory Measured values" menu.

The calibration results (measured value+unit of measure+CR) are output in the "Data memory-Calibration factors" menu.



Note

- A null modem cable is required (not a crossed one).
- The analyser does not have to be configured for the interface.

- "D" = Data memory-Measured values
- "C" = Data memory-Calibration factors
- "S" = Setup (parameter entry, configuration...)
- "F" = Frequency (current)

Stamolys CA71AL Wiring

4.5 Post-connection check

Carry out the following checks after electrical connection:

| Device status and specifications | Note |
|--|-------------------|
| Is the analyser or cable externally undamaged? | Visual inspection |

| Electrical connection | Note |
|--|--|
| Does the supply voltage correspond to the data on the nameplate? | 230 V AC / 50 Hz 115 V AC / 60 Hz |
| Are current outputs screened and connected? | |
| Are the mounted cables relieved of tension? | |
| Cable type properly disconnected? | Guide power supply and signal lines separately over the entire travel distance. Separate cable channels are ideal. |
| Cable routing without scuffing or cross-overs? | |
| Are power supply and signal lines connected correctly according to wiring diagram? | |
| Are all screw terminals tightened? | |
| Are all cable entries mounted, tightened and leak-resistant? | |
| Interference suppressor at the analogue output? | |
| Current output simulation | See procedure below |

Current output simulation:

- 1. Hold both arrow keys down (see "Display and operating elements" chapter) and connect the analyser to the mains or switch the mains switch on (if available). Wait until the display "0 mA" appears.
- 2. Check on your PLC, PCS or you data logger whether the current value is the same.
- 3. Press the key. Browse to the next current values (4, 12, 20 mA, depending on the setting).
- 4. Check that the respective current values are also on your PLC, PCS or your data logger.
- 5. If the values are not there:
 - a. Check the terminal assignment for analogue output 1 or 2.
 - b. Disconnect the analogue outputs from your PLC, PLS or your data logger and repeat steps 14 with the restriction that you measure the current values at the terminals of the analyser and not at the PLC, SPL or data logger.
 - If these current values are correct, please check your PLC, SPL, the data logger or the electrical cables.

Operation Stamolys CA71AL

5 Operation

5.1 Operation and commissioning

The following chapters provide you with information on the analyser's operating elements and explain how to make settings.

In chapter "Commissioning" you will find the procedure for initial start-up and for daily analyser operation.

5.2 Display and operating elements

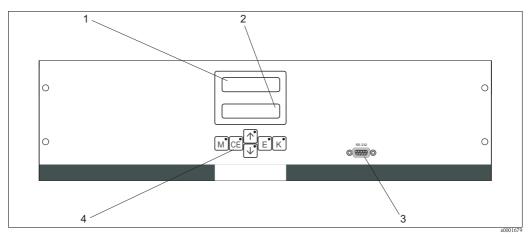


Fig. 19: Display and operating elements

- 1 LED (measured value)
- 2 LC display (measured value and status)
- 3 Serial interface RS 232
- 4 Operating keys and control LEDs

5.3 Local operation

The operating keys and the integrated indicator LEDs have the following functions:

| Key | Key function | Indicator LED function |
|-----|--|---------------------------|
| М | – "Auto measuring" option– back to the main menu from all sub-menus | Alarm value 1 exceeded |
| CE | backwards in the sub-menu (horizontal, see Appendix,) | Alarm value 2 exceeded |
| 1 | backwards in the main menu (vertical)increase value | Measuring range exceeded |
| • | forwards in the main menu (vertical)reduce value | Measuring range undershot |
| Е | select optionadopt value, forwards in the sub-menu (horizontal) | Retrieve error message |
| К | – selection in the sub-menu | Unassigned |

Stamolys CA71AL Operation

5.3.1 Main menu

Access the main menu by holding down the M key until "AUTO MEASURING" is displayed. For the main menu options and information about them, please see the following table.

| Selection | Display | Info |
|---|-----------------|--|
| AUTO MEASURING | AUTO MEASURING | Calibration, measurement, flushing time-controlled actions |
| PARAMETER ENTRY | PARAMETER ENTRY | Default settings for measuring ranges, alarm values, calibration, flushing |
| CONFIGURATION | CONFIGURATION | Basic settings such as parameters, measuring units, arrangement of analog outputs and alarm values (NO, NC), date, time, offset values |
| LANGUAGE | LANGUAGE | Selecting menu language |
| ERROR DISPLAY | ERROR DISPLAY | Displaying error messages |
| SERVICE | SERVICE | Manually switching valves and pumps |
| DATA MEMORY 1 | DATA MEMORY 1 | Last 1024 measured values channel 1 |
| DATA MEMORY 2 (Two-channel version only) | DATA MEMORY 2 | Last 1024 measured values channel 2 |

5.3.2 AUTO MEASURING

The actions "calibration", "measuring" and "flushing" are triggered by time-control.

The settings for these actions are made in the "PARAMETER ENTRY" menu.

The respective action is displayed in the LC display. The most recently registered concentration value is displayed until the end of the next measurement.

Otherwise, "wait" is displayed when

- the time of the first measurement has not yet been reached or
- the measuring interval has not yet expired.



Note!

"Measuring" flashes when the analyser is ready for the next measurement but has not yet received the enable signal from the sample collector or the sample conditioning unit.

Operation Stamolys CA71AL

5.3.3 CONFIGURATION



Note!

In the following table and in the tables in the next chapter, **example** images can be found for each option under "Display". In addition to the numerical values, the parameter is also displayed in some options. This is **not** shown in the images. Moreover, individual numerical values in the images can differ from the actual settings.

The $actual\ factory\ settings$ can in any case be found in column 2 "Range of adjustment / Factory settings" in bold.



Note!

Some settings that can be made in this menu affect the defaults in the PARAMETER ENTRY menu. In view of this, complete the CONFIGURATION menu first during initial start-up.

| Option | Range of adjustment (default settings in bold) | Display | Info |
|----------------------|--|------------------------|--|
| Code number | 03 | Code-No. | Input 03. If an incorrect code is entered the program exits the sub-menu. |
| Photometer | AL-A | Photometer | This setting displays the parameter that is being measured (AL-A). This is defined by the product specification and set in this option at the factory. Do not change the value. Otherwise, you will receive an "Incorrect photometer" error message. |
| Default settings | yes / no | default setup y: 1⁴ | If "yes" is selected, all settings are reset to default. You have to set date and time to the current before (scroll to the third last fuction in this menu). With the reset, the date for the 1st calibration and for the 1st flushing are set to the next day. |
| Measuring unit | μg/1 / ppb | Unit of measure mg/l | Measuring unit selection is dependent on the type of photometer. This setting also affects the scope of the measuring range. |
| Calibration factor | 0.20 5.00 1.00 | Calibr. factor 1.00 | The calibration factor is the ratio of the measured concentration of the calibration standard to the pre-defined concentration of the standard (see "PARAMETER ENTRY", calibration solution). The deviation results from factors such as reagent ageing, ageing of constructive components, etc. The calibration factor compensates for these effects. CA 71 checks the registered calibration factor logically. If the factor lies outside of the error tolerance, the calibration is automatically repeated. If the repeat also lies outside, an error message appears and the analyser continues to work with the most recently registered, logically correct factor. The last 10 calibration factors are filed in the memory with the date and time and can be retrieved by pressing the K key. The calibration factor ca be changed manually. |
| Concentration offset | 0.00 50.0 μg/1 | c-Offset 0.00 mg/l | The offset specifies the zero shift of the calibration function. (Change the sign with the $\boxed{\kappa}$ key.) |
| Dilution | 0.10 1.00 | Dilution 1.00 | If the sample is to be diluted between taking the sample and the analyser, the dilution factor has to be entered here (factor times measured value). |
| Delay to sample | 20 300 s 80 s | Delay to sample 80 s | Dosing time for sample or standard (20 120 s). During this time, the entire system is flushed with sample or standard, so when the reagent is added there is definitely only fresh sample in the mixer. If there is sufficient sample available, select the highest possible value. |

Stamolys CA71AL Operation

| Option | Range of adjustment (default settings in bold) | Display | Info |
|--------------------|---|----------------------------------|--|
| Analog output 1 | | Analog output 1 4-20 mA | Selection for the scope of channel 1 measuring range. If the concentration measuring range is 0 x mg/l, this corresponds to 0 mg/l either 4 mA or 0 mA. The end of the measuring range is the same in both cases at 20 mA. |
| Analog output 2 | 0 20 mA / 4 20 mA | Analog output 2 4-20 mA | Two-channel version only! Selecting scope of channel 2 measuring range. The scopes of the measuring range are independent of each other for channel 1 and channel 2 and are determined by the start of measuring range (channel 1 / channel 2) or end of measuring range (channel 1 / channel 2) setting in the PARAMETER ENTRY menu. |
| Alarm value AV 1-1 | | Alarm val. 1-1 norm. closed | Setting for whether contact for alarm value 1, channel 1 works as NO current or NC current contact. |
| Alarm value AV 2-1 | NO current NC current Note! Changes will only be activated after a Reset (Power off/on)! | Alarm val. 2-1 norm. closed | Setting for whether contact for alarm value 2, channel 1 works as NO current or NC current contact. |
| Alarm value AV 1-2 | | Alarm val. 1-2 norm. closed | Two-channel version only! Setting for whether contact for alarm value 1, channel 2 works as NO current or NC current contact. |
| Alarm value AV 2-2 | | Alarm val. 2-2 norm. closed | Two-channel version only! Setting for whether contact for alarm value 2, channel 2 works as NO current or NC current contact. |
| Error contact | | Error contact norm. closed | Setting for whether error contact works as NO current or NC current contact |
| Current date/time | 01.01.96 00:00 31.12.95 23:59 | act. Date/Time 25.01.02 15:45 | Setting the system clock. Format DD.MM.YY hh:mm. |
| Calibrate offset | yes / no | Calibrate offs yes: K no: E | Frequency offset ¹ Pressing the key starts a blind value measurement for compensating the reagent's inherent colour. |
| Frequency offset | - 5000 +5000 0 | f-Offset [Hz] | Manually changing the frequency offset. ¹ |

¹⁾ Determine the frequency offset after every reagent or photometer replacing. To obtain the frequency offset (= blind value), connect deminarilised water instead of sample to the sample inlet. The obtained value usually is between 0 and 10 Hz.

Operation Stamolys CA71AL

5.3.4 PARAMETER ENTRY

| Option | Range of adjustment (default settings in bold) | Display | Info |
|---------------------------------------|--|----------------------------------|--|
| Measuring range Start 1 | AL A. 10 1000 vg/l / 10 vg/l | Range start 1 0.00 mg/l | The specified concentration is allocated a value of 0 or 4 mA at analog output 1. |
| Measuring range Start 2 | - AL-A: 10 1000 μg/1 / 10 μg/1 | Range start 2 0.00 mg/l | Two-channel version only! The specified concentration is allocated a value of 0 or 4 mA at analog output 2. |
| Measuring range End 1 | AL A. 10 1000 uz // / 1000 uz // | Range end 1 2.50 mg/l | The specified concentration is allocated a value of 20 mA at analog output 1. |
| Measuring range End 2 | - AL-A: 10 1000 μg/1 / 1000 μg/1 | Range end 2 2.50 mg/l | Two-channel version only! The specified concentration is allocated a value of 20 mA at analog output 2. |
| Alarm value AV 1 - 1 | AL-A: 10 1000 μg/1 / 500 μg/1 | Alarm val.1-1 2.50 mg/l | Concentration threshold value limit relay 1, channel 1 (differential hysteresis 2% of alarm value). |
| Alarm value AV 2 - 1 | AL-A: 10 1000 μg/l / 1000 μg/l | Alarm val. 2-1 1.25 mg/l | Concentration threshold value limit relay 2, channel 1 (differential hysteresis 2% of alarm value). |
| Alarm value AV 1 - 2 | AL-A: 10 1000 μg/1 / 500 μg/1 | Alarm val. 1-2 1.25 mg/l | Two-channel version only! Concentration threshold value limit relay 1, channel 2 (differential hysteresis 2% of alarm value). |
| Alarm value AV 2 - 2 | AL-A: 10 1000 μg/l / 1000 μg/l | Alarm val. 2-2 2.50 mg/l | Two-channel version only! Concentration threshold value limit relay 2, channel 2 (differential hysteresis 2% of alarm value). |
| Time 1st measurement | 01.01.96 00:00 31.12.95 23:59 | 1. Measurement 10.02.02 08:00 | Date format DD.MM.YY, time hh.mm. After each change the instrument does not wait for the measuring interval. If the measurement is to start immediately, set the time in the past. |
| Measuring interval | 6 120 min 10 | Meas. interval 10 min | Time between two measurements. If the setting is 2 minutes, the measurements take place without any pauses. |
| Frequency of measurement Channel 1 | 0 9 1 ¹ | n* Channel 1: | Two-channel version only! Number of measurements at channel 1 before switching to channel 2. |
| Frequency of measurement Channel 2 | 0 9 1 ¹ | n* Channel 2: | Two-channel version only! Number of measurements at channel 2 before switching to channel 1. |
| | | | Time of 1st calibration (DD.MM.YY, time hh.mm). After each change the instrument does not wait for the calibration interval. If the calibration is to start immediately, set the time in the past. |
| Date of the 1st Calibration | 01.01.96 00:00 31.12.95 23:59 | 1. Calibration 01.01.02 08:00 | Analysers are delivered pre-calibrated. Start 1st calibration 2 hours after the initial start-up at the earliest (warm-up phase) Set the time to 8:00 to reproduce impacts on calibration in the curve. If you have started a calibration manually, you should re-define the time of the 1st calibration because the interval is dependent on the last calibration. |
| Calibration interval | 0 720 h 48 h | Calib.interval 48 h | Time between two calibrations. The "0 h" setting stops calibration. Recommended: calibration interval of 48 72 h. |
| Calibration solution | AL-A: 10 1000 μg/l / 500 μg/l | Calib. solution 1.00 mg/l | Concentration of the calibration standard. Select a standard, whose concentration is in the upper third of the measuring range. |

Stamolys CA71AL Operation

| Option | Range of adjustment (default settings in bold) | Display | Info |
|-----------------------------|--|-------------------------------|---|
| Date of the 1st flushing | 01.01.96 00:00 31.12.95 23:59 | 1. Flushing 01.01.02 08:10 | Time of 1st flushing (DD.MM.YY, time hh.mm). After each change the instrument does not wait for the calibration interval. If the flushing is to start immediately, set the time in the past. - Set the time to 4:00 to reproduce impacts on flushing in the curve. - If you have started flushing manually, you should re-define the time of the 1st flushing because the interval is dependent on the last flushing. |
| Flushing interval | 0 720 h 0 h | Flush. interval 48 h | Time between two flushings. The "0 h" setting stops cleaning. |
| Flushing hold on | 0 60 s 1 s | Flushing hold on 60 s | Dwell time of flushing solution in the pump-mixer-photometer line. Recommended: 30 60 s. |

1) All channels set to 0 means, the channel selection is provided by an external device. All channels set to 1 means, alterning beginning with channel 1.



Note!

- Always synchronise calibration and flushing time.
- Carry out flushing with standard cleaning solution approx. 3-4 hours **before** the next calibration.
- Flushing with special cleaning solution (e.g. hydrochloric acid) has a lasting effect on calibration. Therefore, carry out this cleaning 3-4 hours **after** calibration.

5.3.5 LANGUAGE

The following languages are available:

- Deutsch
- English
- Français
- Suomi
- Polski
- Italiano.

5.3.6 ERROR DISPLAY



Note!

- This menu is a "read-only menu".
- You can find the individual error messages, their meaning and solutions to problems in chapter "Trouble-shooting instructions".
- If there is at least one error message, the signal output is set to "fault".
- Causes of faults are requested for every measurement. If an error which occurred previously no longer exists, it is automatically cancelled. If this should not happen automatically, error messages can be deleted by quickly switching the analyser off and back on again.

Operation Stamolys CA71AL

5.3.7 SERVICE

| Option | Display | Info |
|------------------|----------------------------------|--|
| | | "Virtual switching board" Various valve and pump combinations can be selected. |
| Pumps and valves | V1 2 3 4 P1 2 G P S 1 s s s s | The setting options are: Valve 1: P (sample) or S (standard) Valve 2: S (standard) or C (cleaning agent) Valve 3 (Two-channel version only): 1 (channel 1) or 2 (channel 2) Valve 4 (for optical cell outlet, improves cleaning and avoids memory effects): s (stop) or g (go) Pump 1 and pump 2: s (stop) or g (go) Mixture The reagent and sample pumps can be switched on together, so that they run in the same ratio as for filling the sample-reagent mixture in measuring mode. s (stop) and g (go) Note! P1 and P2 are inactiv, when G is at go. If P1 or P2 is at go, G is not available. The following valve combinations are possible: |
| | | (applies to one-channel and two-channel version, whereby where the latter is concerned selection is made by positioning valve 3 between channel 1 and 2) - V1: P, V2: S Passage for the sample. This combination is automatically reset on leaving the service menu. - V1: S, V2: S Passage for standard solution - V1: S, V2: R Passage for cleaning agent |
| Signal frequency | 0 Hz | Signal frequency of the photometer |

Stamolys CA71AL Operation

5.3.8 DATA STORAGE-Measured values



Note!

Two menus, "DATA MEMORY 1" and "DATA MEMORY 2", are only **for the two-channel version.** In the one-channel version there is only one menu "DATA MEMORY".

| Selection | Display | Info |
|-----------------|-----------------------------|--|
| Measured values | 53.1 µg/l 02.02.99 22:47 | The data memory contains the last 1024 concentration measured values with date and time. If there are no values available, "Empty set" appears. Browse through the data sets by pressing the t and t keys. |
| Serial output | Serial output yes: K no: E | You can output all data sets (in ASCII-format) via the serial interface. For this, the receiving end (PC) must be configured like this: 9600, N, 8, 1. To send data, the receiving end (PC) must send the ASCII character 81 ("Shift", "D"). |
| Clear data | Clear data y: *** n. E | This deletes all data sets. |

5.3.9 DATA STORAGE-Calibration data



Note!

To enter this menu select the CONFIGURATION menu, browse to the "Calibration factor" option and press the $\[mathbb{K}\]$ key.

| Selection | Display | Info |
|--------------------------------------|----------------------|--|
| Calibration factor | Calibr. factor 1.00 | This data memory contains the last 100 calibration factors with date and time. If there are no values available, "Empty set" appears. Browse through the data sets by pressing the and keys. |
| Serial output only available via PC! | no display | You can output all data sets (in ASCII-format) via the serial interface. For this, the receiving end (PC) must be configured like this: 9600, N, 8, 1. To send data, the receiving end (PC) must send the ASCII character 81 ("Shift", "C"). |
| Clear data | Clear data y: 1+nk E | This deletes all data sets. |

Operation Stamolys CA71AL

5.4 Calibration

5.4.1 Standard calibration data

The signal strength is processed device-internally as a frequency.

The following table provides an overview of the standard calibration data.



Note!

Compare these values to your own data.

After changes in the CONFIGURATION menu and in case of software updates, you can check and, if necessary, change the calibration data in the sub-menu.

| | Measuring range | Concentration [mg/1] | Frequency [Hz] |
|-----------|-----------------|----------------------|----------------|
| Aluminium | 10 1000 μg/l | 0 | 0 |
| AL-A | | 100 | 160 |
| | | 200 | 320 |
| | | 300 | 480 |
| | | 400 | 640 |
| | | 500 | 800 |
| | | 600 | 960 |
| | | 700 | 1120 |
| | | 800 | 1280 |
| | | 1000 | 1550 |

5.4.2 Calibration example

Proceed as follows if you want to activate an immediate calibration (e.g. after you have replaced the reagents).

Ensure that you have changed the reagents, filled the hoses again (no air bubbles) and the analyser is in measuring mode.

- 1. Hold M down until AUTO MEASURING appears.
- 2. Use \downarrow to move through the PARAMETER ENTRY menu and press \sqsubseteq .
- 3. Use to go to the "1st calibration" option.
- 4. Select the option with
- 5. Now use the \downarrow or \uparrow and \sqsubseteq keys to set a time which lies in the past.
- 6. Press

 to accept the value and then press

 twice to return to the main menu (AUTO MEASURING).
- 7. Press E again. This takes you back to measuring mode. The calibration is now carried out automatically.



Caution!

After the calibration has finished, the analyser automatically goes into measuring mode. You now have to set the time of the 1st calibration back into the future in order to align the calibration and rinsing times to each other. The rinse must be performed 3-4 hours before the next calibration. Proceed as described above to change the setting for the time of the 1st calibration. After changing to measuring mode, the analyser automatically begins measuring, rinsing and calibrating at the defined times.

Stamolys CA71AL Commissioning

6 Commissioning

6.1 Function check



Warning!

- Check that all connections have been made correctly. Check, in particular, that all hose connections are secure, so that no leaks occur.
- Ensure that the mains voltage corresponds to the voltage specified on the nameplate.

6.2 Switch-on

6.2.1 Dry commissioning



Note!

- If possible, let the analyser warm up in standby mode before commissioning ("Auto measuring" display). The time can be defined via the "1st measurement" option in the PARAMETER ENTRY menu
- At the start of measurement with a cold analyser, the first measuring results will be errored. The reaction is temperature-dependent and if the temperature is too low the pre-defined reaction time is insufficient for a complete reaction. For this reason, never carry out calibration with a cold analyser. Wait at least two hours before carrying out calibration.

When the analyser has been configured and calibrated, the measuring cycle starts automatically. Entering parameters is no longer necessary.

To perform initial start-up or to readjust the device parameters, proceed as follows:

- 1. Plug-in the plug into a socket.
- 2. Press the M key until AUTO MEASURING is displayed.
- 3. Select the CONFIGURATION menu and program the individual options up to and including the "Current date/time". With Myou can return to the main menu.
- 4. Now complete the PARAMETER ENTRY and SERVICE menus. With $\[\]$ you can return to the main menu.
- 5. Select CONFIGURATION again and use 🗉 to go to the "Calibrate offset" option.
- 6. Connect a vessel containing distilled water to the "Sample" connection and start the frequency offset $(\mathbb{K} \text{ key})$. The registered value is displayed and saved.

The analyser starts the "Calibration", "Measurement", and "Flushing" procedures automatically (triggered by control signal or integrated timer) in accordance with the device parameters that you have set (1st calibration, 1st measurement, 1st flushing times and the respective intervals control the temporal procedure).

| Function | Duration [s] | Range of adjustment |
|-----------------------|---|---|
| Flushing (sample) | 3 x 15 | |
| Delay to sample | 20 999 | CONFIGURATION / "Delay to sample" |
| Stabilisation | 8 | , , |
| 1st measurement | | |
| Flushing (reag. line) | 2 | |
| Fill mixture | 15 18 | SERVICE / "Pumps and valves" |
| Reaction | s. Techn. data | • |
| 2nd measurement | | |
| Flushing (sample) | 30 | |
| | Flushing (sample) Delay to sample Stabilisation 1st measurement Flushing (reag. line) Fill mixture Reaction 2nd measurement | Flushing (sample) Delay to sample Stabilisation 1st measurement Flushing (reag. line) Fill mixture Reaction 2nd measurement Sushing (reag. line) 2 Fill mixture 3 |

Commissioning Stamolys CA71AL

| | Function | Duration [s] | Range of adjustment |
|-------------|------------------------|-----------------|-----------------------------------|
| Calibration | Flushing (standard) | 3 x 15 | |
| | Delay to standard | 20 999 | CONFIGURATION / "Delay to sample" |
| | Stabilisation | 8 | |
| | 1st measurement | | |
| | Flushing (reag. line) | 2 | |
| | Fill mixture | 15 18 | SERVICE / "Pumps and valves" |
| | Reaction | s. Techn. data | - |
| | 2nd measurement | | |
| | Flushing (sample) | 30 | |
| Flushing | Pump cleaning solution | ½ Flush hold on | PARAMETER ENTRY / "Flush hold on" |
| | Allow to react | 5 | |
| | Pump cleaning solution | ½ Flush hold on | |

6.2.2 Wet commissioning

This is different to the dry commissioning in that, for wet commissioning the reagent lines are filled before the automatic measurement, calibration and flushing cycle is started.

Proceed as follows:

- 1. Plug-in the plug into a socket.
- 2. Press the M key until AUTO MEASURING is displayed.
- 3. Select the SERVICE menu.
- 4. Switch the P2 reagent pump "on" (with select P2 and with set to "g") and leave it running until you can tell that there are reagents at the Tconnector. After this, switch P2 "off" (s) with .
- 5. Now switch the valves to passage for standard (select V1: S, V2: S; with or switch to "S" with) and then switch the P1 sample pump "on". Leave the pump running until you can tell that there is standard at the T-connector. Switch P1 back "off".
- 6. Now switch the valves to passage for cleaning agent (select V1: S, V2: R; with © or © switch to "R" or "S" with) and then switch the P1 sample pump "on". Leave the pump running until you can tell that there is cleaning agent at the T-connector. Switch P1 back "off".
- 7. Now switch the valves to passage for sample (select V1: P, V2: S; with © or ©E switch to "P" or "S" with 1) and then switch the P1 sample pump "on". If you can tell that there is sample at the Tconnector, leave the pump running for another 2 minutes. This removes any remains of standard or cleaning agent.

 Then switch P1 "off".



Note!

For the two-channel version, valve V3 must be set additionally for switch-over between channel 1 and channel 2.

8. Now proceed as with dry commissioning (from step 2).

Stamolys CA71AL Maintenance

7 Maintenance



Caution!

You must not carry out any procedures **not** listed in the following chapters, yourself. This work must only be carried out by the service.

7.1 Maintenance schedule

All maintenance duties that have to be carried out during normal operation of the analyser are explained below.

If you are using a sample conditioning unit, e.g. CAT 430, coordinate the maintenance work required for it with that of the analyser. For this, read the maintenance chapter in the respective operating instructions.

| Period of time | Duty | Note |
|----------------|--|--|
| weekly | Check and note calibration factor (for service purposes) Move valve hoses into their position and spray with silicone (extends the service life). | CONFIGURATION |
| monthly | Flush sample line hose system with pressurized water (disposable syringe), check and replace reagents if necessary Flush the sample tubing system with 12.5% bleaching lye (sodium hypochloride) and reflush thoroughly with water Warning! Corrosive. Wear protective gloves and goggles. Beware of reagent splashing. Spray pump hoses with silicone spray Check sample collector for fouling and clean it if necessary | see chapter "Replacing reagents" Remove the cassette of the sample pump. Connect the one-way syringe instead of the sample inlet. SERVICE: V1: S, P1: g, P2: s, V2: S Add solution to sampling connection |
| every 3 months | Cleaning the drain lines: Flush all hoses with 10% ammonia solution and then with sample for at least 30 minutes Rotate pump hoses | |
| every 6 months | Replace pump hosesReplace valve hoses | - see chapter "Replacing pump hoses" |



Note!

Whenever working on the reagent hoses, the hoses must be disconnected from the canisters, in order to prevent contamination of the reagents.

Maintenance Stamolys CA71AL

7.2 Replacing reagents



Warning!

- There is a danger of crushing limbs at doors, inserts and pump heads.
- Refer to the warning instructions in the safety data sheets when handling reagents. Wear protective clothing, gloves and goggles.
- Make sure the workplace is well ventilated when you work with chlorine bleach. If you feel unwell, consult a physician immediately.
- If reagents come into contact with the skin or eyes, carefully rinse with copious amounts of water and consult a physician immediately.
- Never add water to reagents. Reagents containing acids may splash and heat may build up.

If you store the reagents correctly (in the dark, not over 20 °C) they will be stable for minimum 12 weeks from the date of manufacture (batch number). When this period of time has expired, the reagents must be replaced. Shelf life can be prolonged by keeping the reagents in a dark, cool storage place. The reagents absolutely must be replaced when:

- the reagents have been contaminated by sample (see "Trouble-shooting instructions")
- the reagents are too old
- the reagents have been spoilt by incorrect storage conditions or environmental influences.

Reagents check

- a. Check the standard solution concentration in the laboratory. Adapt the values (PARAMETER ENTRY, "Calibration solution") or replace the standard solution.
- b. Mix 10 ml standard solution (c=500 μ g/l or higher) and 5 ml of each reagent AL-1, AL-2 and AL-3 in a vessel.

The mixture must be free of particles.

You must replace the reagents, if there is no visible colouration (blue) after 2 minutes or if the mixture is not free of particles.

Replacing the reagents

- 1. Carefully remove the hoses from the canisters and wipe them with a dry (paper) cloth. Wear protective gloves when doing this.
- 2. Switch on the reagent pump for about 5 seconds.
- 3. Flush the reagent hose with plenty of distilled water (see SERVICE).
- 4. Replace the reagent canister and feed the hoses into the new canister.
- 5. Fill the reagent hose with the new reagents (SERVICE). Switch all pumps to "g". If there are no more air bubbles to be seen in the hoses, switch the pumps to "s".
- 6. Then carry out a calibration (see chapter "Calibration").

7.3 Replacing pump hoses



Warning!

When removing hoses from the hose nozzles, beware of reagent splashing. For this reason, wear protective gloves, goggles and clothing.

The peristaltic pumps used for the analyser convey the medium as a combination of vacuum and displacement pump. The pump rate is dependent on the elasticity of the pump hoses. Elasticity decreases as mechanical stress increases and the pump rate drops. Wear depends on mechanical stress (measuring interval, pump starting pressure). Up to a certain degree, the wear-effect can be compensated by calibration. If the elasticity is too low, the pump rate is no longer reproducible which leads to incorrect measurements. This is why it is necessary to replace the hoses.


Removing the old hoses:

- 1. Rinse the old hoses first with water and then with air to empty them (see SERVICE).
- 2. Remove the hoses from the connecting nipples on the pumps ($\rightarrow \square$ 20, pos. 5).

Stamolys CA71AL Maintenance

3. Remove the reagent hoses from the reagent canisters, in order to prevent contamination of the reagents.

- 4. Loosen the hose cassette(s) (1 to 3 per pump):
 - Press against the lower holder (pos. 3).
 - Now you can remove the cassette with the hose.
 - Remove the hose from the cassette and dispose of it.
 - Clean the cassette and the wheel head (pos. 1) with water.

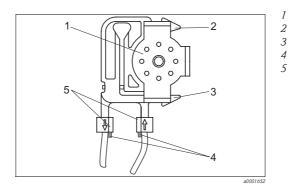

Wheel head
Upper holder of the cassette
Lower holder of the cassette
Guidance at the pump hose
Nipple with guidance

Fig. 20:

Installation of the new hoses:

- Insert the new hose into the cassette.
- 2. Pull down the hose at each end and then press the guidance at the hose into the guidance of the nipple at the cassette. Ensure correct fit.
- 3. First of all, put the hose cassette into the upper holder (pos. 2) of the pump and then also press the cassette into the lower holder (pos. 3).
- 4. Spray the new pump hoses, the hose cassettes and the wheel heads with silicon spray.
- 5. Reconnect the reagent hoses to the canisters.
- 6. Refill the hoses with sample, standard or cleaning agent (SERVICE). 1.
- 7. Carry out a frequency offset measurement ² (CONFIGURATION) and a calibration ("Calibration").



Caution!

Ensure that you connect the new pump hoses to the correct connections at the T-connector. For the order numbers of the pump hoses see chapter "Trouble-shooting"/"Spare parts".

Setting the application force of the pump

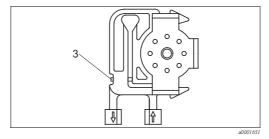


Fig. 21: Sample pump

3 Adjusting screw for the application force

If the pump hoses are not filled without bubbles, adjust the adjusting screw for the application force of the pump:

1. Loosen the adjusting screw ($\rightarrow \square$ 21, pos. 3) until no more sample is conveyed.

¹⁾ Check that the hoses are filled free of bubbles. If not, adjust the adjusting screw for the application force of the pumps (see below).

²⁾ not necessary with CA71 SI

Maintenance Stamolys CA71AL

- 2. Tighten the screw until sample is just being conveyed.
- 3. Tighten the screw by one more complete turn.

7.4 Replacing valve hoses

To replace the hoses, proceed as follows:

- 1. Rinse the old hoses first with water and then with air to empty them (see SERVICE).
- 2. Remove the hoses from the valves:
 - a. You can disconnect the front hoses directly because the valves are open when de-energised.
 - b. To remove the back hoses, press the black button on the valve and disconnect the hoses.
- 3. Spray the new hoses and valves with silicone spray before inserting them.
- 4. Install the new pump hoses in the reverse sequence of operations. Ensure that the hoses are connected correctly ($\rightarrow \square 22$).
- 5. After installation, refill the hoses with sample, standard or cleaning agent (SERVICE).
- 6. Carry out a frequency offset measurement (CONFIGURATION)¹ and a calibration ("Calibration").

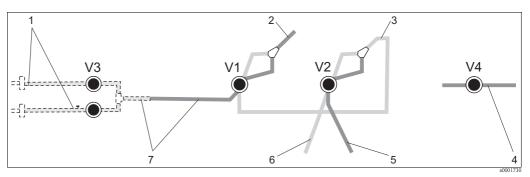


Fig. 22: Valves and valve hoses

- V1-4 Valves 1, 2 and 4
- V3 Two channel switch (optional)
- 1 Sample
- 2 To the pump
- 3 Y-piece, connecting hose to valve 1, behind it
- 4 Outlet hose
- 5 Hose valve 2, front, standard
- 6 Hose valve 2 back, cleaning agent
- 7 Hose valve 1 front, sample

1) not necessary with CA71 SI

Stamolys CA71AL Maintenance

7.5 Replacing the static mixer

To replace the mixer, proceed as follows:

- 1. Rinse first with water and then with air (see SERVICE).
- 2. Unscrew the four screws on the photometer housing and remove it.
- 3. Disconnect the mixer from the photometer and from the T-piece below the photometer housing or release the mixer from the holder.
- 4. Remove the old mixer and insert the new one.
- 5. Connect the new mixer to the photometer and the T-piece again.
- 6. Attach the photometer housing and screw it down.
- 7. After installation, refill the hoses with sample, standard or cleaning agent (SERVICE).
- 8. Carry out a calibration (PARAMETER ENTRY).

7.6 Replacing the photometer optical cell



Caution!

Handling with electronic componentries

Electronic componentries are sensitive to ESD. Discharge yourself, e.g. at an earth conductor, before handling electronic componentries.

To replace the optical cell, proceed as follows:

- 1. Rinse first with water and then with air (see SERVICE).
- 2. Unscrew the four screws on the photometer housing and remove it.
- 3. Unscrew the four screws on the side of the photometer, where there is no ribbon cable.
- 4. Separate the photometer's electronics from each other.
- 5. Take out the cell and remove the hoses.



Caution

Do not **under any circumstances** touch the optical window of the cell with your fingers! Otherwise, traces of grease remain on the optical surfaces. This can lead to corrupted measured values.

- 6. Insert the new cell.
- 7. Connect the cell to the hoses such that the sample is fed in from below.
- 8. Secure the hoses with the supplied cable connectors to stop them from slipping off the cell.
- 9. Reassemble the photometer and tighten the screws.
- 10. Attach the photometer housing and screw it down.
- 11. After installation, refill the hoses with sample, standard or cleaning agent (SERVICE).
- 12. Carry out a calibration (PARAMETER ENTRY).

7.7 Cleaning



Caution!

When cleaning, ensure that you do not damage the nameplate on the analyser. Do not use any solvent-based cleaning agents.

To clean the analyser housing, proceed as follows:

- Stainless steel housing (stainless steel SS 1.4301 (AISI 304)): with a lint-free cloth and Glittol RG 10.51
- GFR housing:

with a damp cloth or with tenside-based (alkaline) cleaning agent.

Maintenance Stamolys CA71AL

7.8 Placing out of service

You must place the analyser out of service before shipping or before longer operation breaks (more than 5 days).



Caution!

Before placing the instrument out of service, thoroughly rinse all of the lines of the measuring system with clean water.

To place the analyser out of service, proceed as follows:

- 1. Remove the reagent and standard hoses from the canisters and immerse them in a tank containing clean water.
- 2. Switch valve 1 to "Standard" and switch pumps 1 and 2 on for one minute (see SERVICE).
- 3. Remove the hoses from the water and allow the pumps to run until the hoses are completely dry.
- 4. If you are using a continuous sample supply, disconnect sampling line.
- 5. Flush sampling hoses with clean water and then with compressed air, in order to completely empty the hoses.
- 6. Remove the valve hoses from the valves.
- 7. Remove the load from the pump hoses by removing the hose cassette from the bracket below.



Note!

Keep opened reagents and standards in a refrigerator. Observe the shelf-life.

Stamolys CA71AL Accessories

8 Accessories



Note!

In the following sections, you find the accessories available at the time of issue of this documentation.

For information on accessories that are not listed here, please contact your responsible service.

8.1 Collecting vessel

- for sampling from pressurised systems
- results in an unpressurised continuous sample stream
- Collecting vessel without level measurement; order no. 51512088
- Collecting vessel with level measurement (conductive); order no. 51512089

8.2 Reagents, cleaner, standard solution

- Reagent set, active, 1 l reagents AL-1+AL-2+AL-3 each; order no. CAY939-V10AAE
- Reagent set, inactive, 11 reagents AL-1+AL-2+AL-3 each; order no. CAY939-V10AAH
- Standard solution 0.10 mg/l Al; order no. CAY942-V10C10AAE
- Standard solution 0.25 mg/l Al; order no. CAY942-V10C25AAE
- Standard solution 0.50 mg/l Al; order no. CAY942-V10C50AAE
- Standard solution 1.00 mg/l Al; order no. CAY942-V10C88AAE



Note

Please, note the disposal instructions in the safety data sheets of the reagents!

8.3 Hose cleaner

- Cleaning agent, alkaline, 100 ml; order no. CAY746-V01AAE
- Cleaning agent, acidic, 100 ml; order no. CAY747-V01AAE

8.4 Maintenance kit

- Maintenance kit CAV 740:
 - 1 set pump hoses yellow/blue
 - 1 set pump hoses black/black
 - 1 Grifflex hose, length: 2 m (6.56 ft), ID: 19 mm (0.75")
 - 1 set hose connectors per hose set order no. CAV 740-5A

8.5 Additional accessories

- Interference suppressor for control, power and signal lines order no. 51512800
- Silicon spray order no. 51504155
- Valve set, 2 pieces, for two-channel version order no. 51512234
- Upgrade kit for upgrading from one-channel to two-channel version order no. 51512640

Trouble-shooting Stamolys CA71AL

9 Trouble-shooting

9.1 Trouble-shooting instructions

Although the analyser is not very prone to faults due to its simple assembly, problems can, of course, not be completely ruled out.

Possible errors, their causes and their possible remedies are listed below.

9.2 System error messages

| Error message | Possible cause | Tests and / or corrective measures |
|---------------------|---|---|
| | | If a calibration fails, you can enter a new calibration factor manually (CONFIGURATION menu, "Calibration factor"). Cancel the error message by switching the analyser off and on briefly. If the error occurs frequently, you will have to search for the cause. |
| Calibration failed | Air bubbles in system | Start calibration manually (PARAMETER ENTRY, "1st calibration", change the date accordingly, start measurement) or enter a new calibration factor. |
| | Incorrect concentration of standard | Check the concentration in the laboratory. Adjust the standard accordingly (PARAMETER ENTRY, "Calibration solution") or replace the standard. |
| | Reagents contaminated or aged | Simple check: Mix about 5 to 10 ml of standard solution with about 5 ml of reagent in a beaker. If it does not change colour after max. 10 minutes, replace the reagents. |
| | Standard dosing defective | Check the valves for contamination, obstructions (visual inspection). Replace valve hoses if neccessary. |
| | Wrong photometer | Check the setting in the CONFIGURATION menu. |
| Optical cell dirty | Not enough light intensity sent to receiver, e.g. due to sedimented particles | Flush with 12.5% bleaching lyeWhen using a CAT430:Check the filter. |
| Wrong photometer | Wrong photometer | Check the setting in the CONFIGURATION menu, "Photometer". |
| | No sample | Establish sample transfer. |
| No sample | Level measurement defective | Check level measurement on sample collector. |
| Spillage error | Leak at canisters or hoses | Replace defective components and clean and dry the CA 70 or those components affected by the leak. |
| No measuring signal | Optical cell filled with air | Convey sample for 1 minute (SERVICE). |
| | Photometer defective | Inform Service |
| | Electrical connection | Check all electrical connections and the tight fit of the fuses. |
| | Fuse defective | Replace fuse F4 or F5 (medium time-lag 0.2 A) |

Stamolys CA71AL Trouble-shooting

9.3 Process errors without messages

| Error | Possible cause | Tests and / or corrective measures |
|---|--|--|
| Measured values always the same | Reagents contaminated or aged | Simple check: Add about 5-10 ml of standard solution with about 1 ml of reagent in a vessel. If it does not change colour after max. 10 min, replace the reagents . |
| | No sample, no reagents | Make sure sample and reagents are supplied, check level monitor and clean if necessary |
| | System blocked | Flush with 12.5% bleaching lye (monthly maintenance). Check the hose of valve 4. |
| | Incorrect concentration of standard | Check the concentration in the laboratory. Adjust the standard accordingly ("PARAMETER ENTRY", "Calibration solution") or replace the standard. |
| | Reagents contaminated or aged | Simple check: Add about 5-10 ml of standard solution with about 1 ml of reagent in a vessel. If it does not change colour after max. 10 min, replace the reagents. |
| | Reagent blank value too high | After replacing the reagents, carry out an offset calibration and then a calibration (CONFIGURATION, "Offset calibration") |
| | Wrong dimension | Check the setting in the CONFIGURATION menu, "Measuring unit". |
| | Wrong optical cell | Check the setting in the CONFIGURATION menu, "Photometer" |
| | Sample suction time too short | Increase the suction time (CONFIGURATION, "Delay to sample") |
| Measured values inaccurate | Matrix effects (substances that interfere with the photometric methods) | Detect interfering substances (see Technical Information, "Measuring principle"), possibly use sample conditioning |
| | Standard is dosed to the sample | Check the valves and valve settings. Replace valve hoses if necessary. |
| | Filter life too long | Take counter sample at analyser inlet and check the concentration in the laboratory. If the analyser measured values have no deviations, clean ultrafiltration modules or backflush filters more frequently. |
| | System block or contaminated | Flush with 12.5% bleaching lye (monthly maintenance) |
| | Dosing | Replace pump hoses. |
| | Optical cell dirty | Flush with 12.5% bleaching lye first and then with 5% hydrochloric acid |
| Counter sample in the laboratory delivers deviating measured values | Sample ageing | Shorten time between sampling and analysis. |
| | Wrong size of analog output | Check the setting (CONFIGURATION, "Analog output 1" " 2"). |
| Measured value transfer errored | Incorrect measuring range | Adjust measuring range (PARAMETER ENTRY, "Measuring range") |
| | Background noise | Check line for interference from strong sources of induction. |
| Analyser will not | No power | Check the electrical connection and ensure power supply. |
| switch on | Fuse | Replace fuse F1 (time-lag 0.5 A) |
| Analyser is running but display reading is garbled or off | Initialisation failed | Switch the analyser off and after approx. 30 seconds back on. |
| Pumps fail to run | Leak | See "Spillage error" error message |
| | Leak sensor bypassed | Interrupt contact between two leak sensors (pins 67-66) |
| | Fuse | Check all fuses and replace if necessary. |
| | Pump defective | Service |
| Measurement does not start | Leak on photometer | Service |

Trouble-shooting Stamolys CA71AL

| Error | Possible cause | Tests and / or corrective measures |
|-------------------------------|---|--|
| "Measurement" display flashes | Time of 1st measurement not reached | The date must be between 01.01.1996 and the current date. |
| | Interval not expired | Change parameters. |
| | Time of 1st calibration not reached | The date must be between 01.01.1996 and the current date. |
| Calibration does not start | Interval not expired or 0 h | Change parameters. |
| | Leak on photometer | Service |
| Flushing does not start | Time of 1st flushing not reached | The date must be between 01.01.1996 and the current date. |
| | Interval not expired or 0 h | Change parameters. |
| Leak on Photometer | Device or discharge blocked | Remove blockage. Service |
| Blockage, deposits in device | Water hardness | Lime deposits can by flushing with 5% hydrochloric acid . If necessary, dose EDTA in sample stream to prevent sedimentation (do not use EDTA with CA71HA!). |
| | Not enough sample conditioning | Shorten cleaning intervals of sample conditioning. |

9.4 Spare parts

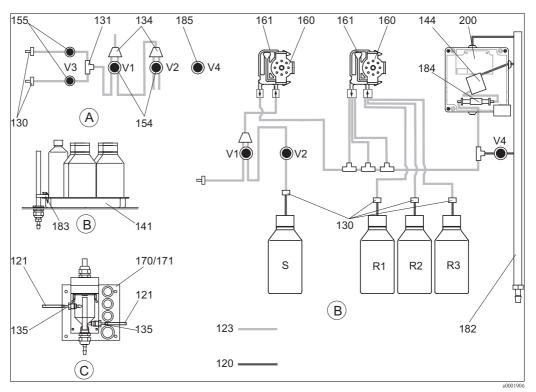


Fig. 23: Overview parts

ASample input two-channel versionR1Reagent 1 canisterBStandards and reagent canistersR2Reagent 2 canisterCCollecting vesselR3Reagent 3 canisterPSampleSStandard solution canister

ightarrow 23 shows the components of the analyser. Please, take the spare parts order numbers from the following sections.

Stamolys CA71AL Trouble-shooting

| Item | Spare part | Order number |
|------|---|--------------|
| 120 | Hose made of Norprene, 1.6 mm | 51504116 |
| 121 | Hose made of C-Flex, 3.2 mm (permeate inlet and overflow with sample collector) | 51504114 |
| 122 | Hose made of C-Flex, 6.4 mm | 51504115 |
| 123 | Hose made of C-Flex, 1.5 mm | 51512535 |
| 130 | Hose adapter, 1.6 mm x 1.6 mm (10 pieces) | 51506495 |
| 131 | Hose adapter T, 1.6 mm x 1.6 mm x 1.6 mm (10 pieces) | 51506490 |
| 134 | Hose adapter Y, 1.6 mm x 1.6 mm x 1.6 mm (10 pieces) | 51512096 |
| 135 | Connection nipples for sampler (10 pieces) | 51512099 |
| 136 | Hose adapter T, 3.2 mm x 3.2 mm x 3.2 mm (10 pieces) | 51516166 |
| 141 | Collecting tank | 51512102 |
| 154 | Valve, complete | 51512100 |
| 155 | Valve set for two-channel version | 51512235 |
| 160 | Wheel head with holder for hose pump | 51512085 |
| 161 | Hose casette for pump | 51512086 |
| 170 | Collecting vessel with level measurement | 51512089 |
| 171 | Collecting vessel without level measurement | 51512088 |
| 182 | Outlet pipe with hose nipple | 51515578 |
| 183 | Leak sensor for collecting tank | 51515581 |
| 184 | Mixer set | 51515579 |
| 185 | Outlet valve | 51515580 |

9.4.1 Analyser specific spare parts

| Item | Spare part | Order number |
|---------|---|--------------|
| 130-133 | Maintenance kit CAV 740: 1 set pump hoses yellow/blue 1 set pump hoses black/black 1 Grifflex hose, 2 m (6.56 ft), ID 19 mm (0.75") 1 set of each hose connectors | CAV740-5A |
| 144 | Photometer optical cell | 51505778 |
| 200 | Photometer Aluminium | 51512067 |

9.5 Return

If the device requires repair, please send it *cleaned* to the sales centre responsible. Please use the original packaging, if possible.

Please enclose the completed "Declaration of contamination" (copy the second last page of these Operating Instructions) with the packaging and the transportation documents. No repair without completed "Declaration of contamination"!

9.6 Disposal

The device contains electronic components and must therefore be disposed of in accordance with regulations on the disposal of electronic waste.

Please observe local regulations.

Technical data Stamolys CA71AL

10 Technical data

10.1 Input

| Measured variable | Al [µg/l] |
|-----------------------|--------------|
| Measuring range | 10 1000 μg/l |
| Wave length | 565 nm |
| Reference wave length | 880 nm |

10.2 Output

| Output signal | 0/4 20 mA |
|------------------|---|
| Signal on alarm | Contacts: 2 limit contacts (per channel), 1 system alarm contact optional: end of measurement (with two channel version display of channel no. available) |
| Load | max. 500 Ω |
| Serial interface | RS 232 C |
| Load capacity | 230 V / 115 V AC max. 2 A, 30 V DC max. 1 A |

10.3 Power supply

| Supply voltage | 115 V AC / 230 V AC ±10%, 50/60 Hz |
|---------------------|---|
| Power consumption | approx. 50 VA |
| Current consumption | approx. 0.2 A at 230 V approx. 0.5 A at 115 V |
| Fuses | 1 x time-lag 0.5 A for electronics 2 x medium time-lag 0.2 A for photometer 1 x time-lag 0.1 A for motors |

10.4 Performance characteristics

| Time between two measurements | $t_{mes} = reaction\ time\ +\ rinse\ time\ +\ waiting\ time\ +\ rinse\ again\ time\ +\ filling\ time\ +\ sampling\ time\ +\ reagent\ refusal\ time\ (min.\ waiting\ time\ =\ 0\ min)$ |
|-------------------------------|---|
| Maximum measured error | $\pm 2~\%$ of measuring range end |
| Repeatability | ±10 μg/l (up to 300 μg/l) ±20 μg/l (300 to 1000 μg/l) |
| Measuring interval | t _{mes} to 120 min |
| Reaction time | 195 s |
| Sample requirement | 20 ml (0.0053 US.gal.) per measurement |
| Reagent requirement | $3 \times 0.285 \ ml \ (0.075 \ US.gal.)$ $0.82 \ l \ (0.216 \ US.gal.)$ per reagent per month with 15 minute measuring interval |
| Calibration interval | 0 to 720 h |
| Rinse interval | 0 to 720 h |
| Rinse time | selectable from 20 to 300 s (standard = 60 s) |
| Rinse again time | 30 s |

Stamolys CA71AL Technical data

| Filling time | 32 s |
|-----------------------|-------------------------------|
| Sampling | $t_{sampling} = 80 \text{ s}$ |
| Maintenance interval | 6 months (typical) |
| Servicing requirement | 15 minutes per week (typical) |

10.5 Environment

| Ambient temperature | 5 40 °C (41 104 °F) |
|---------------------|---|
| Humidity | below the condensation limit, installation in usual, clean rooms outdoor installation only possible with protective devices (customer supplied) |
| Ingress protection | IP 43 |

10.6 Process

| Sample temperature | 5 to 40 °C (41 to 104 °F) |
|---------------------------|------------------------------------|
| Sample flow rate | min. 5 ml (0.0013 US.gal.) per min |
| Consistance of the sample | low solid content (< 50 ppm) |
| Sample inlet | pressureless |


10.7 Mechanical construction

| Design, dimensions | see chapter "Installation" | | | | |
|--------------------|---|---|--|--|--|
| Weight | GFR housing Stainless steel housing Without housing | approx. 28 kg (61.7 lb) approx. 33 kg (72.8 lb) approx. 23 kg (50.6 lb) | | | |
| Materials | Housing: Front windows: Endless hose: Pump hose: Valves: | Stainless steel 1.4301 (AISI 304) or glass-fibre reinforced carbon(GFR) Polycarbonate® C-Flex®, Norprene® Tygon®, Viton® Tygon®, silicone | | | |

11 Appendix

11.1 Operating matrix


One-channel version

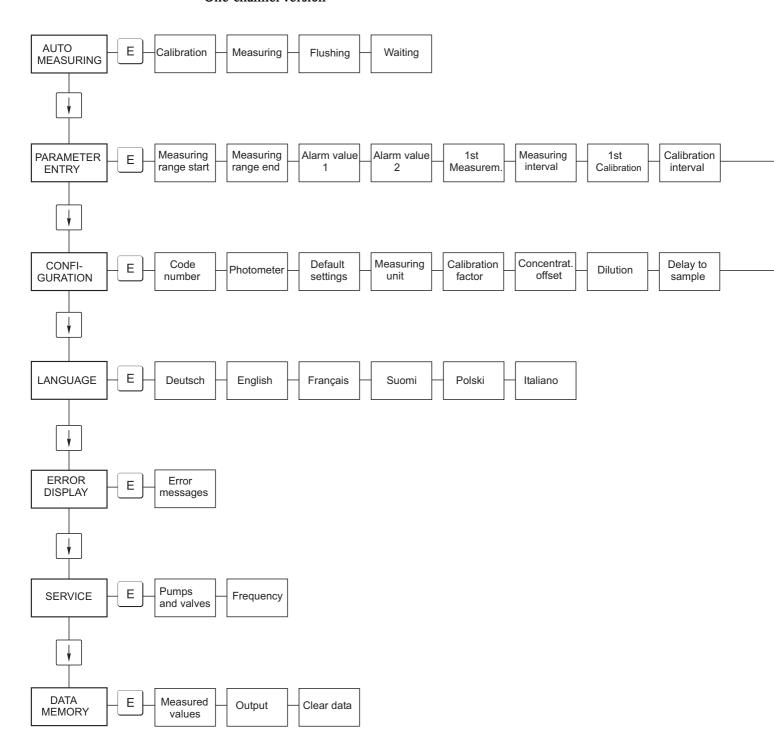

a0001907-en

Flushing interval Flushing Standard 1st solution Flushing time Alarm value 2 Analog Alarm value Error act. Date/ Calibrate Frequency offset output 1 contact time offset

Two-channel version

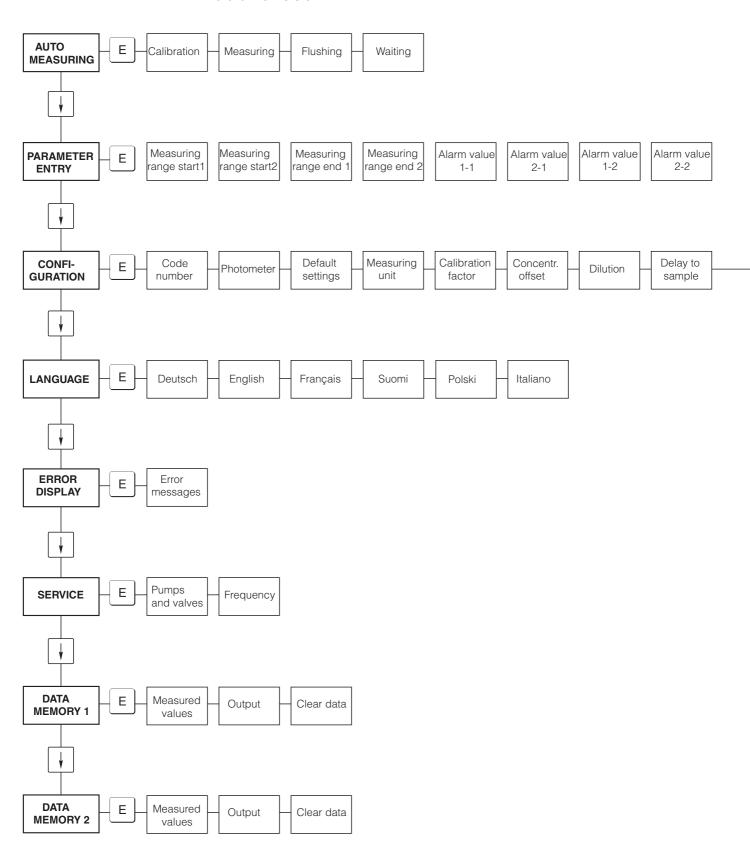

a0001909-en

| 1st Measurem. | Measuring interval | n* Channel 1 | n* Channel 2 | 1 st Calibration | Calibration interval | Calibration solution | 1st Flushing | Flushing interval | Flushing time |
|--------------------|--------------------|-------------------|----------------------|----------------------|----------------------|----------------------|--------------------|-------------------|------------------|
| | | | | | | | | | |
| | | | [] | | 1 1 | | | | |
| Analog output 1 | Analog output 2 | Alarm value 1 - 1 | Alarm value 2 - 1 | Alarm value 1 - 2 | Alarm value 2 - 2 | Error contact | act. Date/ time | Calibrate offset | Frequency offset |

a0001910-en

11.2 Ordering forms

| to Fax no: | | | | | | | |
|---|---|--|--|--|--|--|--|
| Telefax for chemicals ordering | | | | | | | |
| to (adress of your sales centre) | from (invoice adress) Company: Concern: Street: Zip code / Town: Telefax / Telephone: | | | | | | |
| Adress for delivery (if not the above adress) Company / Name: Street / Zip code / Town: | | | | | | | |

Chemicals for CA71 Aluminium

| Quantity | Order no. | Description |
|----------|------------------|---|
| | CAY939-V10AAE | Reagent set, active, 11 reagents AL-1+AL-2+AL-3 each |
| | CAY939-V10AAH | Reagent set, inactive, 1 l reagents AL-1+AL-2+AL-3 each |
| | CAY942-V10C10AAE | Standard solution 0.10 mg/l Al |
| | CAY942-V10C25AAE | Standard solution 0.25 mg/l Al |
| | CAY942-V10C50AAE | Standard solution 0.50 mg/l Al |
| | CAY942-V10C88AAE | Standard solution 1.00 mg/l Al |

Chemicals for Ultra filtration

| Quantity | Order no. | Description |
|----------|---------------|---|
| | CAY746-V01AAE | Alkaline cleaning agent P3-Ultrasil 130, 100 ml |
| | CAY746-V10AAE | Alkaline cleaning agent P3-Ultrasil 130, 11 |
| | CAY746-V50AAE | Alkaline cleaning agent P3-Ultrasil 130, 51 |
| | CAY747-V01AAE | Acidic cleaning agent P3-Ultrasil 130, 100 ml |
| | CAY747-V10AAE | Acidic cleaning agent P3-Ultrasil 130, 1 l |
| | CAY747-V50AAE | Acidic cleaning agent P3-Ultrasil 130, 5 l |

Place Date
Delivery one week after orders received. Delivery is unpaid.

Signature

| to Fax no: | | | | | | | |
|---|---|--|--|--|--|--|--|
| Telefax for wear parts ordering | | | | | | | |
| to (adress of your sales centre) | from (invoice adress) Company: Concern: Street: Zip code / Town: Telefax / Telephone: | | | | | | |
| Adress for delivery (if not the above adress) Company / Name: Street / Zip code / Town: | | | | | | | |

| Quantity | Order no. | Description | | | |
|----------|-----------|--|--|--|--|
| | CAV740-5A | 1 Set pump hoses yellow/blue 1 Set pump hoses black/black 1 Grifflex hose, 2 m (6.56 ft), ID 19 mm (0.75") 1 Set of each hose adapter | | | |

Spare parts for maintenance and service

| Quantity | Position | Pieces/pack. | Description | Order no. |
|----------|----------|--------------|---|-----------|
| | 110 | 12 | Tygon pump hose yellow/blue | 51506434 |
| | 111 | 12 | Tygon pump hose black/black | 51506437 |
| | 120 | 15 m | Norpren hose ID 1.6 mm | 51504116 |
| | 121 | 7.5 m | C-Flex hose ID 3.2 mm | 51504114 |
| | 122 | 7.5 m | C-Flex hose ID 6.4 mm | 51504115 |
| | 123 | 1 m | C-Flex hose ID 1.5 mm | 51512535 |
| | 130 | 10 | Hose adapter 1.6 mm x 1.6 mm | 51506495 |
| | 131 | 10 | Hose adapter T 1.6 mm x 1.6 mm x 1.6 mm | 51506490 |
| | 132 | 10 | Hose adapter 3.2 mm x 3.2 mm | 51506491 |
| | | 10 | Hose adapter T 6.4 mm x 6.4 mm x 6.4 mm | 51506493 |
| | | 10 | Hose adapter 6.4 mm x 6.4 mm | 51506494 |
| | 133 | 10 | Hose adapter 3.2 mm x 6.4 mm | 51506492 |
| | 134 | 10 | Y Hose adapter 1.6 mm x 1.6 mm x 1.6 mm | 51512096 |
| | 135 | 10 | Connection nipples for sampler (10 pieces) | 51512099 |
| | 155 | 1 | Valve set for two-channel version | 51512235 |
| | 160 | 1 | Wheel head with holder for hose pump | 51512085 |
| | 161 | 1 | Hose casette for pump | 51512086 |
| | 170 | 1 | Collecting vessel with level measurement | 51512089 |
| | 171 | 1 | Collecting vessel without level measurement | 51512088 |
| | 200 | 1 | Photometer Type ¹ : | |
| | | 1 | Silicon spray | 51504155 |
| | | 1 | Cleaning syringe | 51503943 |
| | | | | |

¹⁾ Please, take the photometer type and the order no. from chapter "Trouble-shooting/Spare parts" and write it down here!

Place Date Signature

Delivery one week after orders received. Delivery is unpaid.

11.3 Analyser settings

| Place: | | | | |
|--|-------------------|-----------------|--------|---------------|
| Type: | | | | |
| Serial no. analyser: | | | | |
| Serial no. Photometer: | | | | |
| Software version: | | | | |
| Date: | | | | |
| | | | | |
| D | | | | |
| Photometer Type: | | | | |
| Measuring unit: | | | | |
| Calibration factor: | | | | |
| c-offset: | | | □ mg/l | □ μg/l |
| Dilution: | | | | |
| Delay to sample: | | | S | |
| Analog output: | □ 0-20 mA | □ 4-20 mA | | |
| AV 1: | ☐ normally closed | ☐ normally open | | |
| AV 2: | normally closed | ☐ normally open | | |
| Fault signal: | ☐ normally closed | ☐ normally open | | |
| Frequency offset: | | | Hz | |
| Ground line: (demineralised water without reagent) | | | Hz | |
| Measuring range start: | | | □ mg/l | □ μg/l |
| Measuring range end: | | | ☐ mg/l | □ μg/l |
| AV 1: | | | □ mg/l | 🗖 μg/l |
| AV 2: | | | □ mg/l | □ μg/l |
| 1st measuring: | | | | |
| Measuring interval: | | | min | |
| 1st calibration: | | | | |
| Calibration interval: | | | h | |
| Calibration solution: | | | □ mg/l | □ μg/l |
| 1st rinsing: | | | | |

52 Endress+Hauser

h

S

Rinse interval:

Rinse time:

| Submenu | | | |
|------------------|-------------|-------|----|
| Error mask: | | | |
| MB >: | | | |
| MBE: | | | |
| Rinse again: | | | |
| Filling time: | | | |
| Reaction time: | | | |
| U/min: | | | |
| K floating mean: | | | |
| N: | Points | | |
| C1: | mg/l / μg/l | F 1: | Hz |
| C2: | mg/l / μg/l | F 2: | Hz |
| C3: | mg/l / μg/l | F 3: | Hz |
| C4: | mg/l / μg/l | F 4: | Hz |
| C5: | mg/l / μg/l | F 5: | Hz |
| C6: | mg/l / μg/l | F 6: | Hz |
| C7: | mg/l / μg/l | F 7: | Hz |
| C8: | mg/l / μg/l | F 8: | Hz |
| C9: | mg/l / μg/l | F 9: | Hz |
| C10: | mg/l / μg/l | F 10: | Hz |

Date: Service technician:

11.4 Maintenance schedule

Maintenance schedule for analyser no.

weekly

- → Check and note calibration factor
- → Visual check (soiling, pump tubings, reagent, sample inlet etc.)

| done | cw 1 | cw 2 | cw 3 | cw 4 | cw 5 | cw 6 | cw 7 | cw 8 | cw 9 | cw 10 | cw 11 | cw 12 |
|------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| date | | | | | | | | | | | | |
| done | cw 13 | cw 14 | cw 15 | cw 16 | cw 17 | cw 18 | cw 19 | cw 20 | cw 21 | cw 22 | cw 23 | cw 24 |
| date | | | | | | | | | | | | |
| done | cw 25 | cw 26 | cw 27 | cw 28 | cw 29 | cw 30 | cw 31 | cw 32 | cw 33 | cw 34 | cw 35 | cw 36 |
| date | | | | | | | | | | | | |
| done | cw 37 | cw 38 | cw 39 | cw 40 | cw 41 | cw 42 | cw 43 | cw 44 | cw 45 | cw 46 | cw 47 | cw 48 |
| date | | | | | | | | | | | | |
| done | cw 49 | cw 50 | cw 51 | cw 52 | cw 53 | | | | | | | |
| date | | | | | | | | | | | | |

2-weekly

→ Check concentration of the calibration factor in the laboratory.

If necessary, adjust concentration in the menu parameter entry or use new standard.

→ Flush sample tubing system with pressurised water (disposable syringe). Remove hose holder unit from the pump.

| done | cw 1 | cw 3 | cw 5 | cw 7 | cw 9 | cw 11 | cw 13 | cw 15 | cw 17 | cw 19 | cw 21 | cw 23 |
|------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| date | | | | | | | | | | | | |
| done | cw 25 | cw 27 | cw 29 | cw 31 | cw 33 | cw 35 | cw 37 | cw 39 | cw 41 | cw 43 | cw 45 | cw 47 |
| date | | | | | | | | | | | | |
| done | cw 49 | cw 51 | cw 53 | | | | | | | | | |
| date | | | | | | | | | | | | |

monthly or if required

- → Replace reagents.
- → Flush the sample tubing system with 12.5% bleaching lye (sodium hypochloride) and reflush thoroughly with water (menu Service V1: P, P1: g, P2: s, V2: S, (two channel version also V3))
- → Check sample collector for fouling and clean it if necessary
- → Spray pump hoses with silicone spray.

| done | Jan | Feb | Mar | Apr | May | Jun | Jul | Aug | Sep | Oct | Nov | Dec |
|------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| date | | | | | | | | | | | | |

every 3rd month / every 6th month

→ Turn the pump hoses in the hose holder unit (monthly), replace them (every 6th month)

Attention: Whenever working on the reagent hoses, the hoses must be removed from the canisters and the T-connectors near the reagent pump to prevent contamination of the reagents.

→ Clean drain lines

| done | Jan | Feb | Mar | Apr | May | Jun | Jul | Aug | Sep | Oct | Nov | Dec |
|------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| date | | | | | | | | | | | | |

a0001911-en

Index

| A | M |
|---------------------------|-----------------------------|
| Accessories | Main menu |
| Analyser frame | Maintenance |
| AUTO MEASURING | Schedule |
| | Mechanical construction |
| C | Menu |
| Calibration | Auto Measuring |
| Certificates | Configuration24 |
| Checking | Data storage29 |
| Connection | Error display |
| Function | Language |
| Installation | Main menu |
| Cleaner | Parameter entry |
| Cleaning | Service |
| Collecting vessel | Mixer |
| Commissioning | |
| Dry | N |
| Wet | Nameplate6 |
| CONFIGURATION | |
| Connection | 0 |
| Electrical | Operating matrix |
| Sample line | Operation |
| Serial interface | Operational safety |
| Signals | Ordering information |
| Contacts | Output |
| D | Overview |
| D | n |
| DATA STORAGE | P |
| Declaration of conformity | PARAMETER ENTRY |
| Designated use 4 | Performance characteristics |
| Display | Photometer optical cell |
| Disposal | Placing out of service |
| T. | Power supply |
| E | Process |
| Electrical connection | Product structure |
| Environment | Pump hoses |
| ERROR DISPLAY | Pumps |
| Error messages | Q |
| Errors | |
| Process errors | Quality certificate |
| System errors40 | R |
| I | Reagents |
| - | Replacing |
| Icons | Mixer |
| Incoming acceptance | Photometer optical cell. 37 |
| Input | Pump hoses |
| Installation | Reagents |
| Examples | Valve hoses |
| Interference suppressor | Return |
| L | Neturin |
| LANGUAGE | |
| LAINOUAGE ZI | |

| Safety icons | 5 |
|--------------------------|---|
| Sample line | 1 |
| Scope of delivery | 7 |
| Screening | 8 |
| Serial interface | 0 |
| SERVICE | 8 |
| Signal connection | 8 |
| Spare parts | 2 |
| Standard solution | |
| Storage | 9 |
| Swing out analyser frame | |
| Switching contacts | 9 |
| Switch-on | |
| Symbols | 5 |
| Γ | |
| Sechnical data44–44 | 5 |
| Serminal assignment | |
| Fransport | |
| Ј | |
| | , |
| Jse4 | 4 |
| I | |
| Valve hoses | 6 |
| Valves | 8 |
| N | |
| Viring | |
| Connection sticker | 5 |

Declaration of contamination

Dear customer, Because of legal determinations and for the safety of our employees and operating equipment, we need this "Declaration of contamination" with your signature before your order can be handled. Please, include the completely filled in declaration with the device and the shipping documents in any case. Add also safety sheets and / or specific handling instructions if necessary. Type of device / sensor: Serial no.: Medium / concentration: Temperature: Pressure: Cleaned with: Conductivity: Viscosity: Warning hints for medium used (mark the appropriate hints) inflammable radioactive harmful to biologically safe explosive caustic poisonous health hazardous Reason for return Company data Company: Contact person: Department: Address: Phone: Fax / e-mail: Your order no.: I hereby certify that the returned equipment has been cleaned and decontaminated acc. to good industrial practices and is in compliance with all regulations. This equipment poses no health or safety risks due to contamination.



(Place, date)

(Company stamp and legally binding signature)

www.endress.com/worldwide



People for Process Automation

