



**CAUTION:**  
The screws at the pipe housing must not be loosened!


For previous connection depicted below refer to installation drawing: 960007339 A

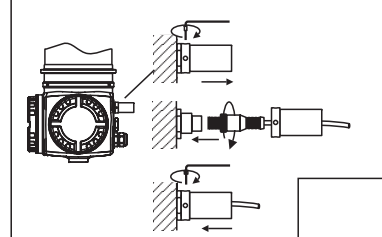

**CAUTION:**  
After connecting the FHX40 to the FMG60 the protective tube must be installed and secured by the screws.

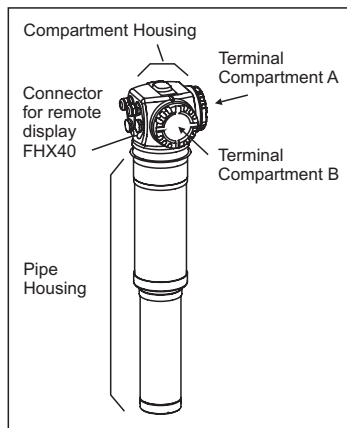

**TERMINAL COMPARTMENT B**

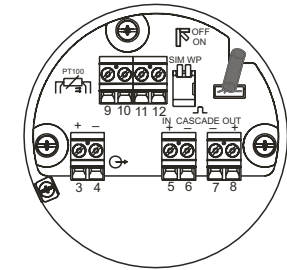


Intrinsically safe circuits Entity Parameters	Group A, B (IIC)	Group C, D (IIA, IIB)
Signal output not connected		
PT100 $V_{oc} = 8.4 \text{ V}$ $I_{sc} = 8.3 \text{ mA}$ $P_o = 17.5 \text{ mW}$ $R_i = 1012 \Omega$	$C_a = 5.2 \mu\text{F}$ $L_a = 400 \text{ mH}$	$C_a = 43 \mu\text{F}$ $L_a = 400 \text{ mH}$
Cascade out $V_{oc} = 8.4 \text{ V}$ $I_{sc} = 19.2 \text{ mA}$ $P_o = 40.3 \text{ mW}$ $R_i = 439 \Omega$	$C_a = 5.1 \mu\text{F}$ $L_a = 69 \text{ mH}$	$C_a = 42 \mu\text{F}$ $L_a = 199 \text{ mH}$
Cascade in $V_{max} = 8.4 \text{ V}$ $I_{max} = 19.2 \text{ mA}$ $P_i = 40.3 \text{ mW}$ $C_i = 0$ $L_i = 67 \mu\text{H}$		
Connection for FHX40 $V_{oc} = 4.7 \text{ V}$ $I_{sc} = 37.7 \text{ mA}$ $P_o = 44.3 \text{ mW}$		For connection to the FM approved intrinsically safe Endress+Hauser display FHX40 with associated cable. Observe Installation Drawing 960411-1006.  This circuit may also be connected to the FM approved Endress+Hauser Service Interface Commubox FXA193 with associated connection cable for ToF instruments. Observe Installation Drawing FES 0072.

**INTRINSICALLY SAFE (Entity)**

Class I, Div. 1, Groups A, B, C, D or Zone 1, IIC

- FM approved apparatus must be installed acc. to manufacturer instructions.
- The installation must be in accordance with the National Electrical Code ANSI / NFPA 70 and ANSI / ISA-RP 12.06.01.
- WARNING:** Substitution of components may impair intrinsic safety.
- Control room equipment must not use or generate over 250 V.
- Wiring: Use cables not subject to short circuiting. Use wires suitable for 5 K above surrounding ambient.
- The maximum permissible values of voltage and current as well as the maximum permissible external capacitance and inductance are shown in the table above.  
 $C_a \geq C_i + C_{\text{cable}}$ ;  $L_a \geq L_i + L_{\text{cable}}$ .
- Do not operate a temperature sensor with "ib" circuit in Zone 0!

**TERMINAL COMPARTMENT A**

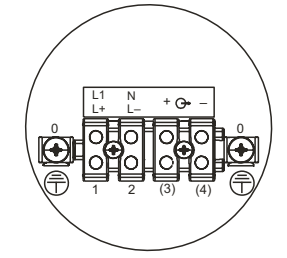

Supply Circuit		
	Terminal	Supply Voltage
AC type	L1 N	90...250 VAC, 50/60 Hz
DC type	L+ L-	18...36 VDC

Signal Circuit		
Types: FMG60-**D2** FMG60-**D3**	$\ominus$ + -	Rated Voltage: $\leq 32 \text{ VDC}$ Rated Current: 11 mA  The detector ensures galvanic isolation up to a maximum of 250 VAC between the signal circuit and any other circuit.

**EXPLOSION PROOF**

Class I, Div. 1, Groups A, B, C, D or Zone 1, IIC

- Install per National Electrical Code (NEC).
- Control room equipment must not use or generate over 250 V.
- Supply wires shall be installed in conduit in accordance with the NEC.
- Do not open the terminal compartment A if the supply voltage is switched on and a combustible atmosphere is present. If a combustible atmosphere is present, wait 3 minutes after switching off the supply voltage, before opening the cover.
- Use supply wires suitable for 5 K above surrounding ambient.
- Sealing plugs of the terminal compartment A must not be exchanged with those of the terminal compartment B.
- Types with stainless steel terminal housing (FMG60-\*\*\*\*1\*\*\*\*, FMG60-\*\*\*\*2\*\*\*\*) Seal not required (apparatus was tested with 15 feet conduit).
- Types with aluminium terminal housing (FMG60-\*\*\*\*3\*\*\*\*, FMG60-\*\*\*\*4\*\*\*\*) Seal required at enclosure wall!

Class II, Div. 1, Groups E, F, G, Class III

- Installation shall be in accordance with NEC using threaded conduits or other wiring methods in accordance with Article 500 through Article 510.
- Use a dust tight seal at the conduit entry in Class II or III locations.
- Do not open the terminal compartment A if the supply voltage is switched on and a combustible atmosphere is present. If a combustible atmosphere is present, wait 3 minutes after switching off the supply voltage, before opening the cover.
- Use supply wires suitable for 5 K above surrounding ambient.

	Permissible ambient temperature	Temperature class
Detector without water cooling or Detector with water cooling out of operation	• Detector with NaI crystal scintillator: -40°C...+60°C • Detector with plastic scintillator: -40°C...+60°C	T6
Detector with water cooling in operation	At the pipe housing (inside the water cooling): • Detector with NaI crystal scintillator: -40°C...+60°C • Detector with plastic scintillator: -40°C...+60°C At the compartment housing: -40°C...+75°C	T6

