

# Special documentation

## **Proline Promass 100**

### Register information Modbus RS485



## Table of contents

<b>1</b>	<b>Document information</b> .....	<b>4</b>
1.1	Document function .....	4
1.2	Using this document .....	4
<b>2</b>	<b>Overview of the operating menu "Expert"</b> .....	<b>6</b>
<b>3</b>	<b>Modbus RS485 parameter information</b>	<b>9</b>
3.1	Sub-menu "System" .....	9
3.2	Sub-menu "Sensor" .....	11
3.3	Sub-menu "Communication" .....	20
3.4	Sub-menu "Application" .....	21
3.5	Sub-menu "Diagnostics" .....	25

# 1 Document information


## 1.1 Document function

This document is part of the Operating Instructions for Proline Promass 100 Modbus RS485 and extends these with Modbus specific information about each parameter.

## 1.2 Using this document


### 1.2.1 Information on the document structure

The document lists the submenus and their parameters according to the structure from the Expert menu.

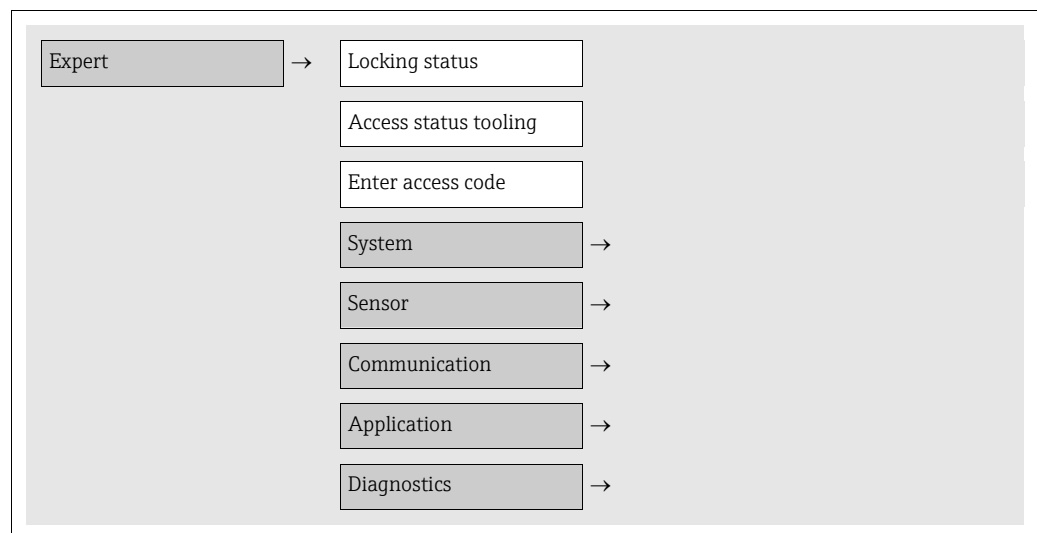

### 1.2.2 Structure of a parameter description

The individual parts of a parameter description are described in the following section:

Navigation: Navigation path to the parameter				
Parameter	Register	Data type	Access	Options/User entry
Complete parameter name	Information in decimal numerical format	<ul style="list-style-type: none"> <li>▪ Float Length = 4 bytes</li> <li>▪ Integer Length = 2 bytes</li> <li>▪ String Length depends on function</li> </ul>	Possible ways of accessing the function: <ul style="list-style-type: none"> <li>▪ Read Read access via function code 03, 04 or 23</li> <li>▪ Write Write access via function code 06, 16 or 23</li> </ul>	Options List of the individual options for the parameter <ul style="list-style-type: none"> <li>▪ Option 1</li> <li>▪ Option 2 (Default)</li> <li>▪ Option 3 (Default)*</li> </ul> <div style="margin-left: 20px;">  <b>Note!</b>                          - Default setting emphasized and marked with "Default"                          - * = Default setting depends on country and device properties                     </div> User entry Input range for the parameter



**Note!**

If a nonvolatile device parameter is modified via the Modbus RS485 function codes 06, 16 or 23, this change is saved in the HistoROM of the measuring device. The number of writes to the HistoROM is technically restricted to a maximum of 1 million. Attention must be paid to this limit since, if exceeded, it results in data loss and measuring device failure. For this reason, avoid constantly writing nonvolatile device parameters via the Modbus RS485!

### 1.2.3 Modbus RS485 register address model


The Modbus RS485 register addresses of the measuring device are implemented in accordance with "Modbus Applications Protocol Specification V1.1".


In addition, also systems are deployed which work with the register address model "Modicon Modbus Protocol Reference Guide (PI-MBUS-300 Rev. J)". Depending on the used function code, the register address is extended with a prefix number in this specification:

- "3" → Access type "Read"
- "4" → Access type "Write"

Function code	Access type	Register in accordance with "Modbus Applications Protocol Specification"	Register in accordance with "Modicon Modbus Protocol Reference Guide"
03 04 23	Read	XXXX → Example: mass flow = 2007	3XXXX Example: mass flow = 32007
06 16 23	Write	XXXX → Example: reset totalizer = 6401	4XXXX Example: reset totalizer = 46401

## 2 Overview of the operating menu "Expert"

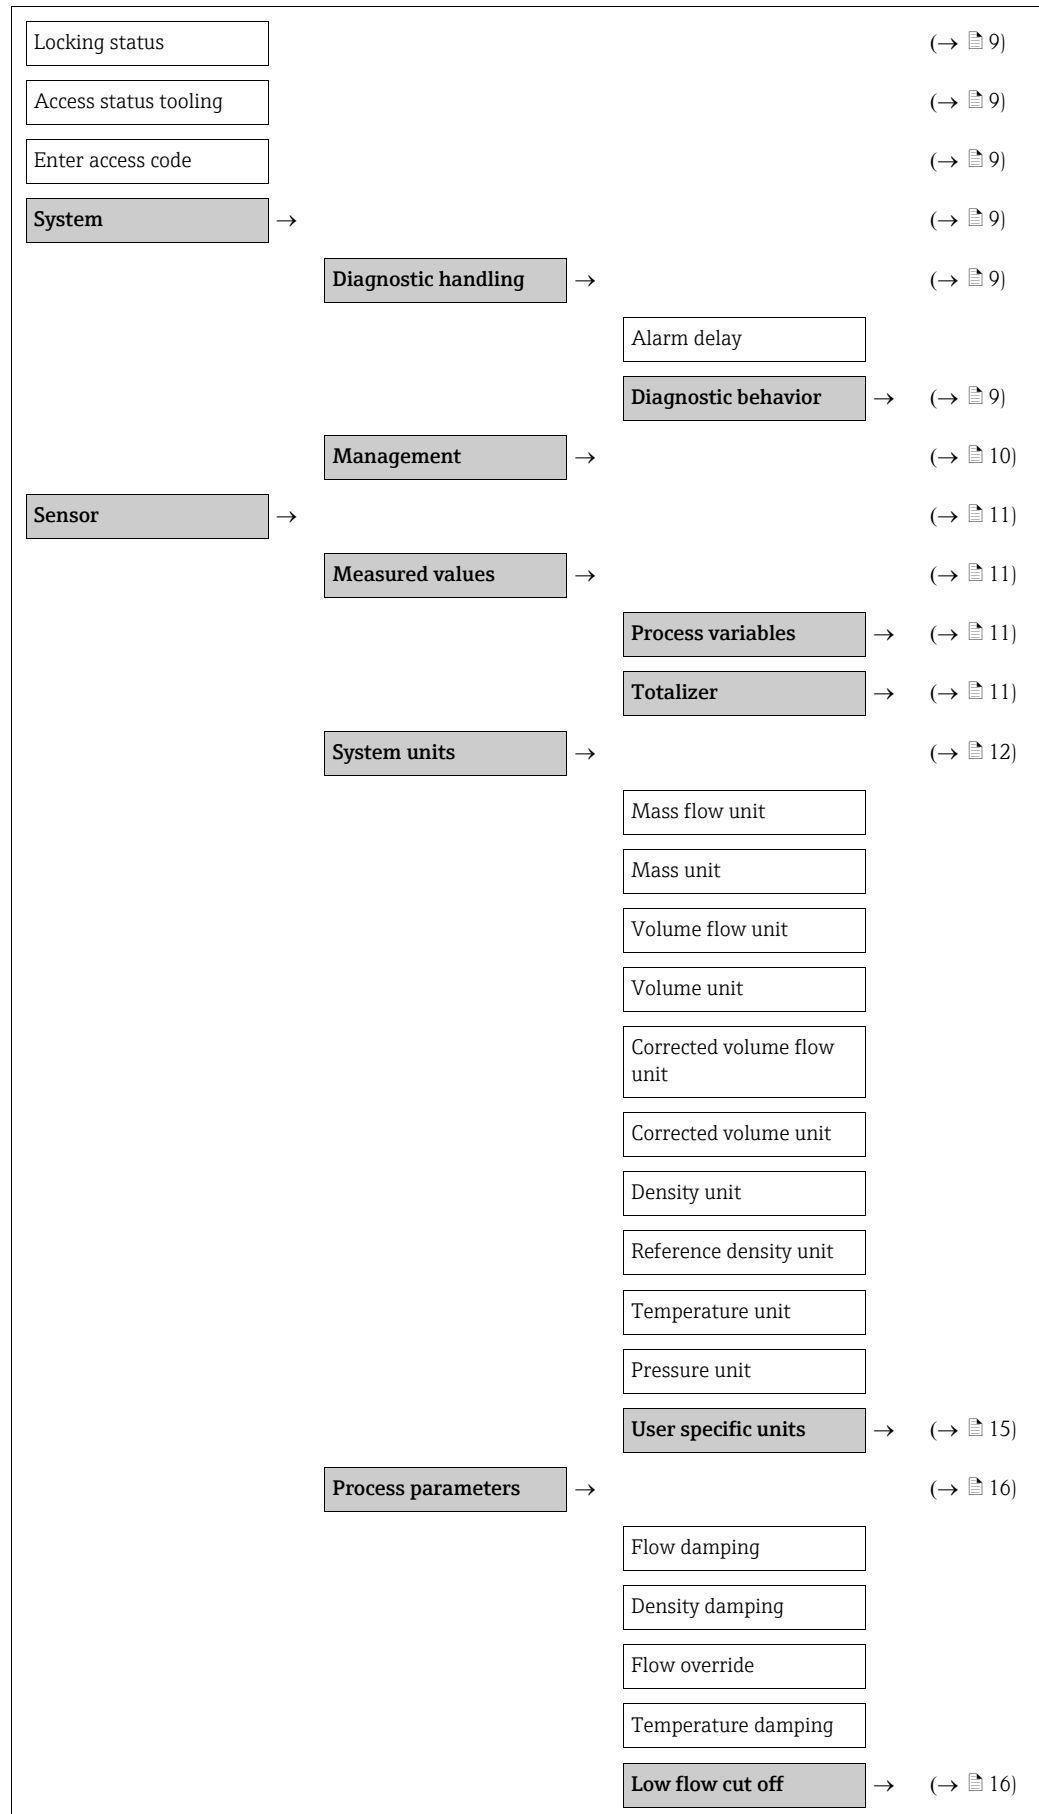

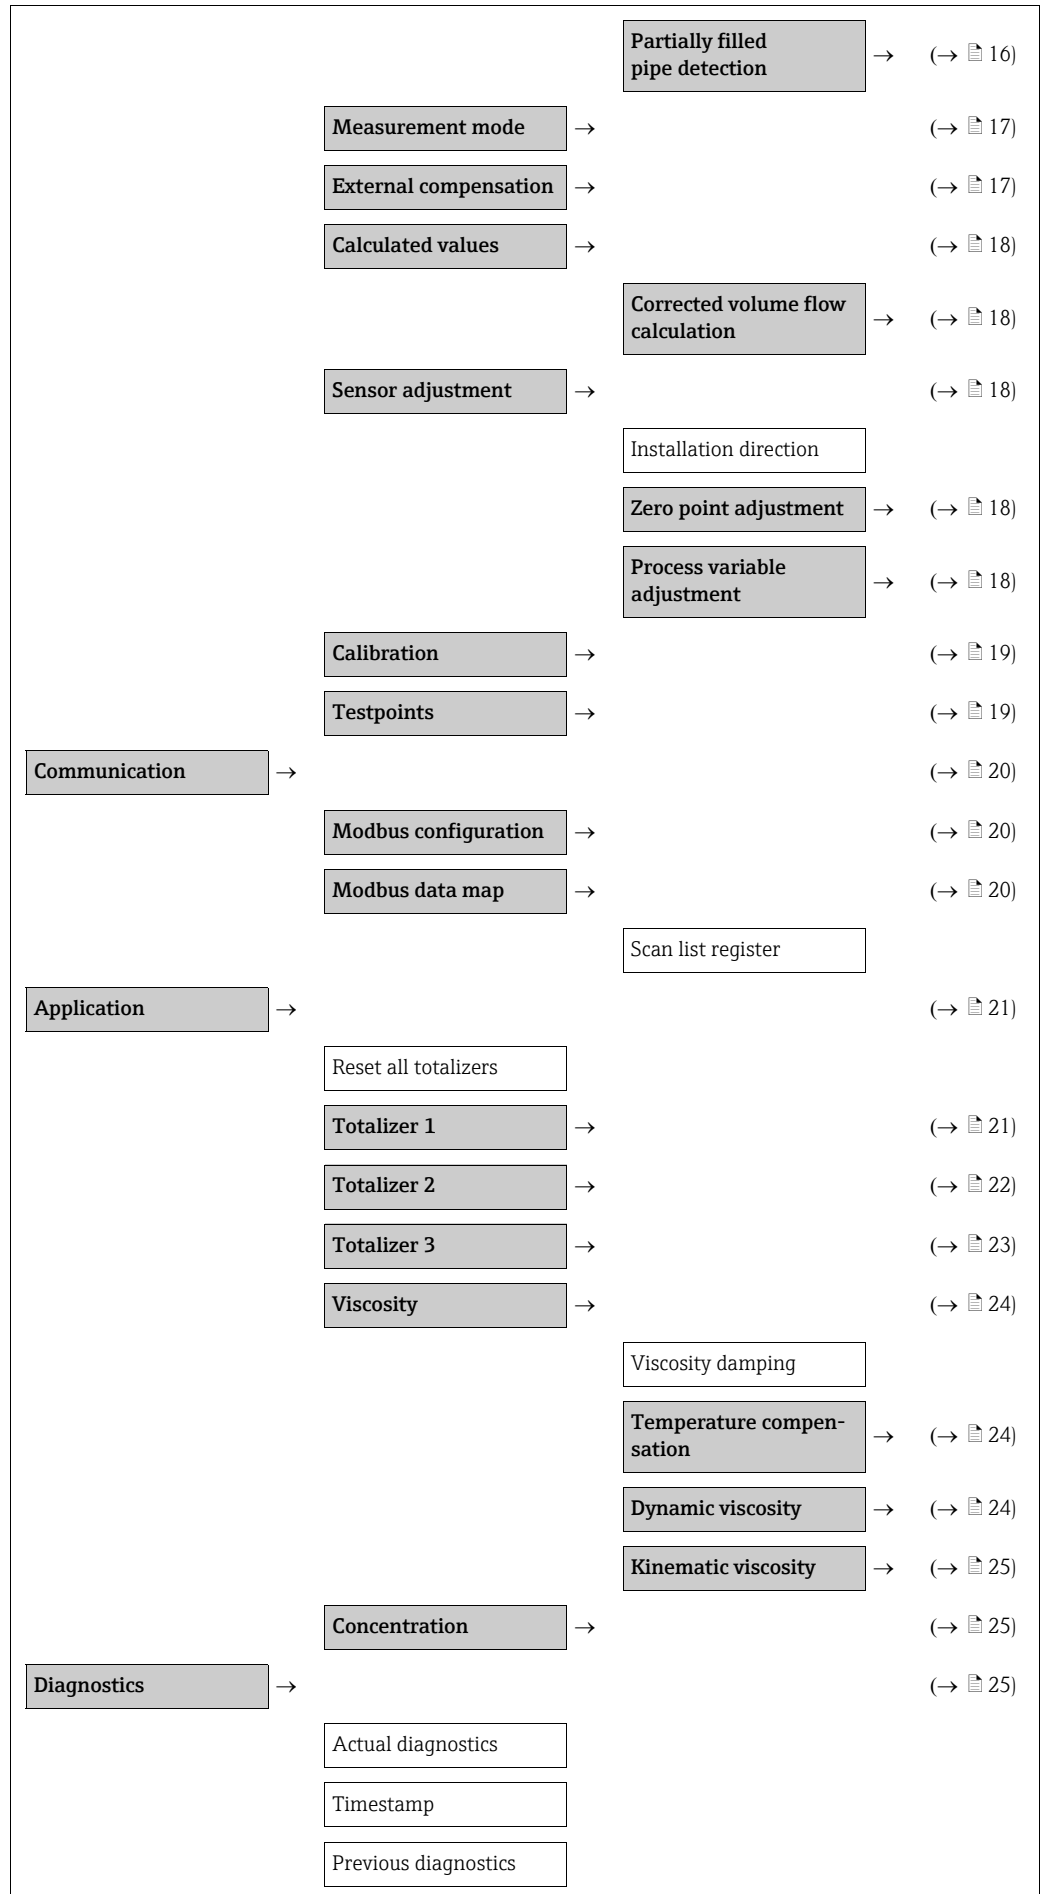

Timestamp		
Operating time from restart		
Operating time		
<b>Diagnostic list</b>	→	(→ 26)
<b>Event logbook</b>	→	(→ 26)
<b>Device information</b>	→	(→ 26)
<b>Min/max values</b>	→	(→ 27)
		<b>Electronic temperature</b> → (→ 27)
		<b>Medium temperature</b> → (→ 27)
		<b>Carrier pipe temperature</b> → (→ 27)
		<b>Oscillation frequency</b> → (→ 27)
		<b>Torsion oscillation frequency</b> → (→ 27)
		<b>Oscillation amplitude</b> → (→ 27)
		<b>Torsion oscillation amplitude</b> → (→ 28)
		<b>Oscillation damping</b> → (→ 28)
		<b>Torsions oscillation damping</b> → (→ 28)
		<b>Signal asymmetry</b> → (→ 28)
<b>Heartbeat</b>	→	(→ 28)
		<b>Performing verification</b> → (→ 28)
		<b>Verification results</b> → (→ 29)
		<b>Heartbeat Monitoring</b> → (→ 29)
		<b>Monitoring results</b> → (→ 29)
<b>Simulation</b>	→	(→ 30)



## 3 Modbus RS485 parameter information

Navigation: Expert				
Parameter	Register	Data type	Access	Selection/Default
Locking status	4918	Integer	Read	256 = Hardware locked 512 = Temporarily locked
Access status tooling	2178	Integer	Read	0 = Operator <b>1 = Maintenance (Default)</b> 2 = Service 3 = Production 4 = Development
Enter access code	2177	Integer	Read/write	0...9999

### 3.1 Sub-menu "System"

#### 3.1.1 Sub-menu "Diagnostic handling"

Navigation: Expert → System → Diagnostic handling				
Parameter	Register	Data type	Access	Selection/Default
Alarm delay	6808	Float	Read/write	0...60

#### Sub-menu "Diagnostic behavior"

Navigation: Expert → System → Diagnostic handling → Diagnostic behavior				
Parameter	Register	Data type	Access	Selection/Default
Assign behavior of diagnostic no. 044	2757	Integer	Read/write	0 = Off 1 = Logbook entry only <b>2 = Warning (Default)</b> 3 = Alarm
Assign behavior of diagnostic no. 046	2756	Integer	Read/write	0 = Off 1 = Logbook entry only <b>2 = Warning (Default)</b> 3 = Alarm
Assign behavior of diagnostic no. 144	2081	Integer	Read/write	0 = Off 1 = Logbook entry only 2 = Warning <b>3 = Alarm (Default)</b>
Assign behavior of diagnostic no. 192	2022	Integer	Read/write	0 = Off 1 = Logbook entry only <b>2 = Warning (Default)</b> 3 = Alarm
Assign behavior of diagnostic no. 274	2755	Integer	Read/write	0 = Off 1 = Logbook entry only <b>2 = Warning (Default)</b> 3 = Alarm
Assign behavior of diagnostic no. 392	2023	Integer	Read/write	0 = Off 1 = Logbook entry only <b>2 = Warning (Default)</b> 3 = Alarm
Assign behavior of diagnostic no. 592	2024	Integer	Read/write	0 = Off 1 = Logbook entry only <b>2 = Warning (Default)</b> 3 = Alarm

Navigation: Expert → System → Diagnostic handling → Diagnostic behavior				
Parameter	Register	Data type	Access	Selection/Default
Assign behavior of diagnostic no. 832	2759	Integer	Read/write	0 = Off 1 = Logbook entry only <b>2 = Warning (Default)</b> 3 = Alarm
Assign behavior of diagnostic no. 833	2762	Integer	Read/write	0 = Off 1 = Logbook entry only <b>2 = Warning (Default)</b> 3 = Alarm
Assign behavior of diagnostic no. 834	2761	Integer	Read/write	0 = Off 1 = Logbook entry only <b>2 = Warning (Default)</b> 3 = Alarm
Assign behavior of diagnostic no. 835	2760	Integer	Read/write	0 = Off 1 = Logbook entry only <b>2 = Warning (Default)</b> 3 = Alarm
Assign behavior of diagnostic no. 912	2758	Integer	Read/write	0 = Off 1 = Logbook entry only <b>2 = Warning (Default)</b> 3 = Alarm
Assign behavior of diagnostic no. 913	2754	Integer	Read/write	0 = Off 1 = Logbook entry only <b>2 = Warning (Default)</b> 3 = Alarm
Assign behavior of diagnostic no. 944	2082	Integer	Read/write	0 = Off 1 = Logbook entry only <b>2 = Warning (Default)</b> 3 = Alarm
Assign behavior of diagnostic no. 992	2021	Integer	Read/write	0 = Off 1 = Logbook entry only <b>2 = Warning (Default)</b> 3 = Alarm

### 3.1.2 Sub-menu "Management"

Navigation: Expert → System → Management				
Parameter	Register	Data type	Access	Selection/Default
Device reset	6817	Integer	Read/write	<b>0 = Cancel (Default)</b> 1 = Restart device 2 = To delivery settings
Activate SW option	2795	Integer	Read/write	Positive Ganzzahl
Software option overview	2902	Integer	Read	16384 = Heartbeat Monitoring 4 = Concentration 32768 = Heartbeat Verification 64 = Viscosity
Permanent storage	6907	Integer	Read/write	0 = Off <b>1 = On (Default)</b>
Device tag	4901	String	Read/write	

## 3.2 Sub-menu "Sensor"

### 3.2.1 Sub-menu "Measured values"

#### Sub-menu "Process variables"

Navigation: Expert → Sensor → Measured values → Process variables				
Parameter	Register	Data type	Access	Selection/Default
Mass flow	2007	Float	Read	
Volume flow	2009	Float	Read	
Corrected volume flow	2011	Float	Read	
Density	2013	Float	Read	
Reference density	2015	Float	Read	
Temperature	2017	Float	Read	
Pressure value	2089	Float	Read	
Dynamic viscosity	2019	Float	Read	
Kinematic viscosity	2083	Float	Read	
Temp. compensated dynamic viscosity	2093	Float	Read	
Temp. compensated kinematic viscosity	2095	Float	Read	
Concentration	2598	Float	Read	
Target mass flow	2797	Float	Read	
Carrier mass flow	2799	Float	Read	

#### Sub-menu "Totalizer"

Navigation: Expert → Sensor → Measured values → Totalizer				
Parameter	Register	Data type	Access	Selection/Default
Totalizer value 1	2610	Float	Read	
Totalizer overflow 1	2612	Float	Read	-32000.0...32000.0
Totalizer value 2	2810	Float	Read	
Totalizer overflow 2	2812	Float	Read	-32000.0...32000.0
Totalizer value 3	3010	Float	Read	
Totalizer overflow 3	3012	Float	Read	-32000.0...32000.0

## 3.2.2 Sub-menu "System units"

Navigation: Expert → Sensor → System units				
Parameter	Register	Data type	Access	Selection/Default
Mass flow unit	2101	Integer	Read/write	0 = g/s 1 = g/min 2 = g/h 3 = g/d 4 = kg/s 5 = kg/min <b>6 = kg/h (Default)*</b> 7 = kg/d 8 = t/s 9 = t/min 10 = t/h 11 = t/d 12 = oz/s 13 = oz/min 14 = oz/h 15 = oz/d 16 = lb/s 17 = lb/min 18 = lb/h 19 = lb/d 20 = STon/s 21 = STon/min 22 = STon/h 23 = STon/d 24 = User mass/s 25 = User mass/min 26 = User mass/h 27 = User mass/d
Mass unit	2102	Integer	Read/write	0 = g <b>1 = kg (Default)*</b> 2 = t 3 = oz 4 = lb 5 = STon 6 = User mass
Volume flow unit	2103	Integer	Read/write	0 = cm <sup>3</sup> /s 1 = cm <sup>3</sup> /min 2 = cm <sup>3</sup> /h 3 = cm <sup>3</sup> /d 4 = dm <sup>3</sup> /s 5 = dm <sup>3</sup> /min 6 = dm <sup>3</sup> /h 7 = dm <sup>3</sup> /d 8 = m <sup>3</sup> /s 9 = m <sup>3</sup> /min 10 = m <sup>3</sup> /h 11 = m <sup>3</sup> /d 12 = ml/s 13 = ml/min 14 = ml/h 15 = ml/d 16 = l/s 17 = l/min <b>18 = l/h (Default)*</b> 19 = l/d 20 = hl/s 21 = hl/min 22 = hl/h 23 = hl/d 24 = Ml/s 25 = Ml/min 26 = Ml/h 27 = Ml/d

Navigation: Expert → Sensor → System units				
Parameter	Register	Data type	Access	Selection/Default
				32 = af/s 33 = af/min 34 = af/h 35 = af/d 36 = cf/s 37 = cf/min 38 = cf/h 39 = cf/d 40 = fl oz/s (us) 41 = fl oz/min (us) 42 = fl oz/h (us) 43 = fl oz/d (us) 44 = gal/s (us) 45 = gal/min (us) 46 = gal/h (us) 47 = gal/d (us) 48 = Mgal/s (us) 49 = Mgal/min (us) 50 = Mgal/h (us) 51 = Mgal/d (us) 52 = bbl/s (us;liq.) 53 = bbl/min (us;liq.) 54 = bbl/h (us;liq.) 55 = bbl/d (us;liq.) 56 = bbl/s (us;beer) 57 = bbl/min (us;beer) 58 = bbl/h (us;beer) 59 = bbl/d (us;beer) 60 = bbl/s (us;oil) 61 = bbl/min (us;oil) 62 = bbl/h (us;oil) 63 = bbl/d (us;oil) 64 = bbl/s (us;tank) 65 = bbl/min (us;tank) 66 = bbl/h (us;tank) 67 = bbl/d (us;tank) 68 = gal/s (imp) 69 = gal/min (imp) 70 = gal/h (imp) 71 = gal/d (imp) 72 = Mgal/s (imp) 73 = Mgal/min (imp) 74 = Mgal/h (imp) 75 = Mgal/d (imp) 80 = bbl/s (imp;oil) 81 = bbl/min (imp;oil) 82 = bbl/h (imp;oil) 83 = bbl/d (imp;oil) 84 = User vol./s 85 = User vol./min 86 = User vol./h 87 = User vol./d 88 = kgal/s (us) 89 = kgal/min (us) 90 = kgal/h (us) 91 = kgal/d (us)

Navigation: Expert → Sensor → System units				
Parameter	Register	Data type	Access	Selection/Default
Volume unit	2104	Integer	Read/write	0 = cm <sup>3</sup> 1 = dm <sup>3</sup> <b>2 = m<sup>3</sup> (Default)*</b> 3 = ml 4 = l 5 = hl 6 = Ml Mega 8 = af 9 = cf 10 = fl oz (us) 11 = gal (us) 12 = Mgal (us) 13 = bbl (us;liq.) 14 = bbl (us;beer) 15 = bbl (us;oil) 16 = bbl (us;tank) 17 = gal (imp) 18 = Mgal (imp) 20 = bbl (imp;oil) 21 = User vol. 22 = kgal
Corrected volume flow unit	2105	Integer	Read/write	0 = NI/s 1 = NI/min <b>2 = NI/h (Default)*</b> 3 = NI/d 4 = Nm <sup>3</sup> /s 5 = Nm <sup>3</sup> /min 6 = Nm <sup>3</sup> /h 7 = Nm <sup>3</sup> /d 8 = Sm <sup>3</sup> /s 9 = Sm <sup>3</sup> /min 10 = Sm <sup>3</sup> /h 11 = Sm <sup>3</sup> /d 12 = Scf/s 13 = Scf/min 14 = Scf/h 15 = Scf/d 16 = Sgal/s (us) 17 = Sgal/min (us) 18 = Sgal/h (us) 19 = Sgal/d (us) 20 = Sbbbl/s (us;liq.) 21 = Sbbbl/min (us;liq.) 22 = Sbbbl/h (us;liq.) 23 = Sbbbl/d (us;liq.) 24 = Sgal/s (imp) 25 = Sgal/min (imp) 26 = Sgal/h (imp) 27 = Sgal/d (imp) 28 = User vol./s 29 = User vol/min 30 = User vol/h 31 = User vol/d
Corrected volume unit	2106	Integer	Read/write	0 = NI <b>1 = Nm<sup>3</sup> (Default)*</b> 2 = Sm <sup>3</sup> 3 = Scf 4 = Sl 5 = Sgal (us) 6 = Sbbbl (us;liq.) 7 = Sgal (imp) 8 = UserCrVol.

Navigation: Expert → Sensor → System units				
Parameter	Register	Data type	Access	Selection/Default
Density unit	2107	Integer	Read/write	0 = g/cm <sup>3</sup> 2 = kg/dm <sup>3</sup> <b>3 = kg/l (Default)*</b> 4 = kg/m <sup>3</sup> 5 = SD4°C 6 = SD15°C 7 = SD20°C 8 = SG4°C 9 = SG15°C 10 = SG20°C 11 = lb/cf 12 = lb/gal (us) 13 = lb/bbl (us;liq.) 14 = lb/bbl (us;beer) 15 = lb/bbl (us;oil) 16 = lb/bbl (us;tank) 17 = lb/gal (imp) 18 = lb/bbl (imp;beer) 19 = lb/bbl (imp;oil) 20 = User dens. 21 = g/m <sup>3</sup> 22 = g/ml
Reference density unit	2108	Integer	Read/write	0 = g/Scm <sup>3</sup> <b>1 = kg/Nl (Default)*</b> 2 = kg/Nm <sup>3</sup> 3 = kg/Sm <sup>3</sup> 4 = lb/Scf
Temperature unit	2109	Integer	Read/write	<b>0 = °C (Default)*</b> 1 = K 2 = °F 3 = °R
Pressure unit	2130	Integer	Read/write	<b>0 = bar a (Default)*</b> 1 = psi a 2 = bar g 3 = psi g 4 = Pa a 5 = kPa a 6 = MPa a 7 = Pa g 8 = kPa g 9 = MPa g 10 = User pres.
Date/time format	2150	Integer	Read/write	<b>0 = dd.mm.yy hh:mm (Default)</b> 1 = mm/dd/yy hh:mm am/pm 2 = dd.mm.yy hh:mm am/pm 3 = mm/dd/yy hh:mm

### Sub-menu "User-specific units"

Navigation: Expert → Sensor → System units → User-specific units				
Parameter	Register	Data type	Access	Selection/Default
User mass text	2531	String	Read/write	
User mass factor	2115	Float	Read/write	Gleitkommazahl mit Vorzeichen
User volume text	2542	String	Read/write	
User volume factor	2119	Float	Read/write	Gleitkommazahl mit Vorzeichen
User corrected volume text	2568	String	Read/write	
User corrected volume factor	2573	Float	Read/write	Gleitkommazahl mit Vorzeichen
User density text	2549	String	Read/write	

Navigation: Expert → Sensor → System units → User-specific units				
Parameter	Register	Data type	Access	Selection/Default
User density offset	2556	Float	Read/write	Gleitkommazahl mit Vorzeichen
User density factor	2123	Float	Read/write	Gleitkommazahl mit Vorzeichen
User pressure text	2559	String	Read/write	
User pressure offset	2566	Float	Read/write	Gleitkommazahl mit Vorzeichen
User pressure factor	2564	Float	Read/write	Gleitkommazahl mit Vorzeichen

### 3.2.3 Sub-menu "Process parameters"

Navigation: Expert → Sensor → Process parameters				
Parameter	Register	Data type	Access	Selection/Default
Flow damping	5510	Float	Read/write	0...100.0
Density damping	5508	Float	Read/write	0...999.9
Temperature damping	5127	Float	Read/write	0...999.9
Flow override	5503	Integer	Read/write	<b>0 = Off (Default)</b> 1 = On

#### Sub-menu "Low flow cut off"

Navigation: Expert → Sensor → Process parameters → Low flow cut off				
Parameter	Register	Data type	Access	Selection/Default
Assign process variable	5101	Integer	Read/write	0 = Off <b>1 = Mass flow (Default)</b> 2 = Volume flow 3 = Corrected volume flow
On value low flow cutoff	5138	Float	Read/write	
Off value low flow cutoff	5104	Float	Read/write	0...100.0
Pressure shock suppression	5140	Float	Read/write	0...100

#### Sub-menu "Partially filled pipe detection"

Navigation: Expert → Sensor → Process parameters → Partially filled pipe detection				
Parameter	Register	Data type	Access	Selection/Default
Assign process variable	5106	Integer	Read/write	<b>0 = Off (Default)</b> 4 = Density 5 = Reference density
Low value partial filled pipe detection	5110	Float	Read/write	
High value partial filled pipe detection	5112	Float	Read/write	
Response time part. filled pipe detect.	5108	Float	Read/write	0...100
Maximum damping partial filled pipe det.	2414	Float	Read/write	Positive Gleitkommazahl



### 3.2.4 Sub-menu "Measurement mode"

Navigation: Expert → Sensor → Measurement mode				
Parameter	Register	Data type	Access	Selection/Default
Select medium	2442	Integer	Read/write	<b>0 = Liquid (Default)</b> 1 = Gas
Select gas type	5229	Integer	Read/write	0 = Air 1 = Nitrogen N2 2 = Argon Ar 3 = Helium He 4 = Carbon dioxide CO2 5 = Oxygen O2 <b>6 = Methane CH4 (Default)</b> 7 = Ammonia NH3 9 = Hydrogen H2 10 = Ethane C2H6 11 = Propane C3H8 12 = Butane C4H10 13 = Chlorine Cl2 14 = Hydrogen chloride HCl 15 = Carbon monoxide CO 16 = Nitrous oxide N2O 17 = Nitrogen oxide NOx 18 = Hydrogen sulfide H2S 19 = Sulfur hexafluoride SF6 20 = Propylene C3H6 21 = Ozone O3 22 = Others 23 = Ethylene C2H4
Reference sound velocity	7413	Float	Read/write	1...99999.9999
Temperature coefficient sound velocity	7411	Float	Read/write	Positive Gleitkommazahl

### 3.2.5 Sub-menu "External compensation"

Navigation: Expert → Sensor → External compensation				
Parameter	Register	Data type	Access	Selection/Default
Pressure compensation	5184	Integer	Read/write	<b>0 = Off (Default)</b> 1 = Fixed value 2 = External value
Pressure value	5185	Float	Read/write	Positive Gleitkommazahl
External pressure	2440	Float	Read/write	Positive Gleitkommazahl
Temperature mode	5515	Integer	Read/write	<b>0 = Internal measured value (Default)</b> 1 = External value
External temperature	2507	Float	Read/write	-273.15...99999

### 3.2.6 Sub-menu "Calculated values"

#### Sub-menu "Corrected volume flow calculation"

Navigation: Expert → Sensor → Calculated values → Corrected volume flow calculation				
Parameter	Register	Data type	Access	Selection/Default
Corrected volume flow calculation	5129	Integer	Read/write	<b>0 = Calculated reference density (Default)</b> 1 = Fixed reference density 2 = External reference density 3 = Reference density by API table 53
External reference density	2509	Float	Read/write	Gleitkommazahl mit Vorzeichen
Fixed reference density	5130	Float	Read/write	Positive Gleitkommazahl
Reference temperature	5136	Float	Read/write	-273.15...99999
Linear expansion coefficient	5132	Float	Read/write	Gleitkommazahl mit Vorzeichen
Square expansion coefficient	5134	Float	Read/write	Gleitkommazahl mit Vorzeichen

### 3.2.7 Sub-menu "Sensor adjustment"

Navigation: Expert → Sensor → Sensor adjustment				
Parameter	Register	Data type	Access	Selection/Default
Installation direction	5501	Integer	Read/write	<b>0 = Flow in arrow direction (Default)</b> 1 = Flow against arrow direction

#### Sub-menu "Zero point adjustment"

Navigation: Expert → Sensor → Sensor adjustment → Zero point adjustment				
Parameter	Register	Data type	Access	Selection/Default
Zero point adjustment control	5121	Integer	Read/write	<b>0 = Cancel (Default)</b> 1 = Start 2 = Zero point adjust failure 8 = Busy
Progress	6797	Integer	Read	

#### Sub-menu "Process variable adjustment"

Navigation: Expert → Sensor → Sensor adjustment → Process variable adjustment				
Parameter	Register	Data type	Access	Selection/Default
Mass flow offset	5521	Float	Read/write	Gleitkommazahl mit Vorzeichen
Mass flow factor	5519	Float	Read/write	Positive Gleitkommazahl
Volume flow offset	5525	Float	Read/write	Gleitkommazahl mit Vorzeichen
Volume flow factor	5523	Float	Read/write	Positive Gleitkommazahl
Density offset	5529	Float	Read/write	Gleitkommazahl mit Vorzeichen
Density factor	5527	Float	Read/write	Positive Gleitkommazahl
Corrected volume flow offset	2044	Float	Read/write	Gleitkommazahl mit Vorzeichen
Corrected volume flow factor	2076	Float	Read/write	Positive Gleitkommazahl
Reference density offset	2046	Float	Read/write	Gleitkommazahl mit Vorzeichen

Navigation: Expert → Sensor → Sensor adjustment → Process variable adjustment				
Parameter	Register	Data type	Access	Selection/Default
Reference density factor	2042	Float	Read/write	Positive Gleitkommazahl
Temperature offset	5533	Float	Read/write	Gleitkommazahl mit Vorzeichen
Temperature factor	5531	Float	Read/write	Positive Gleitkommazahl

### 3.2.8 Sub-menu "Calibration"

Navigation: Expert → Sensor → Calibration				
Parameter	Register	Data type	Access	Selection/Default
Calibration factor	7513	Float	Read	Gleitkommazahl mit Vorzeichen
Zero point	7527	Float	Read/write	Gleitkommazahl mit Vorzeichen
Nominal diameter	2048	String	Read	
C0	7501	Float	Read	Gleitkommazahl mit Vorzeichen
C1	7503	Float	Read	Gleitkommazahl mit Vorzeichen
C2	7505	Float	Read	Gleitkommazahl mit Vorzeichen
C3	7507	Float	Read	Gleitkommazahl mit Vorzeichen
C4	7509	Float	Read	Gleitkommazahl mit Vorzeichen
C5	7511	Float	Read	Gleitkommazahl mit Vorzeichen

### 3.2.9 Sub-menu "Testpoints"

Navigation: Expert → Sensor → Testpoints				
Parameter	Register	Data type	Access	Selection/Default
Oscillation frequency 0	9501	Float	Read	
Oscillation frequency 1	9503	Float	Read	
Frequency fluctuation 0	2498	Float	Read	
Frequency fluctuation 1	2500	Float	Read	
Oscillation amplitude 0	2449	Float	Read	
Oscillation amplitude 1	2451	Float	Read	
Oscillation damping 0	9505	Float	Read	
Oscillation damping 1	9507	Float	Read	
Tube damping fluctuation 0	2502	Float	Read	
Tube damping fluctuation 1	2504	Float	Read	
Signal asymmetry	2443	Float	Read	
Electronic temperature	2457	Float	Read	
Carrier pipe temperature	9513	Float	Read	
Exciter current 0	9509	Float	Read	
Exciter current 1	9511	Float	Read	
RawMassFlow	10232	Float	Read	

### 3.3 Sub-menu "Communication"

#### 3.3.1 Sub-menu "Modbus configuration"

Navigation: Expert → Communication → Modbus configuration				
Parameter	Register	Data type	Access	Selection/Default
Bus address	4910	Integer	Read/write	1...247
Baudrate	4912	Integer	Read/write	0 = 1200 BAUD 1 = 2400 BAUD 2 = 4800 BAUD 3 = 9600 BAUD <b>4 = 19200 BAUD (Default)</b> 5 = 38400 BAUD 6 = 57600 BAUD 7 = 115200 BAUD
Data transfer mode	4913	Integer	Read/write	<b>0 = RTU (Default)</b> 1 = ASCII
Parity	4914	Integer	Read/write	<b>0 = Even (Default)</b> 1 = Odd 2 = None / 2 stop bits 3 = None / 1 stop bit
Byte order	4915	Integer	Read/write	0 = 0-1-2-3 1 = 3-2-1-0 2 = 2-3-0-1 <b>3 = 1-0-3-2 (Default)</b>
Telegram delay	4916	Float	Read/write	0...100
Assign diagnostic behavior	4921	Integer	Read/write	0 = Off 1 = Warning <b>2 = Alarm (Default)</b> 3 = Alarm or warning
Failure mode	4920	Integer	Read/write	<b>0 = NaN value (Default)</b> 1 = Last valid value
Interpreter mode	4925	Integer	Read/write	<b>0 = Standard (Default)</b> 1 = Ignore surplus bytes

#### 3.3.2 Sub-menu "Modbus data map"

Navigation: Expert → Communication → Modbus data map				
Parameter	Register	Data type	Access	Selection/Default
Scan list register 0	5001	Integer	Read/write	0...65535
Scan list register 1	5002	Integer	Read/write	0...65535
Scan list register 2	5003	Integer	Read/write	0...65535
Scan list register 3	5004	Integer	Read/write	0...65535
Scan list register 4	5005	Integer	Read/write	0...65535
Scan list register 5	5006	Integer	Read/write	0...65535
Scan list register 6	5007	Integer	Read/write	0...65535
Scan list register 7	5008	Integer	Read/write	0...65535
Scan list register 8	5009	Integer	Read/write	0...65535
Scan list register 9	5010	Integer	Read/write	0...65535
Scan list register 10	5011	Integer	Read/write	0...65535
Scan list register 11	5012	Integer	Read/write	0...65535
Scan list register 12	5013	Integer	Read/write	0...65535

Navigation: Expert → Communication → Modbus data map				
Parameter	Register	Data type	Access	Selection/Default
Scan list register 13	5014	Integer	Read/write	0...65535
Scan list register 14	5015	Integer	Read/write	0...65535
Scan list register 15	5016	Integer	Read/write	0...65535

### 3.4 Sub-menu "Application"

Navigation: Expert → Application				
Parameter	Register	Data type	Access	Selection/Default
Reset all totalizers	2609	Integer	Read/write	<b>0 = Cancel (Default)</b> 1 = Reset + totalize

#### 3.4.1 Sub-menu "Totalizer 1"

Navigation: Expert → Application → Totalizer 1				
Parameter	Register	Data type	Access	Selection/Default
Assign process variable	2601	Integer	Read/write	0 = Off <b>1 = Mass flow (Default)</b> 2 = Volume flow 3 = Corrected volume flow 74 = Target mass flow 75 = Carrier mass flow
Mass unit	2602	Integer	Read/write	0 = g <b>1 = kg (Default)*</b> 2 = t 3 = oz 4 = lb 5 = STon 6 = User mass
Volume unit	2603	Integer	Read/write	0 = cm <sup>3</sup> 1 = dm <sup>3</sup> <b>2 = m<sup>3</sup> (Default)*</b> 3 = ml 4 = l 5 = hl 6 = Ml Mega 8 = af 9 = cf 10 = fl oz (us) 11 = gal (us) 12 = Mgal (us) 13 = bbl (us;liq.) 14 = bbl (us;beer) 15 = bbl (us;oil) 16 = bbl (us;tank) 17 = gal (imp) 18 = Mgal (imp) 20 = bbl (imp;oil) 21 = User vol. 22 = kgal

Navigation: Expert → Application → Totalizer 1				
Parameter	Register	Data type	Access	Selection/Default
Corrected volume unit	2604	Integer	Read/write	0 = NI <b>1 = Nm<sup>3</sup> (Default)*</b> 2 = Sm <sup>3</sup> 3 = Scf 4 = Sl 5 = Sgal (us) 6 = Sbbbl (us;liq.) 7 = Sgal (imp) 8 = UserCrVol.
Totalizer operation mode	2605	Integer	Read/write	<b>0 = Net flow total (Default)</b> 1 = Forward flow total 2 = Reverse flow total
Control Totalizer 1	2608	Integer	Read/write	<b>0 = Totalize (Default)</b> 1 = Reset + totalize 2 = Preset + hold 3 = Reset + hold 4 = Preset + totalize
Preset value 1	2590	Float	Read/write	
Failure mode	2606	Integer	Read/write	<b>0 = Stop (Default)</b> 1 = Actual value 2 = Last valid value

### 3.4.2 Sub-menu "Totalizer 2"

Navigation: Expert → Application → Totalizer 2				
Parameter	Register	Data type	Access	Selection/Default
Assign process variable	2801	Integer	Read/write	0 = Off <b>1 = Mass flow (Default)</b> 2 = Volume flow 3 = Corrected volume flow 74 = Target mass flow 75 = Carrier mass flow
Mass unit	2802	Integer	Read/write	0 = g <b>1 = kg (Default)*</b> 2 = t 3 = oz 4 = lb 5 = STon 6 = User mass
Volume unit	2803	Integer	Read/write	0 = cm <sup>3</sup> 1 = dm <sup>3</sup> <b>2 = m<sup>3</sup> (Default)*</b> 3 = ml 4 = l 5 = hl 6 = Ml Mega 8 = af 9 = cf 10 = fl oz (us) 11 = gal (us) 12 = Mgal (us) 13 = bbl (us;liq.) 14 = bbl (us;beer) 15 = bbl (us;oil) 16 = bbl (us;tank) 17 = gal (imp) 18 = Mgal (imp) 20 = bbl (imp;oil) 21 = User vol. 22 = kgal

Navigation: Expert → Application → Totalizer 2				
Parameter	Register	Data type	Access	Selection/Default
Corrected volume unit	2804	Integer	Read/write	0 = NI <b>1 = Nm<sup>3</sup> (Default)*</b> 2 = Sm <sup>3</sup> 3 = Scf 4 = SI 5 = Sgal (us) 6 = Sdbl (us;liq.) 7 = Sgal (imp) 8 = UserCrVol.
Totalizer operation mode	2805	Integer	Read/write	<b>0 = Net flow total (Default)</b> 1 = Forward flow total 2 = Reverse flow total
Control Totalizer 2	2808	Integer	Read/write	<b>0 = Totalize (Default)</b> 1 = Reset + totalize 2 = Preset + hold 3 = Reset + hold 4 = Preset + totalize
Preset value 2	2592	Float	Read/write	
Failure mode	2806	Integer	Read/write	<b>0 = Stop (Default)</b> 1 = Actual value 2 = Last valid value

### 3.4.3 Sub-menu "Totalizer 3"

Navigation: Expert → Application → Totalizer 3				
Parameter	Register	Data type	Access	Selection/Default
Assign process variable	3001	Integer	Read/write	0 = Off <b>1 = Mass flow (Default)</b> 2 = Volume flow 3 = Corrected volume flow 74 = Target mass flow 75 = Carrier mass flow
Mass unit	3002	Integer	Read/write	0 = g <b>1 = kg (Default)*</b> 2 = t 3 = oz 4 = lb 5 = STon 6 = User mass
Volume unit	3003	Integer	Read/write	0 = cm <sup>3</sup> 1 = dm <sup>3</sup> <b>2 = m<sup>3</sup> (Default)*</b> 3 = ml 4 = l 5 = hl 6 = Ml Mega 8 = af 9 = cf 10 = fl oz (us) 11 = gal (us) 12 = Mgal (us) 13 = bbl (us;liq.) 14 = bbl (us;beer) 15 = bbl (us;oil) 16 = bbl (us;tank) 17 = gal (imp) 18 = Mgal (imp) 20 = bbl (imp;oil) 21 = User vol. 22 = kgal

Navigation: Expert → Application → Totalizer 3				
Parameter	Register	Data type	Access	Selection/Default
Corrected volume unit	3004	Integer	Read/write	0 = NI 1 = Nm <sup>3</sup> (Default)* 2 = Sm <sup>3</sup> 3 = Scf 4 = Sl 5 = Sgal (us) 6 = Sbbbl (us;liq.) 7 = Sgal (imp) 8 = UserCrVol.
Totalizer operation mode	3005	Integer	Read/write	0 = Net flow total (Default) 1 = Forward flow total 2 = Reverse flow total
Control Totalizer 3	3008	Integer	Read/write	0 = Totalize (Default) 1 = Reset + totalize 2 = Preset + hold 3 = Reset + hold 4 = Preset + totalize
Preset value 3	2594	Float	Read/write	
Failure mode	3006	Integer	Read/write	0 = Stop (Default) 1 = Actual value 2 = Last valid value

### 3.4.4 Sub-menu "Viscosity"

Navigation: Expert → Application → Viscosity				
Parameter	Register	Data type	Access	Selection/Default
Viscosity damping	2091	Float	Read/write	0...999.9

### Sub-menu "Temperature compensation"

Navigation: Expert → Application → Viscosity → Temperature compensation				
Parameter	Register	Data type	Access	Selection/Default
Calculation model	9401	Integer	Read/write	0 = Polynomial (Default) 1 = Power law 2 = Exponential
Reference temperature	9402	Float	Read/write	-273.15...99999
Compensation coefficient X1	9404	Float	Read/write	Gleitkommazahl mit Vorzeichen
Compensation coefficient X2	9406	Float	Read/write	Gleitkommazahl mit Vorzeichen

### Sub-menu "Dynamic viscosity"

Navigation: Expert → Application → Viscosity → Dynamic viscosity				
Parameter	Register	Data type	Access	Selection/Default
Dynamic viscosity unit	2111	Integer	Read/write	0 = cP (Default)* 1 = P 2 = Pa s 3 = mPa s 4 = UserDynVis
User dynamic viscosity text	3353	String	Read/write	
User dynamic viscosity factor	2137	Float	Read/write	Gleitkommazahl mit Vorzeichen
User dynamic viscosity offset	2139	Float	Read/write	Gleitkommazahl mit Vorzeichen



### Sub-menu "Kinematic viscosity"

Navigation: Expert → Application → Viscosity → Kinematic viscosity				
Parameter	Register	Data type	Access	Selection/Default
Kinematic viscosity unit	2112	Integer	Read/write	0 = m <sup>2</sup> /s 1 = mm <sup>2</sup> /s <b>2 = cSt (Default)*</b> 3 = St 4 = UserKinVis
User kinematic viscosity text	3358	String	Read/write	
User kinematic viscosity factor	2143	Float	Read/write	Gleitkommazahl mit Vorzeichen
User kinematic viscosity offset	2145	Float	Read/write	Gleitkommazahl mit Vorzeichen

### 3.4.5 Sub-menu "Concentration"

Navigation: Expert → Application → Concentration				
Parameter	Register	Data type	Access	Selection/Default
Concentration damping	2526	Float	Read/write	0...999.9
Concentration unit	2439	Integer	Read/write	<b>0 = WT-% (Default)*</b> 2 = °API 3 = °Balling 4 = °Baum (hv) 5 = °Baum (lt) 6 = °Brix 7 = °Plato 8 = User conc.
User concentration text	2585	String	Read/write	
User concentration factor	2554	Float	Read/write	Gleitkommazahl mit Vorzeichen
User concentration offset	2490	Float	Read/write	Gleitkommazahl mit Vorzeichen
A0	2099	Float	Read/write	Gleitkommazahl mit Vorzeichen
A1	2730	Float	Read/write	Gleitkommazahl mit Vorzeichen
A2	2972	Float	Read/write	Gleitkommazahl mit Vorzeichen
A3	2618	Float	Read/write	Gleitkommazahl mit Vorzeichen
A4	2670	Float	Read/write	Gleitkommazahl mit Vorzeichen
B1	2616	Float	Read/write	Gleitkommazahl mit Vorzeichen
B2	2656	Float	Read/write	Gleitkommazahl mit Vorzeichen
B3	2672	Float	Read/write	Gleitkommazahl mit Vorzeichen

### 3.5 Sub-menu "Diagnostics"

Navigation: Expert → Diagnostics				
Parameter	Register	Data type	Access	Selection/Default
Actual diagnostics	2732	Integer	Read	
Timestamp	2719	String	Read	
Previous diagnostics	2734	Integer	Read	
Timestamp	2068	String	Read	
Operating time from restart	2624	String	Read	
Operating time	2631	String	Read	

### 3.5.1 Sub-menu "Diagnostic list"

Navigation: Expert → Diagnostics → Diagnostic list				
Parameter	Register	Data type	Access	Selection/Default
Diagnostics 1	2736	Integer	Read	
Timestamp	2710	String	Read	
Diagnostics 2	2738	Integer	Read	
Timestamp	2701	String	Read	
Diagnostics 3	2740	Integer	Read	
Timestamp	2692	String	Read	
Diagnostics 4	2742	Integer	Read	
Timestamp	2683	String	Read	
Diagnostics 5	2744	Integer	Read	
Timestamp	2675	String	Read	

### 3.5.2 Sub-menu "Event logbook"

Navigation: Expert → Diagnostics → Event logbook				
Parameter	Register	Data type	Access	Selection/Default
Filter options	2639	Integer	Read/write	0 = Failure (F) 4 = Maintenance required (M) 8 = Function check (C) 12 = Out of specification (S) 16 = Information (I) 255 = All (Default)

### 3.5.3 Sub-menu "Device information"

Navigation: Expert → Diagnostics → Device information				
Parameter	Register	Data type	Access	Selection/Default
Device tag	2026	String	Read	
Serial number	7003	String	Read	
Firmware version	7277	String	Read	
Device name	7263	String	Read	
Order code	2058	String	Read	
Extended order code 1	2212	String	Read	
Extended order code 2	2222	String	Read	
Extended order code 3	2232	String	Read	
ENP version	4003	String	Read	
Configuration counter	3101	Integer	Read	

### 3.5.4 Sub-menu "Min/max values"

#### Sub-menu "Electronic temperature"

Navigation: Expert → Diagnostics → Min/max values → Electronic temperature				
Parameter	Register	Data type	Access	Selection/Default
Minimum value	2421	Float	Read	Gleitkommazahl mit Vorzeichen
Maximum value	2419	Float	Read	Gleitkommazahl mit Vorzeichen

#### Sub-menu "Medium temperature"

Navigation: Expert → Diagnostics → Min/max values → Medium temperature				
Parameter	Register	Data type	Access	Selection/Default
Minimum value	7529	Float	Read	Gleitkommazahl mit Vorzeichen
Maximum value	7531	Float	Read	Gleitkommazahl mit Vorzeichen

#### Sub-menu "Carrier pipe temperature"

Navigation: Expert → Diagnostics → Min/max values → Carrier pipe temperature				
Parameter	Register	Data type	Access	Selection/Default
Minimum value	7533	Float	Read	Gleitkommazahl mit Vorzeichen
Maximum value	7535	Float	Read	Gleitkommazahl mit Vorzeichen

#### Sub-menu "Oscillation frequency"

Navigation: Expert → Diagnostics → Min/max values → Oscillation frequency				
Parameter	Register	Data type	Access	Selection/Default
Minimum value	2459	Float	Read	
Maximum value	2468	Float	Read	

#### Sub-menu "Torsion oscillation frequency"

Navigation: Expert → Diagnostics → Min/max values → Torsion oscillation frequency				
Parameter	Register	Data type	Access	Selection/Default
Minimum value	2519	Float	Read	
Maximum value	2517	Float	Read	

#### Sub-menu "Oscillation amplitude"

Navigation: Expert → Diagnostics → Min/max values → Oscillation amplitude				
Parameter	Register	Data type	Access	Selection/Default
Minimum value	2472	Float	Read	
Maximum value	2470	Float	Read	

**Sub-menu "Torsion oscillation amplitude"**

Navigation: Expert → Diagnostics → Min/max values → Torsion oscillation amplitude				
Parameter	Register	Data type	Access	Selection/Default
Minimum value	2515	Float	Read	
Maximum value	2480	Float	Read	

**Sub-menu "Oscillation damping"**

Navigation: Expert → Diagnostics → Min/max values → Oscillation damping				
Parameter	Register	Data type	Access	Selection/Default
Minimum value	2478	Float	Read	
Maximum value	2423	Float	Read	

**Sub-menu "Torsion oscillation damping"**

Navigation: Expert → Diagnostics → Min/max values → Torsion oscillation damping				
Parameter	Register	Data type	Access	Selection/Default
Minimum value	2523	Float	Read	
Maximum value	2521	Float	Read	

**Sub-menu "Signal asymmetry"**

Navigation: Expert → Diagnostics → Min/max values → Signal asymmetry				
Parameter	Register	Data type	Access	Selection/Default
Minimum value	2474	Float	Read	
Maximum value	2476	Float	Read	

**3.5.5 Sub-menu "Heartbeat"****Sub-menu "Performing verification"**

Navigation: Expert → Diagnostics → Heartbeat → Performing verification				
Parameter	Register	Data type	Access	Selection/Default
Year	2495	Integer	Read/write	9...99
Month	2494	Integer	Read/write	<b>0 = January (Default)</b> 1 = February 2 = March 3 = April 4 = May 5 = June 6 = July 7 = August 8 = September 9 = October 10 = November 11 = December
Day	2493	Integer	Read/write	
Hour	2492	Integer	Read/write	

Navigation: Expert → Diagnostics → Heartbeat → Performing verification				
Parameter	Register	Data type	Access	Selection/Default
AM/PM	2496	Integer	Read/write	<b>0 = AM (Default)</b> 1 = PM
Minute	2467	Integer	Read/write	0...59
Start verification	2270	Integer	Read/write	<b>0 = Cancel (Default)</b> 1 = Start
Progress	6797	Integer	Read	
Status	2079	Integer	Read	0 = Failed <b>1 = Ready (Default)</b> 3 = Check not done 8 = Busy

### Sub-menu "Verification results"

Navigation: Expert → Diagnostics → Heartbeat → Verification results				
Parameter	Register	Data type	Access	Selection/Default
Date/time	2372	String	Read	
Verification ID	2315	Integer	Read	
Operating time	3346	String	Read	
Overall result	2355	Integer	Read	0 = Failed 1 = Not used 2 = Passed <b>3 = Check not done (Default)</b>
Sensor	2384	Integer	Read	0 = Failed 1 = Not used 2 = Passed <b>3 = Check not done (Default)</b>
Sensor integrity	2129	Integer	Read	0 = Failed 1 = Not used 2 = Passed <b>3 = Check not done (Default)</b>
Sensor electronic module	2385	Integer	Read	0 = Failed 1 = Not used 2 = Passed <b>3 = Check not done (Default)</b>
I/O module	2386	Integer	Read	0 = Failed 1 = Not used 2 = Passed <b>3 = Check not done (Default)</b>

### Sub-menu "Heartbeat Monitoring"

Navigation: Expert → Diagnostics → Heartbeat → Heartbeat Monitoring				
Parameter	Register	Data type	Access	Selection/Default
Activate monitoring	2088	Integer	Read/write	<b>0 = Off (Default)</b> 1 = On

### Sub-menu "Monitoring results"

Navigation: Expert → Diagnostics → Heartbeat → Monitoring results				
Parameter	Register	Data type	Access	Selection/Default
Sensor integrity	2358	Float	Read	

### 3.5.6 Sub-menu "Simulation"

Navigation: Expert → Diagnostics → Simulation				
Parameter	Register	Data type	Access	Selection/Default
Assign simulation process variable	6813	Integer	Read/write	<b>0 = Off (Default)</b> 1 = Mass flow 2 = Volume flow 3 = Corrected volume flow 4 = Density 5 = Reference density 7 = Temperature 45 = Kinematic viscosity 46 = Dynamic viscosity 73 = Concentration 74 = Target mass flow 75 = Carrier mass flow 76 = Temp. compensated dynamic viscosity 77 = Temp. compensated kinematic viscosity
Value process variable	6814	Float	Read/write	
Simulation device alarm	6812	Integer	Read/write	<b>0 = Off (Default)</b> 1 = On



[www.addresses.endress.com](http://www.addresses.endress.com)

---