

Hazardous location

Class I, Div. 1, Groups A, B, C, D

Class I, Zone 0, IIC
(see note 6)

Suitable for Cl. I, Div. 1, Groups A, B, C, D; Class I, Zone 0 and Zone 1, IIC

AEx/Ex dia IIIC T6

Sensor module 2
see note 4

Hazardous Location Installation

1. Install per Canadian Electrical Code, Part I or National Electrical Code (ANSI/NFPA70)
 - max. supply voltage 45 VDC
 - max. ambient temperature: see table
2. Explosionproof conduit seals must be installed within 18 inches of the transmitter housing.
3. Warning: Open circuit before removing cover.
Avertissement : Ouvrir le circuit avant d'enlever le couvercle.
4. Transmitter housing and sensor modules must have the same ground potential (e.g. transmitter housing and sensor modules all mounted to the same metal structure). If potential equalisation can not be achieved by the installation, the devices must be interconnected with a suitable bonding conductor using the external ground connections.
5. Transmitter provides Intrinsically Safe (type of protection 'ia') circuits for connection to and between HP Sensor module 1 and LP Sensor module 2.
6. For Zone classified areas, transmitter housing must be installed in a Class I, Zone 1 hazardous location.
The intrinsically safe sensor modules can be installed in a Class I, Zone 0 (process side) or Zone 1 hazardous location.
7. Sensor modules may only be connected to the transmitter and interconnected to each other.
Any further connections are not allowed.

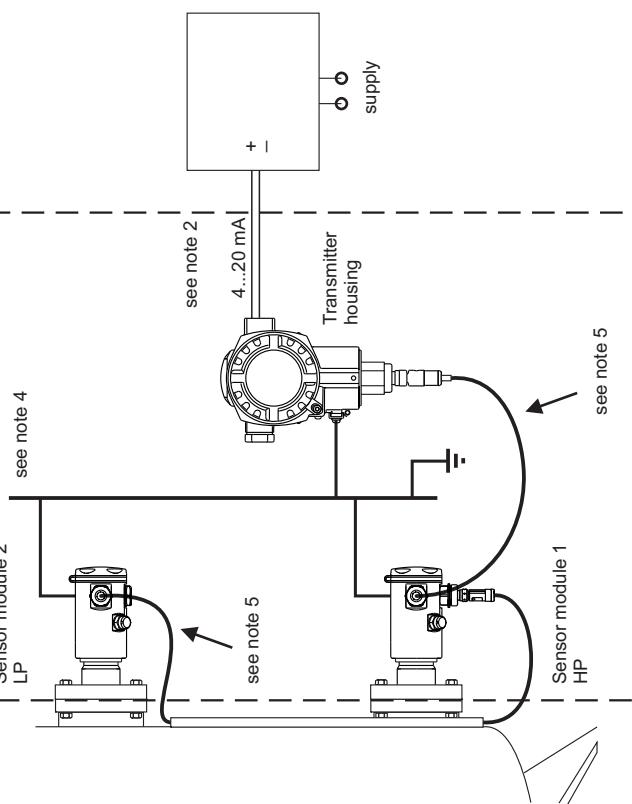


Table: Permissible ambient temperature and temperature code			
Temperature code	Permissible ambient temperature, electronic compartment	Process temperature**	
T6	-40 °C...40 °C	40 bar (580 psi)	-40 °C...+125 °C
T4	-40 °C...70 °C		

XA00631P-A/00/EN/01.12
CCS/FP10
CSA/A 20.12.11



71230751

CSA Control Drawing
XA00631P-A

Deltabar FMD71
4-20 mA HART (XP)

Endress+Hauser

People for Process Automation

* Limitations of the Maximum Working Pressure (MWP) are marked on the nameplate and must be considered!

** Limitations of the process temperature range depending on the used version are specified in the applicable technical information of the manufacturer and must be considered!