

Description of Device Parameters

Proline Cubemass 100

PROFINET

Coriolis flowmeter

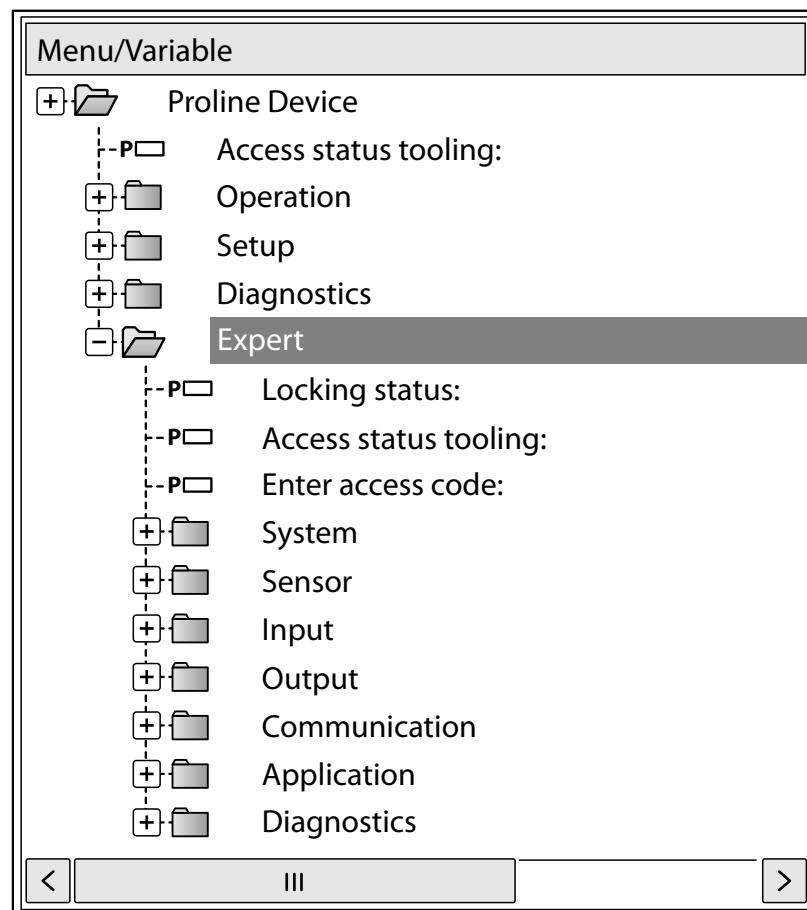


Table of contents

1 Document information	4	
1.1 Document function	4	
1.2 Target group	4	
1.3 Using this document	4	
1.3.1 Information on the document structure	4	
1.3.2 Structure of a parameter description	6	
1.4 Symbols used	6	
1.4.1 Symbols for certain types of information	6	
1.4.2 Symbols in graphics	7	
2 Overview of the Expert operating menu	8	
3 Description of device parameters ...	10	
3.1 "System" submenu	13	
3.1.1 "Display" submenu	13	
3.1.2 "Diagnostic handling" submenu	26	
3.1.3 "Administration" submenu	34	
3.2 "Sensor" submenu	38	
3.2.1 "Measured values" submenu	38	
3.2.2 "System units" submenu	44	
3.2.3 "Process parameters" submenu	58	
3.2.4 "Measurement mode" submenu	65	
3.2.5 "External compensation" submenu	67	
3.2.6 "Calculated values" submenu	72	
3.2.7 "Sensor adjustment" submenu	76	
3.2.8 "Calibration" submenu	86	
3.2.9 "Supervision" submenu	87	
3.3 "Communication" submenu	88	
3.3.1 "Web server" submenu	88	
3.3.2 "PROFINET configuration" submenu	91	
3.3.3 "PROFINET information" submenu	92	
3.4 "Application" submenu	93	
3.4.1 "Totalizer 1 to 3" submenu	94	
3.4.2 "Concentration" submenu	99	
3.5 "Diagnostics" submenu	99	
3.5.1 "Diagnostic list" submenu	102	
3.5.2 "Event logbook" submenu	105	
3.5.3 "Device information" submenu	108	
3.5.4 "I/O module" submenu	111	
3.5.5 "Sensor electronic module" submenu	112	
3.5.6 "Display module" submenu	112	
3.5.7 "Min/max values" submenu	113	
3.5.8 "Heartbeat" submenu	119	
3.5.9 "Simulation" submenu	119	
4 Country-specific factory settings ..	123	
4.1 SI units	123	
4.1.1 System units	123	
4.1.2 Full scale values	123	
4.2		
4.1.3 On value low flow cut off	123	
US units	124	
4.2.1 System units	124	
4.2.2 Full scale values	124	
4.2.3 On value low flow cut off	124	
5 Explanation of abbreviated units ..	126	
5.1 SI units	126	
5.2 US units	126	
5.3 Imperial units	128	
Index	129	

1 Document information

1.1 Document function

The document is part of the Operating Instructions and serves as a reference for parameters, providing a detailed explanation of each individual parameter of the Expert operating menu.


1.2 Target group

The document is aimed at specialists who work with the device over the entire life cycle and perform specific configurations.

1.3 Using this document


1.3.1 Information on the document structure

This document lists the submenus and their parameters according to the structure of the **Expert** menu (→ 8) menu that are available once the "**Operator**" user role or the "**Maintenance**" user role is enabled.

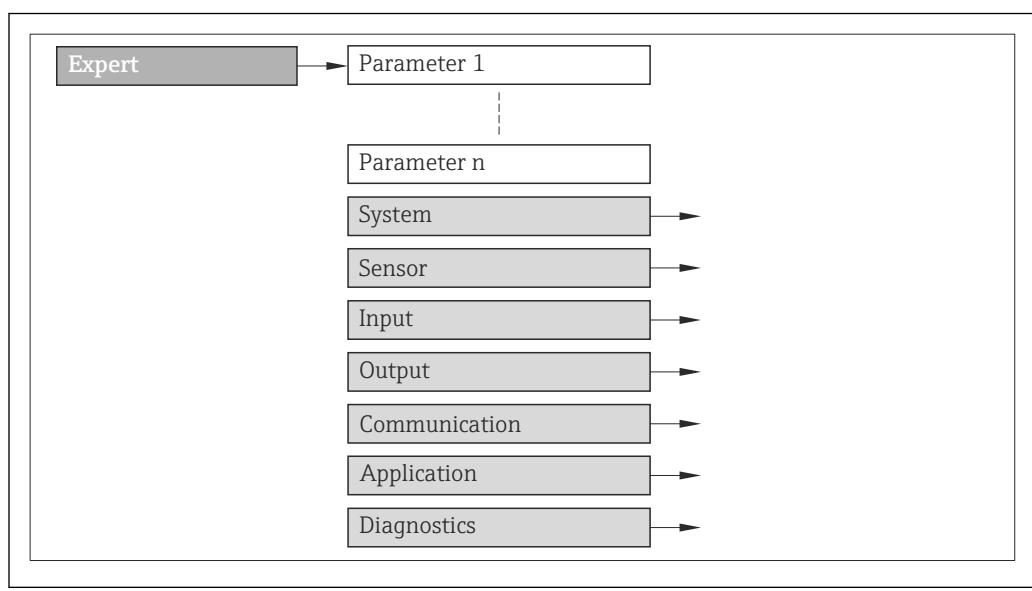

1 Sample graphic

For information on the arrangement of the parameters according to the structure of the **Operation** menu, **Setup** menu, **Diagnostics** menu (→ 99), along with a brief description, see the Operating Instructions for the device.

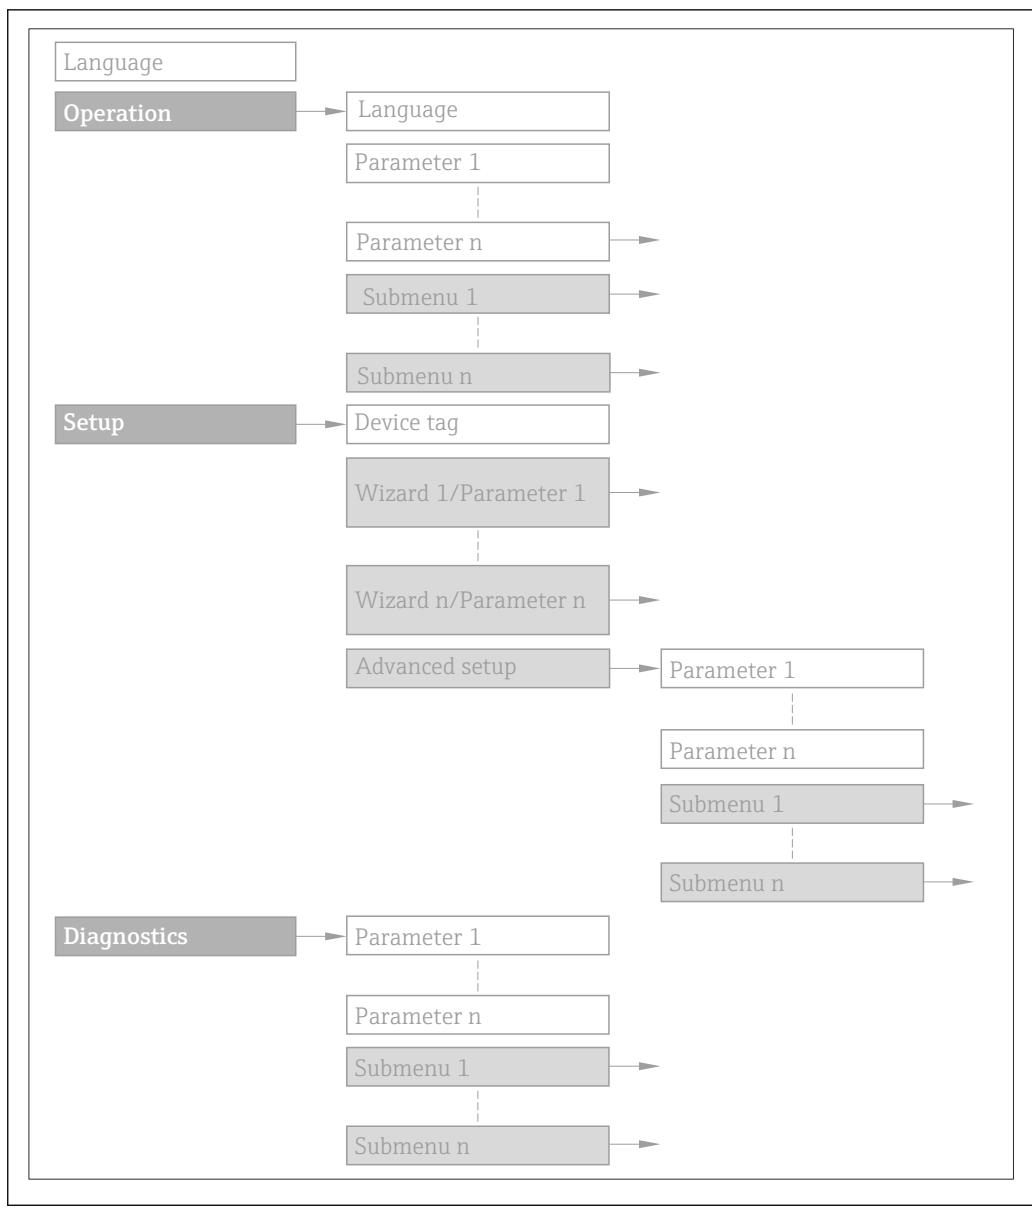

2 Sample graphic

 For information about the operating philosophy, see the "Operating philosophy" chapter in the device's Operating Instructions

1.3.2 Structure of a parameter description

The individual parts of a parameter description are described in the following section:

Complete parameter name	Write-protected parameter = 
Navigation	 Navigation path to the parameter via the local display (direct access code) or Web browser  Navigation path to the parameter via the operating tool The names of the menus, submenus and parameters are abbreviated to the form in which they appear on the display and in the operating tool.
Prerequisite	The parameter is only available under these specific conditions
Description	Description of the parameter function
Selection	List of the individual options for the parameter <ul style="list-style-type: none"> ▪ Option 1 ▪ Option 2
User entry	Input range for the parameter
User interface	Display value/data for the parameter
Factory setting	Default setting ex works
Additional information	Additional explanations (e.g. in examples): <ul style="list-style-type: none"> ▪ On individual options ▪ On display values/data ▪ On the input range ▪ On the factory setting ▪ On the parameter function

1.4 Symbols used

1.4.1 Symbols for certain types of information

Symbol	Meaning
	Tip Indicates additional information.
	Reference to documentation
	Reference to page
	Reference to graphic
	Operation via local display
	Operation via operating tool
	Write-protected parameter

1.4.2 Symbols in graphics

Symbol	Meaning	Symbol	Meaning
1, 2, 3 ...	Item numbers	A, B, C, ...	Views
A-A, B-B, C-C, ...	Sections		

2 Overview of the Expert operating menu

The following table provides an overview of the menu structure of the expert operating menu and its parameters. The page reference indicates where the associated description of the submenu or parameter can be found.

Expert	
Direct access	→ 10
Locking status	→ 11
Access status tooling	→ 12
Enter access code	→ 12
▶ System	→ 13
▶ Display	→ 13
▶ Diagnostic handling	→ 26
▶ Administration	→ 34
▶ Sensor	→ 38
▶ Measured values	→ 38
▶ System units	→ 44
▶ Process parameters	→ 58
▶ Measurement mode	→ 65
▶ External compensation	→ 67
▶ Calculated values	→ 72
▶ Sensor adjustment	→ 76
▶ Calibration	→ 86
▶ Supervision	→ 87
▶ Communication	→ 88
▶ Web server	→ 88

▶ PROFINET configuration	→ 91
▶ PROFINET information	→ 92
▶ Application	→ 93
Reset all totalizers	→ 93
▶ Totalizer 1 to 3	→ 94
▶ Concentration	→ 99
▶ Diagnostics	→ 99
Actual diagnostics	→ 99
Previous diagnostics	→ 100
Operating time from restart	→ 101
Operating time	→ 101
▶ Diagnostic list	→ 102
▶ Event logbook	→ 105
▶ Device information	→ 108
▶ I/O module	→ 111
▶ Sensor electronic module	→ 112
▶ Display module	→ 112
▶ Min/max values	→ 113
▶ Heartbeat	→ 119
▶ Simulation	→ 119

3 Description of device parameters

In the following section, the parameters are listed according to the menu structure of the local display. Specific parameters for the operating tools are included at the appropriate points in the menu structure.

Expert	
Direct access	→ 10
Locking status	→ 11
Access status tooling	→ 12
Enter access code	→ 12
▶ System	→ 13
▶ Sensor	→ 38
▶ Communication	→ 88
▶ Application	→ 93
▶ Diagnostics	→ 99

Direct access



Navigation

Expert → Direct access

Prerequisite

There is a local display with operating elements.

Description

Input of the access code to enable direct access to the desired parameter via the local display. For this reason, each parameter is assigned a parameter number that appears in the navigation view on the right in the header of the selected parameter.

User entry

0 to 65 535

Additional information

User entry

The direct access code consists of a 4-digit number and the channel number, which identifies the channel of a process variable: e.g. 0914-1



- The leading zeros in the direct access code do not have to be entered.
Example: Input of "914" instead of "0914"
- If no channel number is entered, channel 1 is jumped to automatically.
Example: Enter 0914 → **Assign process variable** parameter
- If a different channel is jumped to: Enter the direct access code with the corresponding channel number.
Example: Enter 0914-3 → **Assign process variable** parameter

Locking status

Navigation  Expert → Locking status

Description Displays the active write protection.

User interface

- Hardware locked
- Temporarily locked

Additional information *Display*

If two or more types of write protection are active, the write protection with the highest priority is shown on the local display. In the operating tool all active types of write protection are displayed.

 If additional write protection is active, this restricts the current access authorization even further. The write protection status can be viewed via the **Locking status** parameter (→  11).

"Hardware locked" option (priority 1)

The DIP switch for hardware locking is activated on the main electronics module. This locks write access to the parameters (e.g. via local display or operating tool).

 Information on access authorization is provided in the "User roles and associated access authorization" and "Operating concept" sections of the Operations Instructions for the device.

"Temporarily locked" option (priority 2)

Write access to the parameters is temporarily locked on account of internal processes running in the device (e.g. data upload/download, reset etc.). Once the internal processing has been completed, the parameters can be changed once again.

Access status display

Navigation  Expert → Access stat.disp

Prerequisite A local display is provided.

Description Displays the access authorization to the parameters via the local display.

User interface

- Operator
- Maintenance

Factory setting Operator

Additional information*Description*

If the -symbol appears in front of a parameter, it cannot be modified via the local display with the current access authorization.

 Access authorization can be modified via the **Enter access code** parameter (→  12).

 For information on the **Enter access code** parameter, see the "Disabling write protection via access code" section of the Operating Instructions for the device

 If additional write protection is active, this restricts the current access authorization even further. The write protection status can be viewed via the **Locking status** parameter (→  11).

Display

 Information on access authorization is provided in the "User roles and associated access authorization" and "Operating concept" sections of the Operations Instructions for the device.

Access status tooling**Navigation**

  Expert → Access stat.tool

Description

Displays the access authorization to the parameters via the operating tool or Web browser.

User interface

- Operator
- Maintenance

Factory setting

Maintenance

Additional information*Description*

 Access authorization can be modified via the **Enter access code** parameter (→  12).

 If additional write protection is active, this restricts the current access authorization even further. The write protection status can be viewed via the **Locking status** parameter (→  11).

Display

 Information on access authorization is provided in the "User roles and associated access authorization" and "Operating concept" sections of the Operations Instructions for the device.

Enter access code**Navigation**

  Expert → Ent. access code


Description

Use this function to enter the user-specific release code to remove parameter write protection.


User entry

0 to 9 999

3.1 "System" submenu

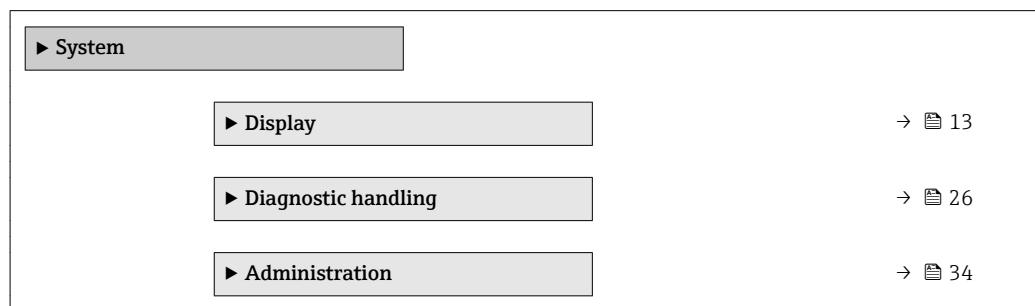Navigation Expert → System

3.1.1 "Display" submenu

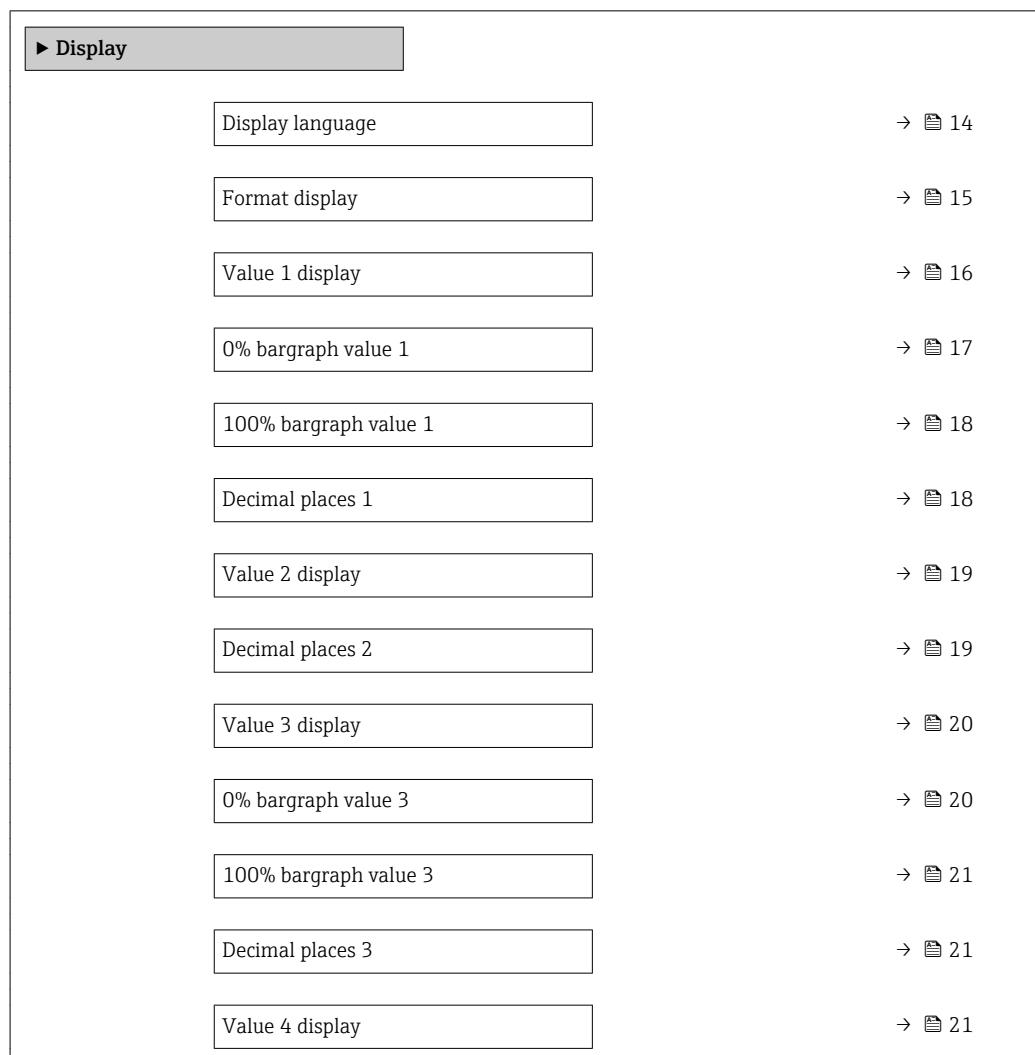Navigation Expert → System → Display

Decimal places 4	→ 22
Display interval	→ 22
Display damping	→ 23
Header	→ 23
Header text	→ 24
Separator	→ 24
Contrast display	→ 25
Backlight	→ 25
Access status display	→ 25

Display language

Navigation

Expert → System → Display → Display language

Prerequisite

A local display is provided.

Description

Use this function to select the configured language on the local display.

Selection

- English
- Deutsch *
- Français *
- Español *
- Italiano *
- Nederlands *
- Portuguesa *
- Polski *
- русский язык (Russian) *
- Svenska *
- Türkçe *
- 中文 (Chinese) *
- 日本語 (Japanese) *
- 한국어 (Korean) *
- Bahasa Indonesia *
- tiếng Việt (Vietnamese) *
- čeština (Czech) *

Factory setting

English (alternatively, the ordered language is preset in the device)

* Visibility depends on order options or device settings

Format display

Navigation

Expert → System → Display → Format display

Prerequisite

A local display is provided.

Description

Use this function to select how the measured value is shown on the local display.

Selection

- 1 value, max. size
- 1 bargraph + 1 value
- 2 values
- 1 value large + 2 values
- 4 values

Factory setting

1 value, max. size

Additional information

Description

The display format (size, bar graph etc.) and number of measured values displayed simultaneously (1 to 4) can be configured. This setting only applies to normal operation.




- The **Value 1 display** parameter (→ 16) to **Value 4 display** parameter (→ 21) are used to specify which measured values are shown on the local display and in what order.
- If more measured values are specified than the display mode selected permits, then the values alternate on the device display. The display time until the next change is configured via the **Display interval** parameter (→ 22).

Possible measured values shown on the local display:

"1 value, max. size" option



"1 bargraph + 1 value" option

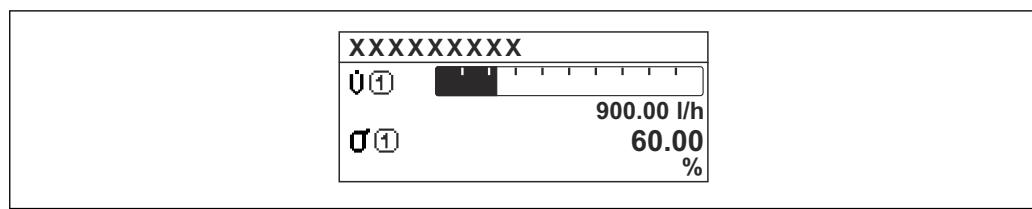

"2 values" option

XXXXXXXXXX		
U (1)	900.00	I/h
σ (1)	60.00	%

A0016531



"1 value large + 2 values" option

XXXXXXXXXX		
U (1)	900.00	I/h
σ (1)	60.00%	
W (1)	5.98 kWh/Nm ³	

A0016532

"4 values" option

XXXXXXXXXX		
U (1)	900.00	I/h
σ (1)	60.00	%
W (1)	5.98	kWh/Nm ³
Σ (1)	213.94	l

A0016533

Value 1 display



Navigation

Expert → System → Display → Value 1 display

Prerequisite

A local display is provided.

Description

Use this function to select one of the measured values to be shown on the local display.

Selection

- Mass flow
- Volume flow
- Corrected volume flow
- Target mass flow *
- Carrier mass flow *
- Density
- Reference density *
- Concentration *
- Temperature
- Carrier pipe temperature *
- Electronic temperature
- Oscillation frequency 0
- Frequency fluctuation 0

* Visibility depends on order options or device settings

- Oscillation amplitude 0 *
- Frequency fluctuation 0
- Oscillation damping 0
- Tube damping fluctuation 0
- Signal asymmetry
- Exciter current 0
- None
- Totalizer 1
- Totalizer 2
- Totalizer 3

Factory setting Mass flow

Additional information *Description*

If several measured values are displayed at once, the measured value selected here will be the first value to be displayed. The value is only displayed during normal operation.

 The **Format display** parameter (→ 15) is used to specify how many measured values are displayed simultaneously and how.

Selection

 The unit of the displayed measured value is taken from the **System units** submenu (→ 44).

- Oscillation frequency

Displays the current oscillation frequency of the measuring tubes. This frequency depends on the density of the medium.

- Oscillation amplitude

Displays the relative oscillation amplitude of the measuring tubes in relation to the preset value. This value is 100 % under optimum conditions. The value can decrease in the event of low 4 to 20 mA loop currents and/or difficult media (two-phase, high viscosity or high gas velocity).

- Oscillation damping

Displays the current oscillation damping. Oscillation damping is an indicator of the sensor's current need for excitation power.

- Signal asymmetry

Displays the relative difference between the oscillation amplitude at the inlet and outlet of the sensor. The measured value is the result of production tolerances of the sensor coils and should remain constant over the life time of a sensor.

0% bargraph value 1



Navigation

Expert → System → Display → 0% bargraph 1

Prerequisite

A local display is provided.

Description

Use this function to enter the 0% bar graph value to be shown on the display for the measured value 1.

User entry

Signed floating-point number

* Visibility depends on order options or device settings

Factory setting	Country-specific: ■ 0 kg/h ■ 0 lb/min
Additional information	<p><i>Description</i></p> <p> The Format display parameter (→ 15) is used to specify that the measured value is to be displayed as a bar graph.</p> <p><i>User entry</i></p> <p> The unit of the displayed measured value is taken from the System units submenu (→ 44).</p>

100% bargraph value 1



Navigation	  Expert → System → Display → 100% bargraph 1
Prerequisite	A local display is provided.
Description	Use this function to enter the 100% bar graph value to be shown on the display for the measured value 1.
User entry	Signed floating-point number
Factory setting	Depends on country and nominal diameter → 123
Additional information	<p><i>Description</i></p> <p> The Format display parameter (→ 15) is used to specify that the measured value is to be displayed as a bar graph.</p> <p><i>User entry</i></p> <p> The unit of the displayed measured value is taken from the System units submenu (→ 44).</p>

Decimal places 1



Navigation	  Expert → System → Display → Decimal places 1
Prerequisite	A measured value is specified in the Value 1 display parameter (→ 16).
Description	Use this function to select the number of decimal places for measured value 1.
Selection	<ul style="list-style-type: none">■ X■ X.X■ X.XX■ X.XXX■ X.XXXX
Factory setting	X.XX

Additional information*Description*

This setting does not affect the measuring or computational accuracy of the device. The arrow displayed between the measured value and the unit indicates that the device computes with more digits than are shown on the local display.

Value 2 display**Navigation**

Expert → System → Display → Value 2 display

Prerequisite

A local display is provided.

Description

Use this function to select one of the measured values to be shown on the local display.

Selection

For the picklist, see the **Value 1 display** parameter (→ 16)

Factory setting

None

Additional information*Description*

If several measured values are displayed at once, the measured value selected here will be the second value to be displayed. The value is only displayed during normal operation.



The **Format display** parameter (→ 15) is used to specify how many measured values are displayed simultaneously and how.

Selection

The unit of the displayed measured value is taken from the **System units** submenu (→ 44).

Decimal places 2**Navigation**

Expert → System → Display → Decimal places 2

Prerequisite

A measured value is specified in the **Value 2 display** parameter (→ 19).

Description

Use this function to select the number of decimal places for measured value 2.

Selection

- X
- X.X
- X.XX
- X.XXX
- X.XXXX

Factory setting

X.XX

Additional information*Description*

This setting does not affect the measuring or computational accuracy of the device. The arrow displayed between the measured value and the unit indicates that the device computes with more digits than are shown on the local display.

Value 3 display

Navigation	Expert → System → Display → Value 3 display
Prerequisite	A local display is provided.
Description	Use this function to select one of the measured values to be shown on the local display.
Selection	Picklist, see Value 1 display parameter (→ 16)
Factory setting	None
Additional information	<i>Description</i> If several measured values are displayed at once, the measured value selected here will be the third value to be displayed. The value is only displayed during normal operation. The Format display parameter (→ 15) is used to specify how many measured values are displayed simultaneously and how. <i>Selection</i> The unit of the displayed measured value is taken from the System units submenu (→ 44).

0% bargraph value 3

Navigation	Expert → System → Display → 0% bargraph 3
Prerequisite	A selection has been made in the Value 3 display parameter (→ 20).
Description	Use this function to enter the 0% bar graph value to be shown on the display for the measured value 3.
User entry	Signed floating-point number
Factory setting	Country-specific: <ul style="list-style-type: none">▪ 0 kg/h▪ 0 lb/min
Additional information	<i>Description</i> The Format display parameter (→ 15) is used to specify that the measured value is to be displayed as a bar graph. <i>User entry</i> The unit of the displayed measured value is taken from the System units submenu (→ 44).

100% bargraph value 3



Navigation	Expert → System → Display → 100% bargraph 3
Prerequisite	A selection was made in the Value 3 display parameter (→ 20).
Description	Use this function to enter the 100% bar graph value to be shown on the display for the measured value 3.
User entry	Signed floating-point number
Factory setting	0
Additional information	<i>Description</i> The Format display parameter (→ 15) is used to specify that the measured value is to be displayed as a bar graph. <i>User entry</i> The unit of the displayed measured value is taken from the System units submenu (→ 44).

Decimal places 3



Navigation	Expert → System → Display → Decimal places 3
Prerequisite	A measured value is specified in the Value 3 display parameter (→ 20).
Description	Use this function to select the number of decimal places for measured value 3.
Selection	<ul style="list-style-type: none">■ X■ X.X■ X.XX■ X.XXX■ X.XXXX
Factory setting	X.XX
Additional information	<i>Description</i> This setting does not affect the measuring or computational accuracy of the device. The arrow displayed between the measured value and the unit indicates that the device computes with more digits than are shown on the local display.

Value 4 display



Navigation	Expert → System → Display → Value 4 display
Prerequisite	A local display is provided.

Description Use this function to select one of the measured values to be shown on the local display.

Selection Picklist, see **Value 1 display** parameter (→ 16)

Factory setting None

Additional information *Description*

If several measured values are displayed at once, the measured value selected here will be the fourth value to be displayed. The value is only displayed during normal operation.

i The **Format display** parameter (→ 15) is used to specify how many measured values are displayed simultaneously and how.

Selection

i The unit of the displayed measured value is taken from the **System units** submenu (→ 44).

Decimal places 4



Navigation Expert → System → Display → Decimal places 4

Prerequisite A measured value is specified in the **Value 4 display** parameter (→ 21).

Description Use this function to select the number of decimal places for measured value 4.

Selection

- X
- X.X
- X.XX
- X.XXX
- X.XXXX

Factory setting X.XX

Additional information *Description*

i This setting does not affect the measuring or computational accuracy of the device. The arrow displayed between the measured value and the unit indicates that the device computes with more digits than are shown on the local display.

Display interval

Navigation Expert → System → Display → Display interval

Prerequisite A local display is provided.

Description Use this function to enter the length of time the measured values are displayed if the values alternate on the display.

User entry 1 to 10 s

Factory setting 5 s

Additional information *Description*

This type of alternating display only occurs automatically if the number of measured values defined exceeds the number of values the selected display format can display simultaneously.

-  ■ The **Value 1 display** parameter (→ 16) to **Value 4 display** parameter (→ 21) are used to specify which measured values are shown on the local display.
■ The display format of the displayed measured values is specified using the **Format display** parameter (→ 15).

Display damping



Navigation  Expert → System → Display → Display damping

Prerequisite A local display is provided.

Description Use this function to enter the reaction time of the local display to fluctuations in the measured value caused by process conditions.

User entry 0.0 to 999.9 s

Factory setting 0.0 s

Additional information *User entry*

A time constant is entered:

- If a low time constant is entered, the display reacts particularly quickly to fluctuating measured variables.
- On the other hand, the display reacts more slowly if a high time constant is entered.

Header



Navigation  Expert → System → Display → Header

Prerequisite A local display is provided.

Description Use this function to select the contents of the header of the local display.


Selection

- Device tag
- Free text

Factory setting Device tag

Additional information *Description*

The header text only appears during normal operation.

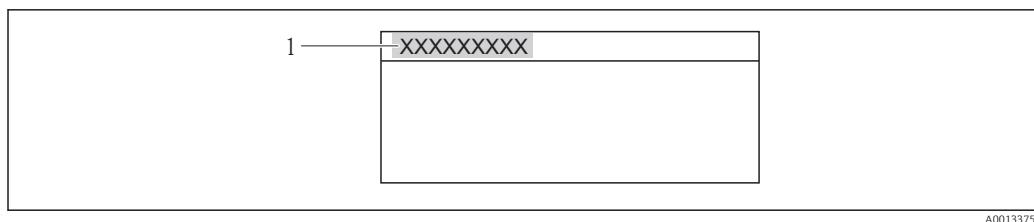

A0013375

1 Position of the header text on the display

Selection

Free text

Is defined in the **Header text** parameter (→ 24).

Header text



Navigation

Expert → System → Display → Header text

Prerequisite

The **Free text** option is selected in the **Header** parameter (→ 23).

Description

Use this function to enter a customer-specific text for the header of the local display.

User entry


Max. 12 characters such as letters, numbers or special characters (e.g. @, %, /)

Factory setting

Additional information

Description

The header text only appears during normal operation.

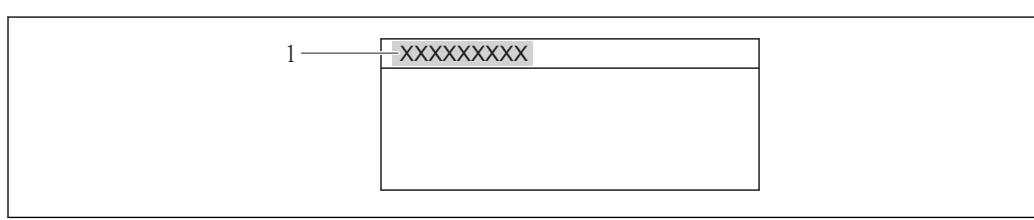

A0013375

1 Position of the header text on the display

User entry

The number of characters displayed depends on the characters used.

Separator



Navigation

Expert → System → Display → Separator

Prerequisite

A local display is provided.

Description

Use this function to select the decimal separator.

Selection

- . (point)
- , (comma)

Factory setting

. (point)

Contrast display

Navigation

Expert → System → Display → Contrast display

Prerequisite

A local display is provided.

Description

Use this function to enter a value to adapt the display contrast to the ambient conditions (e.g. the lighting or viewing angle).

User entry

20 to 80 %

Factory setting

Depends on the display

Backlight

Navigation

Expert → System → Display → Backlight

Prerequisite

Order code for "Display; operation", option E "SD03 4-line, illum.; touch control + data backup function"

Description

Use this function to switch the backlight of the local display on and off.

Selection

- Disable
- Enable

Factory setting

Enable

Access status display

Navigation

Expert → System → Display → Access stat.disp

Prerequisite

A local display is provided.

Description

Displays the access authorization to the parameters via the local display.

User interface

- Operator
- Maintenance

Factory setting

Operator

Additional information*Description*

If the -symbol appears in front of a parameter, it cannot be modified via the local display with the current access authorization.

 Access authorization can be modified via the **Enter access code** parameter (→ [2 12](#)).

 For information on the **Enter access code** parameter, see the "Disabling write protection via access code" section of the Operating Instructions for the device

 If additional write protection is active, this restricts the current access authorization even further. The write protection status can be viewed via the **Locking status** parameter (→ [2 11](#)).


Display

 Information on access authorization is provided in the "User roles and associated access authorization" and "Operating concept" sections of the Operations Instructions for the device.

3.1.2 "Diagnostic handling" submenu

Navigation

  Expert → System → Diagn. handling

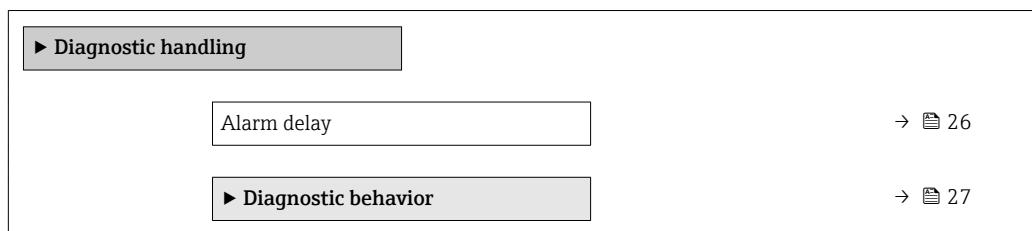

Alarm delay

*Navigation*

  Expert → System → Diagn. handling → Alarm delay

Description

Use this function to enter the time interval until the device generates a diagnostic message.

 The diagnostic message is reset without a time delay.

User entry

0 to 60 s

Factory setting

0 s

*Additional information**Effect*

This setting affects the following diagnostic messages:

- 046 Sensor limit exceeded
- 140 Sensor signal
- 144 Measuring error too high
- 190 Special event 1
- 191 Special event 5

- 192 Special event 9
- 830 Sensor temperature too high
- 831 Sensor temperature too low
- 832 Electronic temperature too high
- 833 Electronic temperature too low
- 834 Process temperature too high
- 835 Process temperature too low
- 843 Process limit
- 910 Tubes not oscillating
- 912 Medium inhomogeneous
- 913 Medium unsuitable
- 944 Monitoring failed
- 990 Special event 4
- 991 Special event 8
- 992 Special event 12

"Diagnostic behavior" submenu

Each item of diagnostic information is assigned a specific diagnostic behavior at the factory. The user can change this assignment for specific diagnostic information in the **Diagnostic behavior** submenu (→ [27](#)).

The following options are available in the **Assign behavior of diagnostic no. xxx** parameters:

Diagnostic behavior	Description
Alarm	The device stops measurement. The totalizers assume the defined alarm condition. A diagnostic message is generated.
Warning	The device continues to measure. The measured value output via PROFINET and the totalizers are not affected. A diagnostic message is generated.
Logbook entry only	The device continues to measure. The diagnostic message is displayed only in the Event logbook submenu (→ 105) (Event list submenu (→ 107)) and not in alternation with the operational display.
Off	The diagnostic event is ignored, and no diagnostic message is generated or entered.

 For a list of all the diagnostic events, see the Operating Instructions for the device.

Navigation

  Expert → System → Diagn. handling → Diagn. behavior

► Diagnostic behavior

Assign behavior of diagnostic no. 140	→ 28
Assign behavior of diagnostic no. 046	→ 28
Assign behavior of diagnostic no. 144	→ 29
Assign behavior of diagnostic no. 832	→ 29
Assign behavior of diagnostic no. 833	→ 30

Assign behavior of diagnostic no. 834	→ 30
Assign behavior of diagnostic no. 835	→ 30
Assign behavior of diagnostic no. 912	→ 31
Assign behavior of diagnostic no. 913	→ 31
Assign behavior of diagnostic no. 944	→ 31
Assign behavior of diagnostic no. 948	→ 32
Assign behavior of diagnostic no. 192	→ 32
Assign behavior of diagnostic no. 274	→ 32
Assign behavior of diagnostic no. 392	→ 33
Assign behavior of diagnostic no. 592	→ 33
Assign behavior of diagnostic no. 992	→ 33

Assign behavior of diagnostic no. 140 (Sensor signal)



Navigation

Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 140

Description

Use this function to change the diagnostic behavior of the diagnostic message **140 Sensor signal**.

Selection

- Off
- Alarm
- Warning
- Logbook entry only

Factory setting

Warning

Additional information

For a detailed description of the options available, see

Assign behavior of diagnostic no. 046 (Sensor limit exceeded)



Navigation

Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 046

Description

Use this function to change the diagnostic behavior of the diagnostic message **046 Sensor limit exceeded**.

Selection	<ul style="list-style-type: none">■ Off■ Alarm■ Warning■ Logbook entry only
Factory setting	Warning
Additional information	 For a detailed description of the options available, see

Assign behavior of diagnostic no. 144 (Measuring error too high)



Navigation	  Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 144
Description	Use this function to change the diagnostic behavior of the diagnostic message 144 Measuring error too high.
Selection	<ul style="list-style-type: none">■ Off■ Alarm■ Warning■ Logbook entry only
Factory setting	Alarm
Additional information	 For a detailed description of the options available, see

Assign behavior of diagnostic no. 832 (Electronic temperature too high)



Navigation	  Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 832
Description	Use this function to change the diagnostic behavior of the diagnostic message 832 Electronic temperature too high.
Selection	<ul style="list-style-type: none">■ Off■ Alarm■ Warning■ Logbook entry only
Factory setting	Warning
Additional information	 For a detailed description of the options available, see

Assign behavior of diagnostic no. 833 (Electronic temperature too low)

Navigation	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 833
Description	Use this function to change the diagnostic behavior of the diagnostic message 833 Electronic temperature too low .
Selection	<ul style="list-style-type: none">▪ Off▪ Alarm▪ Warning▪ Logbook entry only
Factory setting	Warning
Additional information	For a detailed description of the options available, see

Assign behavior of diagnostic no. 834 (Process temperature too high)

Navigation	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 834
Description	Use this function to change the diagnostic behavior of the diagnostic message 834 Process temperature too high .
Selection	<ul style="list-style-type: none">▪ Off▪ Alarm▪ Warning▪ Logbook entry only
Factory setting	Warning
Additional information	For a detailed description of the options available, see

Assign behavior of diagnostic no. 835 (Process temperature too low)

Navigation	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 835
Description	Use this function to change the diagnostic behavior of the diagnostic message 835 Process temperature too low .
Selection	<ul style="list-style-type: none">▪ Off▪ Alarm▪ Warning▪ Logbook entry only
Factory setting	Warning
Additional information	For a detailed description of the options available, see

Assign behavior of diagnostic no. 912 (Medium inhomogeneous)



Navigation	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 912
Description	Use this function to change the diagnostic behavior of the diagnostic message 912 Medium inhomogeneous.
Selection	<ul style="list-style-type: none">▪ Off▪ Alarm▪ Warning▪ Logbook entry only
Factory setting	Warning
Additional information	For a detailed description of the options available, see

Assign behavior of diagnostic no. 913 (Medium unsuitable)



Navigation	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 913
Description	Use this function to change the diagnostic behavior of the diagnostic message 913 Medium unsuitable.
Selection	<ul style="list-style-type: none">▪ Off▪ Alarm▪ Warning▪ Logbook entry only
Factory setting	Warning
Additional information	For a detailed description of the options available, see

Assign behavior of diagnostic no. 944 (Monitoring failed)



Navigation	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 944
Description	Use this function to change the diagnostic behavior of the diagnostic message 944 Monitoring failed.
Selection	<ul style="list-style-type: none">▪ Off▪ Alarm▪ Warning▪ Logbook entry only
Factory setting	Warning
Additional information	For a detailed description of the options available, see

Assign behavior of diagnostic no. 948 (Tube damping too high)

Navigation	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 948
Description	Use this function to change the diagnostic behavior of the diagnostic message 948 Tube damping too high .
Selection	<ul style="list-style-type: none">▪ Off▪ Alarm▪ Warning▪ Logbook entry only
Factory setting	Warning
Additional information	For a detailed description of the options available, see

Assign behavior of diagnostic no. 192 (Special event 9)

Navigation	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 192
Description	Use this function to change the diagnostic behavior of the diagnostic message 192 Special event 9 .
Selection	<ul style="list-style-type: none">▪ Off▪ Alarm▪ Warning▪ Logbook entry only
Factory setting	Warning
Additional information	For a detailed description of the options available, see

Assign behavior of diagnostic no. 274 (Main electronic failure)

Navigation	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 274
Description	Use this function to change the diagnostic behavior of the diagnostic message 274 Main electronic failure .
Selection	<ul style="list-style-type: none">▪ Off▪ Alarm▪ Warning▪ Logbook entry only
Factory setting	Warning
Additional information	For a detailed description of the options available, see

Assign behavior of diagnostic no. 392 (Special event 10)



Navigation	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 392
Description	Use this function to change the diagnostic behavior of the diagnostic message 392 Special event 10 .
Selection	<ul style="list-style-type: none">▪ Off▪ Alarm▪ Warning▪ Logbook entry only
Factory setting	Warning
Additional information	For a detailed description of the options available, see

Assign behavior of diagnostic no. 592 (Special event 11)



Navigation	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 592
Description	Use this function to change the diagnostic behavior of the diagnostic message 592 Special event 11 .
Selection	<ul style="list-style-type: none">▪ Off▪ Alarm▪ Warning▪ Logbook entry only
Factory setting	Warning
Additional information	For a detailed description of the options available, see

Assign behavior of diagnostic no. 992 (Special event 12)



Navigation	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 992
Description	Use this function to change the diagnostic behavior of the diagnostic message 992 Special event 12 .
Selection	<ul style="list-style-type: none">▪ Off▪ Alarm▪ Warning▪ Logbook entry only
Factory setting	Warning


Additional information

For a detailed description of the options available, see

3.1.3 "Administration" submenu

Navigation

Expert → System → Administration

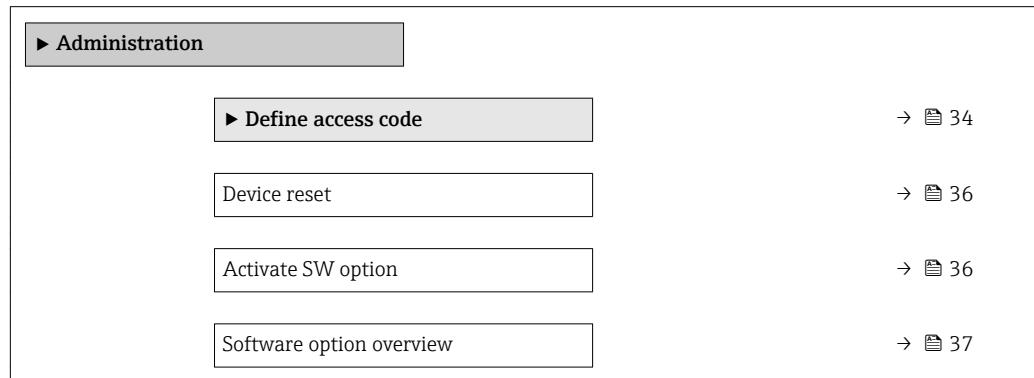


"Define access code" wizard

The **Define access code** wizard (→ 34) is only available when operating via the local display or Web browser.

If operating via the operating tool, the **Define access code** parameter (→ 35) can be found directly in the **Administration** submenu. There is no **Confirm access code** parameter if the device is operated via the operating tool.

Navigation

Expert → System → Administration → Def. access code

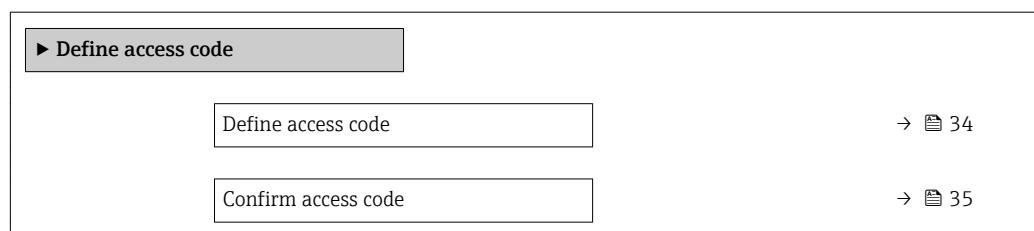

Define access code



Navigation

Expert → System → Administration → Def. access code → Def. access code

Description

Use this function to enter a user-specific release code to restrict write-access to the parameters. This protects the configuration of the device against any inadvertent changes via the local display or Web browser.

User entry

0 to 9 999

Factory setting

0

Additional information*Description*

The write protection affects all parameters in the document marked with the  symbol.

On the local display, the  symbol in front of a parameter indicates that the parameter is write-protected.

The parameters that cannot be write-accessed are grayed out in the Web browser.

 Once the access code has been defined, write-protected parameters can only be modified if the access code is entered in the **Enter access code** parameter (→  12).

 If you lose the access code, please contact your Endress+Hauser Sales Center.

User entry

A message is displayed if the access code is not in the input range.

Factory setting

If the factory setting is not changed or **0** is defined as the access code, the parameters are not write-protected and the device configuration data can be modified. The user is logged on in the "**Maintenance**" role.

Confirm access code**Navigation**

 Expert → System → Administration → Def. access code → Confirm code

Description

Enter the defined release code a second time to confirm the release code.

User entry

0 to 9 999

Factory setting

0

Additional parameters in the "Administration" submenu**Define access code****Navigation**

 Expert → System → Administration → Def. access code

Description

Use this function to enter a user-specific release code to restrict write-access to the parameters. This protects the configuration of the device against any inadvertent changes via the operating tool.

User entry

0 to 9 999

Factory setting

0

Additional information*Description*

The write protection affects all parameters in the document marked with the  symbol.

 Once the access code has been defined, write-protected parameters can only be modified if the access code is entered in the **Enter access code** parameter (→  12).

 If you lose the access code, please contact your Endress+Hauser Sales Center.

User entry

A message is displayed if the access code is not in the input range.

Factory setting

If the factory setting is not changed or **0** is defined as the access code, the parameters are not write-protected and the device configuration data can be modified. The user is logged on in the "**Maintenance**" role.

Device reset**Navigation**

  Expert → System → Administration → Device reset

Description

Use this function to choose whether to reset the device configuration - either entirely or in part - to a defined state.

Selection

- Cancel
- To delivery settings
- Restart device
- Delete factory data

Factory setting

Cancel

Additional information*"Cancel" option*

No action is executed and the user exits the parameter.

"To delivery settings" option

Every parameter for which a customer-specific default setting was ordered is reset to this customer-specific value. All other parameters are reset to the factory setting.

 This option is not visible if no customer-specific settings have been ordered.

"Restart device" option

The restart resets every parameter whose data are in the volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.

Activate SW option**Navigation**

  Expert → System → Administration → Activate SW opt.

Description

Use this function to enter an activation code to enable an additional, ordered software option.

User entry	Max. 10-digit string consisting of numbers.
Factory setting	0
Additional information	<p><i>User entry</i></p> <p> Endress+Hauser provides the corresponding activation code for the software option with the order.</p> <p>NOTICE! This activation code varies depending on the measuring device and the software option. If an incorrect or invalid code is entered, this can result in the loss of software options that are already been activated. After commissioning the measuring device: in this parameter only enter activation codes which Endress+Hauser has provided (e.g. when a new software option was ordered). If an incorrect or invalid activation code is entered, enter the activation code from the parameter protocol again and contact your Endress+Hauser sales organization, quoting the serial number of your device.</p>
	<p><i>Example for a software option</i></p> <p>Order code for "Application package", option EB "Heartbeat Verification + Monitoring"</p>
	<p><i>Web browser</i></p> <p> Once a software option has been activated, the page must be loaded again in the Web browser.</p>

Software option overview

Navigation	 Expert → System → Administration → SW option overv.
Description	Displays all the software options that are enabled in the device.
User interface	<ul style="list-style-type: none"> ■ Heartbeat Verification ■ Heartbeat Monitoring ■ Concentration
Additional information	<p><i>Description</i></p> <p>Displays all the options that are available if ordered by the customer.</p> <p><i>"Heartbeat Verification" option and "Heartbeat Monitoring" option</i></p> <p>Order code for "Application package", option EB "Heartbeat Verification + Monitoring"</p> <p><i>"Concentration" option</i></p> <p>Order code for "Application package", option ED "Concentration" and option EF "Special density + concentration"</p>

3.2 "Sensor" submenu

Navigation

Expert → Sensor

► Sensor	
► Measured values	→ 38
► System units	→ 44
► Process parameters	→ 58
► Measurement mode	→ 65
► External compensation	→ 67
► Calculated values	→ 72
► Sensor adjustment	→ 76
► Calibration	→ 86
► Supervision	→ 87

3.2.1 "Measured values" submenu

Navigation

Expert → Sensor → Measured val.

► Measured values	
► Process variables	→ 38
► Totalizer	→ 42

"Process variables" submenu

Navigation

Expert → Sensor → Measured val. → Process variab.

► Process variables	
Mass flow	→ 39
Volume flow	→ 39
Corrected volume flow	→ 39
Density	→ 40

Reference density	→ 40
Temperature	→ 40
Pressure value	→ 41
Concentration	→ 41
Target mass flow	→ 41
Carrier mass flow	→ 42

Mass flow

Navigation	Expert → Sensor → Measured val. → Process variab. → Mass flow
Description	Displays the mass flow that is currently measured.
User interface	Signed floating-point number
Additional information	<i>Dependency</i>
	The unit is taken from the Mass flow unit parameter (→ 44)

Volume flow

Navigation	Expert → Sensor → Measured val. → Process variab. → Volume flow
Description	Displays the volume flow currently calculated.
User interface	Signed floating-point number
Additional information	<i>Dependency</i>
	The unit is taken from the Volume flow unit parameter (→ 46)

Corrected volume flow

Navigation	Expert → Sensor → Measured val. → Process variab. → Correct.vol.flow
Description	Displays the corrected volume flow currently measured.
User interface	Signed floating-point number

Additional information*Dependency*

The unit is taken from the **Corrected volume flow unit** parameter (→ [47](#))

Density**Navigation**

Expert → Sensor → Measured val. → Process variab. → Density

Description

Displays the density currently measured.

User interface

Signed floating-point number

Additional information*Dependency*

The unit is taken from the **Density unit** parameter (→ [49](#))

Reference density**Navigation**

Expert → Sensor → Measured val. → Process variab. → Ref.density

Description

Displays the reference density currently calculated.

User interface

Signed floating-point number

Additional information*Dependency*

The unit is taken from the **Reference density unit** parameter (→ [49](#))

Temperature**Navigation**

Expert → Sensor → Measured val. → Process variab. → Temperature

Description

Displays the medium temperature currently measured.

User interface

Signed floating-point number

Additional information*Dependency*

The unit is taken from the **Temperature unit** parameter (→ [50](#))

Pressure value

Navigation	  Expert → Sensor → Measured val. → Process variab. → Pressure value
Description	Displays the fixed or external pressure value.
User interface	Signed floating-point number
Additional information	<i>Dependency</i>  The unit is taken from the Pressure unit parameter (→  50)

Concentration

Navigation	  Expert → Sensor → Measured val. → Process variab. → Concentration
Prerequisite	For the following order code: "Application package", option ED "Concentration"
	 The software options currently enabled are displayed in the Software option overview parameter (→  37).
Description	Displays the concentration currently calculated.
User interface	Signed floating-point number
Additional information	<i>Dependency</i>  The unit is taken from the Concentration unit parameter.

Target mass flow


Navigation	  Expert → Sensor → Measured val. → Process variab. → Target mass flow
Prerequisite	With the following conditions: ■ Order code for "Application package", option ED "Concentration" ■ The WT-% option or the User conc. option is selected in the Concentration unit parameter.
	 The software options currently enabled are displayed in the Software option overview parameter (→  37).
Description	Displays the mass flow currently measured for the target medium.
User interface	Signed floating-point number
Additional information	<i>Dependency</i>  The unit is taken from the Mass flow unit parameter (→  44)

Carrier mass flow

Navigation	  Expert → Sensor → Measured val. → Process variab. → Carrier mass fl.
Prerequisite	With the following conditions: <ul style="list-style-type: none"> ■ Order code for "Application package", option ED "Concentration" ■ The WT-% option or the User conc. option is selected in the Concentration unit parameter. <p> The software options currently enabled are displayed in the Software option overview parameter (→  37).</p>
Description	Displays the mass flow currently measured for the carrier medium.
User interface	Signed floating-point number
Additional information	<i>Dependency</i>  The unit is taken from the Mass flow unit parameter (→  44)

"Totalizer" submenu

Navigation   Expert → Sensor → Measured val. → Totalizer

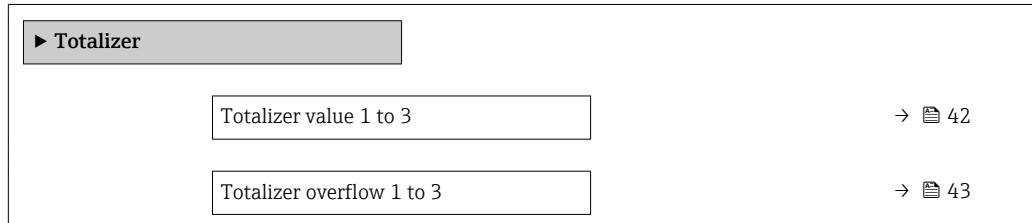

Totalizer value 1 to 3



Navigation   Expert → Sensor → Measured val. → Totalizer → Totalizer val. 1 to 3

Prerequisite	One of the following options is selected in the Assign process variable parameter (→  94) of the Totalizer 1 to 3 submenu: <ul style="list-style-type: none"> ■ Volume flow ■ Mass flow ■ Corrected volume flow ■ Target mass flow [*] ■ Carrier mass flow [*]
Description	Displays the current totalizer reading.
User interface	Signed floating-point number

* Visibility depends on order options or device settings

Additional information*Description*

As it is only possible to display a maximum of 7 digits, the current counter value is the sum of the totalizer value and the overflow value from the **Totalizer overflow 1 to 3** parameter if the display range is exceeded.

 In the event of an error, the totalizer adopts the mode defined in the **Failure mode** parameter (→ 98).

Display

The value of the process variable totalized since measuring began can be positive or negative. This depends on the settings in the **Totalizer operation mode** parameter (→ 96).

 The unit of the selected process variable is specified for the totalizer in the **Unit totalizer** parameter (→ 95).

Example

Calculation of the current totalizer reading when the value exceeds the 7-digit display range:

- Value in the **Totalizer value 1** parameter: 196 845.7 m³
- Value in the **Totalizer overflow 1** parameter: 1 · 10⁶ (1 overflow) = 1 000 000 [m³]
- Current totalizer reading: 1 196 845.7 m³

Totalizer overflow 1 to 3**Navigation**

 Expert → Sensor → Measured val. → Totalizer → Tot. overflow 1 to 3

Prerequisite

One of the following options is selected in the **Assign process variable** parameter (→ 94) of the **Totalizer 1 to 3** submenu:

- Volume flow
- Mass flow
- Corrected volume flow
- Target mass flow *
- Carrier mass flow *

Description

Displays the current totalizer overflow.

User interface

Integer with sign

Additional information*Description*

If the current reading has more than 7 digits, which is the maximum value range that can be displayed, the value above this range is given as an overflow. The current totalizer value is therefore the sum of the overflow value and the totalizer value from the **Totalizer value 1 to 3** parameter

Display

 The unit of the selected process variable is specified for the totalizer in the **Unit totalizer** parameter (→ 95).

* Visibility depends on order options or device settings

Example

Calculation of the current totalizer reading when the value exceeds the 7-digit display range:

- Value in the **Totalizer value 1** parameter: 196 845.7 m³
- Value in the **Totalizer overflow 1** parameter: $2 \cdot 10^6$ (2 overflows) = 2 000 000 [m³]
- Current totalizer reading: 2 196 845.7 m³

3.2.2 "System units" submenu

Navigation

☰ ☰ Expert → Sensor → System units

► System units	
Mass flow unit	→ ☰ 44
Mass unit	→ ☰ 45
Volume flow unit	→ ☰ 46
Volume unit	→ ☰ 47
Corrected volume flow unit	→ ☰ 47
Corrected volume unit	→ ☰ 48
Density unit	→ ☰ 49
Reference density unit	→ ☰ 49
Temperature unit	→ ☰ 50
Pressure unit	→ ☰ 50
Date/time format	→ ☰ 51
► User-specific units	→ ☰ 52

Mass flow unit



Navigation

☰ ☰ Expert → Sensor → System units → Mass flow unit

Description

Use this function to select the unit for the mass flow.

Selection	<i>SI units</i> <ul style="list-style-type: none"> ■ g/s ■ g/min ■ g/h ■ g/d ■ kg/s ■ kg/min ■ kg/h ■ kg/d ■ t/s ■ t/min ■ t/h ■ t/d <i>Custom-specific units</i> <ul style="list-style-type: none"> ■ User mass/s ■ User mass/min ■ User mass/h ■ User mass/d 	<i>US units</i> <ul style="list-style-type: none"> ■ oz/s ■ oz/min ■ oz/h ■ oz/d ■ lb/s ■ lb/min ■ lb/h ■ lb/d ■ STon/s ■ STon/min ■ STon/h ■ STon/d
Factory setting	Country-specific: <ul style="list-style-type: none"> ■ kg/h ■ lb/min 	
Additional information	<i>Result</i> The selected unit applies for: Mass flow parameter (→  39)	
	<i>Selection</i>  For an explanation of the abbreviated units: →  126	

Mass unit



Navigation   Expert → Sensor → System units → Mass unit

Description Use this function to select the unit for the mass.

Selection	<i>SI units</i> <ul style="list-style-type: none"> ■ g ■ kg ■ t <i>Custom-specific units</i> User mass	<i>US units</i> <ul style="list-style-type: none"> ■ oz ■ lb ■ STon
------------------	--------------------------------------------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------

Factory setting Country-specific:

- kg
- lb

Additional information *Selection*

 For an explanation of the abbreviated units: →  126

Volume flow unit**Navigation**

Expert → Sensor → System units → Volume flow unit

Description

Use this function to select the unit for the volume flow.

Selection*SI units*

- cm³/s
- cm³/min
- cm³/h
- cm³/d
- dm³/s
- dm³/min
- dm³/h
- dm³/d
- m³/s
- m³/min
- m³/h
- m³/d
- ml/s
- ml/min
- ml/h
- ml/d
- l/s
- l/min
- l/h
- l/d
- hl/s
- hl/min
- hl/h
- hl/d
- Ml/s
- Ml/min
- Ml/h
- Ml/d

US units

- af/s
- af/min
- af/h
- af/d
- ft³/s
- ft³/min
- ft³/h
- ft³/d
- fl oz/s (us)
- fl oz/min (us)
- fl oz/h (us)
- fl oz/d (us)
- gal/s (us)
- gal/min (us)
- gal/h (us)
- gal/d (us)
- kgal/s (us)
- kgal/min (us)
- kgal/h (us)
- kgal/d (us)
- Mgal/s (us)
- Mgal/min (us)
- Mgal/h (us)
- Mgal/d (us)
- bbl/s (us;liq.)
- bbl/min (us;liq.)
- bbl/h (us;liq.)
- bbl/d (us;liq.)
- bbl/s (us;beer)
- bbl/min (us;beer)
- bbl/h (us;beer)
- bbl/d (us;beer)
- bbl/s (us;oil)
- bbl/min (us;oil)
- bbl/h (us;oil)
- bbl/d (us;oil)
- bbl/s (us;tank)
- bbl/min (us;tank)
- bbl/h (us;tank)
- bbl/d (us;tank)

Imperial units

- gal/s (imp)
- gal/min (imp)
- gal/h (imp)
- gal/d (imp)
- Mgal/s (imp)
- Mgal/min (imp)
- Mgal/h (imp)
- Mgal/d (imp)
- bbl/s (imp;beer)
- bbl/min (imp;beer)
- bbl/h (imp;beer)
- bbl/d (imp;beer)
- bbl/s (imp;oil)
- bbl/min (imp;oil)
- bbl/h (imp;oil)
- bbl/d (imp;oil)

Custom-specific units

- User vol./s
- User vol./min
- User vol./h
- User vol./d

Factory setting

Country-specific:

- l/h
- gal/min (us)

Additional information*Result*

The selected unit applies for:
Volume flow parameter (→  39)

Selection

 For an explanation of the abbreviated units: →  126

Volume unit**Navigation**

  Expert → Sensor → System units → Volume unit

Description

Use this function to select the unit for the volume.

Selection*SI units*

- cm³
- dm³
- m³
- ml
- l
- hl
- Ml Mega

US units

- af
- ft³
- fl oz (us)
- gal (us)
- kgal (us)
- Mgal (us)
- bbl (us;oil)
- bbl (us;liq.)
- bbl (us;beer)
- bbl (us;tank)

Imperial units

- gal (imp)
- Mgal (imp)
- bbl (imp;beer)
- bbl (imp;oil)

Custom-specific units

User vol.

Factory setting

Country-specific:

- l
- gal (us)

Additional information*Selection*

 For an explanation of the abbreviated units: →  126

Corrected volume flow unit**Navigation**

  Expert → Sensor → System units → Cor.volflow unit

Description

Use this function to select the unit for the corrected volume flow.

Selection

- | | | |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><i>SI units</i></p> <ul style="list-style-type: none"> ■ NI/s ■ NI/min ■ NI/h ■ NI/d ■ Nm³/s ■ Nm³/min ■ Nm³/h ■ Nm³/d ■ Sm³/s ■ Sm³/min ■ Sm³/h ■ Sm³/d | <p><i>US units</i></p> <ul style="list-style-type: none"> ■ Sft³/s ■ Sft³/min ■ Sft³/h ■ Sft³/d ■ Sgal/s (us) ■ Sgal/min (us) ■ Sgal/h (us) ■ Sgal/d (us) ■ Sbbl/s (us;liq.) ■ Sbbl/min (us;liq.) ■ Sbbl/h (us;liq.) ■ Sbbl/d (us;liq.) | <p><i>Imperial units</i></p> <ul style="list-style-type: none"> ■ Sgal/s (imp) ■ Sgal/min (imp) ■ Sgal/h (imp) ■ Sgal/d (imp) |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

Custom-specific units

- UserCrVol./s
- UserCrVol./min
- UserCrVol./h
- UserCrVol./d

Factory setting

Country-specific:

- NI/h
- Sft³/min

Additional information*Result*

The selected unit applies for:

Corrected volume flow parameter (→  39)*Selection*
 For an explanation of the abbreviated units: →  126
Corrected volume unit**Navigation**
  Expert → Sensor → System units → Corr. vol. unit
Description

Use this function to select the unit for the corrected volume.

Selection

- | | | |
|-----------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------|
| <p><i>SI units</i></p> <ul style="list-style-type: none"> ■ NI ■ Nm³ ■ Sm³ | <p><i>US units</i></p> <ul style="list-style-type: none"> ■ Sft³ ■ Sgal (us) ■ Sbbl (us;liq.) | <p><i>Imperial units</i></p> <ul style="list-style-type: none"> Sgal (imp) |
|-----------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------|

Custom-specific units

UserCrVol.

Factory setting

Country-specific:

- NI
- Sft³

Additional information*Selection*
 For an explanation of the abbreviated units: →  126

Density unit**Navigation**

Expert → Sensor → System units → Density unit

Description

Use this function to select the unit for the density.

Selection*SI units*

- g/cm³
- g/m³
- kg/dm³
- kg/l
- kg/m³
- SD4°C
- SD15°C
- SD20°C
- SG4°C
- SG15°C
- SG20°C

US units

- lb/ft³
- lb/gal (us)
- lb/bbl (us;liq.)
- lb/bbl (us;beer)
- lb/bbl (us;oil)
- lb/bbl (us;tank)

Imperial units

- lb/gal (imp)
- lb/bbl (imp;beer)
- lb/bbl (imp;oil)

Custom-specific units

User dens.

Factory setting

Country-specific:

- kg/l
- lb/ft³

Additional information*Result*

The selected unit applies for:

Density parameter (→ 40)

Selection

- SD = specific density

The specific density is the ratio of the fluid density to the water density at a water temperature of +4 °C (+39 °F), +15 °C (+59 °F), +20 °C (+68 °F).

- SG = specific gravity

The specific gravity is the ratio of the fluid density to the water density at a water temperature of +4 °C (+39 °F), +15 °C (+59 °F), +20 °C (+68 °F).

For an explanation of the abbreviated units: → 126

Reference density unit**Navigation**

Expert → Sensor → System units → Ref. dens. unit

Description

Use this function to select the unit for the reference density.

Selection*SI units*

- kg/Nm³
- kg/NI
- g/Scm³
- kg/Sm³

US units

lb/Sft³

Factory setting	Country-dependent ■ kg/Nl ■ lb/Sft ³
------------------------	-------------------------------------------------------

Additional information	<i>Result</i> The selected unit applies for: ■ External reference density parameter (→ 73) ■ Fixed reference density parameter (→ 73) ■ Reference density parameter (→ 40) <i>Selection</i>  For an explanation of the abbreviated units: → 126
-------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Temperature unit



Navigation	 Expert → Sensor → System units → Temperature unit
-------------------	-------------------------------------------------------------------------------------------------------------------------------------

Description	Use this function to select the unit for the temperature.
--------------------	-----------------------------------------------------------

Selection	<i>SI units</i> ■ °C ■ K	<i>US units</i> ■ °F ■ °R
------------------	--------------------------------	---------------------------------

Factory setting	Country-specific: ■ °C ■ °F
------------------------	-----------------------------------

Additional information	<i>Result</i> The selected unit applies for: ■ Maximum value parameter (→ 114) ■ Minimum value parameter (→ 114) ■ Maximum value parameter (→ 115) ■ Minimum value parameter (→ 115) ■ Maximum value parameter (→ 116) ■ Minimum value parameter (→ 116) ■ External temperature parameter (→ 70) ■ Reference temperature parameter (→ 73) ■ Temperature parameter (→ 40)
-------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Selection

 For an explanation of the abbreviated units: → [126](#)

Pressure unit



Navigation	 Expert → Sensor → System units → Pressure unit
-------------------	------------------------------------------------------------------------------------------------------------------------------------

Description	Use this function to select the unit for the pipe pressure.
--------------------	-------------------------------------------------------------

Selection	<i>SI units</i>	<i>US units</i>
	▪ Pa a	▪ psi a
	▪ kPa a	▪ psi g
	▪ MPa a	
	▪ bar	
	▪ Pa g	
	▪ kPa g	
	▪ MPa g	
	▪ bar g	
	<i>Custom-specific units</i>	
	User pres.	

Factory setting	Country-specific:
	▪ bar a ▪ psi a

Additional information	<i>Result</i>
	The unit is taken from: ▪ Pressure value parameter (→ 41) ▪ External pressure parameter (→ 69) ▪ Pressure value parameter (→ 68)
	<i>Selection</i>

 For an explanation of the abbreviated units: → 126

Date/time format



Navigation	 Expert → Sensor → System units → Date/time format
------------	---------------------------------------------------------------------------------------------------------------------------------------

Description	Use this function to select the desired time format for calibration history.
-------------	------------------------------------------------------------------------------

Selection	▪ dd.mm.yy hh:mm ▪ dd.mm.yy hh:mm am/pm ▪ mm/dd/yy hh:mm ▪ mm/dd/yy hh:mm am/pm
-----------	------------------------------------------------------------------------------------------

Factory setting	dd.mm.yy hh:mm
-----------------	----------------

Additional information	<i>Selection</i>
	 For an explanation of the abbreviated units: → 126

"User-specific units" submenu**Navigation** Expert → Sensor → System units → User-spec. units

► User-specific units	
User mass text	→  52
User mass offset	→  53
User mass factor	→  53
User volume text	→  54
User volume offset	→  54
User volume factor	→  54
User corrected volume text	→  55
User corrected volume offset	→  55
User corrected volume factor	→  55
User density text	→  56
User density offset	→  56
User density factor	→  56
User pressure text	→  57
User pressure offset	→  57
User pressure factor	→  57

User mass text**Navigation** Expert → Sensor → System units → User-spec. units → Mass text**Description**

Use this function to enter a text for the user-specific unit of mass and mass flow. The corresponding time units (s, min, h, d) for mass flow are generated automatically.

User entry

Max. 10 characters such as letters, numbers or special characters (@, %, /)

Factory setting

User mass

Additional information*Result*

The defined unit is shown as an option in the choose list of the following parameters:

- **Mass flow unit** parameter (→ [44](#))
- **Mass unit** parameter (→ [45](#))

Example

If the text CENT for "centner" is entered, the following options are displayed in the picklist for the **Mass flow unit** parameter (→ [44](#)):

- CENT/s
- CENT/min
- CENT/h
- CENT/d

User mass offset**Navigation**

Expert → Sensor → System units → User-spec. units → Mass offset

Description

Use this function to enter the zero point shift for the user-specific mass and mass flow unit.

User entry

Signed floating-point number

Factory setting

0

Additional information*Description*

Value in user-specific unit = (factor × value in base unit) + offset

User mass factor**Navigation**

Expert → Sensor → System units → User-spec. units → Mass factor

Description

Use this function to enter a quantity factor (without time) for the user-specific mass and mass flow unit.

User entry

Signed floating-point number

Factory setting

1.0

Additional information*Example*

Mass of 1 Zentner = 50 kg → 0.02 Zentner = 1 kg → entry: 0.02

User volume text**Navigation**

Expert → Sensor → System units → User-spec. units → Volume text

Description

Use this function to enter a text for the user-specific unit of volume and volume flow. The corresponding time units (s, min, h, d) for volume flow are generated automatically.

User entry

Max. 10 characters such as letters, numbers or special characters (@, %, /)

Factory setting

User vol.

Additional information

Result

- The defined unit is shown as an option in the choose list of the following parameters:
- **Volume flow unit** parameter (→ 46)
 - **Volume unit** parameter (→ 47)

Example

If the text GLAS is entered, the choose list of the **Volume flow unit** parameter (→ 46) shows the following options:

- GLAS/s
- GLAS/min
- GLAS/h
- GLAS/d

User volume offset**Navigation**

Expert → Sensor → System units → User-spec. units → Volume offset

Description

Use this function to enter the offset for adapting the user-specific volume unit and volume flow unit (without time).

User entry

Signed floating-point number

Factory setting

0

Additional information

Description

- Value in user-specific unit = (factor × value in base unit) + offset

User volume factor**Navigation**

Expert → Sensor → System units → User-spec. units → Volume factor

Description

Use this function to enter a quantity factor (without time) for the user-specific volume and volume flow unit.

User entry

Signed floating-point number

Factory setting	1.0
------------------------	-----

User corrected volume text

Navigation	Expert → Sensor → System units → User-spec. units → Corr. vol. text
-------------------	---------------------------------------------------------------------

Description	Use this function to enter a text for the user-specific unit of the corrected volume and corrected volume flow. The corresponding time units (s, min, h, d) for mass flow are generated automatically.
--------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

User entry	Max. 10 characters such as letters, numbers or special characters (@, %, /)
-------------------	-----------------------------------------------------------------------------

Factory setting	UserCrVol.
------------------------	------------

Additional information	<i>Result</i>
-------------------------------	---------------

The defined unit is shown as an option in the choose list of the following parameters:

- **Corrected volume flow unit** parameter (→ 47)
- **Corrected volume unit** parameter (→ 48)

Example

If the text GLAS is entered, the choose list of the **Corrected volume flow unit** parameter (→ 47) shows the following options:

- GLAS/s
- GLAS/min
- GLAS/h
- GLAS/d

User corrected volume offset

Navigation	Expert → Sensor → System units → User-spec. units → Corr vol. offset
-------------------	----------------------------------------------------------------------

Description	Use this function to enter the offset for adapting the user-specific corrected volume unit and corrected volume flow unit (without time).
--------------------	-------------------------------------------------------------------------------------------------------------------------------------------

Value in user-specific unit = (factor × value in base unit) + offset

User entry	Signed floating-point number
-------------------	------------------------------

Factory setting	0
------------------------	---

User corrected volume factor

Navigation	Expert → Sensor → System units → User-spec. units → Cor.vol. factor
-------------------	---------------------------------------------------------------------

Description	Use this function to enter a quantity factor (without time) for the user-specific corrected volume unit and corrected volume flow unit.
--------------------	-----------------------------------------------------------------------------------------------------------------------------------------

User entry Signed floating-point number

Factory setting 1.0

User density text



Navigation Expert → Sensor → System units → User-spec. units → Density text

Description Use this function to enter a text or the user-specific unit of density.

User entry Max. 10 characters such as letters, numbers or special characters (@, %, /)

Factory setting User dens.

Additional information *Result*

The defined unit is shown as an option in the choose list of the **Density unit** parameter (→ 49).

Example

Enter text “CE_L” for centners per liter

User density offset



Navigation Expert → Sensor → System units → User-spec. units → Density offset

Description Use this function to enter the zero point shift for the user-specific density unit.

Value in user-specific unit = (factor × value in base unit) + offset

User entry Signed floating-point number

Factory setting 0

User density factor



Navigation Expert → Sensor → System units → User-spec. units → Density factor

Description Use this function to enter a quantity factor for the user-specific density unit.

User entry Signed floating-point number

Factory setting 1.0

User pressure text

Navigation Expert → Sensor → System units → User-spec. units → Pressure text

Description Use this function to enter a text for the user-specific pressure unit.

User entry Max. 10 characters such as letters, numbers or special characters (@, %, /)

Factory setting User pres.

Additional information *Result*

The defined unit is shown as an option in the choose list of the **Pressure unit** parameter (→ 50).

User pressure offset

Navigation Expert → Sensor → System units → User-spec. units → Pressure offset

Description Use this function to enter the offset for adapting the user-specific pressure unit.

User entry Signed floating-point number

Factory setting 0

User pressure factor

Navigation Expert → Sensor → System units → User-spec. units → Pressure factor

Description Use this function to enter a quantity factor for the user-specific pressure unit.

User entry Signed floating-point number

Factory setting 1.0

Additional information *Example*

1 Dyn/cm² = 0.1 Pa → 10 Dyn/cm² = 1 Pa → user entry: 10

3.2.3 "Process parameters" submenu

Navigation

Expert → Sensor → Process param.

▶ Process parameters	
Flow damping	→ 58
Density damping	→ 58
Temperature damping	→ 59
Flow override	→ 59
▶ Low flow cut off	→ 60
▶ Partially filled pipe detection	→ 63

Flow damping



Navigation

Expert → Sensor → Process param. → Flow damping

Description

Use this function to enter a time constant for flow damping. Reduction of the variability of the flow measured value (in relation to interference). For this purpose, the depth of the flow filter is adjusted: when the filter setting increases, the reaction time of the device also increases.

User entry

0 to 100.0 s

Factory setting

0 s

Additional information

User entry

- Value = 0: no damping
- Value > 0: damping is increased

Result



The damping affects the following variables of the device:

- Outputs
- Low flow cut off → [60](#)
- Totalizers → [94](#)

Density damping



Navigation

Expert → Sensor → Process param. → Density damping

Description

Use this function to enter the time constant for density damping.

User entry 0 to 999.9 s

Factory setting 0 s

Temperature damping



Navigation Expert → Sensor → Process param. → Temp. damping

Description Use this function to enter a time constant for temperature damping.

User entry 0 to 999.9 s

Factory setting 0 s

Flow override



Navigation Expert → Sensor → Process param. → Flow override

Description Use this function to select whether to interrupt the evaluation of measured values. This is useful for the cleaning processes of a pipeline, for example.

Selection

- Off
- On

Factory setting Off

Additional information *Result*




This setting affects all the functions and outputs of the measuring device.

Description

Flow override is active

- The diagnostic message diagnostic message **△C453 Flow override** is displayed.
- Output values
 - Output: Value at zero flow
 - Temperature: proceeding output
 - Totalizers 1-3: Stop being totalized

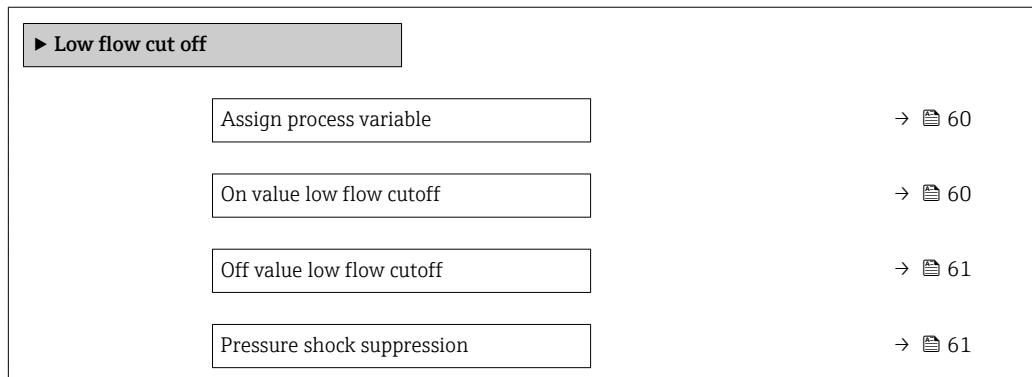"Low flow cut off" submenu**Navigation** Expert → Sensor → Process param. → Low flow cut off**Assign process variable****Navigation** Expert → Sensor → Process param. → Low flow cut off → Assign variable**Description**

Use this function to select the process variable for low flow cutoff detection.

Selection

- Off
- Mass flow
- Volume flow
- Corrected volume flow

Factory setting

Mass flow

On value low flow cutoff**Navigation** Expert → Sensor → Process param. → Low flow cut off → On value**Prerequisite**

One of the following options is selected in the **Assign process variable** parameter
(→  60):

- Mass flow
- Volume flow
- Corrected volume flow

Description

Use this function to enter a switch-on value for low flow cut off. Low flow cut off is activated if the value entered is not equal to 0 or pressure shock suppression is active
→  61.

User entry

Positive floating-point number

Factory setting

Depends on country and nominal diameter →  123

Additional information*Dependency*

 The unit depends on the process variable selected in the **Assign process variable** parameter (→ 60).

Off value low flow cutoff**Navigation**

 Expert → Sensor → Process param. → Low flow cut off → Off value

Prerequisite

One of the following options is selected in the **Assign process variable** parameter (→ 60):

- Mass flow
- Volume flow
- Corrected volume flow

Description


Use this function to enter a switch-off value for low flow cut off. The off value is entered as a positive hysteresis from the on value → 60.

User entry

0 to 100.0 %

Factory setting

50 %

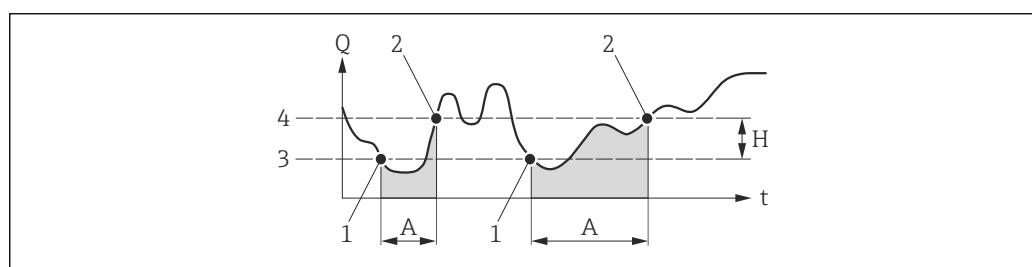Additional information*Example*

A0012887

- | | |
|----------|---------------------------------|
| <i>Q</i> | Flow |
| <i>t</i> | Time |
| <i>H</i> | Hysteresis |
| <i>A</i> | Low flow cut off active |
| 1 | Low flow cut off is activated |
| 2 | Low flow cut off is deactivated |
| 3 | On value entered |
| 4 | Off value entered |

Pressure shock suppression**Navigation**

 Expert → Sensor → Process param. → Low flow cut off → Pres. shock sup.

Prerequisite

One of the following options is selected in the **Assign process variable** parameter (→ 60):

- Mass flow
- Volume flow
- Corrected volume flow

Description Use this function to enter the time interval for signal suppression (= active pressure shock suppression).

User entry 0 to 100 s

Factory setting 0 s

Additional information *Description*

Pressure shock suppression is enabled


- Prerequisite:
 - Flow rate < on-value of low flow cut off
 - or
 - Changing the flow direction
- Output values
 - Flow displayed: 0
 - Totalizer: the totalizers are pegged at the last correct value

Pressure shock suppression is disabled

- Prerequisite: the time interval set in this function has elapsed.
- If the flow also exceeds the switch-off value for low flow cut off, the device starts processing the current flow value again and displays it.

Example

When closing a valve, momentarily strong fluid movements may occur in the pipeline, which are registered by the measuring system. These totalized flow values lead to a false totalizer status, particularly during batching processes.

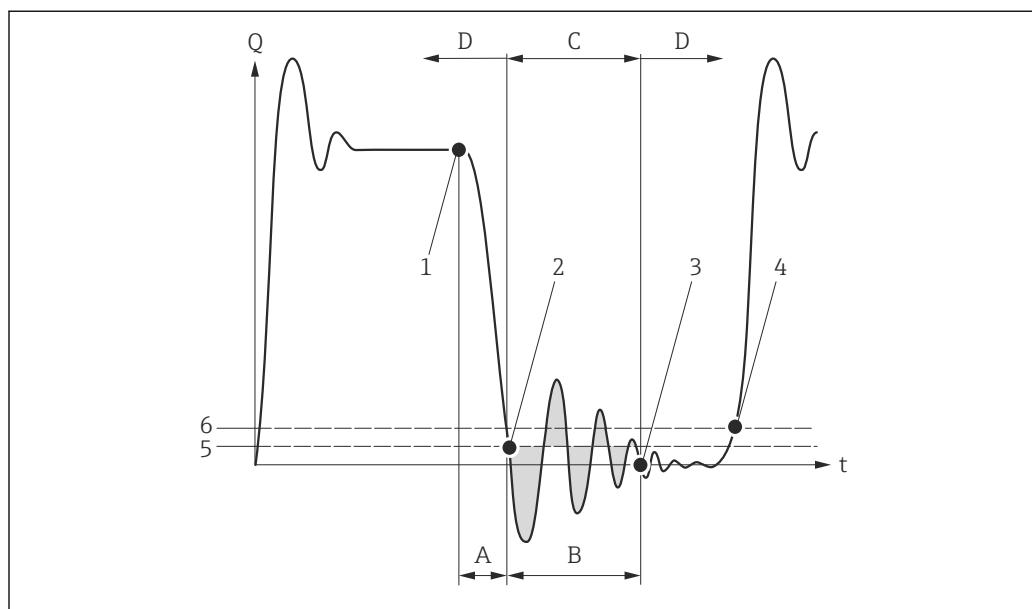

A0012888

Q	Flow
t	Time
A	Drip
B	Pressure shock
C	Pressure shock suppression active as specified by the time entered
D	Pressure shock suppression inactive
1	Valve closes
2	Flow falls below the on-value of the low flow cut off: pressure shock suppression is activated
3	The time entered has elapsed: pressure shock suppression is deactivated
4	The actual flow value is now displayed and output
5	On value for low flow cut off
6	Off value for low flow cut off

"Partially filled pipe detection" submenu**Navigation**
 Expert → Sensor → Process param. → Partial pipe det

► Partially filled pipe detection	
Assign process variable	→  63
Low value partial filled pipe detection	→  63
High value partial filled pipe detection	→  64
Response time part. filled pipe detect.	→  64
Maximum damping partial filled pipe det.	→  65

Assign process variable**Navigation**
 Expert → Sensor → Process param. → Partial pipe det → Assign variable
Description

Use this function to select a process variable to detect empty or partially filled measuring tubes.

For gas measurement: Deactivate monitoring due to low gas density.

Selection

- Off
- Density
- Reference density

Factory setting

Off

Low value partial filled pipe detection**Navigation**
 Expert → Sensor → Process param. → Partial pipe det → Low value
Prerequisite

One of the following options is selected in the **Assign process variable** parameter
(→  63):

- Density
- Reference density

Description

Use this function to enter a lower limit value to enable detection of empty or partially filled measuring tubes. If the measured density falls below this value, monitoring is enabled.

User entry

Signed floating-point number

Factory setting

200

Additional information*User entry*

The lower limit value must be less than the upper limit value that is specified in the **High value partial filled pipe detection** parameter (→ 64).

 The unit depends on the process variable selected in the **Assign process variable** parameter (→ 63).

Limit value

 If the displayed value is outside the limit value, the measuring device displays the diagnostic message **△S862 Partly filled pipe**.

High value partial filled pipe detection**Navigation**

  Expert → Sensor → Process param. → Partial pipe det → High value

Prerequisite

One of the following options is selected in the **Assign process variable** parameter (→ 63):

- Density
- Reference density

Description

Use this function to enter an upper limit value to enable detection of empty or partially filled measuring tubes. If the measured density exceeds this value, detection is enabled.

User entry

Signed floating-point number

Factory setting

6 000

Additional information*User entry*

The upper limit value must be greater than the lower limit value that is specified in the **Low value partial filled pipe detection** parameter (→ 63).

 The unit depends on the process variable selected in the **Assign process variable** parameter (→ 63).

Limit value

 If the displayed value is outside the limit value, the measuring device displays the diagnostic message **△S862 Partly filled pipe**.

Response time part. filled pipe detect.**Navigation**

  Expert → Sensor → Process param. → Partial pipe det → Response time

Prerequisite

One of the following options is selected in the **Assign process variable** parameter (→ 63):

- Density
- Reference density

Description

Enter the minimum length of time (debouncing time) the signal must be present for the diagnostic message **△S862 Partly filled pipe** to be triggered if the measuring pipe is empty or partially full.

User entry 0 to 100 s

Factory setting 1 s

Maximum damping partial filled pipe det.



Navigation Expert → Sensor → Process param. → Partial pipe det → Max. damping

Prerequisite One of the following options is selected in the **Assign process variable** parameter (→ [63](#)):

- Density
- Reference density

Description Use this function to enter a damping value to enable detection of empty or partially filled measuring tubes.

User entry Positive floating-point number

Factory setting 0

Additional information *Description*

If pipe damping (**Testpoints** submenu) exceeds the specified value, the measuring device presumes that the pipe is partially filled and the flow signal is set to **0**. The measuring device displays the diagnostic message **△S862 Partly filled pipe**. In the case of non-homogeneous media or air pockets, the damping of the measuring tubes increases.

User entry

The function is enabled only if the input value is greater than **0**.

3.2.4 "Measurement mode" submenu

Navigation Expert → Sensor → Measurement mode

► Measurement mode	
Select medium	→ 66
Select gas type	→ 66
Reference sound velocity	→ 67
Temperature coefficient sound velocity	→ 67

Select medium

Navigation Expert → Sensor → Measurement mode → Select medium

Description Use this function to select the type of medium.

Selection

- Liquid
- Gas

Factory setting Liquid

Select gas type

Navigation Expert → Sensor → Measurement mode → Select gas type

Prerequisite The **Gas** option is selected in the **Select medium** parameter (→ 66).

Description Use this function to select the type of gas for the measuring application.

Selection

- Air
- Ammonia NH₃
- Argon Ar
- Sulfur hexafluoride SF₆
- Oxygen O₂
- Ozone O₃
- Nitrogen oxide NO_x
- Nitrogen N₂
- Nitrous oxide N₂O
- Methane CH₄
- Hydrogen H₂
- Helium He
- Hydrogen chloride HCl
- Hydrogen sulfide H₂S
- Ethylene C₂H₄
- Carbon dioxide CO₂
- Carbon monoxide CO
- Chlorine Cl₂
- Butane C₄H₁₀
- Propane C₃H₈
- Propylene C₃H₆
- Ethane C₂H₆
- Others

Factory setting Methane CH₄

Reference sound velocity

Navigation Expert → Sensor → Measurement mode → Sound velocity

Prerequisite The **Others** option is selected in the **Select gas type** parameter (→ [66](#)).

Description Use this function to enter the sound velocity of the gas at 0 °C (+32 °F).

User entry 1 to 99 999.9999 m/s

Factory setting 0 m/s

Temperature coefficient sound velocity

Navigation Expert → Sensor → Measurement mode → Temp. coeff. SV

Prerequisite The **Others** option is selected in the **Select gas type** parameter (→ [66](#)).

Description Use this function to enter a temperature coefficient for the sound velocity of the gas.

User entry Positive floating-point number

Factory setting 0 (m/s)/K

3.2.5 "External compensation" submenu

Navigation Expert → Sensor → External comp.

External compensation	
Pressure compensation	→ 68
Pressure value	→ 68
External pressure	→ 69
Fail safe type external pressure	→ 69
Fail safe value of external pressure	→ 69
Temperature mode	→ 70
External temperature	→ 70

Fail safe type of external temperature	→ 71
Fail safe value of external temperature	→ 71

Pressure compensation



Navigation

Expert → Sensor → External comp. → Pressure compen.

Prerequisite

The **Gas** option is selected in the **Select medium** parameter (→ 66).

Description

Use this function select the type of pressure compensation.

Selection

- Off
- Fixed value
- External value

Factory setting

Off

Additional information

Selection

Use this function select the type of pressure compensation. When selecting the **External value** option, the pressure value of the cyclical PROFINET communication is used. In addition, the "External pressure" compensation value must be incorporated into the analog output module.

Additional information: Operating Instructions, "Cyclical data transfer" section.

Pressure value



Navigation

Expert → Sensor → External comp. → Pressure value

Prerequisite

The **Fixed value** option is selected in the **Pressure compensation** parameter (→ 68).

Description

Use this function to enter a value for the process pressure that is used for pressure correction.

User entry

Positive floating-point number

Factory setting

0 bar

Additional information

User entry

The unit is taken from the **Pressure unit** parameter (→ 50)

External pressure

Navigation  Expert → Sensor → External comp. → External press.

Prerequisite The **External value** option is selected in the **Pressure compensation** parameter (→ [68](#)).

Description Use this function to enter an external pressure value.

User entry Positive floating-point number

Factory setting 0 bar

Additional information *User entry*



The unit is taken from the **Pressure unit** parameter (→ [50](#))

Fail safe type external pressure

Navigation  Expert → Sensor → External comp. → Fail safe type

Description Use this function to select the failsafe mode for the external density value.

Selection

- Fail safe value
- Fallback value
- Off

Factory setting Off

Additional information *Description*

If the status of the input or simulation value is BAD, the failsafe mode defined here is used.

Selection

- Fail safe value
A substitute value is used. The substitute value is defined in the **Fail safe value of external pressure** parameter (→ [69](#)).
- Fallback value
The last valid value is used.
- Off option: The invalid value continues to be used.

Fail safe value of external pressure

Navigation  Expert → Sensor → External comp. → Fs val. pressure

Prerequisite The **Fail safe value** option is selected in the **Fail safe type external pressure** parameter (→ [69](#)).

Description	Use this function to enter a fixed pressure value that is used for the external pressure in the event of a device alarm.
User entry	Signed floating-point number
Factory setting	0 bar
Additional information	<i>Description</i> In the event of a device alarm, the pressure value is displayed as an output value in the Pressure value parameter (→ 41).

Temperature mode



Navigation	Expert → Sensor → External comp. → Temperature mode
Description	Use this function to select the temperature mode.
Selection	<ul style="list-style-type: none">■ Internal measured value■ External value
Factory setting	Internal measured value
Additional information	<i>Selection</i> Use this function to select the type of temperature compensation. When selecting the External value option, the temperature value of the cyclical PROFINET communication is used. In addition, the "External temperature" compensation value must be incorporated into the analog output module. Additional information: Operating Instructions, "Cyclical data transmission" section.

External temperature

Navigation	Expert → Sensor → External comp. → External temp.
Prerequisite	The Temperature option is selected in the Temperature mode parameter (→ 70).
Description	Use this function to enter the external temperature.
User entry	-273.15 to 99 999 °C
Factory setting	0 °C
Additional information	<i>Description</i> The unit is taken from the Temperature unit parameter (→ 50)

Fail safe type of external temperature

Navigation

Expert → Sensor → External comp. → FailSafeTypeTemp

Description

Use this function to select the failsafe mode for the external temperature value.

Selection

- Fail safe value
- Fallback value
- Off

Factory setting

Off

Additional information*Description*

If the status of the input or simulation value is BAD, the failsafe mode defined here is used.

Selection

- Fail safe value
A substitute value is used. The substitute value is defined in the **Fail safe value of external temperature** parameter (→ 71).
- Fallback value
The last valid value is used.
- Off
The invalid value continues to be used.

Fail safe value of external temperature

**Navigation**

Expert → Sensor → External comp. → FailSaValExtTemp

Prerequisite

The **Fail safe value** option is selected in the **Fail safe type of external temperature** parameter (→ 71).

Description

Use this function to enter a fixed temperature value that is used for the external pressure in the event of a device alarm.

User entry

Signed floating-point number

Factory setting

0 °C


Additional information*Description*

In the event of a device alarm, the temperature value is displayed as an output value in the **Temperature** parameter (→ 40).

3.2.6 "Calculated values" submenu

Navigation


Expert → Sensor → Calculated value

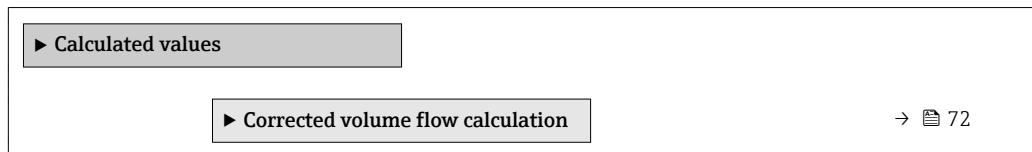

"Corrected volume flow calculation" submenu

Navigation

Expert → Sensor → Calculated value → Corr. vol.flow.

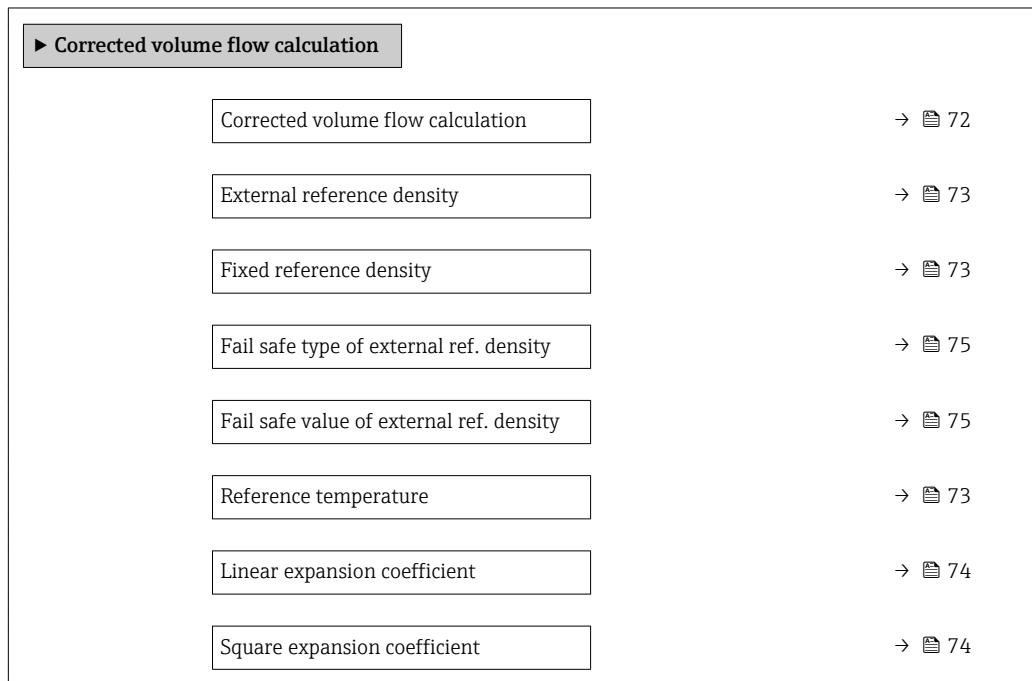

Corrected volume flow calculation



Navigation

Expert → Sensor → Calculated value → Corr. vol.flow. → Corr. vol.flow.

Description

Use this function to select the reference density for calculating the corrected volume flow.

Selection

- Fixed reference density
- Calculated reference density
- Reference density by API table 53
- External reference density

Factory setting

Calculated reference density

Additional information

Selection

Use this function to select the type of corrected volume flow calculation. When selecting the **External reference density** option, the reference density value of the cyclical

PROFINET communication is used. In addition, the "External reference density" compensation value must be incorporated into the analog output module.



Additional information: Operating Instructions, "Cyclical data transfer" section.

External reference density

Navigation	Expert → Sensor → Calculated value → Corr. vol.flow. → Ext. ref.density
Description	Use this function to enter the external reference density.
User entry	Floating point number with sign
Factory setting	0 kg/Nl

Fixed reference density

Navigation	Expert → Sensor → Calculated value → Corr. vol.flow. → Fix ref.density
Prerequisite	In the Corrected volume flow calculation parameter (→ 72) the Fixed reference density option is selected.
Description	Use this function to enter a fixed value for the reference density.
User entry	Positive floating-point number
Factory setting	1 kg/Nl
Additional information	<i>Dependency</i> The unit is taken from the Reference density unit parameter (→ 49)

Reference temperature

Navigation	Expert → Sensor → Calculated value → Corr. vol.flow. → Ref. temperature
Prerequisite	In the Corrected volume flow calculation parameter (→ 72) the Calculated reference density option is selected.
Description	Use this function to enter a reference temperature for calculating the reference density.
User entry	-273.15 to 99 999 °C
Factory setting	Country-specific: ■ +20 °C ■ +68 °F

Additional information*Dependency*

 The unit is taken from the **Temperature unit** parameter (→ 50)

Reference density calculation

$$\rho_n = \rho \cdot (1 + \alpha \cdot \Delta t + \beta \cdot \Delta t^2)$$

A0023403

- ρ_N : reference density
- ρ : fluid density currently measured
- t : fluid temperature currently measured
- t_N : reference temperature at which the reference density is calculated (e.g. 20 °C)
- Δt : $t - t_N$
- α : linear expansion coefficient of the fluid, unit = [1/K]; K = Kelvin
- β : square expansion coefficient of the fluid, unit = [1/K²]

Linear expansion coefficient**Navigation**

 Expert → Sensor → Calculated value → Corr. vol.flow. → Linear exp coeff

Prerequisite

In the **Corrected volume flow calculation** parameter (→ 72) the **Calculated reference density** option is selected.

Description

Use this function to enter a linear, fluid-specific expansion coefficient for calculating the reference density.

User entry

Signed floating-point number

Factory setting

0.0

Square expansion coefficient**Navigation**

 Expert → Sensor → Calculated value → Corr. vol.flow. → Square exp coeff

Description

For fluid with a non-linear expansion pattern: use this function to enter a quadratic, fluid-specific expansion coefficient for calculating the reference density.

User entry

Signed floating-point number

Factory setting

0.0

Fail safe type of external ref. density

Navigation	 Expert → Sensor → Calculated value → Corr. vol.flow. → FailSaTypRefDens
Description	Use this function to select the failsafe mode for the external reference density value.
Selection	<ul style="list-style-type: none">▪ Fail safe value▪ Fallback value▪ Off
Factory setting	Off
Additional information	<p><i>Description</i></p> <p>If the status of the input or simulation value is BAD, the failsafe mode defined here is used.</p> <p><i>Selection</i></p> <ul style="list-style-type: none">▪ Fail safe value A substitute value is used. The substitute value is defined in the Fail safe value of external ref. density parameter (→ 75).▪ Fallback value The last valid value is used.▪ Off The invalid value continues to be used.


Fail safe value of external ref. density

Navigation	 Expert → Sensor → Calculated value → Corr. vol.flow. → FailSaValRefDens
Prerequisite	The Fail safe value option is selected in the Fail safe type of external ref. density parameter (→ 75).
Description	Use this function to enter a fixed reference density value that is used for the external reference density in the event of a device alarm.
User entry	Signed floating-point number
Factory setting	0 kg/Nl
Additional information	<p><i>Description</i></p> <p>In the event of a device alarm, the reference density value is displayed as an output value in the Reference density parameter (→ 40).</p>

3.2.7 "Sensor adjustment" submenu

Navigation

Expert → Sensor → Sensor adjustm.

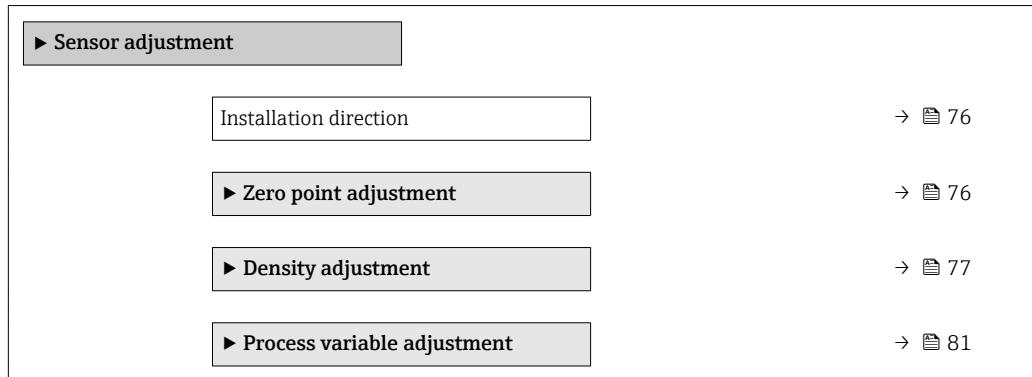

Installation direction



Navigation

Expert → Sensor → Sensor adjustm. → Install. direct.

Description

Use this function to change the sign of the medium flow direction.

Selection

- Flow in arrow direction
- Flow against arrow direction

Factory setting

Flow in arrow direction

Additional information


Description

Before changing the sign: ascertain the actual direction of fluid flow with reference to the direction indicated by the arrow on the sensor nameplate.

"Zero point adjustment" submenu

Navigation

Expert → Sensor → Sensor adjustm. → Zero point adj.

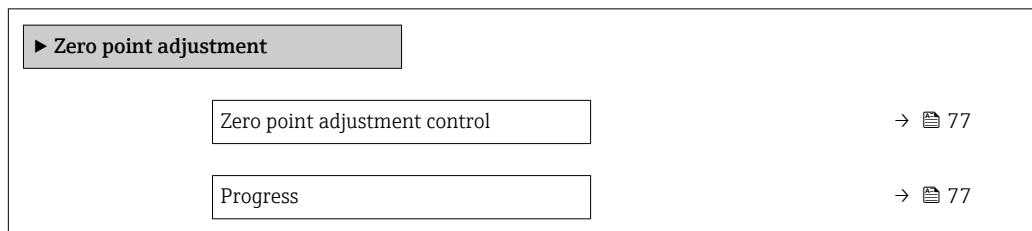

Zero point adjustment control**Navigation**

Expert → Sensor → Sensor adjustm. → Zero point adj. → Zero point adj.

Description

Use this function to select the start of the zero point adjustment.



Note conditions .

Selection

- Cancel
- Busy
- Zero point adjust failure
- Start

Factory setting

Cancel

Additional information*Description*

- Cancel
If zero point adjustment has failed, select this option to cancel zero point adjustment.
- Busy
Is displayed during zero point adjustment.
- Zero point adjust failure
Is displayed if zero point adjustment has failed.
- Start
Select this option to start zero point adjustment.

Progress**Navigation**

Expert → Sensor → Sensor adjustm. → Zero point adj. → Progress

Description

The progress of the process is indicated.

User interface

0 to 100 %

"Density adjustment" wizard*Navigation*

Expert → Sensor → Sensor adjustm. → Density adjustm.

► Density adjustment	
Density adjustment mode	→ 78
Density setpoint 1	→ 78
Density setpoint 2	→ 79
Execute density adjustment	→ 79

Progress	→ 79
Density adjustment factor	→ 80
Density adjustment offset	→ 80

Density adjustment mode



Navigation Expert → Sensor → Sensor adjustm. → Density adjustm. → Adjustment mode

Description Use this function to select the method for field density adjustment.

User interface

- 1 point adjustment
- 2 point adjustment

Factory setting 1 point adjustment

Additional information *Description*
Field density adjustment is performed to correct the factory setting on site.

For a detailed description on performing density adjustment

Selection

- The **1 point adjustment** option shifts the values by an offset.
- The **2 point adjustment** option shifts the values by an offset and a factor.

Example

A field density adjustment can compensate for the effects following abrasion or buildup.

NOTE!

The density coefficients C0 and C1 are read-only parameters and cannot be write-accessed.

Density setpoint 1



Navigation Expert → Sensor → Sensor adjustm. → Density adjustm. → Density setpt 1

Description Use this function to enter the existing density value.

User interface Input depends on the unit selected in the **Density unit** parameter (→ 49).

Factory setting 1 kg/l

Additional information *Description*
 For a detailed description on performing density adjustment

Density setpoint 2



Navigation Expert → Sensor → Sensor adjustm. → Density adjustm. → Density setpt 2

Prerequisite The **2 point adjustment** option is selected in the **Density adjustment mode** parameter.

Description Use this function to enter the second density setpoint.

User interface Input depends on the unit selected in the **Density unit** parameter (→ 49).

Factory setting 1 kg/l

Additional information *Description*



For a detailed description on performing density adjustment



Execute density adjustment

Navigation Expert → Sensor → Sensor adjustm. → Density adjustm. → Density adjustm.

Expert → Sensor → Sensor adjustm. → Density adjustm. → Density adjustm.

Description Options for performing the density adjustment.

User interface

- Cancel
- Busy
- Ok
- Density adjust failure
- Measure density 1
- Measure density 2
- Calculate
- Restore original

Factory setting Ok

Additional information *Selection*



The options available for selection in this parameter depend on the **Density adjustment** submenu (→ 77) process.

Description



For a detailed description on performing density adjustment

Progress

Navigation Expert → Sensor → Sensor adjustm. → Density adjustm. → Progress

Expert → Sensor → Sensor adjustm. → Density adjustm. → Progress

Description The progress of the process is indicated.

User interface	0 to 100 %
----------------	------------

Density adjustment factor

Navigation	 Expert → Sensor → Sensor adjustm. → Density adjustm. → Dens. adj factor
------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------

Description	Displays the current correction factor for the density.
-------------	---------------------------------------------------------

User interface	Signed floating-point number
----------------	------------------------------

Factory setting	1
-----------------	---

Additional information	<i>Description</i>
	 For a detailed description on performing density adjustment

User interface

This service parameter in the Wizard based on field adjustment (under process conditions) is a read-only parameter and cannot be write-accessed.

If a customer wants to adjust this value manually, this can be done via the **Density factor** parameter (→  83), which is writable using the "**Operator**"/"**Maintenance**" user role.

Navigation:

Expert → Sensor → Sensor adjustm. → Variable adjust

NOTE!

The two parameters are taken into consideration sequentially, i.e. the CFM Block from field adjustment is considered first and then the manual change made by the customer.

► It is recommended that you always use only one of these two methods.

 Detailed information on the **Density factor** parameter (→  83) see the "Description of Device Parameters" documentation

Density adjustment offset

Navigation	 Expert → Sensor → Sensor adjustm. → Density adjustm. → Dens. adj offset
------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------

Description	Displays the current correction offset for the density.
-------------	---------------------------------------------------------

User interface	Signed floating-point number
----------------	------------------------------

Factory setting	0
-----------------	---

Additional information	<i>Description</i>
	 For a detailed description on performing density adjustment

User interface

This service parameter in the Wizard based on field adjustment (under process conditions) is a read-only parameter and cannot be write-accessed.

If a customer wants to adjust this value manually, this can be done via the **Density offset** parameter (→ 83), which is writable using the "Operator"/"Maintenance" user role.

Navigation:

Expert → Sensor → Sensor adjustm. → Variable adjust

NOTE!

The two parameters are taken into consideration sequentially, i.e. the CFM Block from field adjustment is considered first and then the manual change made by the customer.

► It is recommended that you always use only one of these two methods.



Detailed information on the **Density offset** parameter (→ 83) see the "Description of Device Parameters" documentation

"Process variable adjustment" submenu

Navigation

Expert → Sensor → Sensor adjustm. → Variable adjust

► Process variable adjustment	
Mass flow offset	→ 82
Mass flow factor	→ 82
Volume flow offset	→ 82
Volume flow factor	→ 83
Density offset	→ 83
Density factor	→ 83
Corrected volume flow offset	→ 84
Corrected volume flow factor	→ 84
Reference density offset	→ 84
Reference density factor	→ 85
Temperature offset	→ 85
Temperature factor	→ 85

Mass flow offset**Navigation**

Expert → Sensor → Sensor adjustm. → Variable adjust → Mass flow offset

Description

Use this function to enter the zero point shift for the mass flow trim. The mass flow unit on which the shift is based is kg/s.

User entry

Signed floating-point number

Factory setting

0 kg/s

Additional information*Description*

Corrected value = (factor × value) + offset

Mass flow factor**Navigation**

Expert → Sensor → Sensor adjustm. → Variable adjust → Mass flow factor

Description

Use this function to enter a quantity factor (without time) for the mass flow. This multiplication factor is applied over the mass flow range.

User entry

Positive floating-point number

Factory setting

1

Additional information*Description*

Corrected value = (factor × value) + offset

Volume flow offset**Navigation**

Expert → Sensor → Sensor adjustm. → Variable adjust → Vol. flow offset

Description

Use this function to enter the zero point shift for the volume flow trim. The volume flow unit on which the shift is based is m³/s.

User entry

Signed floating-point number

Factory setting

0 m³/s

Additional information*Description*

Corrected value = (factor × value) + offset

Volume flow factor

Navigation Expert → Sensor → Sensor adjustm. → Variable adjust → Vol. flow factor

Description Use this function to enter a quantity factor (without time) for the volume flow. This multiplication factor is applied over the volume flow range.

User entry Positive floating-point number

Factory setting 1

Additional information *Description*

Corrected value = (factor × value) + offset

Density offset

Navigation Expert → Sensor → Sensor adjustm. → Variable adjust → Density offset

Description Use this function to enter the zero point shift for the density trim. The density unit on which the shift is based is kg/m³.

User entry Signed floating-point number

Factory setting 0 kg/m³

Additional information *Description*

Corrected value = (factor × value) + offset

Density factor

Navigation Expert → Sensor → Sensor adjustm. → Variable adjust → Density factor

Description Use this function to enter a quantity factor for the density. This multiplication factor is applied over the density range.

User entry Positive floating-point number

Factory setting 1

Additional information *Description*

Corrected value = (factor × value) + offset

Corrected volume flow offset**Navigation**

Expert → Sensor → Sensor adjustm. → Variable adjust → Corr. vol offset

Description

Use this function to enter the zero point shift for the corrected volume flow trim. The corrected volume flow unit on which the shift is based is 1 Nm³/s.

User entry

Signed floating-point number

Factory setting

0 Nm³/s

Additional information*Description*

Corrected value = (factor × value) + offset

Corrected volume flow factor**Navigation**

Expert → Sensor → Sensor adjustm. → Variable adjust → Corr. vol factor

Description

Use this function to enter a quantity factor (without time) for the corrected volume flow. This multiplication factor is applied over the corrected volume flow range.

User entry

Positive floating-point number

Factory setting

1

Additional information*Description*

Corrected value = (factor × value) + offset

Reference density offset**Navigation**

Expert → Sensor → Sensor adjustm. → Variable adjust → Ref.dens. offset

Description

Use this parameter to enter the zero point shift for the reference density trim. The standard density unit on which the shift is based is 1 kg/Nm³.

User entry

Signed floating-point number

Factory setting

0 kg/Nm³

Additional information*Description*

Corrected value = (factor × value) + offset

Reference density factor



Navigation Expert → Sensor → Sensor adjustm. → Variable adjust → Ref.dens. factor

Description Use this function to enter a quantity factor (without time) for the reference density. This multiplication factor is applied over the reference density range.

User entry Positive floating-point number

Factory setting 1

Additional information *Description*

Corrected value = (factor × value) + offset

Temperature offset



Navigation Expert → Sensor → Sensor adjustm. → Variable adjust → Temp. offset

Description Use this function to enter the zero point shift for the temperature trim. The temperature unit on which the shift is based is K.

User entry Signed floating-point number

Factory setting 0 K

Additional information *Description*

Corrected value = (factor × value) + offset

Temperature factor



Navigation Expert → Sensor → Sensor adjustm. → Variable adjust → Temp. factor

Description Use this function to enter a quantity factor for the temperature. In each case, this factor refers to the temperature in K.

User entry Positive floating-point number

Factory setting 1


Additional information *Description*

Corrected value = (factor × value) + offset

3.2.8 "Calibration" submenu

Navigation

Expert → Sensor → Calibration

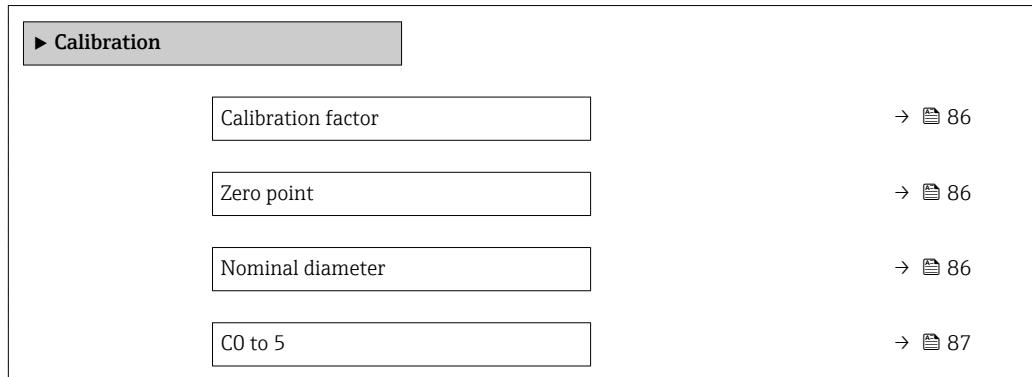

Calibration factor

Navigation

Expert → Sensor → Calibration → Cal. factor

Description

Displays the current calibration factor for the sensor.

User interface

Signed floating-point number

Factory setting

Depends on nominal diameter and calibration.

Zero point



Navigation

Expert → Sensor → Calibration → Zero point

Description

Use this function to enter the zero point correction value for the sensor.

User entry

Signed floating-point number

Factory setting

Depends on nominal diameter and calibration.

Nominal diameter

Navigation

Expert → Sensor → Calibration → Nominal diameter

Description

Displays the nominal diameter of the sensor.

User interface

DNxx / x"

Factory setting

Depends on the size of the sensor

Additional information	Description
	 The value is also specified on the sensor nameplate.

C0 to 5

Navigation	 Expert → Sensor → Calibration → C0 to 5
Description	Displays the current density coefficients C0 to 5 of the sensor.
User interface	Signed floating-point number
Factory setting	0
Additional information	<p><i>Description</i></p>  A density trim can alter the calibration value of the density coefficient.

3.2.9 "Supervision" submenu

Navigation  Expert → Sensor → Supervision


**Limit value measuring tube damping**

Navigation	 Expert → Sensor → Supervision → Limit tube damp.
Description	Use this function to enter a limit value for measuring tube damping.
User entry	Positive floating-point number
Factory setting	Positive floating-point number
Additional information	<p><i>Limit value</i></p>  <ul style="list-style-type: none"> ▪ If the displayed value is outside the limit value, the measuring device displays the diagnostic message △S948 Tube damping too high. ▪ For detecting inhomogeneous media, for example

3.3 "Communication" submenu

Navigation


Expert → Communication

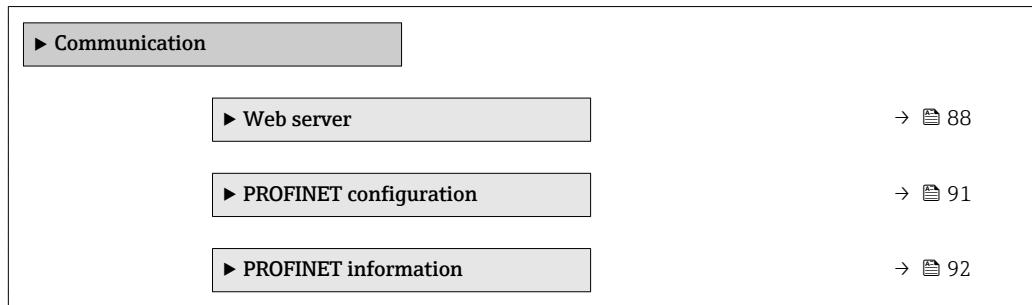

3.3.1 "Web server" submenu

Navigation

Expert → Communication → Web server

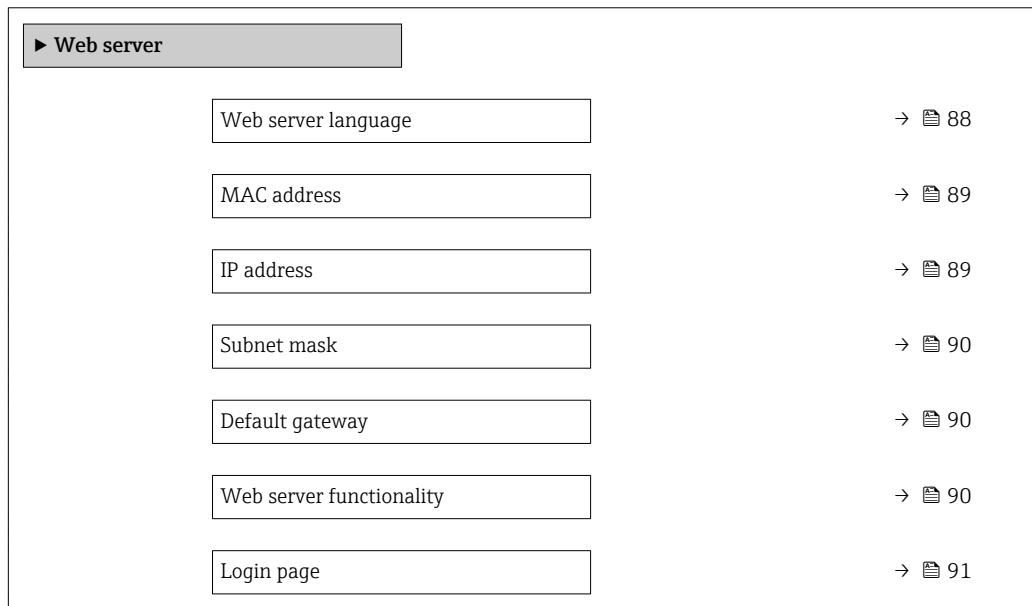

Web server language

Navigation

Expert → Communication → Web server → Webserv.language

Description

Use this function to select the web server language setting.

Selection

- English
- Deutsch *
- Français *
- Español *
- Italiano *
- Nederlands *
- Portuguesa *

* Visibility depends on order options or device settings

- Polski *
- русский язык (Russian) *
- Svenska *
- Türkçe *
- 中文 (Chinese) *
- 日本語 (Japanese) *
- 한국어 (Korean) *
- العربية (Arabic) *
- Bahasa Indonesia *
- ภาษาไทย (Thai) *
- tiếng Việt (Vietnamese) *
- čeština (Czech) *

Factory setting English

MAC address

Navigation	 Expert → Communication → Web server → MAC Address
Description	Displays the MAC ¹⁾ address of the measuring device.
User interface	Unique 12-digit character string comprising letters and numbers
Factory setting	Each measuring device is given an individual address.
Additional information	<p><i>Example</i></p> <p>For the display format 00:07:05:10:01:5F</p>

IP address

Navigation	 Expert → Communication → Web server → IP address
Description	Displays the IP address of the device's web server.
User interface	4 octet: 0 to 255 (in the particular octet)
Factory setting	0.0.0.0

* Visibility depends on order options or device settings
1) Media Access Control

Subnet mask

Navigation  Expert → Communication → Web server → Subnet mask

Description Displays the subnet mask.

User interface 4 octet: 0 to 255 (in the particular octet)

Factory setting 0.0.0.0

Default gateway

Navigation  Expert → Communication → Web server → Default gateway

Description Displays the default gateway.

User interface 4 octet: 0 to 255 (in the particular octet)

Factory setting 0.0.0.0

Web server functionality 

Navigation  Expert → Communication → Web server → Webserver funct.

Description Use this function to switch the Web server on and off.

Selection

- Off
- HTML Off
- On

Factory setting On

Additional information *Description*

 Once disabled, the Web server functionality can be re-enabled only via the local display or the FieldCare operating tool.

Selection

- Off
 - The web server is completely disabled.
 - Port 80 is locked.
- HTML Off
 - The HTML version of the web server is not available.
- On
 - The complete functionality of the web server is available.
 - JavaScript is used.
 - The password is transferred in an encrypted state.
 - Any change to the password is also transferred in an encrypted state.

Login page

Navigation Expert → Communication → Web server → Login page

Description Use this function to select the format of the login page.


Selection

- Without header
- With header

Factory setting With header

3.3.2 "PROFINET configuration" submenu

Navigation Expert → Communication → PROFINET config.

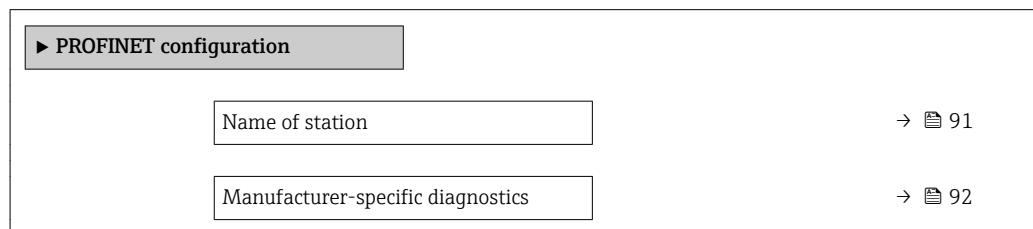**Name of station**

Navigation Expert → Communication → PROFINET config. → Name of station

Description Displays a unique name for the measuring point so it can be identified quickly within the plant.

User interface Max. 240 characters such as lower-case letter or numbers

Factory setting eh-cubemass100-xxxxx

Additional information *Description*

The device tag corresponds to the device name ("Name Of Station" of PROFINET specification) The device name can be adjusted via DIP switch or the automation system.

Factory setting

Structure of the device tag:

- eh-cubemass100-xxxxx
- eh: Endress+Hauser
- cubemass: Instrument family
- 100: Transmitter
- xxxx: Serial number of the device

Manufacturer-specific diagnostics

Navigation	Expert → Communication → PROFINET config. → Man. spec. diag.
Description	Use this function to enable the transfer of manufacturer-specific diagnostic events.
Selection	<ul style="list-style-type: none"> ■ Not active ■ Active
Factory setting	Active
Additional information	<p><i>Description</i></p> <ul style="list-style-type: none"> ■ Active In addition to the PROFINET standard alarms, active manufacturing-specific diagnostic events are also transferred to the automation system. The diagnostic number and the error text of the respective diagnostic event are displayed. ■ Not active Only the PROFINET standard alarms are transferred to the automation system.


Selection

This selection affects PROFINET communication only.

Diagnostic events are displayed in the DTM or web server regardless of the selection made in this parameter. The PROFINET standard alarms (diagnosis and process) for the stack are also unaffected by the selected mode.

3.3.3 "PROFINET information" submenu*Navigation*

Expert → Communication → PROFINET info

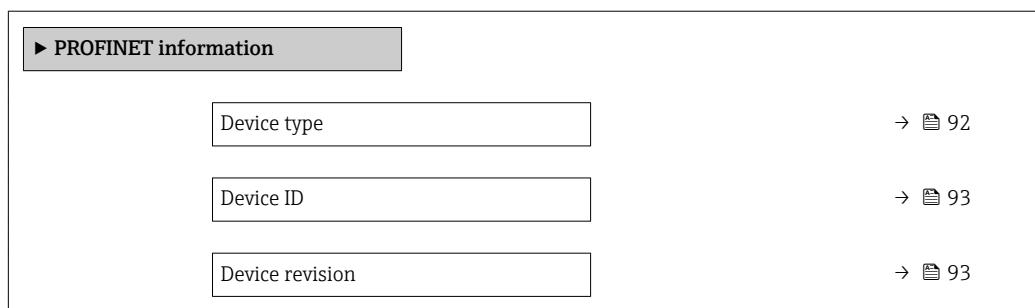

Device type

Navigation	Expert → Communication → PROFINET info → Device type
Description	Use this function to display the device type (device type code).
User interface	Max. 16 characters, such as letters, numbers or special characters (e.g. @, %, /).

Factory setting Cubemass 100

Device ID

Navigation  Expert → Communication → PROFINET info → Device ID

Description Use this function to display the device ID.

User interface 0 to 65 535

Device revision

Navigation  Expert → Communication → PROFINET info → Device revision

Description Use this function to display the device revision.


User interface 0 to 65 535

Additional information *Description*

The device revision enables the correct assignment of device drivers to the device.

3.4 "Application" submenu

Navigation  Expert → Application

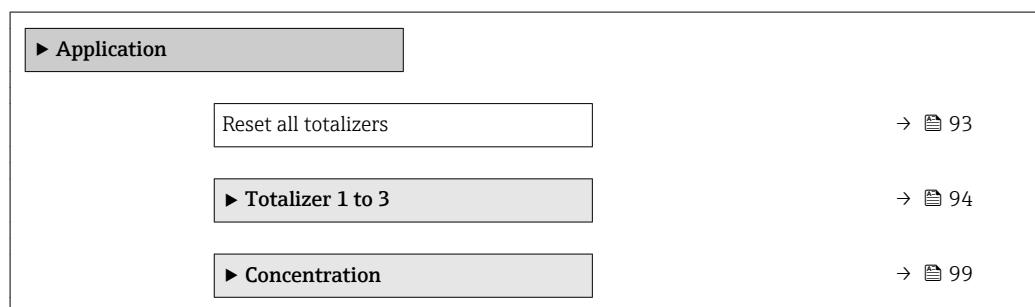

Reset all totalizers


Navigation  Expert → Application → Reset all tot.

Description Use this function to reset all totalizers to the value **0** and restart the totaling process. This deletes all the flow values previously totalized.

Selection	<ul style="list-style-type: none"> ▪ Cancel ▪ Reset + totalize
Factory setting	Cancel
Additional information	<p><i>Selection</i></p> <ul style="list-style-type: none"> ▪ Cancel No action is executed and the user exits the parameter. ▪ Reset + totalize All totalizers are reset to 0 and the totaling process is restarted.

3.4.1 "Totalizer 1 to 3" submenu

Navigation

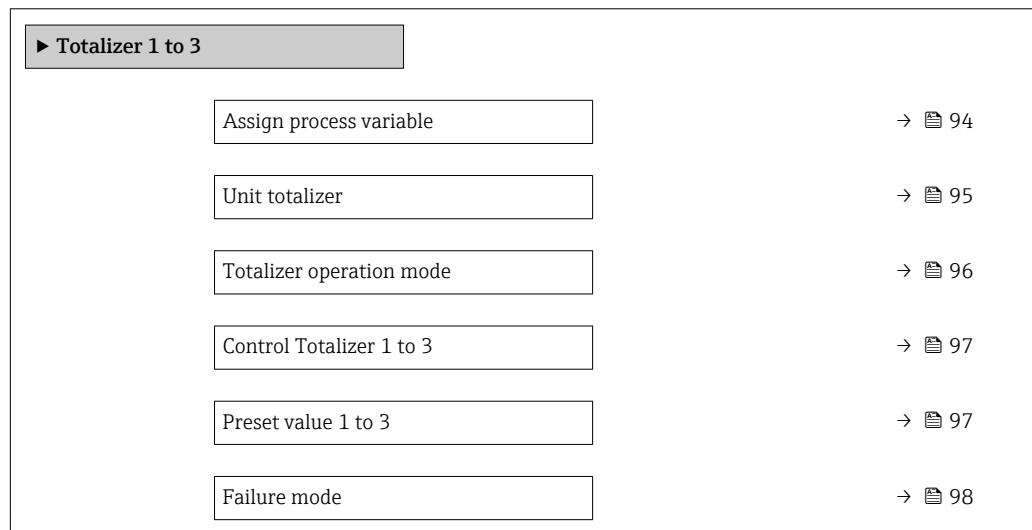 Expert → Application → Totalizer 1 to 3


Assign process variable



Navigation

 Expert → Application → Totalizer 1 to 3 → Assign variable

Description

Use this function to select a process variable for the Totalizer 1 to 3.

Selection

- Off
- Volume flow
- Mass flow
- Corrected volume flow
- Target mass flow ^{*}
- Carrier mass flow ^{*}

Factory setting

Mass flow

* Visibility depends on order options or device settings

Additional information*Description*

If the option selected is changed, the device resets the totalizer to 0.

Selection

If the **Off** option is selected, only the **Assign process variable** parameter (→ 94) is displayed in the **Totalizer 1 to 3** submenu. All other parameters in the submenu are hidden.

Unit totalizer**Navigation**

Expert → Application → Totalizer 1 to 3 → Unit totalizer

Prerequisite

One of the following options is selected in the **Assign process variable** parameter (→ 94) of the **Totalizer 1 to 3** submenu:

- Volume flow
- Mass flow
- Corrected volume flow
- Target mass flow *
- Carrier mass flow *

Description

Use this function to select the unit for the process variable of totalizer 1-3.

Selection*SI units*

- g
- kg
- t

US units

- oz
- lb
- STon

Custom-specific units

User mass

or

SI units

- cm³
- dm³
- m³
- ml
- l
- hl
- Ml Mega

US units

- af
- ft³
- fl oz (us)
- gal (us)
- kgal (us)
- Mgal (us)
- bbl (us;liq.)
- bbl (us;beer)
- bbl (us;oil)
- bbl (us;tank)

Imperial units

- gal (imp)
- Mgal (imp)
- bbl (imp;beer)
- bbl (imp;oil)

Custom-specific units

User vol.

or

* Visibility depends on order options or device settings

<i>SI units</i>	<i>US units</i>	<i>Imperial units</i>
■ NI	■ Sft ³	Sgal (imp)
■ Nm ³	■ Sgal (us)	
■ Sl	■ Sbbl (us;liq.)	
■ Sm ³		

Custom-specific units
UserCrVol.

Factory setting	Country-specific: ■ kg ■ lb
------------------------	-----------------------------------

Additional information	<i>Description</i>
	 The unit is selected separately for each totalizer. The unit is independent of the option selected in the System units submenu (→ 44).
	<i>Selection</i> The selection depends on the process variable selected in the Assign process variable parameter (→ 94).

Totalizer operation mode



Navigation  Expert → Application → Totalizer 1 to 3 → Operation mode

Prerequisite	One of the following options is selected in the Assign process variable parameter (→ 94) Totalizer 1 to 3 submenu: ■ Volume flow ■ Mass flow ■ Corrected volume flow ■ Target mass flow * ■ Carrier mass flow *
---------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Description Use this function to select how the totalizer summates the flow.

Selection	■ Net flow total ■ Forward flow total ■ Reverse flow total
------------------	------------------------------------------------------------------

Factory setting Net flow total

Additional information	<i>Selection</i>
	 Net flow total Positive and negative flow values are totalized and balanced against one another. Net flow is registered in the flow direction. ■ Forward flow total Only the flow in the forward flow direction is totalized. ■ Reverse flow total Only the flow against the forward flow direction is totalized (= reverse flow total).

* Visibility depends on order options or device settings

Control Totalizer 1 to 3

Navigation

 Expert → Application → Totalizer 1 to 3 → Control Tot. 1 to 3

Prerequisite

One of the following options is selected in the **Assign process variable** parameter
(→ [94](#))**Totalizer 1 to 3** submenu:

- Volume flow
- Mass flow
- Corrected volume flow
- Target mass flow ^{*}
- Carrier mass flow ^{*}

Description

Use this function to select the control of totalizer value 1-3.

Selection

- Totalize
- Reset + hold
- Preset + hold
- Reset + totalize
- Preset + totalize
- Hold

Factory setting

Totalize

Additional information*Selection*

- Totalize
The totalizer is started or continues totalizing with the current counter reading.
- Reset + hold
The totaling process is stopped and the totalizer is reset to 0.
- Preset + hold
The totaling process is stopped and the totalizer is set to its defined start value from the **Preset value** parameter (→ [97](#)).
- Reset + totalize
The totalizer is reset to 0 and the totaling process is restarted.
- Preset + totalize
The totalizer is set to the defined start value in **Preset value** parameter (→ [97](#)) and the totaling process is restarted.

Preset value 1 to 3

Navigation

 Expert → Application → Totalizer 1 to 3 → Preset value 1 to 3

Prerequisite

One of the following options is selected in the **Assign process variable** parameter
(→ [94](#))**Totalizer 1 to 3** submenu:

- Volume flow
- Mass flow
- Corrected volume flow
- Target mass flow ^{*}
- Carrier mass flow ^{*}

Description

Use this function to enter a start value for totalizer 1-3.

* Visibility depends on order options or device settings

User entry	Signed floating-point number
Factory setting	Country-specific: <ul style="list-style-type: none">■ 0 kg■ 0 lb
Additional information	<p><i>User entry</i></p> <p> The unit of the selected process variable is specified for the totalizer in the Unit totalizer parameter (→ 95).</p> <p><i>Example</i></p> <p>This configuration is suitable for applications such as iterative filling processes with a fixed batch quantity.</p>

Failure mode	
Navigation	  Expert → Application → Totalizer 1 to 3 → Failure mode
Prerequisite	One of the following options is selected in the Assign process variable parameter (→ 94) Totalizer 1 to 3 submenu: <ul style="list-style-type: none">■ Volume flow■ Mass flow■ Corrected volume flow■ Target mass flow [*]■ Carrier mass flow [*]
Description	Use this function to select how a totalizer behaves in the event of a device alarm.
Selection	<ul style="list-style-type: none">■ Stop■ Actual value■ Last valid value
Factory setting	Stop
Additional information	<p><i>Description</i></p> <p> This setting does not affect the failsafe mode of other totalizers and the outputs. This is specified in separate parameters.</p> <p><i>Selection</i></p> <p><ul style="list-style-type: none">■ Stop Totalizing is stopped in the event of a device alarm.■ Actual value The totalizer continues to count based on the current measured value; the device alarm is ignored.■ Last valid value The totalizer continues to count based on the last valid measured value before the device alarm occurred.</p>

* Visibility depends on order options or device settings

3.4.2 "Concentration" submenu

 For detailed information on the parameter descriptions for the **Concentration** application package: Special Documentation for the device

Navigation

 Expert → Application → Concentration

► Concentration

3.5 "Diagnostics" submenu

Navigation

 Expert → Diagnostics

► Diagnostics

Actual diagnostics

→  99

Previous diagnostics

→  100

Operating time from restart

→  101

Operating time

→  101

► Diagnostic list

→  102

► Event logbook

→  105

► Device information

→  108

► I/O module

→  111

► Sensor electronic module

→  112

► Display module

→  112

► Min/max values

→  113

► Heartbeat

→  119

► Simulation

→  119

Actual diagnostics

Navigation

 Expert → Diagnostics → Actual diagnos.

Prerequisite

A diagnostic event has occurred.

Description Displays the current diagnostic message. If two or more messages occur simultaneously, the message with the highest priority is shown on the display.

User interface Symbol for diagnostic behavior, diagnostic code and short message.

Additional information *Display*

 Additional pending diagnostic messages can be viewed in the **Diagnostic list** submenu (→  102).

Example

For the display format:

 F271 Main electronic failure

Timestamp

Navigation  Expert → Diagnostics → Timestamp

Description Displays the operating time when the current diagnostic message occurred.

User interface Days (d), hours (h), minutes (m) and seconds (s)

Additional information *Display*

 The diagnostic message can be viewed via the **Actual diagnostics** parameter (→  99).

Example

For the display format:

24d12h13m00s

Previous diagnostics

Navigation   Expert → Diagnostics → Prev.diagnostics

Prerequisite Two diagnostic events have already occurred.

Description Displays the diagnostic message that occurred before the current message.

User interface Symbol for diagnostic behavior, diagnostic code and short message.

Additional information *Example*

For the display format:

 F271 Main electronic failure

Timestamp

Navigation	 Expert → Diagnostics → Timestamp
Description	Displays the operating time when the last diagnostic message before the current message occurred.
User interface	Days (d), hours (h), minutes (m) and seconds (s)
Additional information	<i>Display</i>  The diagnostic message can be viewed via the Previous diagnostics parameter (→  100).
	<i>Example</i> For the display format: 24d12h13m00s

Operating time from restart

Navigation	  Expert → Diagnostics → Time fr. restart
Description	Use this function to display the time the device has been in operation since the last device restart.
User interface	Days (d), hours (h), minutes (m) and seconds (s)


Operating time

Navigation	  Expert → Diagnostics → Operating time
Description	Use this function to display the length of time the device has been in operation.
User interface	Days (d), hours (h), minutes (m) and seconds (s)
Additional information	<i>User interface</i> The maximum number of days is 9999, which is equivalent to 27 years.

3.5.1 "Diagnostic list" submenu

Navigation

Expert → Diagnostics → Diagnostic list

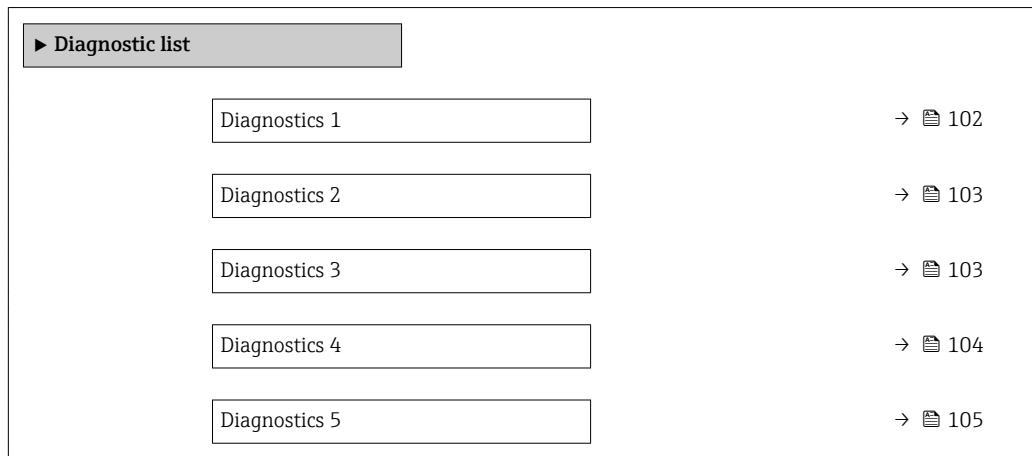

Diagnostics 1

Navigation

Expert → Diagnostics → Diagnostic list → Diagnostics 1

Description

Displays the current diagnostics message with the highest priority.

User interface

Symbol for diagnostic behavior, diagnostic code and short message.

Additional information

Examples

For the display format:

- ⓘ F271 Main electronic failure
- ⓘ F276 I/O module failure

Timestamp

Navigation

Expert → Diagnostics → Diagnostic list → Timestamp

Description

Displays the operating time when the diagnostic message with the highest priority occurred.

User interface

Days (d), hours (h), minutes (m) and seconds (s)

Additional information

Display

 The diagnostic message can be viewed via the **Diagnostics 1** parameter (→ 102).

Example

For the display format:

24d12h13m00s

Diagnostics 2

Navigation  Expert → Diagnostics → Diagnostic list → Diagnostics 2

Description Displays the current diagnostics message with the second-highest priority.

User interface Symbol for diagnostic behavior, diagnostic code and short message.

Additional information *Examples*

For the display format:

-  F271 Main electronic failure
-  F276 I/O module failure

Timestamp

Navigation  Expert → Diagnostics → Diagnostic list → Timestamp

Description Displays the operating time when the diagnostic message with the second-highest priority occurred.

User interface Days (d), hours (h), minutes (m) and seconds (s)

Additional information *Display*

 The diagnostic message can be viewed via the **Diagnostics 2** parameter (→  103).

Example

For the display format:

24d12h13m00s

Diagnostics 3

Navigation  Expert → Diagnostics → Diagnostic list → Diagnostics 3

Description Displays the current diagnostics message with the third-highest priority.

User interface Symbol for diagnostic behavior, diagnostic code and short message.

Additional information *Examples*

For the display format:

-  F271 Main electronic failure
-  F276 I/O module failure

Timestamp

Navigation	 Expert → Diagnostics → Diagnostic list → Timestamp
Description	Displays the operating time when the diagnostic message with the third-highest priority occurred.
User interface	Days (d), hours (h), minutes (m) and seconds (s)
Additional information	<i>Display</i>  The diagnostic message can be viewed via the Diagnostics 3 parameter (→  103). <i>Example</i> For the display format: 24d12h13m00s

Diagnostics 4

Navigation	  Expert → Diagnostics → Diagnostic list → Diagnostics 4
Description	Displays the current diagnostics message with the fourth-highest priority.
User interface	Symbol for diagnostic behavior, diagnostic code and short message.
Additional information	<i>Examples</i> For the display format: <ul style="list-style-type: none">▪  F271 Main electronic failure▪  F276 I/O module failure

Timestamp

Navigation	 Expert → Diagnostics → Diagnostic list → Timestamp
Description	Displays the operating time when the diagnostic message with the fourth-highest priority occurred.
User interface	Days (d), hours (h), minutes (m) and seconds (s)
Additional information	<i>Display</i>  The diagnostic message can be viewed via the Diagnostics 4 parameter (→  104). <i>Example</i> For the display format: 24d12h13m00s

Diagnostics 5

Navigation   Expert → Diagnostics → Diagnostic list → Diagnostics 5

Description Displays the current diagnostics message with the fifth-highest priority.

User interface Symbol for diagnostic behavior, diagnostic code and short message.

Additional information *Examples*

For the display format:

-  F271 Main electronic failure
-  F276 I/O module failure

Timestamp

Navigation   Expert → Diagnostics → Diagnostic list → Timestamp

Description Displays the operating time when the diagnostic message with the fifth-highest priority occurred.

User interface Days (d), hours (h), minutes (m) and seconds (s)

Additional information *Display*

 The diagnostic message can be viewed via the **Diagnostics 5** parameter (→  105).


Example

For the display format:
24d12h13m00s

3.5.2 "Event logbook" submenu

Navigation

 Expert → Diagnostics → Event logbook

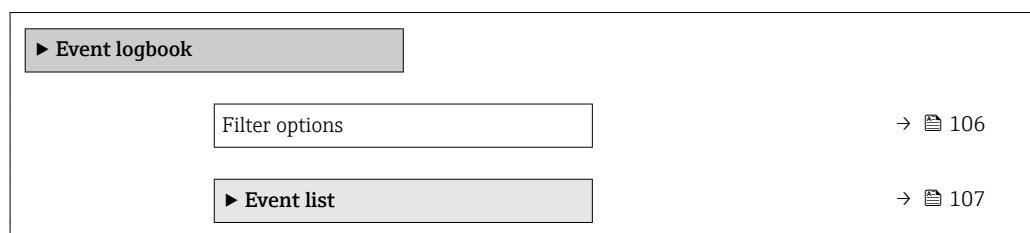

Filter options**Navigation**

Expert → Diagnostics → Event logbook → Filter options

Description

Use this function to select the category whose event messages are displayed in the event list of the local display.

Selection

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information (I)

Factory setting

All

Additional information*Description*

- The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107:
 - F = Failure
 - C = Function Check
 - S = Out of Specification
 - M = Maintenance Required

Filter options**Navigation**

Expert → Diagnostics → Event logbook → Filter options

Description

Use this function to select the category whose event messages are displayed in the event list of the operating tool.

Selection

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information (I)

Factory setting

All

Additional information*Description*

- The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107:
 - F = Failure
 - C = Function Check
 - S = Out of Specification
 - M = Maintenance Required

"Event list" submenu


 The **Event list** submenu is only displayed if operating via the local display.

If operating via the FieldCare operating tool, the event list can be read out with a separate FieldCare module.

If operating via the Web browser, the event messages can be found directly in the **Event logbook** submenu.

Navigation

Expert → Diagnostics → Event logbook → Event list

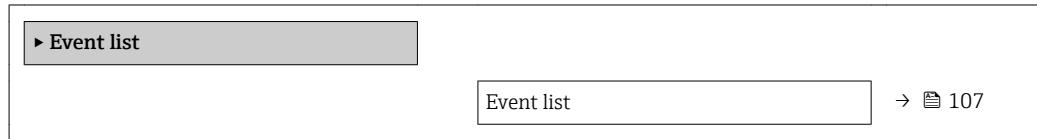**Event list****Navigation**

Expert → Diagnostics → Event logbook → Event list

Description

Displays the history of event messages of the category selected in the **Filter options** parameter (→ 106).

User interface

- For a "Category I" event message

Information event, short message, symbol for event recording and operating time when error occurred

- For a "Category F, C, S, M" event message (status signal)

Diagnostics code, short message, symbol for event recording and operating time when error occurred

Additional information*Description*

A maximum of 20 event messages are displayed in chronological order.

If the advanced HistoROM function is enabled in the device, the event list can contain up to 100 entries.

The following symbols indicate whether an event has occurred or has ended:

- ⊖: Occurrence of the event
- ⊕: End of the event

Examples

For the display format:

- I1091 Configuration modified
⊖ 24d12h13m00s
- ⊗F271 Main electronic failure
⊖ 01d04h12min30s

HistoROM

A HistoROM is a "non-volatile" device memory in the form of an EEPROM.

3.5.3 "Device information" submenu

Navigation

Expert → Diagnostics → Device info

► Device information	
Device tag	→ 108
Serial number	→ 108
Firmware version	→ 109
Device name	→ 109
Order code	→ 109
Extended order code 1	→ 110
Extended order code 2	→ 110
Extended order code 3	→ 110
Configuration counter	→ 111
ENP version	→ 111

Device tag

Navigation

Expert → Diagnostics → Device info → Device tag

Description

Displays a unique name for the measuring point so it can be identified quickly within the plant.

User interface

Max. 32 characters such as lower-case letter or numbers

Factory setting

eh-cubemass100-xxxxx

Serial number

Navigation

Expert → Diagnostics → Device info → Serial number

Description

Displays the serial number of the measuring device.

 The number can be found on the nameplate of the sensor and transmitter.

User interface

A maximum of 11-digit character string comprising letters and numbers.

Additional information*Description***Uses of the serial number**

- To identify the measuring device quickly, e.g. when contacting Endress+Hauser.
- To obtain specific information on the measuring device using the Device Viewer: www.endress.com/deviceviewer

Firmware version**Navigation**

Expert → Diagnostics → Device info → Firmware version

Description

Displays the device firmware version installed.

User interface

Character string in the format xx.yy.zz

Additional information*Display*

The Firmware version is also located:

- On the title page of the Operating instructions
- On the transmitter nameplate

Device name**Navigation**

Expert → Diagnostics → Device info → Device name

Description

Displays a unique name for the measuring point so it can be identified quickly within the plant.

User interface

Max. 32 characters such as lower-case letter or numbers

Factory setting

eh-cubemass100-xxxxx

Order code**Navigation**

Expert → Diagnostics → Device info → Order code

Description

Displays the device order code.

User interface

Character string composed of letters, numbers and certain punctuation marks (e.g. /).

Additional information*Description*

The order code can be found on the nameplate of the sensor and transmitter in the "Order code" field.

The order code is generated from the extended order code through a process of reversible transformation. The extended order code indicates the attributes for all the device features in the product structure. The device features are not directly readable from the order code.

**Uses of the order code**

- To order an identical spare device.
- To identify the device quickly and easily, e.g. when contacting Endress+Hauser.

Extended order code 1

**Navigation**

Expert → Diagnostics → Device info → Ext. order cd. 1

Description

Displays the first part of the extended order code.

On account of length restrictions, the extended order code is split into a maximum of 3 parameters.

User interface

Character string

Additional information*Description*

The extended order code indicates the version of all the features of the product structure for the measuring device and thus uniquely identifies the measuring device.



The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.

Extended order code 2

**Navigation**

Expert → Diagnostics → Device info → Ext. order cd. 2

Description

For displaying the second part of the extended order code.

User interface

Character string

Additional information

For additional information, see **Extended order code 1** parameter (→ 110)

Extended order code 3

**Navigation**

Expert → Diagnostics → Device info → Ext. order cd. 3

Description

For displaying the third part of the extended order code.

User interface

Character string

Additional information

For additional information, see **Extended order code 1** parameter (→ 110)

Configuration counter


Navigation	  Expert → Diagnostics → Device info → Config. counter
Description	Displays the number of parameter modifications for the device. When the user changes a parameter setting, this counter is incremented.
User interface	0 to 65 535

ENP version

Navigation	  Expert → Diagnostics → Device info → ENP version
Description	Displays the version of the electronic nameplate.
User interface	Character string
Factory setting	2.02.00
Additional information	<p><i>Description</i></p> <p>This electronic nameplate stores a data record for device identification that includes more data than the nameplates attached to the outside of the device.</p>

3.5.4 "I/O module" submenu

Navigation   Expert → Diagnostics → I/O module

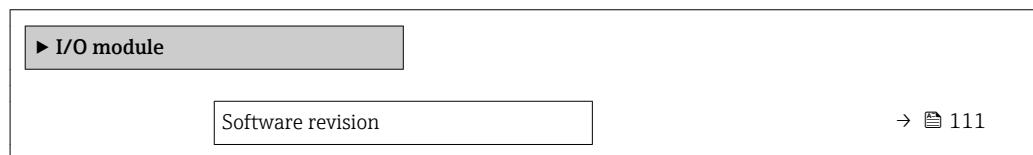


Software revision

Navigation	  Expert → Diagnostics → I/O module → Software rev.
Description	Use this function to display the software revision of the module.
User interface	Positive integer

3.5.5 "Sensor electronic module" submenu

Navigation

Expert → Diagnostics → Sens. electronic

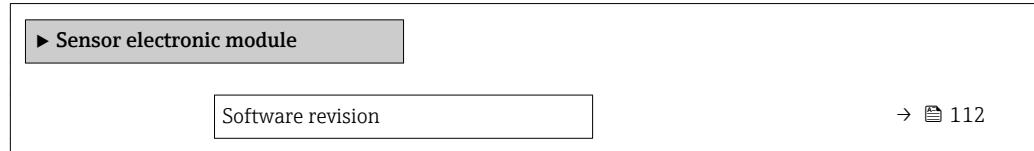

Software revision

Navigation

Expert → Diagnostics → Sens. electronic → Software rev.

Description

Use this function to display the software revision of the module.


User interface

Positive integer

3.5.6 "Display module" submenu

Navigation

Expert → Diagnostics → Display module

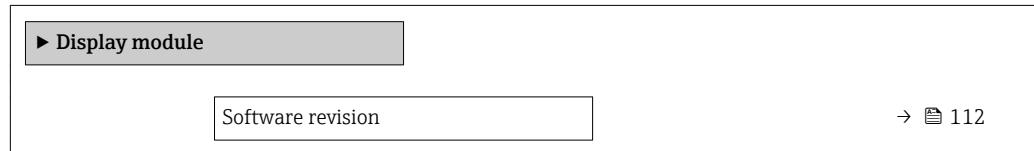

Software revision

Navigation

Expert → Diagnostics → Display module → Software rev.

Description

Use this function to display the software revision of the module.

User interface

Positive integer

3.5.7 "Min/max values" submenu

Navigation

Expert → Diagnostics → Min/max val.

▶ Min/max values	
Reset min/max values	→ 113
▶ Electronic temperature	→ 114
▶ Medium temperature	→ 115
▶ Carrier pipe temperature	→ 115
▶ Oscillation frequency	→ 116
▶ Oscillation amplitude	→ 117
▶ Oscillation damping	→ 118
▶ Signal asymmetry	→ 118

Reset min/max values



Navigation

Expert → Diagnostics → Min/max val. → Reset min/max

Description

Use this function to select measured variables whose minimum, maximum and average measured values are to be reset.

Selection

- Cancel
- Oscillation amplitude
- Oscillation amplitude 1 *
- Oscillation damping
- Torsion oscillation damping *
- Oscillation frequency
- Torsion oscillation frequency *
- Signal asymmetry

Factory setting


Cancel

Additional information

Selection

Detailed description of the options **Oscillation frequency**, **Oscillation amplitude**, **Oscillation damping** and **Signal asymmetry**: Value 1 display parameter (→ 16)

* Visibility depends on order options or device settings

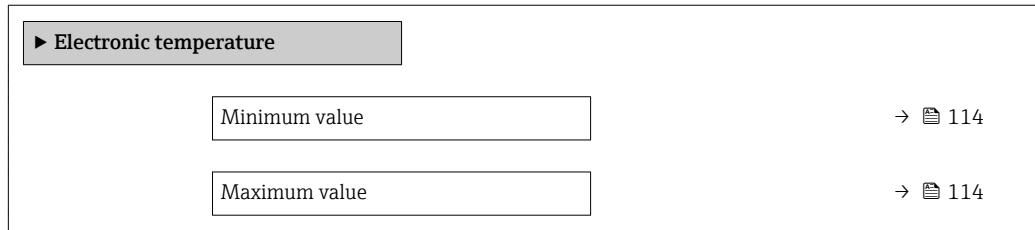"Electronic temperature" submenu**Navigation** Expert → Diagnostics → Min/max val. → Electronic temp.

Minimum value**Navigation** Expert → Diagnostics → Min/max val. → Electronic temp. → Minimum value**Description**

Displays the lowest previously measured temperature value of the main electronics module.

User interface

Signed floating-point number

Additional information

Dependency

 The unit is taken from the **Temperature unit** parameter (→  50)

Maximum value**Navigation** Expert → Diagnostics → Min/max val. → Electronic temp. → Maximum value**Description**

Displays the highest previously measured temperature value of the main electronics module.

User interface

Signed floating-point number

Additional information


Dependency

 The unit is taken from the **Temperature unit** parameter (→  50)

"Medium temperature" submenu

Navigation

Expert → Diagnostics → Min/max val. → Medium temp.

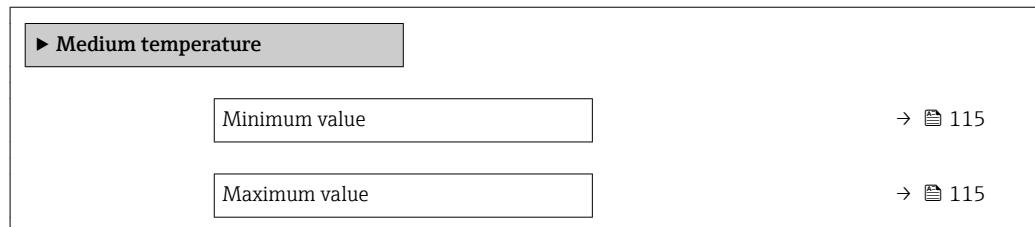

Minimum value

Navigation

Expert → Diagnostics → Min/max val. → Medium temp. → Minimum value

Description

Displays the lowest previously measured medium temperature value.

User interface

Signed floating-point number

Additional information

Dependency

 The unit is taken from the **Temperature unit** parameter (→ 50)

Maximum value

Navigation

Expert → Diagnostics → Min/max val. → Medium temp. → Maximum value

Description

Displays the highest previously measured medium temperature value.

User interface

Signed floating-point number

Additional information


Dependency

 The unit is taken from the **Temperature unit** parameter (→ 50)

"Carrier pipe temperature" submenu

Navigation

Expert → Diagnostics → Min/max val. → Carr. pipe temp.

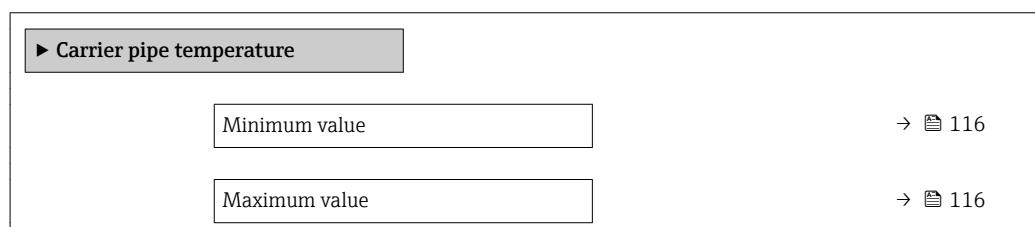

Minimum value


Navigation	 Expert → Diagnostics → Min/max val. → Carr. pipe temp. → Minimum value
Prerequisite	Order code for "Application package", option EB "Heartbeat Verification + Monitoring"
Description	Displays the lowest previously measured temperature value of the carrier pipe.
User interface	Signed floating-point number
Additional information	<i>Dependency</i>  The unit is taken from the Temperature unit parameter (→  50)

Maximum value

Navigation	 Expert → Diagnostics → Min/max val. → Carr. pipe temp. → Maximum value
Prerequisite	Order code for "Application package", option EB "Heartbeat Verification + Monitoring"
Description	Displays the highest previously measured temperature value of the carrier pipe.
User interface	Signed floating-point number
Additional information	<i>Dependency</i>  The unit is taken from the Temperature unit parameter (→  50)

"Oscillation frequency" submenu

Navigation  Expert → Diagnostics → Min/max val. → Oscil. frequency

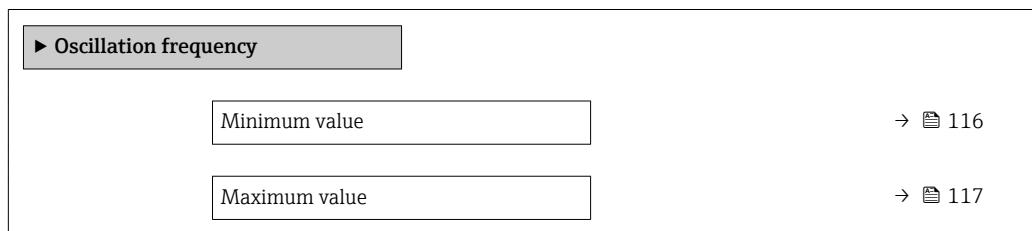**Minimum value**

Navigation	 Expert → Diagnostics → Min/max val. → Oscil. frequency → Minimum value
Description	Displays the lowest previously measured oscillation frequency.

User interface Signed floating-point number

Maximum value


Navigation Expert → Diagnostics → Min/max val. → Oscil. frequency → Maximum value

Description Displays the highest previously measured oscillation frequency.

User interface Signed floating-point number

"Oscillation amplitude" submenu

Navigation Expert → Diagnostics → Min/max val. → Oscil. amplitude

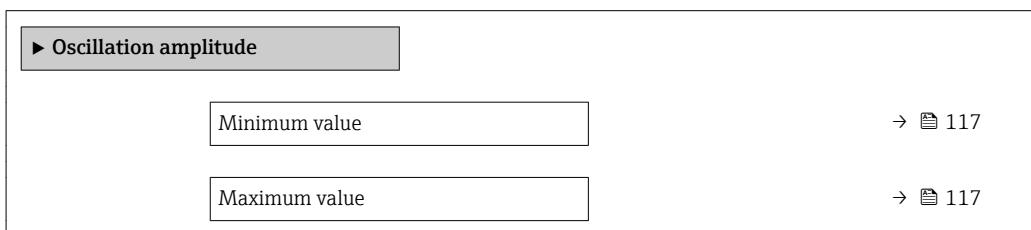

Minimum value

Navigation Expert → Diagnostics → Min/max val. → Oscil. amplitude → Minimum value

Description Displays the lowest previously measured oscillation amplitude.

User interface Signed floating-point number

Maximum value


Navigation Expert → Diagnostics → Min/max val. → Oscil. amplitude → Maximum value

Description Displays the highest previously measured oscillation amplitude.

User interface Signed floating-point number

"Oscillation damping" submenu**Navigation**

Expert → Diagnostics → Min/max val. → Oscil. damping

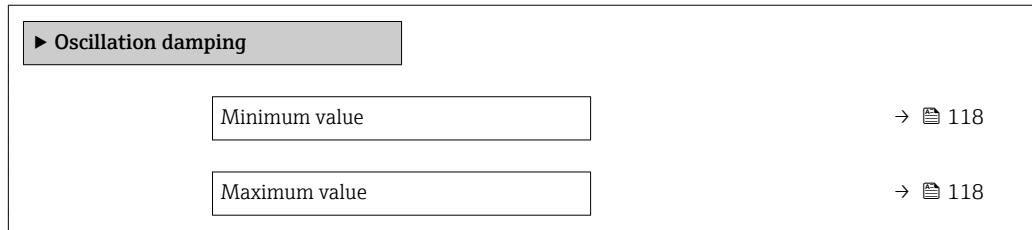

Minimum value

Navigation

Expert → Diagnostics → Min/max val. → Oscil. damping → Minimum value

Description

Displays the lowest previously measured oscillation damping.

User interface

Signed floating-point number

Maximum value

Navigation

Expert → Diagnostics → Min/max val. → Oscil. damping → Maximum value

Description


Displays the highest previously measured oscillation damping.

User interface

Signed floating-point number

"Signal asymmetry" submenu**Navigation**

Expert → Diagnostics → Min/max val. → Signal asymmetry

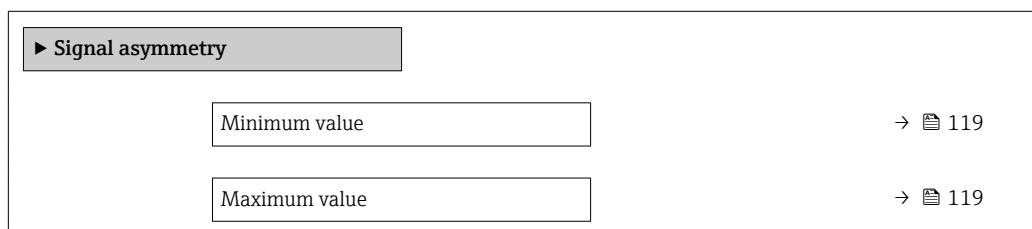

Minimum value

Navigation	Expert → Diagnostics → Min/max val. → Signal asymmetry → Minimum value
Description	Displays the lowest previously measured signal asymmetry.
User interface	Signed floating-point number


Maximum value

Navigation	Expert → Diagnostics → Min/max val. → Signal asymmetry → Maximum value
Description	Displays the highest previously measured signal asymmetry.
User interface	Signed floating-point number


3.5.8 "Heartbeat" submenu

 For detailed information on the parameter descriptions of the **Heartbeat Verification** application package, see the Special Documentation for the device

Navigation  Expert → Diagnostics → Heartbeat

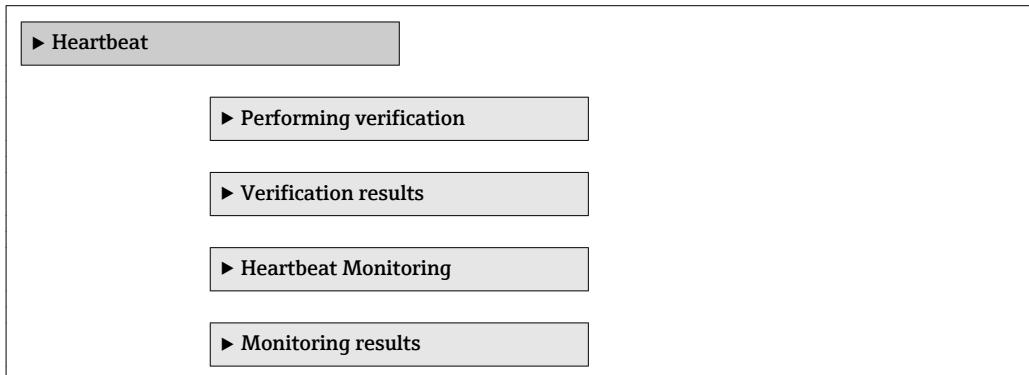**3.5.9 "Simulation" submenu**

Navigation  Expert → Diagnostics → Simulation

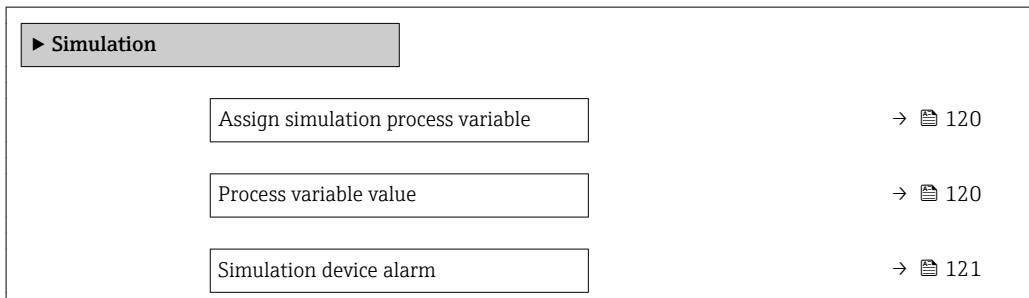

Diagnostic event category	→ 121
Diagnostic event simulation	→ 121

Assign simulation process variable



Navigation

Expert → Diagnostics → Simulation → Assign proc.var.

Description

Use this function to select a process variable for the simulation process that is activated. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.

Selection

- Off
- Mass flow
- Volume flow
- Corrected volume flow
- Density
- Reference density
- Temperature
- Concentration *
- Target mass flow *
- Carrier mass flow *

Factory setting

Off

Additional information

Description

The simulation value of the process variable selected is defined in the **Process variable value** parameter (→ [120](#)).

Process variable value



Navigation

Expert → Diagnostics → Simulation → Proc. var. value

Prerequisite

One of the following options is selected in the **Assign simulation process variable** parameter (→ [120](#)):

- Mass flow
- Volume flow
- Corrected volume flow
- Density
- Reference density
- Temperature
- Concentration *
- Target mass flow *
- Carrier mass flow *

* Visibility depends on order options or device settings

Description	Use this function to enter a simulation value for the selected process variable. Subsequent measured value processing and the signal output use this simulation value. In this way, users can verify whether the measuring device has been configured correctly.
User entry	Depends on the process variable selected
Factory setting	0
Additional information	<p><i>User entry</i></p> <p> The unit of the displayed measured value is taken from the System units submenu (→ 44).</p>

Simulation device alarm



Navigation	 Expert → Diagnostics → Simulation → Sim. alarm
Description	Use this function to switch the device alarm on and off.
Selection	<ul style="list-style-type: none"> ■ Off ■ On
Factory setting	Off
Additional information	<p><i>Description</i></p> <p>The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.</p>

Diagnostic event category



Navigation	 Expert → Diagnostics → Simulation → Event category
Description	Use this function to select the category of the diagnostic events that are displayed for the simulation in the Diagnostic event simulation parameter (→ 121).
Selection	<ul style="list-style-type: none"> ■ Sensor ■ Electronics ■ Configuration ■ Process
Factory setting	Process

Diagnostic event simulation



Navigation	 Expert → Diagnostics → Simulation → Diag. event sim.
Description	Use this function to select a diagnostic event for the simulation process that is activated.

Selection	<ul style="list-style-type: none">■ Off■ Diagnostic event picklist (depends on the category selected)
Factory setting	Off
Additional information	<p><i>Description</i></p> <p> For the simulation, you can choose from the diagnostic events of the category selected in the Diagnostic event category parameter (→ 121).</p>

4 Country-specific factory settings

4.1 SI units

 Not valid for USA and Canada.

4.1.1 System units

Mass	kg
Mass flow	kg/h
Volume	l
Volume flow	l/h
Corrected volume	Nl
Corrected volume flow	Nl/h
Density	kg/l
Reference density	kg/Nl
Temperature	°C
Pressure	bar a

4.1.2 Full scale values

 The factory settings apply to the following parameters:
100% bar graph value 1

Nominal diameter [mm]	[kg/h]
1	4
2	20
4	90
6	200

4.1.3 On value low flow cut off

 The switch-on point depends on the type of medium and the nominal diameter.

Nominal diameter [mm]	On-value for liquid [kg/h]
1	0.08
2	0.4
4	1.8
6	4

Nominal diameter [mm]	Switch-on value for gas [kg/h]
1	0.02
2	0.1

Nominal diameter [mm]	Switch-on value for gas [kg/h]
4	0.45
6	1

4.2 US units

 Only valid for USA and Canada.

4.2.1 System units

Mass	lb
Mass flow	lb/min
Volume	gal (us)
Volume flow	gal/min (us)
Corrected volume	Sft ³
Corrected volume flow	Sft ³ /min
Density	lb/ft ³
Reference density	lb/Sft ³
Temperature	lb/ft ³
Pressure	psi a

4.2.2 Full scale values

 The factory settings apply to the following parameters:
100% bar graph value 1

Nominal diameter [in]	[lb/min]
1/24	0.15
1/12	0.75
1/8	3.3
1/4	7.4

4.2.3 On value low flow cut off

 The switch-on point depends on the type of medium and the nominal diameter.

Nominal diameter [in]	On-value for liquid [lb/min]
1/24	0.003
1/12	0.015
1/8	0.066
1/4	0.15

Nominal diameter [in]	Switch-on value for gas [lb/min]
$^{1/}_{24}$	0.001
$^{1/}_{12}$	0.004
$^{1/}_8$	0.016
$^{1/}_4$	0.0375

5 Explanation of abbreviated units

5.1 SI units

Process variable	Units	Explanation
Density	g/cm ³ , g/m ³	Gram/volume unit
	kg/dm ³ , kg/l, kg/m ³	Kilogram/volume unit
	SD4°C, SD15°C, SD20°C	Specific density: The specific density is the ratio of the density of the fluid to the density of water at a water temperature of 4 °C (39 °F), 15 °C (59 °F), 20 °C (68 °F).
	SG4°C, SG15°C, SG20°C	Specific gravity: The specific gravity is the ratio of the density of the fluid to the density of water at a water temperature of 4 °C (39 °F), 15 °C (59 °F), 20 °C (68 °F).
Pressure	Pa a, kPa a, MPa a	Pascal, kilopascal, megapascal (absolute)
	bar	Bar
	Pa g, kPa g, MPa g	Pascal, kilopascal, megapascal (relative/gauge)
	bar g	Bar (relative/gauge)
Mass	g, kg, t	Gram, kilogram, metric ton
Mass flow	g/s, g/min, g/h, g/d	Gram/time unit
	kg/s, kg/min, kg/h, kg/d	Kilogram/time unit
	t/s, t/min, t/h, t/d	Metric ton/time unit
Reference density	kg/Nm ³ , kg/Nl, g/Scm ³ , kg/Sm ³	Kilogram, gram/standard volume unit
Corrected volume	Nl, Nm ³ , Sm ³	Normal liter, normal cubic meter, standard cubic meter
Corrected volume flow	Nl/s, Nl/min, Nl/h, Nl/d	Normal liter/time unit
	Nm ³ /s, Nm ³ /min, Nm ³ /h, Nm ³ /d	Normal cubic meter/time unit
	Sm ³ /s, Sm ³ /min, Sm ³ /h, Sm ³ /d	Standard cubic meter/time unit
Temperature	°C, K	Celsius, Kelvin
Volume	cm ³ , dm ³ , m ³	Cubic centimeter, cubic decimeter, cubic meter
	ml, l, hl, Ml Mega	Milliliter, liter, hectoliter, megaliter
Volume flow	cm ³ /s, cm ³ /min, cm ³ /h, cm ³ /d	Cubic centimeter/time unit
	dm ³ /s, dm ³ /min, dm ³ /h, dm ³ /d	Cubic decimeter/time unit
	m ³ /s, m ³ /min, m ³ /h, m ³ /d	Cubic meter/time unit
	ml/s, ml/min, ml/h, ml/d	Milliliter/time unit
	l/s, l/min, l/h, l/d	Liter/time unit
	hl/s, hl/min, hl/h, hl/d	Hectoliter/time unit
	Ml/s, Ml/min, Ml/h, Ml/d	Megaliter/time unit
Time	s, m, h, d, y	Second, minute, hour, day, year

5.2 US units

Process variable	Units	Explanation
Density	lb/ft ³ , lb/gal (us)	Pound/cubic foot, pound/gallon
	lb/bbl (us;liq.), lb/bbl (us;beer), lb/bbl (us;oil), lb/bbl (us;tank)	Pound/volume unit

Process variable	Units	Explanation
Pressure	psi a	Pounds per square inch (absolute)
	psi g	Pounds per square inch (gauge)
Mass	oz, lb, STon	Ounce, pound, standard ton
Mass flow	oz/s, oz/min, oz/h, oz/d	Ounce/time unit
	lb/s, lb/min, lb/h, lb/d	Pound/time unit
	STon/s, STon/min, STon/h, STon/d	Standard ton/time unit
Reference density	lb/Sft ³	Weight unit/standard volume unit
Corrected volume	Sft ³ , Sgal (us), Sbbl (us;liq.)	Standard cubic foot, standard gallon, standard barrel
Corrected volume flow	Sft ³ /s, Sft ³ /min, Sft ³ /h, Sft ³ /d	Standard cubic foot/time unit
	Sgal/s (us), Sgal/min (us), Sgal/h (us), Sgal/d (us)	Standard gallon/time unit
	Sbbl/s (us;liq.), Sbbl/min (us;liq.), Sbbl/h (us;liq.), Sbbl/d (us;liq.)	Barrel/time unit (normal liquids)
Temperature	°F, °R	Fahrenheit, Rankine
Volume	af	Acre foot
	ft ³	Cubic foot
	fl oz (us), gal (us), kgal (us), Mgal (us)	Fluid ounce, gallon, kilogallon, million gallon
	bbl (us;liq.), bbl (us;beer), bbl (us;oil), bbl (us;tank)	Barrel (normal liquids), barrel (beer), barrel (petrochemicals), barrel (filling tanks)
Volume flow	af/s, af/min, af/h, af/d	Acre foot/time unit
	ft ³ /s, ft ³ /min, ft ³ /h, ft ³ /d	Cubic foot/time unit
	fl oz/s (us), fl oz/min (us), fl oz/h (us), fl oz/d (us)	Fluid ounce/time unit
	gal/s (us), gal/min (us), gal/h (us), gal/d (us)	Gallon/time unit
	kgal/s (us), kgal/min (us), kgal/h (us), kgal/d (us)	Kilogallon/time unit
	Mgal/s (us), Mgal/min (us), Mgal/h (us), Mgal/d (us)	Million gallon/time unit
	bbl/s (us;liq.), bbl/min (us;liq.), bbl/h (us;liq.), bbl/d (us;liq.)	Barrel/time unit (normal liquids) Normal liquids: 31.5 gal/bbl
	bbl/s (us;beer), bbl/min (us;beer), bbl/h (us;beer), bbl/d (us;beer)	Barrel /time unit (beer) Beer: 31.0 gal/bbl
	bbl/s (us;oil), bbl/min (us;oil), bbl/h (us;oil), bbl/d (us;oil)	Barrel/time unit (petrochemicals) Petrochemicals: 42.0 gal/bbl
Time	bbl/s (us;tank), bbl/min (us;tank), bbl/h (us;tank), bbl/d (us;tank)	Barrel/time unit (filling tank) Filling tanks: 55.0 gal/bbl
	s, m, h, d, y	Second, minute, hour, day, year
	am, pm	Ante meridiem (before midday), post meridiem (after midday)

5.3 Imperial units

Process variable	Units	Explanation
Density	lb/gal (imp), lb/bbl (imp;beer), lb/bbl (imp;oil)	Pound/volume unit
Corrected volume	Sgal (imp)	Standard gallon
Corrected volume flow	Sgal/s (imp), Sgal/min (imp), Sgal/h (imp), Sgal/d (imp)	Standard gallon/time unit
Volume	gal (imp), Mgal (imp)	Gallon, mega gallon
	bbl (imp;beer), bbl (imp;oil)	Barrel (beer), barrel (petrochemicals)
Volume flow	gal/s (imp), gal/min (imp), gal/h (imp), gal/d (imp)	Gallon/time unit
	Mgal/s (imp), Mgal/min (imp), Mgal/h (imp), Mgal/d (imp)	Mega gallon/time unit
	bbl/s (imp;beer), bbl/min (imp;beer), bbl/h (imp;beer), bbl/d (imp;beer)	Barrel /time unit (beer) Beer: 36.0 gal/bbl
	bbl/s (imp;oil), bbl/min (imp;oil), bbl/h (imp;oil), bbl/d (imp;oil)	Barrel/time unit (petrochemicals) Petrochemicals: 34.97 gal/bbl
Time	s, m, h, d, y	Second, minute, hour, day, year
	am, pm	Ante meridiem (before midday), post meridiem (after midday)

Index

0 ... 9

0% bargraph value 1 (Parameter)	17
0% bargraph value 3 (Parameter)	20
100% bargraph value 1 (Parameter)	18
100% bargraph value 3 (Parameter)	21

A

Access status display (Parameter)	11, 25
Access status tooling (Parameter)	12
Activate SW option (Parameter)	36
Actual diagnostics (Parameter)	99
Administration (Submenu)	34
Alarm delay (Parameter)	26
Application (Submenu)	93
Assign behavior of diagnostic no. 046 (Parameter)	28
Assign behavior of diagnostic no. 140 (Parameter)	28
Assign behavior of diagnostic no. 144 (Parameter)	29
Assign behavior of diagnostic no. 192 (Parameter)	32
Assign behavior of diagnostic no. 274 (Parameter)	32
Assign behavior of diagnostic no. 392 (Parameter)	33
Assign behavior of diagnostic no. 592 (Parameter)	33
Assign behavior of diagnostic no. 832 (Parameter)	29
Assign behavior of diagnostic no. 833 (Parameter)	30
Assign behavior of diagnostic no. 834 (Parameter)	30
Assign behavior of diagnostic no. 835 (Parameter)	30
Assign behavior of diagnostic no. 912 (Parameter)	31
Assign behavior of diagnostic no. 913 (Parameter)	31
Assign behavior of diagnostic no. 944 (Parameter)	31
Assign behavior of diagnostic no. 948 (Parameter)	32
Assign behavior of diagnostic no. 992 (Parameter)	33
Assign process variable (Parameter)	60, 63, 94
Assign simulation process variable (Parameter)	120

B

Backlight (Parameter)	25
---------------------------------	----

C

C0 to 5 (Parameter)	87
Calculated values (Submenu)	72
Calibration (Submenu)	86
Calibration factor (Parameter)	86
Carrier mass flow (Parameter)	42
Carrier pipe temperature (Submenu)	115
Communication (Submenu)	88
Concentration (Parameter)	41
Concentration (Submenu)	99
Configuration counter (Parameter)	111
Confirm access code (Parameter)	35
Contrast display (Parameter)	25
Control Totalizer 1 to 3 (Parameter)	97
Corrected volume flow (Parameter)	39
Corrected volume flow calculation (Parameter)	72
Corrected volume flow calculation (Submenu)	72
Corrected volume flow factor (Parameter)	84
Corrected volume flow offset (Parameter)	84
Corrected volume flow unit (Parameter)	47

Corrected volume unit (Parameter)	48
---------------------------------------------	----

D

Date/time format (Parameter)	51
Decimal places 1 (Parameter)	18
Decimal places 2 (Parameter)	19
Decimal places 3 (Parameter)	21
Decimal places 4 (Parameter)	22
Default gateway (Parameter)	90
Define access code (Parameter)	34, 35
Define access code (Wizard)	34
Density (Parameter)	40
Density adjustment (Wizard)	77
Density adjustment factor (Parameter)	80
Density adjustment mode (Parameter)	78
Density adjustment offset (Parameter)	80
Density damping (Parameter)	58
Density factor (Parameter)	83
Density offset (Parameter)	83
Density setpoint 1 (Parameter)	78
Density setpoint 2 (Parameter)	79
Density unit (Parameter)	49
Device ID (Parameter)	93
Device information (Submenu)	108
Device name (Parameter)	109
Device reset (Parameter)	36
Device revision (Parameter)	93
Device tag (Parameter)	108
Device type (Parameter)	92
Diagnostic behavior (Submenu)	27
Diagnostic event category (Parameter)	121
Diagnostic event simulation (Parameter)	121
Diagnostic handling (Submenu)	26
Diagnostic list (Submenu)	102
Diagnostics (Submenu)	99
Diagnostics 1 (Parameter)	102
Diagnostics 2 (Parameter)	103
Diagnostics 3 (Parameter)	103
Diagnostics 4 (Parameter)	104
Diagnostics 5 (Parameter)	105
Direct access	
0% bargraph value 1	17
0% bargraph value 3	20
100% bargraph value 1	18
100% bargraph value 3	21
Access status display	11, 25
Access status tooling	12
Activate SW option	36
Actual diagnostics	99
Alarm delay	26
Assign behavior of diagnostic no. 046	28
Assign behavior of diagnostic no. 140	28
Assign behavior of diagnostic no. 144	29
Assign behavior of diagnostic no. 192	32
Assign behavior of diagnostic no. 274	32
Assign behavior of diagnostic no. 392	33

Assign behavior of diagnostic no. 592	33	Display interval	22
Assign behavior of diagnostic no. 832	29	Display language	14
Assign behavior of diagnostic no. 833	30	ENP version	111
Assign behavior of diagnostic no. 834	30	Enter access code	12
Assign behavior of diagnostic no. 835	30	Execute density adjustment	79
Assign behavior of diagnostic no. 912	31	Extended order code 1	110
Assign behavior of diagnostic no. 913	31	Extended order code 2	110
Assign behavior of diagnostic no. 944	31	Extended order code 3	110
Assign behavior of diagnostic no. 948	32	External pressure	69
Assign behavior of diagnostic no. 992	33	External reference density	73
Assign process variable	60, 63	External temperature	70
Totalizer 1 to 3	94	Fail safe type external pressure	69
Assign simulation process variable	120	Fail safe type of external ref. density	75
Backlight	25	Fail safe type of external temperature	71
C0 to 5	87	Fail safe value of external pressure	69
Calibration factor	86	Fail safe value of external ref. density	75
Carrier mass flow	42	Fail safe value of external temperature	71
Concentration	41	Failure mode	
Configuration counter	111	Totalizer 1 to 3	98
Contrast display	25	Filter options	106
Control Totalizer 1 to 3	97	Firmware version	109
Corrected volume flow	39	Fixed reference density	73
Corrected volume flow calculation	72	Flow damping	58
Corrected volume flow factor	84	Flow override	59
Corrected volume flow offset	84	Format display	15
Corrected volume flow unit	47	Header	23
Corrected volume unit	48	Header text	24
Date/time format	51	High value partial filled pipe detection	64
Decimal places 1	18	Installation direction	76
Decimal places 2	19	IP address	89
Decimal places 3	21	Limit value measuring tube damping	87
Decimal places 4	22	Linear expansion coefficient	74
Default gateway	90	Locking status	11
Define access code	35	Login page	91
Density	40	Low value partial filled pipe detection	63
Density adjustment factor	80	MAC address	89
Density adjustment mode	78	Manufacturer-specific diagnostics	92
Density adjustment offset	80	Mass flow	39
Density damping	58	Mass flow factor	82
Density factor	83	Mass flow offset	82
Density offset	83	Mass flow unit	44
Density setpoint 1	78	Mass unit	45
Density setpoint 2	79	Maximum damping partial filled pipe det.	65
Density unit	49	Maximum value	114, 115, 116, 117, 118, 119
Device ID	93	Minimum value	114, 115, 116, 117, 118, 119
Device name	109	Name of station	91
Device reset	36	Nominal diameter	86
Device revision	93	Off value low flow cutoff	61
Device tag	108	On value low flow cutoff	60
Device type	92	Operating time	101
Diagnostic event category	121	Operating time from restart	101
Diagnostic event simulation	121	Order code	109
Diagnostics 1	102	Preset value 1 to 3	97
Diagnostics 2	103	Pressure compensation	68
Diagnostics 3	103	Pressure shock suppression	61
Diagnostics 4	104	Pressure unit	50
Diagnostics 5	105	Pressure value	41, 68
Direct access	10	Previous diagnostics	100
Display damping	23	Process variable value	120

Progress	77, 79	Web server language	88
Reference density	40	Zero point	86
Reference density factor	85	Zero point adjustment control	77
Reference density offset	84	Direct access (Parameter)	10
Reference density unit	49	Display (Submenu)	13
Reference sound velocity	67	Display damping (Parameter)	23
Reference temperature	73	Display interval (Parameter)	22
Reset all totalizers	93	Display language (Parameter)	14
Reset min/max values	113	Display module (Submenu)	112
Response time part. filled pipe detect.	64	Document	
Select gas type	66	Explanation of the structure of a parameter	
Select medium	66	description	6
Separator	24	Function	4
Serial number	108	Structure	4
Simulation device alarm	121	Symbols used	6
Software option overview	37	Target group	4
Software revision	111, 112	Using the document	4
Square expansion coefficient	74	Document function	4
Subnet mask	90		
Target mass flow	41	E	
Temperature	40	Electronic temperature (Submenu)	114
Temperature coefficient sound velocity	67	ENP version (Parameter)	111
Temperature damping	59	Enter access code (Parameter)	12
Temperature factor	85	Event list (Submenu)	107
Temperature mode	70	Event logbook (Submenu)	105
Temperature offset	85	Execute density adjustment (Parameter)	79
Temperature unit	50	Extended order code 1 (Parameter)	110
Timestamp	100, 101, 102, 103, 104, 105	Extended order code 2 (Parameter)	110
Totalizer operation mode		Extended order code 3 (Parameter)	110
Totalizer 1 to 3	96	External compensation (Submenu)	67
Totalizer overflow 1 to 3	43	External pressure (Parameter)	69
Totalizer value 1 to 3	42	External reference density (Parameter)	73
Unit totalizer		External temperature (Parameter)	70
Totalizer 1 to 3	95		
User corrected volume factor	55	F	
User corrected volume offset	55	Factory settings	123
User corrected volume text	55	SI units	123
User density factor	56	US units	124
User density offset	56	Fail safe type external pressure (Parameter)	69
User density text	56	Fail safe type of external ref. density (Parameter)	75
User mass factor	53	Fail safe type of external temperature (Parameter)	71
User mass offset	53	Fail safe value of external pressure (Parameter)	69
User mass text	52	Fail safe value of external ref. density (Parameter)	75
User pressure factor	57	Fail safe value of external temperature (Parameter)	71
User pressure offset	57	Failure mode (Parameter)	98
User pressure text	57	Filter options (Parameter)	106
User volume factor	54	Firmware version (Parameter)	109
User volume offset	54	Fixed reference density (Parameter)	73
User volume text	54	Flow damping (Parameter)	58
Value 1 display	16	Flow override (Parameter)	59
Value 2 display	19	Format display (Parameter)	15
Value 3 display	20	Function	
Value 4 display	21	see Parameter	
Volume flow	39		
Volume flow factor	83	H	
Volume flow offset	82	Header (Parameter)	23
Volume flow unit	46	Header text (Parameter)	24
Volume unit	47	Heartbeat (Submenu)	119
Web server functionality	90	High value partial filled pipe detection (Parameter)	64

I

- I/O module (Submenu) 111
 Installation direction (Parameter) 76
 IP address (Parameter) 89

L

- Limit value measuring tube damping (Parameter) 87
 Linear expansion coefficient (Parameter) 74
 Locking status (Parameter) 11
 Login page (Parameter) 91
 Low flow cut off (Submenu) 60
 Low value partial filled pipe detection (Parameter) 63

M

- MAC address (Parameter) 89
 Manufacturer-specific diagnostics (Parameter) 92
 Mass flow (Parameter) 39
 Mass flow factor (Parameter) 82
 Mass flow offset (Parameter) 82
 Mass flow unit (Parameter) 44
 Mass unit (Parameter) 45
 Maximum damping partial filled pipe det.
 (Parameter) 65
 Maximum value (Parameter) 114, 115, 116, 117,
 118, 119
 Measured values (Submenu) 38
 Measurement mode (Submenu) 65
 Medium temperature (Submenu) 115
 Min/max values (Submenu) 113
 Minimum value (Parameter) 114, 115, 116, 117,
 118, 119

N

- Name of station (Parameter) 91
 Nominal diameter (Parameter) 86

O

- Off value low flow cutoff (Parameter) 61
 On value low flow cutoff (Parameter) 60
 Operating time (Parameter) 101
 Operating time from restart (Parameter) 101
 Order code (Parameter) 109
 Oscillation amplitude (Submenu) 117
 Oscillation damping (Submenu) 118
 Oscillation frequency (Submenu) 116

P

- Parameter
 Structure of a parameter description 6
 Partially filled pipe detection (Submenu) 63
 Preset value 1 to 3 (Parameter) 97
 Pressure compensation (Parameter) 68
 Pressure shock suppression (Parameter) 61
 Pressure unit (Parameter) 50
 Pressure value (Parameter) 41, 68
 Previous diagnostics (Parameter) 100
 Process parameters (Submenu) 58
 Process variable adjustment (Submenu) 81
 Process variable value (Parameter) 120

- Process variables (Submenu) 38
 PROFINET configuration (Submenu) 91
 PROFINET information (Submenu) 92
 Progress (Parameter) 77, 79

R

- Reference density (Parameter) 40
 Reference density factor (Parameter) 85
 Reference density offset (Parameter) 84
 Reference density unit (Parameter) 49
 Reference sound velocity (Parameter) 67
 Reference temperature (Parameter) 73
 Reset all totalizers (Parameter) 93
 Reset min/max values (Parameter) 113
 Response time part. filled pipe detect. (Parameter) 64

S

- Select gas type (Parameter) 66
 Select medium (Parameter) 66
 Sensor (Submenu) 38
 Sensor adjustment (Submenu) 76
 Sensor electronic module (Submenu) 112
 Separator (Parameter) 24
 Serial number (Parameter) 108
 Signal asymmetry (Submenu) 118
 Simulation (Submenu) 119
 Simulation device alarm (Parameter) 121
 Software option overview (Parameter) 37
 Software revision (Parameter) 111, 112
 Square expansion coefficient (Parameter) 74
 Submenu

- Administration 34
 Application 93
 Calculated values 72
 Calibration 86
 Carrier pipe temperature 115
 Communication 88
 Concentration 99
 Corrected volume flow calculation 72
 Device information 108
 Diagnostic behavior 27
 Diagnostic handling 26
 Diagnostic list 102
 Diagnostics 99
 Display 13
 Display module 112
 Electronic temperature 114
 Event list 107
 Event logbook 105
 External compensation 67
 Heartbeat 119
 I/O module 111
 Low flow cut off 60
 Measured values 38
 Measurement mode 65
 Medium temperature 115
 Min/max values 113
 Oscillation amplitude 117
 Oscillation damping 118

Oscillation frequency	116	User-specific units (Submenu)	52
Partially filled pipe detection	63		
Process parameters	58		
Process variable adjustment	81		
Process variables	38		
PROFINET configuration	91		
PROFINET information	92		
Sensor	38		
Sensor adjustment	76		
Sensor electronic module	112		
Signal asymmetry	118		
Simulation	119		
Supervision	87		
System	13		
System units	44		
Totalizer	42		
Totalizer 1 to 3	94		
User-specific units	52		
Web server	88		
Zero point adjustment	76		
Subnet mask (Parameter)	90		
Supervision (Submenu)	87		
System (Submenu)	13		
System units (Submenu)	44		
T			
Target group	4		
Target mass flow (Parameter)	41		
Temperature (Parameter)	40		
Temperature coefficient sound velocity (Parameter)	67		
Temperature damping (Parameter)	59		
Temperature factor (Parameter)	85		
Temperature mode (Parameter)	70		
Temperature offset (Parameter)	85		
Temperature unit (Parameter)	50		
Timestamp (Parameter)	100, 101, 102, 103, 104, 105		
Totalizer (Submenu)	42		
Totalizer 1 to 3 (Submenu)	94		
Totalizer operation mode (Parameter)	96		
Totalizer overflow 1 to 3 (Parameter)	43		
Totalizer value 1 to 3 (Parameter)	42		
U			
Unit totalizer (Parameter)	95		
User corrected volume factor (Parameter)	55		
User corrected volume offset (Parameter)	55		
User corrected volume text (Parameter)	55		
User density factor (Parameter)	56		
User density offset (Parameter)	56		
User density text (Parameter)	56		
User mass factor (Parameter)	53		
User mass offset (Parameter)	53		
User mass text (Parameter)	52		
User pressure factor (Parameter)	57		
User pressure offset (Parameter)	57		
User pressure text (Parameter)	57		
User volume factor (Parameter)	54		
User volume offset (Parameter)	54		
User volume text (Parameter)	54		
V			
Value 1 display (Parameter)	16		
Value 2 display (Parameter)	19		
Value 3 display (Parameter)	20		
Value 4 display (Parameter)	21		
Volume flow (Parameter)	39		
Volume flow factor (Parameter)	83		
Volume flow offset (Parameter)	82		
Volume flow unit (Parameter)	46		
Volume unit (Parameter)	47		
W			
Web server (Submenu)	88		
Web server functionality (Parameter)	90		
Web server language (Parameter)	88		
Wizard			
Define access code	34		
Density adjustment	77		
Z			
Zero point (Parameter)	86		
Zero point adjustment (Submenu)	76		
Zero point adjustment control (Parameter)	77		

www.addresses.endress.com
