

Description of Device Parameters

Proline Cubemass 100

EtherNet/IP

Coriolis flowmeter

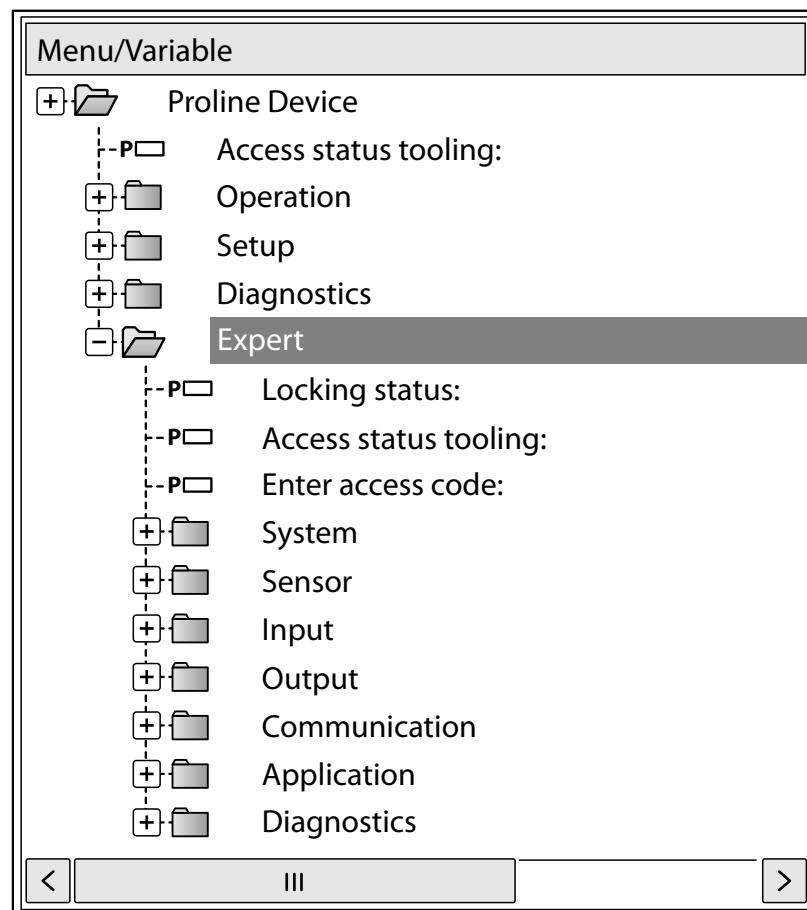


Table of contents

1 Document information	4	5 Explanation of abbreviated units ..	124
1.1 Document function	4	5.1 SI units	124
1.2 Target group	4	5.2 US units	124
1.3 Using this document	4	5.3 Imperial units	126
1.3.1 Information on the document structure	4		
1.3.2 Structure of a parameter description	6		
1.4 Symbols used	6		
1.4.1 Symbols for certain types of information	6		
1.4.2 Symbols in graphics	7		
2 Overview of the Expert operating menu	8	Index	127
3 Description of device parameters ...	10		
3.1 "System" submenu	13		
3.1.1 "Display" submenu	13		
3.1.2 "Diagnostic handling" submenu	27		
3.1.3 "Administration" submenu	35		
3.2 "Sensor" submenu	39		
3.2.1 "Measured values" submenu	39		
3.2.2 "System units" submenu	45		
3.2.3 "Process parameters" submenu	60		
3.2.4 "Measurement mode" submenu	67		
3.2.5 "External compensation" submenu	69		
3.2.6 "Calculated values" submenu	71		
3.2.7 "Sensor adjustment" submenu	74		
3.2.8 "Calibration" submenu	80		
3.2.9 "Supervision" submenu	82		
3.3 "Communication" submenu	82		
3.3.1 "Configuration" submenu	83		
3.4 "Application" submenu	93		
3.4.1 "Totalizer 1 to 3" submenu	93		
3.4.2 "Concentration" submenu	98		
3.5 "Diagnostics" submenu	99		
3.5.1 "Diagnostic list" submenu	101		
3.5.2 "Event logbook" submenu	105		
3.5.3 "Device information" submenu	107		
3.5.4 "Min/max values" submenu	111		
3.5.5 "Heartbeat" submenu	117		
3.5.6 "Simulation" submenu	117		
4 Country-specific factory settings ..	121		
4.1 SI units	121		
4.1.1 System units	121		
4.1.2 Full scale values	121		
4.1.3 On value low flow cut off	121		
4.2 US units	122		
4.2.1 System units	122		
4.2.2 Full scale values	122		
4.2.3 On value low flow cut off	122		

1 Document information

1.1 Document function

The document is part of the Operating Instructions and serves as a reference for parameters, providing a detailed explanation of each individual parameter of the Expert operating menu.


1.2 Target group

The document is aimed at specialists who work with the device over the entire life cycle and perform specific configurations.

1.3 Using this document

1.3.1 Information on the document structure


This document lists the submenus and their parameters according to the structure of the **Expert** menu (→ 8) menu that are available once the "**Operator**" user role or the "**Maintenance**" user role is enabled.

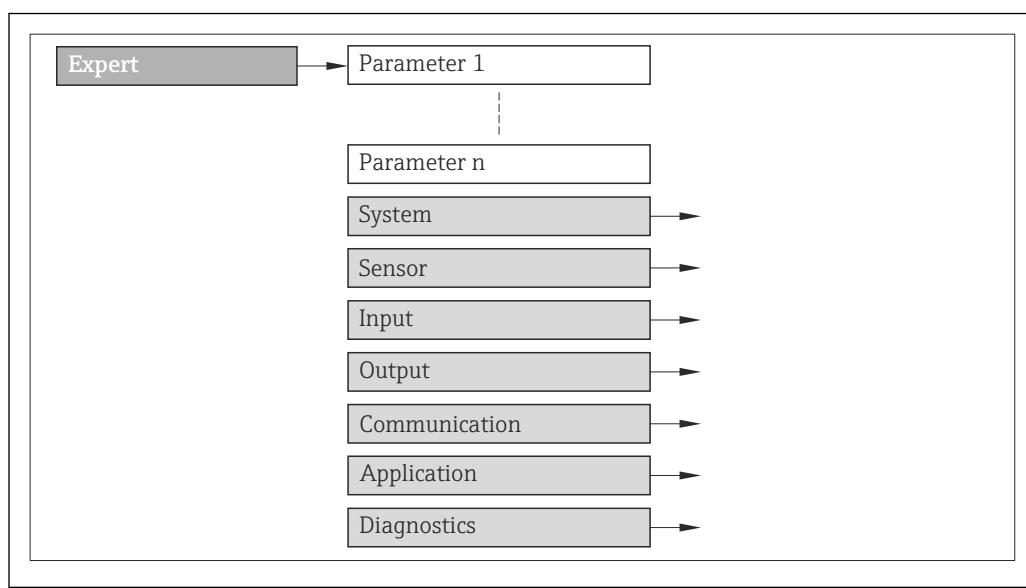

A0022576-EN

1 Sample graphic

For information on the arrangement of the parameters according to the structure of the **Operation** menu, **Setup** menu, **Diagnostics** menu (→ 99), along with a brief description, see the Operating Instructions for the device.

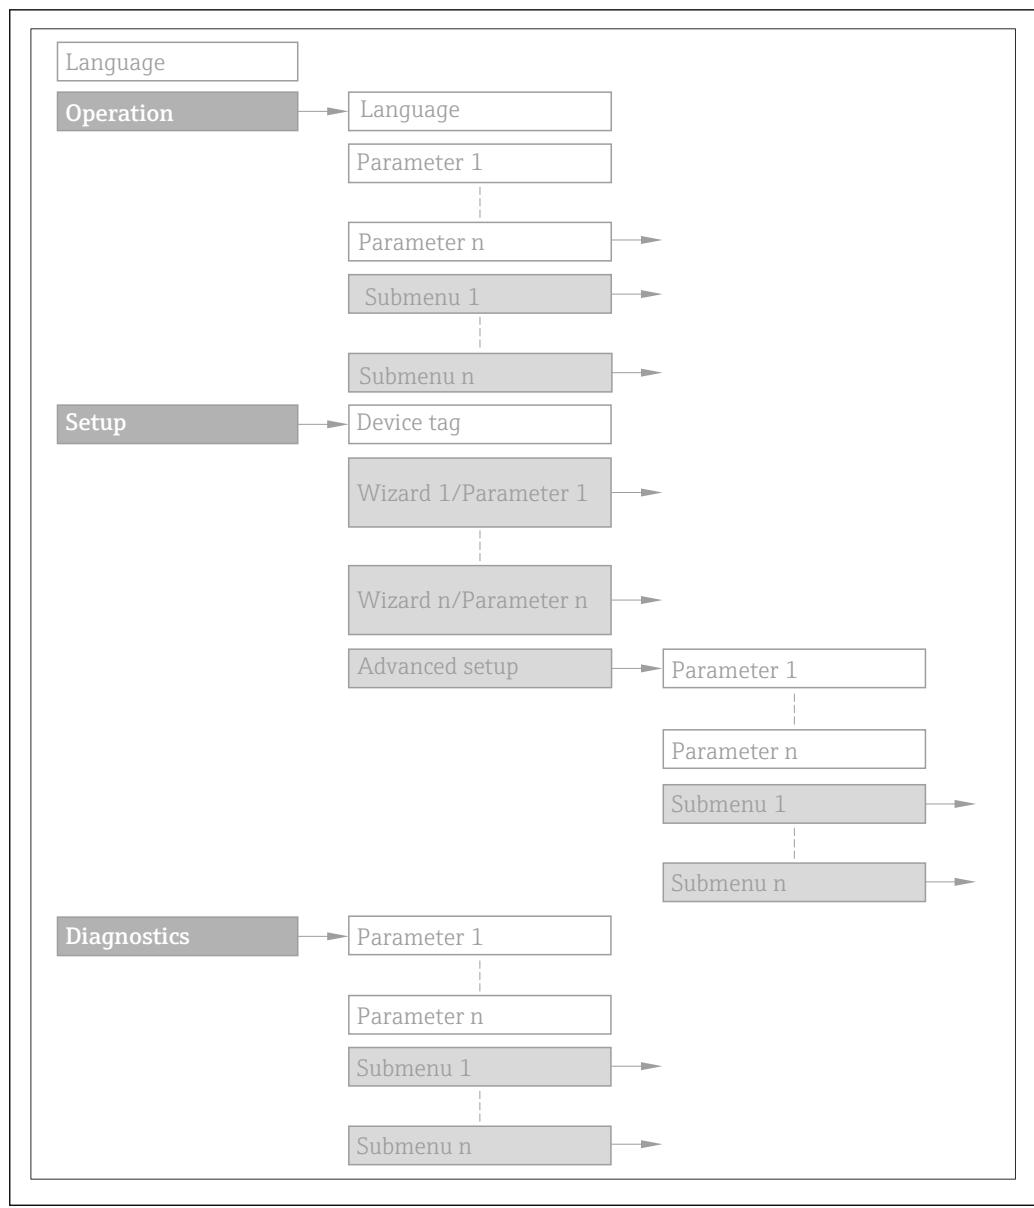

2 Sample graphic

 For information about the operating philosophy, see the "Operating philosophy" chapter in the device's Operating Instructions

1.3.2 Structure of a parameter description

The individual parts of a parameter description are described in the following section:

Complete parameter name	Write-protected parameter = 
Navigation	 Navigation path to the parameter via the local display (direct access code) or Web browser  Navigation path to the parameter via the operating tool The names of the menus, submenus and parameters are abbreviated to the form in which they appear on the display and in the operating tool.
Prerequisite	The parameter is only available under these specific conditions
Description	Description of the parameter function
Selection	List of the individual options for the parameter <ul style="list-style-type: none"> ▪ Option 1 ▪ Option 2
User entry	Input range for the parameter
User interface	Display value/data for the parameter
Factory setting	Default setting ex works
Additional information	Additional explanations (e.g. in examples): <ul style="list-style-type: none"> ▪ On individual options ▪ On display values/data ▪ On the input range ▪ On the factory setting ▪ On the parameter function

1.4 Symbols used

1.4.1 Symbols for certain types of information

Symbol	Meaning
	Tip Indicates additional information.
	Reference to documentation
	Reference to page
	Reference to graphic
	Operation via local display
	Operation via operating tool
	Write-protected parameter

1.4.2 Symbols in graphics

Symbol	Meaning	Symbol	Meaning
1, 2, 3 ...	Item numbers	A, B, C, ...	Views
A-A, B-B, C-C, ...	Sections		

2 Overview of the Expert operating menu

The following table provides an overview of the menu structure of the expert operating menu and its parameters. The page reference indicates where the associated description of the submenu or parameter can be found.

Expert	
Direct access	→ 10
Locking status	→ 11
Access status display	→ 11
Access status tooling	→ 12
Enter access code	→ 13
System	→ 13
▶ Display	→ 13
▶ Diagnostic handling	→ 27
▶ Administration	→ 35
Sensor	→ 39
▶ Measured values	→ 39
▶ System units	→ 45
▶ Process parameters	→ 60
▶ Measurement mode	→ 67
▶ External compensation	→ 69
▶ Calculated values	→ 71
▶ Sensor adjustment	→ 74
▶ Calibration	→ 80
▶ Supervision	→ 82

▶ Output	
▶ Current output 1	
▶ Pulse/frequency/switch output 1	
▶ Communication	→ 82
▶ HART input	
▶ HART output	
▶ Web server	→ 83
▶ Diagnostic configuration	
▶ Application	→ 93
Reset all totalizers	→ 93
▶ Totalizer 1 to 3	→ 93
▶ Concentration	→ 98
▶ Diagnostics	→ 99
Actual diagnostics	→ 99
Previous diagnostics	→ 100
Operating time from restart	→ 101
Operating time	→ 101
▶ Diagnostic list	→ 101
▶ Event logbook	→ 105
▶ Device information	→ 107
▶ Min/max values	→ 111
▶ Heartbeat	→ 117
▶ Simulation	→ 117

3 Description of device parameters

In the following section, the parameters are listed according to the menu structure of the local display. Specific parameters for the operating tools are included at the appropriate points in the menu structure.

Expert	
Direct access	→ 10
Locking status	→ 11
Access status display	→ 11
Access status tooling	→ 12
Enter access code	→ 13
► System	→ 13
► Sensor	→ 39
► Communication	→ 82
► Application	→ 93
► Diagnostics	→ 99

Direct access

**Navigation**

Expert → Direct access

Prerequisite

There is a local display with operating elements.

Description

Input of the access code to enable direct access to the desired parameter via the local display. For this reason, each parameter is assigned a parameter number that appears in the navigation view on the right in the header of the selected parameter.

User entry

0 to 65 535

Additional information*User entry*

The direct access code consists of a 4-digit number and the channel number, which identifies the channel of a process variable: e.g. 0914-1



- The leading zeros in the direct access code do not have to be entered.
Example: Input of "914" instead of "0914"
- If no channel number is entered, channel 1 is jumped to automatically.
Example: Enter 0914 → **Assign process variable** parameter
- If a different channel is jumped to: Enter the direct access code with the corresponding channel number.
Example: Enter 0914-3 → **Assign process variable** parameter

Locking status**Navigation**

Expert → Locking status

Description

Displays the active write protection.

User interface

- Hardware locked
- Temporarily locked

Additional information*Display*

If two or more types of write protection are active, the write protection with the highest priority is shown on the local display. In the operating tool all active types of write protection are displayed.



If additional write protection is active, this restricts the current access authorization even further. The write protection status can be viewed via the **Locking status** parameter (→ 11).

"Hardware locked" option (priority 1)

The DIP switch for hardware locking is activated on the main electronics module. This locks write access to the parameters (e.g. via local display or operating tool).



Information on access authorization is provided in the "User roles and associated access authorization" and "Operating concept" sections of the Operations Instructions for the device.

"Temporarily locked" option (priority 2)

Write access to the parameters is temporarily locked on account of internal processes running in the device (e.g. data upload/download, reset etc.). Once the internal processing has been completed, the parameters can be changed once again.

Access status display**Navigation**

Expert → Access stat.disp

Prerequisite

A local display is provided.

Description

Displays the access authorization to the parameters via the local display.

User interface	<ul style="list-style-type: none">▪ Operator▪ Maintenance
Factory setting	Operator
Additional information	<p><i>Description</i></p> <p>If the -symbol appears in front of a parameter, it cannot be modified via the local display with the current access authorization.</p> <p> Access authorization can be modified via the Enter access code parameter (→  13).</p> <p> For information on the Enter access code parameter, see the "Disabling write protection via access code" section of the Operating Instructions for the device</p> <p> If additional write protection is active, this restricts the current access authorization even further. The write protection status can be viewed via the Locking status parameter (→  11).</p> <p><i>Display</i></p> <p> Information on access authorization is provided in the "User roles and associated access authorization" and "Operating concept" sections of the Operations Instructions for the device.</p>

Access status tooling

Navigation	  Expert → Access stat.tool
Description	Displays the access authorization to the parameters via the operating tool or Web browser.
User interface	<ul style="list-style-type: none">▪ Operator▪ Maintenance
Factory setting	Maintenance

Additional information

Description

 Access authorization can be modified via the **Enter access code** parameter (→  13).

 If additional write protection is active, this restricts the current access authorization even further. The write protection status can be viewed via the **Locking status** parameter (→  11).

Display

 Information on access authorization is provided in the "User roles and associated access authorization" and "Operating concept" sections of the Operations Instructions for the device.


Enter access code**Navigation**
 Expert → Ent. access code
Description

Use this function to enter the user-specific release code to remove parameter write protection.


User entry

0 to 9 999

3.1 "System" submenu

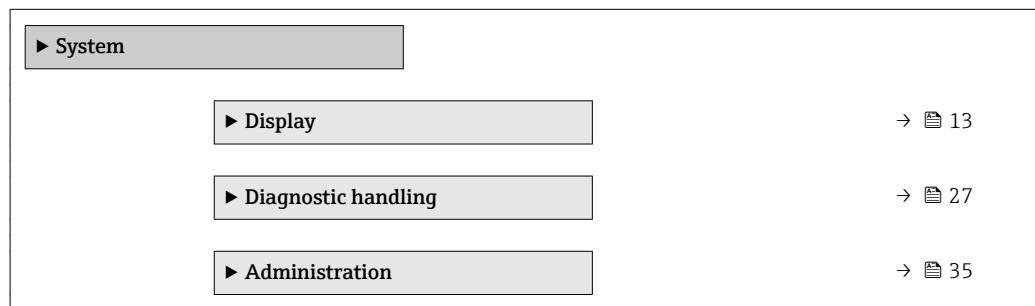Navigation
 Expert → System


3.1.1 "Display" submenu

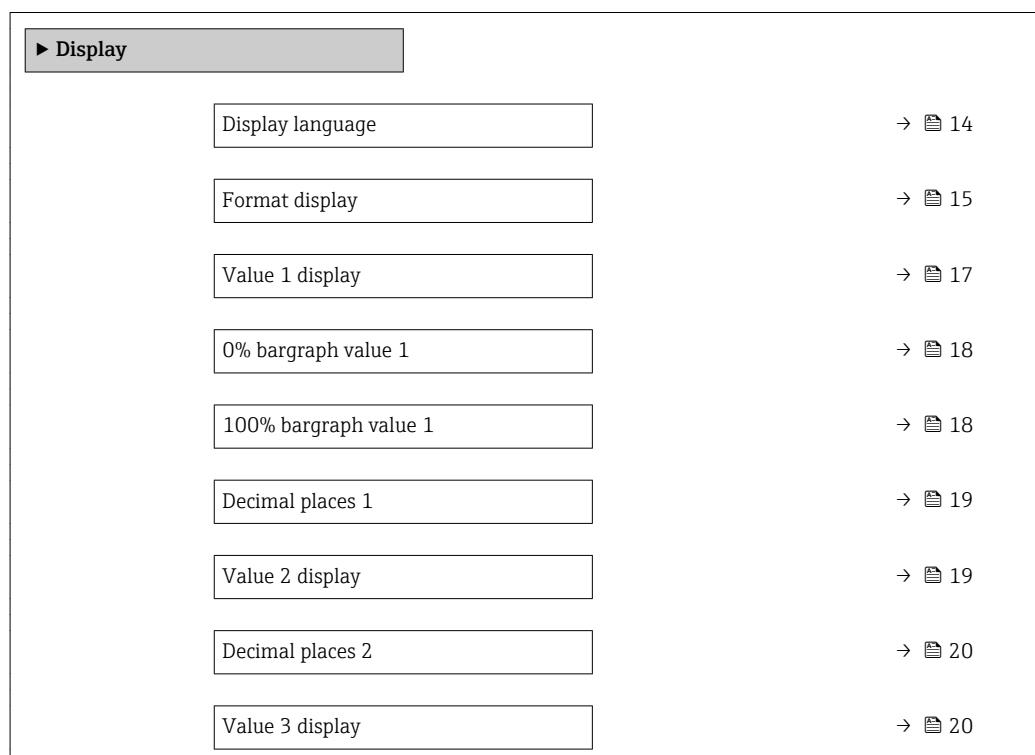Navigation
 Expert → System → Display


0% bargraph value 3	→ 21
100% bargraph value 3	→ 21
Decimal places 3	→ 22
Value 4 display	→ 22
Decimal places 4	→ 23
Display interval	→ 23
Display damping	→ 24
Header	→ 24
Header text	→ 25
Separator	→ 25
Contrast display	→ 26
Backlight	→ 26
Access status display	→ 26

Display language

Navigation

Expert → System → Display → Display language

Prerequisite

A local display is provided.

Description

Use this function to select the configured language on the local display.

Selection

- English
- Deutsch *
- Français *
- Español *
- Italiano *
- Nederlands *
- Portuguesa *
- Polski *
- русский язык (Russian) *
- Svenska *
- Türkçe *
- 中文 (Chinese) *
- 日本語 (Japanese) *

* Visibility depends on order options or device settings

- 한국어 (Korean) *
- Bahasa Indonesia *
- tiếng Việt (Vietnamese) *
- čeština (Czech) *

Factory setting	English (alternatively, the ordered language is preset in the device)
------------------------	---

Format display

Navigation	  Expert → System → Display → Format display
-------------------	--

Prerequisite	A local display is provided.
---------------------	------------------------------

Description	Use this function to select how the measured value is shown on the local display.
--------------------	---

Selection	<ul style="list-style-type: none"> ■ 1 value, max. size ■ 1 bargraph + 1 value ■ 2 values ■ 1 value large + 2 values ■ 4 values
------------------	--

Factory setting	1 value, max. size
------------------------	--------------------

Additional information	<i>Description</i>
-------------------------------	--------------------

The display format (size, bar graph etc.) and number of measured values displayed simultaneously (1 to 4) can be configured. This setting only applies to normal operation.

-  ■ The **Value 1 display** parameter (→ 17) to **Value 4 display** parameter (→ 22) are used to specify which measured values are shown on the local display and in what order.
- If more measured values are specified than the display mode selected permits, then the values alternate on the device display. The display time until the next change is configured via the **Display interval** parameter (→ 23).

* Visibility depends on order options or device settings


Possible measured values shown on the local display:

"1 value, max. size" option




A0016529

"1 bargraph + 1 value" option

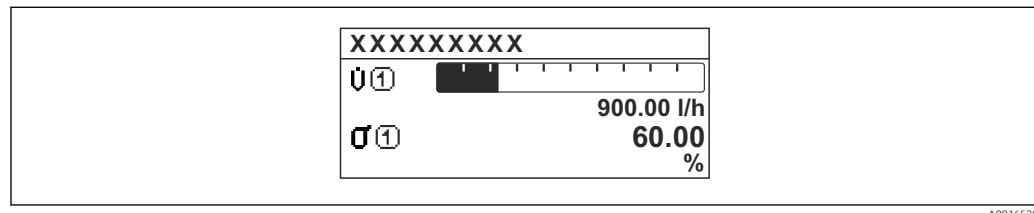

A0016530


"2 values" option

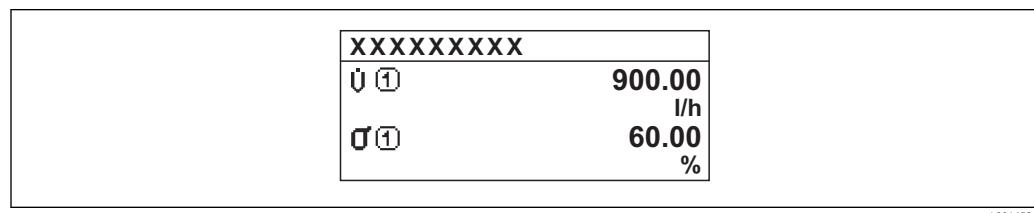

A0016531


3

"1 value large + 2 values" option

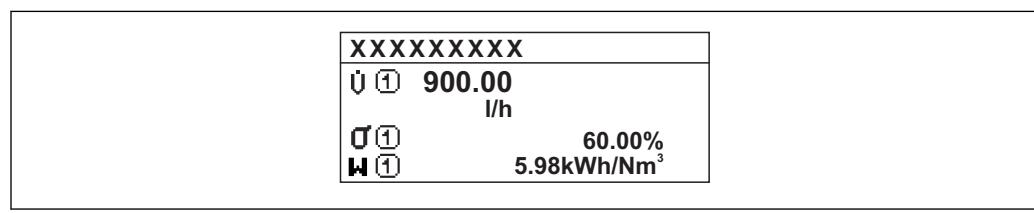

A0016532

"4 values" option

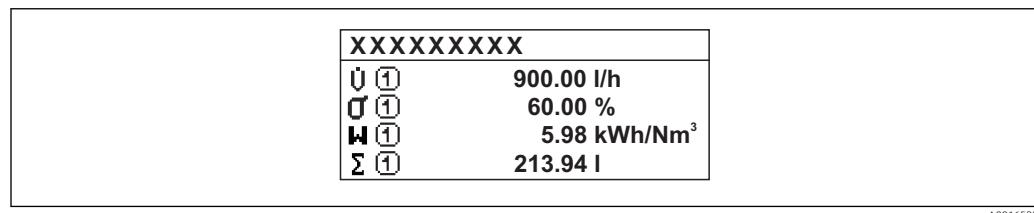

A0016533

Value 1 display

Navigation	Expert → System → Display → Value 1 display
Prerequisite	A local display is provided.
Description	Use this function to select one of the measured values to be shown on the local display.
Selection	<ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Target mass flow [*] ■ Carrier mass flow [*] ■ Density ■ Reference density [*] ■ Concentration [*] ■ Temperature ■ Carrier pipe temperature [*] ■ Electronic temperature ■ Oscillation frequency 0 ■ Frequency fluctuation 0 ■ Oscillation amplitude 0 [*] ■ Frequency fluctuation 0 ■ Oscillation damping 0 ■ Tube damping fluctuation 0 ■ Signal asymmetry ■ Exciter current 0 ■ None ■ Totalizer 1 ■ Totalizer 2 ■ Totalizer 3
Factory setting	Mass flow
Additional information	<p><i>Description</i></p> <p>If several measured values are displayed at once, the measured value selected here will be the first value to be displayed. The value is only displayed during normal operation.</p> <p> The Format display parameter (→ 15) is used to specify how many measured values are displayed simultaneously and how.</p> <p><i>Selection</i></p> <p> The unit of the displayed measured value is taken from the System units submenu (→ 45).</p>

* Visibility depends on order options or device settings

- Oscillation frequency
Displays the current oscillation frequency of the measuring tubes. This frequency depends on the density of the medium.
- Oscillation amplitude
Displays the relative oscillation amplitude of the measuring tubes in relation to the preset value. This value is 100 % under optimum conditions. The value can decrease in the event of low 4 to 20 mA loop currents and/or difficult media (two-phase, high viscosity or high gas velocity).
- Oscillation damping
Displays the current oscillation damping. Oscillation damping is an indicator of the sensor's current need for excitation power.
- Signal asymmetry
Displays the relative difference between the oscillation amplitude at the inlet and outlet of the sensor. The measured value is the result of production tolerances of the sensor coils and should remain constant over the life time of a sensor.

0% bargraph value 1



Navigation

Expert → System → Display → 0% bargraph 1

Prerequisite

A local display is provided.

Description

Use this function to enter the 0% bar graph value to be shown on the display for the measured value 1.

User entry

Signed floating-point number

Factory setting

Country-specific:

- 0 kg/h
- 0 lb/min

Additional information

Description

i The **Format display** parameter (→ 15) is used to specify that the measured value is to be displayed as a bar graph.

User entry

i The unit of the displayed measured value is taken from the **System units** submenu (→ 45).

100% bargraph value 1



Navigation

Expert → System → Display → 100% bargraph 1

Prerequisite

A local display is provided.

Description

Use this function to enter the 100% bar graph value to be shown on the display for the measured value 1.

User entry

Signed floating-point number

Factory setting Depends on country and nominal diameter → [121](#)

Additional information *Description*

 The **Format display** parameter (→ [15](#)) is used to specify that the measured value is to be displayed as a bar graph.

User entry

 The unit of the displayed measured value is taken from the **System units** submenu (→ [45](#)).

Decimal places 1



Navigation  Expert → System → Display → Decimal places 1

Prerequisite A measured value is specified in the **Value 1 display** parameter (→ [17](#)).

Description Use this function to select the number of decimal places for measured value 1.

Selection

- X
- X.X
- X.XX
- X.XXX
- X.XXXX

Factory setting X.XX

Additional information *Description*

 This setting does not affect the measuring or computational accuracy of the device. The arrow displayed between the measured value and the unit indicates that the device computes with more digits than are shown on the local display.

Value 2 display



Navigation  Expert → System → Display → Value 2 display

Prerequisite A local display is provided.

Description Use this function to select one of the measured values to be shown on the local display.

Selection For the picklist, see the **Value 1 display** parameter (→ [17](#))

Factory setting None

Additional information*Description*

If several measured values are displayed at once, the measured value selected here will be the second value to be displayed. The value is only displayed during normal operation.

 The **Format display** parameter (→ 15) is used to specify how many measured values are displayed simultaneously and how.

Selection

 The unit of the displayed measured value is taken from the **System units** submenu (→ 45).

Decimal places 2**Navigation**

  Expert → System → Display → Decimal places 2

Prerequisite

A measured value is specified in the **Value 2 display** parameter (→ 19).

Description

Use this function to select the number of decimal places for measured value 2.

Selection

- X
- X.X
- X.XX
- X.XXX
- X.XXXX

Factory setting

X.XX

Additional information*Description*

 This setting does not affect the measuring or computational accuracy of the device. The arrow displayed between the measured value and the unit indicates that the device computes with more digits than are shown on the local display.

Value 3 display**Navigation**

  Expert → System → Display → Value 3 display

Prerequisite

A local display is provided.

Description

Use this function to select one of the measured values to be shown on the local display.

Selection

Picklist, see **Value 1 display** parameter (→ 17)

Factory setting

None

Additional information*Description*

If several measured values are displayed at once, the measured value selected here will be the third value to be displayed. The value is only displayed during normal operation.



The **Format display** parameter (→ 15) is used to specify how many measured values are displayed simultaneously and how.

Selection

The unit of the displayed measured value is taken from the **System units** submenu (→ 45).

0% bargraph value 3**Navigation**

Expert → System → Display → 0% bargraph 3

Prerequisite

A selection has been made in the **Value 3 display** parameter (→ 20).

Description

Use this function to enter the 0% bar graph value to be shown on the display for the measured value 3.

User entry

Signed floating-point number

Factory setting

Country-specific:

- 0 kg/h
- 0 lb/min

Additional information*Description*

The **Format display** parameter (→ 15) is used to specify that the measured value is to be displayed as a bar graph.

User entry

The unit of the displayed measured value is taken from the **System units** submenu (→ 45).

100% bargraph value 3**Navigation**

Expert → System → Display → 100% bargraph 3

Prerequisite

A selection was made in the **Value 3 display** parameter (→ 20).

Description

Use this function to enter the 100% bar graph value to be shown on the display for the measured value 3.

User entry

Signed floating-point number

Factory setting

0

Additional information*Description*

 The **Format display** parameter (→ 15) is used to specify that the measured value is to be displayed as a bar graph.

User entry

 The unit of the displayed measured value is taken from the **System units** submenu (→ 45).

Decimal places 3**Navigation**

  Expert → System → Display → Decimal places 3

Prerequisite

A measured value is specified in the **Value 3 display** parameter (→ 20).

Description

Use this function to select the number of decimal places for measured value 3.

Selection

- X
- X.X
- X.XX
- X.XXX
- X.XXXX

Factory setting

x.xx

Additional information*Description*

 This setting does not affect the measuring or computational accuracy of the device. The arrow displayed between the measured value and the unit indicates that the device computes with more digits than are shown on the local display.

Value 4 display**Navigation**

  Expert → System → Display → Value 4 display

Prerequisite

A local display is provided.

Description

Use this function to select one of the measured values to be shown on the local display.

Selection

Picklist, see **Value 1 display** parameter (→ 17)

Factory setting

None

Additional information*Description*

If several measured values are displayed at once, the measured value selected here will be the fourth value to be displayed. The value is only displayed during normal operation.



The **Format display** parameter (→ 15) is used to specify how many measured values are displayed simultaneously and how.

Selection

The unit of the displayed measured value is taken from the **System units** submenu (→ 45).

Decimal places 4**Navigation**

Expert → System → Display → Decimal places 4

Prerequisite

A measured value is specified in the **Value 4 display** parameter (→ 22).

Description

Use this function to select the number of decimal places for measured value 4.

Selection

- X
- X.X
- X.XX
- X.XXX
- X.XXXX

Factory setting

X.XX

Additional information*Description*

This setting does not affect the measuring or computational accuracy of the device. The arrow displayed between the measured value and the unit indicates that the device computes with more digits than are shown on the local display.

Display interval**Navigation**

Expert → System → Display → Display interval

Prerequisite

A local display is provided.

Description

Use this function to enter the length of time the measured values are displayed if the values alternate on the display.

User entry

1 to 10 s

Factory setting

5 s

Additional information*Description*

This type of alternating display only occurs automatically if the number of measured values defined exceeds the number of values the selected display format can display simultaneously.



- The **Value 1 display** parameter (→ 17) to **Value 4 display** parameter (→ 22) are used to specify which measured values are shown on the local display.
- The display format of the displayed measured values is specified using the **Format display** parameter (→ 15).

Display damping**Navigation**

Expert → System → Display → Display damping

Prerequisite

A local display is provided.

Description

Use this function to enter the reaction time of the local display to fluctuations in the measured value caused by process conditions.

User entry

0.0 to 999.9 s

Factory setting

0.0 s

Additional information*User entry*

A time constant is entered:

- If a low time constant is entered, the display reacts particularly quickly to fluctuating measured variables.
- On the other hand, the display reacts more slowly if a high time constant is entered.

Header**Navigation**

Expert → System → Display → Header

Prerequisite

A local display is provided.

Description

Use this function to select the contents of the header of the local display.

Selection


- Device tag
- Free text

Factory setting

Device tag

Additional information*Description*

The header text only appears during normal operation.

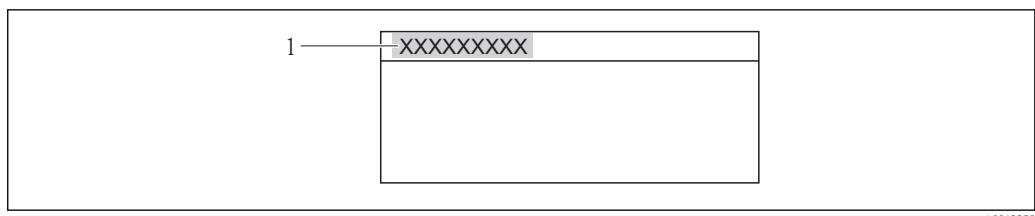

1 Position of the header text on the display

Selection

Free text

Is defined in the **Header text** parameter (→ 25).

Header text



Navigation

Expert → System → Display → Header text

Prerequisite

The **Free text** option is selected in the **Header** parameter (→ 24).

Description

Use this function to enter a customer-specific text for the header of the local display.

User entry


Max. 12 characters such as letters, numbers or special characters (e.g. @, %, /)

Factory setting

Additional information

Description

The header text only appears during normal operation.

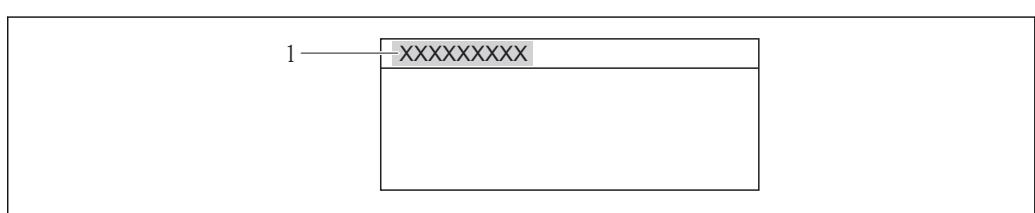

1 Position of the header text on the display

User entry

The number of characters displayed depends on the characters used.

Separator



Navigation

Expert → System → Display → Separator

Prerequisite

A local display is provided.

Description

Use this function to select the decimal separator.

Selection

- . (point)
- , (comma)

Factory setting

. (point)

Contrast display

Navigation

  Expert → System → Display → Contrast display

Prerequisite

A local display is provided.

Description

Use this function to enter a value to adapt the display contrast to the ambient conditions (e.g. the lighting or viewing angle).

User entry

20 to 80 %

Factory setting

Depends on the display

Backlight

Navigation

  Expert → System → Display → Backlight

Prerequisite

Order code for "Display; operation", option E "SD03 4-line, illum.; touch control + data backup function"

Description

Use this function to switch the backlight of the local display on and off.

Selection

- Disable
- Enable

Factory setting

Enable

Access status display

Navigation

  Expert → System → Display → Access stat.disp

Prerequisite

A local display is provided.

Description

Displays the access authorization to the parameters via the local display.

User interface

- Operator
- Maintenance

Factory setting

Operator

Additional information*Description*

If the -symbol appears in front of a parameter, it cannot be modified via the local display with the current access authorization.

 Access authorization can be modified via the **Enter access code** parameter (→ [13](#)).

 For information on the **Enter access code** parameter, see the "Disabling write protection via access code" section of the Operating Instructions for the device

 If additional write protection is active, this restricts the current access authorization even further. The write protection status can be viewed via the **Locking status** parameter (→ [11](#)).


Display

 Information on access authorization is provided in the "User roles and associated access authorization" and "Operating concept" sections of the Operations Instructions for the device.

3.1.2 "Diagnostic handling" submenu

Navigation

 Expert → System → Diagn. handling

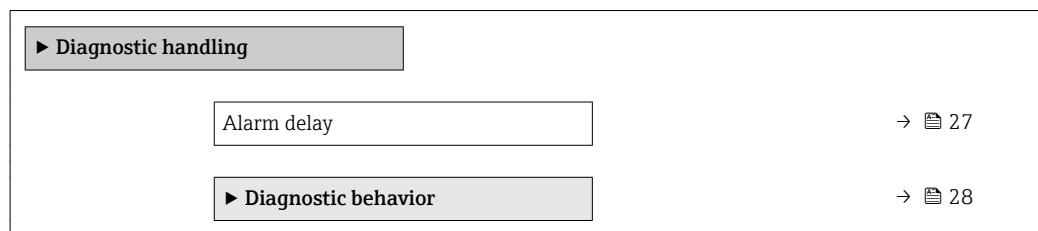**Alarm delay****Navigation**

 Expert → System → Diagn. handling → Alarm delay

Description

Use this function to enter the time interval until the device generates a diagnostic message.

 The diagnostic message is reset without a time delay.

User entry

0 to 60 s

Factory setting

0 s

Additional information*Effect*

This setting affects the following diagnostic messages:

- 046 Sensor limit exceeded
- 140 Sensor signal
- 144 Measuring error too high
- 190 Special event 1
- 191 Special event 5

- 192 Special event 9
- 830 Sensor temperature too high
- 831 Sensor temperature too low
- 832 Electronic temperature too high
- 833 Electronic temperature too low
- 834 Process temperature too high
- 835 Process temperature too low
- 843 Process limit
- 862 Partly filled pipe
- 910 Tubes not oscillating
- 912 Medium inhomogeneous
- 913 Medium unsuitable
- 944 Monitoring failed
- 990 Special event 4
- 991 Special event 8
- 992 Special event 12

"Diagnostic behavior" submenu

Each item of diagnostic information is assigned a specific diagnostic behavior at the factory. The user can change this assignment for specific diagnostic information in the **Diagnostic behavior** submenu (→ 28).

The following options are available in the **Assign behavior of diagnostic no. xxx** parameters:

Options	Description
Alarm	The device stops measurement. The totalizers assume the defined alarm condition. A diagnostic message is generated.
Warning	The device continues to measure. The totalizers are not affected. A diagnostic message is generated.
Logbook entry only	The device continues to measure. The diagnostic message is entered only in the Event logbook submenu (→ 105) (Event list submenu (→ 106)) and is not displayed in alternation with the measured value display.
Off	The diagnostic event is ignored, and no diagnostic message is generated or entered.

 For a list of all the diagnostic events, see the Operating Instructions for the device.

Navigation

 Expert → System → Diagn. handling → Diagn. behavior

► Diagnostic behavior

Assign behavior of diagnostic no. 140	→ 29
Assign behavior of diagnostic no. 046	→ 29
Assign behavior of diagnostic no. 144	→ 30
Assign behavior of diagnostic no. 832	→ 30
Assign behavior of diagnostic no. 833	→ 31

Assign behavior of diagnostic no. 834	→ 31
Assign behavior of diagnostic no. 835	→ 31
Assign behavior of diagnostic no. 912	→ 32
Assign behavior of diagnostic no. 913	→ 32
Assign behavior of diagnostic no. 944	→ 32
Assign behavior of diagnostic no. 948	→ 33
Assign behavior of diagnostic no. 192	→ 33
Assign behavior of diagnostic no. 274	→ 33
Assign behavior of diagnostic no. 392	→ 34
Assign behavior of diagnostic no. 592	→ 34
Assign behavior of diagnostic no. 992	→ 34

Assign behavior of diagnostic no. 140 (Sensor signal)



Navigation

Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 140

Description

Use this function to change the diagnostic behavior of the diagnostic message **140 Sensor signal**.

Selection

- Off
- Alarm
- Warning
- Logbook entry only

Factory setting

Warning

Additional information

For a detailed description of the options available, see

Assign behavior of diagnostic no. 046 (Sensor limit exceeded)



Navigation

Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 046

Description

Use this function to change the diagnostic behavior of the diagnostic message **046 Sensor limit exceeded**.

Selection	<ul style="list-style-type: none">▪ Off▪ Alarm▪ Warning▪ Logbook entry only
------------------	--

Factory setting	Warning
------------------------	---------

Additional information	 For a detailed description of the options available, see
-------------------------------	--

Assign behavior of diagnostic no. 144 (Measuring error too high)



Navigation  Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 144

Description Use this function to change the diagnostic behavior of the diagnostic message **144 Measuring error too high.**

Selection	<ul style="list-style-type: none">▪ Off▪ Alarm▪ Warning▪ Logbook entry only
------------------	--

Factory setting	Alarm
------------------------	-------

Additional information	 For a detailed description of the options available, see
-------------------------------	--

Assign behavior of diagnostic no. 832 (Electronic temperature too high)



Navigation  Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 832

Description Use this function to change the diagnostic behavior of the diagnostic message **832 Electronic temperature too high.**

Selection	<ul style="list-style-type: none">▪ Off▪ Alarm▪ Warning▪ Logbook entry only
------------------	--

Factory setting	Warning
------------------------	---------

Additional information	 For a detailed description of the options available, see
-------------------------------	--

Assign behavior of diagnostic no. 833 (Electronic temperature too low)



Navigation	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 833
Description	Use this function to change the diagnostic behavior of the diagnostic message 833 Electronic temperature too low .
Selection	<ul style="list-style-type: none">▪ Off▪ Alarm▪ Warning▪ Logbook entry only
Factory setting	Warning
Additional information	For a detailed description of the options available, see

Assign behavior of diagnostic no. 834 (Process temperature too high)



Navigation	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 834
Description	Use this function to change the diagnostic behavior of the diagnostic message 834 Process temperature too high .
Selection	<ul style="list-style-type: none">▪ Off▪ Alarm▪ Warning▪ Logbook entry only
Factory setting	Warning
Additional information	For a detailed description of the options available, see

Assign behavior of diagnostic no. 835 (Process temperature too low)



Navigation	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 835
Description	Use this function to change the diagnostic behavior of the diagnostic message 835 Process temperature too low .
Selection	<ul style="list-style-type: none">▪ Off▪ Alarm▪ Warning▪ Logbook entry only
Factory setting	Warning
Additional information	For a detailed description of the options available, see

Assign behavior of diagnostic no. 912 (Medium inhomogeneous)**Navigation**

Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 912

Description

Use this function to change the diagnostic behavior of the diagnostic message
912 Medium inhomogeneous.

Selection

- Off
- Alarm
- Warning
- Logbook entry only

Factory setting

Warning

Additional information

For a detailed description of the options available, see

Assign behavior of diagnostic no. 913 (Medium unsuitable)**Navigation**

Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 913

Description

Use this function to change the diagnostic behavior of the diagnostic message
913 Medium unsuitable.

Selection

- Off
- Alarm
- Warning
- Logbook entry only

Factory setting

Warning

Additional information

For a detailed description of the options available, see

Assign behavior of diagnostic no. 944 (Monitoring failed)**Navigation**

Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 944

Description

Use this function to change the diagnostic behavior of the diagnostic message
944 Monitoring failed.

Selection

- Off
- Alarm
- Warning
- Logbook entry only

Factory setting

Warning

Additional information

For a detailed description of the options available, see

Assign behavior of diagnostic no. 948 (Tube damping too high)



Navigation	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 948
Description	Use this function to change the diagnostic behavior of the diagnostic message 948 Tube damping too high .
Selection	<ul style="list-style-type: none">▪ Off▪ Alarm▪ Warning▪ Logbook entry only
Factory setting	Warning
Additional information	For a detailed description of the options available, see

Assign behavior of diagnostic no. 192 (Special event 9)



Navigation	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 192
Description	Use this function to change the diagnostic behavior of the diagnostic message 192 Special event 9 .
Selection	<ul style="list-style-type: none">▪ Off▪ Alarm▪ Warning▪ Logbook entry only
Factory setting	Warning
Additional information	For a detailed description of the options available, see

Assign behavior of diagnostic no. 274 (Main electronic failure)



Navigation	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 274
Description	Use this function to change the diagnostic behavior of the diagnostic message 274 Main electronic failure .
Selection	<ul style="list-style-type: none">▪ Off▪ Alarm▪ Warning▪ Logbook entry only
Factory setting	Warning
Additional information	For a detailed description of the options available, see

Assign behavior of diagnostic no. 392 (Special event 10)



Navigation	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 392
Description	Use this function to change the diagnostic behavior of the diagnostic message 392 Special event 10 .
Selection	<ul style="list-style-type: none">▪ Off▪ Alarm▪ Warning▪ Logbook entry only
Factory setting	Warning
Additional information	For a detailed description of the options available, see

Assign behavior of diagnostic no. 592 (Special event 11)



Navigation	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 592
Description	Use this function to change the diagnostic behavior of the diagnostic message 592 Special event 11 .
Selection	<ul style="list-style-type: none">▪ Off▪ Alarm▪ Warning▪ Logbook entry only
Factory setting	Warning
Additional information	For a detailed description of the options available, see

Assign behavior of diagnostic no. 992 (Special event 12)



Navigation	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 992
Description	Use this function to change the diagnostic behavior of the diagnostic message 992 Special event 12 .
Selection	<ul style="list-style-type: none">▪ Off▪ Alarm▪ Warning▪ Logbook entry only
Factory setting	Warning


Additional information

For a detailed description of the options available, see

3.1.3 "Administration" submenu

Navigation

Expert → System → Administration

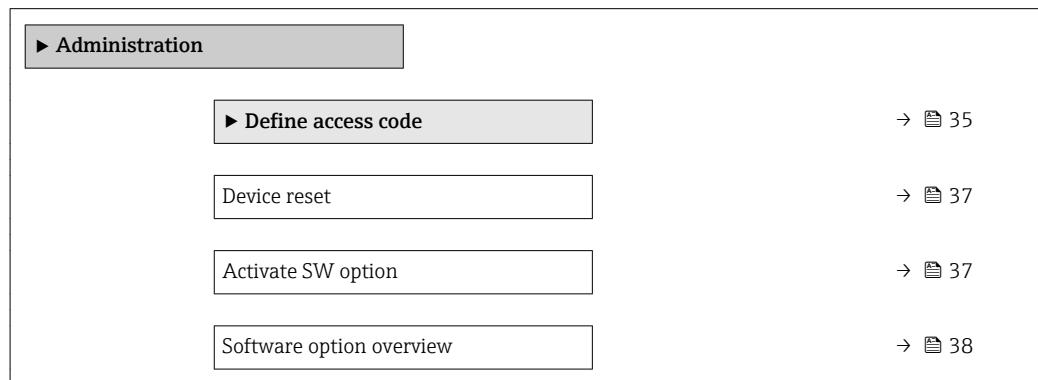


"Define access code" wizard

The **Define access code** wizard (→ 35) is only available when operating via the local display or Web browser.

If operating via the operating tool, the **Define access code** parameter (→ 36) can be found directly in the **Administration** submenu. There is no **Confirm access code** parameter if the device is operated via the operating tool.

Navigation

Expert → System → Administration → Def. access code

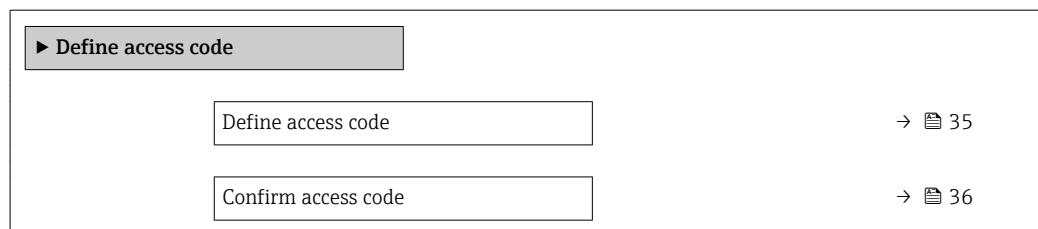

Define access code


Navigation

Expert → System → Administration → Def. access code → Def. access code

Description

Use this function to enter a user-specific release code to restrict write-access to the parameters. This protects the configuration of the device against any inadvertent changes via the local display or Web browser.

User entry

0 to 9 999

Factory setting

0

Additional information*Description*

The write protection affects all parameters in the document marked with the  symbol.

On the local display, the  symbol in front of a parameter indicates that the parameter is write-protected.

The parameters that cannot be write-accessed are grayed out in the Web browser.

 Once the access code has been defined, write-protected parameters can only be modified if the access code is entered in the **Enter access code** parameter (→  13).

 If you lose the access code, please contact your Endress+Hauser Sales Center.

User entry

A message is displayed if the access code is not in the input range.

Factory setting

If the factory setting is not changed or **0** is defined as the access code, the parameters are not write-protected and the device configuration data can be modified. The user is logged on in the "**Maintenance**" role.

Confirm access code**Navigation**

 Expert → System → Administration → Def. access code → Confirm code

Description

Enter the defined release code a second time to confirm the release code.

User entry

0 to 9 999

Factory setting

0

Additional parameters in the "Administration" submenu

Define access code**Navigation**

 Expert → System → Administration → Def. access code

Description

Use this function to enter a user-specific release code to restrict write-access to the parameters. This protects the configuration of the device against any inadvertent changes via the operating tool.

User entry

0 to 9 999

Factory setting

0

Additional information*Description*

The write protection affects all parameters in the document marked with the  symbol.

 Once the access code has been defined, write-protected parameters can only be modified if the access code is entered in the **Enter access code** parameter (→ 13).

 If you lose the access code, please contact your Endress+Hauser Sales Center.

User entry

A message is displayed if the access code is not in the input range.

Factory setting

If the factory setting is not changed or **0** is defined as the access code, the parameters are not write-protected and the device configuration data can be modified. The user is logged on in the "**Maintenance**" role.

Device reset**Navigation**

  Expert → System → Administration → Device reset

Description

Use this function to choose whether to reset the device configuration - either entirely or in part - to a defined state.

Selection

- Cancel
- To delivery settings
- Restart device

Factory setting

Cancel

Additional information*"Cancel" option*

No action is executed and the user exits the parameter.

"To delivery settings" option

Every parameter for which a customer-specific default setting was ordered is reset to this customer-specific value. All other parameters are reset to the factory setting.

 This option is not visible if no customer-specific settings have been ordered.

"Restart device" option

The restart resets every parameter whose data are in the volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.

Activate SW option**Navigation**

  Expert → System → Administration → Activate SW opt.

Description

Use this function to enter an activation code to enable an additional, ordered software option.

User entry Max. 10-digit string consisting of numbers.

Factory setting 0

Additional information *User entry*

 Endress+Hauser provides the corresponding activation code for the software option with the order.

NOTICE! This activation code varies depending on the measuring device and the software option. If an incorrect or invalid code is entered, this can result in the loss of software options that are already been activated. After commissioning the measuring device: in this parameter only enter activation codes which Endress+Hauser has provided (e.g. when a new software option was ordered). If an incorrect or invalid activation code is entered, enter the activation code from the parameter protocol again and contact your Endress+Hauser sales organization, quoting the serial number of your device.

Example for a software option

Order code for "Application package", option EB "Heartbeat Verification + Monitoring"

Web browser

 Once a software option has been activated, the page must be loaded again in the Web browser.

Software option overview

Navigation   Expert → System → Administration → SW option overv.

Description Displays all the software options that are enabled in the device.

User interface

- Heartbeat Verification
- Heartbeat Monitoring
- Concentration

Additional information *Description*
Displays all the options that are available if ordered by the customer.

"Heartbeat Verification" option and "Heartbeat Monitoring" option

Order code for "Application package", option EB "Heartbeat Verification + Monitoring"

"Concentration" option

Order code for "Application package", option ED "Concentration" and option EF "Special density + concentration"

3.2 "Sensor" submenu

Navigation

Expert → Sensor

► Sensor	
► Measured values	→ 39
► System units	→ 45
► Process parameters	→ 60
► Measurement mode	→ 67
► External compensation	→ 69
► Calculated values	→ 71
► Sensor adjustment	→ 74
► Calibration	→ 80
► Supervision	→ 82

3.2.1 "Measured values" submenu

Navigation

Expert → Sensor → Measured val.

► Measured values	
► Process variables	→ 39
► Totalizer	→ 43

"Process variables" submenu

Navigation

Expert → Sensor → Measured val. → Process variab.

► Process variables	
Mass flow	→ 40
Volume flow	→ 40
Corrected volume flow	→ 40
Density	→ 41

Reference density	→ 41
Temperature	→ 41
Pressure value	→ 42
Concentration	→ 42
Target mass flow	→ 42
Carrier mass flow	→ 43

Mass flow

Navigation   Expert → Sensor → Measured val. → Process variab. → Mass flow

Description Displays the mass flow that is currently measured.

User interface Signed floating-point number

Additional information *Dependency*

 The unit is taken from the **Mass flow unit** parameter (→ [46](#))

Volume flow

Navigation   Expert → Sensor → Measured val. → Process variab. → Volume flow

Description Displays the volume flow currently calculated.

User interface Signed floating-point number

Additional information *Dependency*

 The unit is taken from the **Volume flow unit** parameter (→ [47](#))

Corrected volume flow

Navigation   Expert → Sensor → Measured val. → Process variab. → Correct.vol.flow

Description Displays the corrected volume flow currently measured.

User interface Signed floating-point number

Additional information*Dependency*

The unit is taken from the **Corrected volume flow unit** parameter (→ 49)

Density

Navigation

Expert → Sensor → Measured val. → Process variab. → Density

Description

Displays the density currently measured.

User interface

Signed floating-point number

Additional information*Dependency*

The unit is taken from the **Density unit** parameter (→ 51)

Reference density

Navigation

Expert → Sensor → Measured val. → Process variab. → Ref.density

Description

Displays the reference density currently calculated.

User interface

Signed floating-point number

Additional information*Dependency*

The unit is taken from the **Reference density unit** parameter (→ 52)

Temperature

Navigation

Expert → Sensor → Measured val. → Process variab. → Temperature

Description

Displays the medium temperature currently measured.

User interface

Signed floating-point number

Additional information*Dependency*

The unit is taken from the **Temperature unit** parameter (→ 52)

Pressure value

Navigation	  Expert → Sensor → Measured val. → Process variab. → Pressure value
Description	Displays the fixed or external pressure value.
User interface	Signed floating-point number
Additional information	<i>Dependency</i>  The unit is taken from the Pressure unit parameter (→  53)

Concentration

Navigation	  Expert → Sensor → Measured val. → Process variab. → Concentration
Prerequisite	For the following order code: "Application package", option ED "Concentration"  The software options currently enabled are displayed in the Software option overview parameter (→  38).
Description	Displays the concentration currently calculated.
User interface	Signed floating-point number
Additional information	<i>Dependency</i>  The unit is taken from the Concentration unit parameter.

Target mass flow

Navigation	  Expert → Sensor → Measured val. → Process variab. → Target mass flow
Prerequisite	With the following conditions: <ul style="list-style-type: none">■ Order code for "Application package", option ED "Concentration"■ The WT-% option or the User conc. option is selected in the Concentration unit parameter.  The software options currently enabled are displayed in the Software option overview parameter (→  38).
Description	Displays the mass flow currently measured for the target medium.
User interface	Signed floating-point number
Additional information	<i>Dependency</i>  The unit is taken from the Mass flow unit parameter (→  46)

Carrier mass flow

Navigation  Expert → Sensor → Measured val. → Process variab. → Carrier mass fl.

Prerequisite With the following conditions:

- Order code for "Application package", option ED "Concentration"
- The **WT-%** option or the **User conc.** option is selected in the **Concentration unit** parameter.

 The software options currently enabled are displayed in the **Software option overview** parameter (→ [38](#)).

Description Displays the mass flow currently measured for the carrier medium.


User interface Signed floating-point number

Additional information *Dependency*

 The unit is taken from the **Mass flow unit** parameter (→ [46](#))

"Totalizer" submenu

Navigation  Expert → Sensor → Measured val. → Totalizer

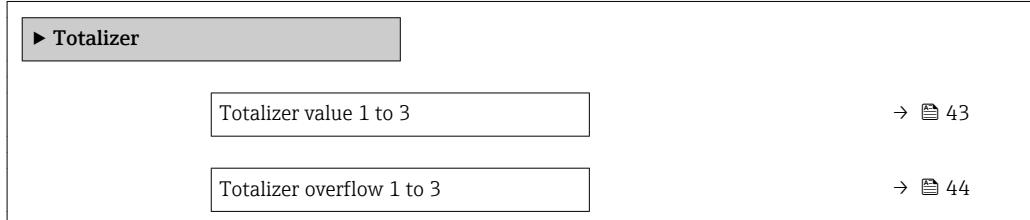

Totalizer value 1 to 3

Navigation  Expert → Sensor → Measured val. → Totalizer → Totalizer val. 1 to 3

Prerequisite One of the following options is selected in the **Assign process variable** parameter (→ [94](#)) of the **Totalizer 1 to 3** submenu:

- Volume flow
- Mass flow
- Corrected volume flow
- Target mass flow *
- Carrier mass flow *

Description Displays the current totalizer reading.

User interface Signed floating-point number

* Visibility depends on order options or device settings

Additional information*Description*

As it is only possible to display a maximum of 7 digits, the current counter value is the sum of the totalizer value and the overflow value from the **Totalizer overflow 1 to 3** parameter if the display range is exceeded.

-  In the event of an error, the totalizer adopts the mode defined in the **Failure mode** parameter (→ 98).

User interface

The value of the process variable totalized since measuring began can be positive or negative. This depends on the settings in the **Totalizer operation mode** parameter (→ 96).

-  The unit of the selected process variable is specified for the totalizer in the **Unit totalizer** parameter (→ 94).

Example

Calculation of the current totalizer reading when the value exceeds the 7-digit display range:

- Value in the **Totalizer value 1** parameter: 196 845.7 m³
- Value in the **Totalizer overflow 1** parameter: 1 · 10⁷ (1 overflow) = 10 000 000 [m³]
- Current totalizer reading: 10 196 845.7 m³

Totalizer overflow 1 to 3**Navigation**

 Expert → Sensor → Measured val. → Totalizer → Tot. overflow 1 to 3

Prerequisite

One of the following options is selected in the **Assign process variable** parameter (→ 94) of the **Totalizer 1 to 3** submenu:

- Volume flow
- Mass flow
- Corrected volume flow *
- Target mass flow *
- Carrier mass flow *

Description

Displays the current totalizer overflow.

User interface

Integer with sign

Additional information*Description*

If the current totalizer reading has more than 7 digits, which is the maximum value range that can be displayed, the value above this range is output as an overflow. The current

* Visibility depends on order options or device settings

totalizer value is therefore the sum of the overflow value and the totalizer value from the **Totalizer value 1 to 3** parameter.

User interface

 The unit of the selected process variable is specified for the totalizer in the **Unit totalizer** parameter (→ [94](#)).

Example

Calculation of the current totalizer reading when the value exceeds the 7-digit display range:

- Value in the **Totalizer value 1** parameter: 196845.7 m³
- Value in the **Totalizer overflow 1** parameter: $2 \cdot 10^7$ (2 overflows) = 20 000 000 [m³]
- Current totalizer reading: 20 196 845.7 m³

3.2.2 "System units" submenu

Navigation

  Expert → Sensor → System units

► System units	
Mass flow unit	→ 46
Mass unit	→ 46
Volume flow unit	→ 47
Volume unit	→ 49
Corrected volume flow unit	→ 49
Corrected volume unit	→ 50
Density unit	→ 51
Reference density unit	→ 52
Temperature unit	→ 52
Pressure unit	→ 53
Date/time format	→ 53
► User-specific units	
	→ 54

Mass flow unit**Navigation**

Expert → Sensor → System units → Mass flow unit

Description

Use this function to select the unit for the mass flow.

Selection*SI units*

- g/s
- g/min
- g/h
- g/d
- kg/s
- kg/min
- kg/h
- kg/d
- t/s
- t/min
- t/h
- t/d

US units

- oz/s
- oz/min
- oz/h
- oz/d
- lb/s
- lb/min
- lb/h
- lb/d
- STon/s
- STon/min
- STon/h
- STon/d

Custom-specific units

- User mass/s
- User mass/min
- User mass/h
- User mass/d

Factory setting

Country-specific:

- kg/h
- lb/min

Additional information*Result*

The selected unit applies for:

Mass flow parameter (→ 40)

Selection

For an explanation of the abbreviated units: → 124

Customer-specific units

The unit for the customer-specific mass is specified in the **User mass text** parameter (→ 55).

Mass unit**Navigation**

Expert → Sensor → System units → Mass unit

Description

Use this function to select the unit for the mass.

Selection	<i>SI units</i>	<i>US units</i>
	■ g	■ oz
	■ kg	■ lb
	■ t	■ STon
	<i>Custom-specific units</i>	
	User mass	
Factory setting	Country-specific:	
	■ kg	
	■ lb	
Additional information	<i>Selection</i>	
	 For an explanation of the abbreviated units: → 124	
	<i>Customer-specific units</i>	
	 The unit for the customer-specific mass is specified in the User mass text parameter (→ 55).	

Volume flow unit



Navigation

  Expert → Sensor → System units → Volume flow unit

Description

Use this function to select the unit for the volume flow.

Selection

- | <i>SI units</i> | <i>US units</i> | <i>Imperial units</i> |
|------------------------|------------------------|-----------------------|
| ■ cm ³ /s | ■ af/s | ■ gal/s (imp) |
| ■ cm ³ /min | ■ af/min | ■ gal/min (imp) |
| ■ cm ³ /h | ■ af/h | ■ gal/h (imp) |
| ■ cm ³ /d | ■ af/d | ■ gal/d (imp) |
| ■ dm ³ /s | ■ ft ³ /s | ■ Mgal/s (imp) |
| ■ dm ³ /min | ■ ft ³ /min | ■ Mgal/min (imp) |
| ■ dm ³ /h | ■ ft ³ /h | ■ Mgal/h (imp) |
| ■ dm ³ /d | ■ ft ³ /d | ■ Mgal/d (imp) |
| ■ m ³ /s | ■ fl oz/s (us) | ■ bbl/s (imp;beer) |
| ■ m ³ /min | ■ fl oz/min (us) | ■ bbl/min (imp;beer) |
| ■ m ³ /h | ■ fl oz/h (us) | ■ bbl/h (imp;beer) |
| ■ m ³ /d | ■ fl oz/d (us) | ■ bbl/d (imp;beer) |
| ■ ml/s | ■ gal/s (us) | ■ bbl/s (imp;oil) |
| ■ ml/min | ■ gal/min (us) | ■ bbl/min (imp;oil) |
| ■ ml/h | ■ gal/h (us) | ■ bbl/h (imp;oil) |
| ■ ml/d | ■ gal/d (us) | ■ bbl/d (imp;oil) |
| ■ l/s | ■ kgal/s (us) | |
| ■ l/min | ■ kgal/min (us) | |
| ■ l/h | ■ kgal/h (us) | |
| ■ l/d | ■ kgal/d (us) | |
| ■ hl/s | ■ Mgal/s (us) | |
| ■ hl/min | ■ Mgal/min (us) | |
| ■ hl/h | ■ Mgal/h (us) | |
| ■ hl/d | ■ Mgal/d (us) | |
| ■ Ml/s | ■ bbl/s (us;liq.) | |
| ■ Ml/min | ■ bbl/min (us;liq.) | |
| ■ Ml/h | ■ bbl/h (us;liq.) | |
| ■ Ml/d | ■ bbl/d (us;liq.) | |
| | ■ bbl/s (us;beer) | |
| | ■ bbl/min (us;beer) | |
| | ■ bbl/h (us;beer) | |
| | ■ bbl/d (us;beer) | |
| | ■ bbl/s (us;oil) | |
| | ■ bbl/min (us;oil) | |
| | ■ bbl/h (us;oil) | |
| | ■ bbl/d (us;oil) | |
| | ■ bbl/s (us;tank) | |
| | ■ bbl/min (us;tank) | |
| | ■ bbl/h (us;tank) | |
| | ■ bbl/d (us;tank) | |

Custom-specific units

- User vol./s
- User vol./min
- User vol./h
- User vol./d

Factory setting

Country-specific:

- l/h
- gal/min (us)

Additional information*Result*

The selected unit applies for:
Volume flow parameter (→ 40)

Selection

For an explanation of the abbreviated units: → 124

Customer-specific units

The unit for the customer-specific volume is specified in the **User volume text** parameter (→ 56).

Volume unit**Navigation**

Expert → Sensor → System units → Volume unit

Description

Use this function to select the unit for the volume.

Selection*SI units*

- cm³
- dm³
- m³
- ml
- l
- hl
- Ml Mega

US units

- af
- ft³
- fl oz (us)
- gal (us)
- kgal (us)
- Mgal (us)
- bbl (us;oil)
- bbl (us;liq.)
- bbl (us;beer)
- bbl (us;tank)

Imperial units

- gal (imp)
- Mgal (imp)
- bbl (imp;beer)
- bbl (imp;oil)

Custom-specific units

User vol.

Factory setting

Country-specific:

- l
- gal (us)

Additional information*Selection*

For an explanation of the abbreviated units: → 124

Customer-specific units

The unit for the customer-specific volume is specified in the **User volume text** parameter (→ 56).

Corrected volume flow unit**Navigation**

Expert → Sensor → System units → Cor.volflow unit

Description

Use this function to select the unit for the corrected volume flow.

Selection

- | <i>SI units</i> | <i>US units</i> |
|------------------------|-------------------------|
| ■ NI/s | ■ Sft ³ /s |
| ■ NI/min | ■ Sft ³ /min |
| ■ NI/h | ■ Sft ³ /h |
| ■ NI/d | ■ Sft ³ /d |
| ■ Nm ³ /s | ■ Sgal/s (us) |
| ■ Nm ³ /min | ■ Sgal/min (us) |
| ■ Nm ³ /h | ■ Sgal/h (us) |
| ■ Nm ³ /d | ■ Sgal/d (us) |
| ■ Sm ³ /s | ■ Sbbl/s (us;liq.) |
| ■ Sm ³ /min | ■ Sbbl/min (us;liq.) |
| ■ Sm ³ /h | ■ Sbbl/h (us;liq.) |
| ■ Sm ³ /d | ■ Sbbl/d (us;liq.) |

Custom-specific units

- UserCrVol./s
- UserCrVol./min
- UserCrVol./h
- UserCrVol./d

Factory setting

Country-specific:

- NI/h
- Sft³/min

Additional information*Result*

The selected unit applies for:

Corrected volume flow parameter (→  40)*Selection*

 For an explanation of the abbreviated units: →  124

Corrected volume unit**Navigation**
  Expert → Sensor → System units → Corr. vol. unit
Description

Use this function to select the unit for the corrected volume.

Selection

- | <i>SI units</i> | <i>US units</i> | <i>Imperial units</i> |
|-------------------|--------------------|-----------------------|
| ■ NI | ■ Sft ³ | Sgal (imp) |
| ■ Nm ³ | ■ Sgal (us) | |
| ■ Sm ³ | ■ Sbbl (us;liq.) | |

Custom-specific units

UserCrVol.

Factory setting

Country-specific:

- NI
- Sft³

Additional information*Selection*

For an explanation of the abbreviated units: → [124](#)

Density unit**Navigation**

Expert → Sensor → System units → Density unit

Description

Use this function to select the unit for the density.

Selection*SI units*

- g/cm³
- g/m³
- kg/dm³
- kg/l
- kg/m³
- SD4°C
- SD15°C
- SD20°C
- SG4°C
- SG15°C
- SG20°C

US units

- lb/ft³
- lb/gal (us)
- lb/bbl (us;liq.)
- lb/bbl (us;beer)
- lb/bbl (us;oil)
- lb/bbl (us;tank)

Imperial units

- lb/gal (imp)
- lb/bbl (imp;beer)
- lb/bbl (imp;oil)

Custom-specific units

User dens.

Factory setting

Country-specific:

- kg/l
- lb/ft³

Additional information*Result*

The selected unit applies for:

Density parameter (→ [41](#))

Selection

- SD = specific density

The specific density is the ratio of the fluid density to the water density at a water temperature of +4 °C (+39 °F), +15 °C (+59 °F), +20 °C (+68 °F).

- SG = specific gravity

The specific gravity is the ratio of the fluid density to the water density at a water temperature of +4 °C (+39 °F), +15 °C (+59 °F), +20 °C (+68 °F).



For an explanation of the abbreviated units: → [124](#)

Customer-specific units

The unit for the customer-specific density is specified in the **User density text** parameter (→ [58](#)).

Reference density unit



Navigation

Expert → Sensor → System units → Ref. dens. unit

Description

Use this function to select the unit for the reference density.

Selection

SI units	US units
■ kg/Nm ³	lb/Sft ³
■ kg/Nl	
■ g/Scm ³	
■ kg/Sm ³	

Factory setting

Country-dependent

- kg/Nl
- lb/Sft³

Additional information

Result

The selected unit applies for:

- **External reference density** parameter (→ [72](#))
- **Fixed reference density** parameter (→ [72](#))
- **Reference density** parameter (→ [41](#))

Selection

For an explanation of the abbreviated units: → [124](#)

Temperature unit



Navigation

Expert → Sensor → System units → Temperature unit

Description

Use this function to select the unit for the temperature.

Selection

SI units	US units
■ °C	■ °F
■ K	■ °R

Factory setting

Country-specific:

- °C
- °F

Additional information

Result

The selected unit applies for:

- **Maximum value** parameter (→ [112](#))
- **Minimum value** parameter (→ [112](#))
- **Maximum value** parameter (→ [113](#))
- **Minimum value** parameter (→ [113](#))
- **Maximum value** parameter (→ [114](#))
- **Minimum value** parameter (→ [114](#))

- External temperature parameter (→ [71](#))
- Reference temperature parameter (→ [73](#))
- Temperature parameter (→ [41](#))

Selection

 For an explanation of the abbreviated units: → [124](#)

Pressure unit



Navigation

 Expert → Sensor → System units → Pressure unit

Description

Use this function to select the unit for the pipe pressure.

Selection

SI units

- Pa a
- kPa a
- MPa a
- bar
- Pa g
- kPa g
- MPa g
- bar g

US units

- psi a
- psi g

Custom-specific units

User pres.

Factory setting

Country-specific:

- bar a
- psi a

Additional information

Result

The unit is taken from:

- **Pressure value** parameter (→ [42](#))
- **External pressure** parameter (→ [70](#))
- **Pressure value** parameter (→ [70](#))

Selection

 For an explanation of the abbreviated units: → [124](#)

Date/time format



Navigation

 Expert → Sensor → System units → Date/time format

Description

Use this function to select the desired time format for calibration history.

Selection

- dd.mm.yy hh:mm
- dd.mm.yy hh:mm am/pm
- mm/dd/yy hh:mm
- mm/dd/yy hh:mm am/pm

Factory setting dd.mm.yy hh:mm

Additional information Selection

 For an explanation of the abbreviated units: → [124](#)

"User-specific units" submenu

Navigation  Expert → Sensor → System units → User-spec. units

► User-specific units	
User mass text	→ 55
User mass offset	→ 55
User mass factor	→ 55
User volume text	→ 56
User volume offset	→ 56
User volume factor	→ 57
User corrected volume text	→ 57
User corrected volume offset	→ 57
User corrected volume factor	→ 58
User density text	→ 58
User density offset	→ 58
User density factor	→ 58
User pressure text	→ 59
User pressure offset	→ 59
User pressure factor	→ 59

User mass text

Navigation Expert → Sensor → System units → User-spec. units → Mass text

Description Use this function to enter a text for the user-specific unit of mass and mass flow. The corresponding time units (s, min, h, d) for mass flow are generated automatically.

User entry Max. 10 characters such as letters, numbers or special characters (@, %, /)

Factory setting User mass

Additional information *Result*

- The defined unit is shown as an option in the choose list of the following parameters:
 - **Mass flow unit** parameter (→ 46)
 - **Mass unit** parameter (→ 46)

Example

If the text CENT for "centner" is entered, the following options are displayed in the picklist for the **Mass flow unit** parameter (→ 46):

- CENT/s
- CENT/min
- CENT/h
- CENT/d

User mass offset

Navigation Expert → Sensor → System units → User-spec. units → Mass offset

Description Use this function to enter the zero point shift for the user-specific mass and mass flow unit.

User entry Signed floating-point number

Factory setting 0

Additional information *Description*

- Value in user-specific unit = (factor × value in base unit) + offset

User mass factor

Navigation Expert → Sensor → System units → User-spec. units → Mass factor

Description Use this function to enter a quantity factor (without time) for the user-specific mass and mass flow unit.

User entry Signed floating-point number

Factory setting 1.0

Additional information *Example*

Mass of 1 Zentner = 50 kg → 0.02 Zentner = 1 kg → entry: 0.02

User volume text



Navigation Expert → Sensor → System units → User-spec. units → Volume text

Description Use this function to enter a text for the user-specific unit of volume and volume flow. The corresponding time units (s, min, h, d) for volume flow are generated automatically.

User entry Max. 10 characters such as letters, numbers or special characters (@, %, /)

Factory setting User vol.

Additional information *Result*

The defined unit is shown as an option in the choose list of the following parameters:

- **Volume flow unit** parameter (→ 47)
- **Volume unit** parameter (→ 49)

Example

If the text GLAS is entered, the choose list of the **Volume flow unit** parameter (→ 47) shows the following options:

- GLAS/s
- GLAS/min
- GLAS/h
- GLAS/d

User volume offset



Navigation Expert → Sensor → System units → User-spec. units → Volume offset

Description Use this function to enter the offset for adapting the user-specific volume unit and volume flow unit (without time).

User entry Signed floating-point number

Factory setting 0

Additional information *Description*

Value in user-specific unit = (factor × value in base unit) + offset

User volume factor

Navigation Expert → Sensor → System units → User-spec. units → Volume factor

Description Use this function to enter a quantity factor (without time) for the user-specific volume and volume flow unit.

User entry Signed floating-point number

Factory setting 1.0

User corrected volume text

Navigation Expert → Sensor → System units → User-spec. units → Corr. vol. text

Description Use this function to enter a text for the user-specific unit of the corrected volume and corrected volume flow. The corresponding time units (s, min, h, d) for mass flow are generated automatically.

User entry Max. 10 characters such as letters, numbers or special characters (@, %, /)

Factory setting UserCrVol.

Additional information*Result*

- The defined unit is shown as an option in the choose list of the following parameters:
- **Corrected volume flow unit** parameter (→ [49](#))
 - **Corrected volume unit** parameter (→ [50](#))

Example

If the text GLAS is entered, the choose list of the **Corrected volume flow unit** parameter (→ [49](#)) shows the following options:

- GLAS/s
- GLAS/min
- GLAS/h
- GLAS/d

User corrected volume offset

Navigation Expert → Sensor → System units → User-spec. units → Corr vol. offset

Description Use this function to enter the offset for adapting the user-specific corrected volume unit and corrected volume flow unit (without time).

- Value in user-specific unit = (factor × value in base unit) + offset

User entry Signed floating-point number

Factory setting 0

User corrected volume factor

Navigation	Expert → Sensor → System units → User-spec. units → Cor.vol. factor
Description	Use this function to enter a quantity factor (without time) for the user-specific corrected volume unit and corrected volume flow unit.
User entry	Signed floating-point number
Factory setting	1.0

User density text

Navigation	Expert → Sensor → System units → User-spec. units → Density text
Description	Use this function to enter a text or the user-specific unit of density.
User entry	Max. 10 characters such as letters, numbers or special characters (@, %, /)
Factory setting	User dens.
Additional information	<i>Result</i> The defined unit is shown as an option in the choose list of the Density unit parameter (→ 51).
	<i>Example</i> Enter text “CE_L” for centners per liter

User density offset

Navigation	Expert → Sensor → System units → User-spec. units → Density offset
Description	Use this function to enter the zero point shift for the user-specific density unit. Value in user-specific unit = (factor × value in base unit) + offset
User entry	Signed floating-point number
Factory setting	0

User density factor

Navigation	Expert → Sensor → System units → User-spec. units → Density factor
Description	Use this function to enter a quantity factor for the user-specific density unit.

User entry Signed floating-point number

Factory setting 1.0

User pressure text



Navigation Expert → Sensor → System units → User-spec. units → Pressure text

Description Use this function to enter a text for the user-specific pressure unit.

User entry Max. 10 characters such as letters, numbers or special characters (@, %, /)

Factory setting User pres.

Additional information *Result*



The defined unit is shown as an option in the choose list of the **Pressure unit** parameter (→ 53).

User pressure offset



Navigation Expert → Sensor → System units → User-spec. units → Pressure offset

Description Use this function to enter the offset for adapting the user-specific pressure unit.

User entry Signed floating-point number

Factory setting 0

User pressure factor



Navigation Expert → Sensor → System units → User-spec. units → Pressure factor

Description Use this function to enter a quantity factor for the user-specific pressure unit.

User entry Signed floating-point number

Factory setting 1.0

Additional information *Example*

1 Dyn/cm² = 0.1 Pa → 10 Dyn/cm² = 1 Pa → user entry: 10

3.2.3 "Process parameters" submenu

Navigation

Expert → Sensor → Process param.

▶ Process parameters	
Flow damping	→ 60
Density damping	→ 60
Temperature damping	→ 61
Flow override	→ 61
▶ Low flow cut off	→ 62
▶ Partially filled pipe detection	→ 65

Flow damping



Navigation

Expert → Sensor → Process param. → Flow damping

Description

Use this function to enter a time constant for flow damping. Reduction of the variability of the flow measured value (in relation to interference). For this purpose, the depth of the flow filter is adjusted: when the filter setting increases, the reaction time of the device also increases.

User entry

0 to 100.0 s

Factory setting

0 s

Additional information

User entry

- Value = 0: no damping
- Value > 0: damping is increased

Result



The damping affects the following variables of the device:

- Outputs
- Low flow cut off → 62
- Totalizers → 93

Density damping



Navigation

Expert → Sensor → Process param. → Density damping

Description

Use this function to enter the time constant for density damping.

User entry 0 to 999.9 s

Factory setting 0 s

Temperature damping



Navigation Expert → Sensor → Process param. → Temp. damping

Description Use this function to enter a time constant for temperature damping.

User entry 0 to 999.9 s

Factory setting 0 s

Flow override



Navigation Expert → Sensor → Process param. → Flow override

Description Use this function to select whether to interrupt the evaluation of measured values. This is useful for the cleaning processes of a pipeline, for example.

Selection

- Off
- On

Factory setting Off

Additional information *Result*




This setting affects all the functions and outputs of the measuring device.

Description

Flow override is active

- The diagnostic message diagnostic message **△C453 Flow override** is displayed.
- Output values
 - Output: Value at zero flow
 - Temperature: proceeding output
 - Totalizers 1-3: Stop being totalized

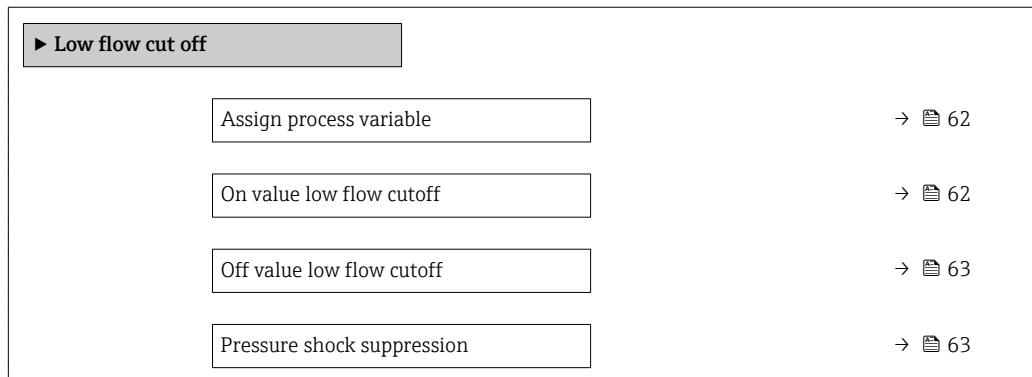"Low flow cut off" submenu**Navigation** Expert → Sensor → Process param. → Low flow cut off**Assign process variable****Navigation** Expert → Sensor → Process param. → Low flow cut off → Assign variable**Description**

Use this function to select the process variable for low flow cutoff detection.

Selection

- Off
- Mass flow
- Volume flow
- Corrected volume flow

Factory setting

Mass flow

On value low flow cutoff**Navigation** Expert → Sensor → Process param. → Low flow cut off → On value**Prerequisite**

One of the following options is selected in the **Assign process variable** parameter (→  62):

- Mass flow
- Volume flow
- Corrected volume flow

Description

Use this function to enter a switch-on value for low flow cut off. Low flow cut off is activated if the value entered is not equal to 0 or pressure shock suppression is active →  63.

User entry

Positive floating-point number

Factory setting

Depends on country and nominal diameter →  121

Additional information*Dependency*

 The unit depends on the process variable selected in the **Assign process variable** parameter (→ 62).

Off value low flow cutoff**Navigation**

 Expert → Sensor → Process param. → Low flow cut off → Off value

Prerequisite

One of the following options is selected in the **Assign process variable** parameter (→ 62):

- Mass flow
- Volume flow
- Corrected volume flow

Description


Use this function to enter a switch-off value for low flow cut off. The off value is entered as a positive hysteresis from the on value → 62.

User entry

0 to 100.0 %

Factory setting

50 %

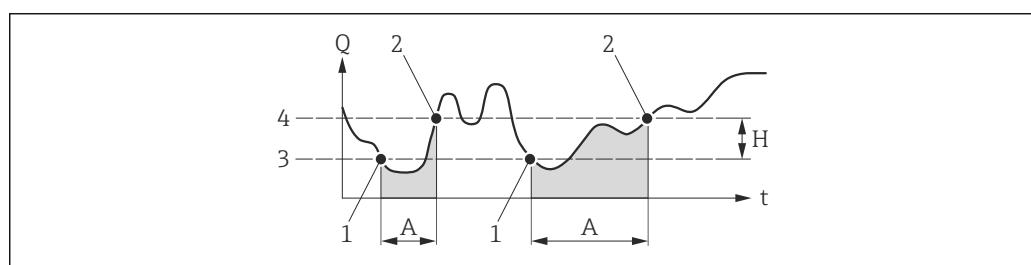Additional information*Example*

A0012887

- | | |
|----------|---------------------------------|
| <i>Q</i> | Flow |
| <i>t</i> | Time |
| <i>H</i> | Hysteresis |
| <i>A</i> | Low flow cut off active |
| 1 | Low flow cut off is activated |
| 2 | Low flow cut off is deactivated |
| 3 | On value entered |
| 4 | Off value entered |

Pressure shock suppression**Navigation**

 Expert → Sensor → Process param. → Low flow cut off → Pres. shock sup.

Prerequisite

One of the following options is selected in the **Assign process variable** parameter (→ 62):

- Mass flow
- Volume flow
- Corrected volume flow

Description Use this function to enter the time interval for signal suppression (= active pressure shock suppression).

User entry 0 to 100 s

Factory setting 0 s

Additional information *Description*

Pressure shock suppression is enabled


- Prerequisite:
 - Flow rate < on-value of low flow cut off
 - or
 - Changing the flow direction
- Output values
 - Flow displayed: 0
 - Totalizer: the totalizers are pegged at the last correct value

Pressure shock suppression is disabled

- Prerequisite: the time interval set in this function has elapsed.
- If the flow also exceeds the switch-off value for low flow cut off, the device starts processing the current flow value again and displays it.

Example

When closing a valve, momentarily strong fluid movements may occur in the pipeline, which are registered by the measuring system. These totalized flow values lead to a false totalizer status, particularly during batching processes.

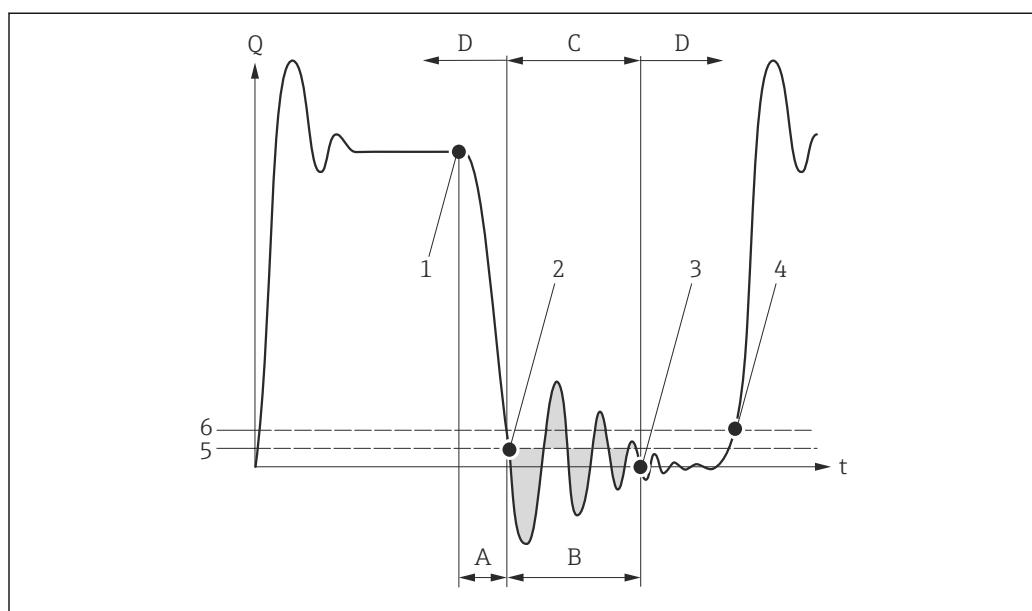

A0012888

- | | |
|---|--|
| Q | Flow |
| t | Time |
| A | Drip |
| B | Pressure shock |
| C | Pressure shock suppression active as specified by the time entered |
| D | Pressure shock suppression inactive |
| 1 | Valve closes |
| 2 | Flow falls below the on-value of the low flow cut off: pressure shock suppression is activated |
| 3 | The time entered has elapsed: pressure shock suppression is deactivated |
| 4 | The actual flow value is now displayed and output |
| 5 | On value for low flow cut off |
| 6 | Off value for low flow cut off |

"Partially filled pipe detection" submenu**Navigation**
 Expert → Sensor → Process param. → Partial pipe det

► Partially filled pipe detection	
Assign process variable	→  65
Low value partial filled pipe detection	→  65
High value partial filled pipe detection	→  66
Response time part. filled pipe detect.	→  66
Maximum damping partial filled pipe det.	→  67

Assign process variable**Navigation**
 Expert → Sensor → Process param. → Partial pipe det → Assign variable
Description

Use this function to select a process variable to detect empty or partially filled measuring tubes.

For gas measurement: Deactivate monitoring due to low gas density.

Selection

- Off
- Density
- Reference density

Factory setting

Off

Low value partial filled pipe detection**Navigation**
 Expert → Sensor → Process param. → Partial pipe det → Low value
Prerequisite

One of the following options is selected in the **Assign process variable** parameter
(→  65):

- Density
- Reference density

Description

Use this function to enter a lower limit value to enable detection of empty or partially filled measuring tubes. If the measured density falls below this value, monitoring is enabled.

User entry

Signed floating-point number

Factory setting

200

Additional information*User entry*

The lower limit value must be less than the upper limit value that is specified in the **High value partial filled pipe detection** parameter (→ 66).

 The unit depends on the process variable selected in the **Assign process variable** parameter (→ 65).

Limit value

 If the displayed value is outside the limit value, the measuring device displays the diagnostic message **△S862 Partly filled pipe**.

High value partial filled pipe detection**Navigation**

 Expert → Sensor → Process param. → Partial pipe det → High value

Prerequisite

One of the following options is selected in the **Assign process variable** parameter (→ 65):

- Density
- Reference density

Description

Use this function to enter an upper limit value to enable detection of empty or partially filled measuring tubes. If the measured density exceeds this value, detection is enabled.

User entry

Signed floating-point number

Factory setting

6 000

Additional information*User entry*

The upper limit value must be greater than the lower limit value that is specified in the **Low value partial filled pipe detection** parameter (→ 65).

 The unit depends on the process variable selected in the **Assign process variable** parameter (→ 65).

Limit value

 If the displayed value is outside the limit value, the measuring device displays the diagnostic message **△S862 Partly filled pipe**.

Response time part. filled pipe detect.**Navigation**

 Expert → Sensor → Process param. → Partial pipe det → Response time

Prerequisite

One of the following options is selected in the **Assign process variable** parameter (→ 65):

- Density
- Reference density

Description

Enter the minimum length of time (debouncing time) the signal must be present for the diagnostic message **△S862 Partly filled pipe** to be triggered if the measuring pipe is empty or partially full.

User entry 0 to 100 s

Factory setting 1 s

Maximum damping partial filled pipe det.



Navigation Expert → Sensor → Process param. → Partial pipe det → Max. damping

Prerequisite One of the following options is selected in the **Assign process variable** parameter (→ 65):

- Density
- Reference density

Description Use this function to enter a damping value to enable detection of empty or partially filled measuring tubes.

User entry Positive floating-point number

Factory setting 0

Additional information *Description*

If pipe damping (**Testpoints** submenu) exceeds the specified value, the measuring device presumes that the pipe is partially filled and the flow signal is set to **0**. The measuring device displays the diagnostic message **△S862 Partly filled pipe**. In the case of non-homogeneous media or air pockets, the damping of the measuring tubes increases.

User entry

The function is enabled only if the input value is greater than **0**.

3.2.4 "Measurement mode" submenu

Navigation Expert → Sensor → Measurement mode

Measurement mode	
Select medium	→ 68
Select gas type	→ 68
Reference sound velocity	→ 69
Temperature coefficient sound velocity	→ 69

Select medium

Navigation Expert → Sensor → Measurement mode → Select medium

Description Use this function to select the type of medium.

Selection

- Liquid
- Gas

Factory setting Liquid

Select gas type

Navigation Expert → Sensor → Measurement mode → Select gas type

Prerequisite The **Gas** option is selected in the **Select medium** parameter (→ 68).

Description Use this function to select the type of gas for the measuring application.

Selection

- Air
- Ammonia NH₃
- Argon Ar
- Sulfur hexafluoride SF₆
- Oxygen O₂
- Ozone O₃
- Nitrogen oxide NO_x
- Nitrogen N₂
- Nitrous oxide N₂O
- Methane CH₄
- Hydrogen H₂
- Helium He
- Hydrogen chloride HCl
- Hydrogen sulfide H₂S
- Ethylene C₂H₄
- Carbon dioxide CO₂
- Carbon monoxide CO
- Chlorine Cl₂
- Butane C₄H₁₀
- Propane C₃H₈
- Propylene C₃H₆
- Ethane C₂H₆
- Others

Factory setting Methane CH₄

Reference sound velocity

Navigation Expert → Sensor → Measurement mode → Sound velocity

Prerequisite The **Others** option is selected in the **Select gas type** parameter (→ [68](#)).

Description Use this function to enter the sound velocity of the gas at 0 °C (+32 °F).

User entry 1 to 99 999.9999 m/s

Factory setting 0 m/s

Temperature coefficient sound velocity

Navigation Expert → Sensor → Measurement mode → Temp. coeff. SV

Prerequisite The **Others** option is selected in the **Select gas type** parameter (→ [68](#)).

Description Use this function to enter a temperature coefficient for the sound velocity of the gas.

User entry Positive floating-point number

Factory setting 0 (m/s)/K

3.2.5 "External compensation" submenu

Navigation Expert → Sensor → External comp.

External compensation	
Pressure compensation	→ 70
Pressure value	→ 70
External pressure	→ 70
Temperature mode	→ 71
External temperature	→ 71

Pressure compensation



Navigation	Expert → Sensor → External comp. → Pressure compen.
Prerequisite	The Gas option is selected in the Select medium parameter (→ 68).
Description	Use this function select the type of pressure compensation.
Selection	<ul style="list-style-type: none">▪ Off▪ Fixed value▪ External value
Factory setting	Off

Pressure value



Navigation	Expert → Sensor → External comp. → Pressure value
Prerequisite	The Fixed value option is selected in the Pressure compensation parameter (→ 70).
Description	Use this function to enter a value for the process pressure that is used for pressure correction.
User entry	Positive floating-point number
Factory setting	0 bar
Additional information	<i>User entry</i> The unit is taken from the Pressure unit parameter (→ 53)

External pressure

Navigation	Expert → Sensor → External comp. → External press.
Prerequisite	The External value option is selected in the Pressure compensation parameter (→ 70).
Description	Use this function to enter an external pressure value.
User entry	Positive floating-point number
Factory setting	0 bar
Additional information	<i>User entry</i> The unit is taken from the Pressure unit parameter (→ 53)

Temperature mode


Navigation	Expert → Sensor → External comp. → Temperature mode
Description	Use this function to select the temperature mode.
Selection	<ul style="list-style-type: none"> ■ Internal measured value ■ External value
Factory setting	Internal measured value

External temperature


Navigation	Expert → Sensor → External comp. → External temp.
Prerequisite	The External value option is selected in the Temperature mode parameter (→ 71) parameter.
Description	Use this function to enter the external temperature.
User entry	-273.15 to 99 999 °C
Factory setting	<ul style="list-style-type: none"> ■ 0 °C ■ +32 °F
Additional information	<p><i>Description</i></p> The unit is taken from the Temperature unit parameter (→ 52)

3.2.6 "Calculated values" submenu

Navigation Expert → Sensor → Calculated value

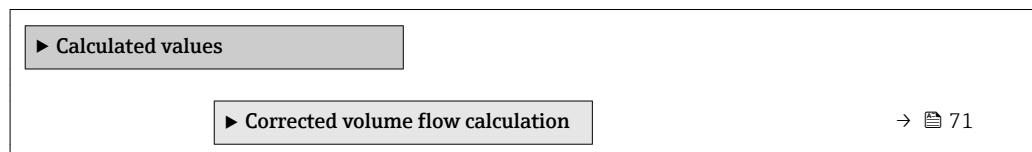**"Corrected volume flow calculation" submenu**

Navigation Expert → Sensor → Calculated value → Corr. vol.flow.

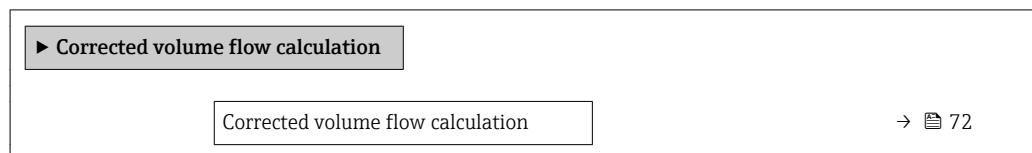

External reference density	→ 72
Fixed reference density	→ 72
Reference temperature	→ 73
Linear expansion coefficient	→ 73
Square expansion coefficient	→ 74

Corrected volume flow calculation



Navigation

Expert → Sensor → Calculated value → Corr. vol.flow. → Corr. vol.flow.

Description

Use this function to select the reference density for calculating the corrected volume flow.

Selection

- Fixed reference density
- Calculated reference density
- Reference density by API table 53
- External reference density

Factory setting

Calculated reference density

External reference density

Navigation

Expert → Sensor → Calculated value → Corr. vol.flow. → Ext. ref.density

Prerequisite

The **External reference density** option is selected in the **Corrected volume flow calculation** parameter (→ 72).

Description

Use this function to enter the external reference density.

User entry

Floating point number with sign

Factory setting

0 kg/Nl

Fixed reference density



Navigation

Expert → Sensor → Calculated value → Corr. vol.flow. → Fix ref.density

Prerequisite

In the **Corrected volume flow calculation** parameter (→ 72) the **Fixed reference density** option is selected.

Description

Use this function to enter a fixed value for the reference density.

User entry	Positive floating-point number
Factory setting	1 kg/Nl
Additional information	<p><i>Dependency</i></p>  The unit is taken from the Reference density unit parameter (→ 52)

Reference temperature

Navigation	 Expert → Sensor → Calculated value → Corr. vol.flow. → Ref. temperature
Prerequisite	In the Corrected volume flow calculation parameter (→ 72) the Calculated reference density option is selected.
Description	Use this function to enter a reference temperature for calculating the reference density.
User entry	-273.15 to 99 999 °C
Factory setting	Country-specific: ■ +20 °C ■ +68 °F
Additional information	<p><i>Dependency</i></p>  The unit is taken from the Temperature unit parameter (→ 52)

Reference density calculation

$$\rho_n = \rho \cdot (1 + \alpha \cdot \Delta t + \beta \cdot \Delta t^2)$$

A0023403

- ρ_n : reference density
- ρ : fluid density currently measured
- t : fluid temperature currently measured
- t_n : reference temperature at which the reference density is calculated (e.g. 20 °C)
- Δt : $t - t_n$
- α : linear expansion coefficient of the fluid, unit = [1/K]; K = Kelvin
- β : square expansion coefficient of the fluid, unit = [1/K²]

Linear expansion coefficient

Navigation	 Expert → Sensor → Calculated value → Corr. vol.flow. → Linear exp coeff
Prerequisite	In the Corrected volume flow calculation parameter (→ 72) the Calculated reference density option is selected.
Description	Use this function to enter a linear, fluid-specific expansion coefficient for calculating the reference density.

User entry Signed floating-point number

Factory setting 0.0

Square expansion coefficient



Navigation Expert → Sensor → Calculated value → Corr. vol.flow. → Square exp coeff


Description For fluid with a non-linear expansion pattern: use this function to enter a quadratic, fluid-specific expansion coefficient for calculating the reference density.

User entry Signed floating-point number

Factory setting 0.0

3.2.7 "Sensor adjustment" submenu

Navigation Expert → Sensor → Sensor adjustm.

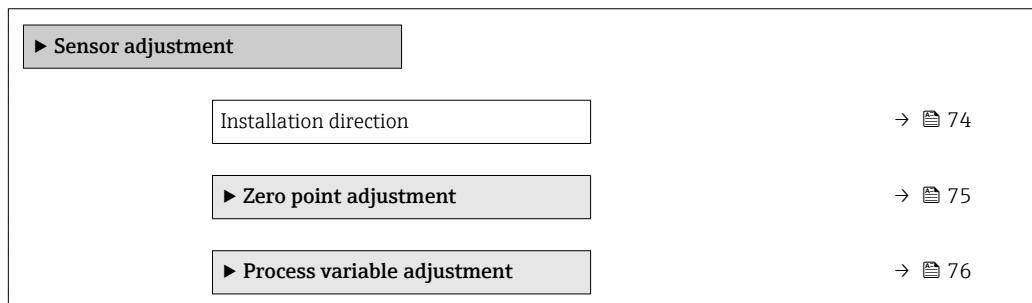

Installation direction



Navigation Expert → Sensor → Sensor adjustm. → Install. direct.

Description Use this function to change the sign of the medium flow direction.

Selection

- Flow in arrow direction
- Flow against arrow direction

Factory setting Flow in arrow direction


Additional information *Description*

Before changing the sign: ascertain the actual direction of fluid flow with reference to the direction indicated by the arrow on the sensor nameplate.

"Zero point adjustment" submenu

Navigation

Expert → Sensor → Sensor adjustm. → Zero point adj.

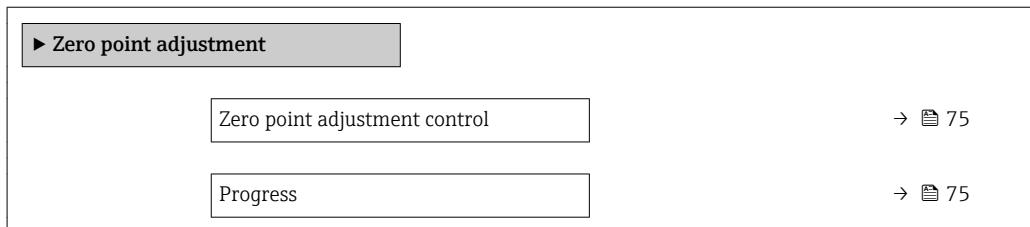

Zero point adjustment control

Navigation

Expert → Sensor → Sensor adjustm. → Zero point adj. → Zero point adj.

Description

Use this function to select the start of the zero point adjustment.

Note conditions .

Selection

- Cancel
- Busy
- Zero point adjust failure
- Start

Factory setting

Cancel

Additional information

Description

- Cancel
If zero point adjustment has failed, select this option to cancel zero point adjustment.
- Busy
Is displayed during zero point adjustment.
- Zero point adjust failure
Is displayed if zero point adjustment has failed.
- Start
Select this option to start zero point adjustment.

Progress

Navigation

Expert → Sensor → Sensor adjustm. → Zero point adj. → Progress

Description

The progress of the process is indicated.

User interface

0 to 100 %

"Process variable adjustment" submenu*Navigation* Expert → Sensor → Sensor adjustm. → Variable adjust

► Process variable adjustment	
Mass flow offset	→  76
Mass flow factor	→  77
Volume flow offset	→  77
Volume flow factor	→  77
Density offset	→  78
Density factor	→  78
Corrected volume flow offset	→  78
Corrected volume flow factor	→  79
Reference density offset	→  79
Reference density factor	→  79
Temperature offset	→  80
Temperature factor	→  80

Mass flow offset**Navigation** Expert → Sensor → Sensor adjustm. → Variable adjust → Mass flow offset**Description**

Use this function to enter the zero point shift for the mass flow trim. The mass flow unit on which the shift is based is kg/s.

User entry

Signed floating-point number

Factory setting

0 kg/s

Additional information*Description*

 Corrected value = (factor × value) + offset

Mass flow factor

Navigation Expert → Sensor → Sensor adjustm. → Variable adjust → Mass flow factor

Description Use this function to enter a quantity factor (without time) for the mass flow. This multiplication factor is applied over the mass flow range.

User entry Positive floating-point number

Factory setting 1

Additional information *Description*

Corrected value = (factor × value) + offset

Volume flow offset

Navigation Expert → Sensor → Sensor adjustm. → Variable adjust → Vol. flow offset

Description Use this function to enter the zero point shift for the volume flow trim. The volume flow unit on which the shift is based is m³/s.

User entry Signed floating-point number

Factory setting 0 m³/s

Additional information *Description*

Corrected value = (factor × value) + offset

Volume flow factor

Navigation Expert → Sensor → Sensor adjustm. → Variable adjust → Vol. flow factor

Description Use this function to enter a quantity factor (without time) for the volume flow. This multiplication factor is applied over the volume flow range.

User entry Positive floating-point number

Factory setting 1

Additional information *Description*

Corrected value = (factor × value) + offset

Density offset**Navigation**

Expert → Sensor → Sensor adjustm. → Variable adjust → Density offset

Description

Use this function to enter the zero point shift for the density trim. The density unit on which the shift is based is kg/m³.

User entry

Signed floating-point number

Factory setting

0 kg/m³

Additional information*Description*

Corrected value = (factor × value) + offset

Density factor**Navigation**

Expert → Sensor → Sensor adjustm. → Variable adjust → Density factor

Description

Use this function to enter a quantity factor for the density. This multiplication factor is applied over the density range.

User entry

Positive floating-point number

Factory setting

1

Additional information*Description*

Corrected value = (factor × value) + offset

Corrected volume flow offset**Navigation**

Expert → Sensor → Sensor adjustm. → Variable adjust → Corr. vol offset

Description

Use this function to enter the zero point shift for the corrected volume flow trim. The corrected volume flow unit on which the shift is based is 1 Nm³/s.

User entry

Signed floating-point number

Factory setting

0 Nm³/s

Additional information*Description*

Corrected value = (factor × value) + offset

Corrected volume flow factor

Navigation Expert → Sensor → Sensor adjustm. → Variable adjust → Corr. vol factor

Description Use this function to enter a quantity factor (without time) for the corrected volume flow. This multiplication factor is applied over the corrected volume flow range.

User entry Positive floating-point number

Factory setting 1

Additional information *Description*

Corrected value = (factor × value) + offset

Reference density offset

Navigation Expert → Sensor → Sensor adjustm. → Variable adjust → Ref.dens. offset

Description Use this parameter to enter the zero point shift for the reference density trim. The standard density unit on which the shift is based is 1 kg/Nm³.

User entry Signed floating-point number

Factory setting 0 kg/Nm³

Additional information *Description*

Corrected value = (factor × value) + offset

Reference density factor

Navigation Expert → Sensor → Sensor adjustm. → Variable adjust → Ref.dens. factor

Description Use this function to enter a quantity factor (without time) for the reference density. This multiplication factor is applied over the reference density range.

User entry Positive floating-point number

Factory setting 1

Additional information *Description*

Corrected value = (factor × value) + offset

Temperature offset**Navigation**

Expert → Sensor → Sensor adjustm. → Variable adjust → Temp. offset

Description

Use this function to enter the zero point shift for the temperature trim. The temperature unit on which the shift is based is K.

User entry

Signed floating-point number

Factory setting

0 K

Additional information*Description*

Corrected value = (factor × value) + offset

Temperature factor**Navigation**

Expert → Sensor → Sensor adjustm. → Variable adjust → Temp. factor

Description

Use this function to enter a quantity factor for the temperature. In each case, this factor refers to the temperature in K.

User entry

Positive floating-point number

Factory setting

1

Additional information*Description*

Corrected value = (factor × value) + offset

3.2.8 "Calibration" submenu

Navigation

Expert → Sensor → Calibration

► Calibration

Calibration factor	→ 81
Zero point	→ 81
Nominal diameter	→ 81
C0 to 5	→ 81

Calibration factor

Navigation	  Expert → Sensor → Calibration → Cal. factor
Description	Displays the current calibration factor for the sensor.
User interface	Signed floating-point number
Factory setting	Depends on nominal diameter and calibration.

Zero point

Navigation	  Expert → Sensor → Calibration → Zero point
Description	Use this function to enter the zero point correction value for the sensor.
User entry	Signed floating-point number
Factory setting	Depends on nominal diameter and calibration.

Nominal diameter

Navigation	  Expert → Sensor → Calibration → Nominal diameter
Description	Displays the nominal diameter of the sensor.
User interface	DNxx / x"
Factory setting	Depends on the size of the sensor
Additional information	<i>Description</i>
	 The value is also specified on the sensor nameplate.

C0 to 5

Navigation	  Expert → Sensor → Calibration → C0 to 5
Description	Displays the current density coefficients C0 to 5 of the sensor.
User interface	Signed floating-point number
Factory setting	0

Additional information*Description*

A density trim can alter the calibration value of the density coefficient.

3.2.9 "Supervision" submenu

Navigation

Expert → Sensor → Supervision



Limit value measuring tube damping

**Navigation**

Expert → Sensor → Supervision → Limit tube damp.

Description

Use this function to enter a limit value for measuring tube damping.

User entry

Positive floating-point number

Factory setting

Positive floating-point number


Additional information*Limit value*

- If the displayed value is outside the limit value, the measuring device displays the diagnostic message **△S948 Tube damping too high**.
- For detecting inhomogeneous media, for example

3.3 "Communication" submenu

Navigation

Expert → Communication

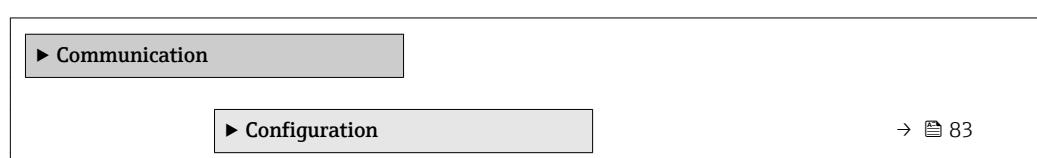

3.3.1 "Configuration" submenu

Navigation

Expert → Communication → Configuration

▶ Configuration	
Web server language	→ 83
MAC address	→ 84
Default network settings	→ 84
DHCP client	→ 84
IP address	→ 85
Subnet mask	→ 85
Default gateway	→ 85
Web server functionality	→ 86
▶ Configurable input assembly	→ 86

Web server language

Navigation

Expert → Communication → Configuration → Webserv.language

Description

Use this function to select the web server language setting.

Selection

- English *
- Deutsch *
- Français *
- Español *
- Italiano *
- Nederlands *
- Portuguesa *
- Polski *
- русский язык (Russian) *
- Svenska *
- Türkçe *
- 中文 (Chinese) *
- 日本語 (Japanese) *
- 한국어 (Korean) *
- العربية (Arabic) *
- Bahasa Indonesia *

* Visibility depends on order options or device settings

- ภาษาไทย (Thai) *
- tiếng Việt (Vietnamese) *
- čeština (Czech)

Factory setting English

MAC address

Navigation	 Expert → Communication → Configuration → MAC Address
Description	Displays the MAC ¹⁾ address of the measuring device.
User interface	Unique 12-digit character string comprising letters and numbers
Factory setting	Each measuring device is given an individual address.
Additional information	<i>Example</i> For the display format 00:07:05:10:01:5F

Default network settings

Navigation	 Expert → Communication → Configuration → Default netw.set
Description	Displays the use of default network settings.
User interface	<ul style="list-style-type: none">■ Off■ On
Factory setting	Off
Additional information	<i>User interface</i> The On option is displayed as soon as the last octet of the IP address is set via DIP switches.

DHCP client

Navigation	 Expert → Communication → Configuration → DHCP client
Description	Use this function to activate and deactivate the DHCP client functionality.

* Visibility depends on order options or device settings
1) Media Access Control

Selection	<ul style="list-style-type: none">■ Off■ On
Factory setting	On
Additional information	<i>Result</i> If the DHCP client functionality of the Web server is activated, the IP address (→ 85), Subnet mask (→ 85) and Default gateway (→ 85) are set automatically.
	 Identification is via the MAC address of the measuring device.

IP address



Navigation	 Expert → Communication → Configuration → IP address
Description	Use this function to enter the IP address of the device's web server.
User entry	4 octet: 0 to 255 (in the particular octet)
Factory setting	192.168.1.212

Subnet mask



Navigation	 Expert → Communication → Configuration → Subnet mask
Description	Use this function to enter the subnet mask.
User entry	4 octet: 0 to 255 (in the particular octet)
Factory setting	255.255.255.0

Default gateway



Navigation	 Expert → Communication → Configuration → Default gateway
Description	Use this function to enter the default gateway.
User entry	4 octet: 0 to 255 (in the particular octet)
Factory setting	0.0.0.0

Web server functionality



Navigation

Expert → Communication → Configuration → Webserver funct.

Description

Use this function to switch the Web server on and off.

Selection

- Off
- On

Factory setting

On

Additional information

Description

Once disabled, the Web server functionality can be re-enabled only via the local display or the FieldCare operating tool.

Selection

- Off
 - The web server is completely disabled.
 - Port 80 is locked.
- On
 - The complete functionality of the web server is available.
 - JavaScript is used.
 - The password is transferred in an encrypted state.
 - Any change to the password is also transferred in an encrypted state.

"Configurable input assembly" submenu

Navigation

Expert → Communication → Configuration → Input assembly

▶ Configurable input assembly	
Input assembly position 1	→ 87
Input assembly position 2	→ 88
Input assembly position 3	→ 88
Input assembly position 4	→ 88
Input assembly position 5	→ 88
Input assembly position 6	→ 89
Input assembly position 7	→ 89
Input assembly position 8	→ 89
Input assembly position 9	→ 89

Input assembly position 10	→ 90
Input assembly position 11	→ 90
Input assembly position 12	→ 90
Input assembly position 13	→ 91
Input assembly position 14	→ 91
Input assembly position 15	→ 91
Input assembly position 16	→ 91
Input assembly position 17	→ 92
Input assembly position 18	→ 92
Input assembly position 19	→ 92
Input assembly position 20	→ 92

Input assembly position 1



Navigation

Expert → Communication → Configuration → Input assembly → Position 1

Description

Use this function to select a process variable for input value 1.

Selection

- Off
- Mass flow
- Volume flow
- Corrected volume flow
- Target mass flow ^{*}
- Carrier mass flow ^{*}
- Density
- Reference density
- Concentration ^{*}
- Temperature
- Carrier pipe temperature
- Electronic temperature
- Oscillation frequency 0
- Oscillation amplitude 0 ^{*}
- Frequency fluctuation 0
- Oscillation damping 0
- Tube damping fluctuation 0
- Signal asymmetry
- Exciter current 0
- Totalizer 1

* Visibility depends on order options or device settings

- Totalizer 2
- Totalizer 3
- Sensor integrity

Factory setting Mass flow

Input assembly position 2



Navigation Expert → Communication → Configuration → Input assembly → Position 2

Description Use this function to select a process variable for input value 2.

Selection Picklist, see **Input assembly position 1** parameter (→ 87)

Factory setting Volume flow

Input assembly position 3



Navigation Expert → Communication → Configuration → Input assembly → Position 3

Description Use this function to select a process variable for input value 3.

Selection Picklist, see **Input assembly position 1** parameter (→ 87)

Factory setting Corrected volume flow

Input assembly position 4



Navigation Expert → Communication → Configuration → Input assembly → Position 4

Description Use this function to select a process variable for input value 4.

Selection Picklist, see **Input assembly position 1** parameter (→ 87)

Factory setting Temperature

Input assembly position 5



Navigation Expert → Communication → Configuration → Input assembly → Position 5

Description Use this function to select a process variable for input value 5.

Selection Picklist, see **Input assembly position 1** parameter (→ 87)

Factory setting Density

Input assembly position 6

Navigation  Expert → Communication → Configuration → Input assembly → Position 6

Description Use this function to select a process variable for input value 6.

Selection Picklist, see **Input assembly position 1** parameter (→  87)

Factory setting Reference density

Input assembly position 7

Navigation  Expert → Communication → Configuration → Input assembly → Position 7

Description Use this function to select a process variable for input value 7.

Selection Picklist, see **Input assembly position 1** parameter (→  87)

Factory setting Supervision exciter current 1

Input assembly position 8

Navigation  Expert → Communication → Configuration → Input assembly → Position 8

Description Use this function to select a process variable for input value 8.

Selection Picklist, see **Input assembly position 1** parameter (→  87)

Factory setting Totalizer 1

Input assembly position 9

Navigation  Expert → Communication → Configuration → Input assembly → Position 9

Description Use this function to select a process variable for input value 9.

Selection Picklist, see **Input assembly position 1** parameter (→  87)

Factory setting Totalizer 2

Input assembly position 10

Navigation Expert → Communication → Configuration → Input assembly → Position 10

Description Use this function to select a process variable for input value 10.

Selection Picklist, see **Input assembly position 1** parameter (→ 87)

Factory setting Totalizer 3

Input assembly position 11

Navigation Expert → Communication → Configuration → Input assembly → Position 11

Description Use this function to select a process variable for input value 11.

Selection

- Off
- Actual diagnostics
- Previous diagnostics
- Mass flow unit
- Volume flow unit
- Corrected volume flow unit
- Temperature unit
- Density unit
- Reference density unit
- Concentration unit *
- Dynamic viscosity unit *
- Kinematic viscosity unit *
- Current unit
- Unit totalizer 1
- Unit totalizer 2
- Unit totalizer 3
- Verification results *
- Verification status *

Factory setting Mass flow unit

Input assembly position 12

Navigation Expert → Communication → Configuration → Input assembly → Position 12

Description Use this function to select a process variable for input value 12.

Selection Picklist, see **Input assembly position 11** parameter (→ 90)

Factory setting Volume flow unit

* Visibility depends on order options or device settings

Input assembly position 13

Navigation	Expert → Communication → Configuration → Input assembly → Position 13
Description	Use this function to select a process variable for input value 13.
Selection	Picklist, see Input assembly position 11 parameter (→ 90)
Factory setting	Corrected volume flow unit

Input assembly position 14

Navigation	Expert → Communication → Configuration → Input assembly → Position 14
Description	Use this function to select a process variable for input value 14.
Selection	Picklist, see Input assembly position 11 parameter (→ 90)
Factory setting	Temperature unit

Input assembly position 15

Navigation	Expert → Communication → Configuration → Input assembly → Position 15
Description	Use this function to select a process variable for input value 15.
Selection	Picklist, see Input assembly position 11 parameter (→ 90)
Factory setting	Density unit

Input assembly position 16

Navigation	Expert → Communication → Configuration → Input assembly → Position 16
Description	Use this function to select a process variable for input value 16.
Selection	Picklist, see Input assembly position 11 parameter (→ 90)
Factory setting	Reference density unit

Input assembly position 17



Navigation Expert → Communication → Configuration → Input assembly → Position 17

Description Use this function to select a process variable for input value 17.

Selection Picklist, see **Input assembly position 11** parameter (→ 90)

Factory setting Current unit

Input assembly position 18



Navigation Expert → Communication → Configuration → Input assembly → Position 18

Description Use this function to select a process variable for input value 18.

Selection Picklist, see **Input assembly position 11** parameter (→ 90)

Factory setting Unit totalizer 1

Input assembly position 19



Navigation Expert → Communication → Configuration → Input assembly → Position 19

Description Use this function to select a process variable for input value 19.

Selection Picklist, see **Input assembly position 11** parameter (→ 90)

Factory setting Unit totalizer 2

Input assembly position 20



Navigation Expert → Communication → Configuration → Input assembly → Position 20

Description Use this function to select a process variable for input value 20.


Selection Picklist, see **Input assembly position 11** parameter (→ 90)

Factory setting Unit totalizer 3

3.4 "Application" submenu

Navigation

Expert → Application

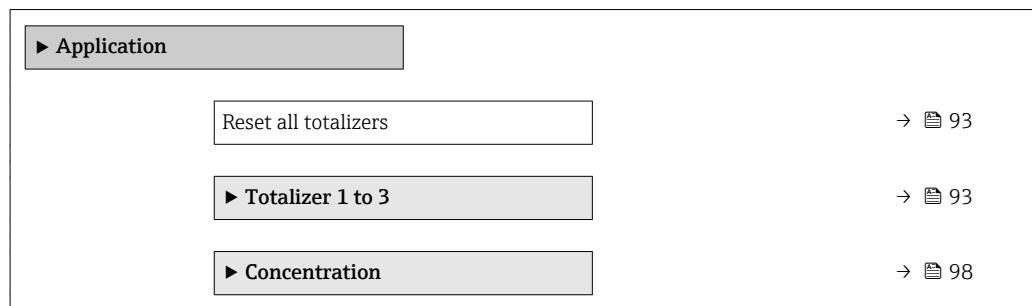

Reset all totalizers

Navigation

Expert → Application → Reset all tot.

Description

Use this function to reset all totalizers to the value **0** and restart the totaling process. This deletes all the flow values previously totalized.

Selection

- Cancel
- Reset + totalize

Factory setting

Cancel

Additional information


Selection

- Cancel
No action is executed and the user exits the parameter.
- Reset + totalize
All totalizers are reset to 0 and the totaling process is restarted.

3.4.1 "Totalizer 1 to 3" submenu

Navigation

Expert → Application → Totalizer 1 to 3

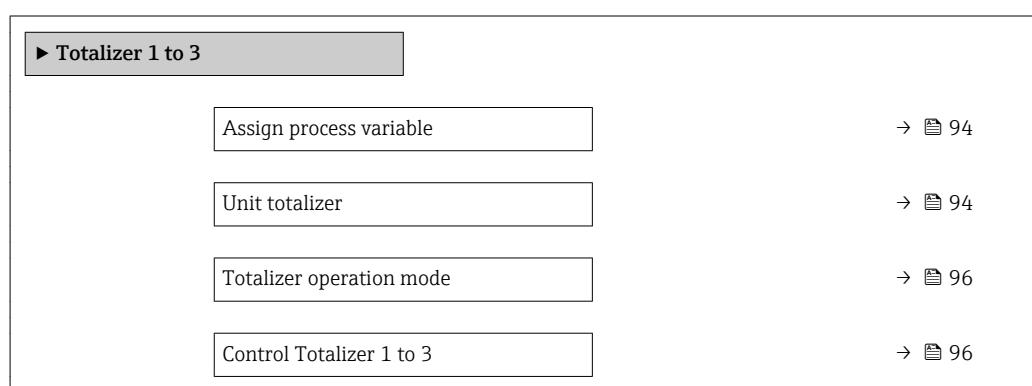

Preset value 1 to 3	→ 97
Failure mode	→ 98

Assign process variable



Navigation

Expert → Application → Totalizer 1 to 3 → Assign variable

Description

Use this function to select a process variable for the Totalizer 1 to 3.

Selection

- Off
- Volume flow
- Mass flow
- Corrected volume flow
- Target mass flow *
- Carrier mass flow *

Factory setting

Mass flow

Additional information

Description

If the option selected is changed, the device resets the totalizer to 0.

Selection

If the **Off** option is selected, only the **Assign process variable** parameter (→ 94) is displayed in the **Totalizer 1 to 3** submenu. All other parameters in the submenu are hidden.

Unit totalizer



Navigation

Expert → Application → Totalizer 1 to 3 → Unit totalizer

Prerequisite

One of the following options is selected in the **Assign process variable** parameter (→ 94) of the **Totalizer 1 to 3** submenu:

- Volume flow
- Mass flow
- Corrected volume flow
- Target mass flow *
- Carrier mass flow *

Description

Use this function to select the unit for the process variable of totalizer 1-3.

* Visibility depends on order options or device settings

Selection*SI units*

- g
- kg
- t

US units

- oz
- lb
- STon

Custom-specific units

User mass

or

SI units

- cm³
- dm³
- m³
- ml
- l
- hl
- Ml Mega

US units

- af
- ft³
- fl oz (us)
- gal (us)
- kgal (us)
- Mgal (us)
- bbl (us;liq.)
- bbl (us;beer)
- bbl (us;oil)
- bbl (us;tank)

Imperial units

- gal (imp)
- Mgal (imp)
- bbl (imp;beer)
- bbl (imp;oil)

Custom-specific units

User vol.

or

SI units

- Nl
- Nm³
- Sl
- Sm³

US units

- Sft³
- Sgal (us)
- Sbbl (us;liq.)

Imperial units

- Sgal (imp)

Custom-specific units

UserCrVol.

Factory setting

Country-specific:

- kg
- lb

Additional information*Description*

 The unit is selected separately for each totalizer. The unit is independent of the option selected in the **System units** submenu (→ 45).

Selection

The selection depends on the process variable selected in the **Assign process variable** parameter (→ 94).

Totalizer operation mode



Navigation

Expert → Application → Totalizer 1 to 3 → Operation mode

Prerequisite

One of the following options is selected in the **Assign process variable** parameter
(→ [94](#))**Totalizer 1 to 3** submenu:

- Volume flow
- Mass flow
- Corrected volume flow
- Target mass flow *
- Carrier mass flow *

Description

Use this function to select how the totalizer summates the flow.

Selection

- Net flow total
- Forward flow total
- Reverse flow total

Factory setting

Net flow total

Additional information

Selection

- Net flow total
Positive and negative flow values are totalized and balanced against one another. Net flow is registered in the flow direction.
- Forward flow total
Only the flow in the forward flow direction is totalized.
- Reverse flow total
Only the flow against the forward flow direction is totalized (= reverse flow total).

Control Totalizer 1 to 3

Navigation

Expert → Application → Totalizer 1 to 3 → Control Tot. 1 to 3

Prerequisite

One of the following options is selected in the **Assign process variable** parameter
(→ [94](#))**Totalizer 1 to 3** submenu:

- Volume flow
- Mass flow
- Corrected volume flow
- Target mass flow *
- Carrier mass flow *

Description

Use this function to select the control of totalizer value 1-3.

Selection

- Totalize
- Reset + hold
- Preset + hold
- Reset + totalize
- Preset + totalize

Factory setting

Totalize

* Visibility depends on order options or device settings

Additional information*Selection*

- Totalize
The totalizer is started or continues totalizing with the current counter reading.
- Reset + hold
The totaling process is stopped and the totalizer is reset to 0.
- Preset + hold
The totaling process is stopped and the totalizer is set to its defined start value from the **Preset value** parameter (→ 97).
- Reset + totalize
The totalizer is reset to 0 and the totaling process is restarted.
- Preset + totalize
The totalizer is set to the defined start value in **Preset value** parameter (→ 97) and the totaling process is restarted.

Preset value 1 to 3**Navigation**
 Expert → Application → Totalizer 1 to 3 → Preset value 1 to 3
Prerequisite

One of the following options is selected in the **Assign process variable** parameter (→ 94) **Totalizer 1 to 3** submenu:

- Volume flow
- Mass flow
- Corrected volume flow
- Target mass flow *
- Carrier mass flow *

Description

Use this function to enter a start value for totalizer 1-3.

User entry

Signed floating-point number

Factory setting

Country-specific:

- 0 kg
- 0 lb

Additional information*User entry*

 The unit of the selected process variable is specified for the totalizer in the **Unit totalizer** parameter (→ 94).

Example

This configuration is suitable for applications such as iterative filling processes with a fixed batch quantity.

* Visibility depends on order options or device settings

Failure mode**Navigation**

Expert → Application → Totalizer 1 to 3 → Failure mode

Prerequisite

One of the following options is selected in the **Assign process variable** parameter
(→ 94) **Totalizer 1 to 3** submenu:

- Volume flow
- Mass flow
- Corrected volume flow
- Target mass flow ^{*}
- Carrier mass flow ^{*}

Description

Use this function to select how a totalizer behaves in the event of a device alarm.

Selection

- Stop
- Actual value
- Last valid value

Factory setting

Stop

Additional information*Description*

This setting does not affect the failsafe mode of other totalizers and the outputs. This is specified in separate parameters.

Selection

- Stop
Totalizing is stopped in the event of a device alarm.
- Actual value
The totalizer continues to count based on the current measured value; the device alarm is ignored.
- Last valid value
The totalizer continues to count based on the last valid measured value before the device alarm occurred.

3.4.2 "Concentration" submenu

For detailed information on the parameter descriptions for the **Concentration** application package: Special Documentation for the device

Navigation

Expert → Application → Concentration

► Concentration

* Visibility depends on order options or device settings

3.5 "Diagnostics" submenu

Navigation

Expert → Diagnostics

► Diagnostics	
Actual diagnostics	→ 99
Previous diagnostics	→ 100
Operating time from restart	→ 101
Operating time	→ 101
► Diagnostic list	
► Event logbook	→ 105
► Device information	→ 107
► Min/max values	→ 111
► Heartbeat	→ 117
► Simulation	→ 117

Actual diagnostics

Navigation

Expert → Diagnostics → Actual diagnos.

Prerequisite

A diagnostic event has occurred.

Description

Displays the current diagnostic message. If two or more messages occur simultaneously, the message with the highest priority is shown on the display.

User interface

Symbol for diagnostic behavior, diagnostic code and short message.

Additional information

Display

 Additional pending diagnostic messages can be viewed in the **Diagnostic list** submenu (→ 101).

Example

For the display format:

F271 Main electronic failure

Timestamp

Navigation

Expert → Diagnostics → Timestamp

Description

Displays the operating time when the current diagnostic message occurred.

User interface

Days (d), hours (h), minutes (m) and seconds (s)

Additional information*Display*

 The diagnostic message can be viewed via the **Actual diagnostics** parameter
(→  99).

Example

For the display format:
24d12h13m00s

Previous diagnostics

Navigation

 Expert → Diagnostics → Prev.diagnostics

Prerequisite

Two diagnostic events have already occurred.

Description

Displays the diagnostic message that occurred before the current message.

User interface

Symbol for diagnostic behavior, diagnostic code and short message.

Additional information*Example*

For the display format:
☒F271 Main electronic failure

Timestamp

Navigation

Expert → Diagnostics → Timestamp

Description

Displays the operating time when the last diagnostic message before the current message occurred.

User interface

Days (d), hours (h), minutes (m) and seconds (s)

Additional information*Display*

 The diagnostic message can be viewed via the **Previous diagnostics** parameter
(→  100).

Example

For the display format:
24d12h13m00s

Operating time from restart


Navigation  Expert → Diagnostics → Time fr. restart**Description** Use this function to display the time the device has been in operation since the last device restart.**User interface** Days (d), hours (h), minutes (m) and seconds (s)

Operating time

Navigation  Expert → Diagnostics → Operating time**Description** Use this function to display the length of time the device has been in operation.**User interface** Days (d), hours (h), minutes (m) and seconds (s)**Additional information** *User interface*

The maximum number of days is 9999, which is equivalent to 27 years.

3.5.1 "Diagnostic list" submenu

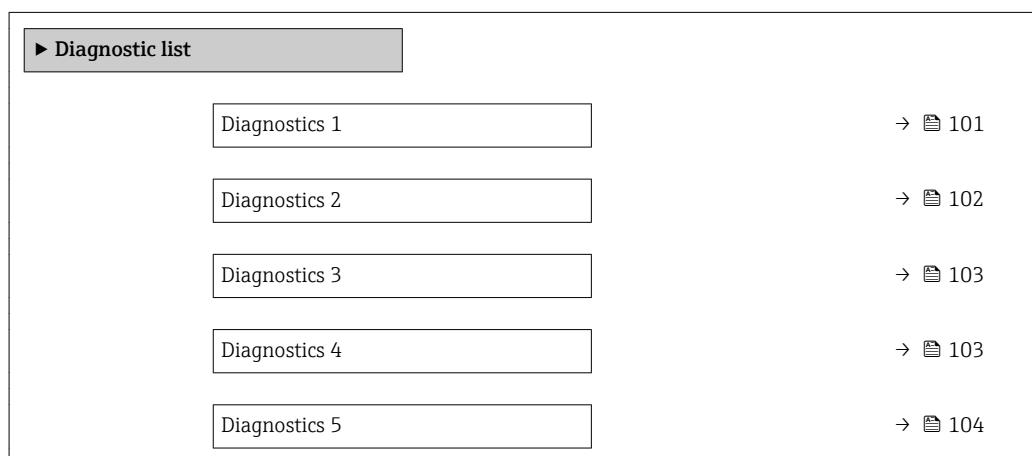Navigation  Expert → Diagnostics → Diagnostic list

Diagnostics 1

Navigation  Expert → Diagnostics → Diagnostic list → Diagnostics 1**Description** Displays the current diagnostics message with the highest priority.

User interface Symbol for diagnostic behavior, diagnostic code and short message.

Additional information *Examples*

For the display format:

- F271 Main electronic failure
- F276 I/O module failure

Timestamp

Navigation Expert → Diagnostics → Diagnostic list → Timestamp

Description Displays the operating time when the diagnostic message with the highest priority occurred.

User interface Days (d), hours (h), minutes (m) and seconds (s)

Additional information *Display*

The diagnostic message can be viewed via the **Diagnostics 1** parameter (→ 101).

Example

For the display format:

24d12h13m00s

Diagnostics 2

Navigation Expert → Diagnostics → Diagnostic list → Diagnostics 2

Description Displays the current diagnostics message with the second-highest priority.

User interface Symbol for diagnostic behavior, diagnostic code and short message.

Additional information *Examples*

For the display format:

- F271 Main electronic failure
- F276 I/O module failure

Timestamp

Navigation Expert → Diagnostics → Diagnostic list → Timestamp

Description Displays the operating time when the diagnostic message with the second-highest priority occurred.

User interface Days (d), hours (h), minutes (m) and seconds (s)

Additional information*Display*

The diagnostic message can be viewed via the **Diagnostics 2** parameter (→ 102).

Example

For the display format:

24d12h13m00s

Diagnostics 3**Navigation**

Expert → Diagnostics → Diagnostic list → Diagnostics 3

Description

Displays the current diagnostics message with the third-highest priority.

User interface

Symbol for diagnostic behavior, diagnostic code and short message.

Additional information*Examples*

For the display format:

- F271 Main electronic failure
- F276 I/O module failure

Timestamp**Navigation**

Expert → Diagnostics → Diagnostic list → Timestamp

Description

Displays the operating time when the diagnostic message with the third-highest priority occurred.

User interface

Days (d), hours (h), minutes (m) and seconds (s)

Additional information*Display*

The diagnostic message can be viewed via the **Diagnostics 3** parameter (→ 103).

Example

For the display format:

24d12h13m00s

Diagnostics 4**Navigation**

Expert → Diagnostics → Diagnostic list → Diagnostics 4

Description

Displays the current diagnostics message with the fourth-highest priority.

User interface

Symbol for diagnostic behavior, diagnostic code and short message.

Additional information*Examples*

For the display format:

- F271 Main electronic failure
- F276 I/O module failure

Timestamp**Navigation**

Expert → Diagnostics → Diagnostic list → Timestamp

Description

Displays the operating time when the diagnostic message with the fourth-highest priority occurred.

User interface

Days (d), hours (h), minutes (m) and seconds (s)

Additional information*Display*

The diagnostic message can be viewed via the **Diagnostics 4** parameter (→ 103).

Example

For the display format:

24d12h13m00s

Diagnostics 5**Navigation**

Expert → Diagnostics → Diagnostic list → Diagnostics 5

Description

Displays the current diagnostics message with the fifth-highest priority.

User interface

Symbol for diagnostic behavior, diagnostic code and short message.

Additional information*Examples*

For the display format:

- F271 Main electronic failure
- F276 I/O module failure

Timestamp**Navigation**

Expert → Diagnostics → Diagnostic list → Timestamp

Description

Displays the operating time when the diagnostic message with the fifth-highest priority occurred.

User interface

Days (d), hours (h), minutes (m) and seconds (s)

Additional information*Display*

The diagnostic message can be viewed via the **Diagnostics 5** parameter (→ 104).


Example

For the display format:
24d12h13m00s

3.5.2 "Event logbook" submenu

Navigation

Expert → Diagnostics → Event logbook

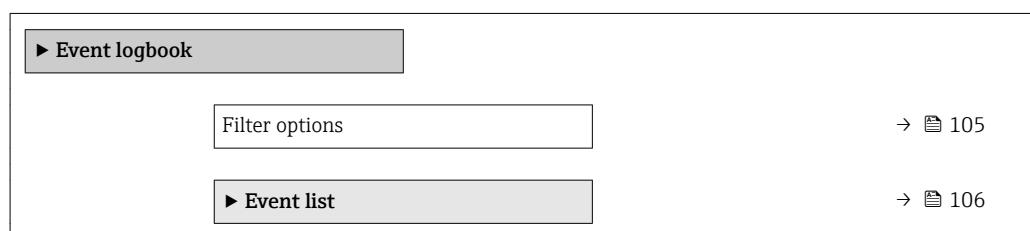

Filter options
**Navigation**

Expert → Diagnostics → Event logbook → Filter options

Description

Use this function to select the category whose event messages are displayed in the event list of the local display.

Selection

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information (I)

Factory setting

All

Additional information*Description*

The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107:

- F = Failure
- C = Function Check
- S = Out of Specification
- M = Maintenance Required

Filter options**Navigation**

Expert → Diagnostics → Event logbook → Filter options

Description

Use this function to select the category whose event messages are displayed in the event list of the operating tool.

Selection

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information (I)

Factory setting

All

Additional information*Description*

- The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107:
- F = Failure
 - C = Function Check
 - S = Out of Specification
 - M = Maintenance Required

"Event list" submenu

- The **Event list** submenu is only displayed if operating via the local display.

If operating via the FieldCare operating tool, the event list can be read out with a separate FieldCare module.

If operating via the Web browser, the event messages can be found directly in the **Event logbook** submenu.

Navigation

Expert → Diagnostics → Event logbook → Event list

**Event list****Navigation**

Expert → Diagnostics → Event logbook → Event list

Description

Displays the history of event messages of the category selected in the **Filter options** parameter (→ 105).

- User interface**
- For a "Category I" event message
Information event, short message, symbol for event recording and operating time when error occurred
 - For a "Category F, C, S, M" event message (status signal)
Diagnostics code, short message, symbol for event recording and operating time when error occurred

Additional information	<i>Description</i>
	A maximum of 20 event messages are displayed in chronological order.
	If the advanced HistoROM function is enabled in the device, the event list can contain up to 100 entries.
	The following symbols indicate whether an event has occurred or has ended:
	<ul style="list-style-type: none"> ■ ⊖: Occurrence of the event ■ ⊕: End of the event

Examples

For the display format:

- I1091 Configuration modified
⊖ 24d12h13m00s
- ⊗F271 Main electronic failure
⊖ 01d04h12min30s

HistoROM

A HistoROM is a "non-volatile" device memory in the form of an EEPROM.

3.5.3 "Device information" submenu

Navigation

◀ ▶ Expert → Diagnostics → Device info

► Device information	
Device tag	→ 108
Serial number	→ 108
Firmware version	→ 108
Device name	→ 109
Order code	→ 109
Extended order code 1	→ 109
Extended order code 2	→ 110
Extended order code 3	→ 110

Configuration counter	→ 110
ENP version	→ 110

Device tag

Navigation Expert → Diagnostics → Device info → Device tag

Description Displays a unique name for the measuring point so it can be identified quickly within the plant.

User interface Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /)

Factory setting Cubemass 100

Serial number

Navigation Expert → Diagnostics → Device info → Serial number

Description Displays the serial number of the measuring device.

The number can be found on the nameplate of the sensor and transmitter.

User interface A maximum of 11-digit character string comprising letters and numbers.

Additional information *Description*

Uses of the serial number

- To identify the measuring device quickly, e.g. when contacting Endress+Hauser.
- To obtain specific information on the measuring device using the Device Viewer:
www.endress.com/deviceviewer

Firmware version

Navigation Expert → Diagnostics → Device info → Firmware version

Description Displays the device firmware version installed.

User interface Character string in the format xx.yy.zz

Additional information *Display*

The Firmware version is also located:

- On the title page of the Operating instructions
- On the transmitter nameplate

Device name

Navigation  Expert → Diagnostics → Device info → Device name

Description Displays the name of the transmitter. It can also be found on the nameplate of the transmitter.

User interface Cubemass 100

Order code

Navigation  Expert → Diagnostics → Device info → Order code

Description Displays the device order code.

User interface Character string composed of letters, numbers and certain punctuation marks (e.g. /).

Additional information *Description*

 The order code can be found on the nameplate of the sensor and transmitter in the "Order code" field.

The order code is generated from the extended order code through a process of reversible transformation. The extended order code indicates the attributes for all the device features in the product structure. The device features are not directly readable from the order code.

 **Uses of the order code**

- To order an identical spare device.
- To identify the device quickly and easily, e.g. when contacting Endress+Hauser.

Extended order code 1

Navigation  Expert → Diagnostics → Device info → Ext. order cd. 1

Description Displays the first part of the extended order code.

On account of length restrictions, the extended order code is split into a maximum of 3 parameters.

User interface Character string

Additional information *Description*

The extended order code indicates the version of all the features of the product structure for the measuring device and thus uniquely identifies the measuring device.

 The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.

Extended order code 2

Navigation	Expert → Diagnostics → Device info → Ext. order cd. 2
Description	For displaying the second part of the extended order code.
User interface	Character string
Additional information	For additional information, see Extended order code 1 parameter (→ 109)

Extended order code 3

Navigation	Expert → Diagnostics → Device info → Ext. order cd. 3
Description	For displaying the third part of the extended order code.
User interface	Character string
Additional information	For additional information, see Extended order code 1 parameter (→ 109)

Configuration counter

Navigation	Expert → Diagnostics → Device info → Config. counter
Description	Displays the number of parameter modifications for the device. When the user changes a parameter setting, this counter is incremented.
User interface	0 to 65 535

ENP version

Navigation	Expert → Diagnostics → Device info → ENP version
Description	Displays the version of the electronic nameplate.
User interface	Character string
Factory setting	2.02.00
Additional information	<i>Description</i> This electronic nameplate stores a data record for device identification that includes more data than the nameplates attached to the outside of the device.

3.5.4 "Min/max values" submenu

Navigation

Expert → Diagnostics → Min/max val.

Item	Reference Number
Reset min/max values	→ 111
► Electronic temperature	→ 112
► Medium temperature	→ 113
► Carrier pipe temperature	→ 113
► Oscillation frequency	→ 114
► Oscillation amplitude	→ 115
► Oscillation damping	→ 116
► Signal asymmetry	→ 116

Reset min/max values



Navigation

Expert → Diagnostics → Min/max val. → Reset min/max

Description

Use this function to select measured variables whose minimum, maximum and average measured values are to be reset.

Selection

- Cancel
- Oscillation amplitude
- Oscillation damping
- Oscillation frequency
- Signal asymmetry


Factory setting

Cancel

Additional information

Selection

Detailed description of the options **Oscillation frequency**, **Oscillation amplitude**, **Oscillation damping** and **Signal asymmetry**: Value 1 display parameter (→ 17)

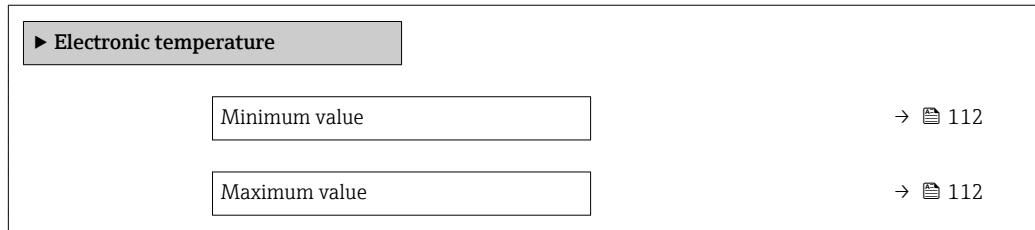"Electronic temperature" submenu**Navigation** Expert → Diagnostics → Min/max val. → Electronic temp.

Minimum value**Navigation** Expert → Diagnostics → Min/max val. → Electronic temp. → Minimum value**Description**

Displays the lowest previously measured temperature value of the main electronics module.

User interface

Signed floating-point number

Additional information

Dependency

 The unit is taken from the **Temperature unit** parameter (→ [52](#))

Maximum value**Navigation** Expert → Diagnostics → Min/max val. → Electronic temp. → Maximum value**Description**

Displays the highest previously measured temperature value of the main electronics module.


User interface

Signed floating-point number

Additional information

Dependency

 The unit is taken from the **Temperature unit** parameter (→ [52](#))

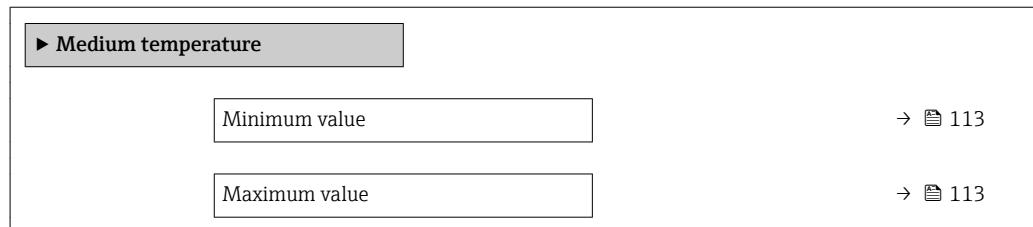"Medium temperature" submenu***Navigation***  Expert → Diagnostics → Min/max val. → Medium temp.**Minimum value*****Navigation***  Expert → Diagnostics → Min/max val. → Medium temp. → Minimum value***Description***

Displays the lowest previously measured medium temperature value.

User interface


Signed floating-point number

Additional information*Dependency* The unit is taken from the **Temperature unit** parameter (→ 52)**Maximum value*****Navigation***  Expert → Diagnostics → Min/max val. → Medium temp. → Maximum value***Description***

Displays the highest previously measured medium temperature value.

User interface

Signed floating-point number

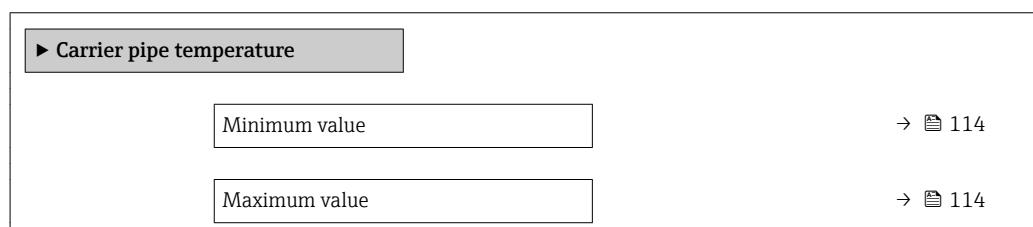Additional information*Dependency* The unit is taken from the **Temperature unit** parameter (→ 52)**"Carrier pipe temperature" submenu*****Navigation***  Expert → Diagnostics → Min/max val. → Carr. pipe temp.

Minimum value


Navigation	 Expert → Diagnostics → Min/max val. → Carr. pipe temp. → Minimum value
Prerequisite	Order code for "Application package", option EB "Heartbeat Verification + Monitoring"
Description	Displays the lowest previously measured temperature value of the carrier pipe.
User interface	Signed floating-point number
Additional information	<i>Dependency</i>  The unit is taken from the Temperature unit parameter (→ 52)

Maximum value

Navigation	 Expert → Diagnostics → Min/max val. → Carr. pipe temp. → Maximum value
Prerequisite	Order code for "Application package", option EB "Heartbeat Verification + Monitoring"
Description	Displays the highest previously measured temperature value of the carrier pipe.
User interface	Signed floating-point number
Additional information	<i>Dependency</i>  The unit is taken from the Temperature unit parameter (→ 52)

"Oscillation frequency" submenu

Navigation  Expert → Diagnostics → Min/max val. → Oscil. frequency

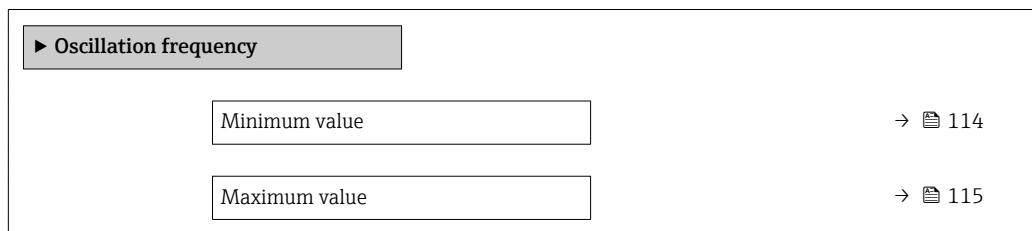

Minimum value

Navigation	 Expert → Diagnostics → Min/max val. → Oscil. frequency → Minimum value
Description	Displays the lowest previously measured oscillation frequency.

User interface Signed floating-point number

Maximum value


Navigation Expert → Diagnostics → Min/max val. → Oscil. frequency → Maximum value

Description Displays the highest previously measured oscillation frequency.

User interface Signed floating-point number

"Oscillation amplitude" submenu

Navigation Expert → Diagnostics → Min/max val. → Oscil. amplitude

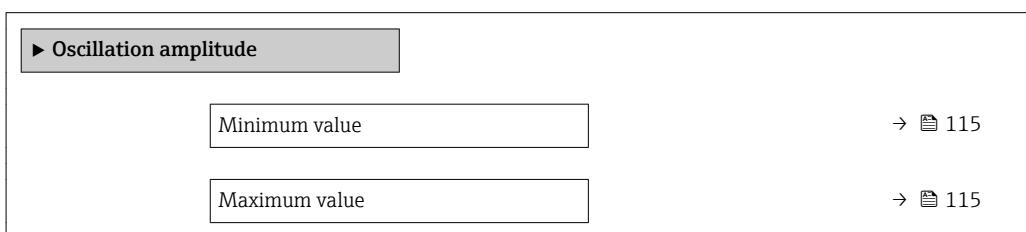

Minimum value

Navigation Expert → Diagnostics → Min/max val. → Oscil. amplitude → Minimum value

Description Displays the lowest previously measured oscillation amplitude.

User interface Signed floating-point number

Maximum value


Navigation Expert → Diagnostics → Min/max val. → Oscil. amplitude → Maximum value

Description Displays the highest previously measured oscillation amplitude.

User interface Signed floating-point number

"Oscillation damping" submenu**Navigation**

Expert → Diagnostics → Min/max val. → Oscil. damping

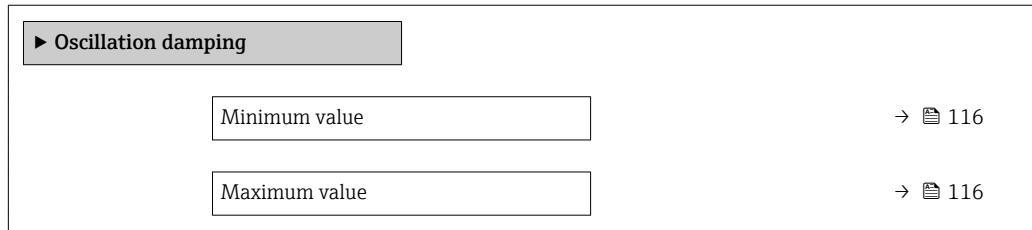

Minimum value

Navigation

Expert → Diagnostics → Min/max val. → Oscil. damping → Minimum value

Description

Displays the lowest previously measured oscillation damping.

User interface

Signed floating-point number

Maximum value

Navigation

Expert → Diagnostics → Min/max val. → Oscil. damping → Maximum value

Description


Displays the highest previously measured oscillation damping.

User interface

Signed floating-point number

"Signal asymmetry" submenu**Navigation**

Expert → Diagnostics → Min/max val. → Signal asymmetry

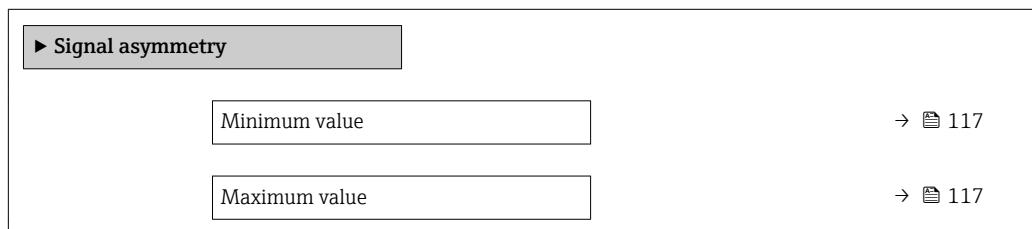

Minimum value

Navigation	Expert → Diagnostics → Min/max val. → Signal asymmetry → Minimum value
Description	Displays the lowest previously measured signal asymmetry.
User interface	Signed floating-point number


Maximum value

Navigation	Expert → Diagnostics → Min/max val. → Signal asymmetry → Maximum value
Description	Displays the highest previously measured signal asymmetry.
User interface	Signed floating-point number


3.5.5 "Heartbeat" submenu

 For detailed information on the parameter descriptions of the **Heartbeat Verification** application package, see the Special Documentation for the device

Navigation  Expert → Diagnostics → Heartbeat

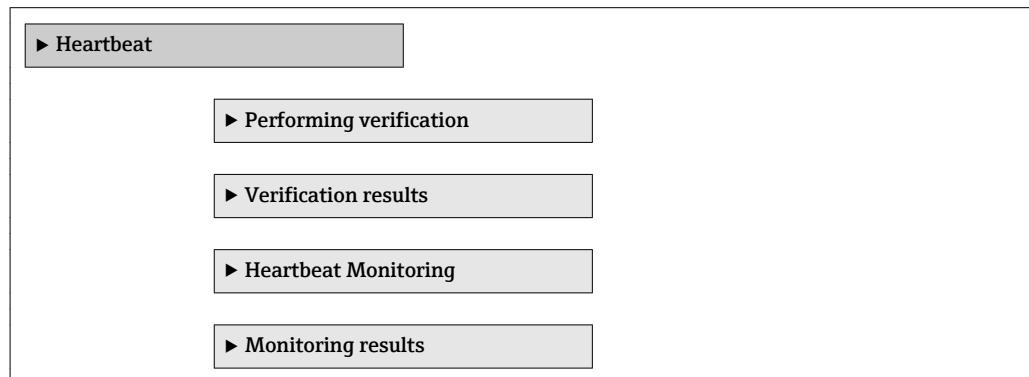**3.5.6 "Simulation" submenu**

Navigation  Expert → Diagnostics → Simulation

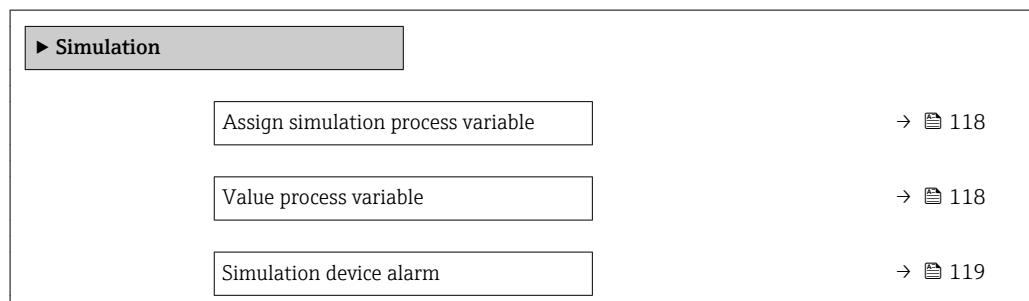

Diagnostic event category	→ 119
Simulation diagnostic event	→ 119

Assign simulation process variable



Navigation

Expert → Diagnostics → Simulation → Assign proc.var.

Description

Use this function to select a process variable for the simulation process that is activated. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.

Selection

- Off
- Mass flow
- Volume flow
- Corrected volume flow
- Density
- Reference density
- Temperature
- Concentration *
- Target mass flow *
- Carrier mass flow *

Factory setting

Off

Additional information

Description

The simulation value of the process variable selected is defined in the **Value process variable** parameter (→ [118](#)).

Value process variable



Navigation

Expert → Diagnostics → Simulation → Value proc. var.

Prerequisite

One of the following options is selected in the **Assign simulation process variable** parameter (→ [118](#)):

- Mass flow
- Volume flow
- Corrected volume flow
- Density
- Reference density
- Temperature
- Concentration *
- Target mass flow *
- Carrier mass flow *

* Visibility depends on order options or device settings

Description	Use this function to enter a simulation value for the selected process variable. Subsequent measured value processing and the signal output use this simulation value. In this way, users can verify whether the measuring device has been configured correctly.
User entry	Depends on the process variable selected
Factory setting	0
Additional information	<p><i>User entry</i></p>  The unit of the displayed measured value is taken from the System units submenu (→ 45).

Simulation device alarm



Navigation	 Expert → Diagnostics → Simulation → Sim. alarm
Description	Use this function to switch the device alarm on and off.
Selection	<ul style="list-style-type: none"> ▪ Off ▪ On
Factory setting	Off
Additional information	<p><i>Description</i></p> <p>The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.</p>

Diagnostic event category

Navigation	 Expert → Diagnostics → Simulation → Event category
Description	Use this function to select the category of the diagnostic events that are displayed for the simulation in the Simulation diagnostic event parameter (→ 119).
Selection	<ul style="list-style-type: none"> ▪ Sensor ▪ Electronics ▪ Configuration ▪ Process
Factory setting	Process

Simulation diagnostic event

Navigation	 Expert → Diagnostics → Simulation → Sim. diag. event
Description	Use this function to select a diagnostic event for the simulation process that is activated.

Selection	<ul style="list-style-type: none">■ Off■ Diagnostic event picklist (depends on the category selected)
Factory setting	Off
Additional information	<p><i>Description</i></p> <p> For the simulation, you can choose from the diagnostic events of the category selected in the Diagnostic event category parameter (→ 119).</p>

4 Country-specific factory settings

4.1 SI units

 Not valid for USA and Canada.

4.1.1 System units

Mass	kg
Mass flow	kg/h
Volume	l
Volume flow	l/h
Corrected volume	Nl
Corrected volume flow	Nl/h
Density	kg/l
Reference density	kg/Nl
Temperature	°C
Pressure	bar a

4.1.2 Full scale values

 The factory settings apply to the following parameters:
100% bar graph value 1

Nominal diameter [mm]	[kg/h]
1	4
2	20
4	90
6	200

4.1.3 On value low flow cut off

 The switch-on point depends on the type of medium and the nominal diameter.

Nominal diameter [mm]	On-value for liquid [kg/h]
1	0.08
2	0.4
4	1.8
6	4

Nominal diameter [mm]	Switch-on value for gas [kg/h]
1	0.02
2	0.1

Nominal diameter [mm]	Switch-on value for gas [kg/h]
4	0.45
6	1

4.2 US units

 Only valid for USA and Canada.

4.2.1 System units

Mass	lb
Mass flow	lb/min
Volume	gal (us)
Volume flow	gal/min (us)
Corrected volume	Sft ³
Corrected volume flow	Sft ³ /min
Density	lb/ft ³
Reference density	lb/Sft ³
Temperature	lb/ft ³
Pressure	psi a

4.2.2 Full scale values

 The factory settings apply to the following parameters:
100% bar graph value 1

Nominal diameter [in]	[lb/min]
1/24	0.15
1/12	0.75
1/8	3.3
1/4	7.4

4.2.3 On value low flow cut off

 The switch-on point depends on the type of medium and the nominal diameter.

Nominal diameter [in]	On-value for liquid [lb/min]
1/24	0.003
1/12	0.015
1/8	0.066
1/4	0.15

Nominal diameter [in]	Switch-on value for gas [lb/min]
1/24	0.001
1/12	0.004
1/8	0.016
1/4	0.0375

5 Explanation of abbreviated units

5.1 SI units

Process variable	Units	Explanation
Density	g/cm ³ , g/m ³	Gram/volume unit
	kg/dm ³ , kg/l, kg/m ³	Kilogram/volume unit
	SD4°C, SD15°C, SD20°C	Specific density: The specific density is the ratio of the density of the fluid to the density of water at a water temperature of 4 °C (39 °F), 15 °C (59 °F), 20 °C (68 °F).
	SG4°C, SG15°C, SG20°C	Specific gravity: The specific gravity is the ratio of the density of the fluid to the density of water at a water temperature of 4 °C (39 °F), 15 °C (59 °F), 20 °C (68 °F).
Pressure	Pa a, kPa a, MPa a	Pascal, kilopascal, megapascal (absolute)
	bar	Bar
	Pa g, kPa g, MPa g	Pascal, kilopascal, megapascal (relative/gauge)
	bar g	Bar (relative/gauge)
Mass	g, kg, t	Gram, kilogram, metric ton
Mass flow	g/s, g/min, g/h, g/d	Gram/time unit
	kg/s, kg/min, kg/h, kg/d	Kilogram/time unit
	t/s, t/min, t/h, t/d	Metric ton/time unit
Reference density	kg/Nm ³ , kg/Nl, g/Scm ³ , kg/Sm ³	Kilogram, gram/standard volume unit
Corrected volume	Nl, Nm ³ , Sm ³	Normal liter, normal cubic meter, standard cubic meter
Corrected volume flow	Nl/s, Nl/min, Nl/h, Nl/d	Normal liter/time unit
	Nm ³ /s, Nm ³ /min, Nm ³ /h, Nm ³ /d	Normal cubic meter/time unit
	Sm ³ /s, Sm ³ /min, Sm ³ /h, Sm ³ /d	Standard cubic meter/time unit
Temperature	°C, K	Celsius, Kelvin
Volume	cm ³ , dm ³ , m ³	Cubic centimeter, cubic decimeter, cubic meter
	ml, l, hl, Ml Mega	Milliliter, liter, hectoliter, megaliter
Volume flow	cm ³ /s, cm ³ /min, cm ³ /h, cm ³ /d	Cubic centimeter/time unit
	dm ³ /s, dm ³ /min, dm ³ /h, dm ³ /d	Cubic decimeter/time unit
	m ³ /s, m ³ /min, m ³ /h, m ³ /d	Cubic meter/time unit
	ml/s, ml/min, ml/h, ml/d	Milliliter/time unit
	l/s, l/min, l/h, l/d	Liter/time unit
	hl/s, hl/min, hl/h, hl/d	Hectoliter/time unit
	Ml/s, Ml/min, Ml/h, Ml/d	Megaliter/time unit
Time	s, m, h, d, y	Second, minute, hour, day, year

5.2 US units

Process variable	Units	Explanation
Density	lb/ft ³ , lb/gal (us)	Pound/cubic foot, pound/gallon
	lb/bbl (us;liq.), lb/bbl (us;beer), lb/bbl (us;oil), lb/bbl (us;tank)	Pound/volume unit

Process variable	Units	Explanation
Pressure	psi a	Pounds per square inch (absolute)
	psi g	Pounds per square inch (gauge)
Mass	oz, lb, STon	Ounce, pound, standard ton
Mass flow	oz/s, oz/min, oz/h, oz/d	Ounce/time unit
	lb/s, lb/min, lb/h, lb/d	Pound/time unit
	STon/s, STon/min, STon/h, STon/d	Standard ton/time unit
Reference density	lb/Sft ³	Weight unit/standard volume unit
Corrected volume	Sft ³ , Sgal (us), Sbbl (us;liq.)	Standard cubic foot, standard gallon, standard barrel
Corrected volume flow	Sft ³ /s, Sft ³ /min, Sft ³ /h, Sft ³ /d	Standard cubic foot/time unit
	Sgal/s (us), Sgal/min (us), Sgal/h (us), Sgal/d (us)	Standard gallon/time unit
	Sbbl/s (us;liq.), Sbbl/min (us;liq.), Sbbl/h (us;liq.), Sbbl/d (us;liq.)	Barrel/time unit (normal liquids)
Temperature	°F, °R	Fahrenheit, Rankine
Volume	af	Acre foot
	ft ³	Cubic foot
	fl oz (us), gal (us), kgal (us), Mgal (us)	Fluid ounce, gallon, kilogallon, million gallon
	bbl (us;liq.), bbl (us;beer), bbl (us;oil), bbl (us;tank)	Barrel (normal liquids), barrel (beer), barrel (petrochemicals), barrel (filling tanks)
Volume flow	af/s, af/min, af/h, af/d	Acre foot/time unit
	ft ³ /s, ft ³ /min, ft ³ /h, ft ³ /d	Cubic foot/time unit
	fl oz/s (us), fl oz/min (us), fl oz/h (us), fl oz/d (us)	Fluid ounce/time unit
	gal/s (us), gal/min (us), gal/h (us), gal/d (us)	Gallon/time unit
	kgal/s (us), kgal/min (us), kgal/h (us), kgal/d (us)	Kilogallon/time unit
	Mgal/s (us), Mgal/min (us), Mgal/h (us), Mgal/d (us)	Million gallon/time unit
	bbl/s (us;liq.), bbl/min (us;liq.), bbl/h (us;liq.), bbl/d (us;liq.)	Barrel/time unit (normal liquids) Normal liquids: 31.5 gal/bbl
	bbl/s (us;beer), bbl/min (us;beer), bbl/h (us;beer), bbl/d (us;beer)	Barrel /time unit (beer) Beer: 31.0 gal/bbl
	bbl/s (us;oil), bbl/min (us;oil), bbl/h (us;oil), bbl/d (us;oil)	Barrel/time unit (petrochemicals) Petrochemicals: 42.0 gal/bbl
Time	bbl/s (us;tank), bbl/min (us;tank), bbl/h (us;tank), bbl/d (us;tank)	Barrel/time unit (filling tank) Filling tanks: 55.0 gal/bbl
	s, m, h, d, y	Second, minute, hour, day, year
	am, pm	Ante meridiem (before midday), post meridiem (after midday)

5.3 Imperial units

Process variable	Units	Explanation
Density	lb/gal (imp), lb/bbl (imp;beer), lb/bbl (imp;oil)	Pound/volume unit
Corrected volume	Sgal (imp)	Standard gallon
Corrected volume flow	Sgal/s (imp), Sgal/min (imp), Sgal/h (imp), Sgal/d (imp)	Standard gallon/time unit
Volume	gal (imp), Mgal (imp) bbl (imp;beer), bbl (imp;oil)	Gallon, mega gallon Barrel (beer), barrel (petrochemicals)
Volume flow	gal/s (imp), gal/min (imp), gal/h (imp), gal/d (imp) Mgal/s (imp), Mgal/min (imp), Mgal/h (imp), Mgal/d (imp) bbl/s (imp;beer), bbl/min (imp;beer), bbl/h (imp;beer), bbl/d (imp;beer)	Gallon/time unit Mega gallon/time unit Barrel /time unit (beer) Beer: 36.0 gal/bbl
Time	s, m, h, d, y am, pm	Second, minute, hour, day, year Ante meridiem (before midday), post meridiem (after midday)

Index

0 ... 9

0% bargraph value 1 (Parameter)	18
0% bargraph value 3 (Parameter)	21
100% bargraph value 1 (Parameter)	18
100% bargraph value 3 (Parameter)	21

A

Access status display (Parameter)	11, 26
Access status tooling (Parameter)	12
Activate SW option (Parameter)	37
Actual diagnostics (Parameter)	99
Administration (Submenu)	35
Alarm delay (Parameter)	27
Application (Submenu)	93
Assign behavior of diagnostic no. 046 (Parameter)	29
Assign behavior of diagnostic no. 140 (Parameter)	29
Assign behavior of diagnostic no. 144 (Parameter)	30
Assign behavior of diagnostic no. 192 (Parameter)	33
Assign behavior of diagnostic no. 274 (Parameter)	33
Assign behavior of diagnostic no. 392 (Parameter)	34
Assign behavior of diagnostic no. 592 (Parameter)	34
Assign behavior of diagnostic no. 832 (Parameter)	30
Assign behavior of diagnostic no. 833 (Parameter)	31
Assign behavior of diagnostic no. 834 (Parameter)	31
Assign behavior of diagnostic no. 835 (Parameter)	31
Assign behavior of diagnostic no. 912 (Parameter)	32
Assign behavior of diagnostic no. 913 (Parameter)	32
Assign behavior of diagnostic no. 944 (Parameter)	32
Assign behavior of diagnostic no. 948 (Parameter)	33
Assign behavior of diagnostic no. 992 (Parameter)	34
Assign process variable (Parameter)	62, 65, 94
Assign simulation process variable (Parameter)	118

B

Backlight (Parameter)	26
---------------------------------	----

C

C0 to 5 (Parameter)	81
Calculated values (Submenu)	71
Calibration (Submenu)	80
Calibration factor (Parameter)	81
Carrier mass flow (Parameter)	43
Carrier pipe temperature (Submenu)	113
Communication (Submenu)	82
Concentration (Parameter)	42
Concentration (Submenu)	98
Configurable input assembly (Submenu)	86
Configuration (Submenu)	83
Configuration counter (Parameter)	110
Confirm access code (Parameter)	36
Contrast display (Parameter)	26
Control Totalizer 1 to 3 (Parameter)	96
Corrected volume flow (Parameter)	40
Corrected volume flow calculation (Parameter)	72
Corrected volume flow calculation (Submenu)	71
Corrected volume flow factor (Parameter)	79

Corrected volume flow offset (Parameter)	78
Corrected volume flow unit (Parameter)	49
Corrected volume unit (Parameter)	50

D

Date/time format (Parameter)	53
Decimal places 1 (Parameter)	19
Decimal places 2 (Parameter)	20
Decimal places 3 (Parameter)	22
Decimal places 4 (Parameter)	23
Default gateway (Parameter)	85
Default network settings (Parameter)	84
Define access code (Parameter)	35, 36
Define access code (Wizard)	35
Density (Parameter)	41
Density damping (Parameter)	60
Density factor (Parameter)	78
Density offset (Parameter)	78
Density unit (Parameter)	51
Device information (Submenu)	107
Device name (Parameter)	109
Device reset (Parameter)	37
Device tag (Parameter)	108
DHCP client (Parameter)	84
Diagnostic behavior (Submenu)	28
Diagnostic event category (Parameter)	119
Diagnostic handling (Submenu)	27
Diagnostic list (Submenu)	101
Diagnostics (Submenu)	99
Diagnostics 1 (Parameter)	101
Diagnostics 2 (Parameter)	102
Diagnostics 3 (Parameter)	103
Diagnostics 4 (Parameter)	103
Diagnostics 5 (Parameter)	104
Direct access	
0% bargraph value 1	18
0% bargraph value 3	21
100% bargraph value 1	18
100% bargraph value 3	21
Access status display	11, 26
Access status tooling	12
Activate SW option	37
Actual diagnostics	99
Alarm delay	27
Assign behavior of diagnostic no. 046	29
Assign behavior of diagnostic no. 140	29
Assign behavior of diagnostic no. 144	30
Assign behavior of diagnostic no. 192	33
Assign behavior of diagnostic no. 274	33
Assign behavior of diagnostic no. 392	34
Assign behavior of diagnostic no. 592	34
Assign behavior of diagnostic no. 832	30
Assign behavior of diagnostic no. 833	31
Assign behavior of diagnostic no. 834	31
Assign behavior of diagnostic no. 835	31
Assign behavior of diagnostic no. 912	32

Assign behavior of diagnostic no. 913	32
Assign behavior of diagnostic no. 944	32
Assign behavior of diagnostic no. 948	33
Assign behavior of diagnostic no. 992	34
Assign process variable	62, 65
Totalizer 1 to 3	94
Assign simulation process variable	118
Backlight	26
C0 to 5	81
Calibration factor	81
Carrier mass flow	43
Concentration	42
Configuration counter	110
Contrast display	26
Control Totalizer 1 to 3	96
Corrected volume flow	40
Corrected volume flow calculation	72
Corrected volume flow factor	79
Corrected volume flow offset	78
Corrected volume flow unit	49
Corrected volume unit	50
Date/time format	53
Decimal places 1	19
Decimal places 2	20
Decimal places 3	22
Decimal places 4	23
Default gateway	85
Default network settings	84
Define access code	36
Density	41
Density damping	60
Density factor	78
Density offset	78
Density unit	51
Device name	109
Device reset	37
Device tag	108
DHCP client	84
Diagnostic event category	119
Diagnostics 1	101
Diagnostics 2	102
Diagnostics 3	103
Diagnostics 4	103
Diagnostics 5	104
Direct access	10
Display damping	24
Display interval	23
Display language	14
ENP version	110
Enter access code	13
Extended order code 1	109
Extended order code 2	110
Extended order code 3	110
External pressure	70
External reference density	72
External temperature	71
Failure mode	
Totalizer 1 to 3	98
Filter options	105, 106
Firmware version	108
Fixed reference density	72
Flow damping	60
Flow override	61
Format display	15
Header	24
Header text	25
High value partial filled pipe detection	66
Input assembly position 1	87
Input assembly position 2	88
Input assembly position 3	88
Input assembly position 4	88
Input assembly position 5	88
Input assembly position 6	89
Input assembly position 7	89
Input assembly position 8	89
Input assembly position 9	89
Input assembly position 10	90
Input assembly position 11	90
Input assembly position 12	90
Input assembly position 13	91
Input assembly position 14	91
Input assembly position 15	91
Input assembly position 16	91
Input assembly position 17	92
Input assembly position 18	92
Input assembly position 19	92
Input assembly position 20	92
Installation direction	74
IP address	85
Limit value measuring tube damping	82
Linear expansion coefficient	73
Locking status	11
Low value partial filled pipe detection	65
MAC address	84
Mass flow	40
Mass flow factor	77
Mass flow offset	76
Mass flow unit	46
Mass unit	46
Maximum damping partial filled pipe det.	67
Maximum value	112, 113, 114, 115, 116, 117
Minimum value	112, 113, 114, 115, 116, 117
Nominal diameter	81
Off value low flow cutoff	63
On value low flow cutoff	62
Operating time	101
Operating time from restart	101
Order code	109
Preset value 1 to 3	97
Pressure compensation	70
Pressure shock suppression	63
Pressure unit	53
Pressure value	42, 70
Previous diagnostics	100
Progress	75
Reference density	41
Reference density factor	79
Reference density offset	79

Reference density unit	52	Direct access (Parameter)	10
Reference sound velocity	69	Display (Submenu)	13
Reference temperature	73	Display damping (Parameter)	24
Reset all totalizers	93	Display interval (Parameter)	23
Reset min/max values	111	Display language (Parameter)	14
Response time part. filled pipe detect.	66	Document	
Select gas type	68	Explanation of the structure of a parameter	
Select medium	68	description	6
Separator	25	Function	4
Serial number	108	Structure	4
Simulation device alarm	119	Symbols used	6
Simulation diagnostic event	119	Target group	4
Software option overview	38	Using the document	4
Square expansion coefficient	74	Document function	4
Subnet mask	85		
Target mass flow	42	E	
Temperature	41	Electronic temperature (Submenu)	112
Temperature coefficient sound velocity	69	ENP version (Parameter)	110
Temperature damping	61	Enter access code (Parameter)	13
Temperature factor	80	Event list (Submenu)	106
Temperature mode	71	Event logbook (Submenu)	105
Temperature offset	80	Extended order code 1 (Parameter)	109
Temperature unit	52	Extended order code 2 (Parameter)	110
Timestamp	100, 102, 103, 104	Extended order code 3 (Parameter)	110
Totalizer operation mode		External compensation (Submenu)	69
Totalizer 1 to 3	96	External pressure (Parameter)	70
Totalizer overflow 1 to 3	44	External reference density (Parameter)	72
Totalizer value 1 to 3	43	External temperature (Parameter)	71
Unit totalizer			
Totalizer 1 to 3	94	F	
User corrected volume factor	58	Factory settings	121
User corrected volume offset	57	SI units	121
User corrected volume text	57	US units	122
User density factor	58	Failure mode (Parameter)	98
User density offset	58	Filter options (Parameter)	105, 106
User density text	58	Firmware version (Parameter)	108
User mass factor	55	Fixed reference density (Parameter)	72
User mass offset	55	Flow damping (Parameter)	60
User mass text	55	Flow override (Parameter)	61
User pressure factor	59	Format display (Parameter)	15
User pressure offset	59	Function	
User pressure text	59	see Parameter	
User volume factor	57		
User volume offset	56	H	
User volume text	56	Header (Parameter)	24
Value 1 display	17	Header text (Parameter)	25
Value 2 display	19	Heartbeat (Submenu)	117
Value 3 display	20	High value partial filled pipe detection (Parameter)	66
Value 4 display	22		
Value process variable	118	I	
Volume flow	40	Input assembly position 1 (Parameter)	87
Volume flow factor	77	Input assembly position 2 (Parameter)	88
Volume flow offset	77	Input assembly position 3 (Parameter)	88
Volume flow unit	47	Input assembly position 4 (Parameter)	88
Volume unit	49	Input assembly position 5 (Parameter)	88
Web server functionality	86	Input assembly position 6 (Parameter)	89
Web server language	83	Input assembly position 7 (Parameter)	89
Zero point	81	Input assembly position 8 (Parameter)	89
Zero point adjustment control	75	Input assembly position 9 (Parameter)	89
		Input assembly position 10 (Parameter)	90

Input assembly position 11 (Parameter)	90	Previous diagnostics (Parameter)	100
Input assembly position 12 (Parameter)	90	Process parameters (Submenu)	60
Input assembly position 13 (Parameter)	91	Process variable adjustment (Submenu)	76
Input assembly position 14 (Parameter)	91	Process variables (Submenu)	39
Input assembly position 15 (Parameter)	91	Progress (Parameter)	75
Input assembly position 16 (Parameter)	91	R	
Input assembly position 17 (Parameter)	92	Reference density (Parameter)	41
Input assembly position 18 (Parameter)	92	Reference density factor (Parameter)	79
Input assembly position 19 (Parameter)	92	Reference density offset (Parameter)	79
Input assembly position 20 (Parameter)	92	Reference density unit (Parameter)	52
Installation direction (Parameter)	74	Reference sound velocity (Parameter)	69
IP address (Parameter)	85	Reference temperature (Parameter)	73
L			
Limit value measuring tube damping (Parameter) . . .	82	Reset all totalizers (Parameter)	93
Linear expansion coefficient (Parameter)	73	Reset min/max values (Parameter)	111
Locking status (Parameter)	11	Response time part. filled pipe detect. (Parameter) . . .	66
Low flow cut off (Submenu)	62	S	
Low value partial filled pipe detection (Parameter) . . .	65	Select gas type (Parameter)	68
M			
MAC address (Parameter)	84	Select medium (Parameter)	68
Mass flow (Parameter)	40	Sensor (Submenu)	39
Mass flow factor (Parameter)	77	Sensor adjustment (Submenu)	74
Mass flow offset (Parameter)	76	Separator (Parameter)	25
Mass flow unit (Parameter)	46	Serial number (Parameter)	108
Mass unit (Parameter)	46	Signal asymmetry (Submenu)	116
Maximum damping partial filled pipe det. (Parameter)	67	Simulation (Submenu)	117
Maximum value (Parameter)	112, 113, 114, 115, 116,	Simulation device alarm (Parameter)	119
Measured values (Submenu)	39	Simulation diagnostic event (Parameter)	119
Measurement mode (Submenu)	67	Software option overview (Parameter)	38
Medium temperature (Submenu)	113	Square expansion coefficient (Parameter)	74
Min/max values (Submenu)	111	Submenu	
Minimum value (Parameter)	112, 113, 114, 115, 116,	Administration	35
O	117	Application	93
Off value low flow cutoff (Parameter)	63	Calculated values	71
On value low flow cutoff (Parameter)	62	Calibration	80
Operating time (Parameter)	101	Carrier pipe temperature	113
Operating time from restart (Parameter)	101	Communication	82
Order code (Parameter)	109	Concentration	98
Oscillation amplitude (Submenu)	115	Configurable input assembly	86
Oscillation damping (Submenu)	116	Configuration	83
Oscillation frequency (Submenu)	114	Corrected volume flow calculation	71
P			
Parameter		Device information	107
Structure of a parameter description	6	Diagnostic behavior	28
Partially filled pipe detection (Submenu)	65	Diagnostic handling	27
Preset value 1 to 3 (Parameter)	97	Diagnostic list	101
Pressure compensation (Parameter)	70	Diagnostics	99
Pressure shock suppression (Parameter)	63	Display	13
Pressure unit (Parameter)	53	Electronic temperature	112
Pressure value (Parameter)	42, 70	Event list	106
		Event logbook	105
		External compensation	69
		Heartbeat	117
		Low flow cut off	62
		Measured values	39
		Measurement mode	67
		Medium temperature	113
		Min/max values	111
		Oscillation amplitude	115
		Oscillation damping	116

Oscillation frequency	114	Value 2 display (Parameter)	19
Partially filled pipe detection	65	Value 3 display (Parameter)	20
Process parameters	60	Value 4 display (Parameter)	22
Process variable adjustment	76	Value process variable (Parameter)	118
Process variables	39	Volume flow (Parameter)	40
Sensor	39	Volume flow factor (Parameter)	77
Sensor adjustment	74	Volume flow offset (Parameter)	77
Signal asymmetry	116	Volume flow unit (Parameter)	47
Simulation	117	Volume unit (Parameter)	49
Supervision	82		
System	13		
System units	45		
Totalizer	43		
Totalizer 1 to 3	93		
User-specific units	54		
Zero point adjustment	75		
Subnet mask (Parameter)	85		
Supervision (Submenu)	82		
System (Submenu)	13		
System units (Submenu)	45		
T			
Target group	4		
Target mass flow (Parameter)	42		
Temperature (Parameter)	41		
Temperature coefficient sound velocity (Parameter)	69		
Temperature damping (Parameter)	61		
Temperature factor (Parameter)	80		
Temperature mode (Parameter)	71		
Temperature offset (Parameter)	80		
Temperature unit (Parameter)	52		
Timestamp (Parameter)	100, 102, 103, 104		
Totalizer (Submenu)	43		
Totalizer 1 to 3 (Submenu)	93		
Totalizer operation mode (Parameter)	96		
Totalizer overflow 1 to 3 (Parameter)	44		
Totalizer value 1 to 3 (Parameter)	43		
U			
Unit totalizer (Parameter)	94		
User corrected volume factor (Parameter)	58		
User corrected volume offset (Parameter)	57		
User corrected volume text (Parameter)	57		
User density factor (Parameter)	58		
User density offset (Parameter)	58		
User density text (Parameter)	58		
User mass factor (Parameter)	55		
User mass offset (Parameter)	55		
User mass text (Parameter)	55		
User pressure factor (Parameter)	59		
User pressure offset (Parameter)	59		
User pressure text (Parameter)	59		
User volume factor (Parameter)	57		
User volume offset (Parameter)	56		
User volume text (Parameter)	56		
User-specific units (Submenu)	54		
V			
Value 1 display (Parameter)	17		
Value 2 display (Parameter)	19		
Value 3 display (Parameter)	20		
Value 4 display (Parameter)	22		
Value process variable (Parameter)	118		
Volume flow (Parameter)	40		
Volume flow factor (Parameter)	77		
Volume flow offset (Parameter)	77		
Volume flow unit (Parameter)	47		
Volume unit (Parameter)	49		
W			
Web server functionality (Parameter)	86		
Web server language (Parameter)	83		
Wizard			
Define access code	35		
Z			
Zero point (Parameter)	81		
Zero point adjustment (Submenu)	75		
Zero point adjustment control (Parameter)	75		

www.addresses.endress.com
